

BRZ

ELECTRICAL WIRING DIAGRAM

	Section Code	Page
INTRODUCTION	A	2
HOW TO USE THIS MANUAL	B	3
TROUBLESHOOTING	C	12
ABBREVIATIONS	D	17
GLOSSARY OF TERMS AND SYMBOLS	E	18
RELAY LOCATIONS	F	20
ELECTRICAL WIRING ROUTING	G	38
SYSTEM CIRCUITS	H	62
GROUND POINT	I	4&*
POWER SOURCE (Current Flow Chart)	J	4' *
CONNECTOR LIST	K	4(,

A INTRODUCTION

This manual consists of the following 13 sections:

No.	Section	Description
A	INDEX	Index of the contents of this manual.
	INTRODUCTION	Brief explanation of each section.
B	HOW TO USE THIS MANUAL	Instructions on how to use this manual.
C	TROUBLE-SHOOTING	Describes the basic inspection procedures for electrical circuits.
D	ABBREVIATIONS	Defines the abbreviations used in this manual.
E	GLOSSARY OF TERMS AND SYMBOLS	Defines the symbols and functions of major parts.
F	RELAY LOCATIONS	Shows position of the Electronic Control Unit, Relays, Relay Block, etc. This section is closely related to the system circuit.
G	ELECTRICAL WIRING ROUTING	Describes position of Parts Connectors, Splice points, Ground points, etc. This section is closely related to the system circuit.
H	INDEX	Index of the system circuits.
	SYSTEM CIRCUITS	Electrical circuits of each system are shown from the power supply through ground points. Wiring connections and their positions are shown and classified by code according to the connection method. (Refer to the section, "How to use this manual"). * Only wiring information for complete circuits is included.
I	GROUND POINT	Shows ground positions of all parts described in this manual.
J	POWER SOURCE (Current Flow Chart)	Describes power distribution from the power supply to various electrical loads.
K	CONNECTOR LIST	Describes the form of the connectors for the parts appeared in this book. This section is closely related to the system circuit.

HOW TO USE THIS MANUAL B

This manual provides information on the electrical circuits installed on vehicles by dividing them into a circuit for each system.


The actual wiring of each system circuit is shown from the point where the power source is received from the battery as far as each ground point. (All circuit diagrams are shown with the switches in the OFF position.)

When troubleshooting any problem, first understand the operation of the circuit where the problem was detected (see System Circuit section), the power source supplying power to that circuit (see Power Source section), and the ground points (see Ground Point section).

When the circuit operation is understood, begin troubleshooting of the problem circuit to isolate the cause. Use Relay Location and Electrical Wiring Routing sections to find each part, junction block and wiring harness connectors, wiring harness and wiring harness connectors and ground points of each system circuit. Internal wiring for each junction block is also provided for better understanding of connection within a junction block.


Wiring related to each system is indicated in each system circuit by arrows (from __, to __). When overall connections are required, see the Overall Electrical Wiring Diagram at the end of this manual.

*The information in this manual is about the wire harnesses. Information about component and assembly parts is for reference, but in some cases this reference information might not be included or might differ from the actual vehicle. When inspecting or repairing a vehicle, refer to the relevant Repair Manual.

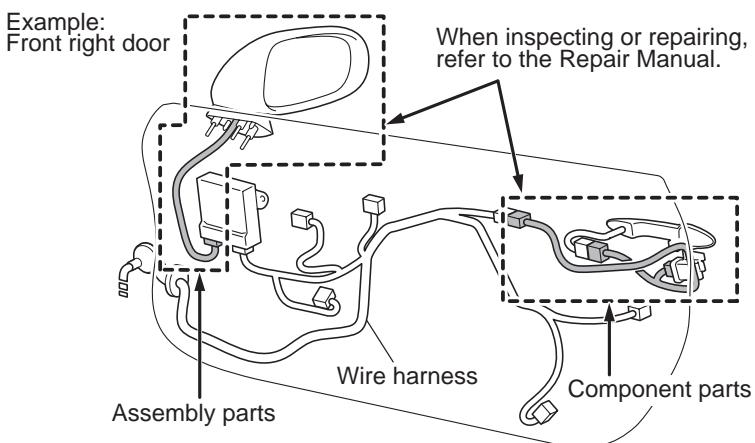

B HOW TO USE THIS MANUAL

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the SYSTEM CIRCUITS SECTION.

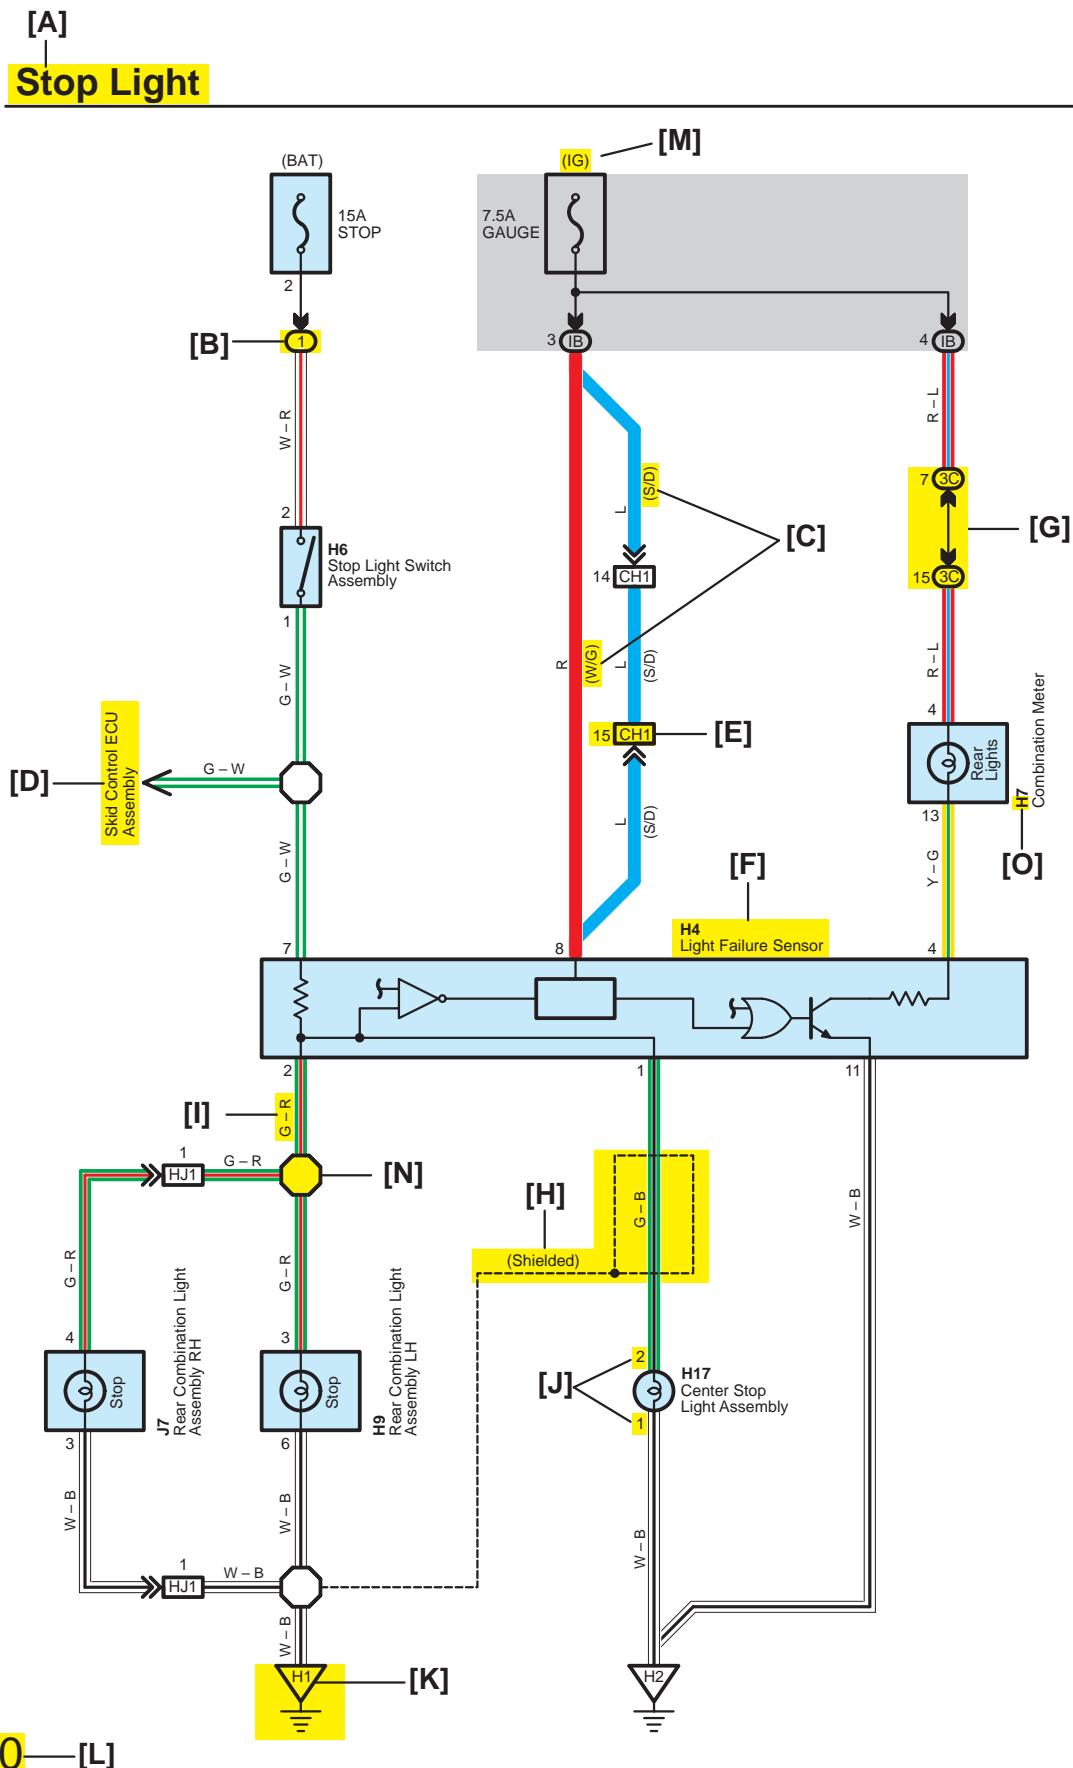

[A] : System Title


[B] : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B

Example: ① Indicates Relay Block No.1

[C] : () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

[D] : Indicates related system.

[E] : Indicates the code for the (male and female) connectors which are used to join two wire harnesses. The connector code consists of two alphabetical and one numerical characters.

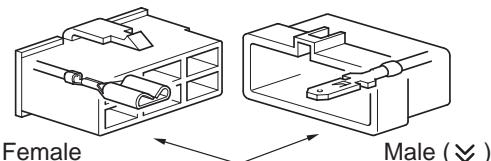

The first character of the connector code indicates the alphabetical code allocated to the wire harness which has the female connector, and the second shows that of the wire harness which has the male connector.


The third character indicates a serial number used to distinguish between the wire harness combinations in cases when more than one of the same combination of wire harnesses exist (e.g. CH1 and CH2).

Symbol (\vee) indicates the male terminal connector. Numbers outside connector codes indicate the pin numbers of both male and female connectors.

[F] : Represents a part (all parts are shown in sky blue). The code is the same as the code used in parts position.

[G] : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.

Example:

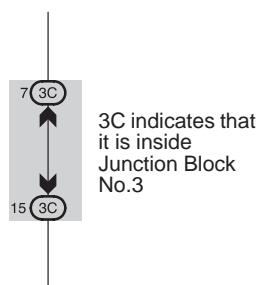

[H] : Indicates a shielded cable.



[I] : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

Copper wires

B = Black	W = White	BR = Brown
L = Blue	V = Violet	SB = Sky Blue
R = Red	G = Green	LG = Light Green
P = Pink	Y = Yellow	GR = Gray
O = Orange	BE = Beige	DG = Dark Gray


Aluminum wires

LA = Lavender

NOTICE: Do not splice into aluminum wires for power sources or signals.

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L - Y

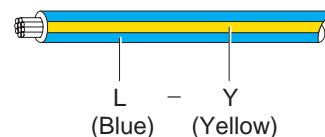


[J] : Indicates the pin number of the connector.


The numbering system is different for female and male connectors.

Example: Numbered in order from upper left to lower right

Numbered in order from upper right to lower left

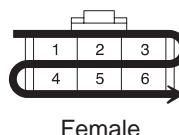

Female

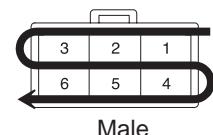

Male

[K] : Indicates the ground point. The code consists of the two characters: A letter and number.

The first character of the code indicates the alphabetical code allocated to the wire harness. The second character indicates a serial number used to distinguish between the ground points in cases when more than one ground point exist on the same wire harness.

[L] : Page No.

[M] : Indicates the ignition key position(s) when the power is supplied to the fuse(s).

B HOW TO USE THIS MANUAL

[N] : Indicates a wiring Splice Point.

Example:



[O] : Wire Harness Code

Each wire harness is represented by a code. Wire harness codes are used in the parts codes, connector joining wire harness and wire harness codes, and ground point codes. For example, H7 (combination meter), CH1 (male, connector joining wire harness and wire harness), and H2 (ground point) indicate that they are the parts belonging to the same wire harness "H".

[P]  : Parts Location

Code	See Page	Code	See Page	Code	See Page
H4	36	H7	36	H17	38
H6	36	H9	38	J7	38

[Q]  : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	18	R/B No.1 (Instrument Panel Brace LH)

[R]  : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3C	22	Instrument Panel Wire and J/B No.3 (Instrument Panel Brace LH)
IB	20	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

[S]  : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
CH1	42	Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)
HJ1	50	Instrument Panel Wire and Floor Wire (Right Kick Panel)

[T]  : Ground Points

Code	See Page	Ground Points Location
H1	50	Under the Left Center Pillar
H2	50	Back Panel Center

[P] : Indicates reference pages showing the parts locations in the system circuit on the vehicle.

Example : Code "H4" (Light Failure Sensor) is on page 36 of the manual.

* The first character of the code indicates the alphabetical code allocated to the wire harness, and the second character indicates the serial number of the parts connected to the wire harness.

Example : H 4

 └─ Serial number for the connected parts
 └─ Code for the wire harness

[Q] : Indicates the reference page showing the position on the vehicle of Relay Block Connectors in the system circuit.

Example : Connector "1" is described on page 18 of this manual and is installed on the left side of the instrument panel.

[R] : Indicates the reference page showing the position on the vehicle of J/B and Wire Harness in the system circuit.

Example : Connector "3C" connects the Instrument Panel Wire and J/B No.3. It is described on page 22 of this manual, and is installed on the instrument panel left side.

[S] : Indicates the reference page describing the wiring harness and wiring harness connector (the female wiring harness is shown first, followed by the male wiring harness).

Example : Connector "CH1" connects the Engine Room Main Wire (female) and Instrument Panel Wire (male). It is described on page 42 of this manual, and is installed on the left side kick panel.


[T] : Indicates the reference page showing the position of the ground points on the vehicle.

Example : Ground point "H2" is described on page 50 of this manual and is installed on the back panel center.

B HOW TO USE THIS MANUAL

The ground points circuit diagram shows the connections from all major parts to the respective ground points. When troubleshooting a faulty ground point, checking the system circuits which use a common ground may help you identify the problem ground quickly. The relationship between ground points (,  and  shown below) can also be checked this way.

I GROUND POINT

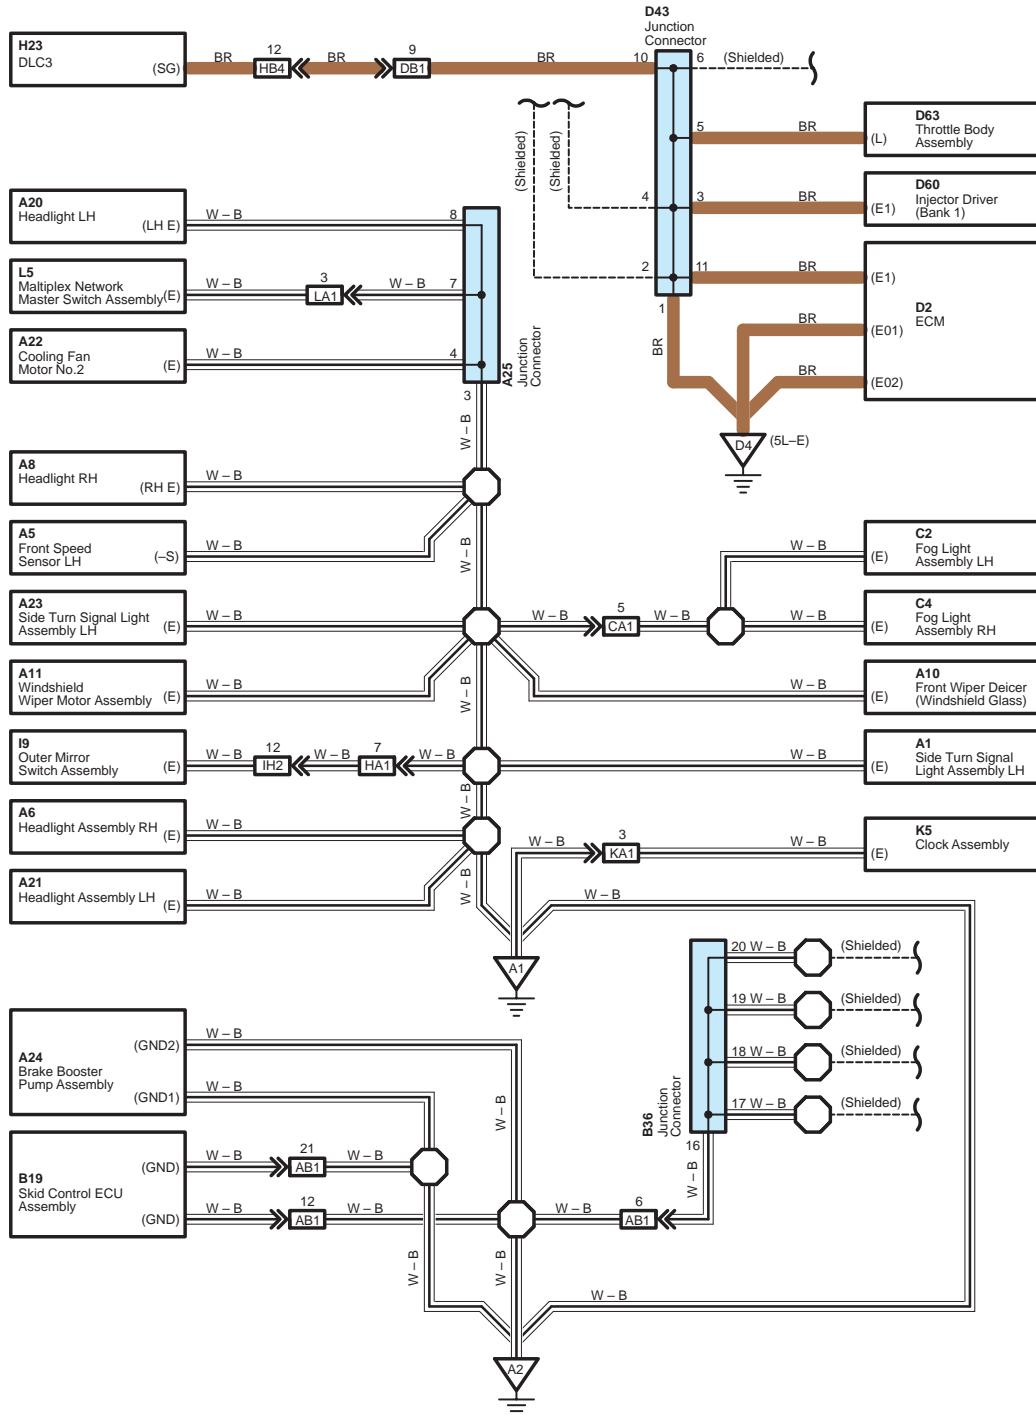


* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the SYSTEM CIRCUITS SECTION.

The "Current Flow Chart" section, describes which parts each power source (fuses, fusible links, and circuit breakers) transmits current to. In the Power Source circuit diagram, the conditions when battery power is supplied to each system are explained. Since all System Circuit diagrams start from the power source, the power source system must be fully understood.

J POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuses, etc.) and other parts

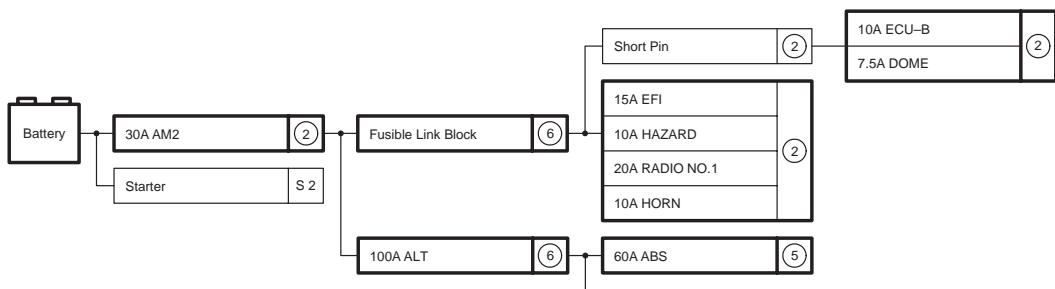

Engine Room R/B (See Page 20)

Fuse	System	Page
20A STOP	ABS ABS and Traction Control Cruise Control Electronically Controlled Transmission Multiplex Communication System	194 187 180 166 210
10A DOME	Cigarette Lighter Combination Meter Headlight Interior Light Key Reminder and Seat Belt Warning Light Auto Turn Off System Door Deterrant and Door Lock	214 230 112 122


Power Source

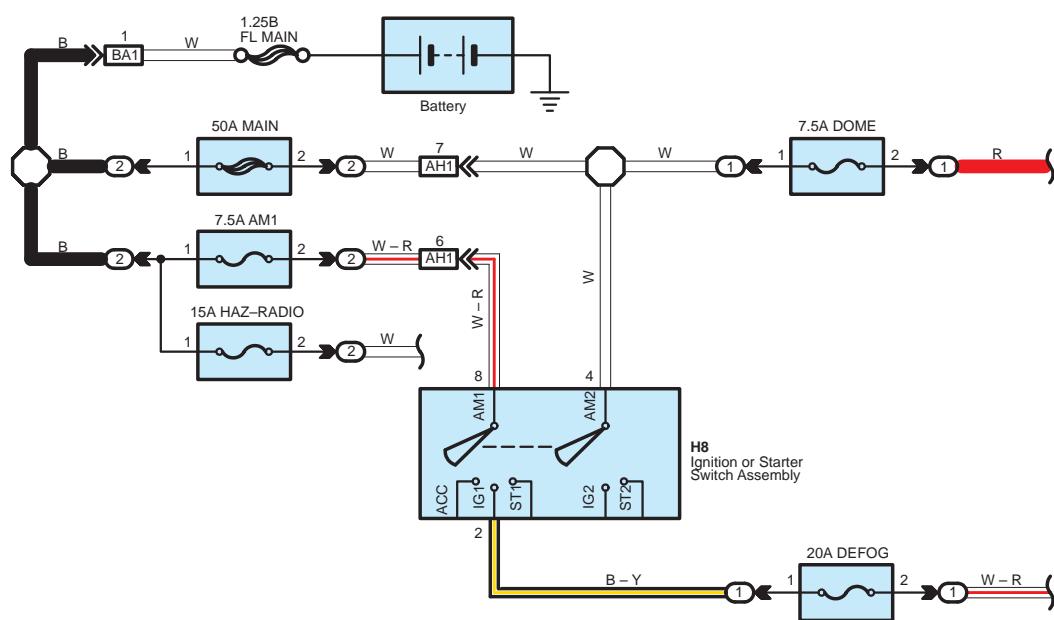


* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the SYSTEM CIRCUITS SECTION.

B HOW TO USE THIS MANUAL

K CONNECTOR LIST

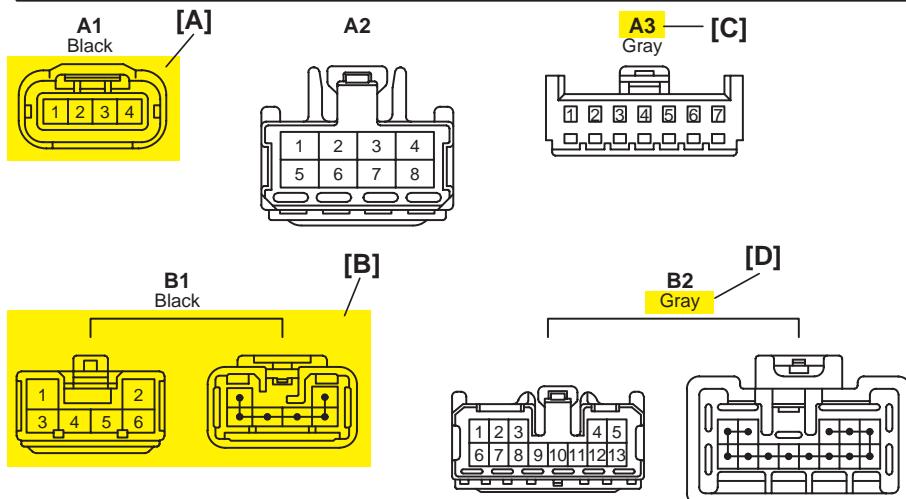


K CONNECTOR LIST

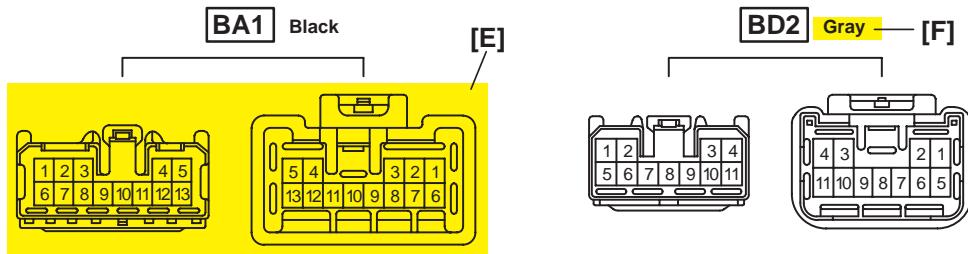

[A] : Indicates connector to be connected to a part. (The numeral indicates the pin No.)

[B] : Junction Connector

Indicates a connector which is connected to a short terminal.

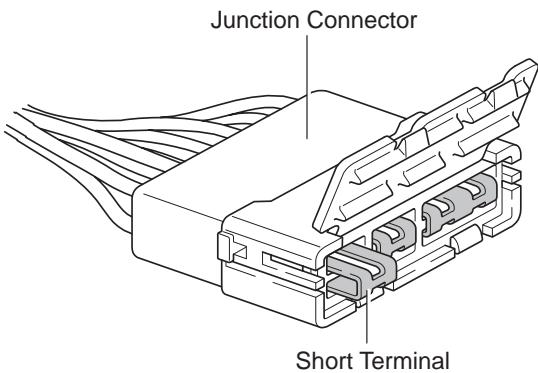

Junction connector in this manual include a short terminal which is connected to a number of wire harnesses. Always perform inspection with the short terminal installed.

[C] : Parts Code

The first letter of the code is taken from the first letter of part, and the numbers indicates its order in parts which start with the same letter.

[D] : Connector Color

Connectors not indicated are milky white in color.

[E] : Indicates the connector shapes which are used to join wire harnesses.





On Left : Female connector shapes

On Right : Male connector shapes

Numbers indicate pin numbers.

[F] : Indicates connector colors. (Connectors with not indicated colors are white)

C TROUBLESHOOTING

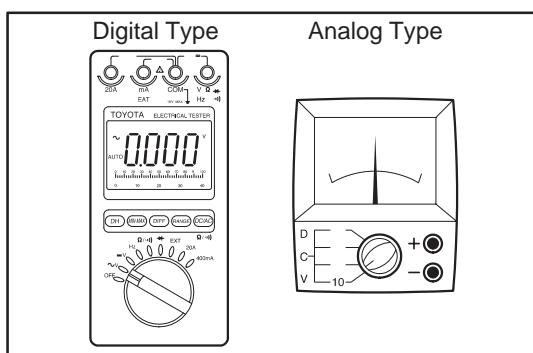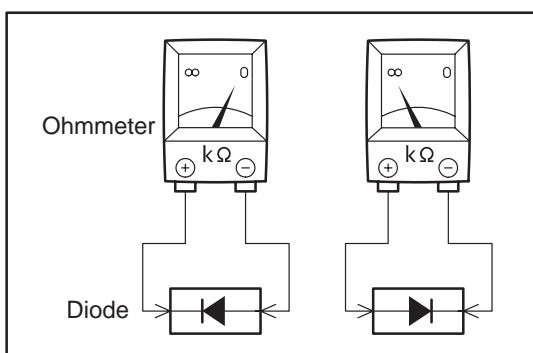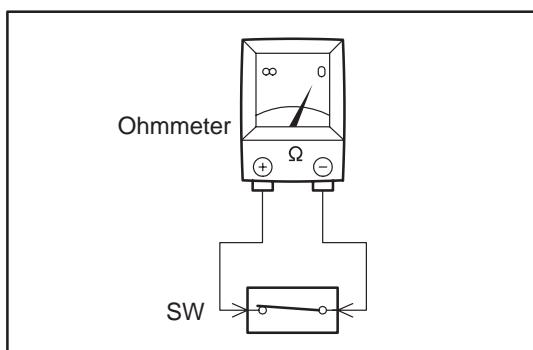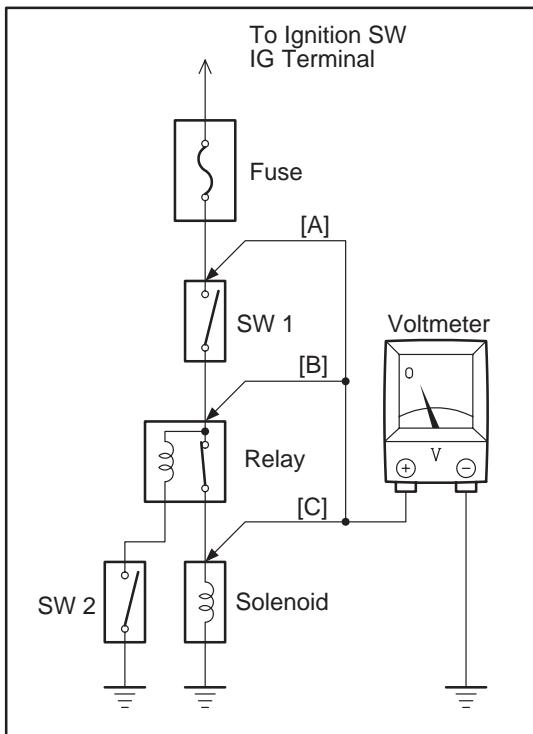

VOLTAGE CHECK

- (a) Establish conditions in which voltage is present at the check point.

Example:

- [A] – Ignition SW on
- [B] – Ignition SW and SW 1 on
- [C] – Ignition SW, SW 1 and Relay on (SW 2 off)

- (b) Using a voltmeter, connect the negative lead to a good ground point or negative battery terminal, and the positive lead to the connector or component terminal.
This check can be done with a test light instead of a voltmeter.

CONTINUITY AND RESISTANCE CHECK

- (a) Disconnect the battery terminal or wire so there is no voltage between the check points.


- (b) Contact the two leads of an ohmmeter to each of the check points.

If the circuit has diodes, reverse the two leads and check again.

When contacting the negative lead to the diode positive side and the positive lead to the negative side, there should be continuity.

When contacting the two leads in reverse, there should be no continuity.

- (c) Use a volt/ohmmeter with high impedance ($10k\Omega/V$ minimum) for troubleshooting of the electrical circuit.

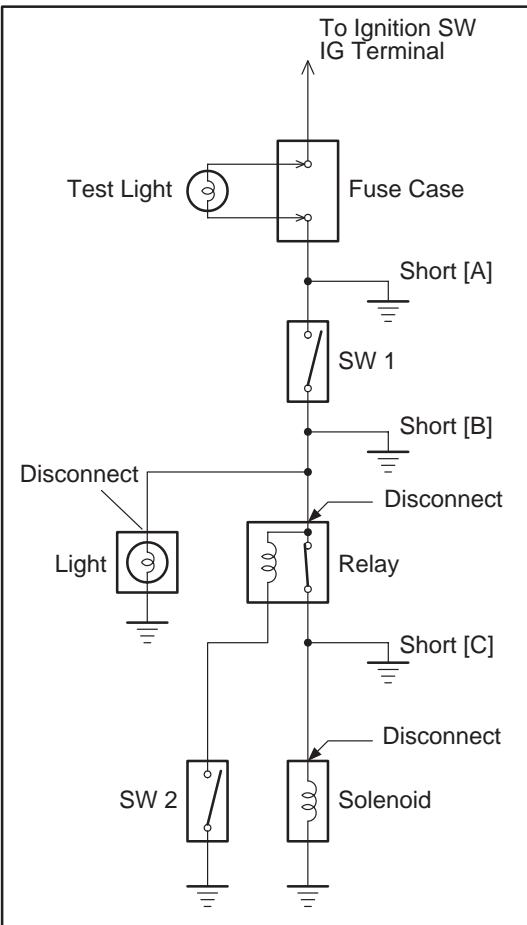

FINDING A SHORT CIRCUIT

- Remove the blown fuse and disconnect all loads of the fuse.
- Connect a test light in place of the fuse.
- Establish conditions in which the test light comes on.

Example:

- [A] – Ignition SW on
- [B] – Ignition SW and SW 1 on
- [C] – Ignition SW, SW 1 and Relay on (Connect the Relay) and SW 2 off (or Disconnect SW 2)

- Disconnect and reconnect the connectors while watching the test light.
The short lies between the connector where the test light stays lit and the connector where the light goes out.
- Find the exact location of the short by lightly shaking the problem wire along the body.


CAUTION:

- Do not open the cover or the case of the ECU unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)**
- When replacing the internal mechanism (ECU part) of the digital meter, be careful that no part of your body or clothing comes in contact with the terminals of leads from the IC, etc. of the replacement part (spare part).**

DISCONNECTION OF MALE AND FEMALE CONNECTORS

To pull apart the connectors, pull on the connector itself, not the wire harness.

HINT: Check to see what kind of connector you are disconnecting before pulling apart.

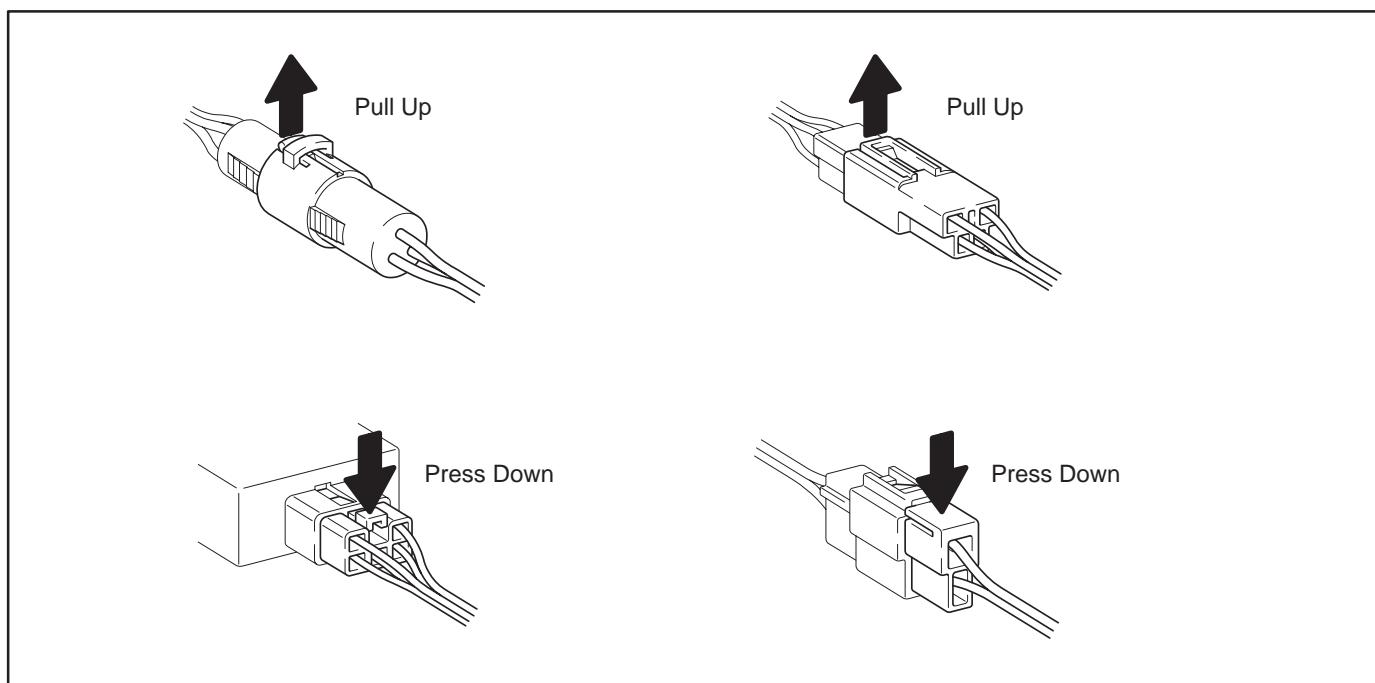

Memo

Memo

ABBREVIATIONS






The following abbreviations are used in this manual.













A/C	= Air Conditioner
A/T	= Automatic Transmission
ABS	= Anti-Lock Brake System
CAN	= Controller Area Network
CPU	= Central Processing Unit
DLC3	= Data Link Connector 3
E.F.I.	= Electronic Fuel Injection
ECM	= Engine Control Module
ECT	= Electronic Control Transmission
ECU	= Electronic Control Unit
EDU	= Electronic Driving Unit
EPS	= Electric Motor Power Steering
J/B	= Junction Block
LED	= Light Emitting Diode
LH	= Left-Hand
LHD	= Left-Hand Drive
M/T	= Manual Transmission
R/B	= Relay Block
RH	= Right-Hand
RHD	= Right-Hand Drive
SRS	= Supplemental Restraint System
TRC	= Traction Control
U.K.	= United Kingdom
VSC	= Vehicle Stability Control
VSV	= Vacuum Switching Valve
VVT	= Variable Valve Timing
w/	= With
w/o	= Without

ÅØØÅ Å åÅXXVÅÅ^Å^* åC^|Å^åÅ^æ^{| æ\•Å~Å[^[caÅT [d | ÅO[|| | | ææ } È

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.


E GLOSSARY OF TERMS AND SYMBOLS

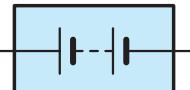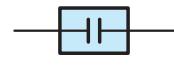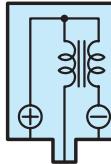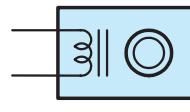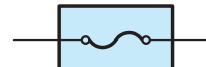 <p>BATTERY Stores chemical energy and converts it into electrical energy. Provides DC current for the auto's various electrical circuits.</p>	 <p>GROUND The point at which wiring attaches to the Body, thereby providing a return path for an electrical circuit; without a ground, current cannot flow.</p>
 <p>CAPACITOR (Condenser) A small holding unit for temporary storage of electrical voltage.</p>	 <p>HEADLIGHTS 1. SINGLE FILAMENT 2. DOUBLE FILAMENT Current flow causes a headlight filament to heat up and emit light. A headlight may have either a single (1) filament or a double (2) filament</p>
 <p>CIGARETTE LIGHTER An electric resistance heating element.</p>	 <p>HORN An electric device which sounds a loud audible signal.</p>
 <p>CIRCUIT BREAKER Basically a reusable fuse, a circuit breaker will heat and open if too much current flows through it. Some units automatically reset when cool, others must be manually reset.</p>	 <p>IGNITION COIL Converts low-voltage DC current into high-voltage ignition current for firing the spark plugs.</p>
 <p>DIODE A semiconductor which allows current flow in only one direction.</p>	 <p>LIGHT Current flow through a filament causes the filament to heat up and emit light.</p>
 <p>DIODE, ZENER A diode which allows current flow in one direction but blocks reverse flow only up to a specific voltage. Above that potential, it passes the excess voltage. This acts as a simple voltage regulator.</p>	 <p>PHOTODIODE The photodiode is a semiconductor which controls the current flow according to the amount of light.</p>
 <p>DISTRIBUTOR, IIA Channels high-voltage current from the ignition coil to the individual spark plugs.</p>	 <p>METER, ANALOG Current flow activates a magnetic coil which causes a needle to move, thereby providing a relative display against a background calibration.</p>
 (for Medium Current Fuse)  (for High Current Fuse or Fusible Link)	 <p>METER, DIGITAL Current flow activates one or many LED's, LCD's, or fluorescent displays, which provide a relative or digital display.</p>
 <p>MOTOR A power unit which converts electrical energy into mechanical energy, especially rotary motion.</p>	

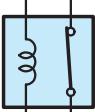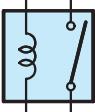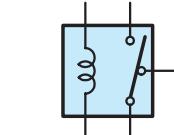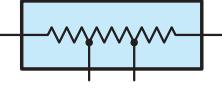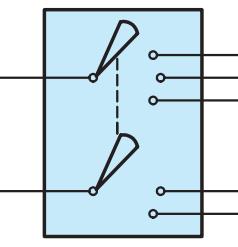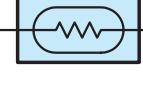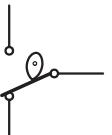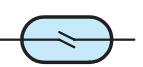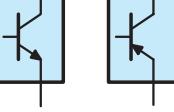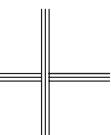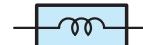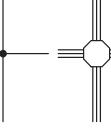
<p>RELAY  1. NORMALLY CLOSED Basically, an electrically operated switch which may be normally closed (1) or open (2). Current flow through a small coil creates a magnetic field which either opens or closes an attached switch.  2. NORMALLY OPEN</p>	 <p>SPEAKER An electromechanical device which creates sound waves from current flow.</p>
<p>RELAY, DOUBLE THROW  A relay which passes current through one set of contacts or the other.</p>	<p>SWITCH, MANUAL  1. NORMALLY OPEN  2. NORMALLY CLOSED</p>
<p>RESISTOR  An electrical component with a fixed resistance, placed in a circuit to reduce voltage to a specific value.</p>	<p>SWITCH, DOUBLE THROW  A switch which continuously passes current through one set of contacts or the other.</p>
<p>RESISTOR, TAPPED  A resistor which supplies two or more different non adjustable resistance values.</p>	<p>SWITCH, IGNITION  A key operated switch with several positions which allows various circuits, particularly the primary ignition circuit, to become operational.</p>
<p>RESISTOR, VARIABLE or RHEOSTAT  A controllable resistor with a variable rate of resistance. Also called a potentiometer or rheostat.</p>	
<p>SENSOR (Thermistor)  A resistor which varies its resistance with temperature.</p>	<p>SWITCH, WIPER PARK  Automatically returns wipers to the stop position when the wiper switch is turned off.</p>
<p>SENSOR, SPEED  (Reed Switch Type) Uses magnetic impulses to open and close a switch to create a signal for activation of other components.</p>	<p>TRANSISTOR  A solidstate device typically used as an electronic relay; stops or passes current depending on the voltage applied at "base".</p>
<p>SHORT PIN  Used to provide an unbroken connection within a junction block.</p>	<p>WIRES  (1) NOT CONNECTED Wires are always drawn as straight lines on wiring diagrams. Crossed wires (1) without a black dot at the junction are not joined;</p>
<p>SOLENOID  An electromagnetic coil which forms a magnetic field when current flows, to move a plunger, etc.</p>	<p>(2) SPLICED  crossed wires (2) with a black dot or octagonal (○) mark at the junction are spliced (joined) connections.</p>

F RELAY LOCATIONS

[Engine Compartment]

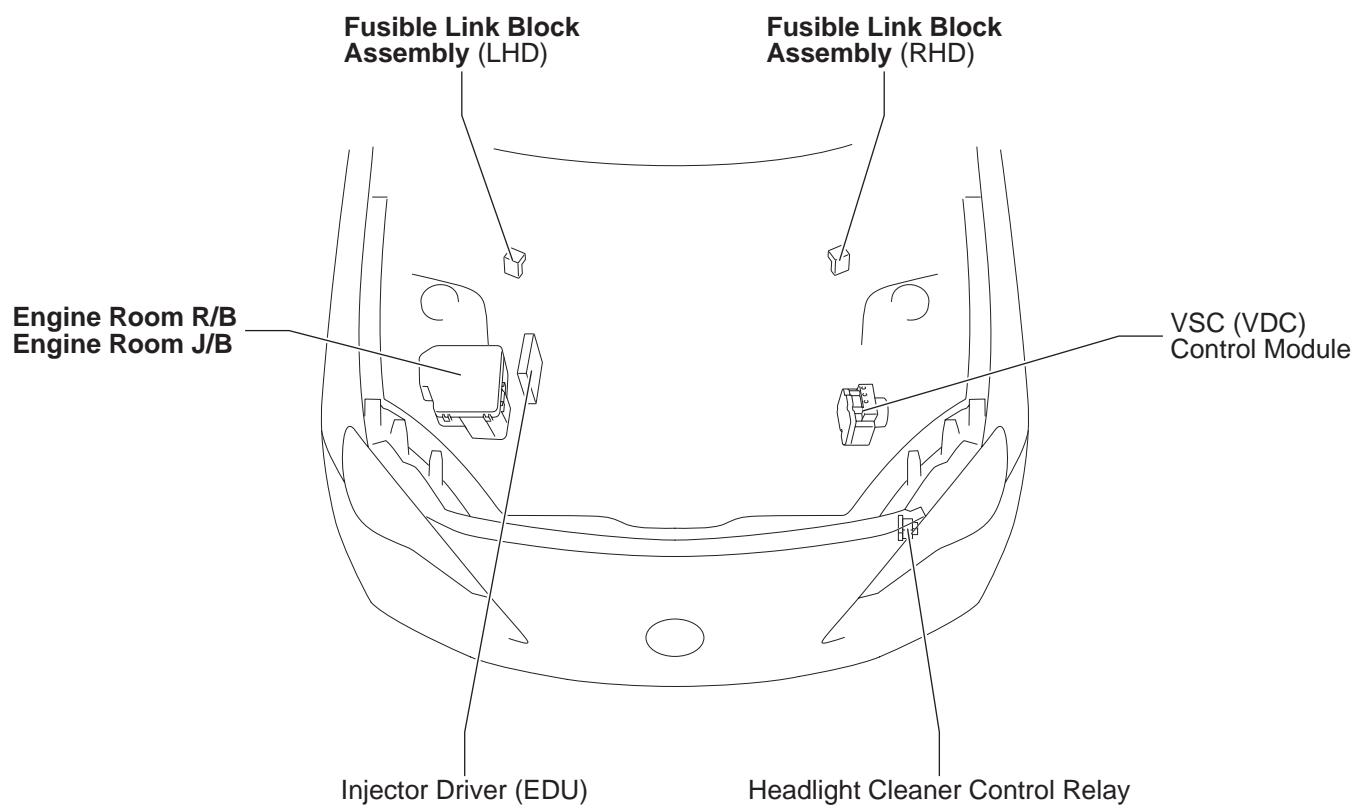


[Instrument Panel] (LHD)

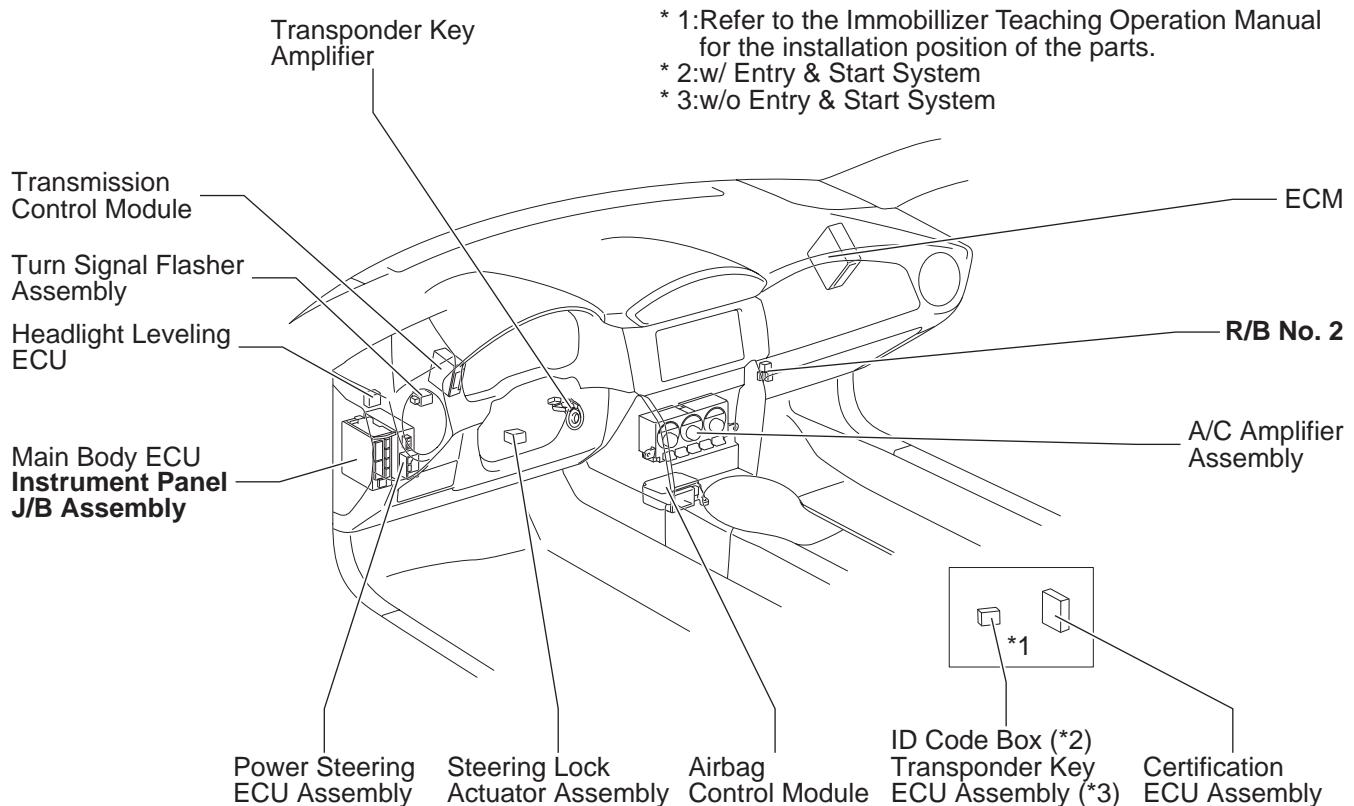


(RHD)

* 1: Refer to the Immobilizer Teaching Operation Manual for the installation position of the parts.
 * 2:w/ Entry & Start System
 * 3:w/o Entry & Start System

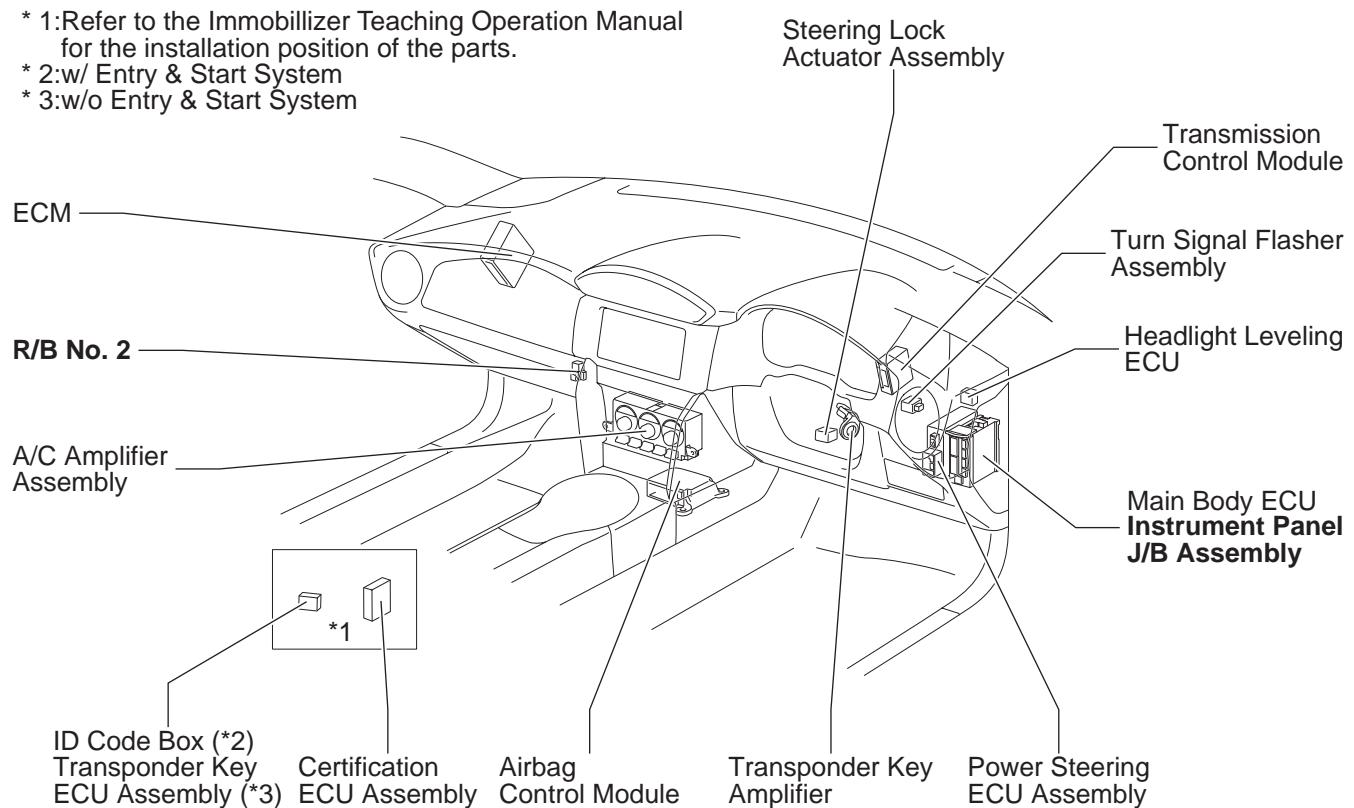


F RELAY LOCATIONS

[Body]

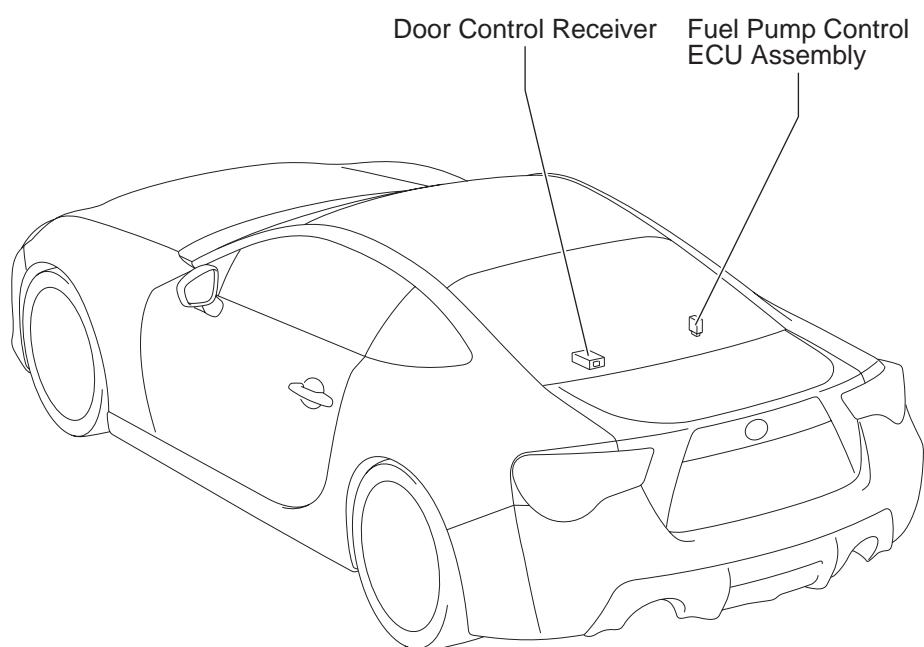


F RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Right (See Page 20)
② : Engine Room J/B	

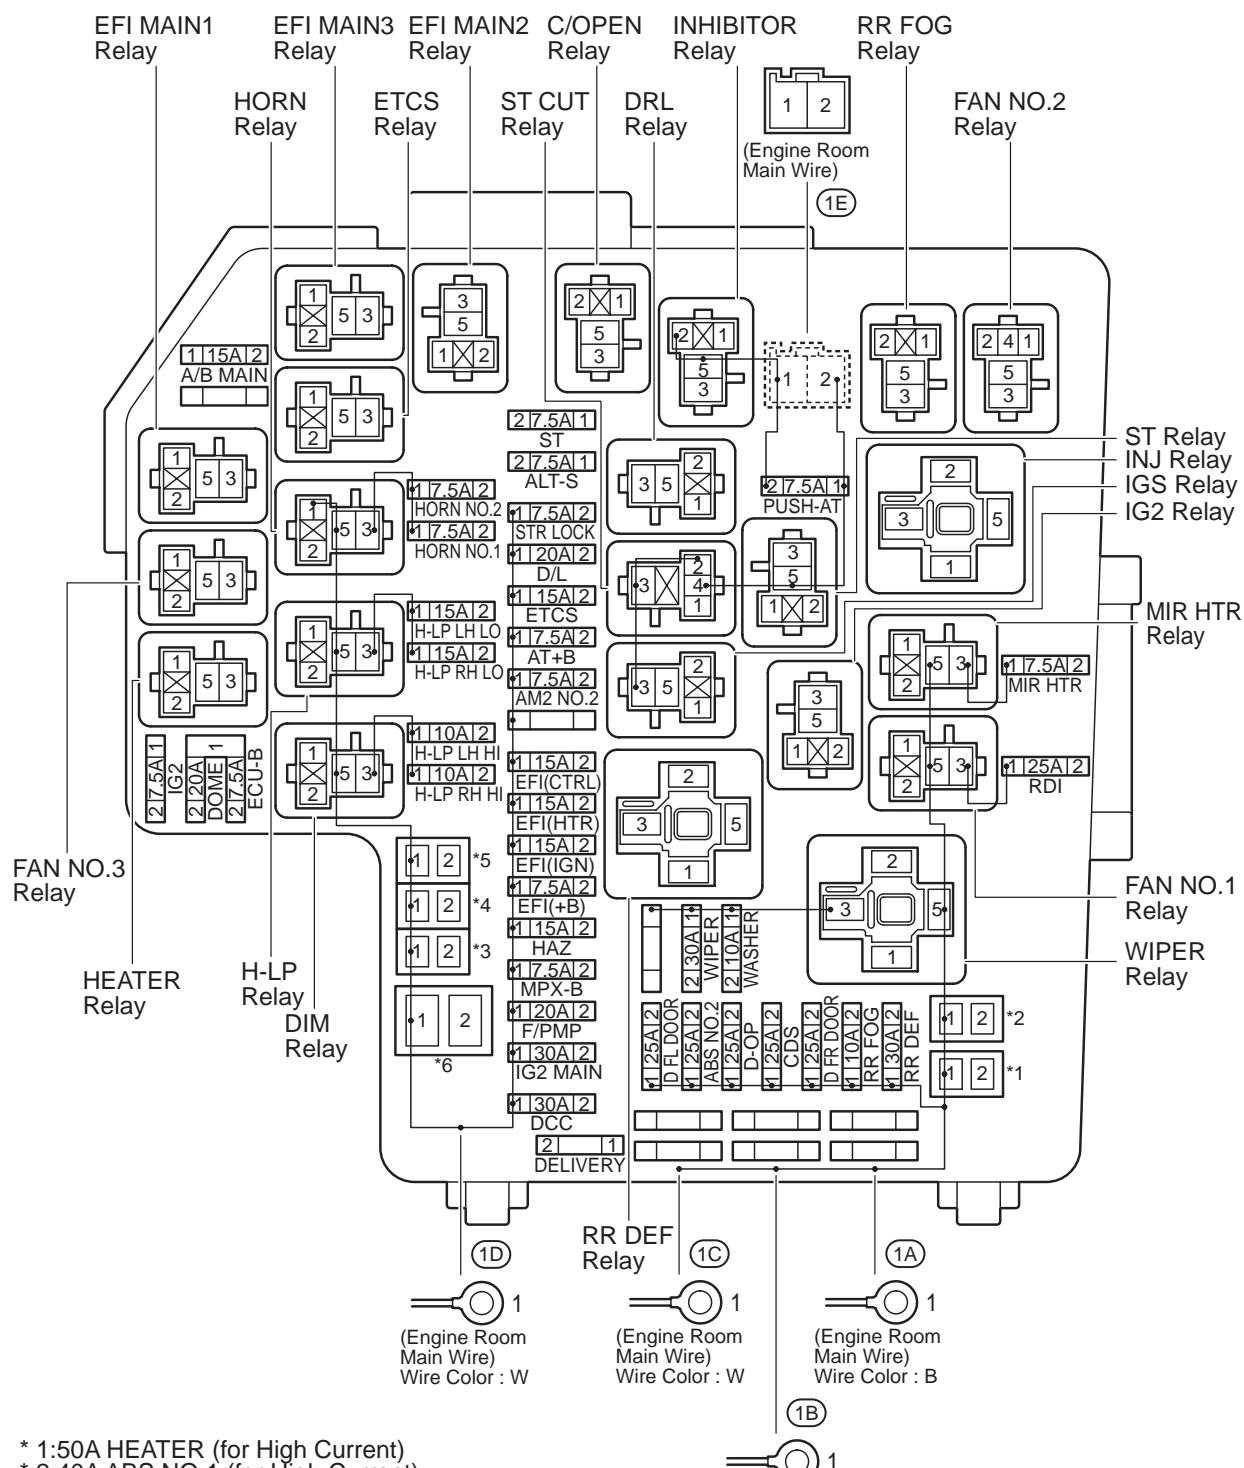


(②) : R/B No. 2
(Automatic A/C)

Behind Glove Box (See Page 21)

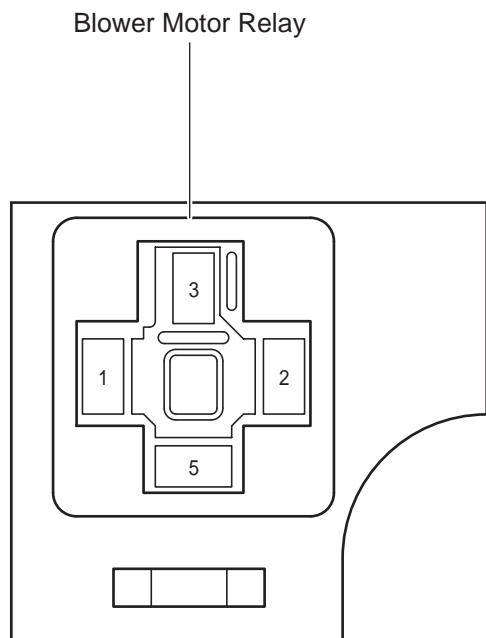


(Manual A/C)

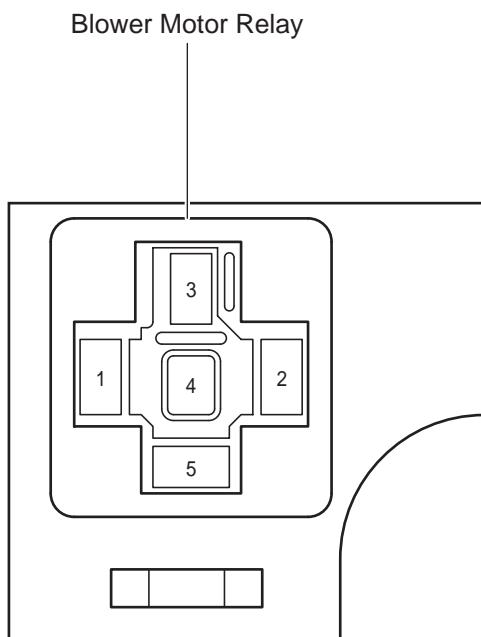


F RELAY LOCATIONS

 : Instrument Panel J/B Assembly | **Instrument Panel Reinforcement (See Page 21)**

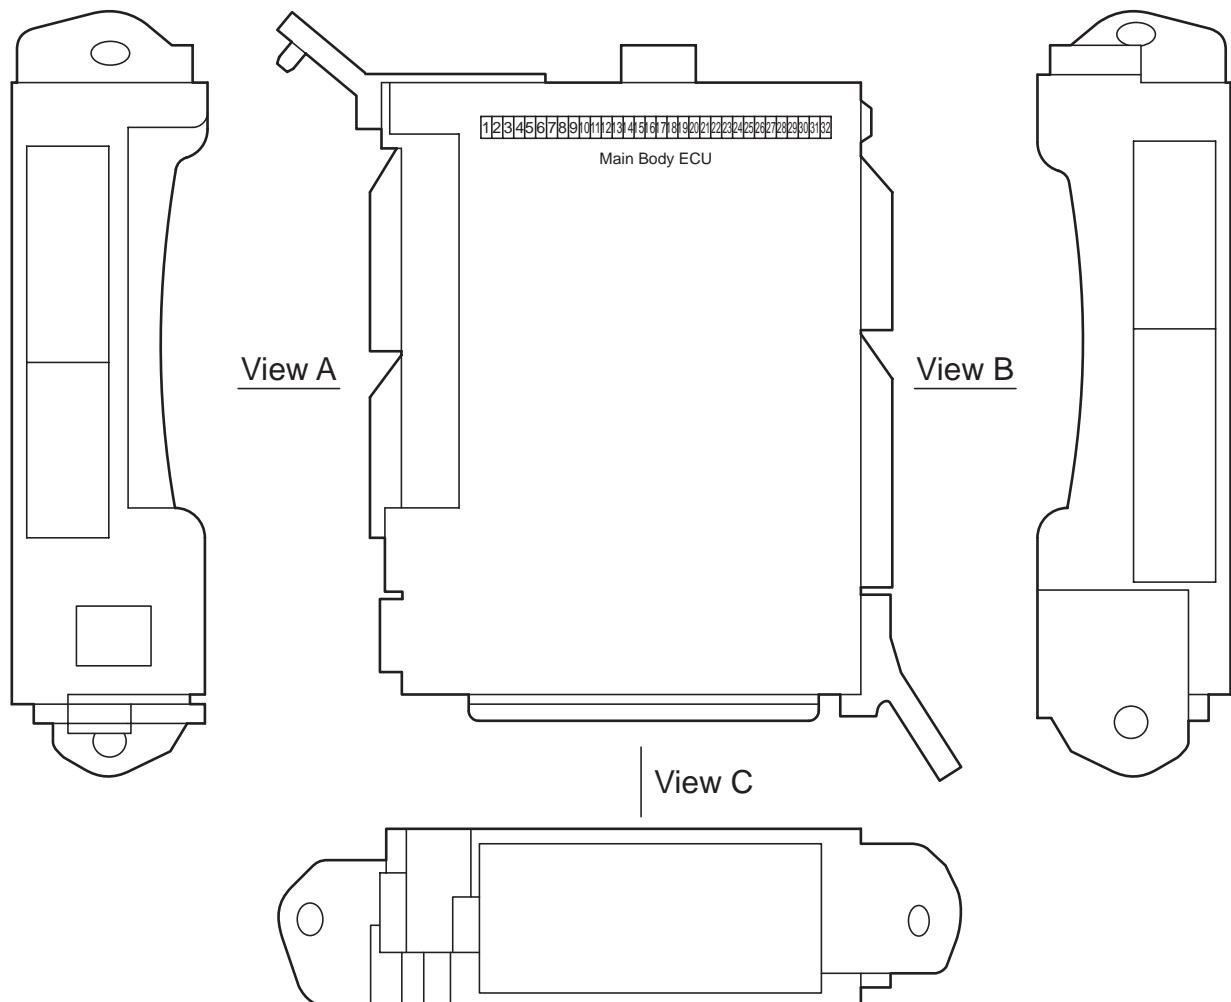

View A

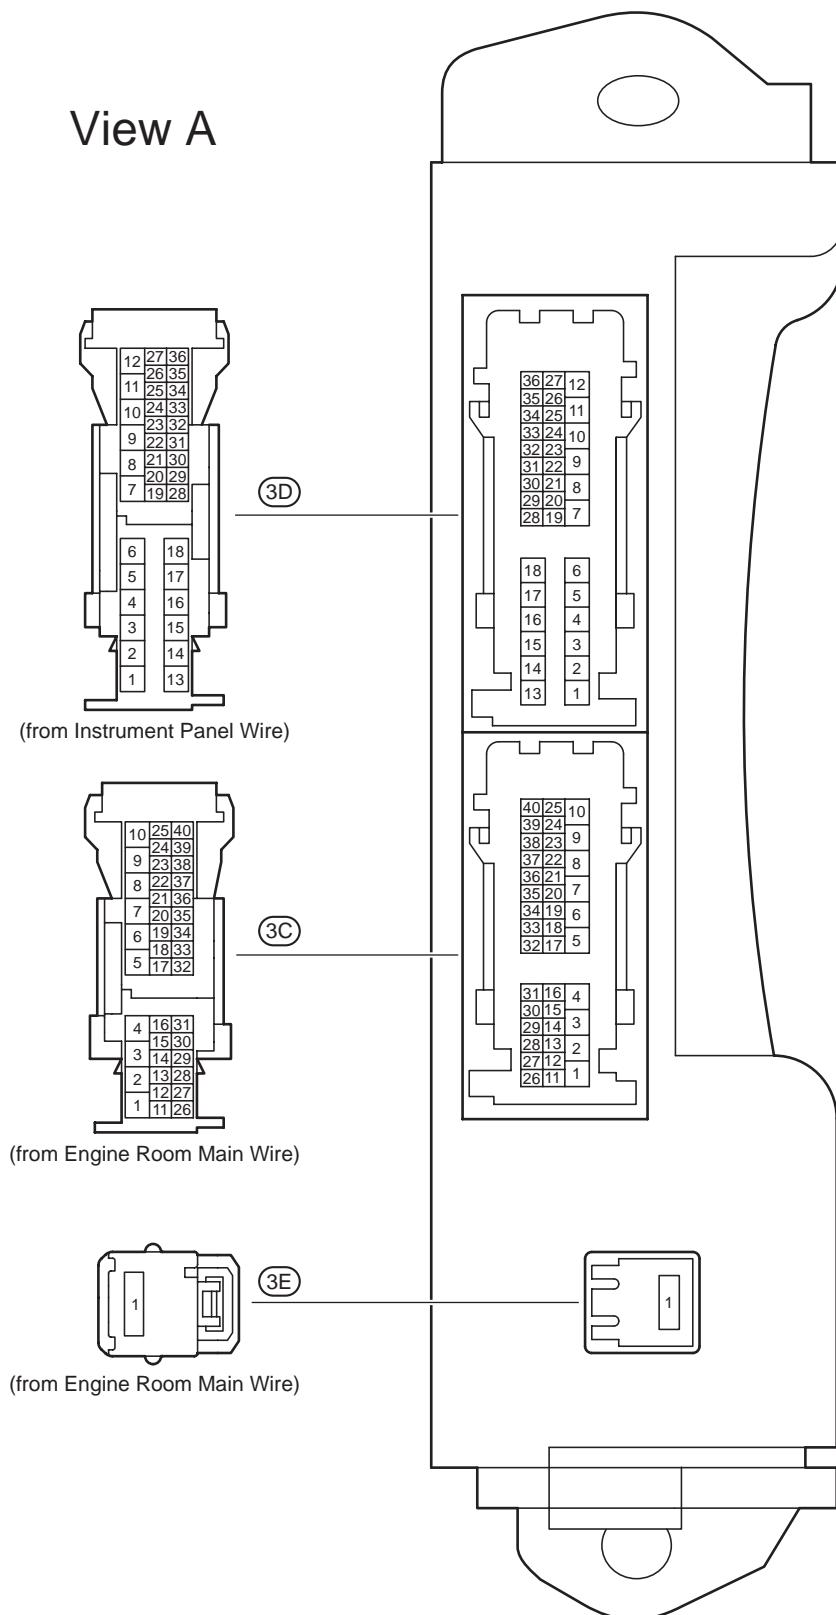


F RELAY LOCATIONS


 : Instrument Panel J/B Assembly

Instrument Panel Reinforcement (See Page 21)

View B

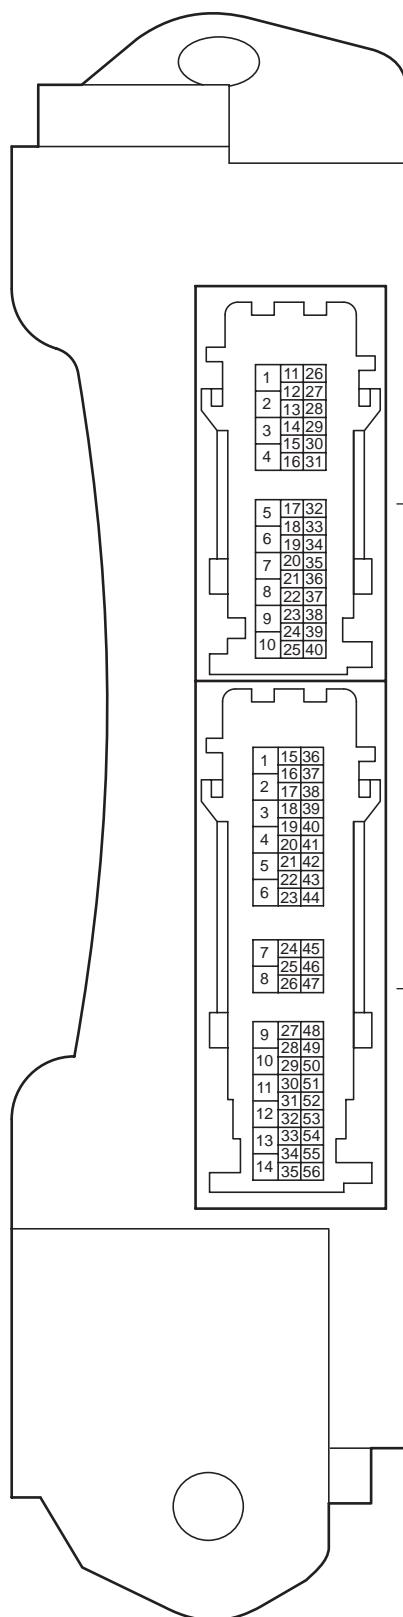


(3B)

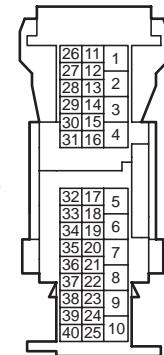


(from Instrument Panel Wire)

(3A)

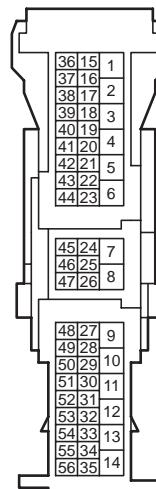


(from Instrument Panel Wire)

View C

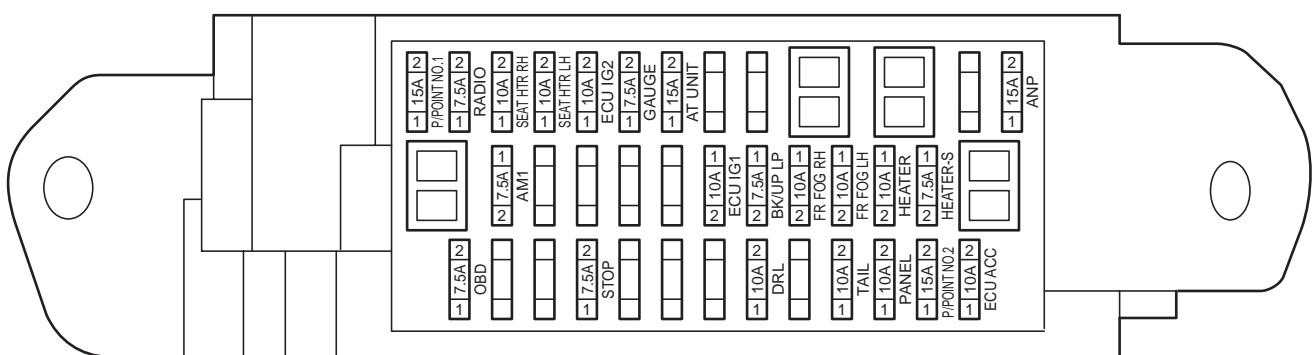

F RELAY LOCATIONS


[Instrument Panel J/B Assembly Inner Circuit]

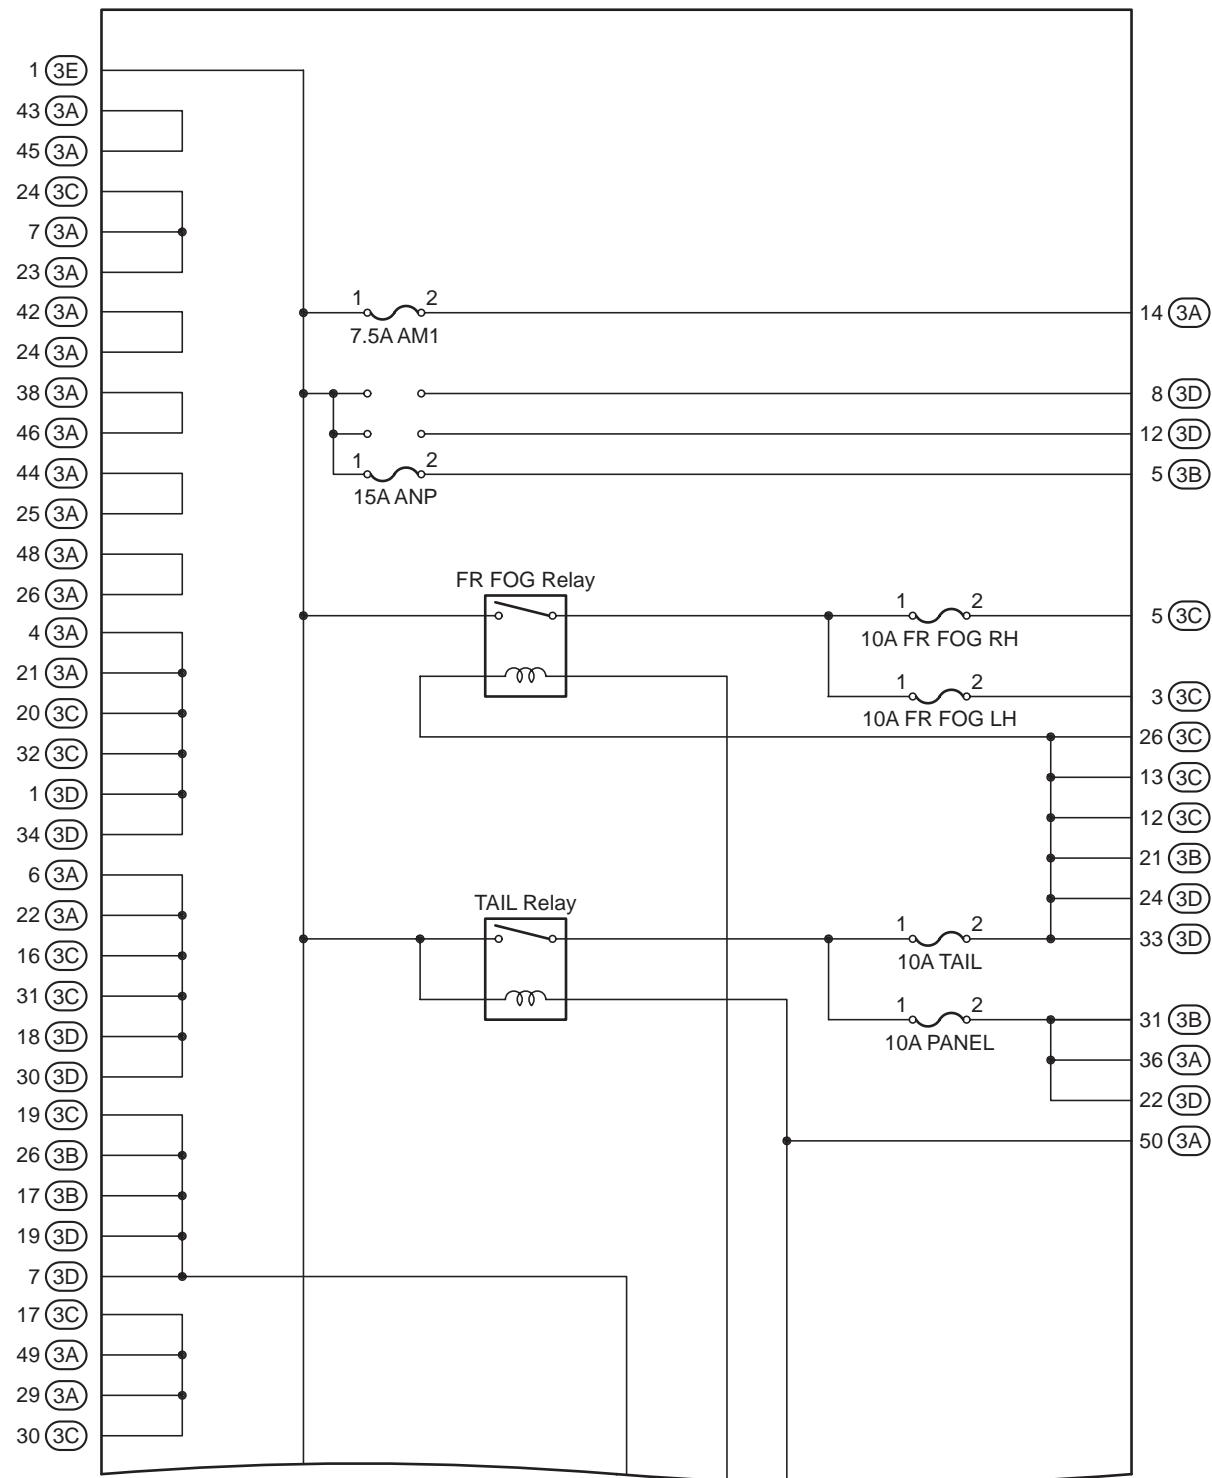

(Cont. Next Page)

(Cont'd)

* 1:P DR UNLOCK Relay (w/ Double Locking)
A DR UNLOCK Relay (w/o Double Locking)

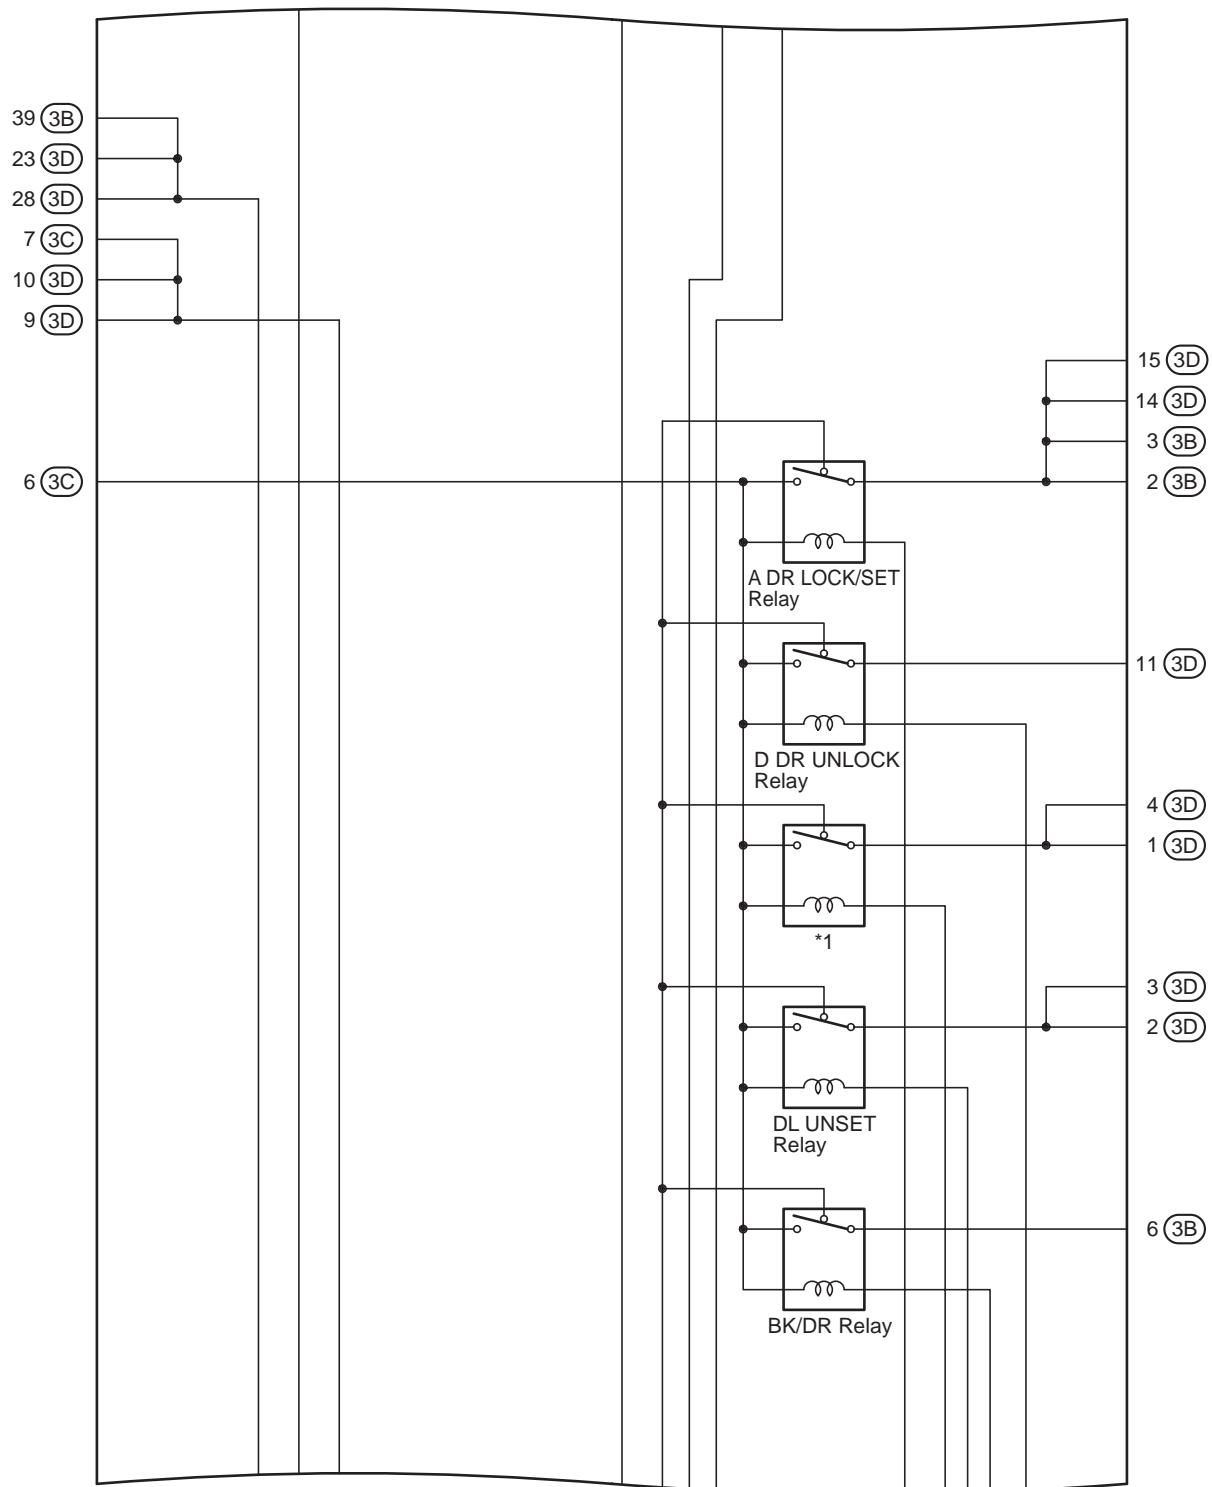


(Cont. Next Page)

F RELAY LOCATIONS

[Instrument Panel J/B Assembly Inner Circuit]


(Cont'd)

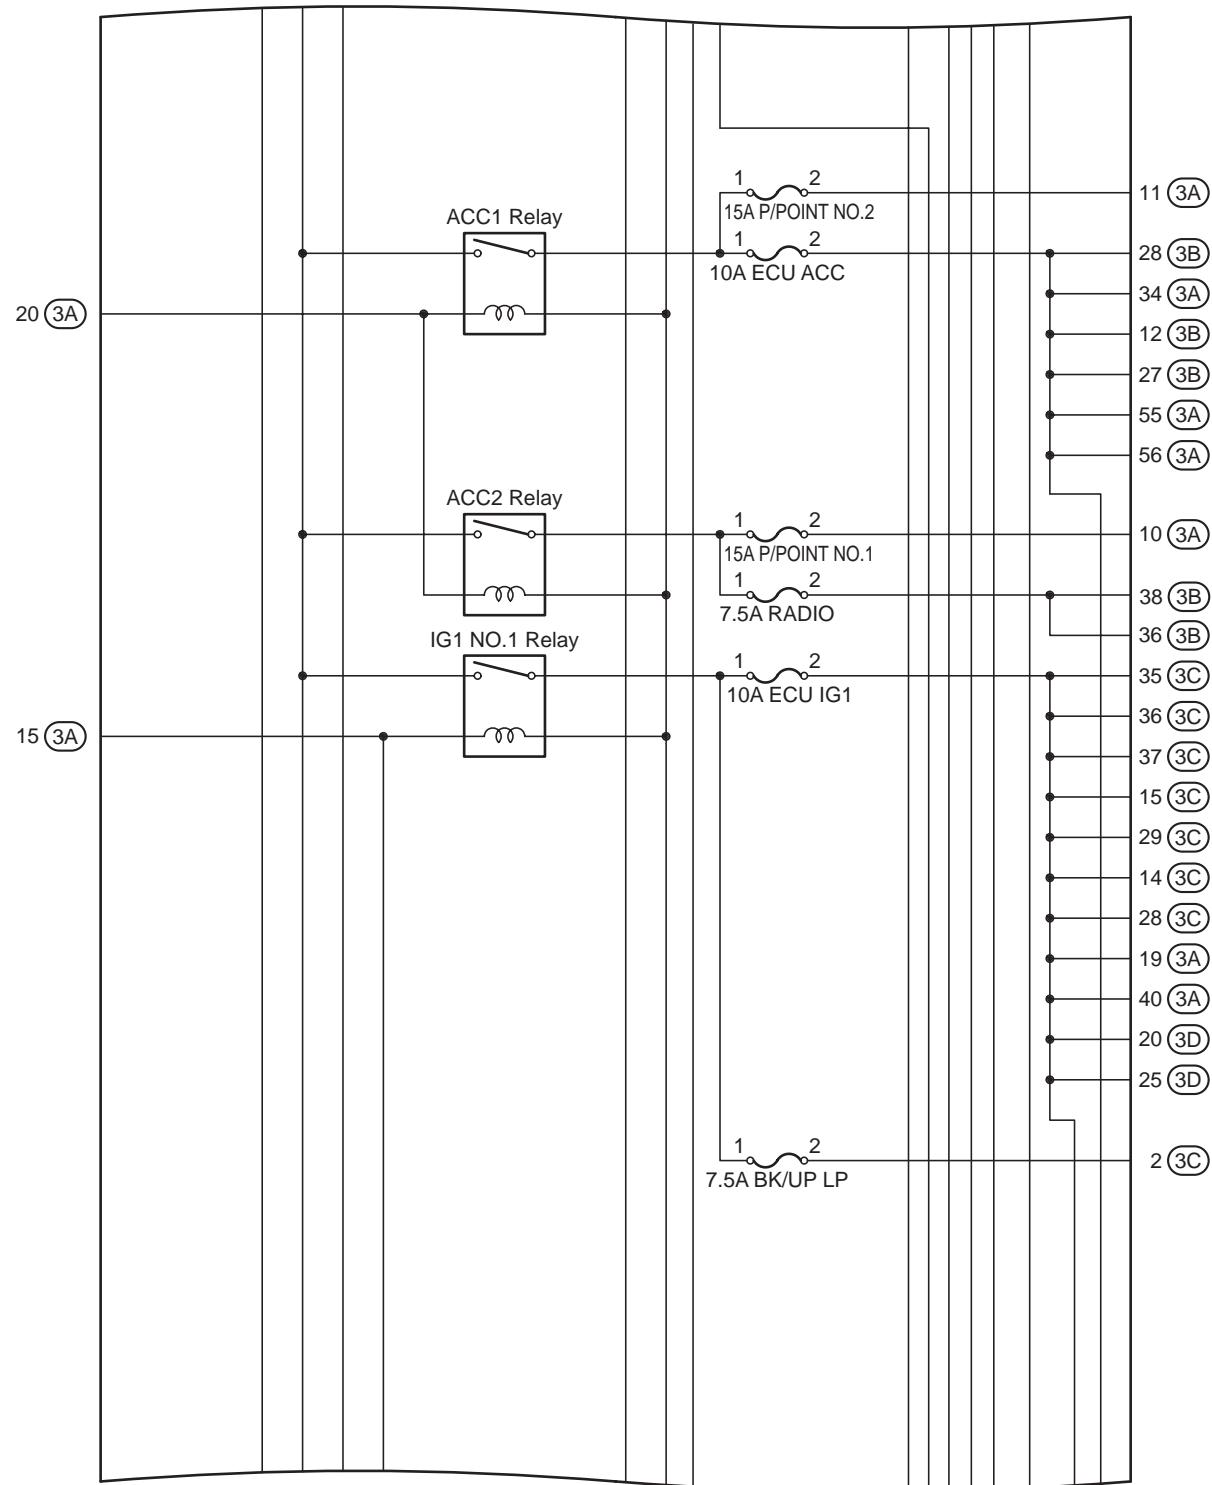

(Cont. Next Page)

(Cont'd)

* 2:w/ Double Locking
 * 3:w/o Double Locking

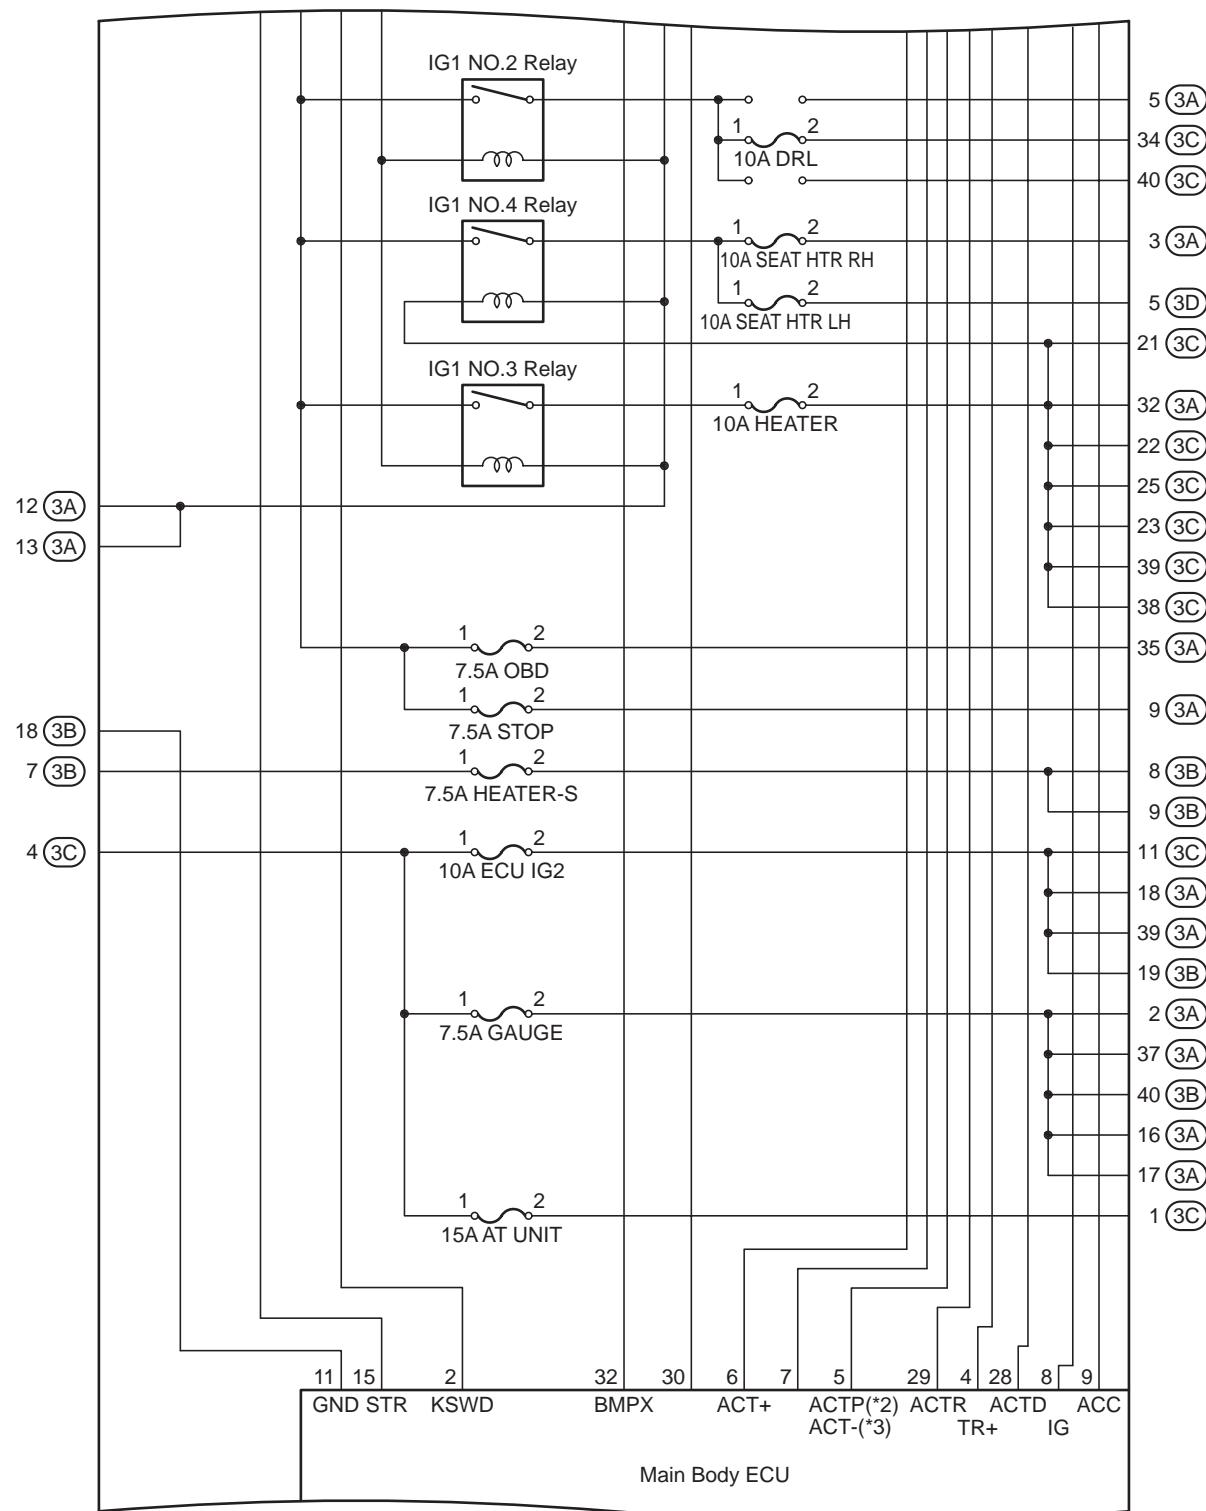


(Cont. Next Page)

F RELAY LOCATIONS


[Instrument Panel J/B Assembly Inner Circuit]

(Cont'd)

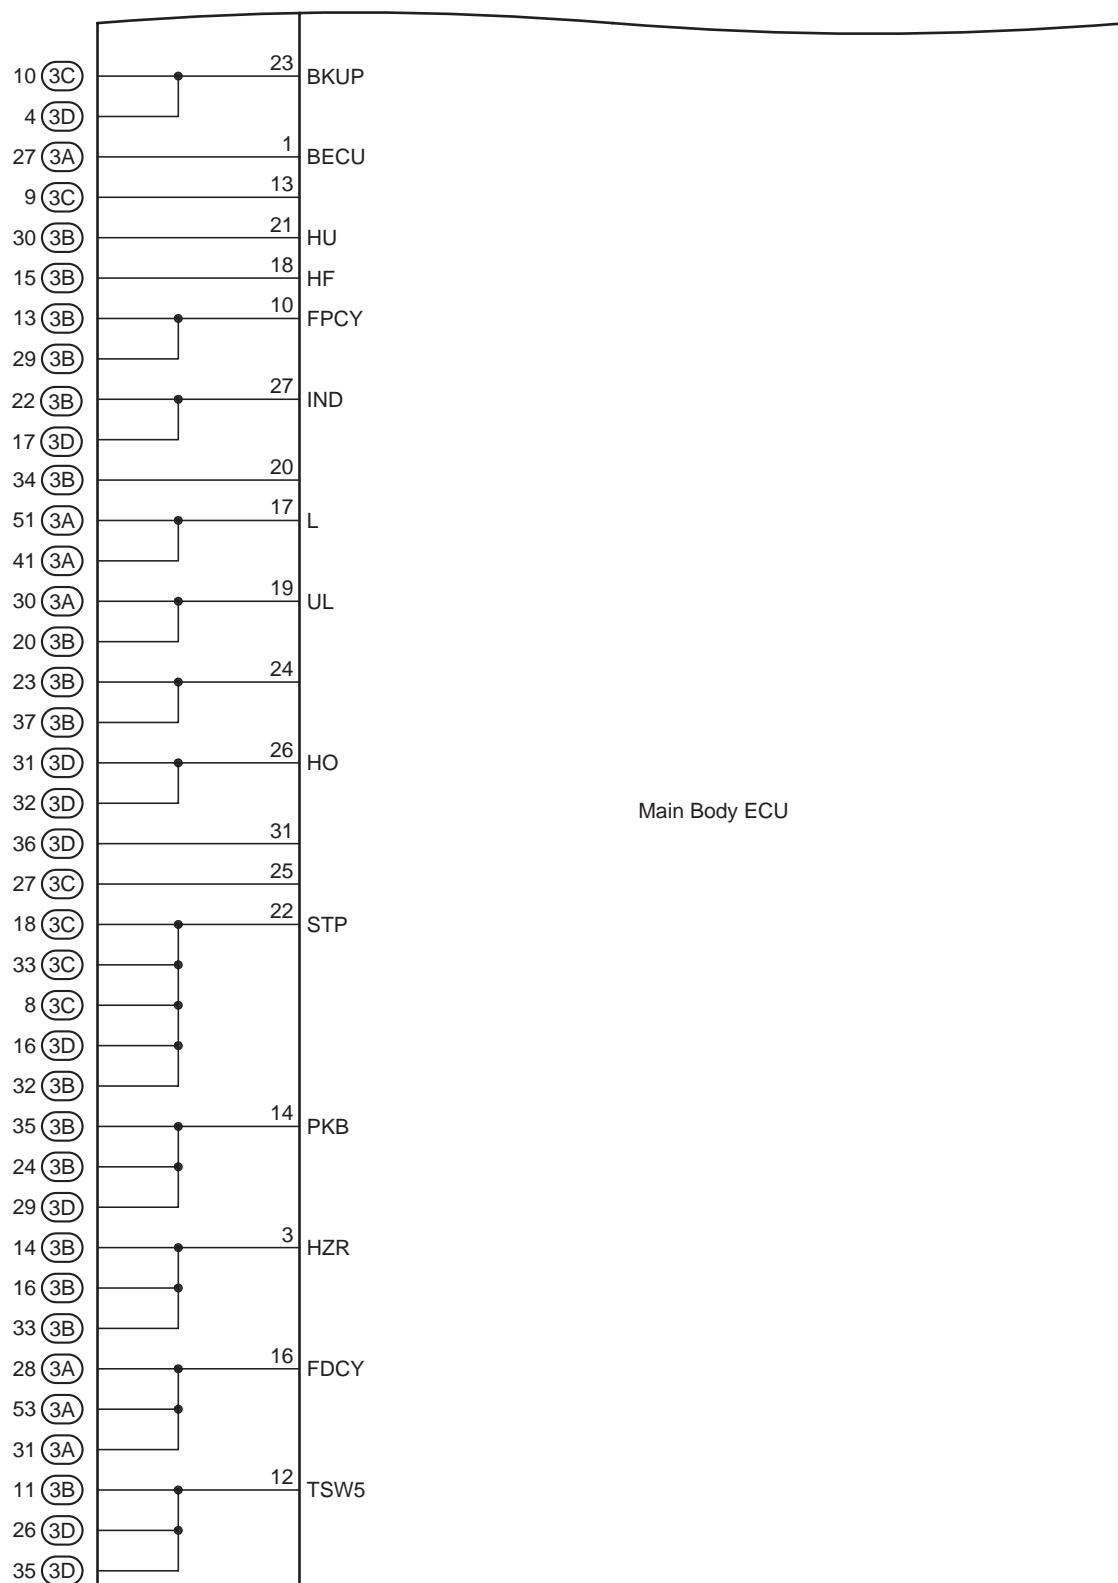


F RELAY LOCATIONS

Fusible Link Block Assembly	LHD : Engine Compartment Right (See Page 20)
	RHD : Engine Compartment Left (See Page 20)

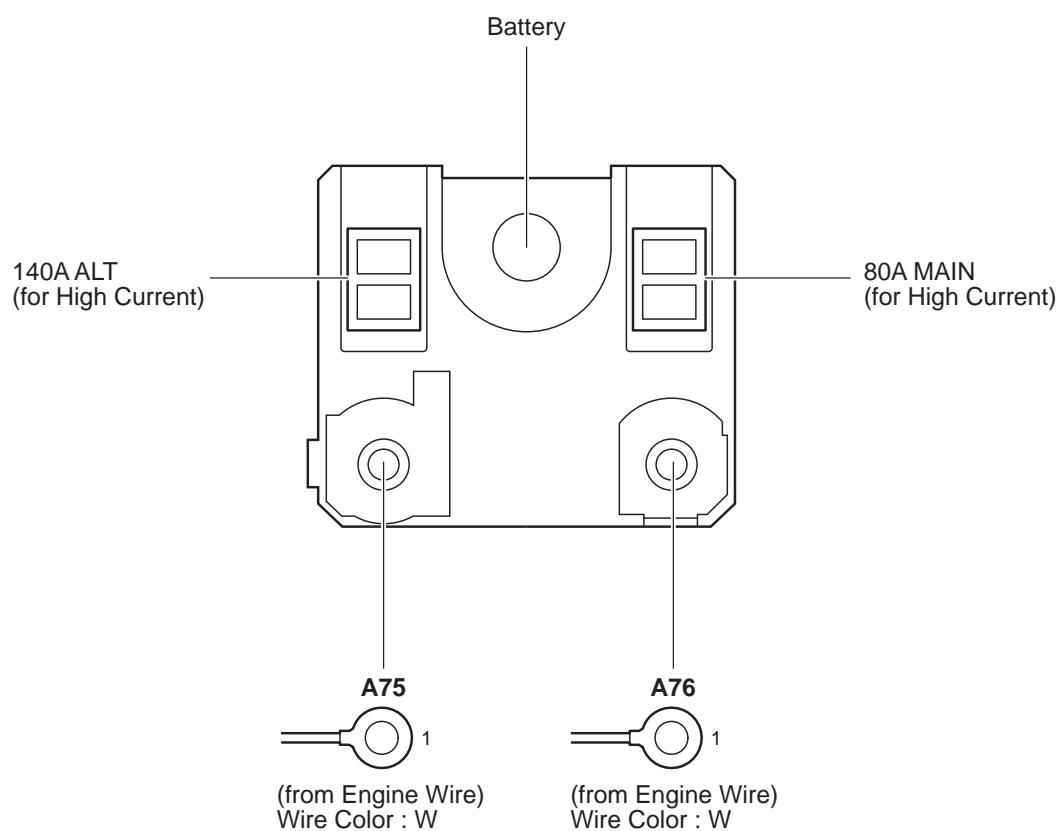


[Fusible Link Block Assembly Inner Circuit]

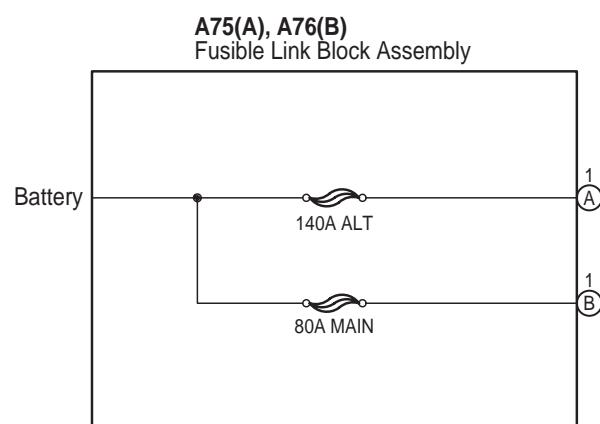

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD]

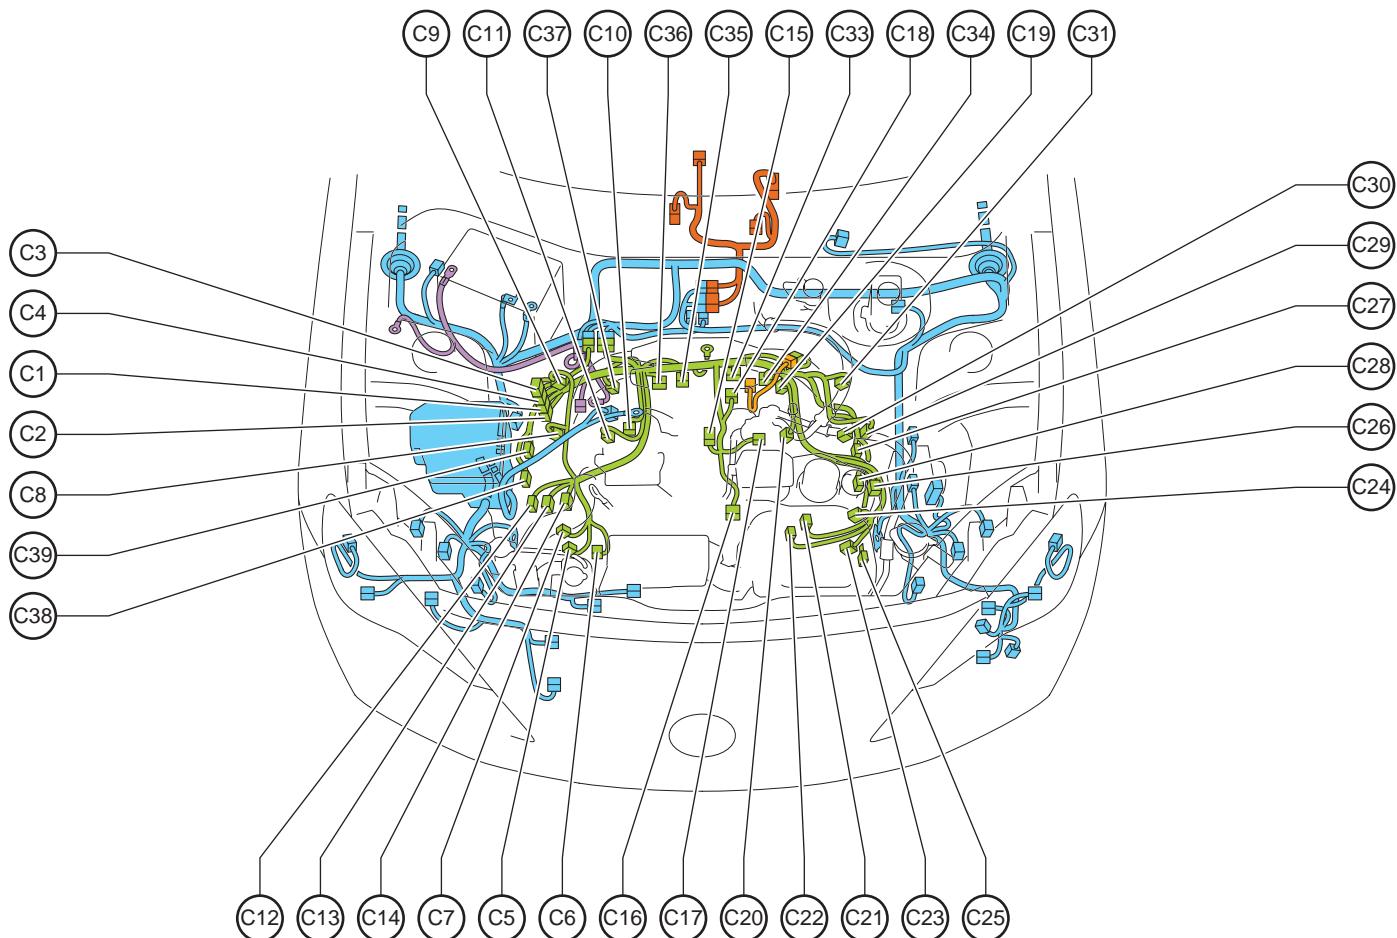


- C1 Injector Driver (EDU)
- C2 Injector Driver (EDU)
- C3 Injector Driver (EDU)
- C4 Injector Driver (EDU)
- C5 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- C6 VVT Sensor (Camshaft Position Sensor) (Bank 1 Exhaust Side)
- C7 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- C8 Fuel Injector Assembly (for Port Injection No. 1)
- C9 Fuel Injector Assembly (for Port Injection No. 3)
- C10 Fuel Pressure Sensor
- C11 Fuel Injector Assembly (for Direct Injection No. 1)
- C12 VVT Sensor (Camshaft Position Sensor) (Bank 1 Intake Side)
- C13 Heated Oxygen Sensor (Bank 1 Sensor 2)
- C14 Wide Range Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C15 Throttle Body with Motor Assembly
- C16 Intake Mass Air Flow Meter Sub-Assembly
- C17 Compressor with Magnet Clutch
- C18 VSV
- C19 Fuel Injector Assembly (for Direct Injection No. 4)

- C20 Fuel Injector Assembly (for Direct Injection No. 2)
- C21 Oil Temperature Sensor
- C22 Engine Oil Pressure Switch Assembly
- C23 Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- C24 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- C25 VVT Sensor (Camshaft Position Sensor) (Bank 2 Exhaust Side)
- C26 VVT Sensor (Camshaft Position Sensor) (Bank 2 Intake Side)
- C27 Ignition Coil Assembly No. 4
- C28 Ignition Coil Assembly No. 2
- C29 Spill Control Valve (Fuel Pump Assembly)
- C30 Fuel Injector Assembly (for Port Injection No. 2)
- C31 Fuel Injector Assembly (for Port Injection No. 4)
- C33 Crankshaft Position Sensor
- C34 Knock Control Sensor (Bank 2)
- C35 E.F.I. Engine Coolant Temperature Sensor
- C36 Knock Control Sensor (Bank 1)
- C37 Fuel Injector Assembly (for Direct Injection No. 3)
- C38 Ignition Coil Assembly No. 1
- C39 Ignition Coil Assembly No. 3

Position of Parts in Engine Compartment

[LHD]

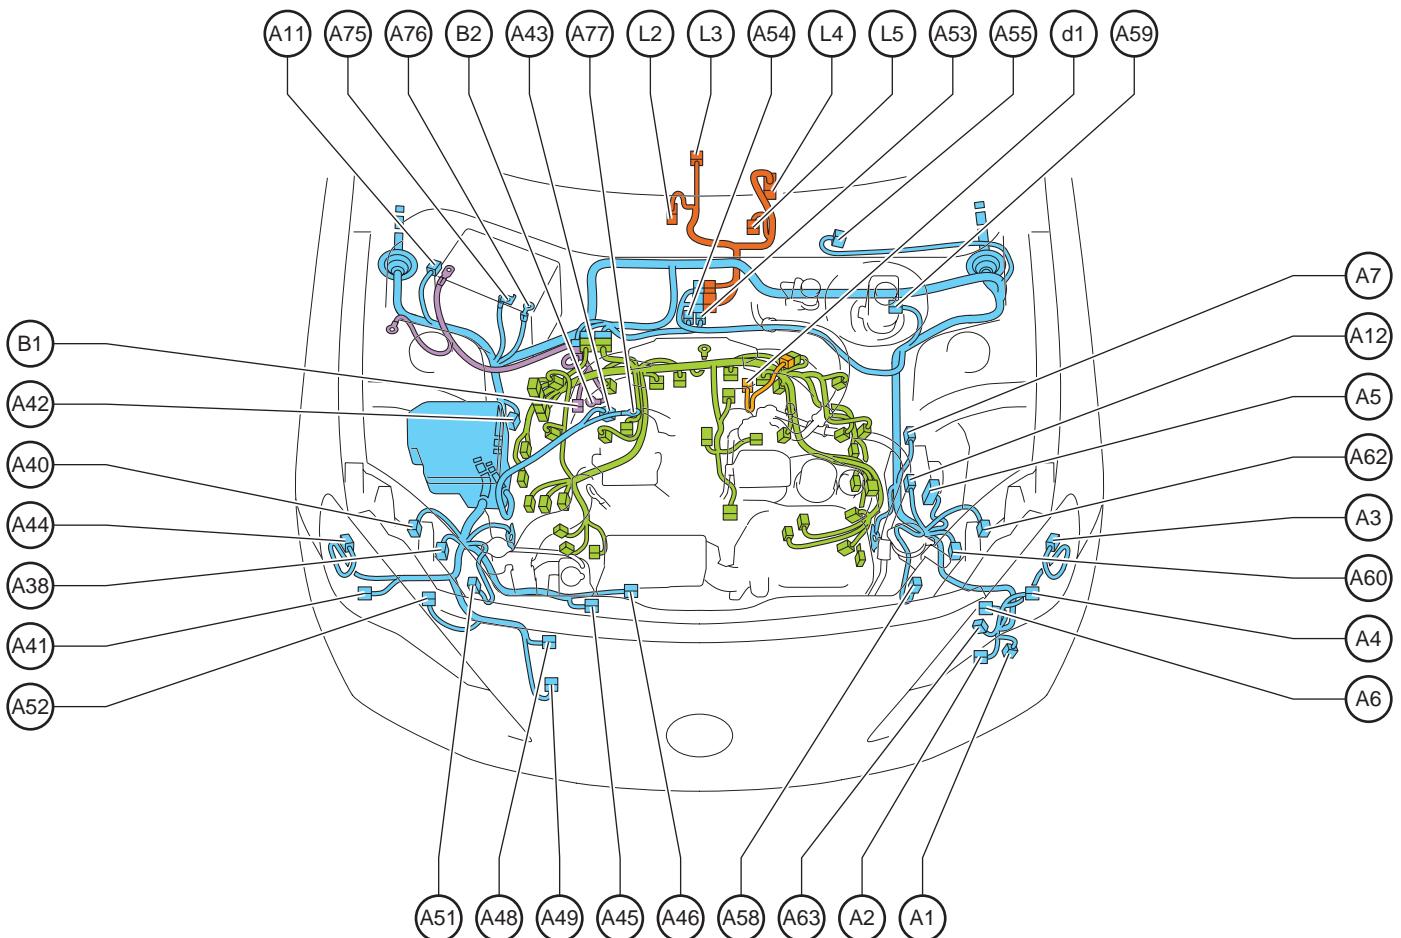


- | | | | |
|-----|--|-----|--|
| A1 | Windshield Washer Motor and Pump Assembly | A52 | Low Pitched Horn Assembly |
| A2 | Headlight Cleaner Washer Motor and Pump Assembly | A53 | Back-Up Light Switch Assembly |
| A3 | Side Turn Signal Light Assembly LH | A54 | Park/Neutral Position Switch Assembly |
| A4 | Headlight Assembly LH | A55 | Front Wiper Motor and Link Assembly |
| A5 | VSC (VDC) Control Module | A58 | Front Sub Sensor LH |
| A6 | Headlight Cleaner Control Relay | A59 | Brake Fluid Level Warning Switch
(Brake Master Cylinder Sub-Assembly) |
| A7 | Pressure Switch | A60 | Headlight Assembly LH |
| A11 | Battery Current Sensor Assembly | A62 | Headlight Assembly LH |
| A12 | Front Speed Sensor LH | A63 | Wireless Door Lock Buzzer |
| A38 | Headlight Assembly RH | A75 | Fusible Link Block Assembly |
| A40 | Headlight Assembly RH | A76 | Fusible Link Block Assembly |
| A41 | Headlight Assembly RH | A77 | Generator Assembly |
| A42 | Front Speed Sensor RH | B1 | Starter Assembly |
| A43 | Generator Assembly | B2 | Starter Assembly |
| A44 | Side Turn Signal Light Assembly RH | L2 | Park/Neutral Position Switch Assembly |
| A45 | Cooling Fan Motor | L3 | Transmission Revolution Sensor (SP2) |
| A46 | No. 2 Cooling Fan Motor | L4 | Electronically Controlled Transmission Solenoid |
| A48 | Ambient Temperature Sensor (Thermistor Assembly) | L5 | Transmission Revolution Sensor (NT) |
| A49 | High Pitched Horn Assembly | d1 | CPC Solenoid |
| A51 | Front Sub Sensor RH | | |

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel


[LHD]

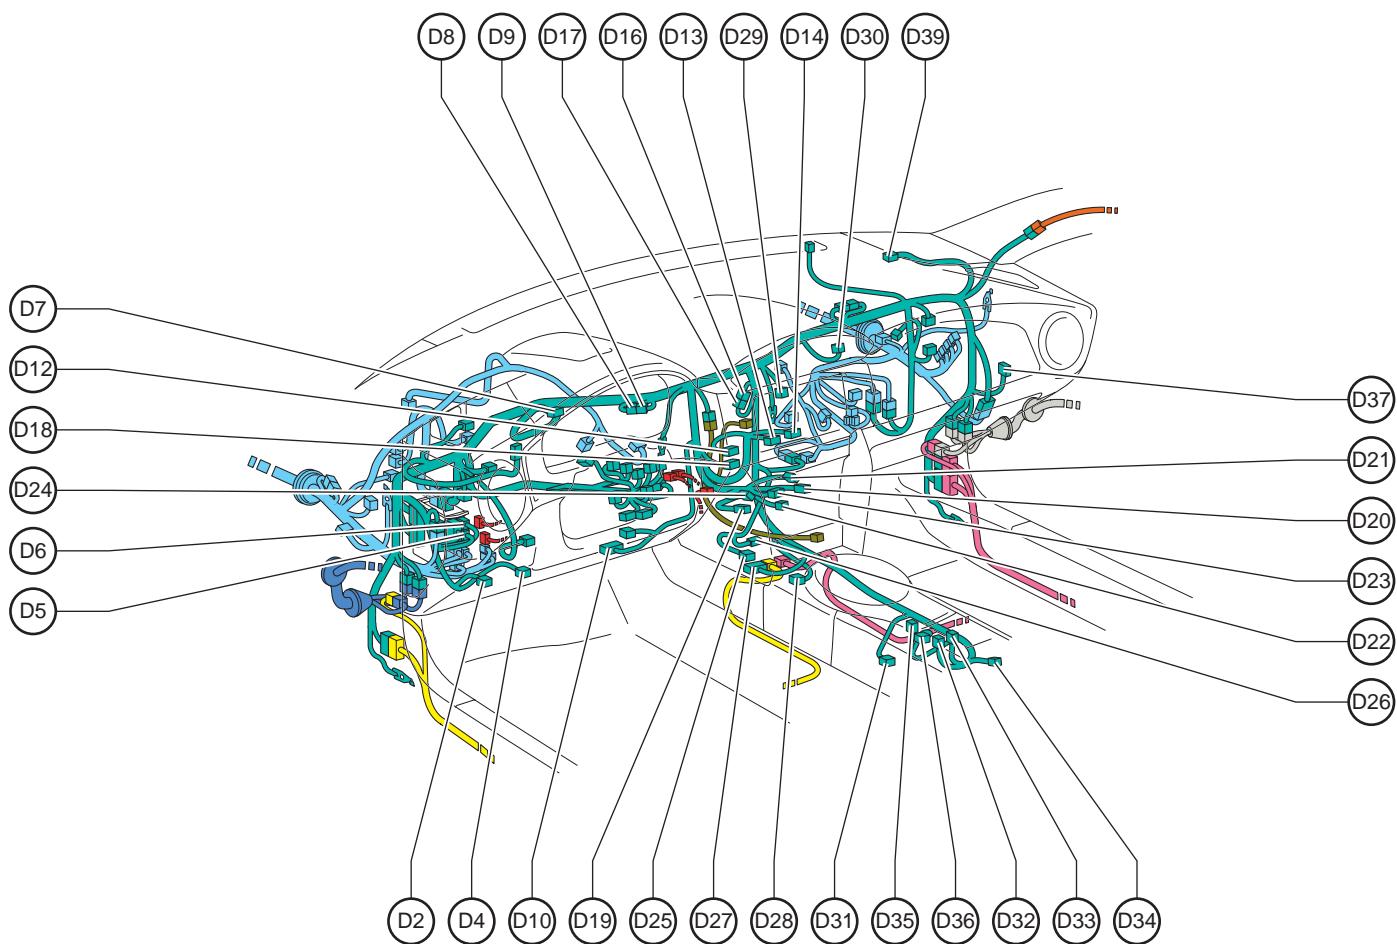

D2	Light Control Rheostat	D22	No. 3 Heater Control Sub-Assembly
D4	Luggage Door Opening Switch Assembly	D23	No. 3 Heater Control Sub-Assembly
D5	Main Body ECU	D24	Heater Control Sub-Assembly
D6	Main Body ECU	D25	Engine Switch
D7	Combination Meter Assembly	D26	Indoor Electrical Key Oscillator Assembly
D8	Junction Connector	D27	Airbag Control Module
D9	Junction Connector	D28	Shift Lever Position Sensor (Floor Shift Control Lever)
D10	DLC3	D29	Option Connector
D12	Radio Receiver Assembly	D30	Passenger's Airbag Module
D13	Radio Receiver Assembly	D31	Parking Brake Switch Assembly
D14	Radio Receiver Assembly	D32	Seat Heater Switch LH
D16	Junction Connector	D33	Seat Heater Switch RH
D17	Junction Connector	D34	No. 2 Power Outlet Socket Assembly
D18	Clock Assembly	D35	Pattern Select Switch Assembly
D19	A/C Amplifier Assembly	D36	Shift Position Indicator
D20	A/C Amplifier Assembly	D37	Airbag Cut Off Switch
D21	No. 1 Heater Control Sub-Assembly	D39	Front No. 2 Speaker Assembly RH

Position of Parts in Instrument Panel

[LHD]

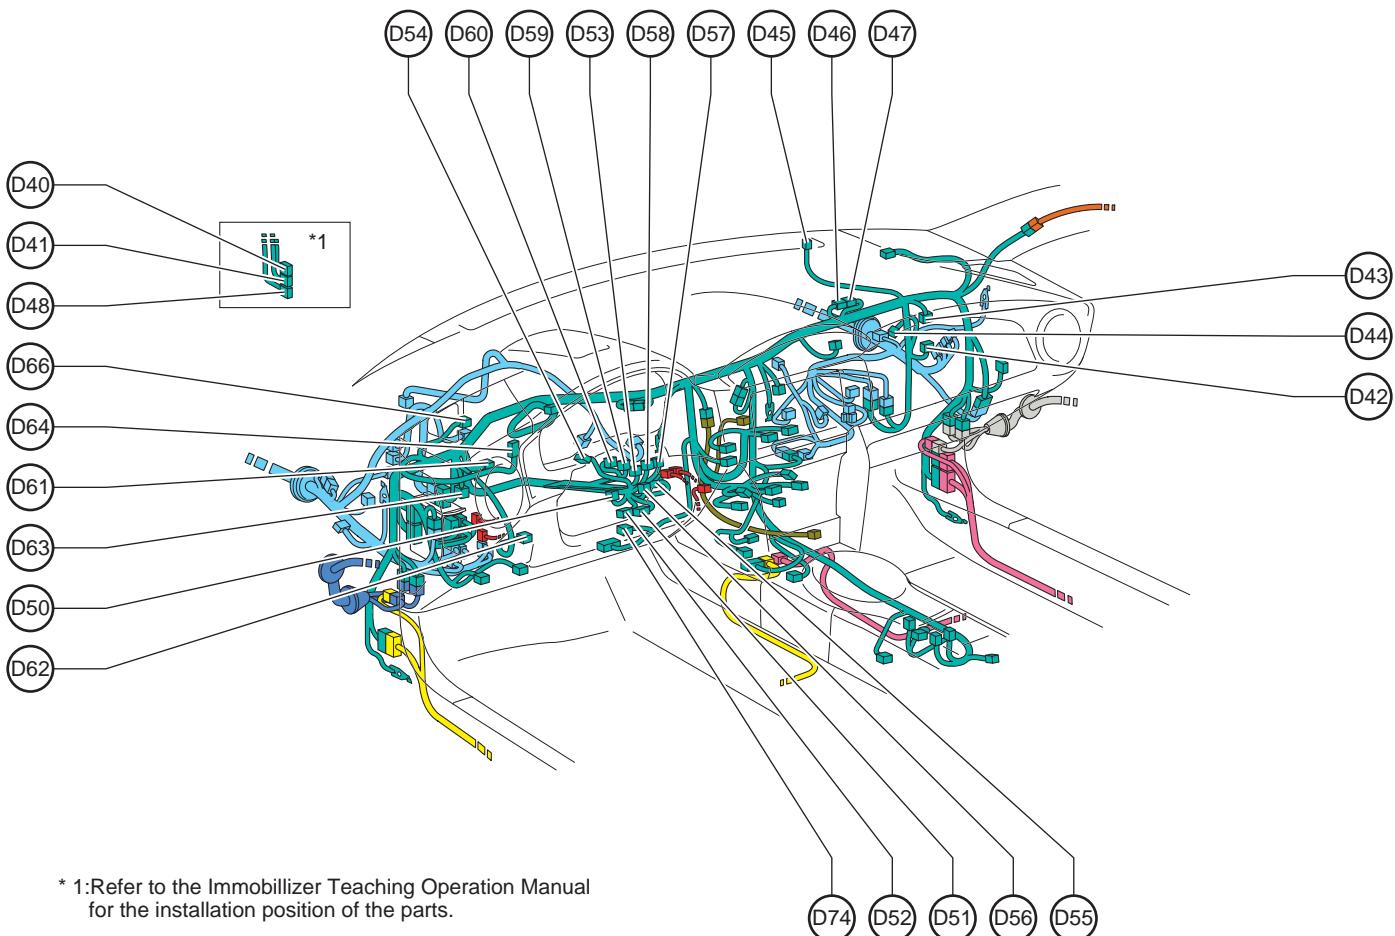

* 1:Refer to the Immobilizer Teaching Operation Manual
for the installation position of the parts.


D40	Certification ECU Assembly
D41	Certification ECU Assembly
D42	Shift Lock Release Button Cover
D43	Junction Connector
D44	No. 1 Power Outlet Socket Assembly
D45	Automatic Light Control Sensor
D46	Junction Connector
D47	Junction Connector
D48	Certification ECU Assembly
D50	Headlight Dimmer Switch Assembly
D51	Roll Connector
D52	Roll Connector
D53	Un-Lock Warning Switch Assembly (Ignition Switch Lock Cylinder Assembly)

D54	Transponder Key Amplifier
D55	Ignition or Starter Switch Assembly
D56	Steering Sensor
D57	Windshield Wiper Switch Assembly
D58	Windshield Wiper Switch Assembly
D59	Steering Lock Actuator Assembly
D60	Key Inter Lock Solenoid (Ignition Switch Lock Cylinder Assembly)
D61	Turn Signal Flasher Assembly
D62	Driver's Knee Airbag Module
D63	Option Connector
D64	Trip Switch
D66	Front No. 2 Speaker Assembly LH
D74	No. 1 Cooler Thermistor

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

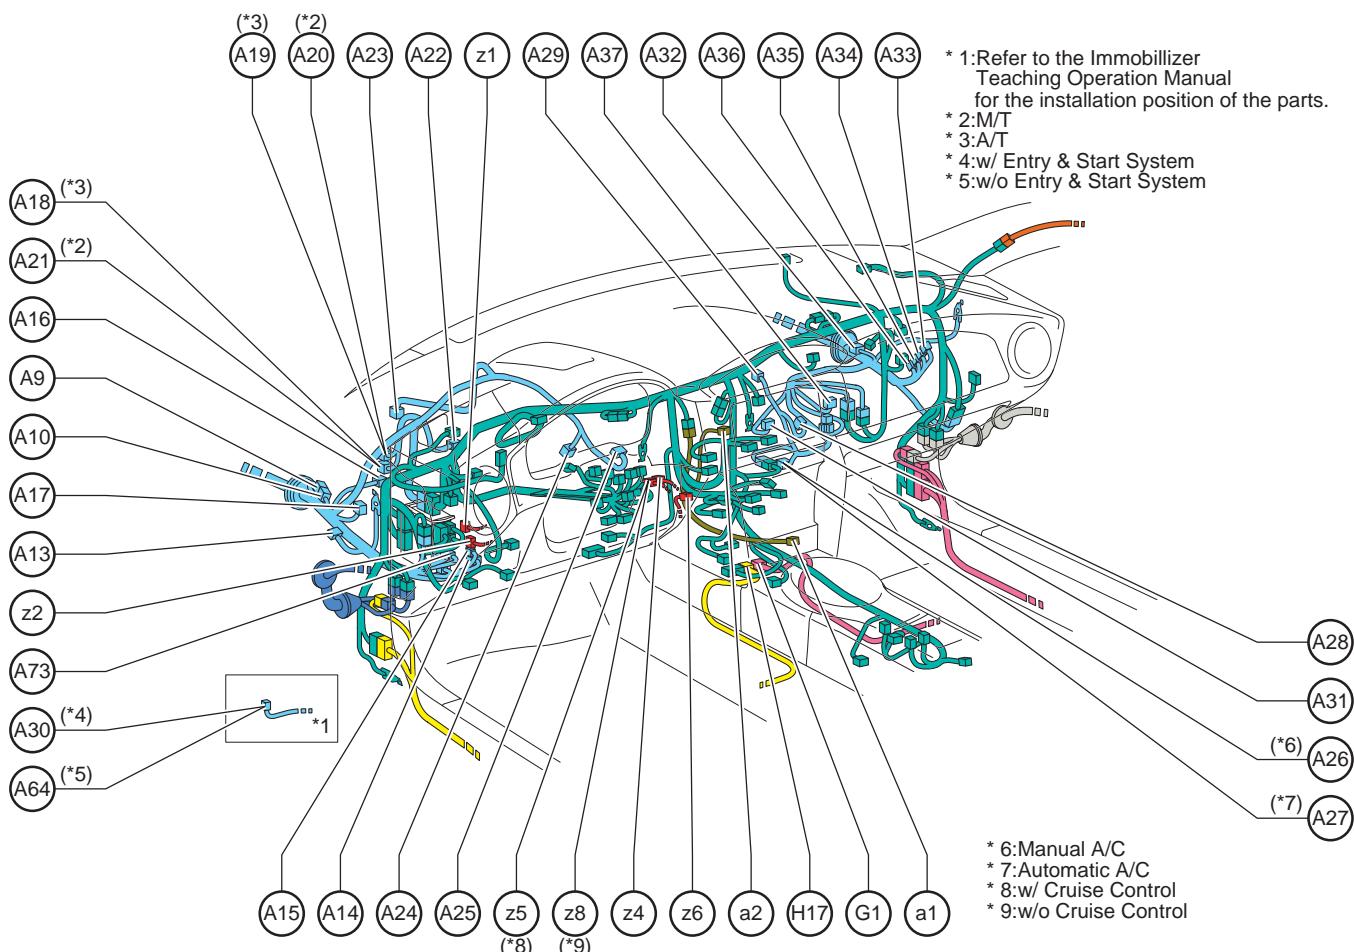


A9	Junction Connector
A10	Junction Connector
A13	Noise Filter
A14	Power Steering ECU Assembly
A15	Power Steering ECU Assembly
A16	Headlight Leveling ECU
A17	Junction Connector
A18	Transmission Control Module
A19	Transmission Control Module
A20	Clutch Start Switch Assembly
A21	Clutch Switch Assembly
A22	Stop Light Switch Assembly
A23	Accelerator Pedal Sensor Assembly
A24	No. 1 A/C Radiator Damper Servo Sub-Assembly
A25	Cooler Thermistor (Room Temperature Sensor)
A26	Blower Resistor
A27	Blower Assembly
A28	No. 3 A/C Radiator Damper Servo Sub-Assembly
A29	No. 4 A/C Radiator Damper Servo Sub-Assembly
A30	ID Code Box
A31	Blower with Fan Motor Sub-Assembly
A32	No. 5 A/C Radiator Damper Servo Sub-Assembly
A33	ECM
A34	ECM
A35	ECM
A36	ECM
A37	Junction Connector

A64	Transponder Key ECU Assembly
A73	Main Body ECU
G1	Airbag Control Module
H17	Airbag Control Module
a1	No. 1 Stereo Jack Adapter Assembly
a2	Radio Receiver Assembly
z1	Power Steering ECU Assembly
z2	Steering Column Assembly
z4	Power Steering ECU Assembly
z5	Steering Column Assembly
z6	Roll Connector
z8	Paddle Shift Switch
	Roll Connector
	Cruise Control Main Switch
	Roll Connector
	Driver's Airbag Module
	Roll Connector
	Horn Button Assembly

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

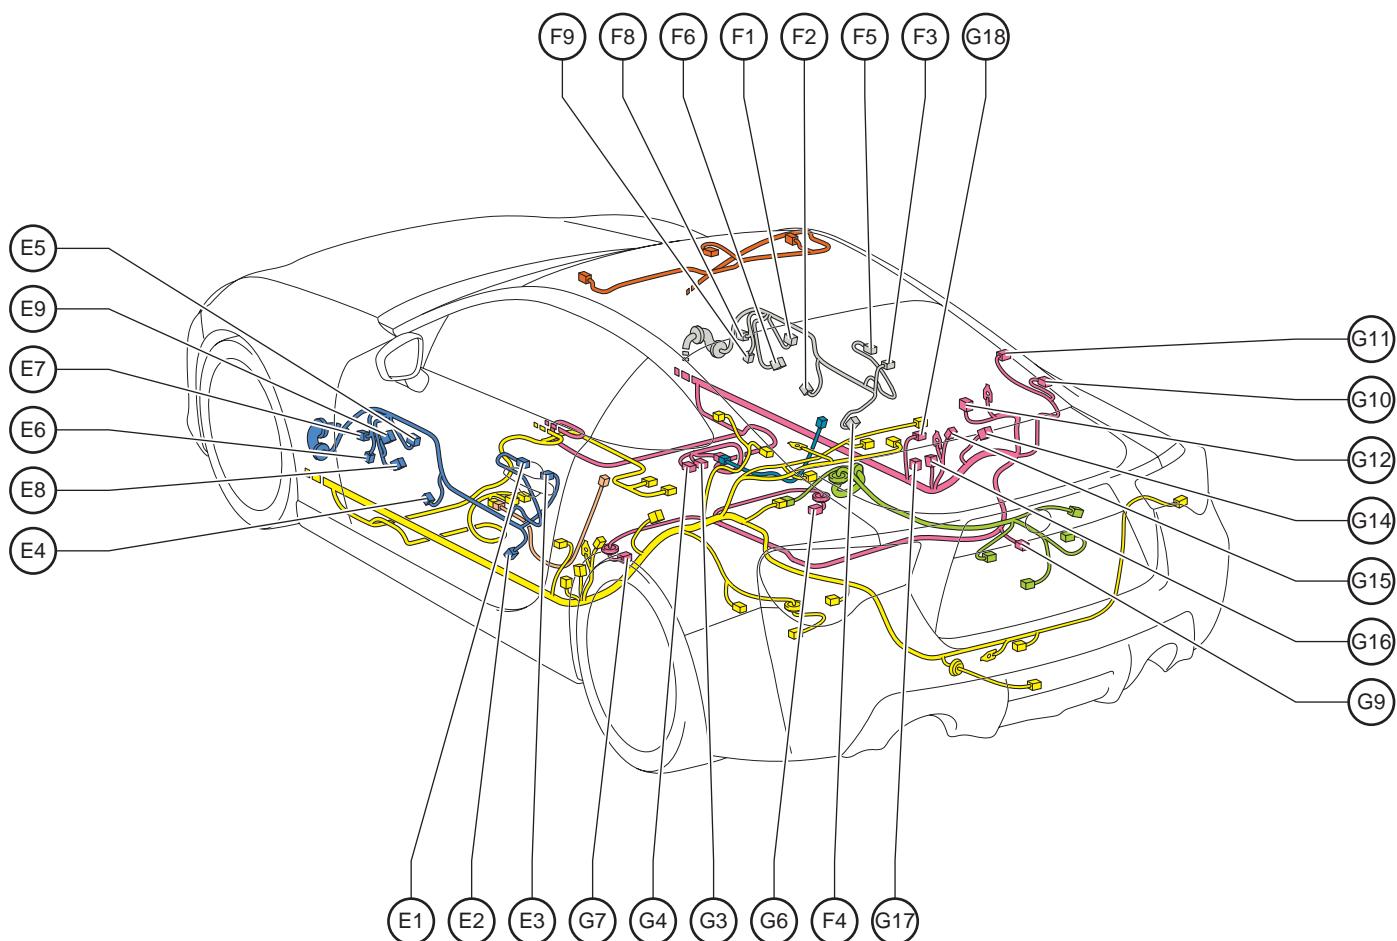


- | | |
|----|--|
| E1 | Electrical Key Antenna LH
(Front Door Outside Handle Assembly LH) |
| E2 | Front Courtesy Light Assembly LH |
| E3 | Door Lock with Motor Assembly LH |
| E4 | Front Door Impact Sensor LH |
| E5 | Power Window Regulator Motor Assembly LH |
| E6 | Front No. 1 Speaker Assembly LH |
| E7 | Outer Rear View Mirror Assembly LH |
| E8 | Power Window Regulator Master Switch Assembly |
| E9 | Outer Mirror Switch Assembly |
| F1 | Power Window Regulator Motor Assembly RH |
| F2 | Front Door Impact Sensor RH |
| F3 | Door Lock with Motor Assembly RH |
| F4 | Front Courtesy Light Assembly RH |
| F5 | Electrical Key Antenna RH
(Front Door Outside Handle Assembly RH) |
| F6 | Power Window Regulator Switch Assembly |
| F8 | Outer Rear View Mirror Assembly RH |
| F9 | Front No. 1 Speaker Assembly RH |

- | | |
|-----|--|
| G3 | Front Seat Inner Belt Assembly RH |
| G4 | Seat Heater RH |
| G6 | No. 2 Fuel Sender Gage Assembly |
| G7 | Fuel Sender Gage Assembly |
| G9 | Rear Speed Sensor RH |
| G10 | Rear Window Defogger (Back Window Glass) |
| G11 | Curtain Airbag Module RH |
| G12 | Fuel Pump Control ECU Assembly |
| G14 | Curtain Airbag Sensor RH |
| G15 | Rear Speaker Assembly RH |
| G16 | Side Airbag Sensor RH |
| G17 | Pretensioner RH |
| G18 | Front Door Courtesy Light Switch Assembly RH |

Position of Parts in Body

[LHD]

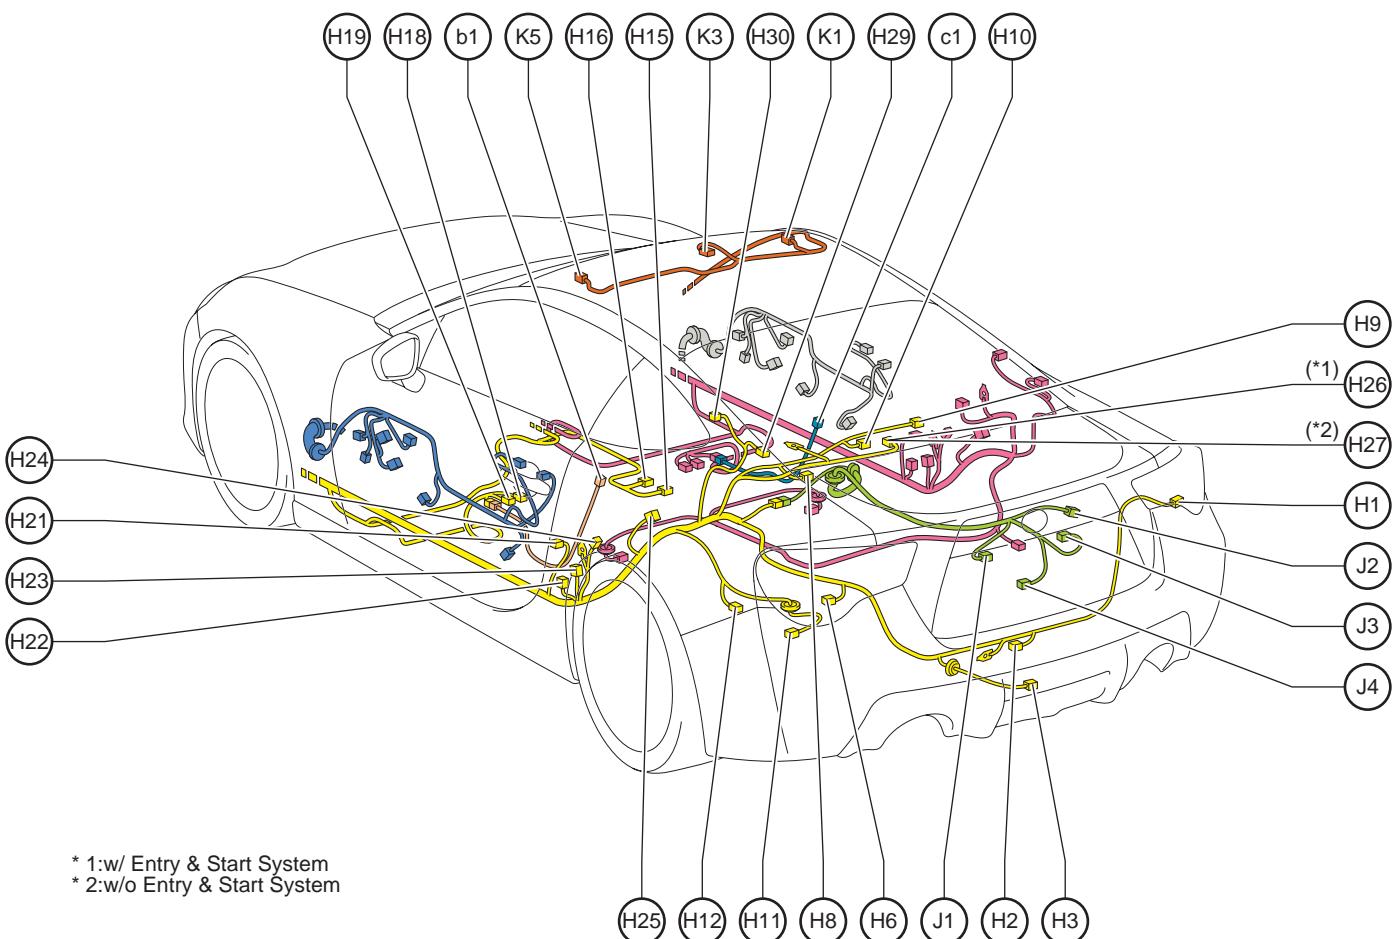


H1 Rear Combination Light Lens and Body RH
 H2 Rear Fog Light Assembly
 (Back-Up Light Lens and Body)
 H3 Rear Electrical Key Antenna
 H6 Rear Combination Light Lens and Body LH
 H8 No. 1 Luggage Compartment Light Assembly
 H9 No. 2 Indoor Electrical Key Oscillator Assembly
 H10 Center Stop Light Assembly
 H11 Rear Height Control Sensor Sub-Assembly LH
 H12 Rear Speed Sensor LH
 H15 No. 3 Indoor Electrical Key Oscillator Assembly
 H16 Satellite Safing Sensor
 H18 Seat Heater LH
 H19 Front Seat Inner Belt Assembly LH
 H21 Front Door Courtesy Light Switch Assembly LH
 H22 Pretensioner LH
 H23 Side Airbag Sensor LH
 H24 Rear Speaker Assembly LH
 H25 Curtain Airbag Sensor LH
 H26 Door Control Receiver
 H27 Door Control Receiver
 H29 Rear Window Defogger (Back Window Glass)
 H30 Curtain Airbag Module LH

J1 License Plate Light Lens LH
 J2 Back Door Opener Switch Assembly
 J3 Luggage Compartment Door Striker Assembly
 J4 License Plate Light Lens RH
 K1 Vanity Light Assembly RH (Visor Assembly RH)
 K3 Map Light Assembly
 K5 Vanity Light Assembly LH (Visor Assembly LH)
 b1 Side Airbag Module LH
 c1 Side Airbag Module RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD]

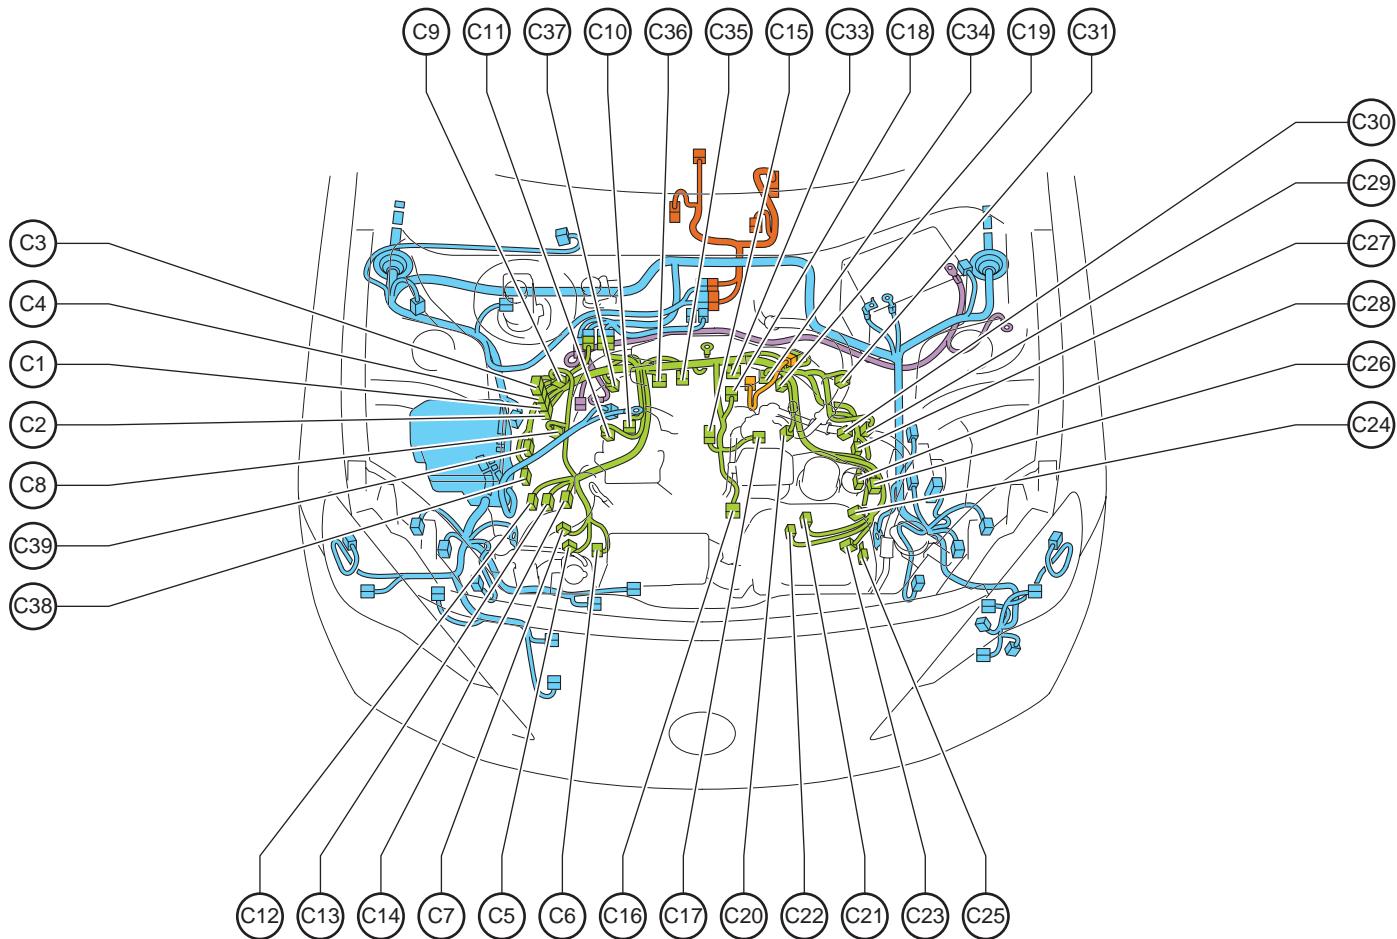


- C1 Injector Driver (EDU)
- C2 Injector Driver (EDU)
- C3 Injector Driver (EDU)
- C4 Injector Driver (EDU)
- C5 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- C6 VVT Sensor (Camshaft Position Sensor) (Bank 1 Exhaust Side)
- C7 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- C8 Fuel Injector Assembly (for Port Injection No. 1)
- C9 Fuel Injector Assembly (for Port Injection No. 3)
- C10 Fuel Pressure Sensor
- C11 Fuel Injector Assembly (for Direct Injection No. 1)
- C12 VVT Sensor (Camshaft Position Sensor) (Bank 1 Intake Side)
- C13 Heated Oxygen Sensor (Bank 1 Sensor 2)
- C14 Wide Range Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C15 Throttle Body with Motor Assembly
- C16 Intake Mass Air Flow Meter Sub-Assembly
- C17 Compressor with Magnet Clutch
- C18 VSV
- C19 Fuel Injector Assembly (for Direct Injection No. 4)

- C20 Fuel Injector Assembly (for Direct Injection No. 2)
- C21 Oil Temperature Sensor
- C22 Engine Oil Pressure Switch Assembly
- C23 Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- C24 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- C25 VVT Sensor (Camshaft Position Sensor) (Bank 2 Exhaust Side)
- C26 VVT Sensor (Camshaft Position Sensor) (Bank 2 Intake Side)
- C27 Ignition Coil Assembly No. 4
- C28 Ignition Coil Assembly No. 2
- C29 Spill Control Valve (Fuel Pump Assembly)
- C30 Fuel Injector Assembly (for Port Injection No. 2)
- C31 Fuel Injector Assembly (for Port Injection No. 4)
- C33 Crankshaft Position Sensor
- C34 Knock Control Sensor (Bank 2)
- C35 E.F.I. Engine Coolant Temperature Sensor
- C36 Knock Control Sensor (Bank 1)
- C37 Fuel Injector Assembly (for Direct Injection No. 3)
- C38 Ignition Coil Assembly No. 1
- C39 Ignition Coil Assembly No. 3

Position of Parts in Engine Compartment

[RHD]

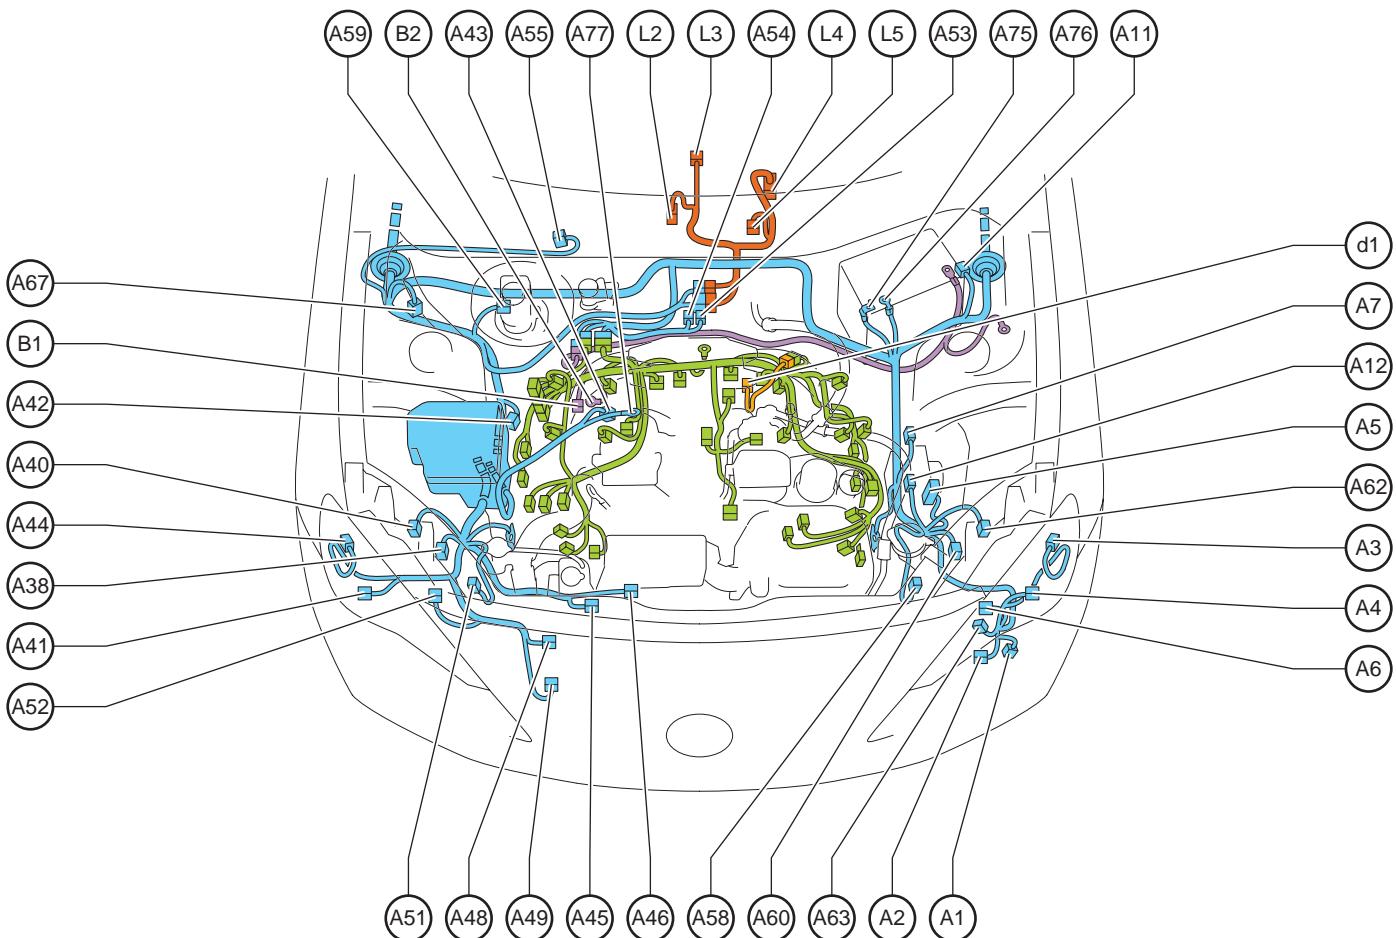


- | | | | |
|-----|--|-----|--|
| A1 | Windshield Washer Motor and Pump Assembly | A52 | Low Pitched Horn Assembly |
| A2 | Headlight Cleaner Washer Motor and Pump Assembly | A53 | Back-Up Light Switch Assembly |
| A3 | Side Turn Signal Light Assembly LH | A54 | Park/Neutral Position Switch Assembly |
| A4 | Headlight Assembly LH | A55 | Front Wiper Motor and Link Assembly |
| A5 | VSC (VDC) Control Module | A58 | Front Sub Sensor LH |
| A6 | Headlight Cleaner Control Relay | A59 | Brake Fluid Level Warning Switch
(Brake Master Cylinder Sub-Assembly) |
| A7 | Pressure Switch | A60 | Headlight Assembly LH |
| A11 | Battery Current Sensor Assembly | A62 | Headlight Assembly LH |
| A12 | Front Speed Sensor LH | A63 | Wireless Door Lock Buzzer |
| A38 | Headlight Assembly RH | A67 | Alarm Kit |
| A40 | Headlight Assembly RH | A75 | Fusible Link Block Assembly |
| A41 | Headlight Assembly RH | A76 | Fusible Link Block Assembly |
| A42 | Front Speed Sensor RH | A77 | Generator Assembly |
| A43 | Generator Assembly | | |
| A44 | Side Turn Signal Light Assembly RH | B1 | Starter Assembly |
| A45 | Cooling Fan Motor | B2 | Starter Assembly |
| A46 | No. 2 Cooling Fan Motor | L2 | Park/Neutral Position Switch Assembly |
| A48 | Ambient Temperature Sensor (Thermistor Assembly) | L3 | Transmission Revolution Sensor (SP2) |
| A49 | High Pitched Horn Assembly | L4 | Electronically Controlled Transmission Solenoid |
| A51 | Front Sub Sensor RH | L5 | Transmission Revolution Sensor (NT) |
| | | d1 | CPC Solenoid |

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel


[RHD]

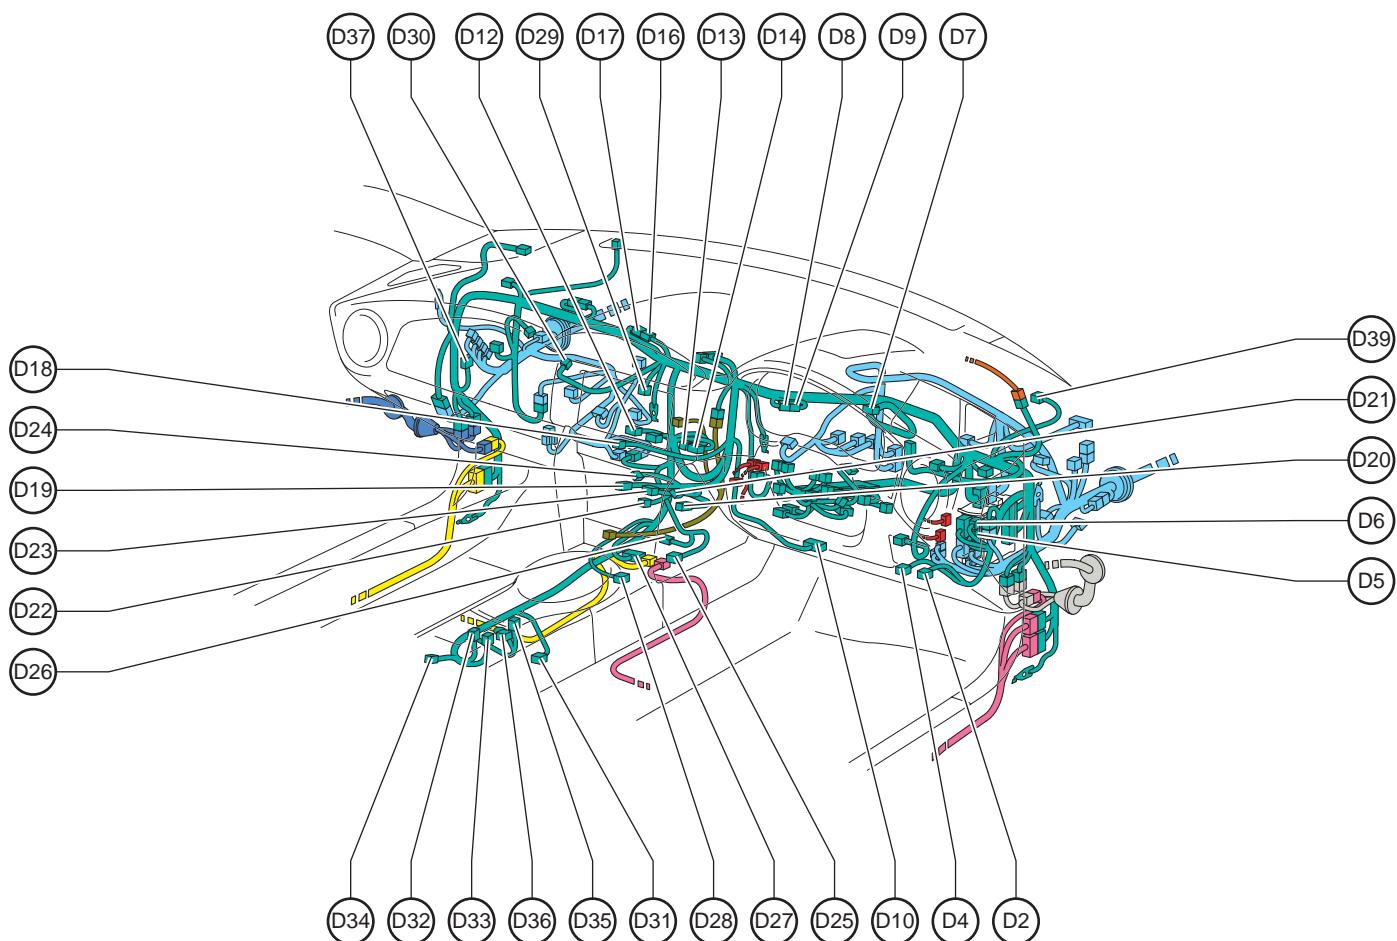

D2	Light Control Rheostat	D22	No. 3 Heater Control Sub-Assembly
D4	Luggage Door Opening Switch Assembly	D23	No. 3 Heater Control Sub-Assembly
D5	Main Body ECU	D24	Heater Control Sub-Assembly
D6	Main Body ECU	D25	Engine Switch
D7	Combination Meter Assembly	D26	Indoor Electrical Key Oscillator Assembly
D8	Junction Connector	D27	Airbag Control Module
D9	Junction Connector	D28	Shift Lever Position Sensor (Floor Shift Control Lever)
D10	DLC3	D29	Option Connector
D12	Radio Receiver Assembly	D30	Passenger's Airbag Module
D13	Radio Receiver Assembly	D31	Parking Brake Switch Assembly
D14	Radio Receiver Assembly	D32	Seat Heater Switch LH
D16	Junction Connector	D33	Seat Heater Switch RH
D17	Junction Connector	D34	No. 2 Power Outlet Socket Assembly
D18	Clock Assembly	D35	Pattern Select Switch Assembly
D19	A/C Amplifier Assembly	D36	Shift Position Indicator
D20	A/C Amplifier Assembly	D37	Airbag Cut Off Switch
D21	No. 1 Heater Control Sub-Assembly	D39	Front No. 2 Speaker Assembly RH

Position of Parts in Instrument Panel

[RHD]

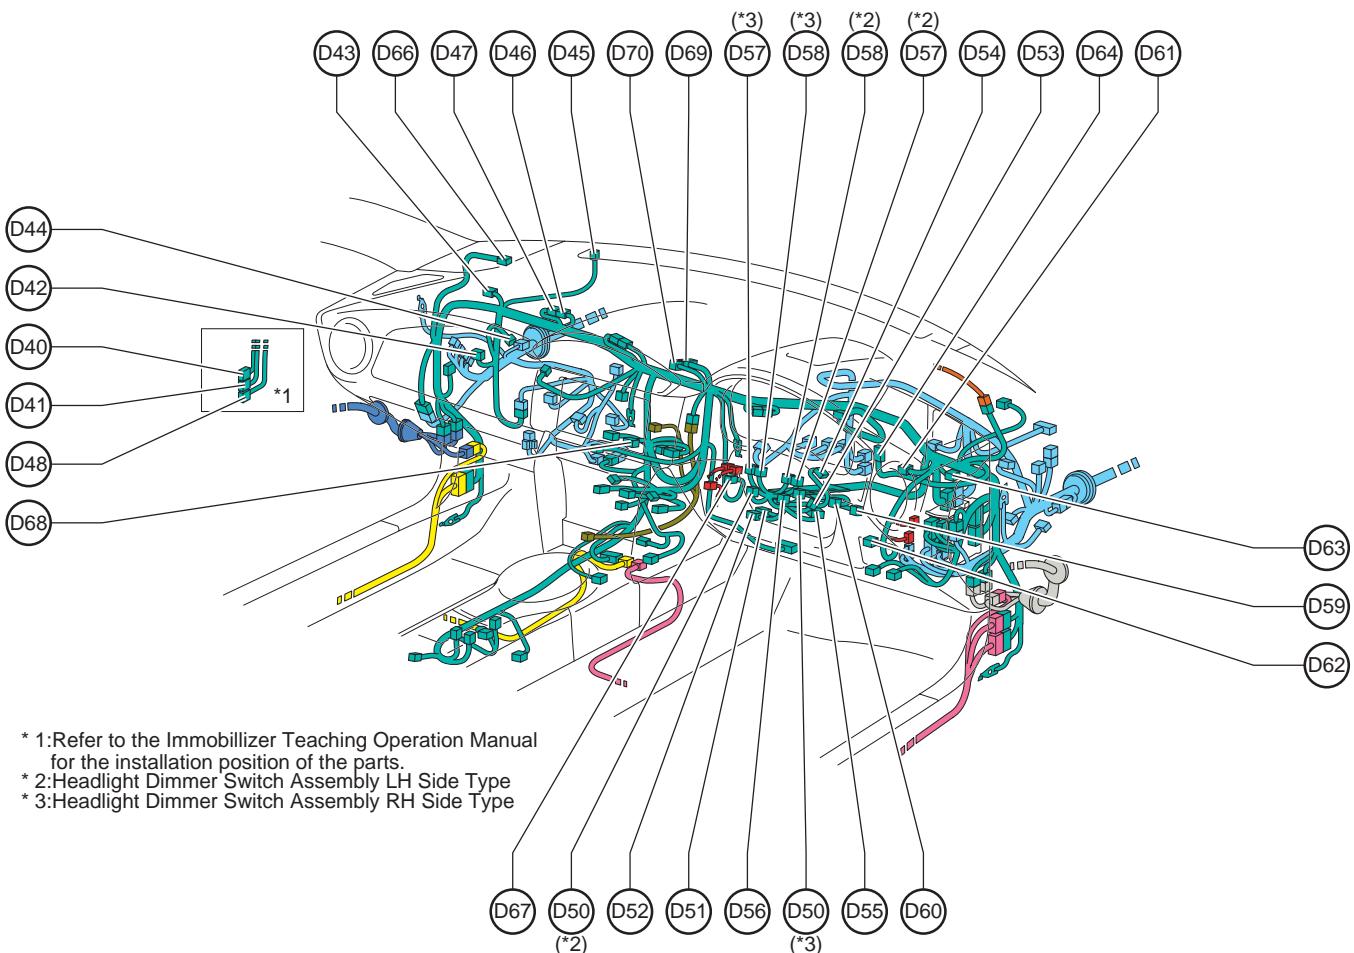


- | | | | |
|-----|---|-----|---|
| D40 | Certification ECU Assembly | D56 | Steering Sensor |
| D41 | Certification ECU Assembly | D57 | Windshield Wiper Switch Assembly |
| D42 | Shift Lock Release Button Cover | D58 | Windshield Wiper Switch Assembly |
| D43 | Junction Connector | D59 | Steering Lock Actuator Assembly |
| D44 | No. 1 Power Outlet Socket Assembly | D60 | Key Inter Lock Solenoid
(Ignition Switch Lock Cylinder Assembly) |
| D45 | Automatic Light Control Sensor | D61 | Turn Signal Flasher Assembly |
| D46 | Junction Connector | D62 | Driver's Knee Airbag Module |
| D47 | Junction Connector | D63 | Option Connector |
| D48 | Certification ECU Assembly | D64 | Trip Switch |
| D50 | Headlight Dimmer Switch Assembly | D66 | Front No. 2 Speaker Assembly LH |
| D51 | Roll Connector | D67 | No. 1 Cooler Thermistor |
| D52 | Roll Connector | D68 | Option Connector |
| D53 | Un-Lock Warning Switch Assembly
(Ignition Switch Lock Cylinder Assembly) | D69 | Alarm Control Unit |
| D54 | Transponder Key Amplifier | D70 | Alarm Control Unit |
| D55 | Ignition or Starter Switch Assembly | | |

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

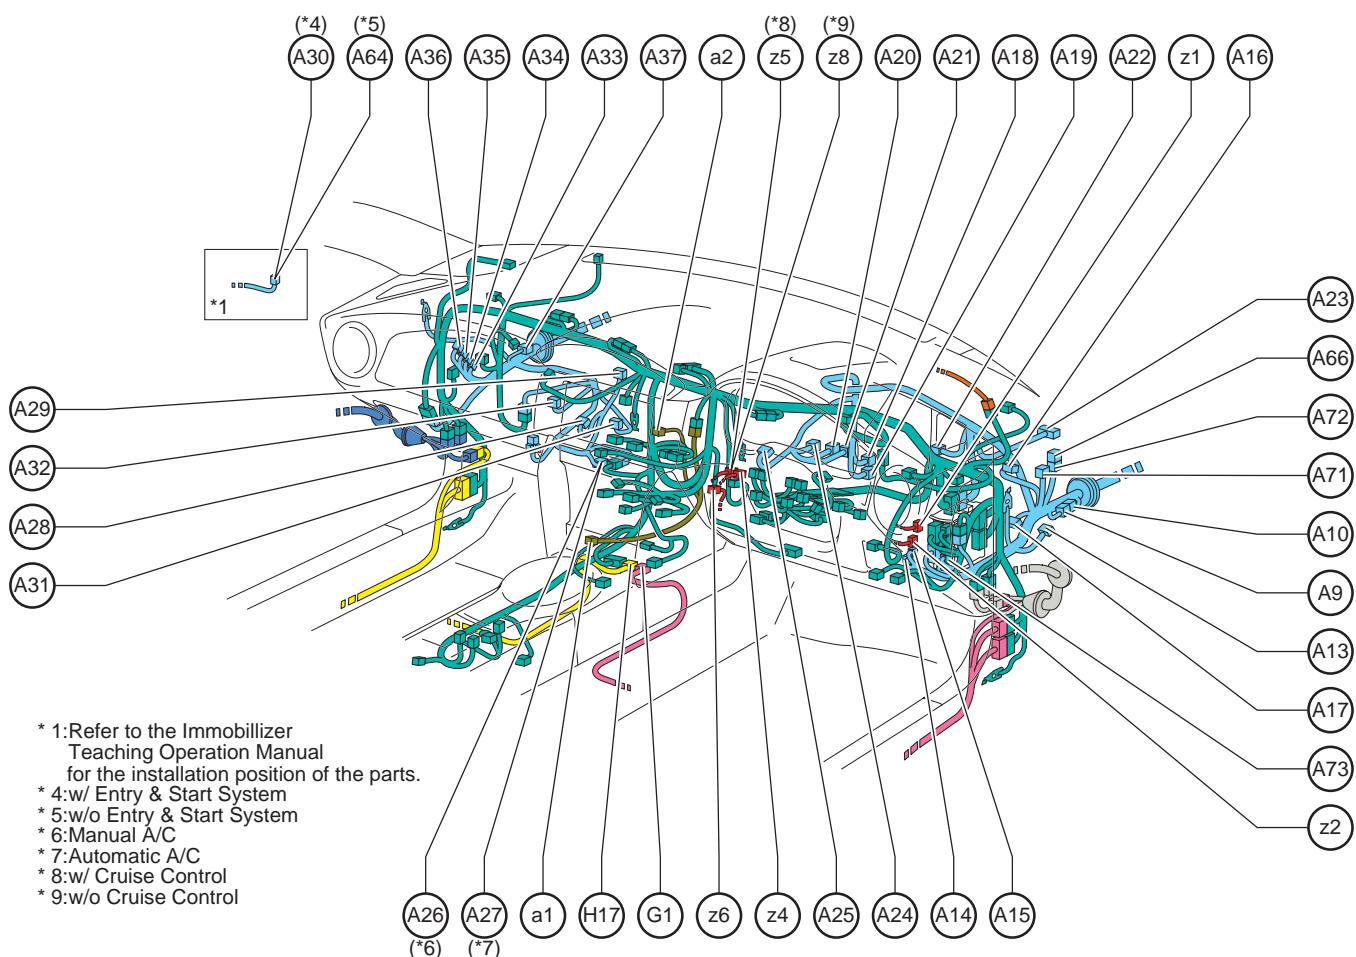


A9	Junction Connector
A10	Junction Connector
A13	Noise Filter
A14	Power Steering ECU Assembly
A15	Power Steering ECU Assembly
A16	Headlight Leveling ECU
A17	Junction Connector
A18	Transmission Control Module
A19	Transmission Control Module
A20	Clutch Start Switch Assembly
A21	Clutch Switch Assembly
A22	Stop Light Switch Assembly
A23	Accelerator Pedal Sensor Assembly
A24	No. 1 A/C Radiator Damper Servo Sub-Assembly
A25	Cooler Thermistor (Room Temperature Sensor)
A26	Blower Resistor
A27	Blower Assembly
A28	No. 3 A/C Radiator Damper Servo Sub-Assembly
A29	No. 4 A/C Radiator Damper Servo Sub-Assembly
A30	ID Code Box
A31	Blower with Fan Motor Sub-Assembly
A32	No. 5 A/C Radiator Damper Servo Sub-Assembly
A33	ECM
A34	ECM
A35	ECM
A36	ECM
A37	Junction Connector

A64	Transponder Key ECU Assembly
A66	Short Connector
A71	Alarm Kit
A72	Short Connector
A73	Main Body ECU
G1	Airbag Control Module
H17	Airbag Control Module
a1	No. 1 Stereo Jack Adapter Assembly
a2	Radio Receiver Assembly
z1	Power Steering ECU Assembly
z2	Steering Column Assembly
z2	Power Steering ECU Assembly
z2	Steering Column Assembly
z4	Roll Connector
z4	Paddle Shift Switch
z5	Roll Connector
z5	Cruise Control Main Switch
z6	Roll Connector
z6	Driver's Airbag Module
z8	Roll Connector
z8	Horn Button Assembly

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD]

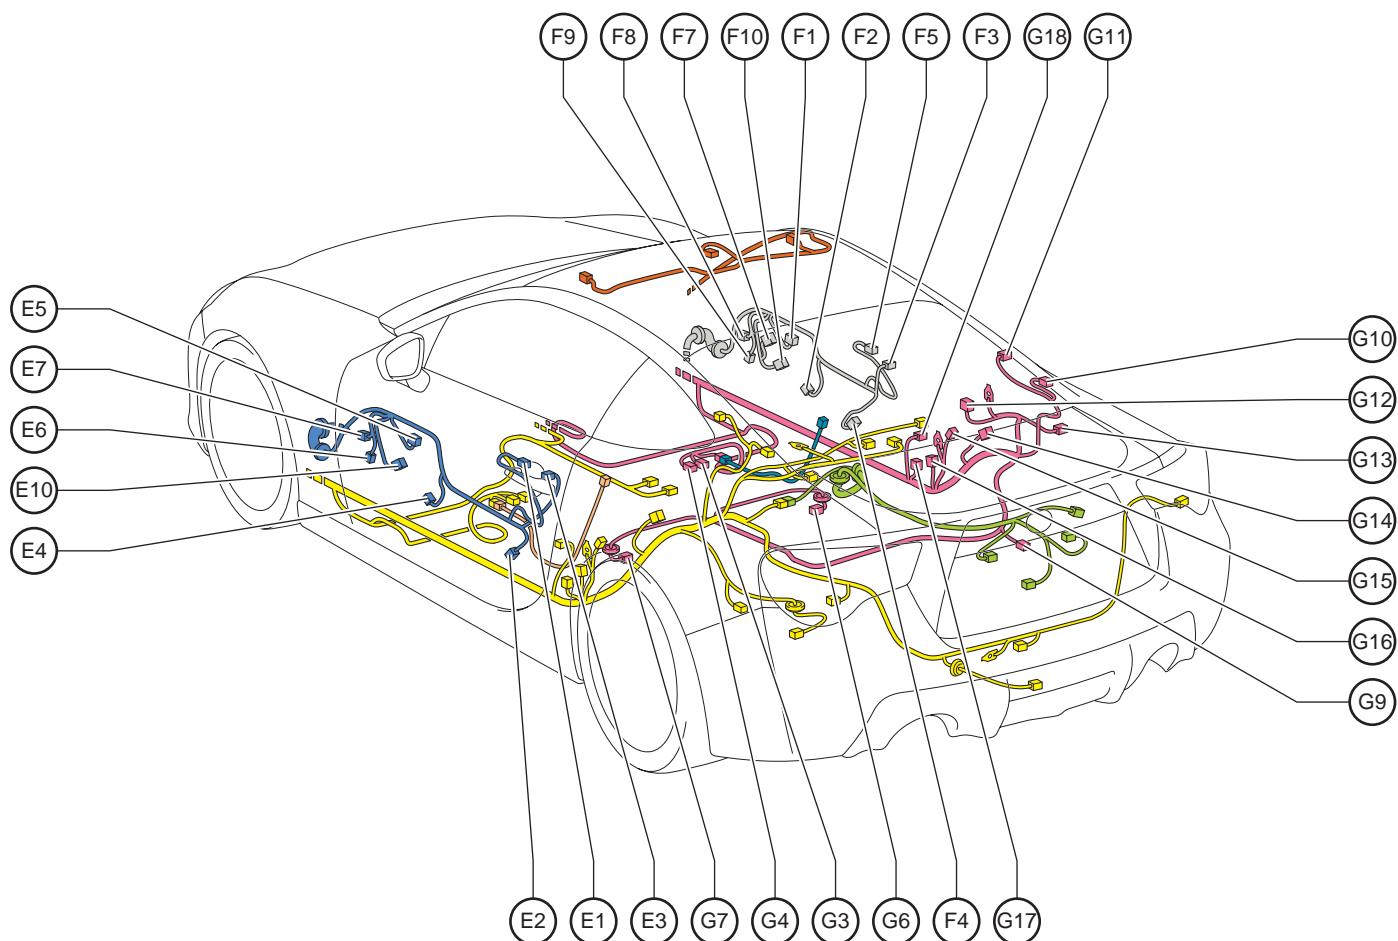


- | | |
|-----|--|
| E1 | Electrical Key Antenna LH
(Front Door Outside Handle Assembly LH) |
| E2 | Front Courtesy Light Assembly LH |
| E3 | Door Lock with Motor Assembly LH |
| E4 | Front Door Impact Sensor LH |
| E5 | Power Window Regulator Motor Assembly LH |
| E6 | Front No. 1 Speaker Assembly LH |
| E7 | Outer Rear View Mirror Assembly LH |
| E10 | Power Window Regulator Switch Assembly |
| F1 | Power Window Regulator Motor Assembly RH |
| F2 | Front Door Impact Sensor RH |
| F3 | Door Lock with Motor Assembly RH |
| F4 | Front Courtesy Light Assembly RH |
| F5 | Electrical Key Antenna RH
(Front Door Outside Handle Assembly RH) |
| F7 | Outer Mirror Switch Assembly |
| F8 | Outer Rear View Mirror Assembly RH |
| F9 | Front No. 1 Speaker Assembly RH |
| F10 | Power Window Regulator Master Switch Assembly |

- | | |
|-----|--|
| G3 | Front Seat Inner Belt Assembly RH |
| G4 | Seat Heater RH |
| G6 | No. 2 Fuel Sender Gage Assembly |
| G7 | Fuel Sender Gage Assembly |
| G9 | Rear Speed Sensor RH |
| G10 | Rear Window Defogger (Back Window Glass) |
| G11 | Curtain Airbag Module RH |
| G12 | Fuel Pump Control ECU Assembly |
| G13 | Alarm Kit |
| G14 | Curtain Airbag Sensor RH |
| G15 | Rear Speaker Assembly RH |
| G16 | Side Airbag Sensor RH |
| G17 | Pretensioner RH |
| G18 | Front Door Courtesy Light Switch Assembly RH |

Position of Parts in Body

[RHD]

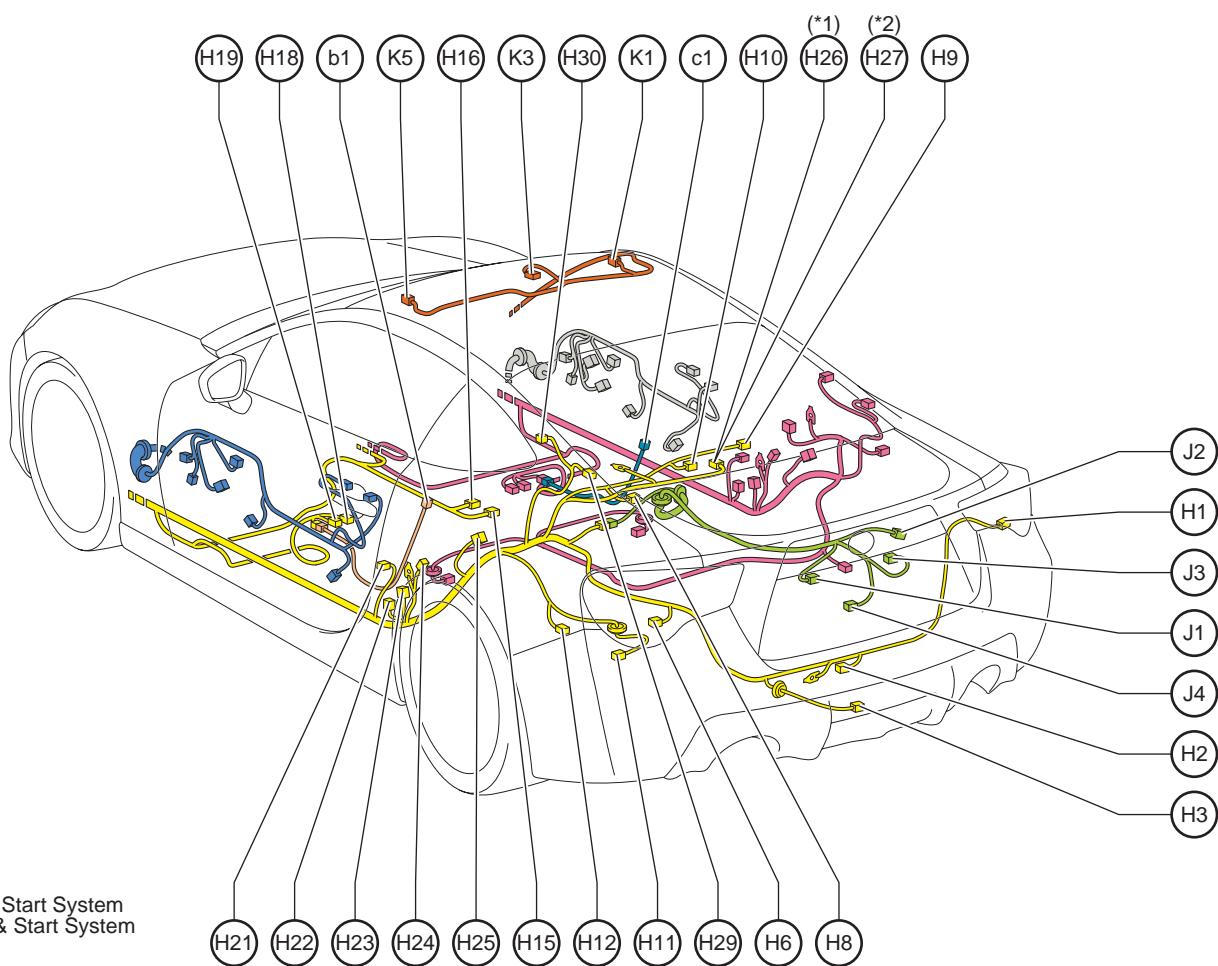

H1 Rear Combination Light Lens and Body RH
 H2 Rear Fog Light Assembly
 (Back-Up Light Lens and Body)
 H3 Rear Electrical Key Antenna
 H6 Rear Combination Light Lens and Body LH
 H8 No. 1 Luggage Compartment Light Assembly
 H9 No. 2 Indoor Electrical Key Oscillator Assembly
 H10 Center Stop Light Assembly
 H11 Rear Height Control Sensor Sub-Assembly LH
 H12 Rear Speed Sensor LH
 H15 No. 3 Indoor Electrical Key Oscillator Assembly
 H16 Satellite Safing Sensor
 H18 Seat Heater LH
 H19 Front Seat Inner Belt Assembly LH
 H21 Front Door Courtesy Light Switch Assembly LH
 H22 Pretensioner LH
 H23 Side Airbag Sensor LH
 H24 Rear Speaker Assembly LH
 H25 Curtain Airbag Sensor LH
 H26 Door Control Receiver
 H27 Door Control Receiver
 H29 Rear Window Defogger (Back Window Glass)
 H30 Curtain Airbag Module LH


J1 License Plate Light Lens LH
 J2 Back Door Opener Switch Assembly
 J3 Luggage Compartment Door Striker Assembly
 J4 License Plate Light Lens RH
 K1 Vanity Light Assembly RH (Visor Assembly RH)
 K3 Map Light Assembly
 K5 Vanity Light Assembly LH (Visor Assembly LH)
 b1 Side Airbag Module LH
 c1 Side Airbag Module RH

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[LHD]

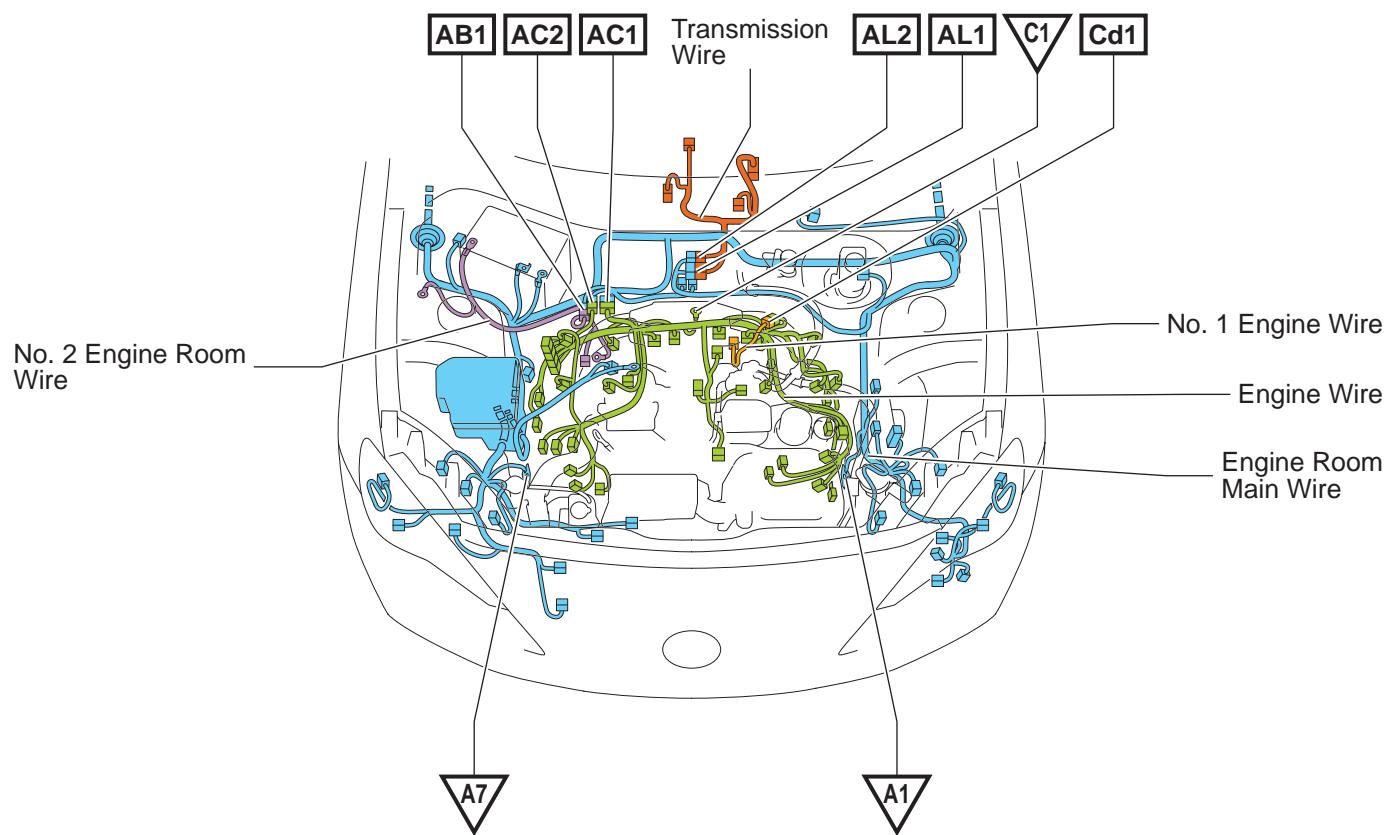

: Location of Connector Joining Wire Harness and Wire Harness
[LHD]

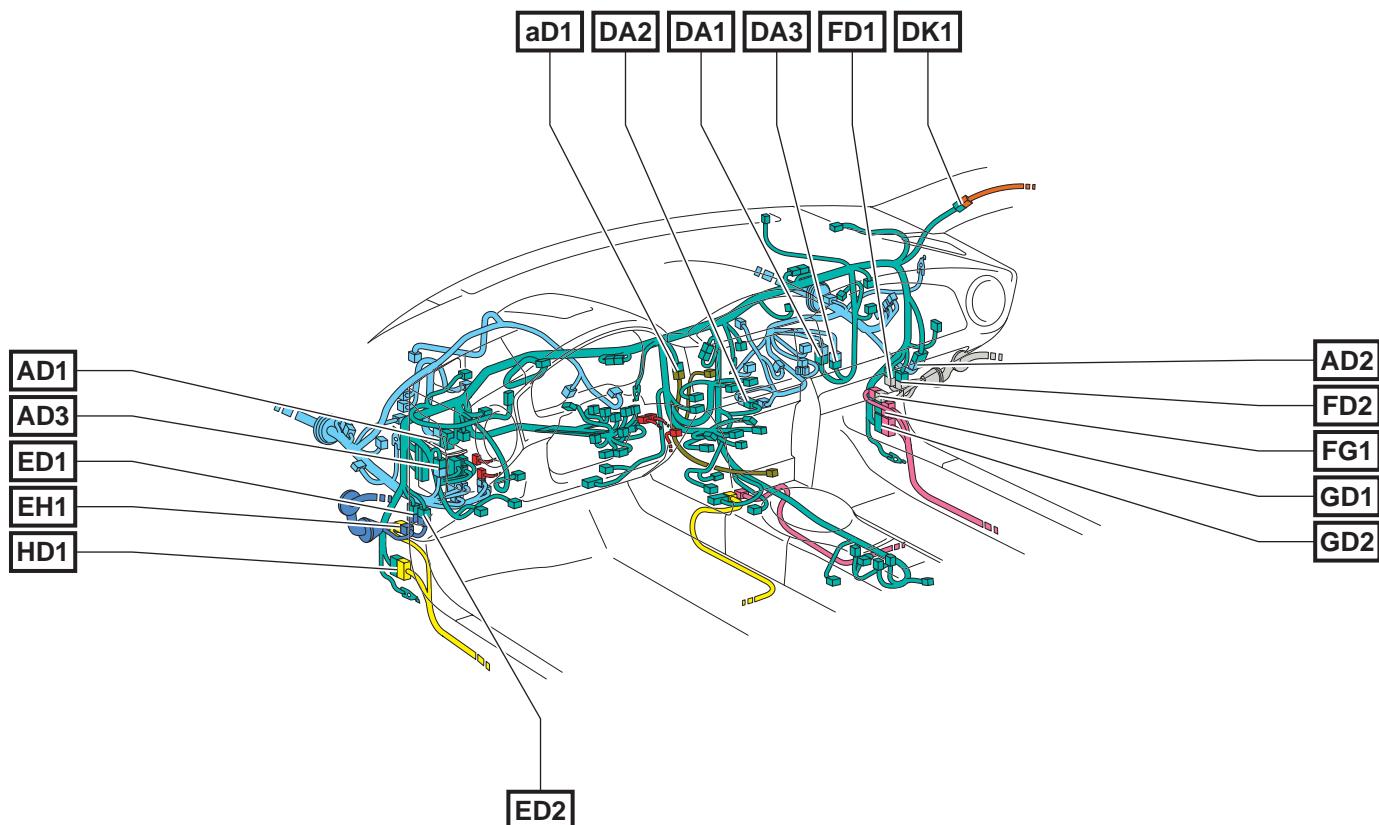

: Location of Ground Points

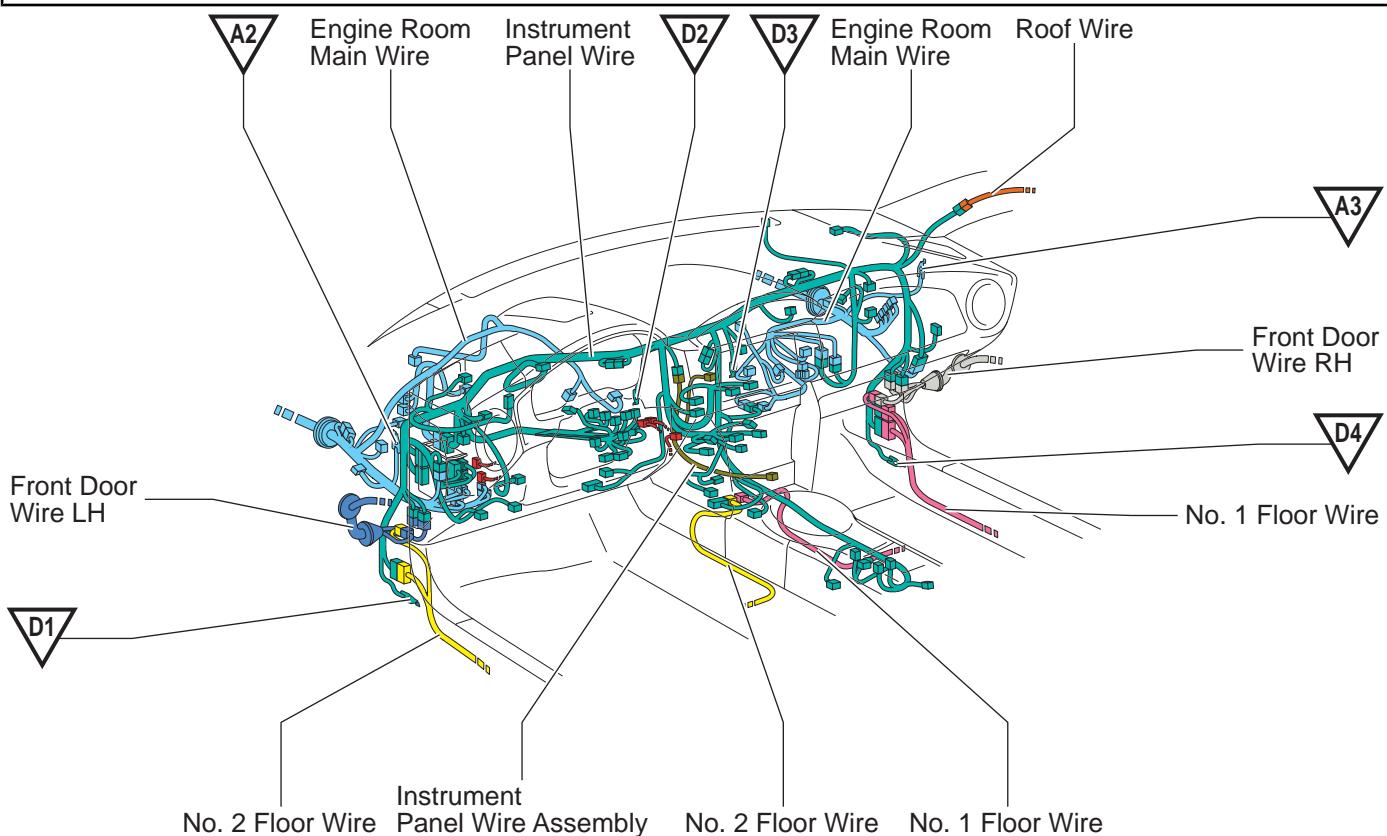


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD]

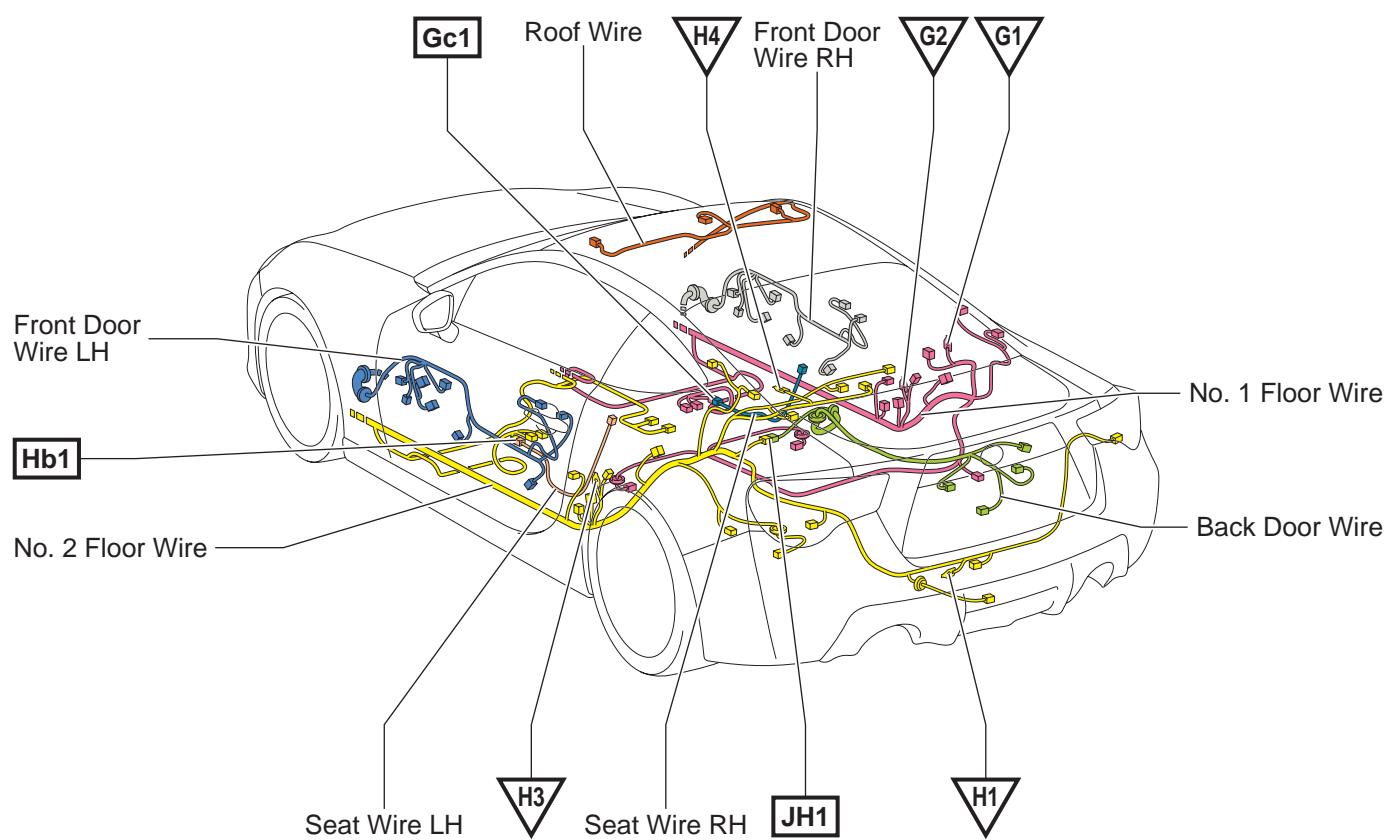


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[RHD]

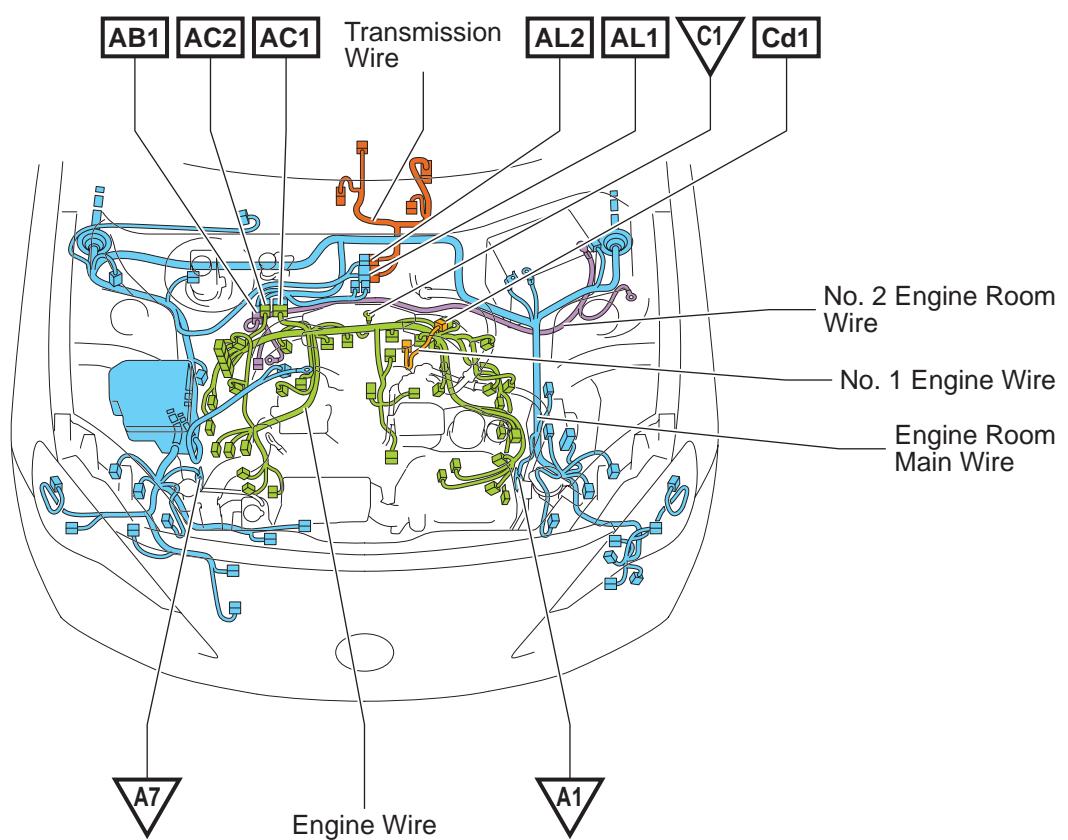

: Location of Connector Joining Wire Harness and Wire Harness
[RHD]

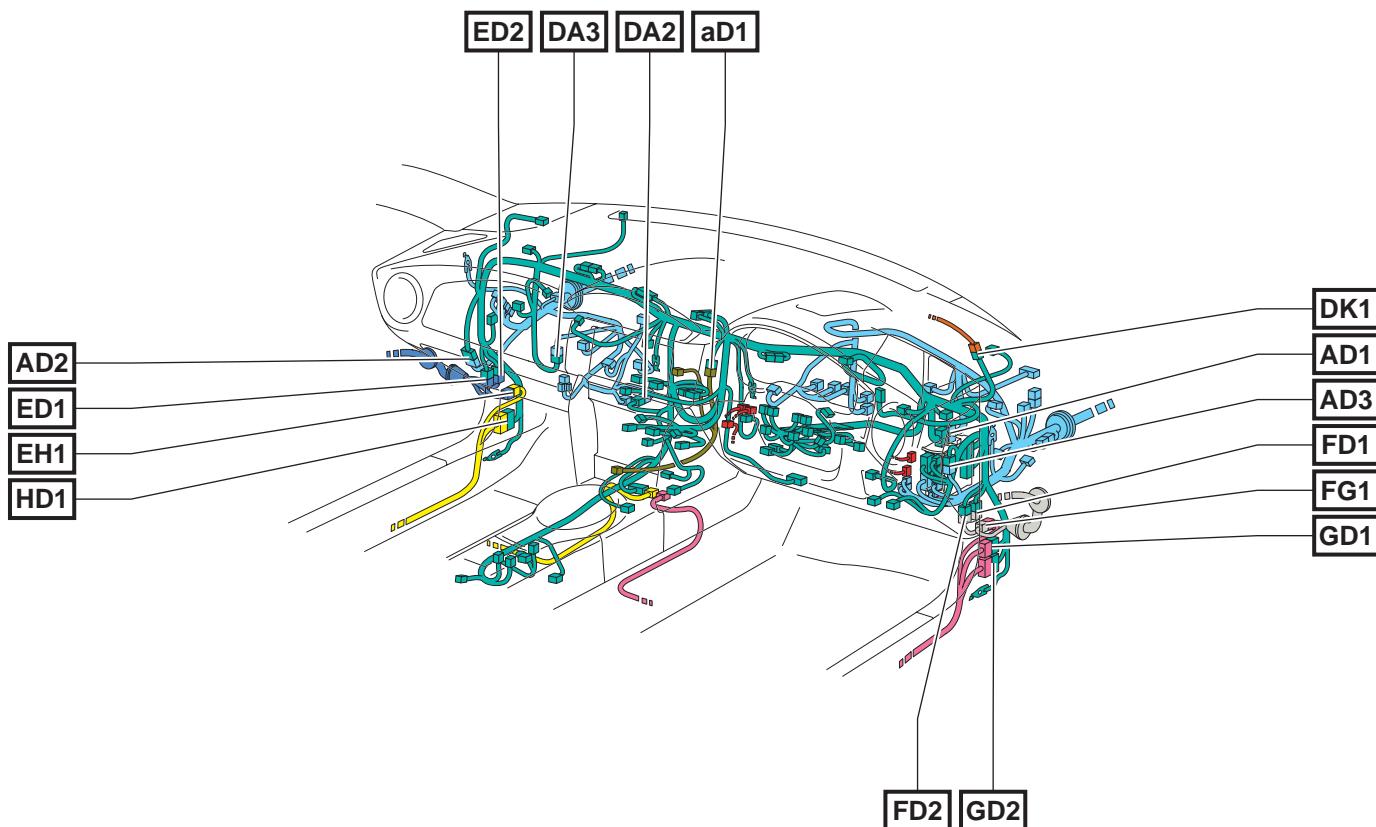

: Location of Ground Points

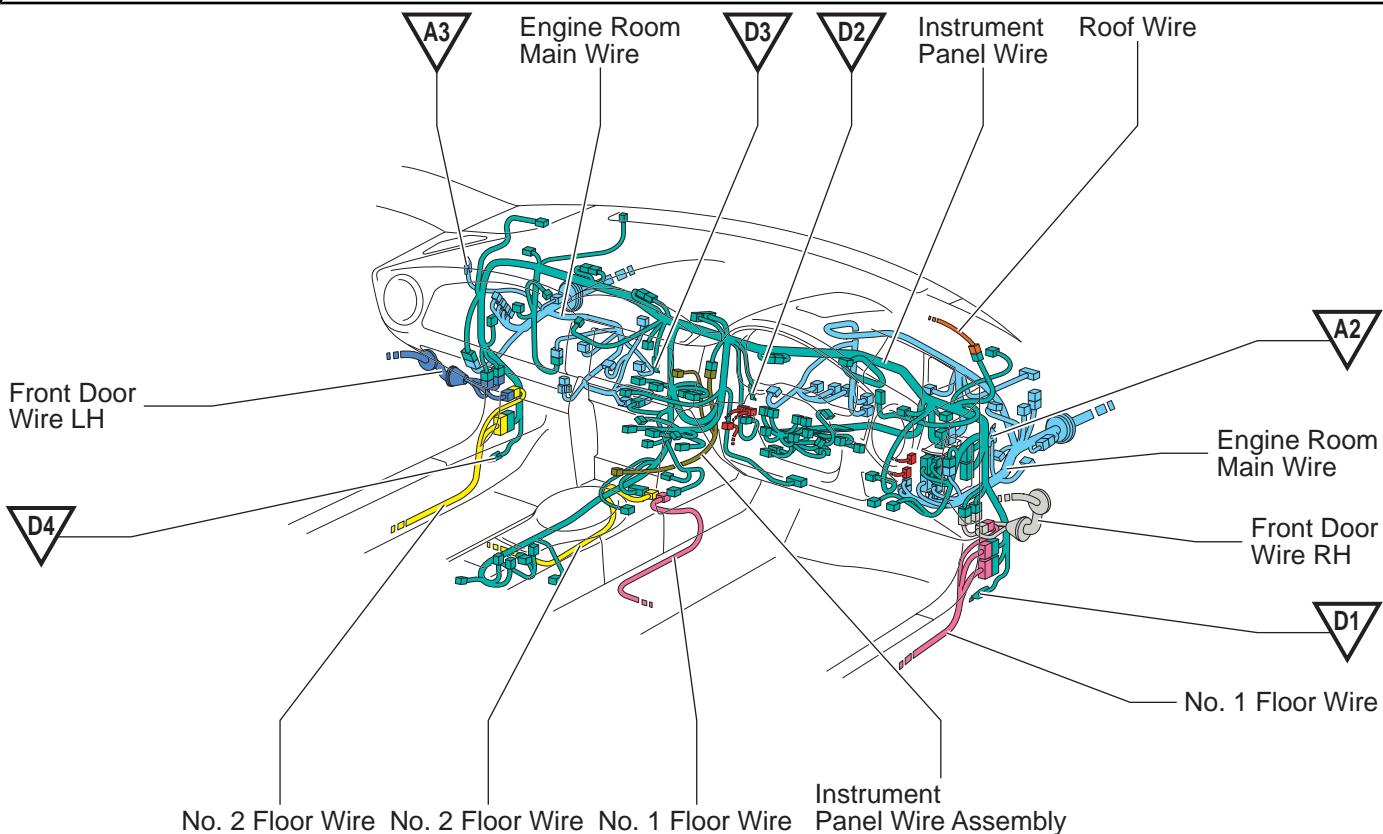



G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD]

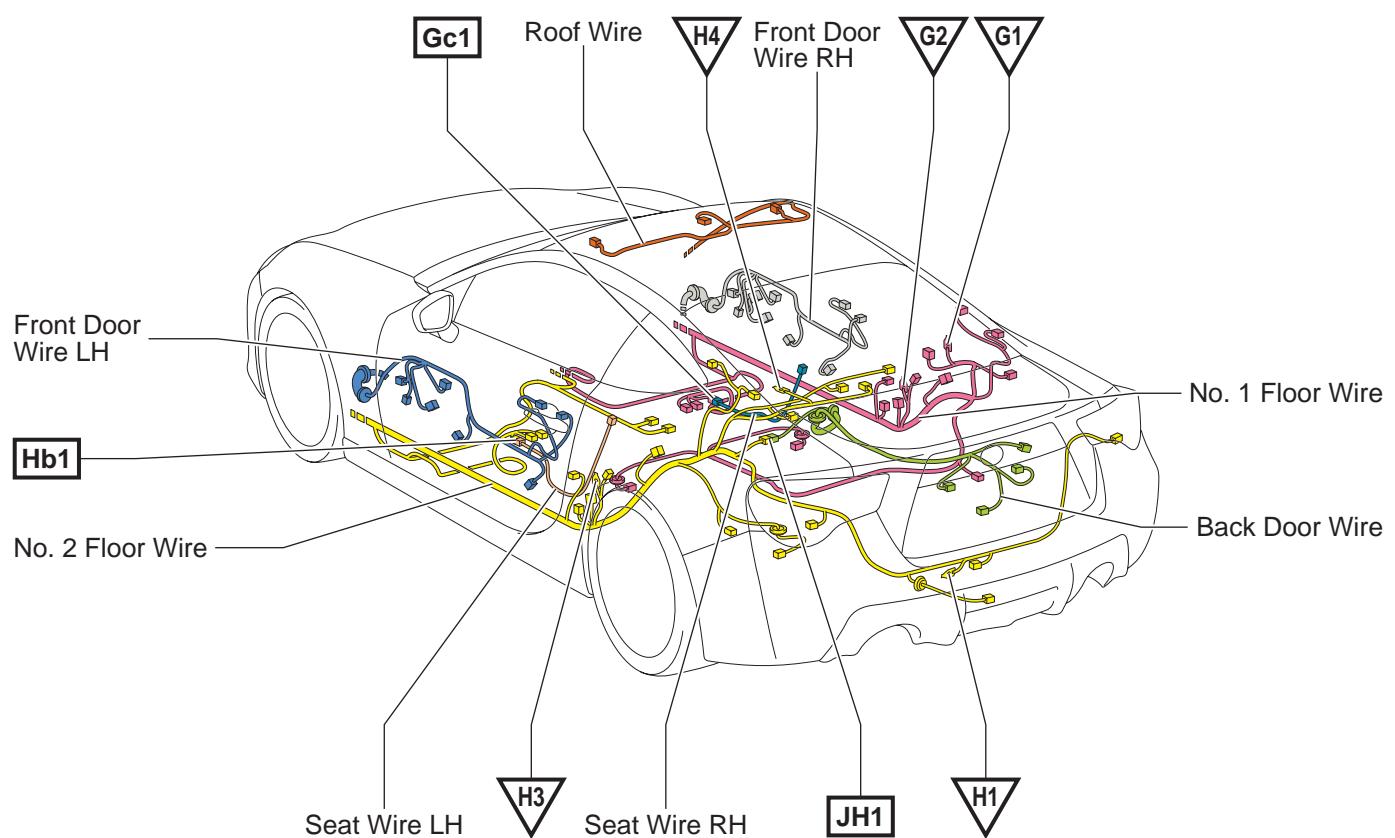

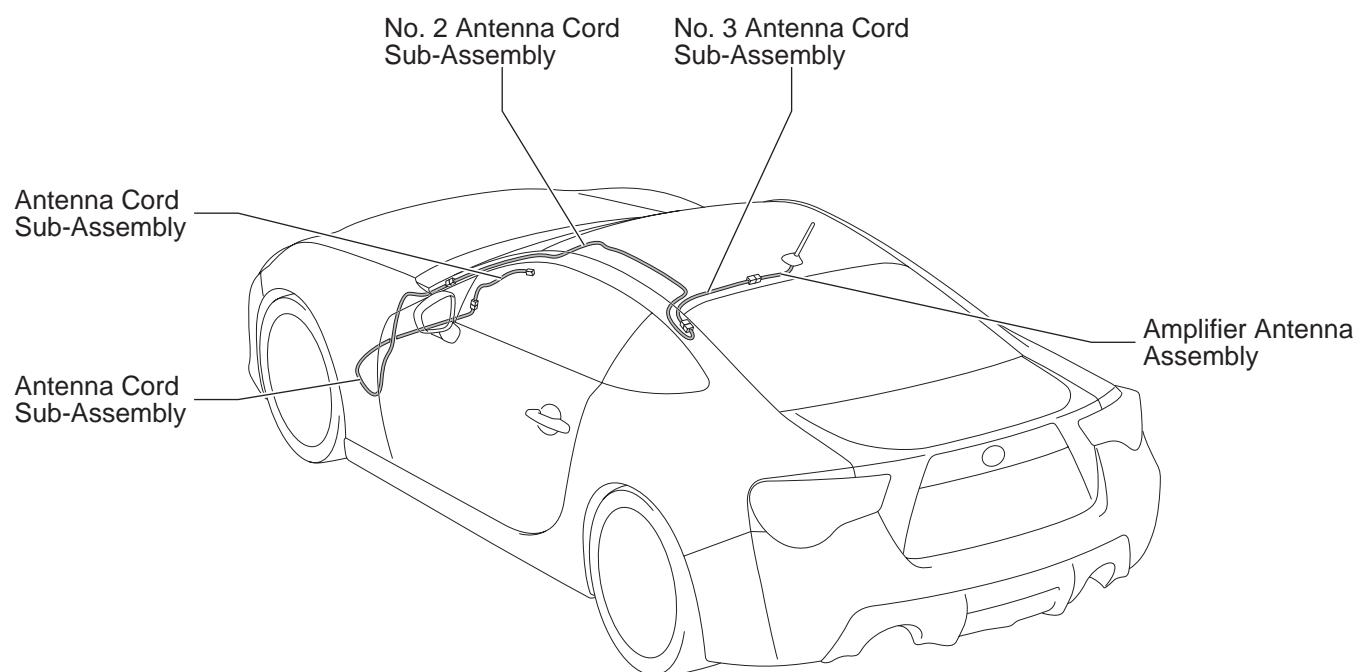
[Antenna]


**BRZ
ELECTRICAL WIRING DIAGRAM
SYSTEM CIRCUITS**

	Page
ABS	250
Air Conditioner (LHD Automatic A/C)	380
Air Conditioner (Manual A/C)	404
Air Conditioner (RHD Automatic A/C)	392
Alarm Control System	420
Audio System	356
Automatic Light Control	224
Back-Up Light	180
Charging	106
Clock	286
Combination Meter	362
Cooling Fan	376
Cruise Control	114
DLC3	158
Door Lock Control	300
Double Locking	324
ECT and A/T Indicator (A/T)	114
Engine Control	114
Engine Immobiliser System (w/ Entry & Start System)	72
Engine Immobiliser System (w/o Entry & Start System)	152
Entry & Start System	72
EPS	274
Front Fog Light	210
Front Wiper and Washer	332
Headlight	166
Headlight Beam Level Control	230
Headlight Cleaner	238
Horn	352
Ignition	110
Illumination	188
Interior Light	200
Key Reminder (w/o Entry & Start System)	244
Light Auto Turn Off System	224
Light Reminder	244
Luggage Compartment Door Opener	314
Mirror Heater	344
Multiplex Communication System (CAN)	162
Option Connector	416
Power Outlet	354
Power Source	64
Power Window (LHD)	288
Power Window (RHD)	294


	Page
Rear Fog Light	218
Rear Window Defogger	344
Remote Control Mirror (LHD)	336
Remote Control Mirror (RHD)	340
Seat Belt Warning	282
Seat Heater	350
Shift Indicator (M/T)	114
Shift Lock	114
SRS	265
Starting (w/ Entry & Start System)	72
Starting (w/o Entry & Start System)	102
Steering Lock (w/ Entry & Start System)	72
Stop Light	176
Taillight	188
TRC	250
Turn Signal and Hazard Warning Light	182
VSC	250
Wireless Door Lock Control (w/ Entry & Start System)	72
Wireless Door Lock Control (w/o Entry & Start System)	306


Power Source

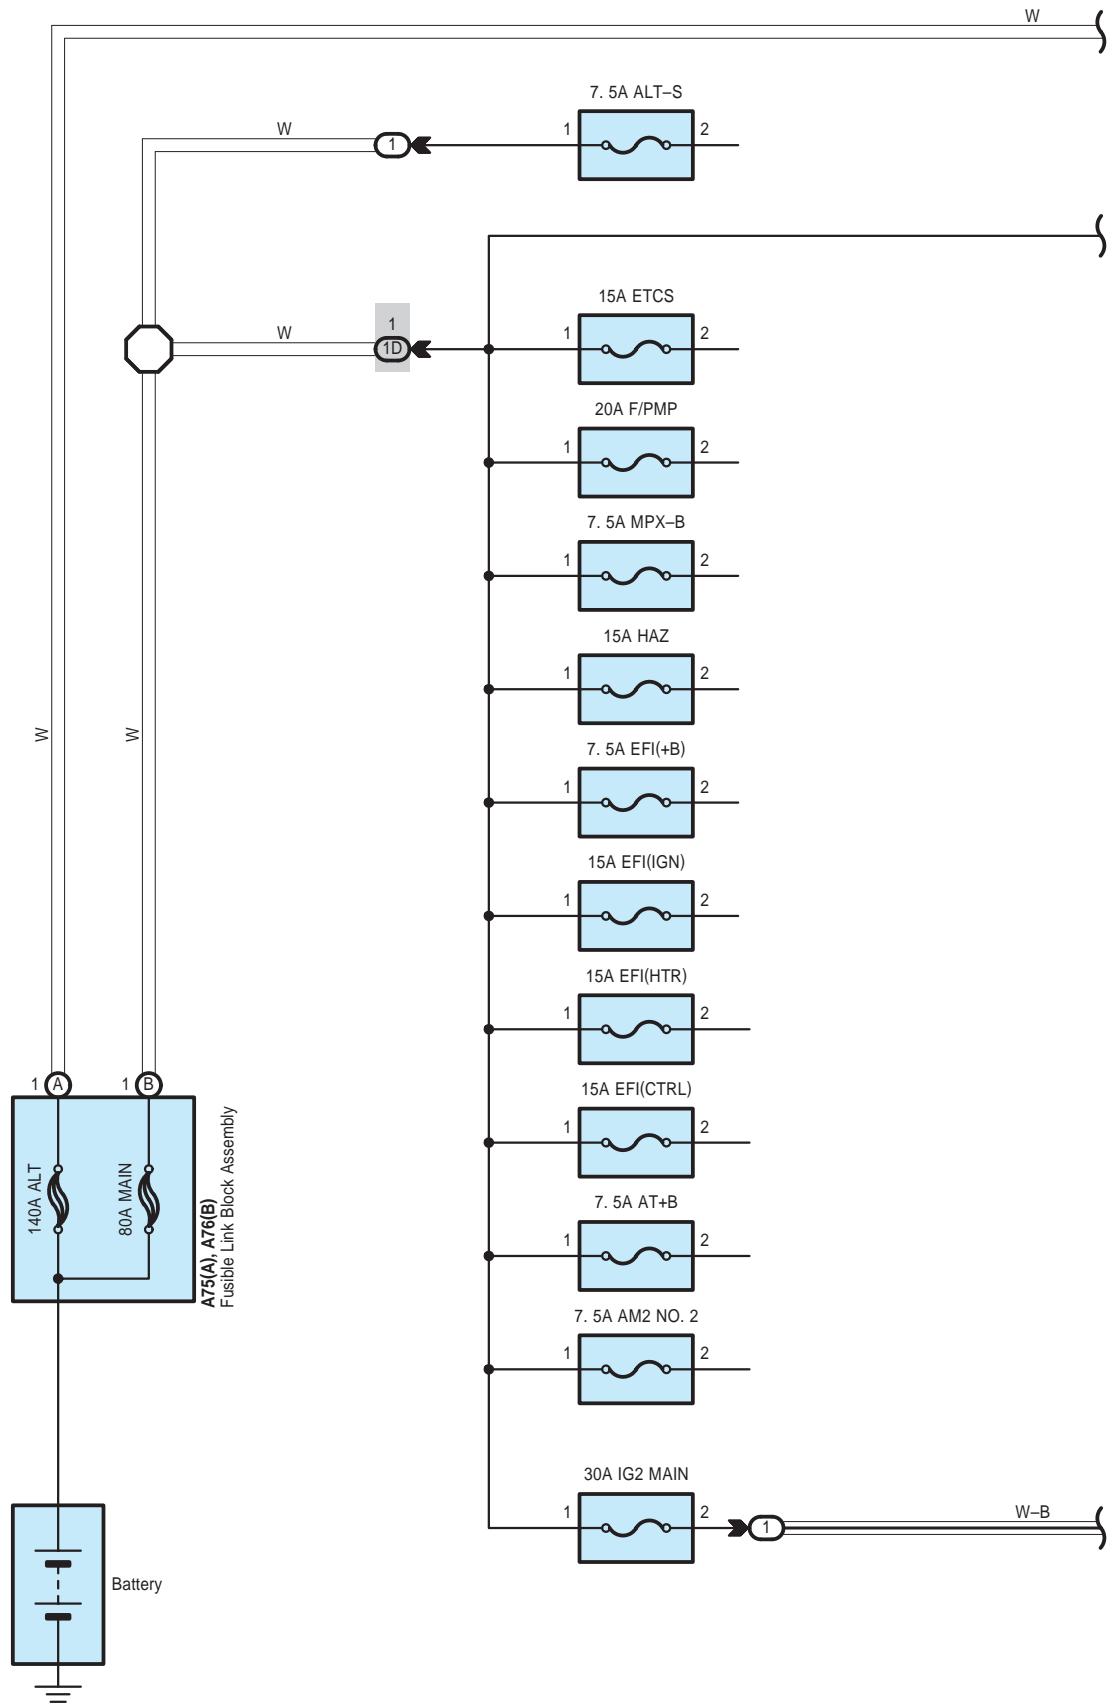

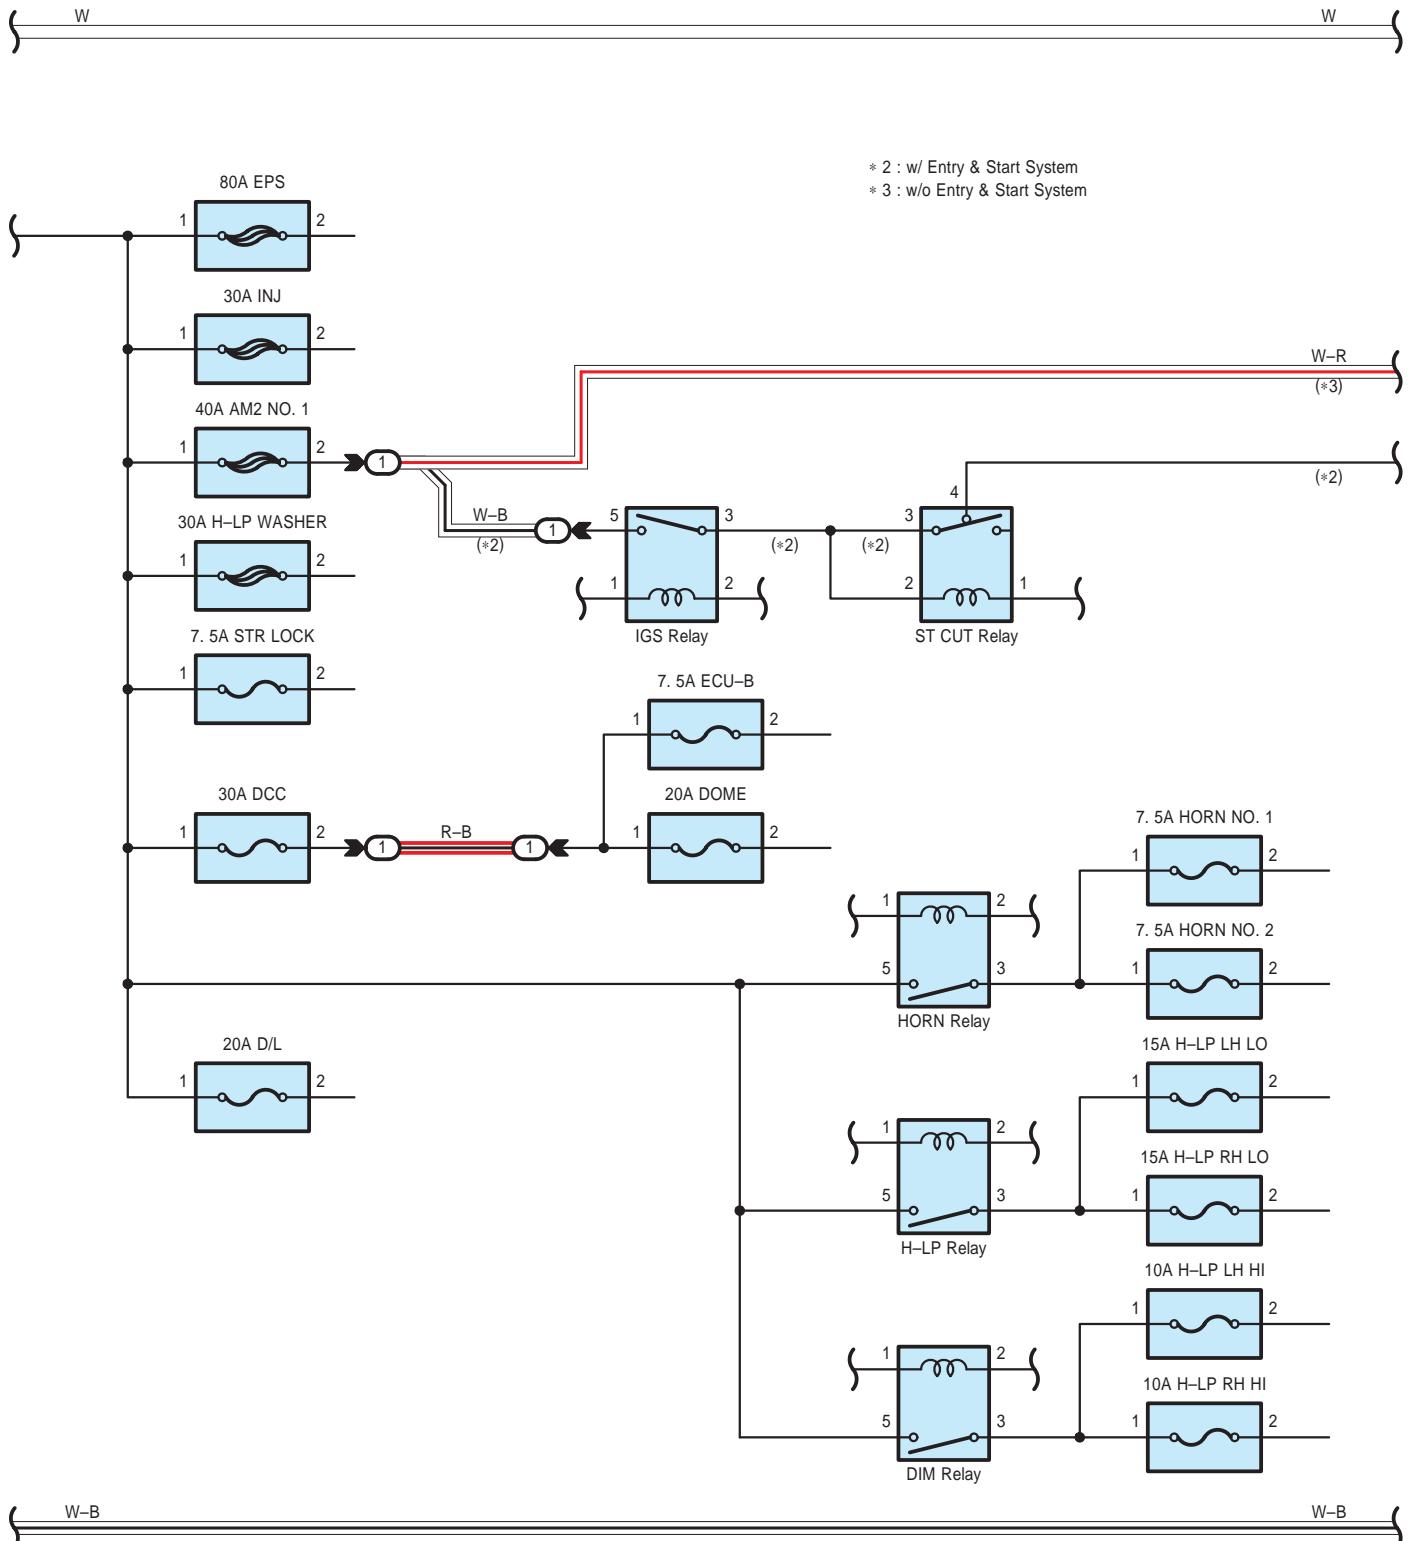



Power Source

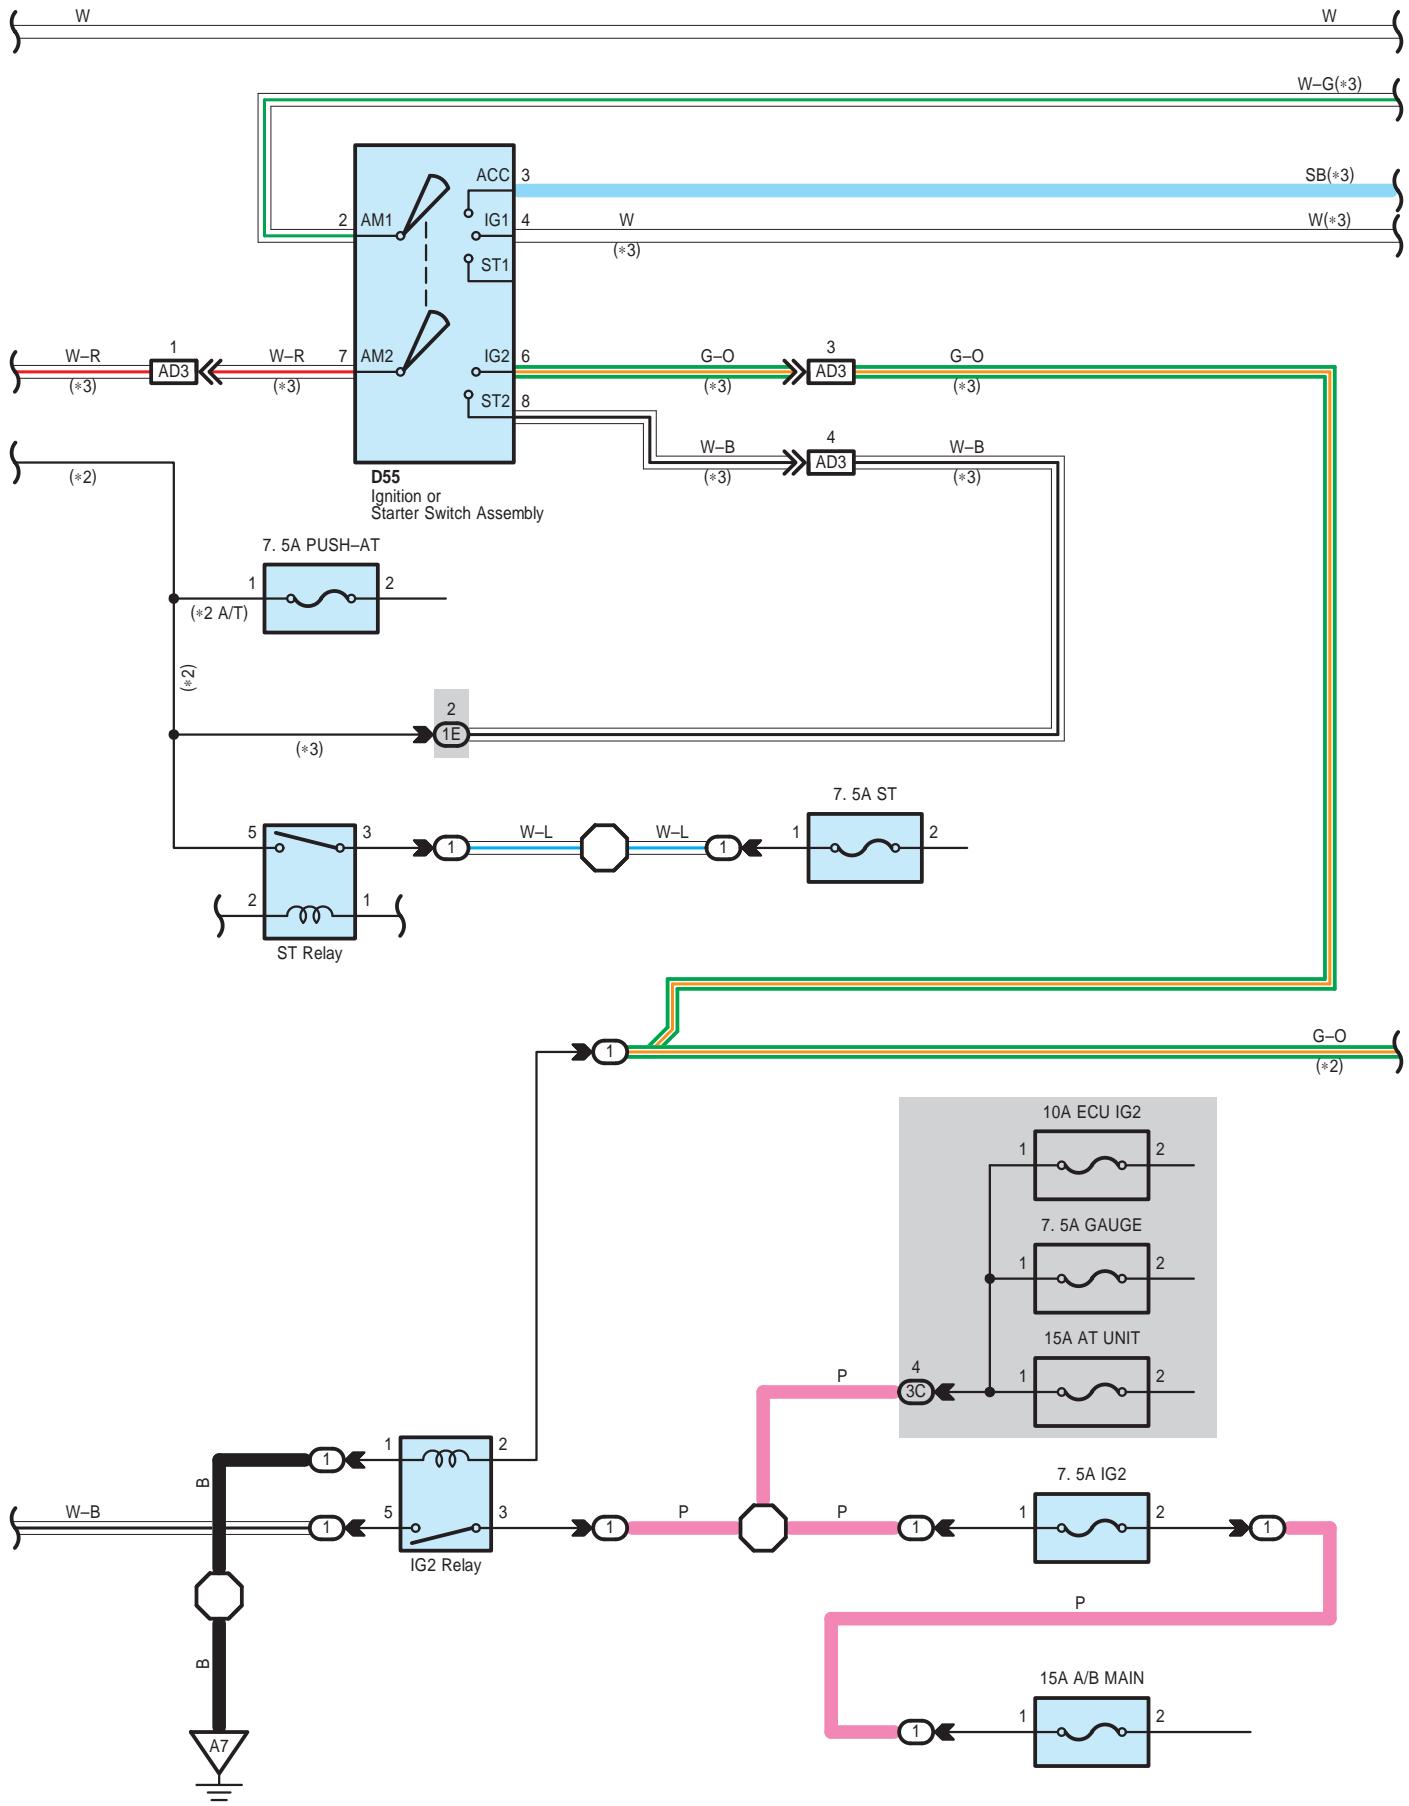

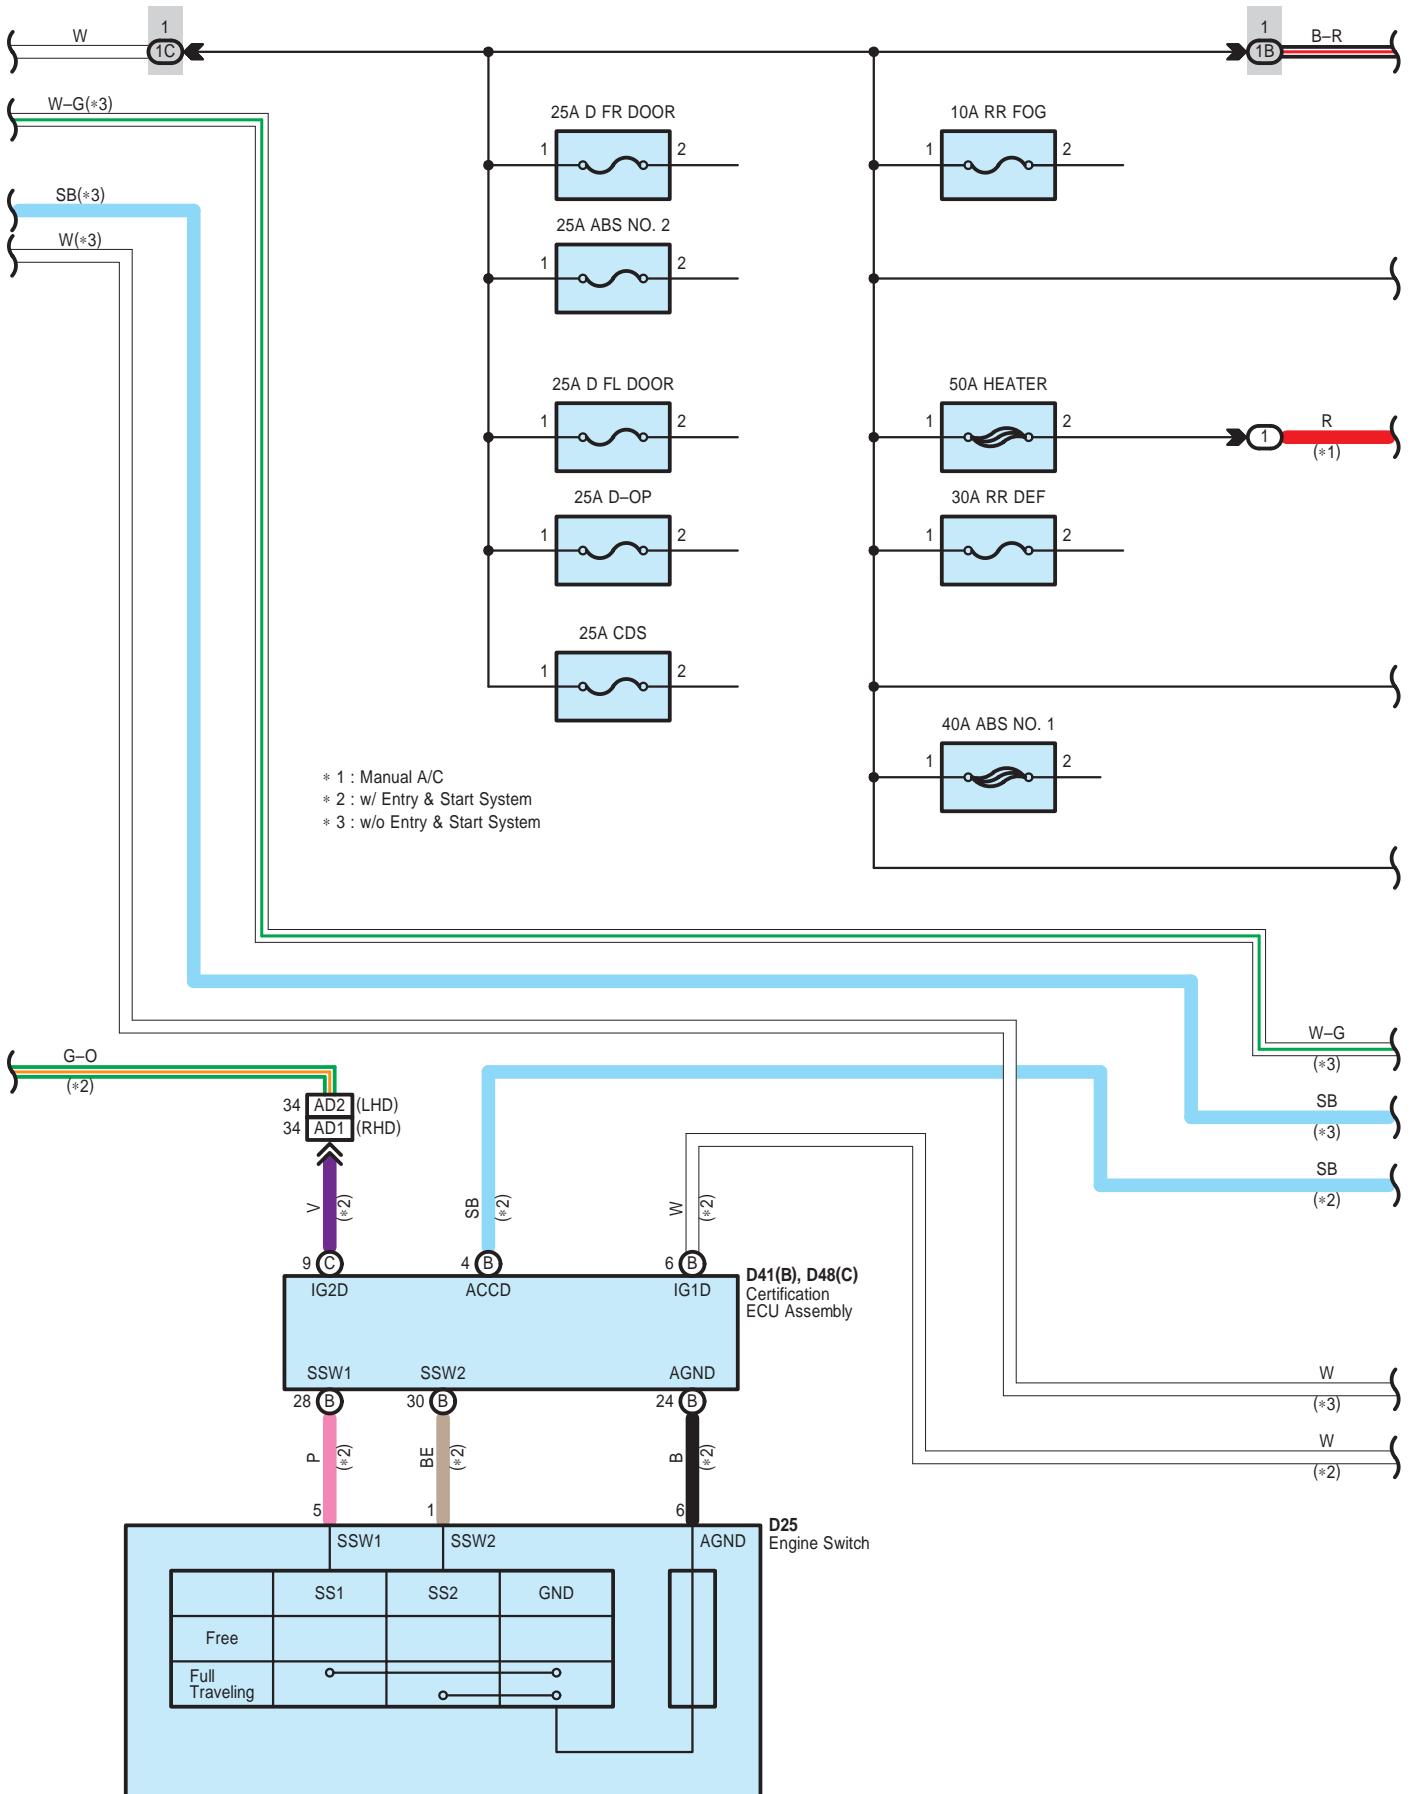


Power Source

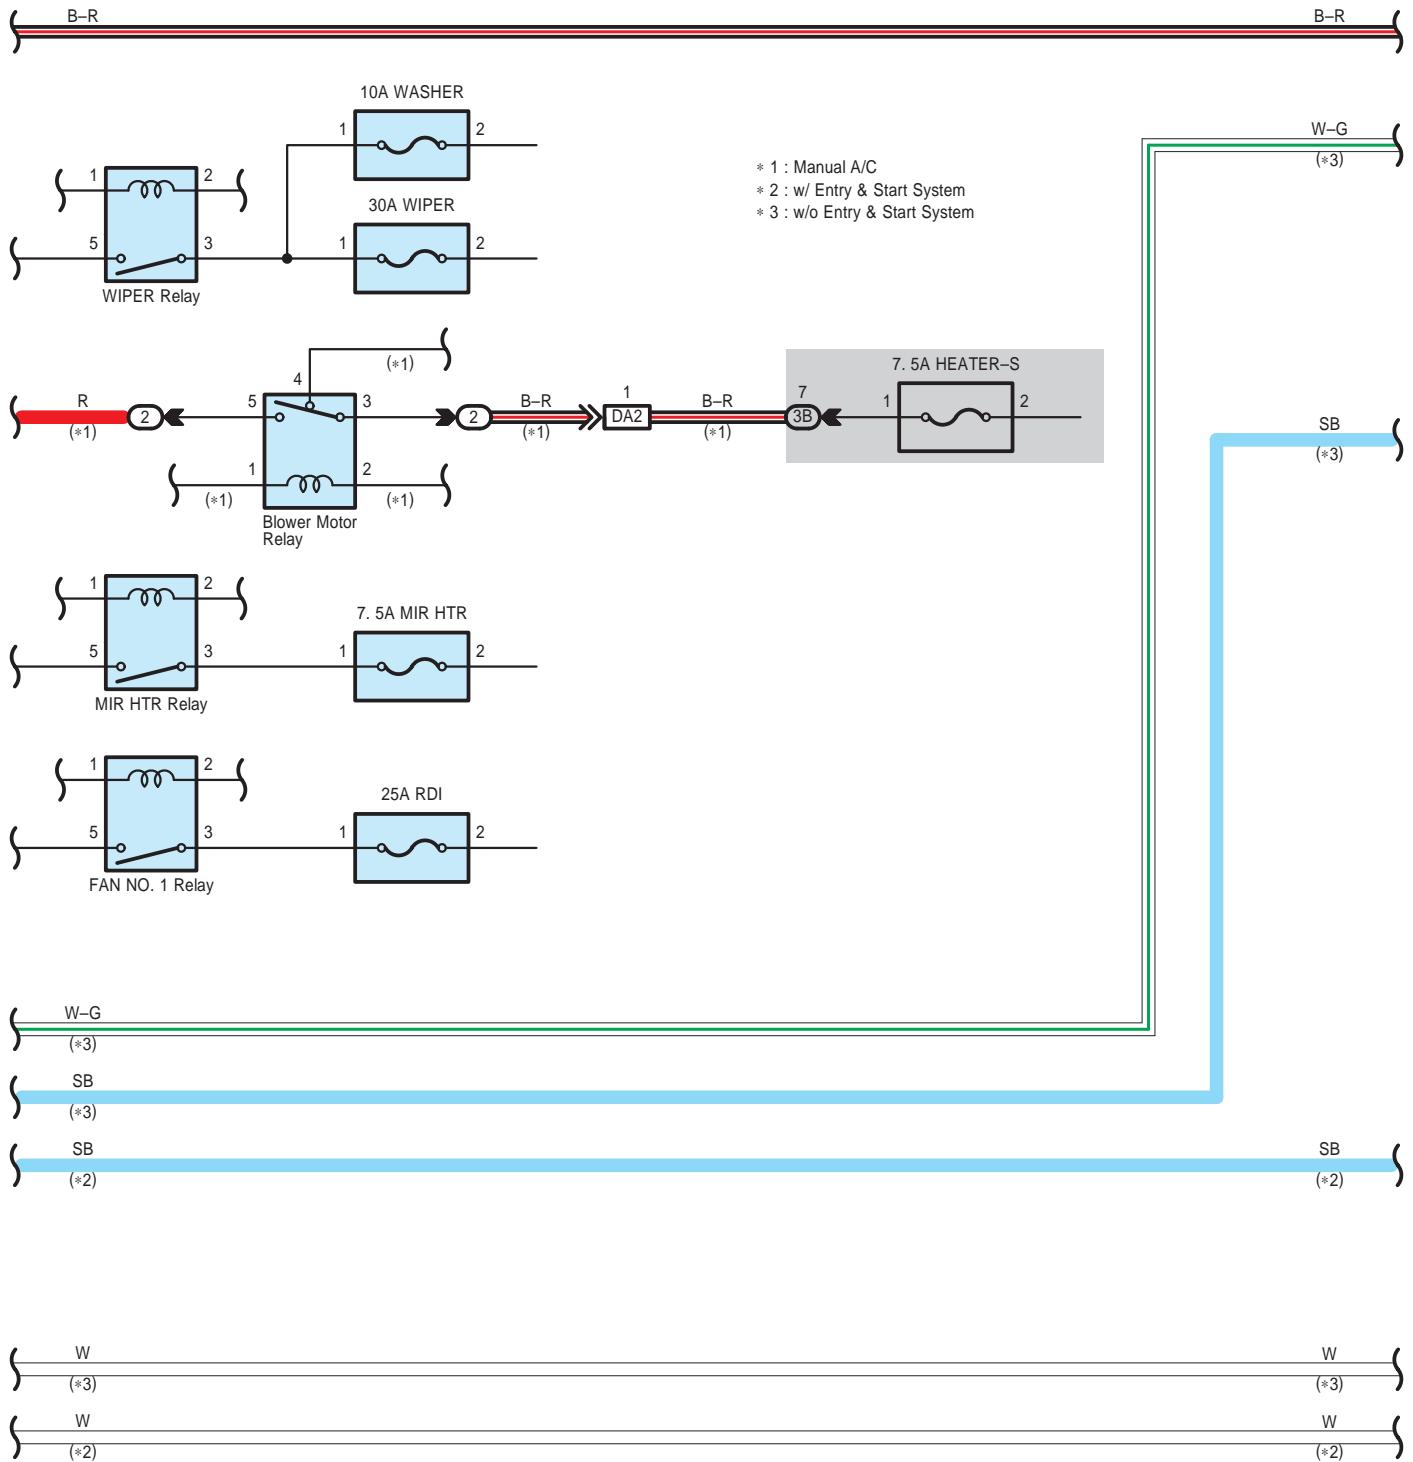

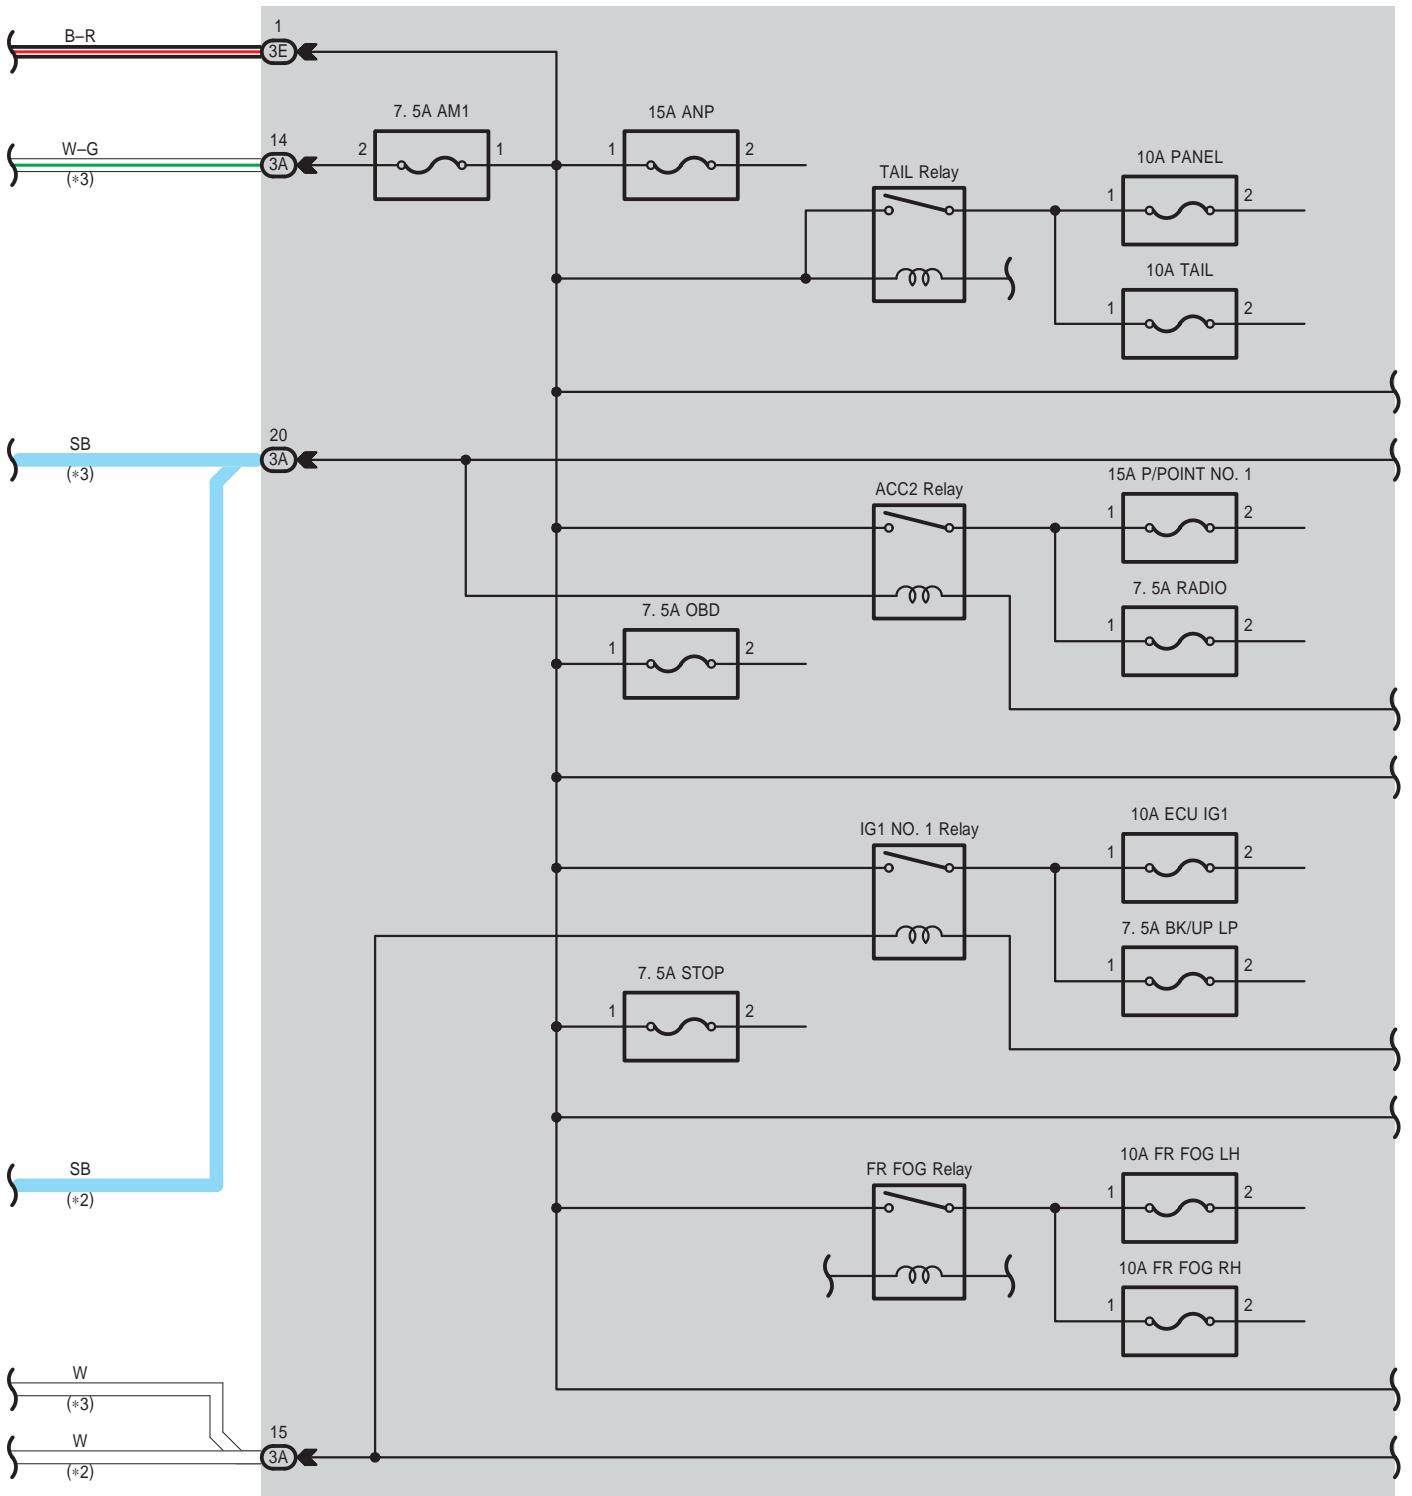

Power Source

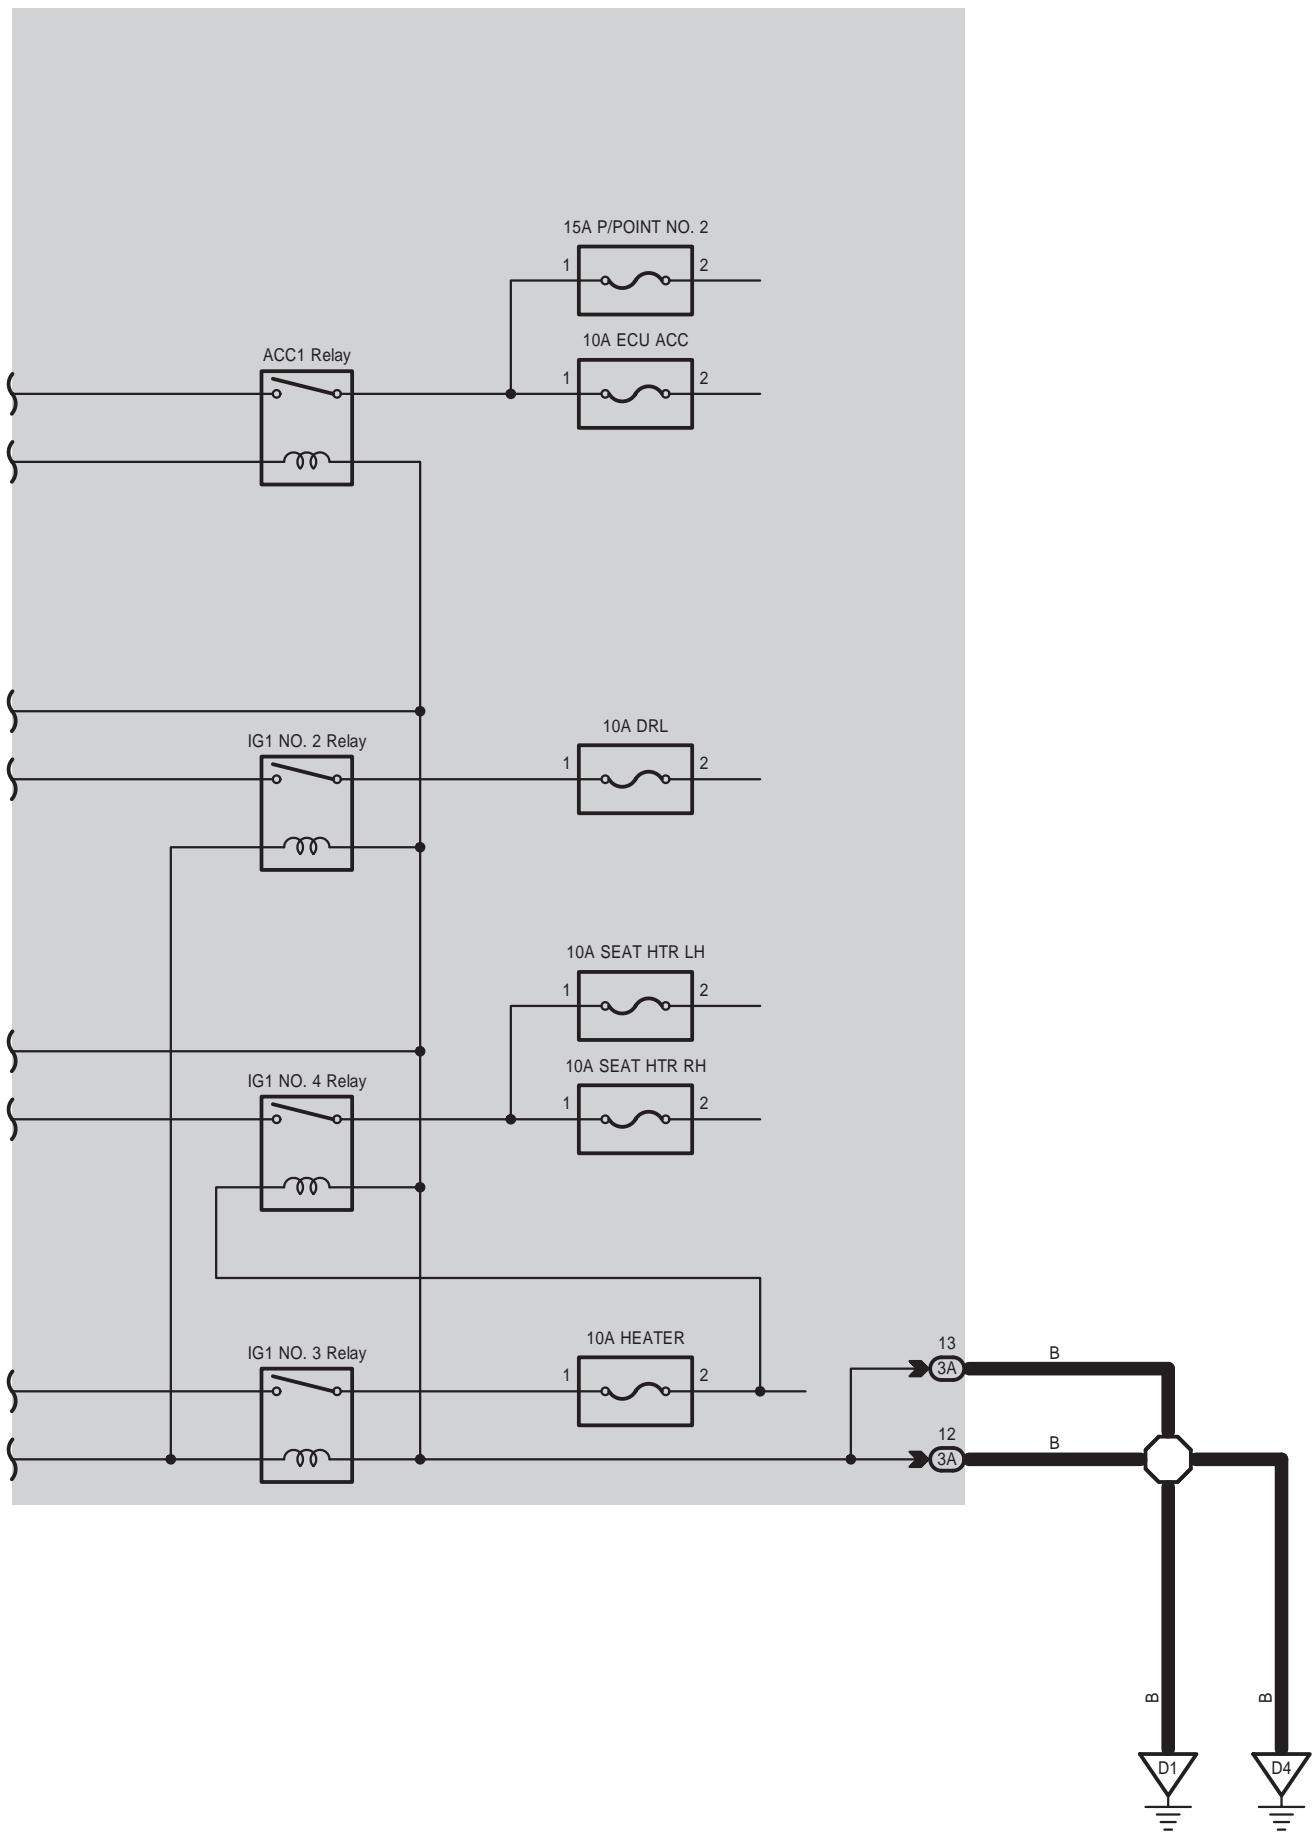

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A75	A	39 (LHD)		D25	40 (LHD)	D48	C	41 (LHD)
		47 (RHD)			48 (RHD)			49 (RHD)
A76	B	39 (LHD)	D41	B	41 (LHD)	D55		41 (LHD)
		47 (RHD)			49 (RHD)			49 (RHD)

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)
2	25	R/B No. 2 (Behind Glove Box)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
1C		
1D		
1E		
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B		
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3E		


 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
AD3	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
DA2	55 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Around A/C Unit)
	59 (RHD)	

 : Ground Points


Code	See Page	Ground Points Location
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

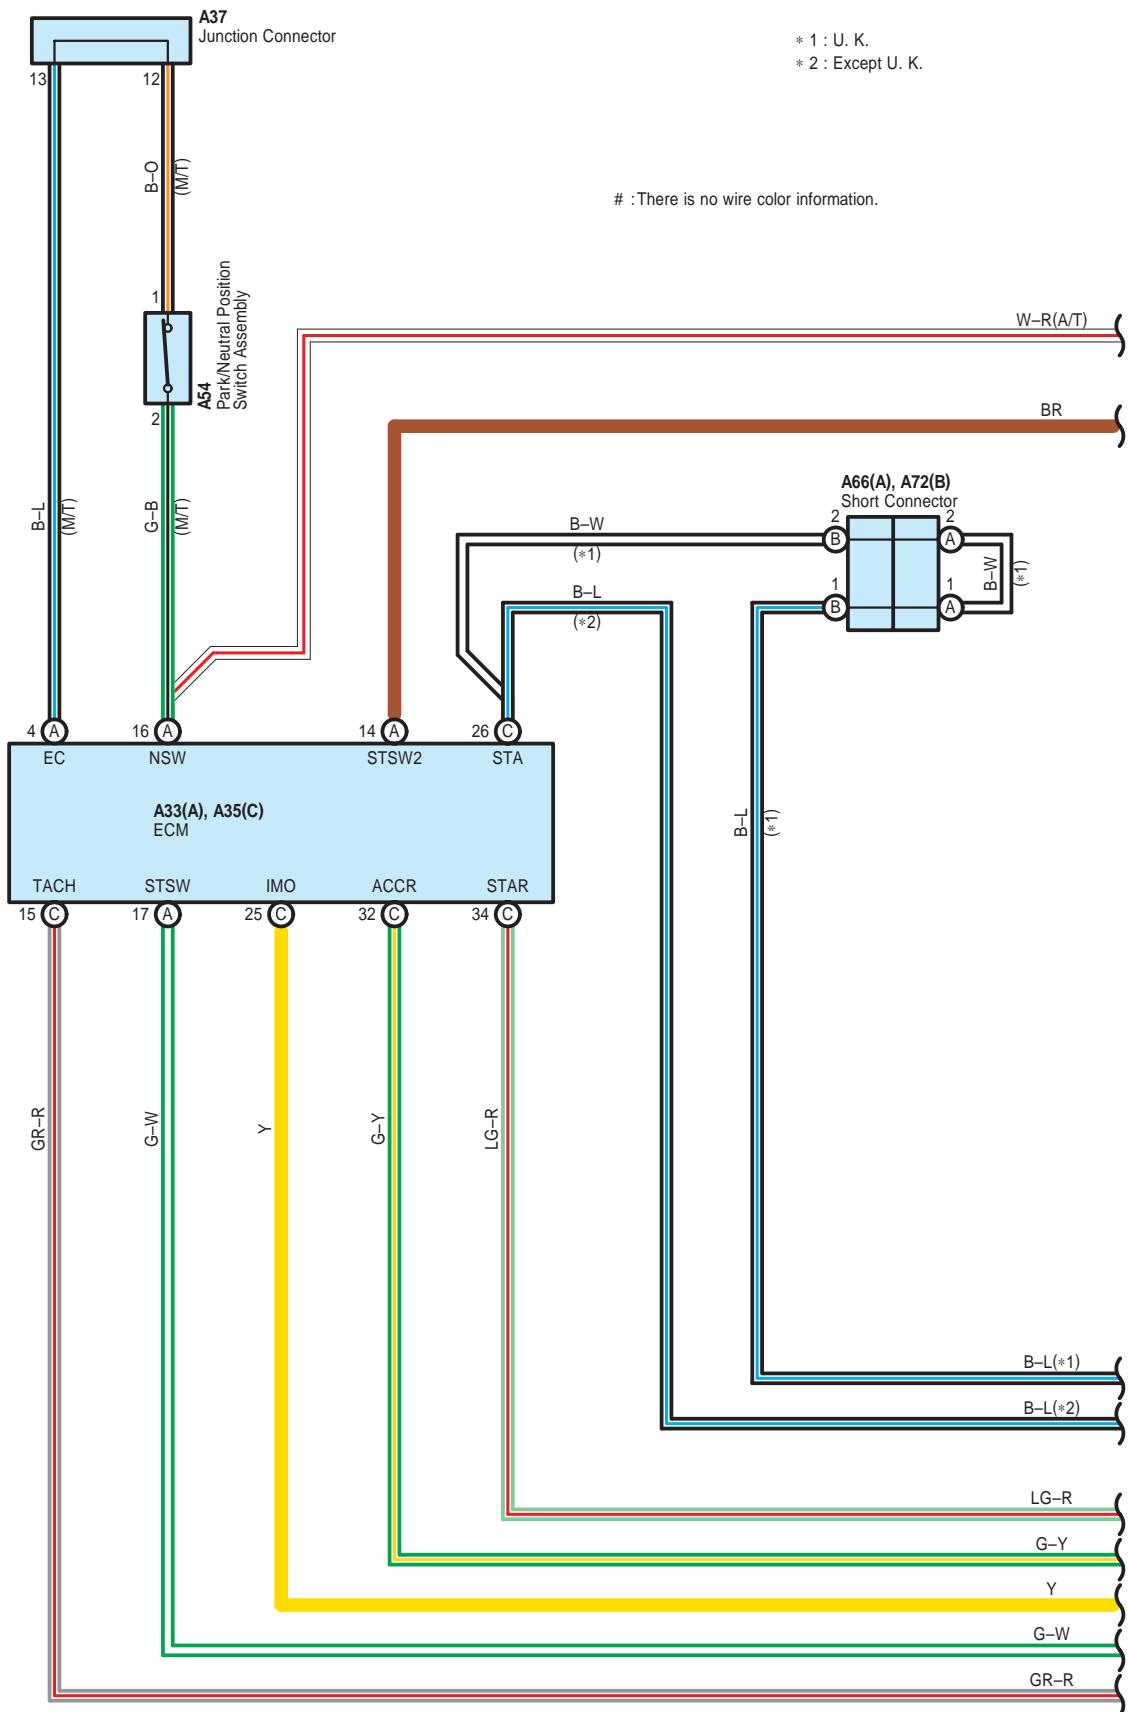


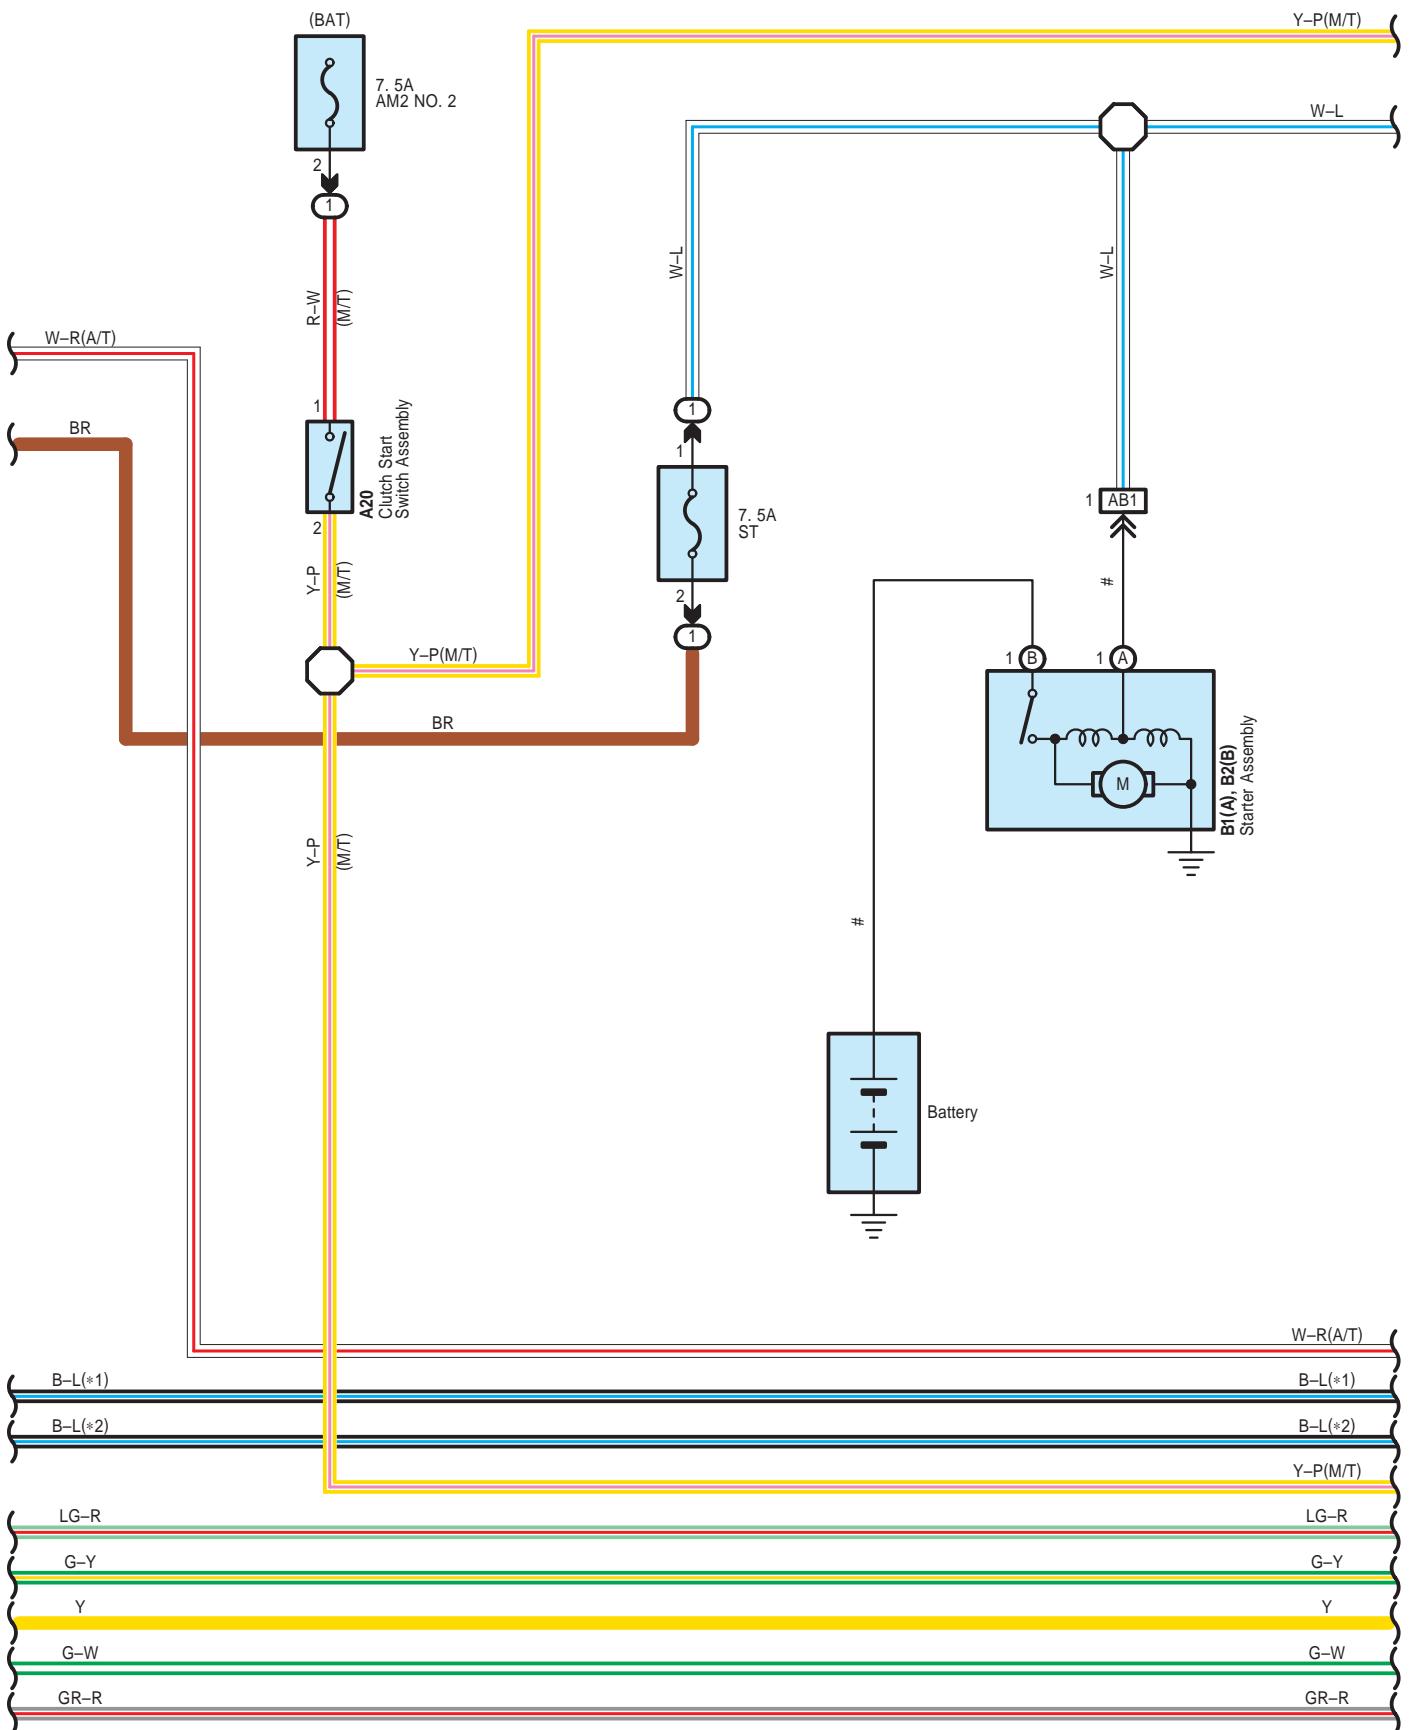


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

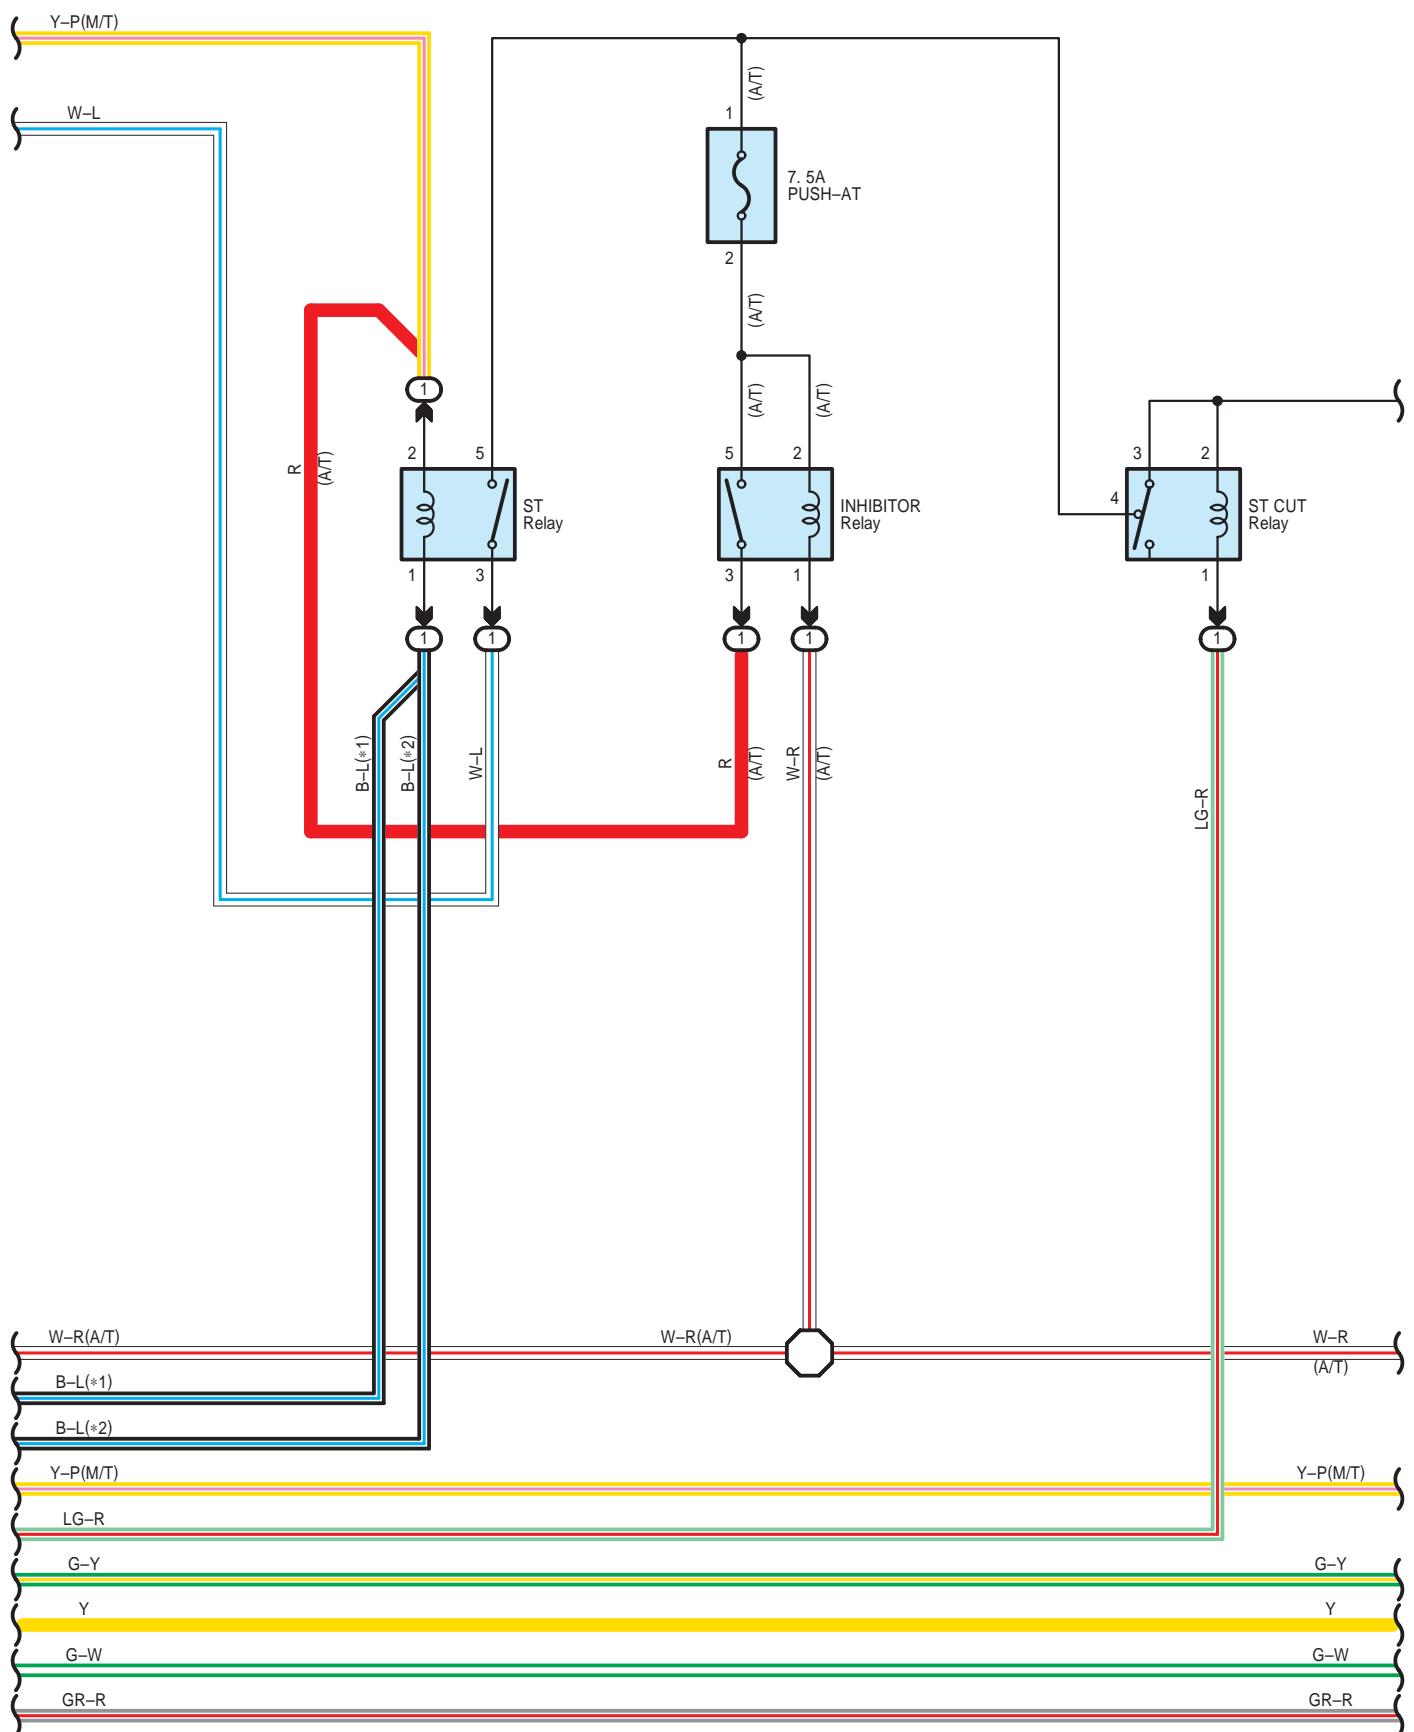


* 1 : U. K.
 * 2 : Except U. K.

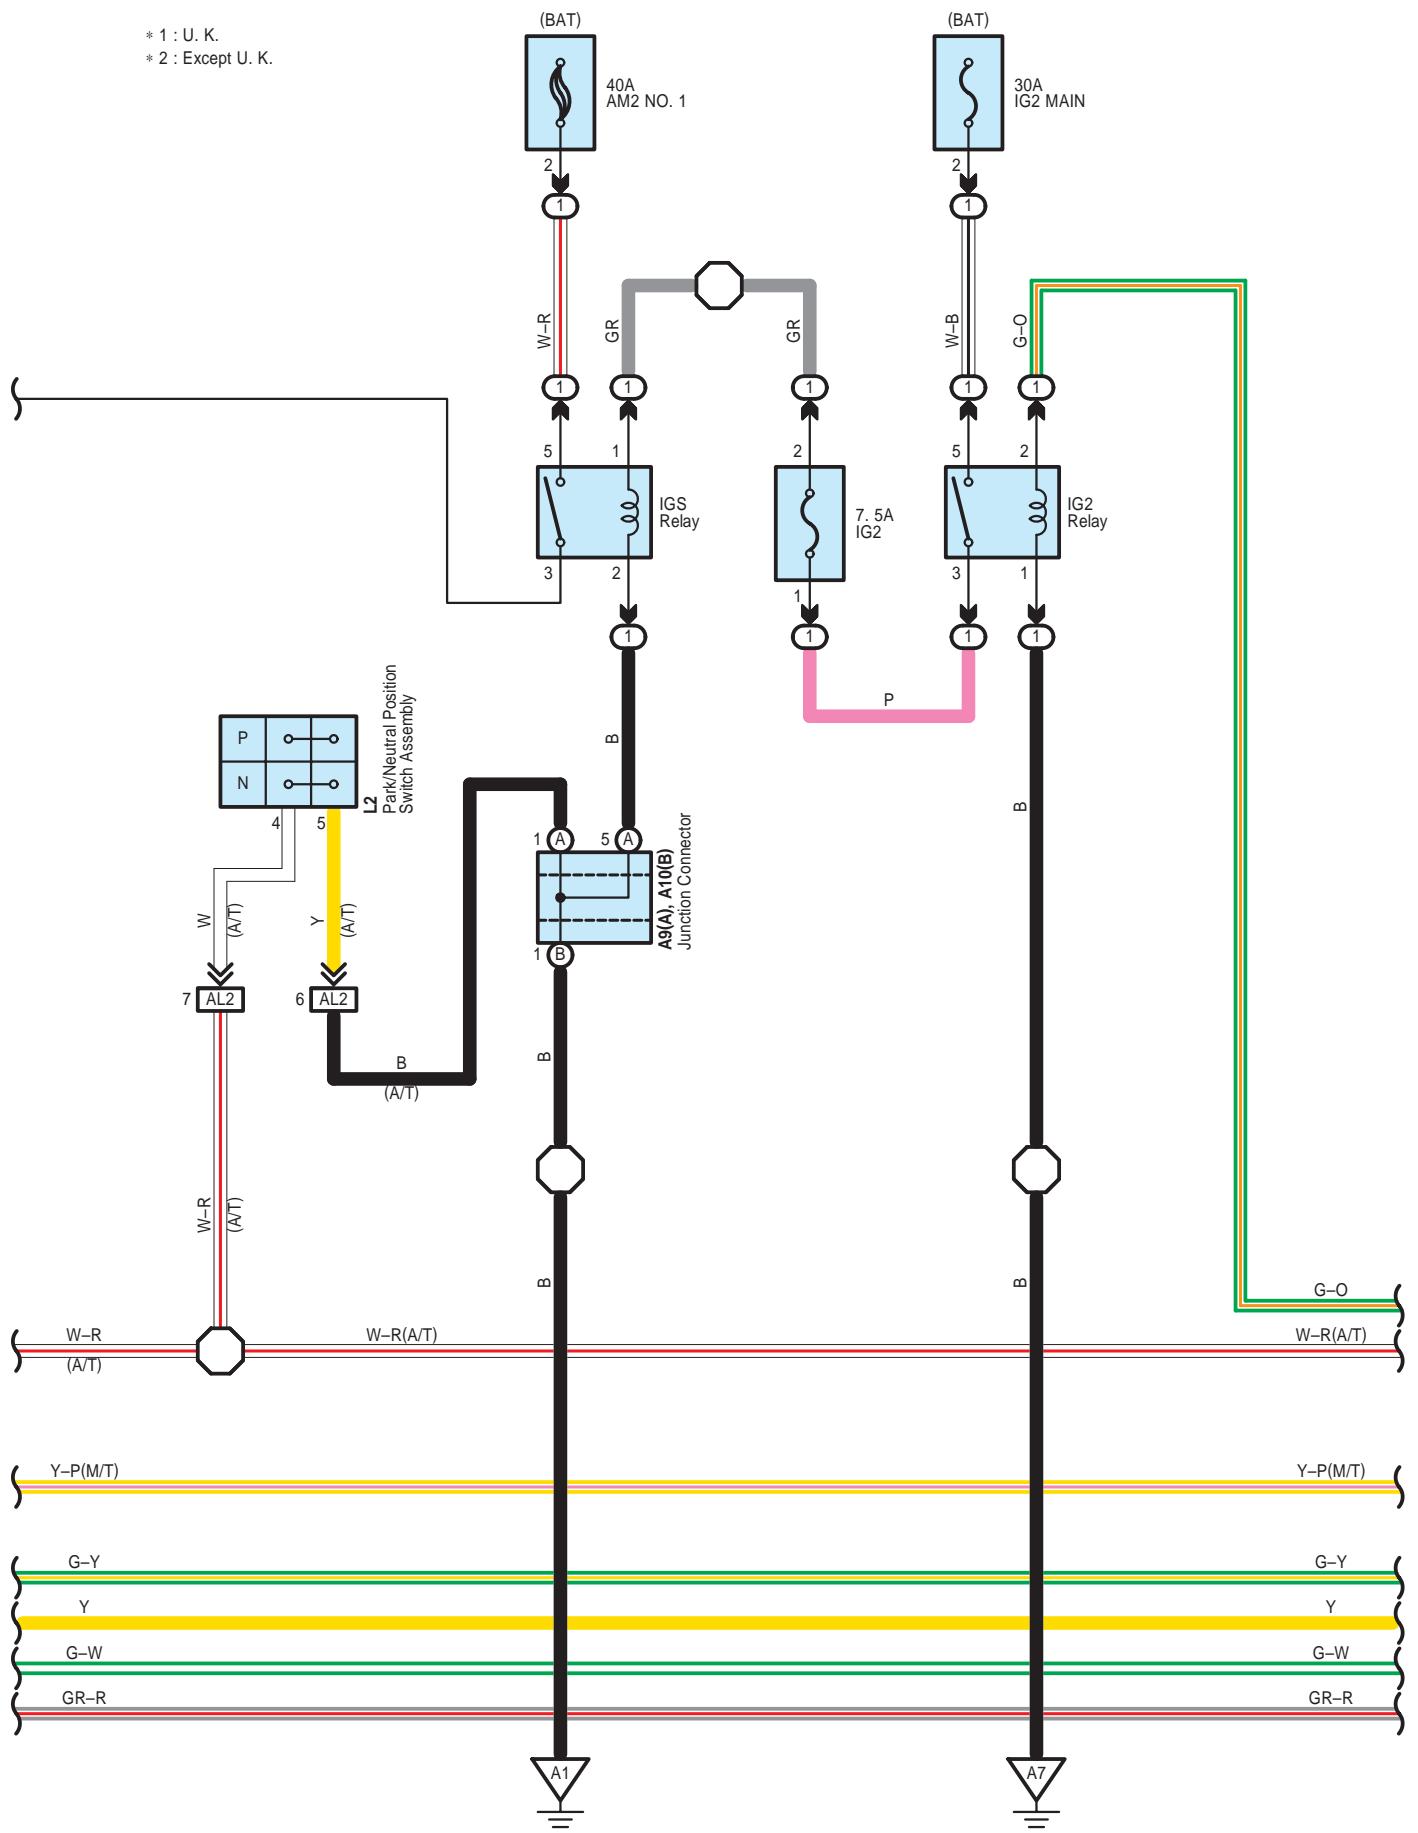


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

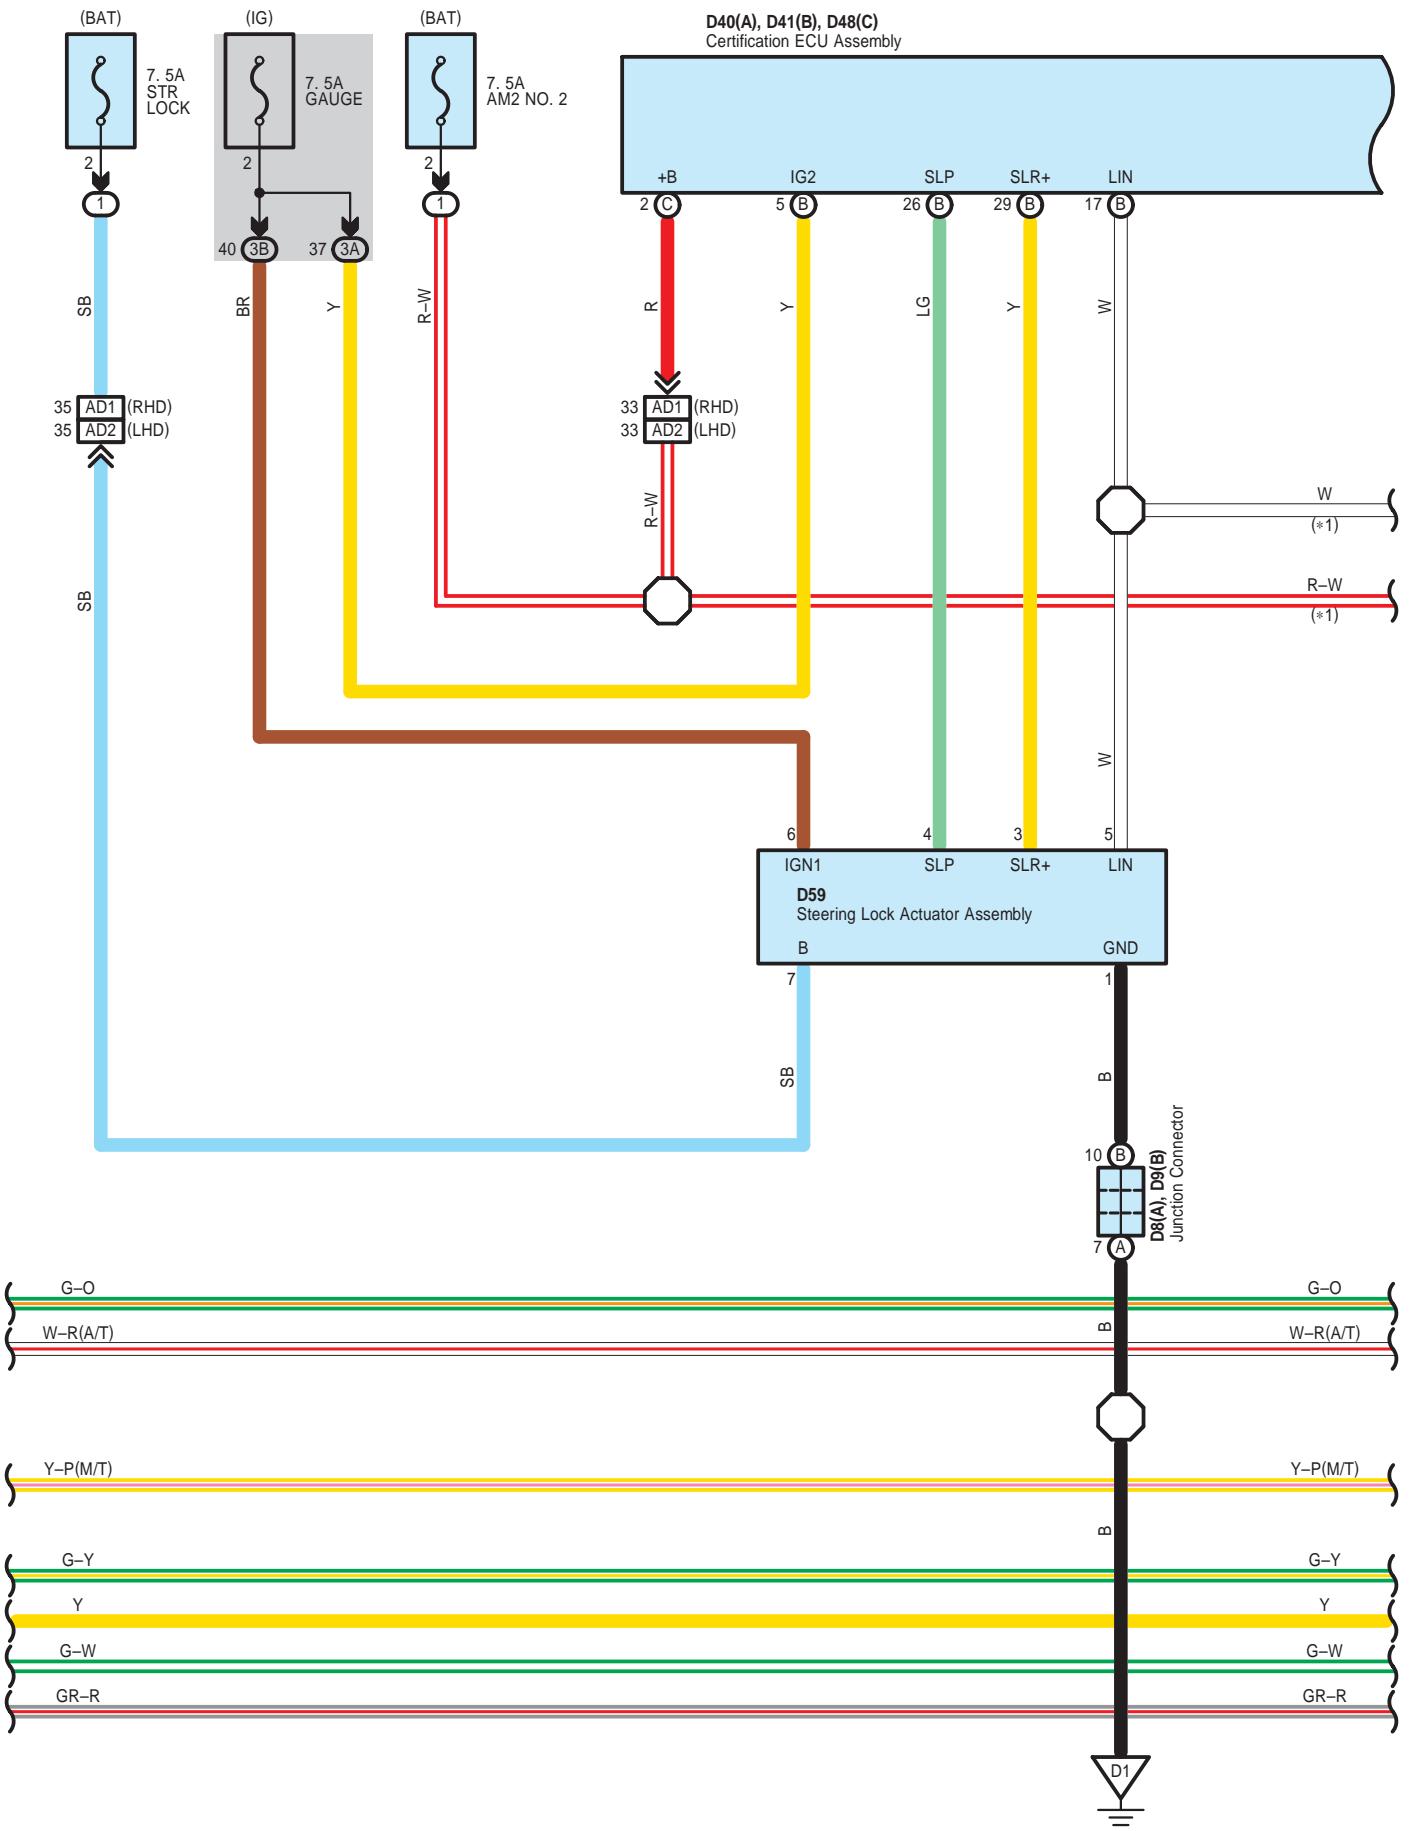


D40(A), D41(B), D48(C)
Certification ECU Assembly

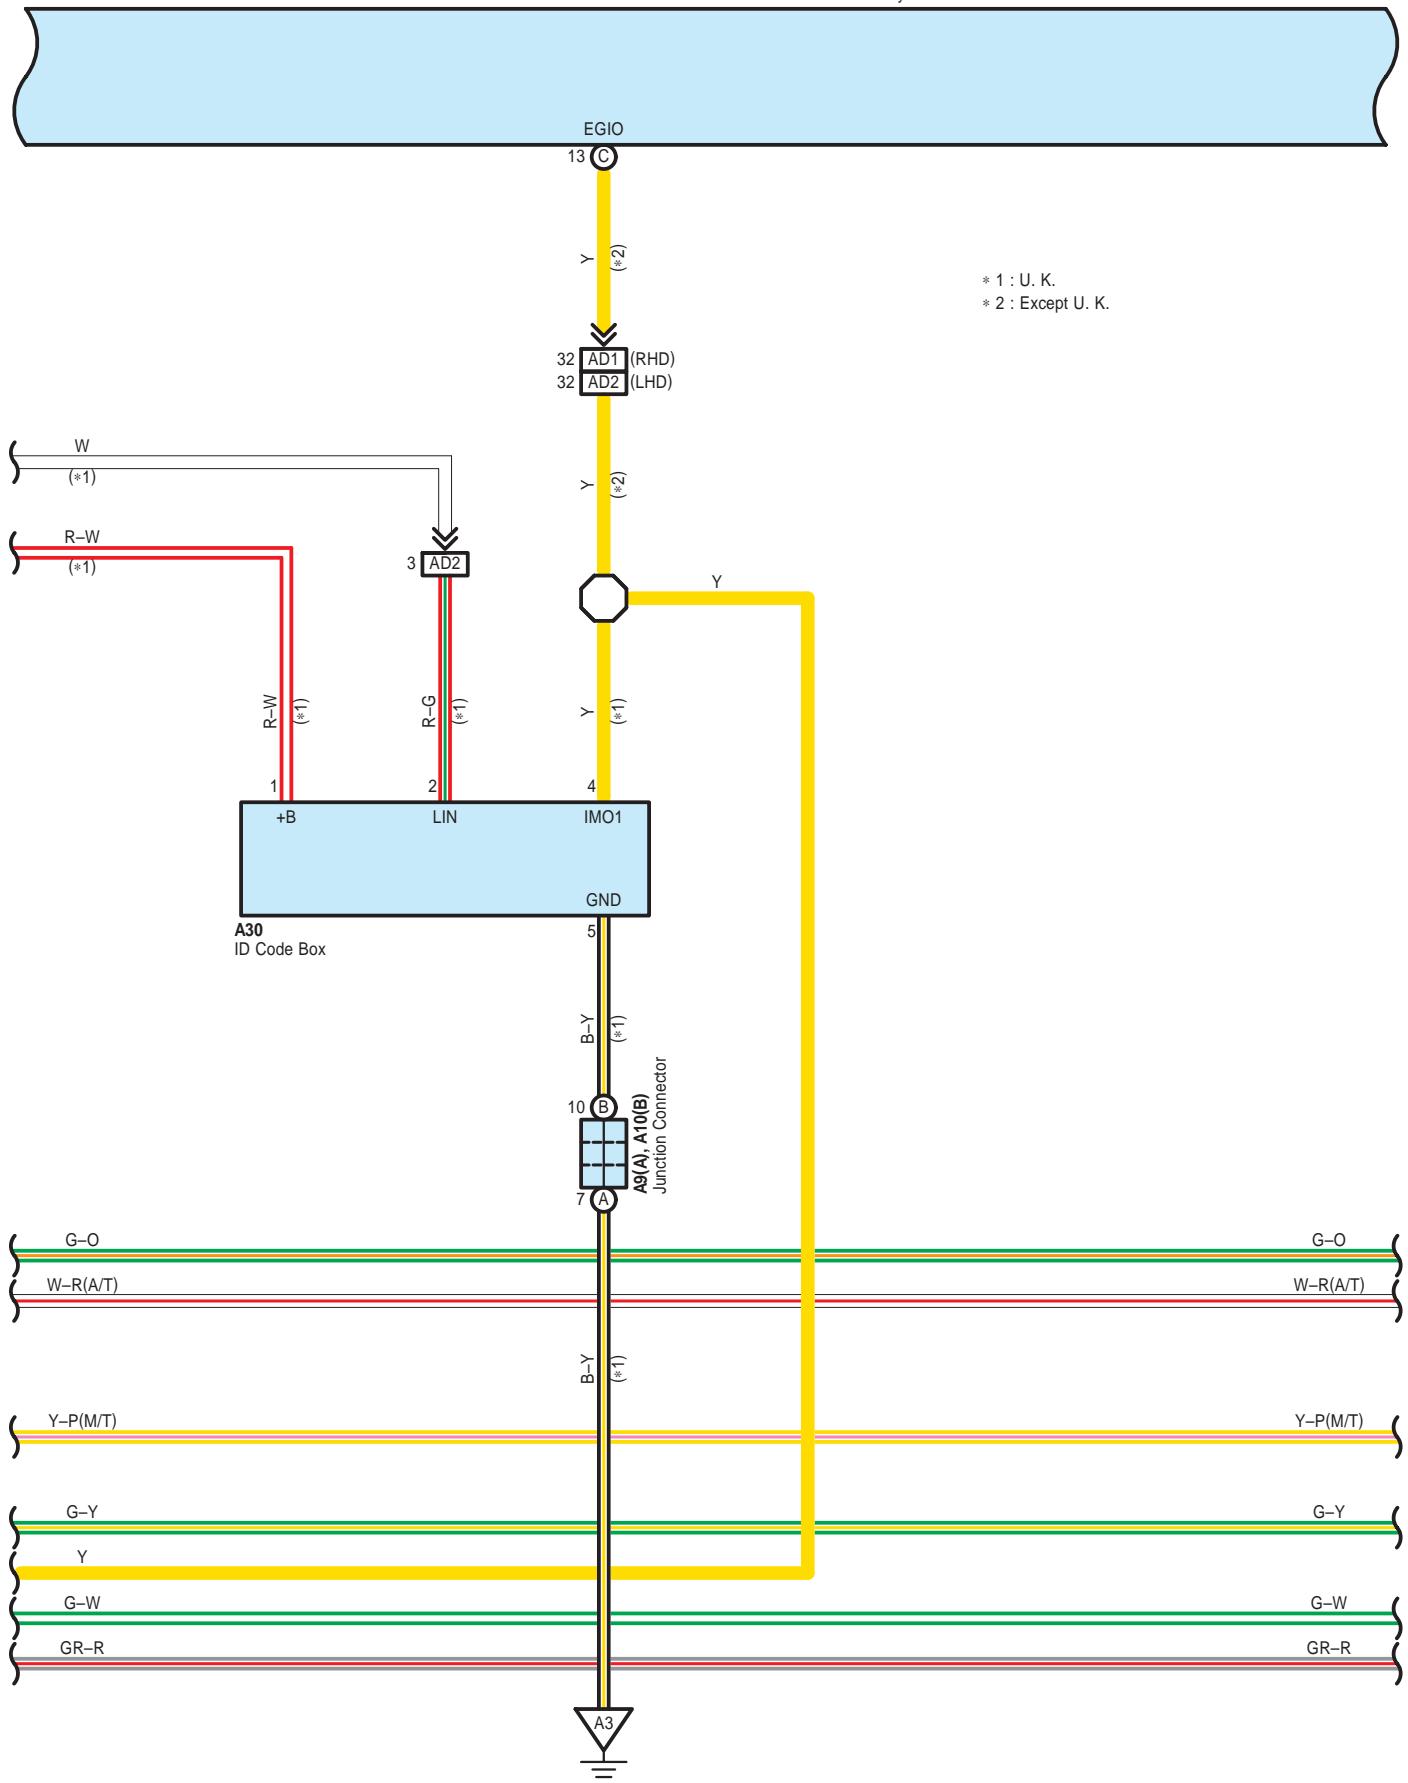

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

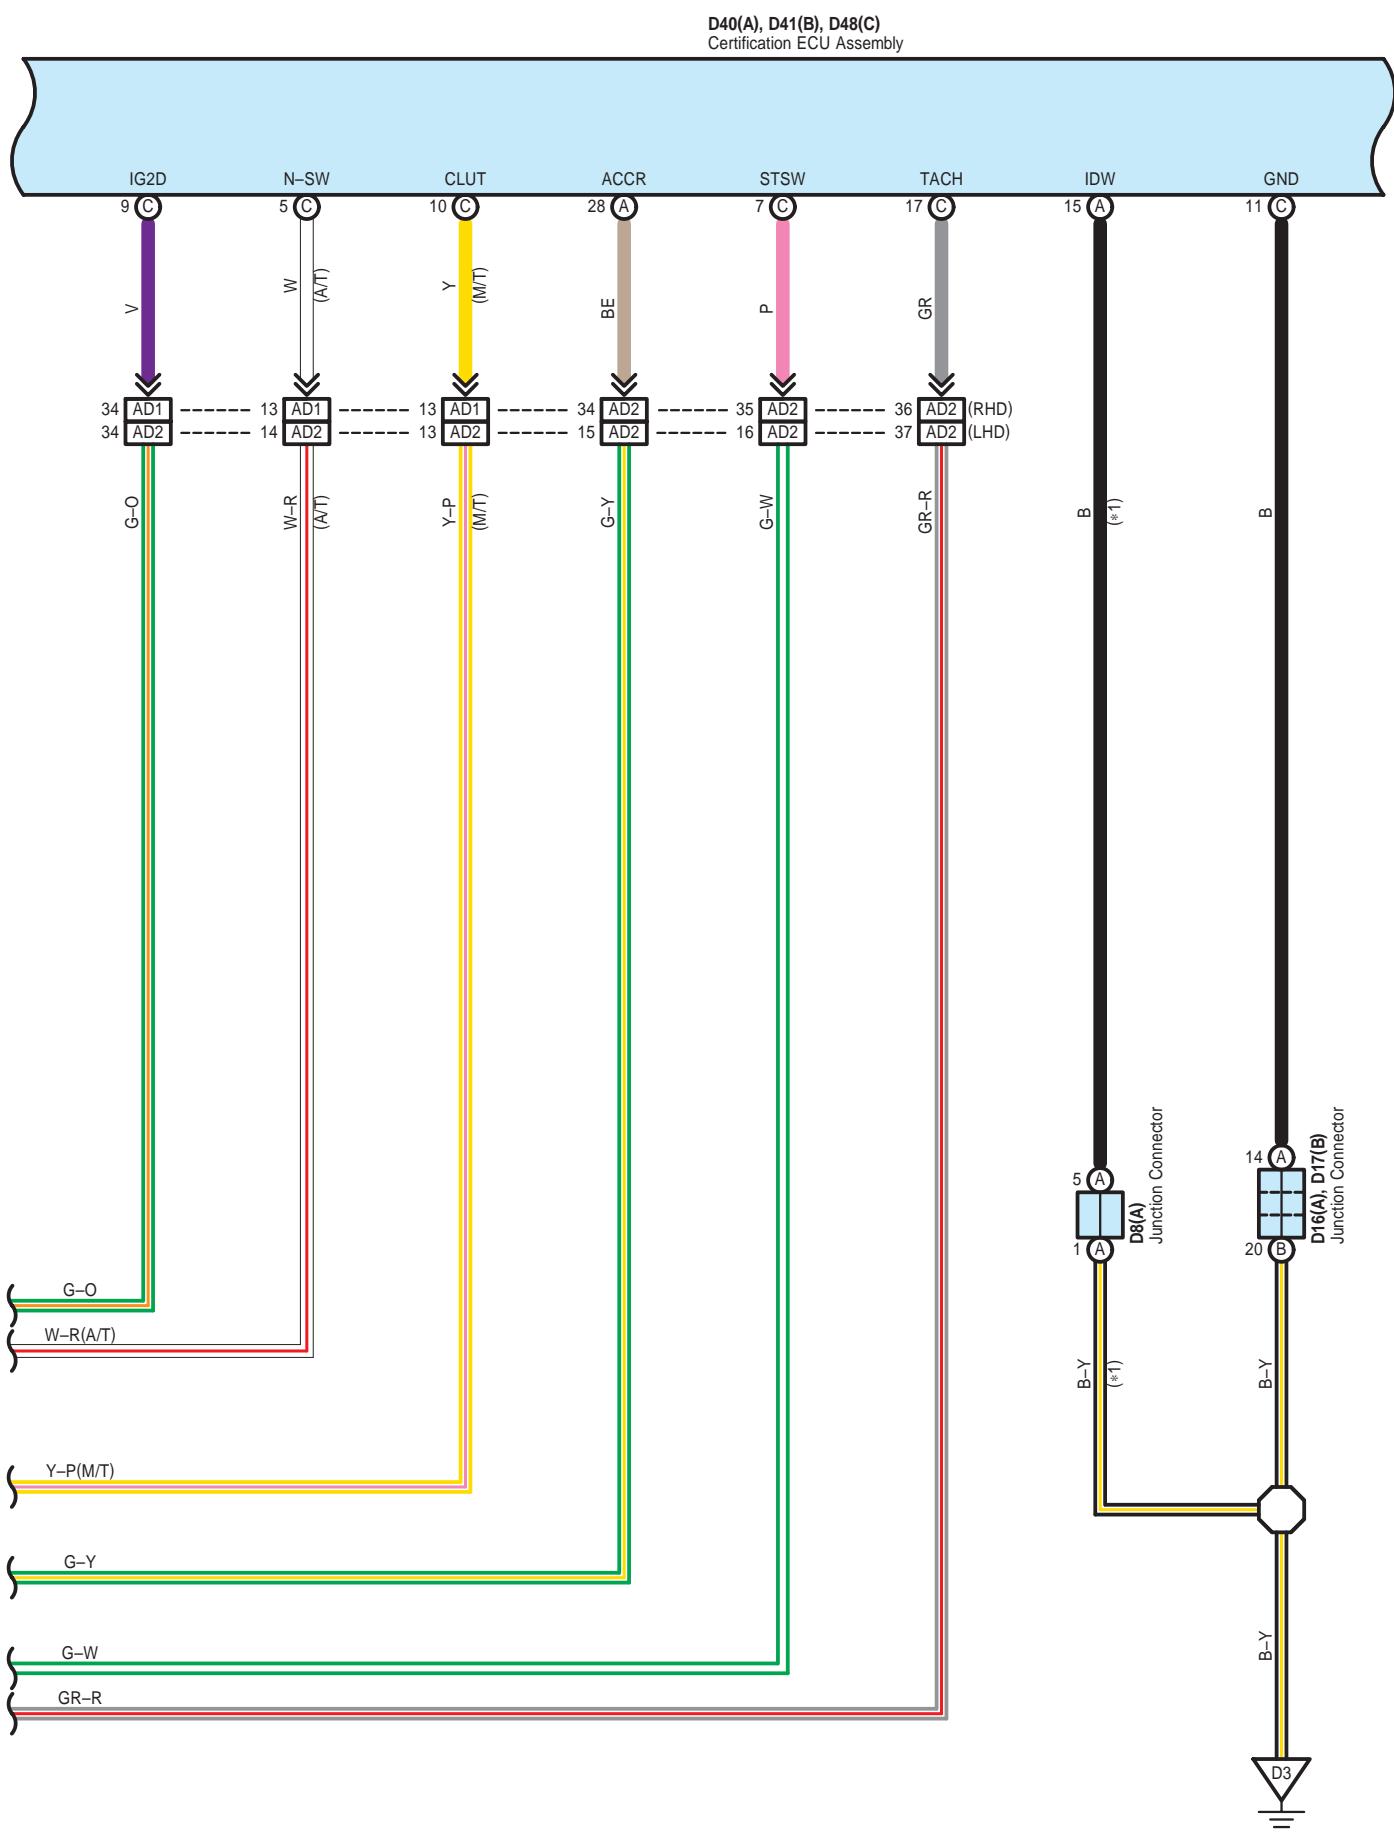


D40(A), D41(B), D48(C)
Certification ECU Assembly

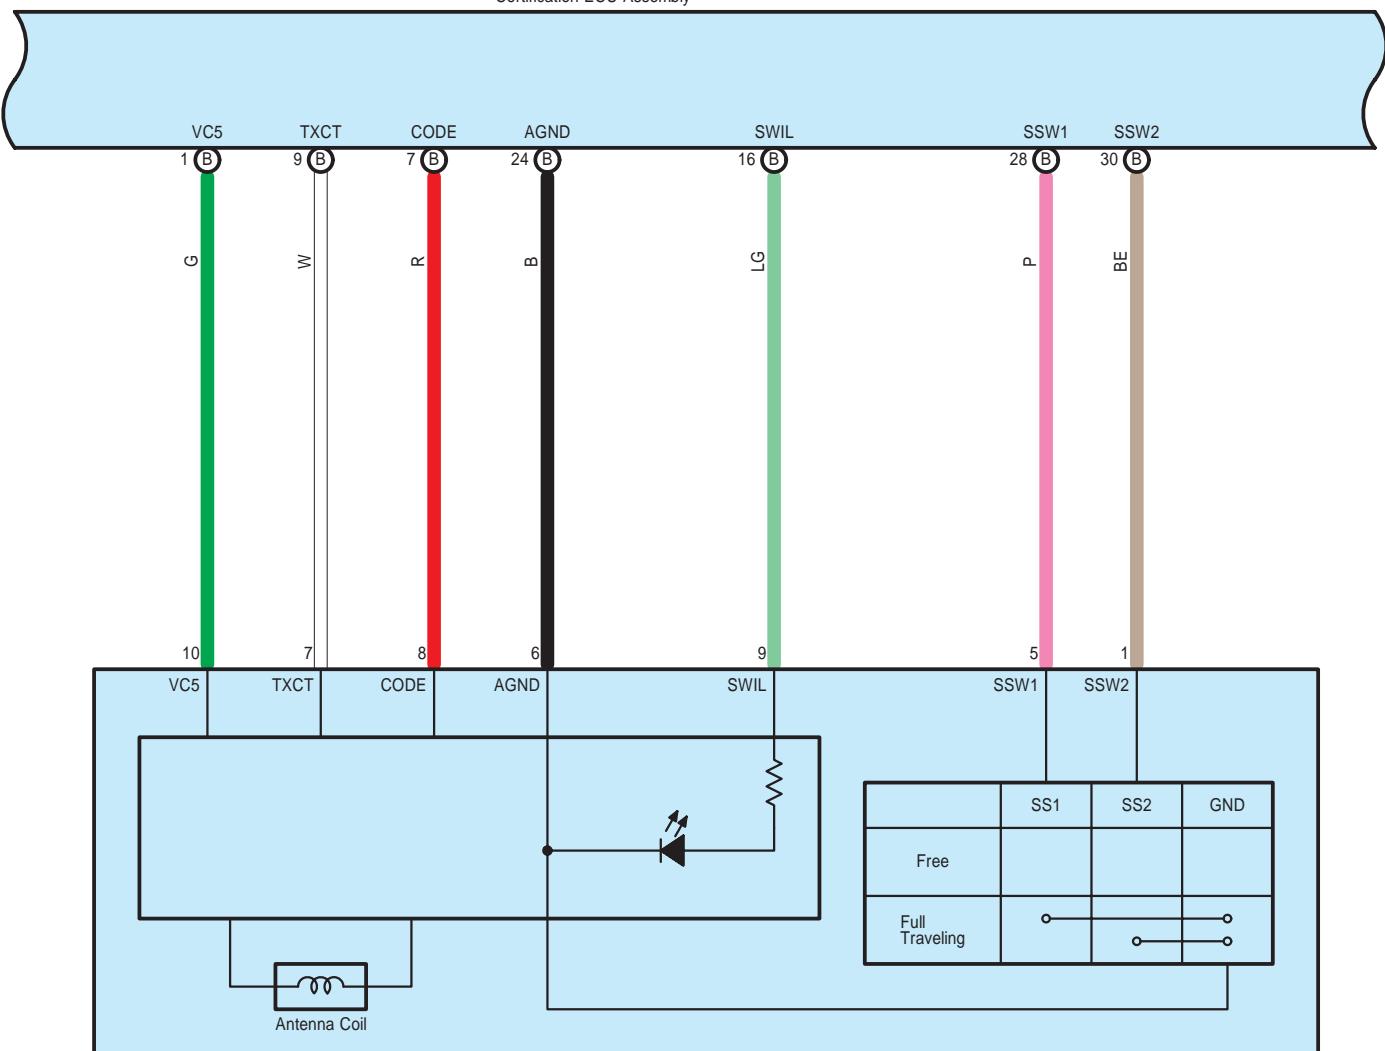


D25
Engine Switch

* 1 : U. K.


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

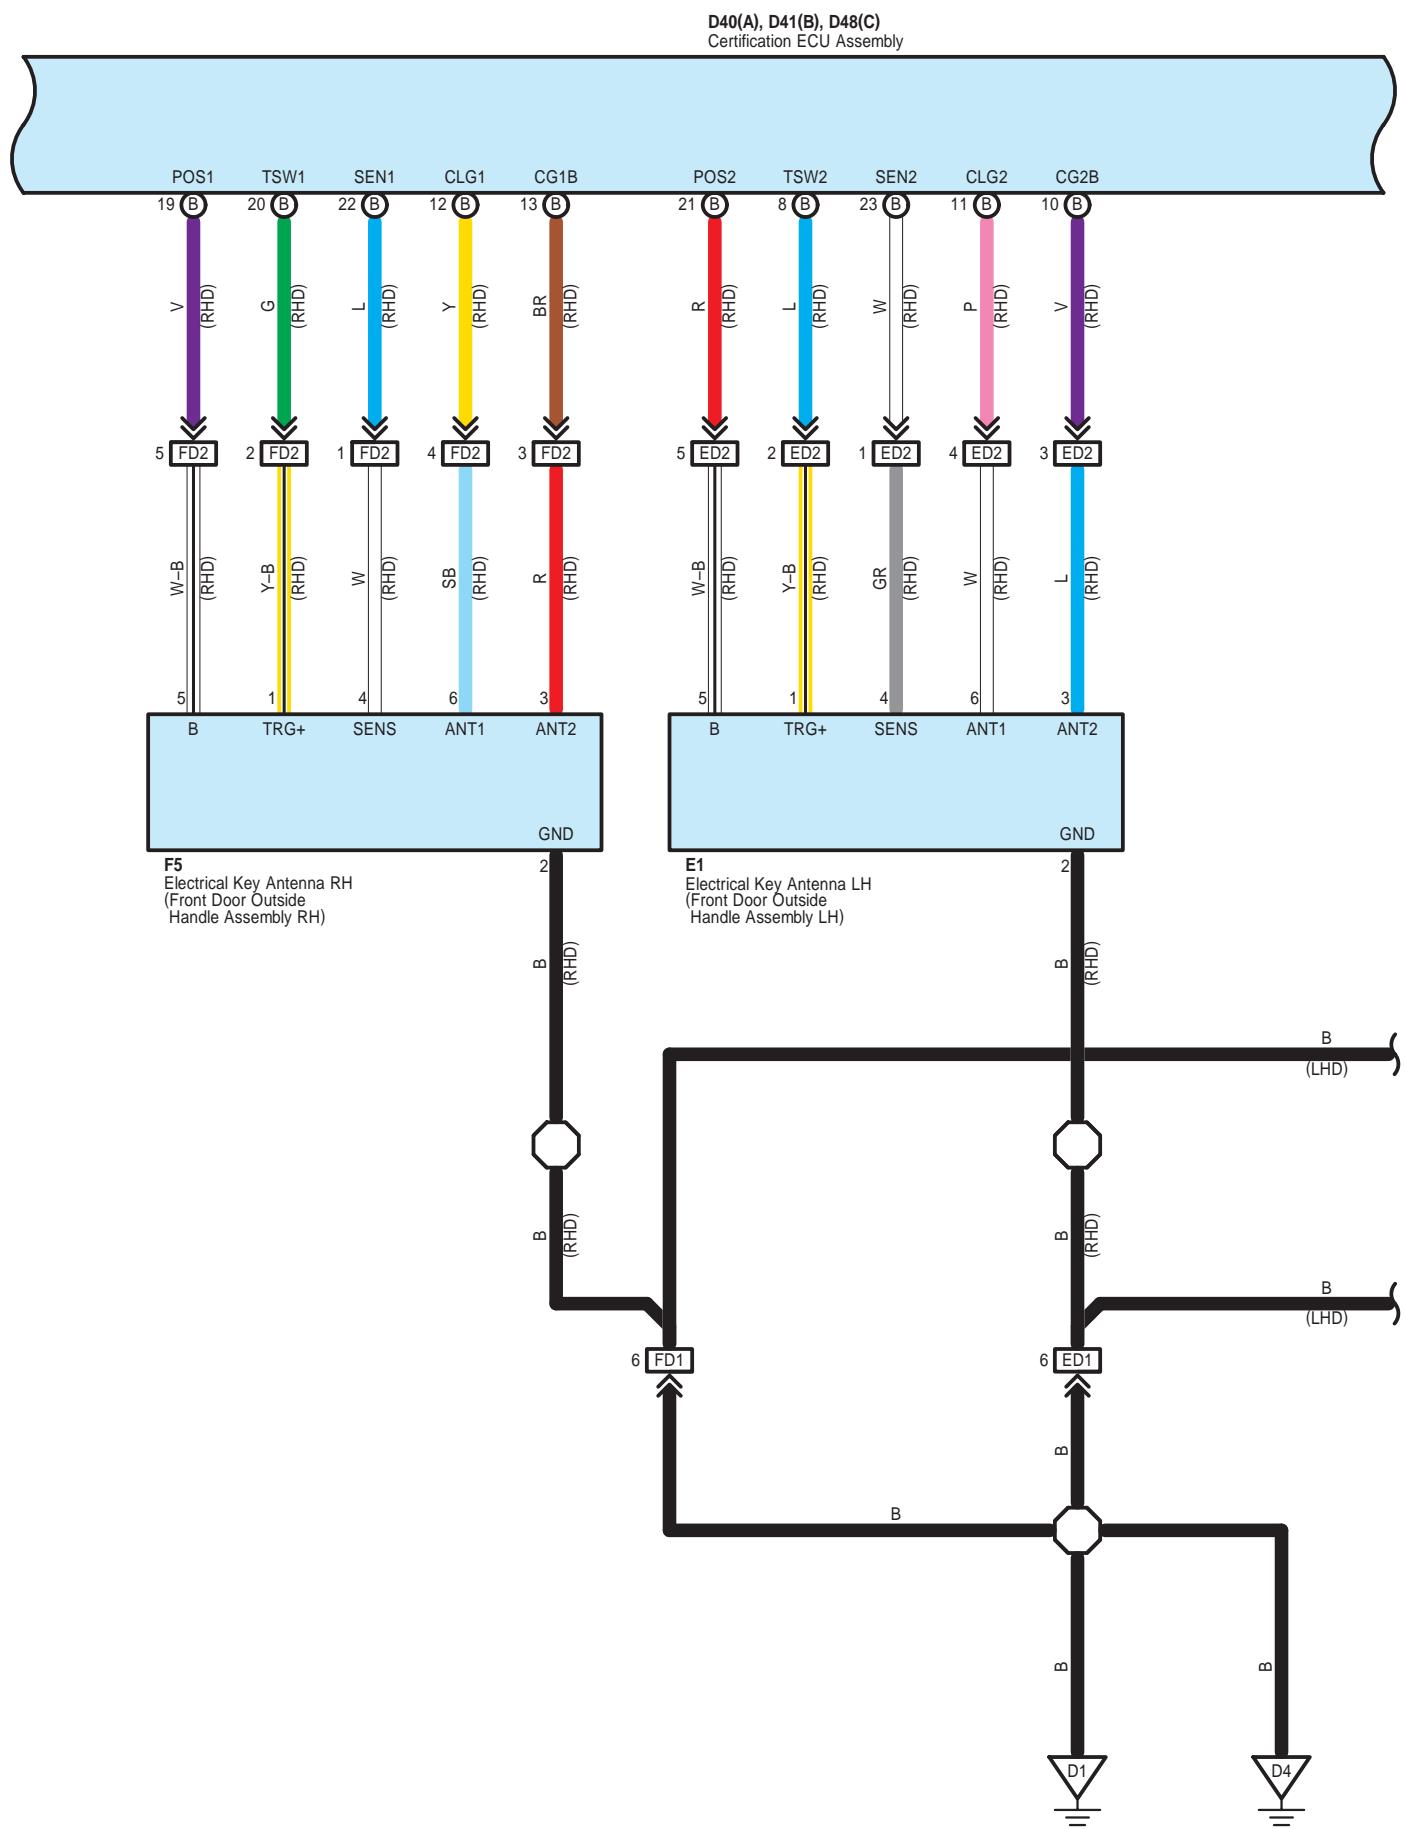


D40(A), D41(B), D48(C)
Certification ECU Assembly

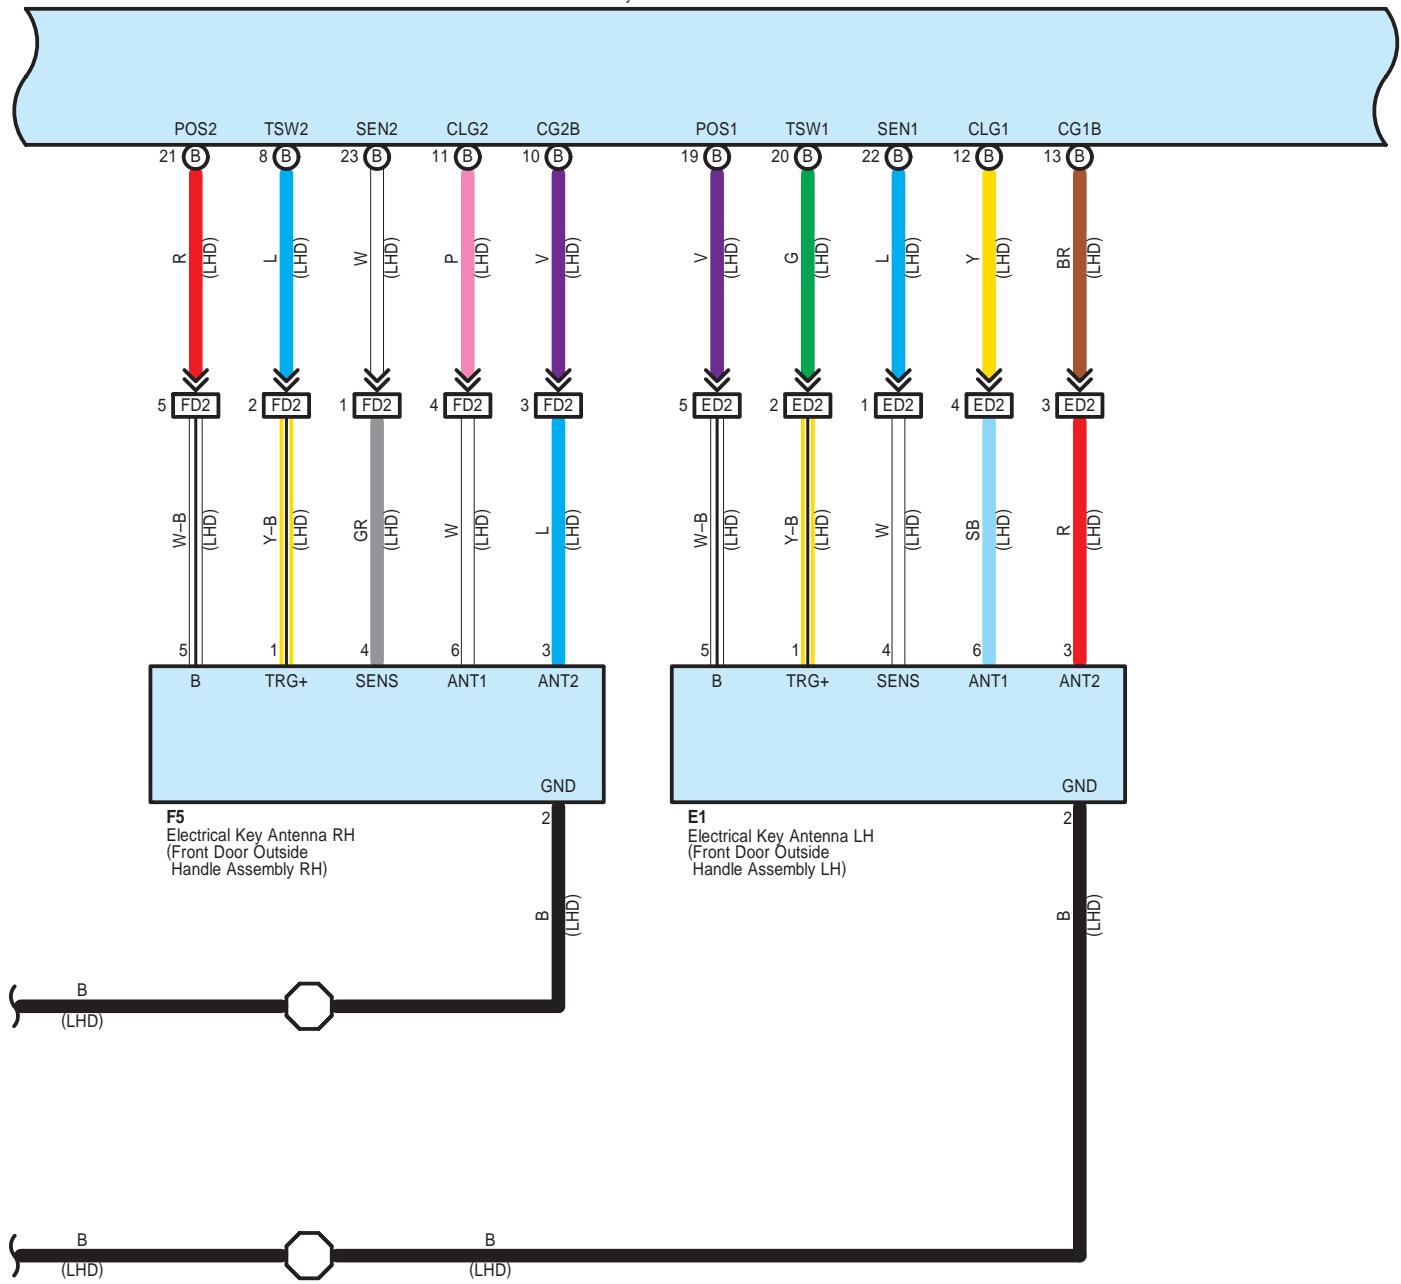


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

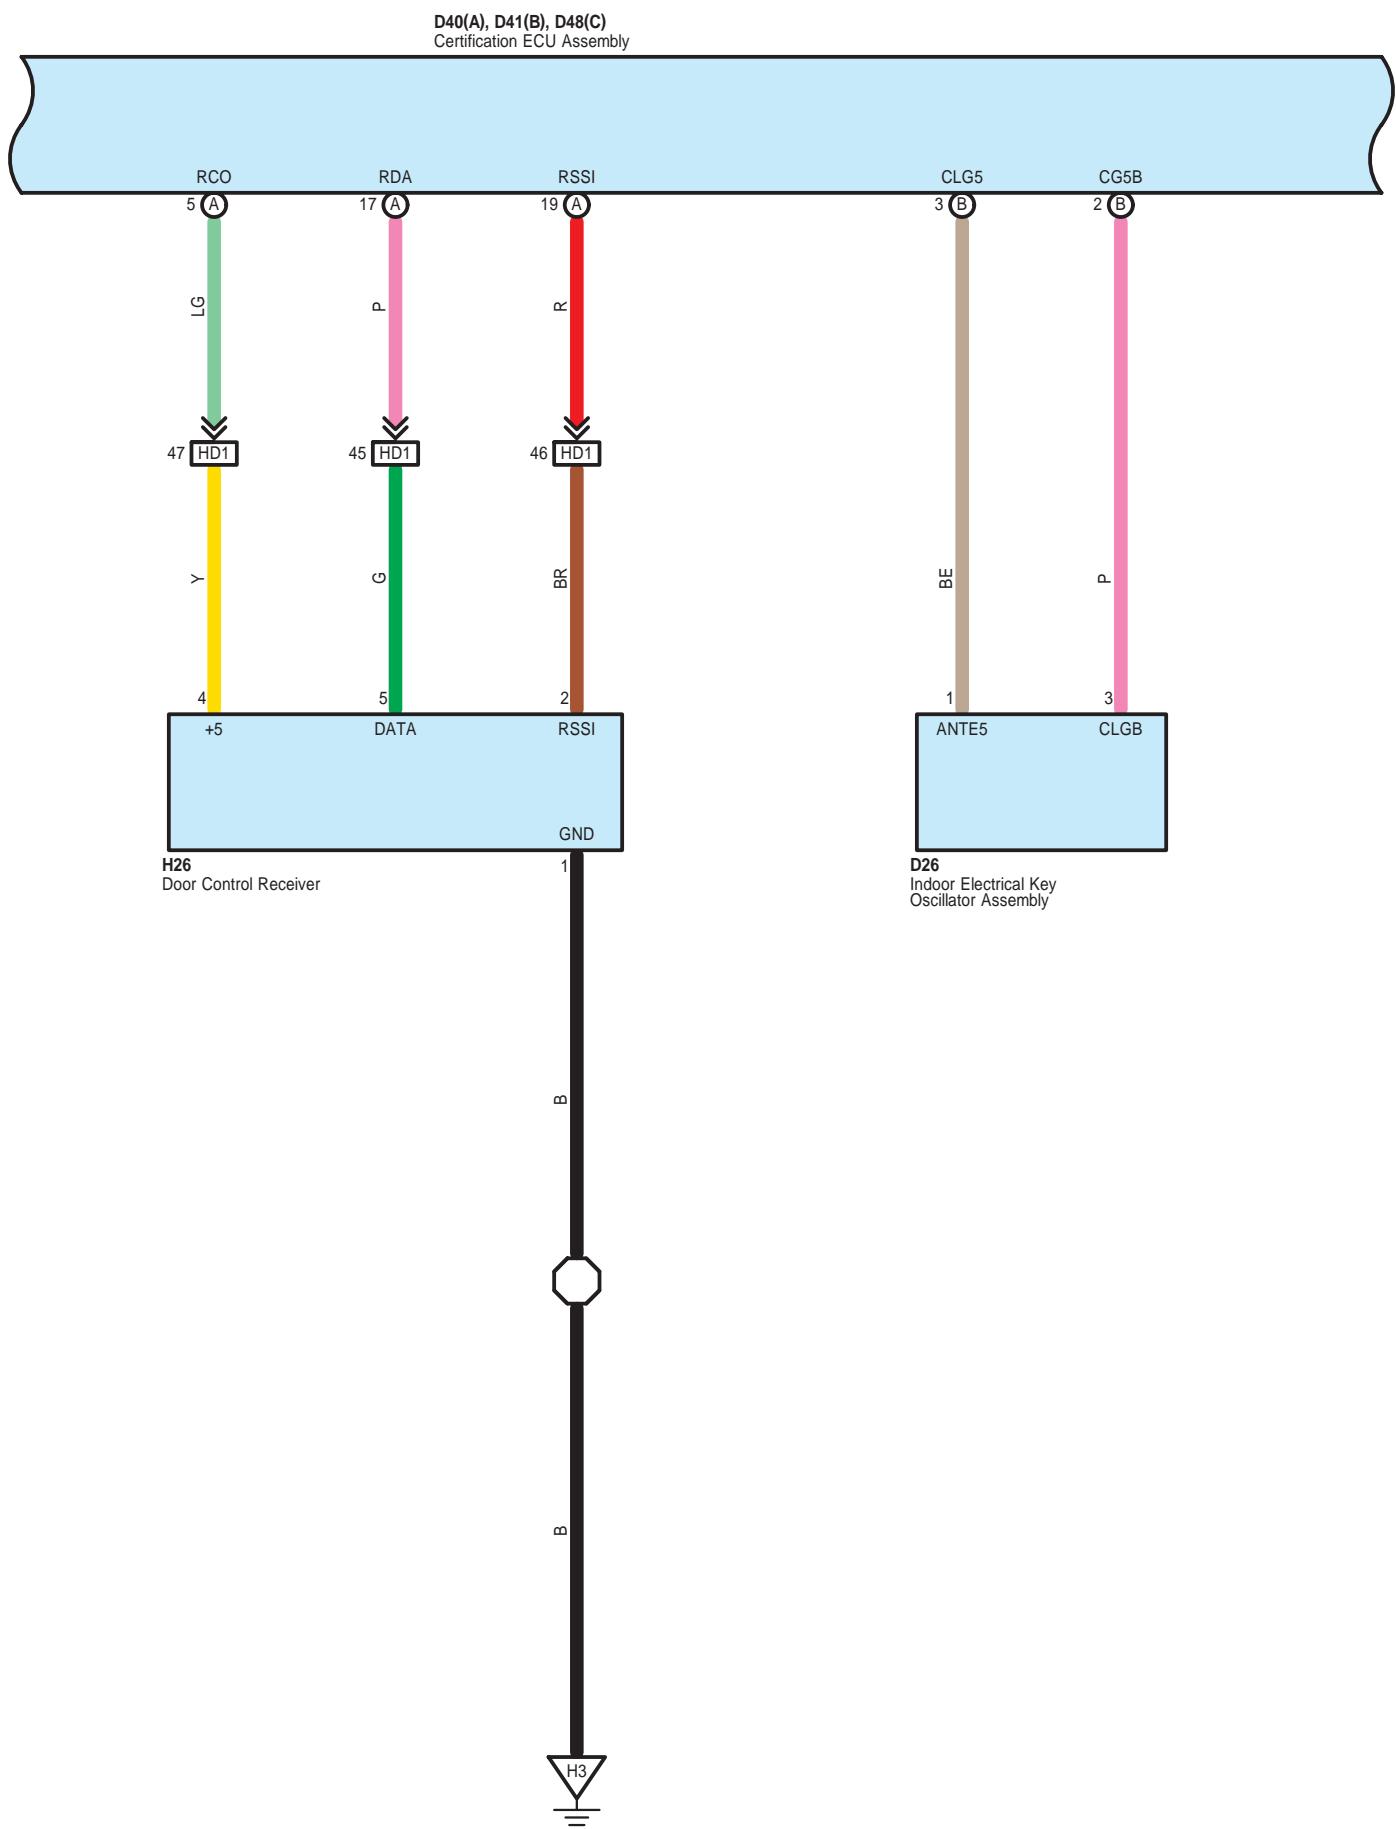


D40(A), D41(B), D48(C)
Certification ECU Assembly

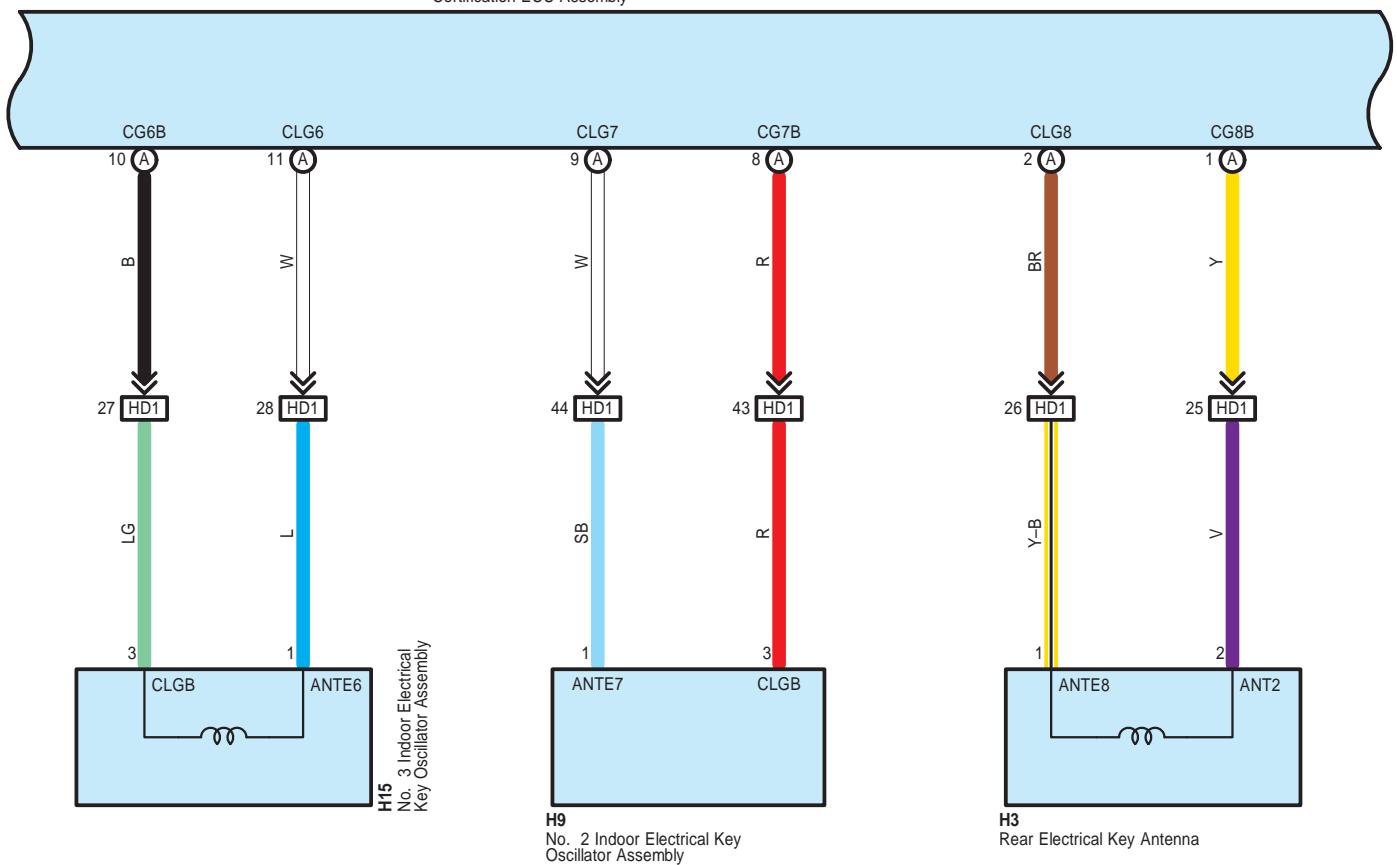



Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

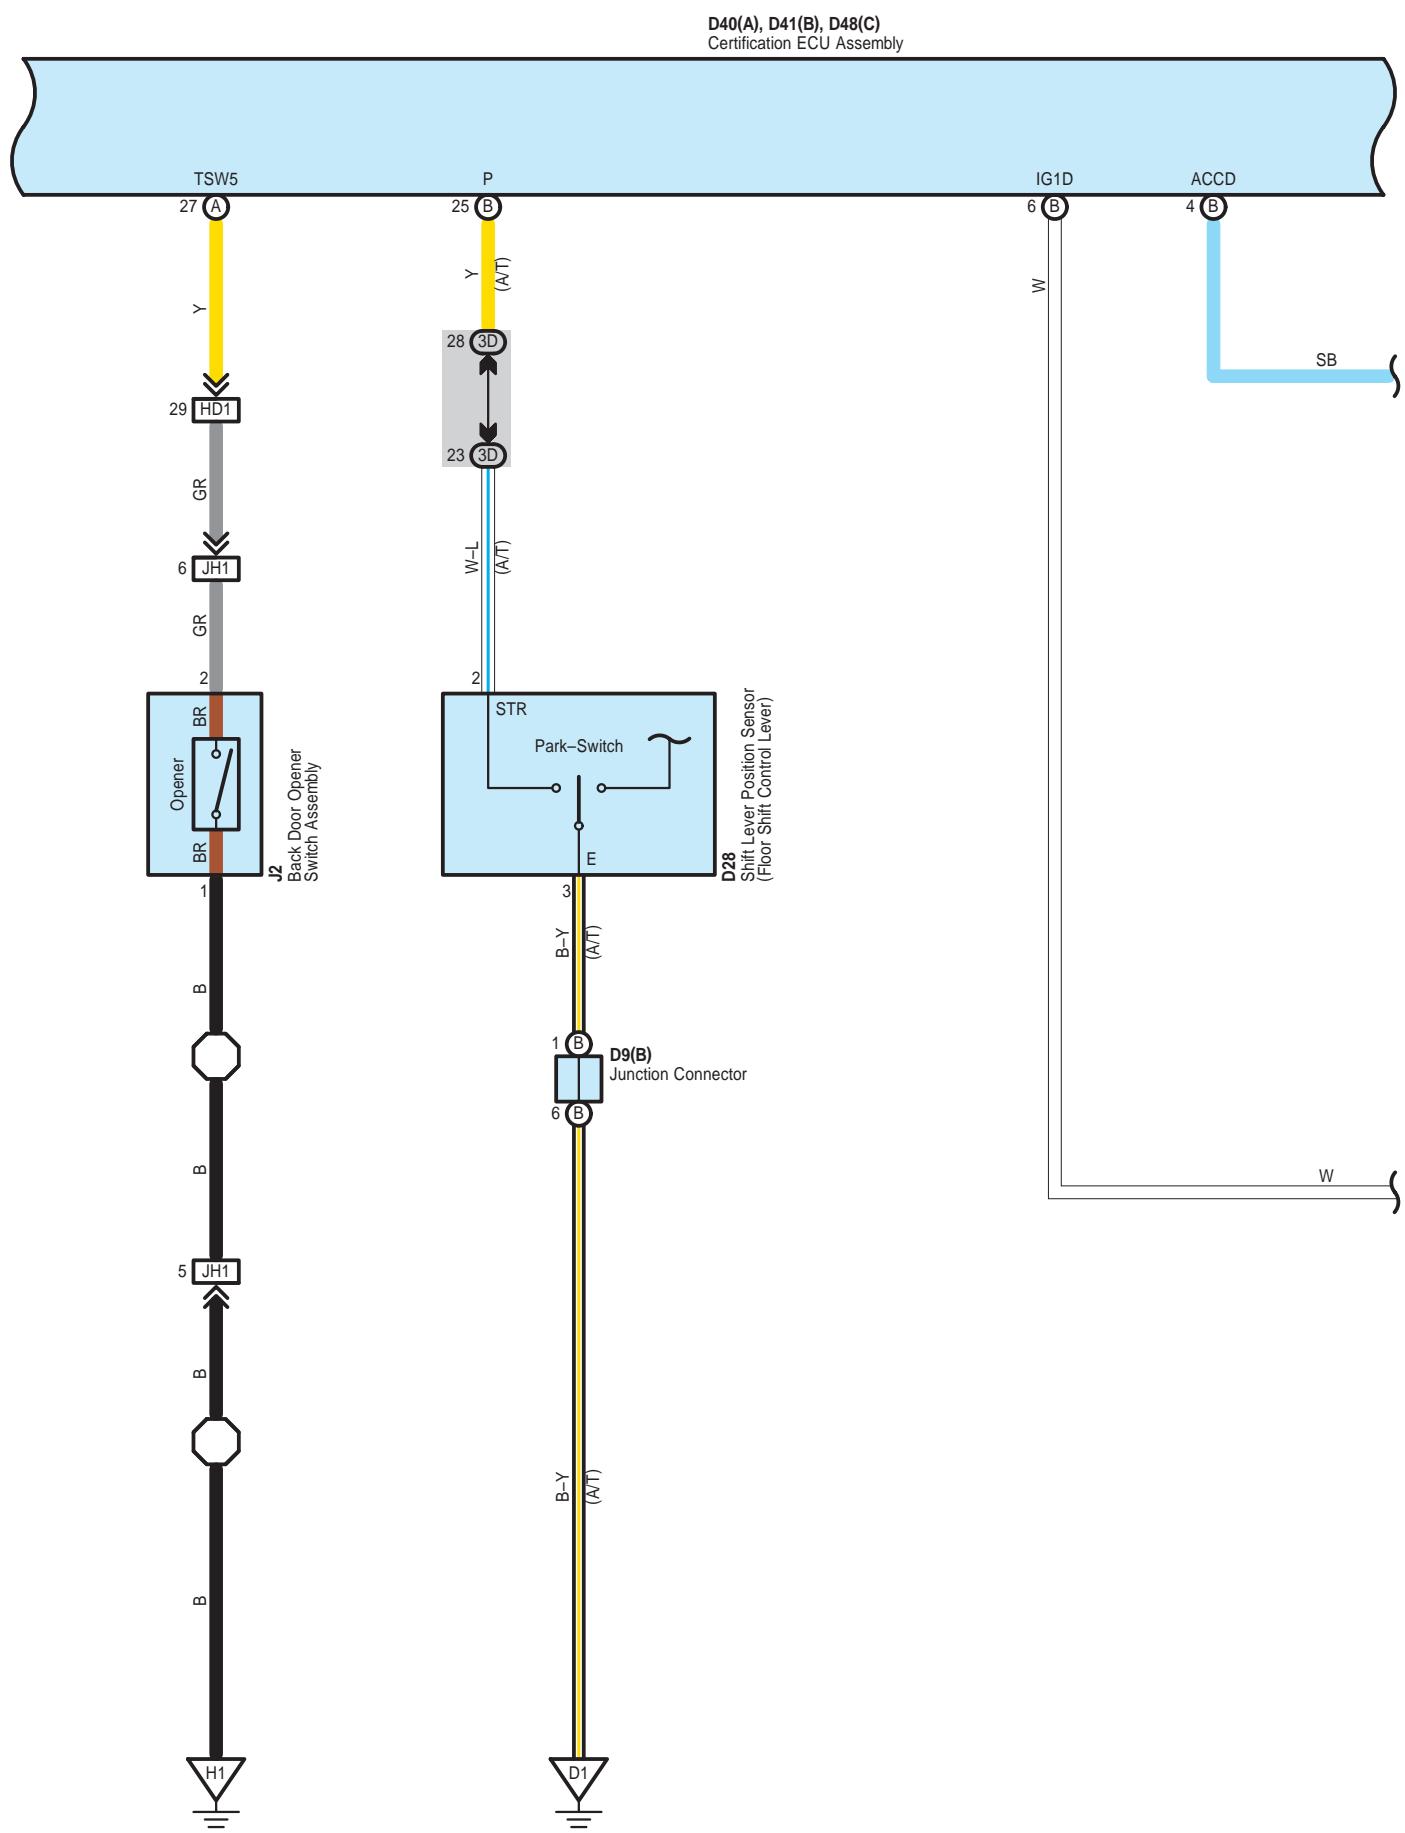

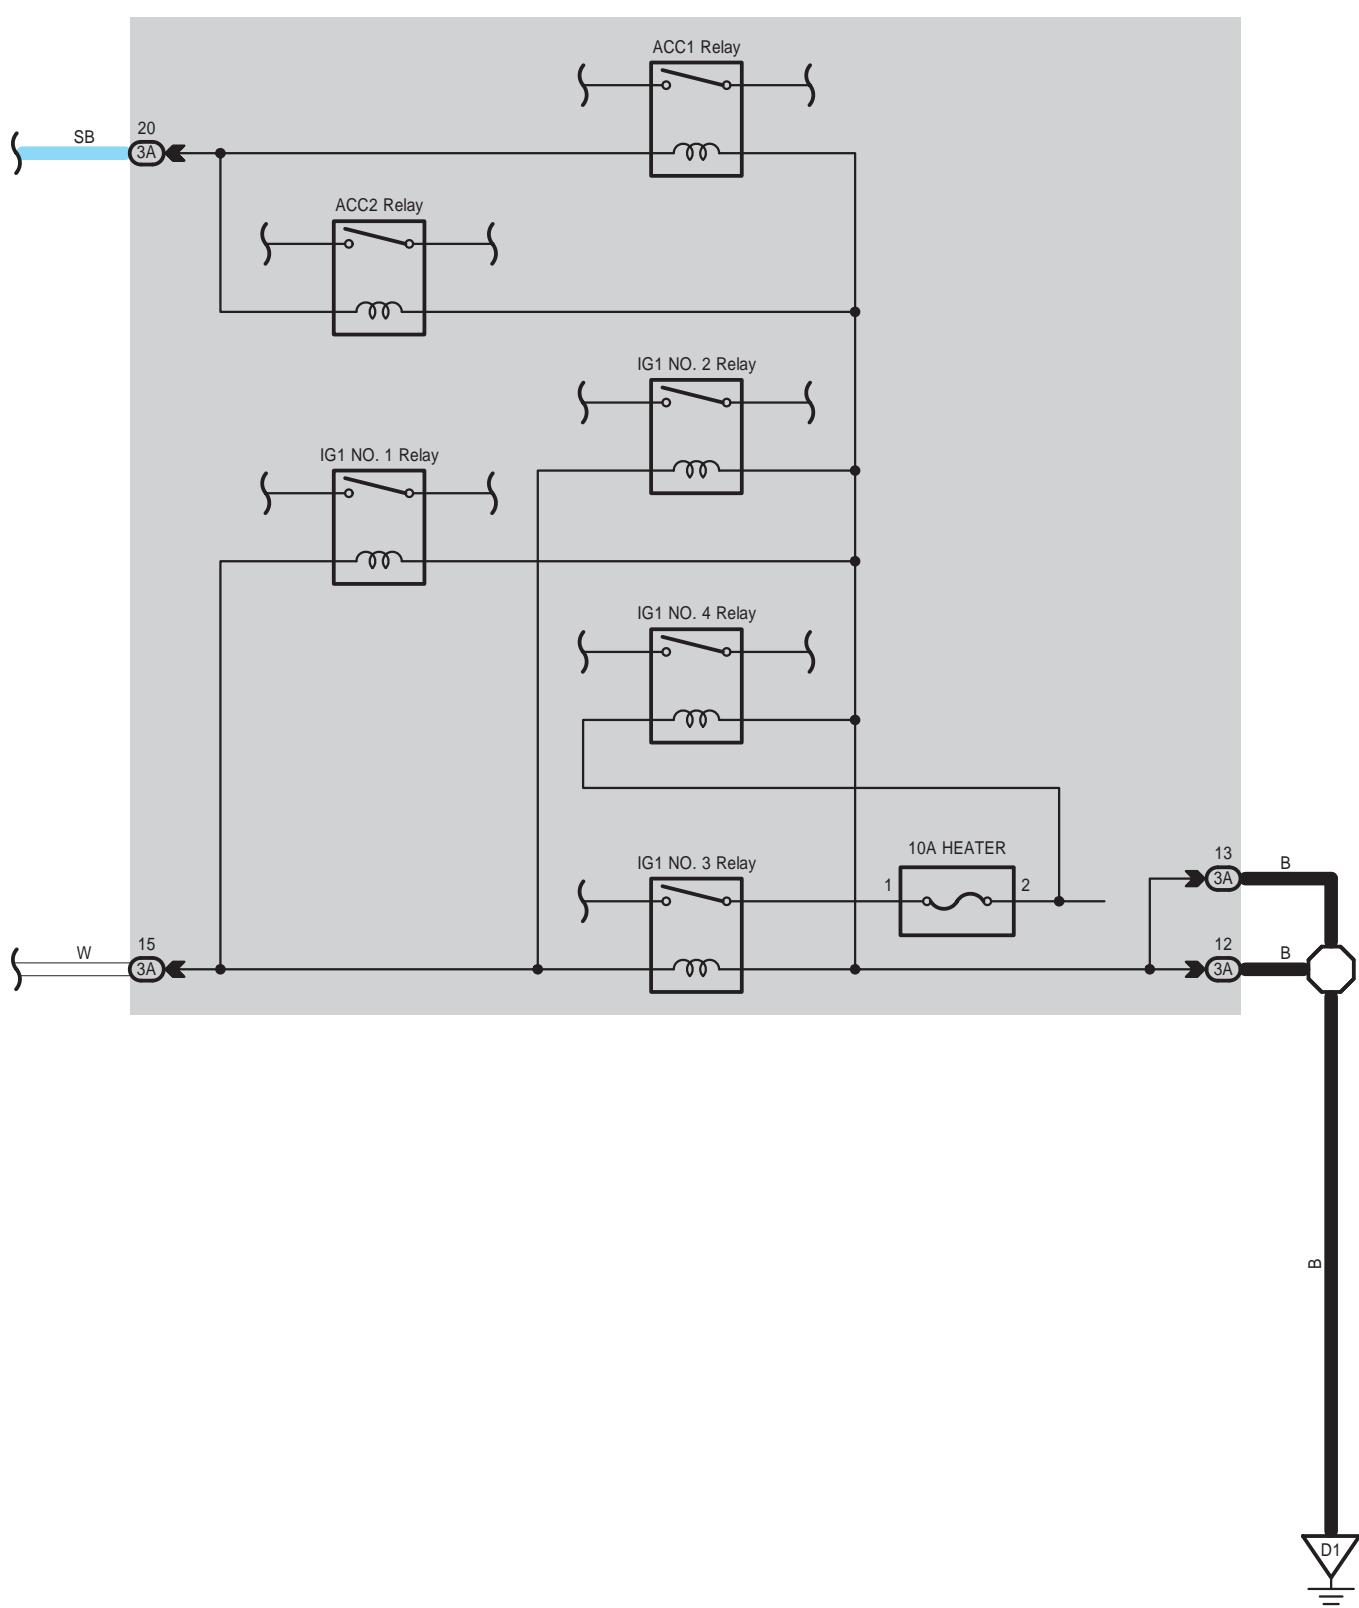


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

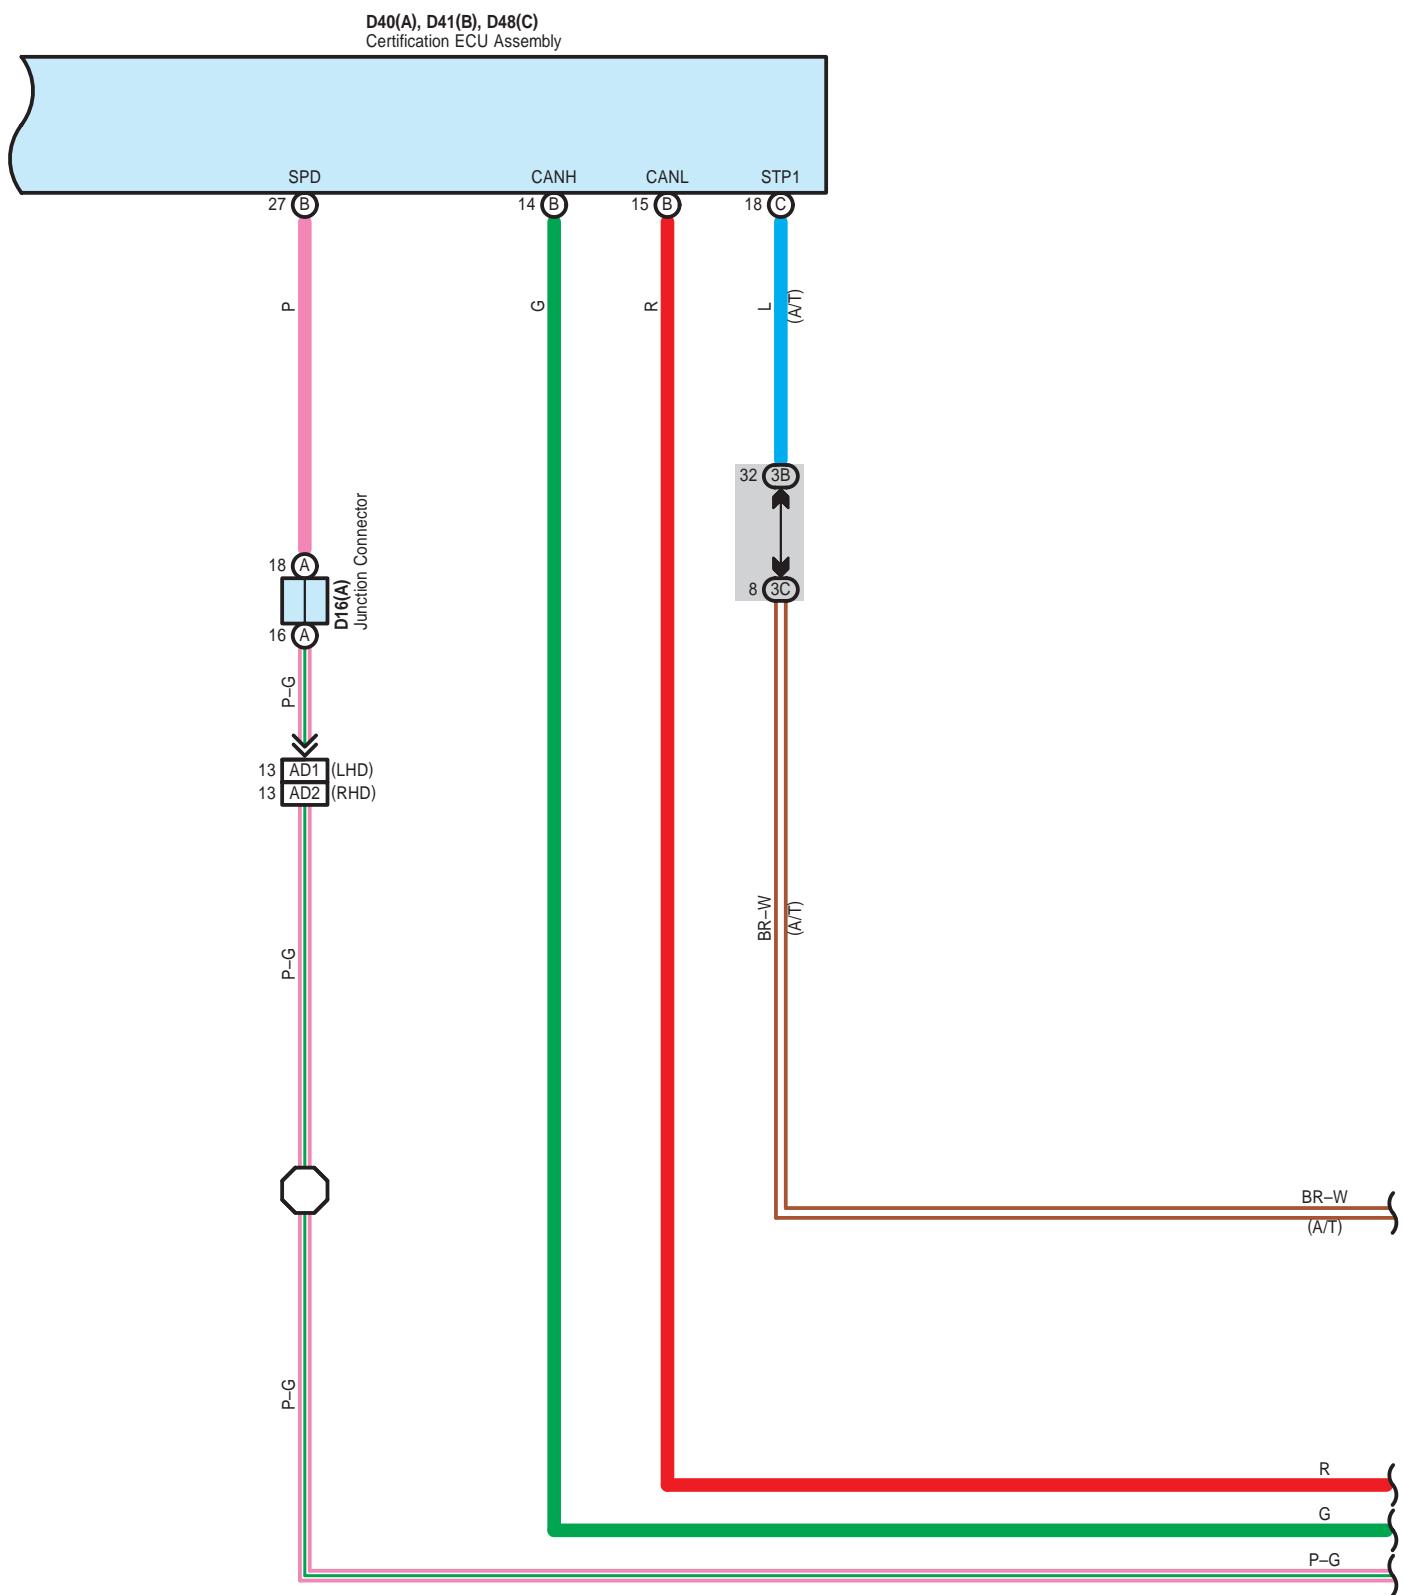


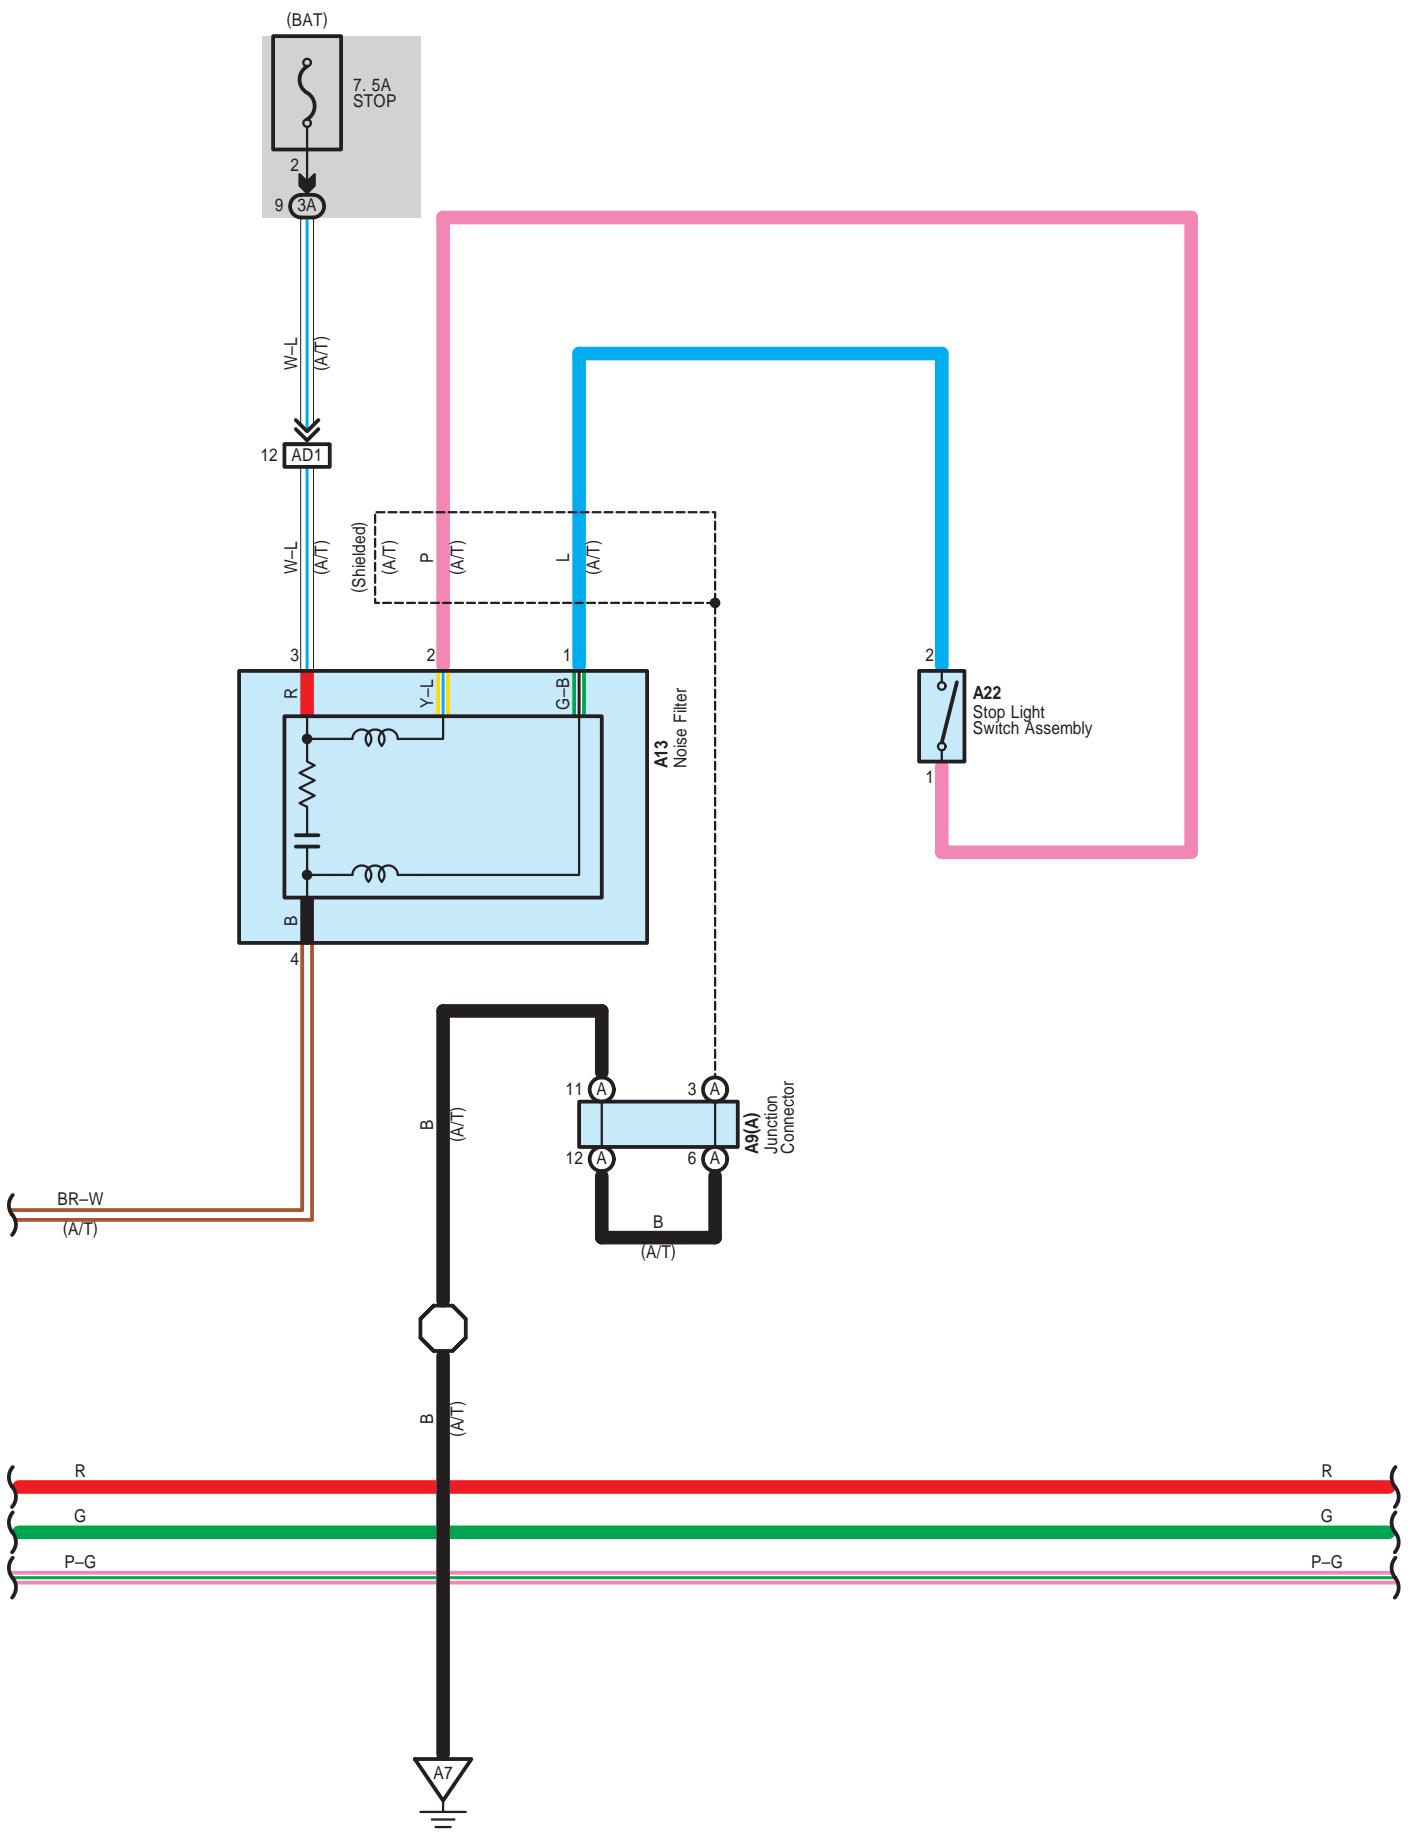


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

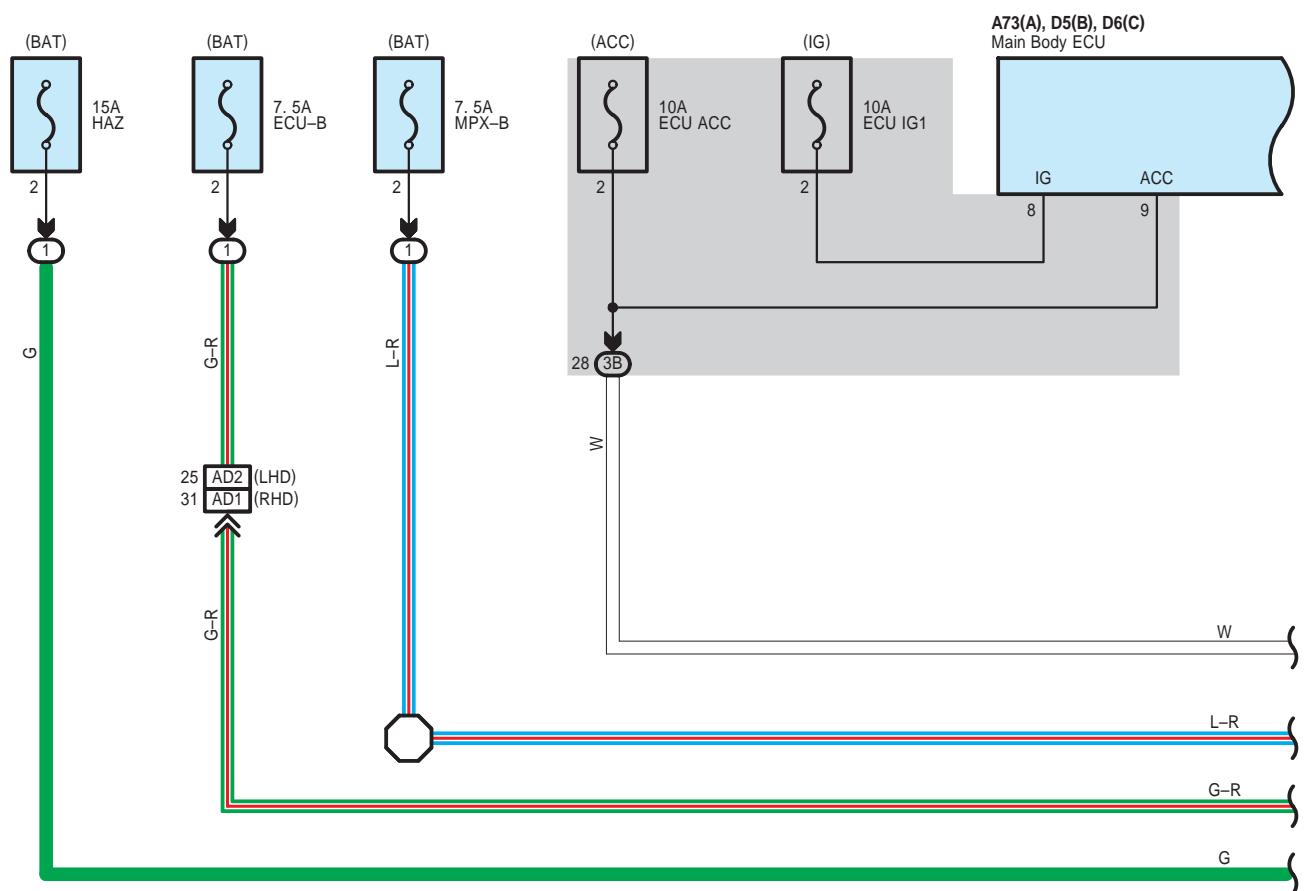


A73(A), D5(B), D6(C)
Main Body ECU

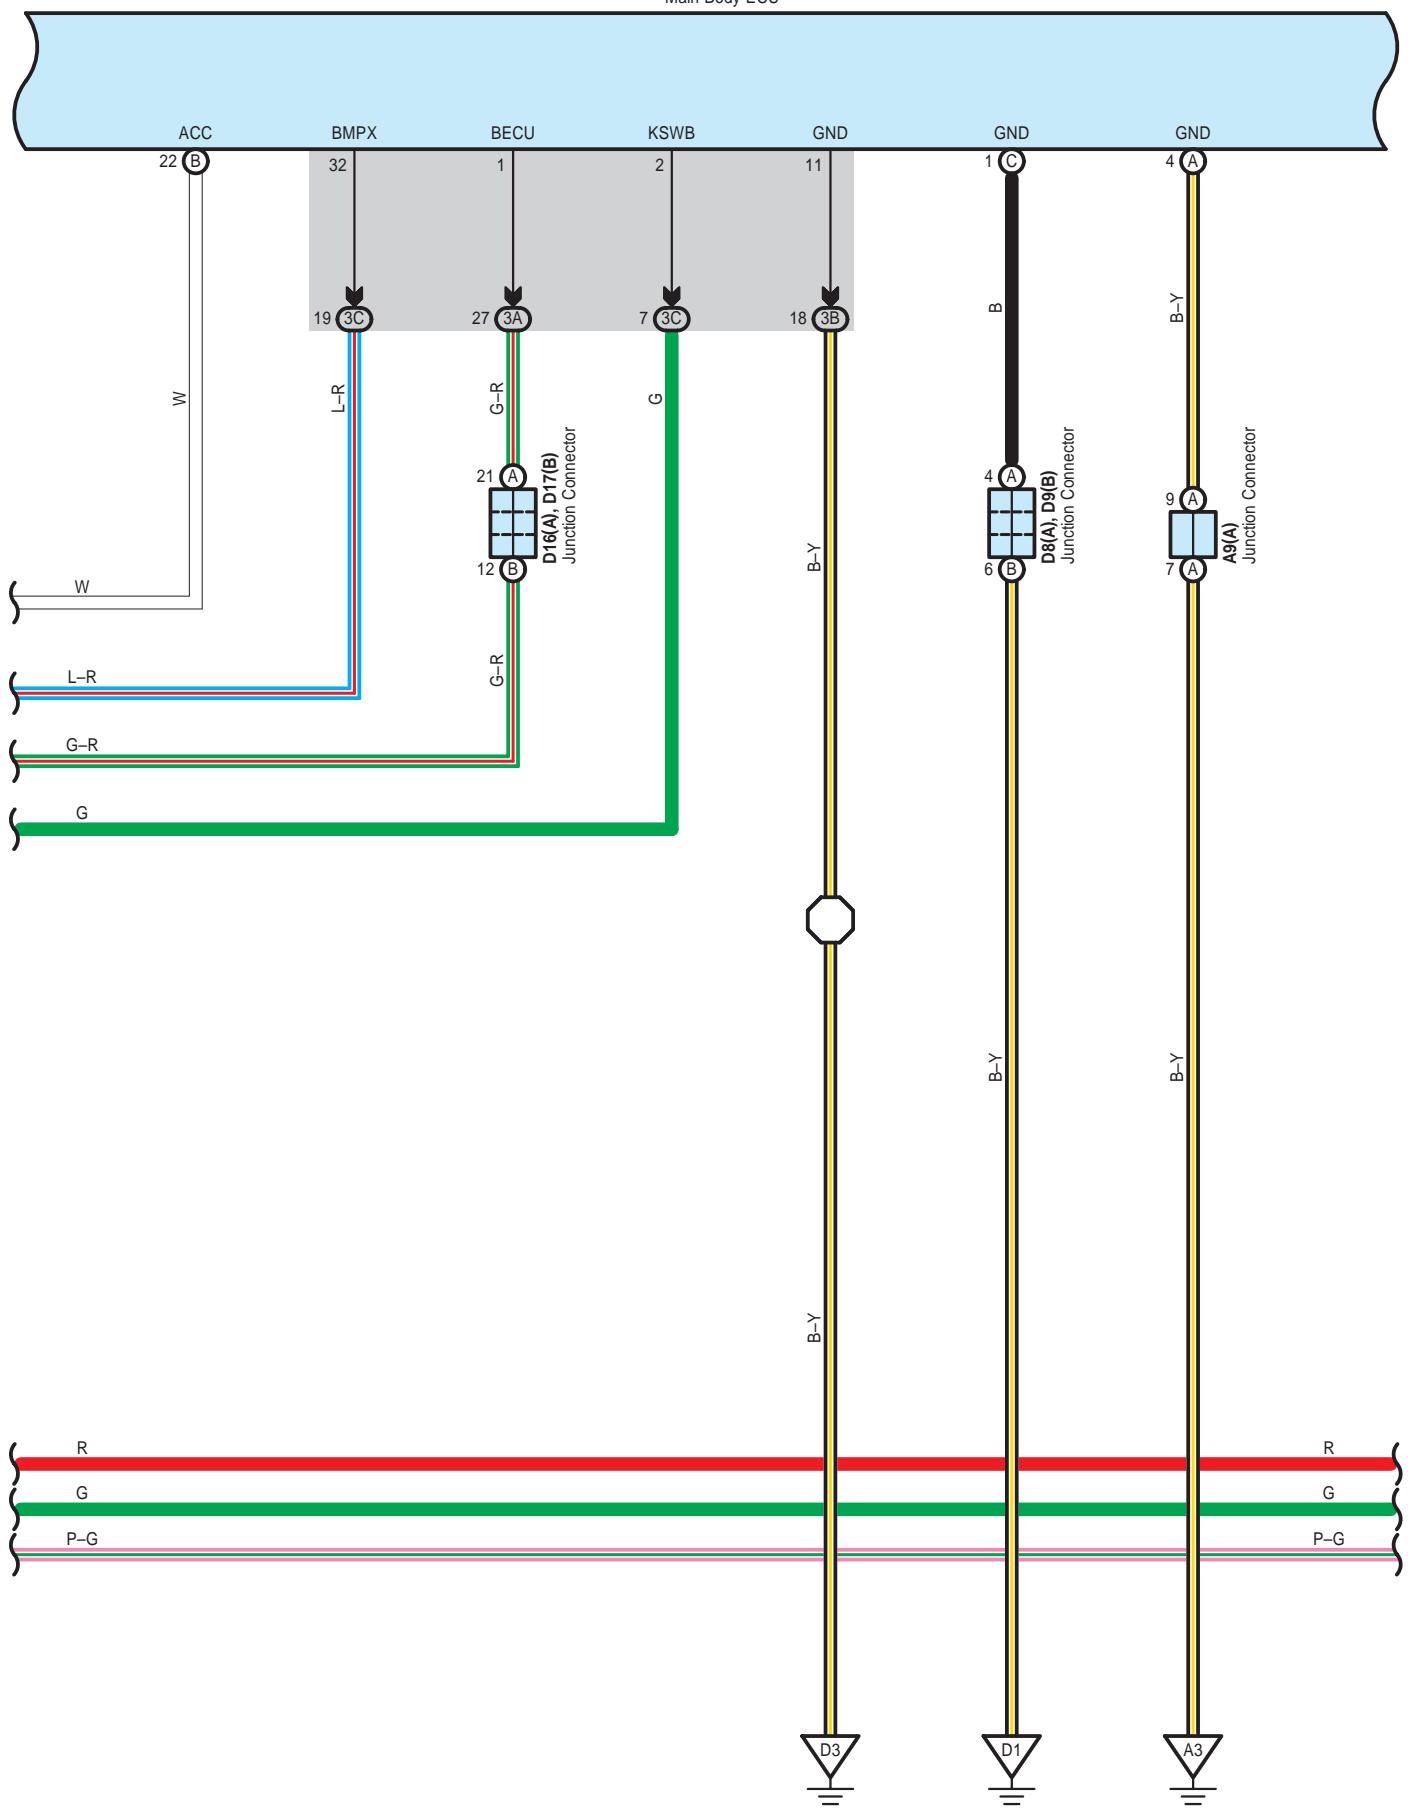


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

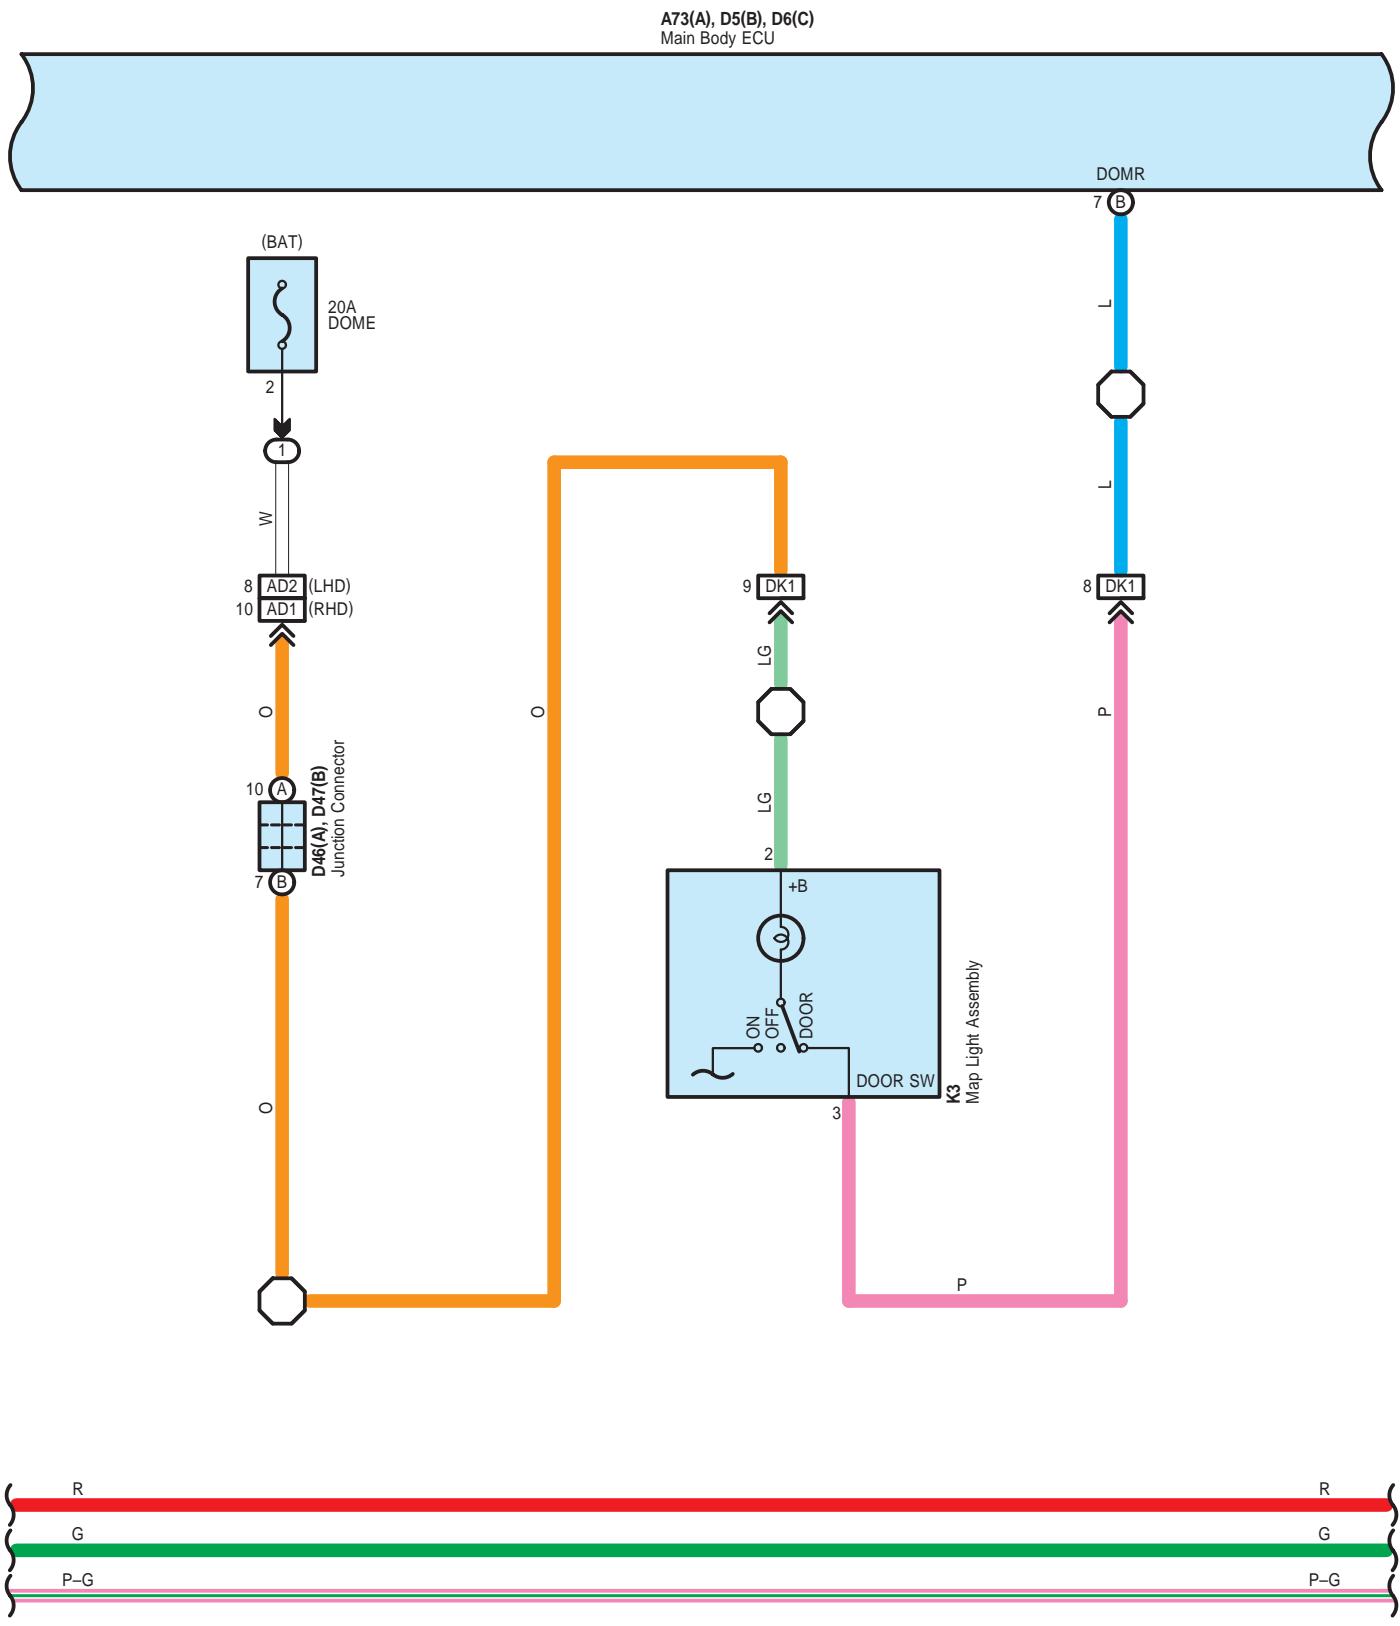


A73(A), D5(B), D6(C)
Main Body ECU

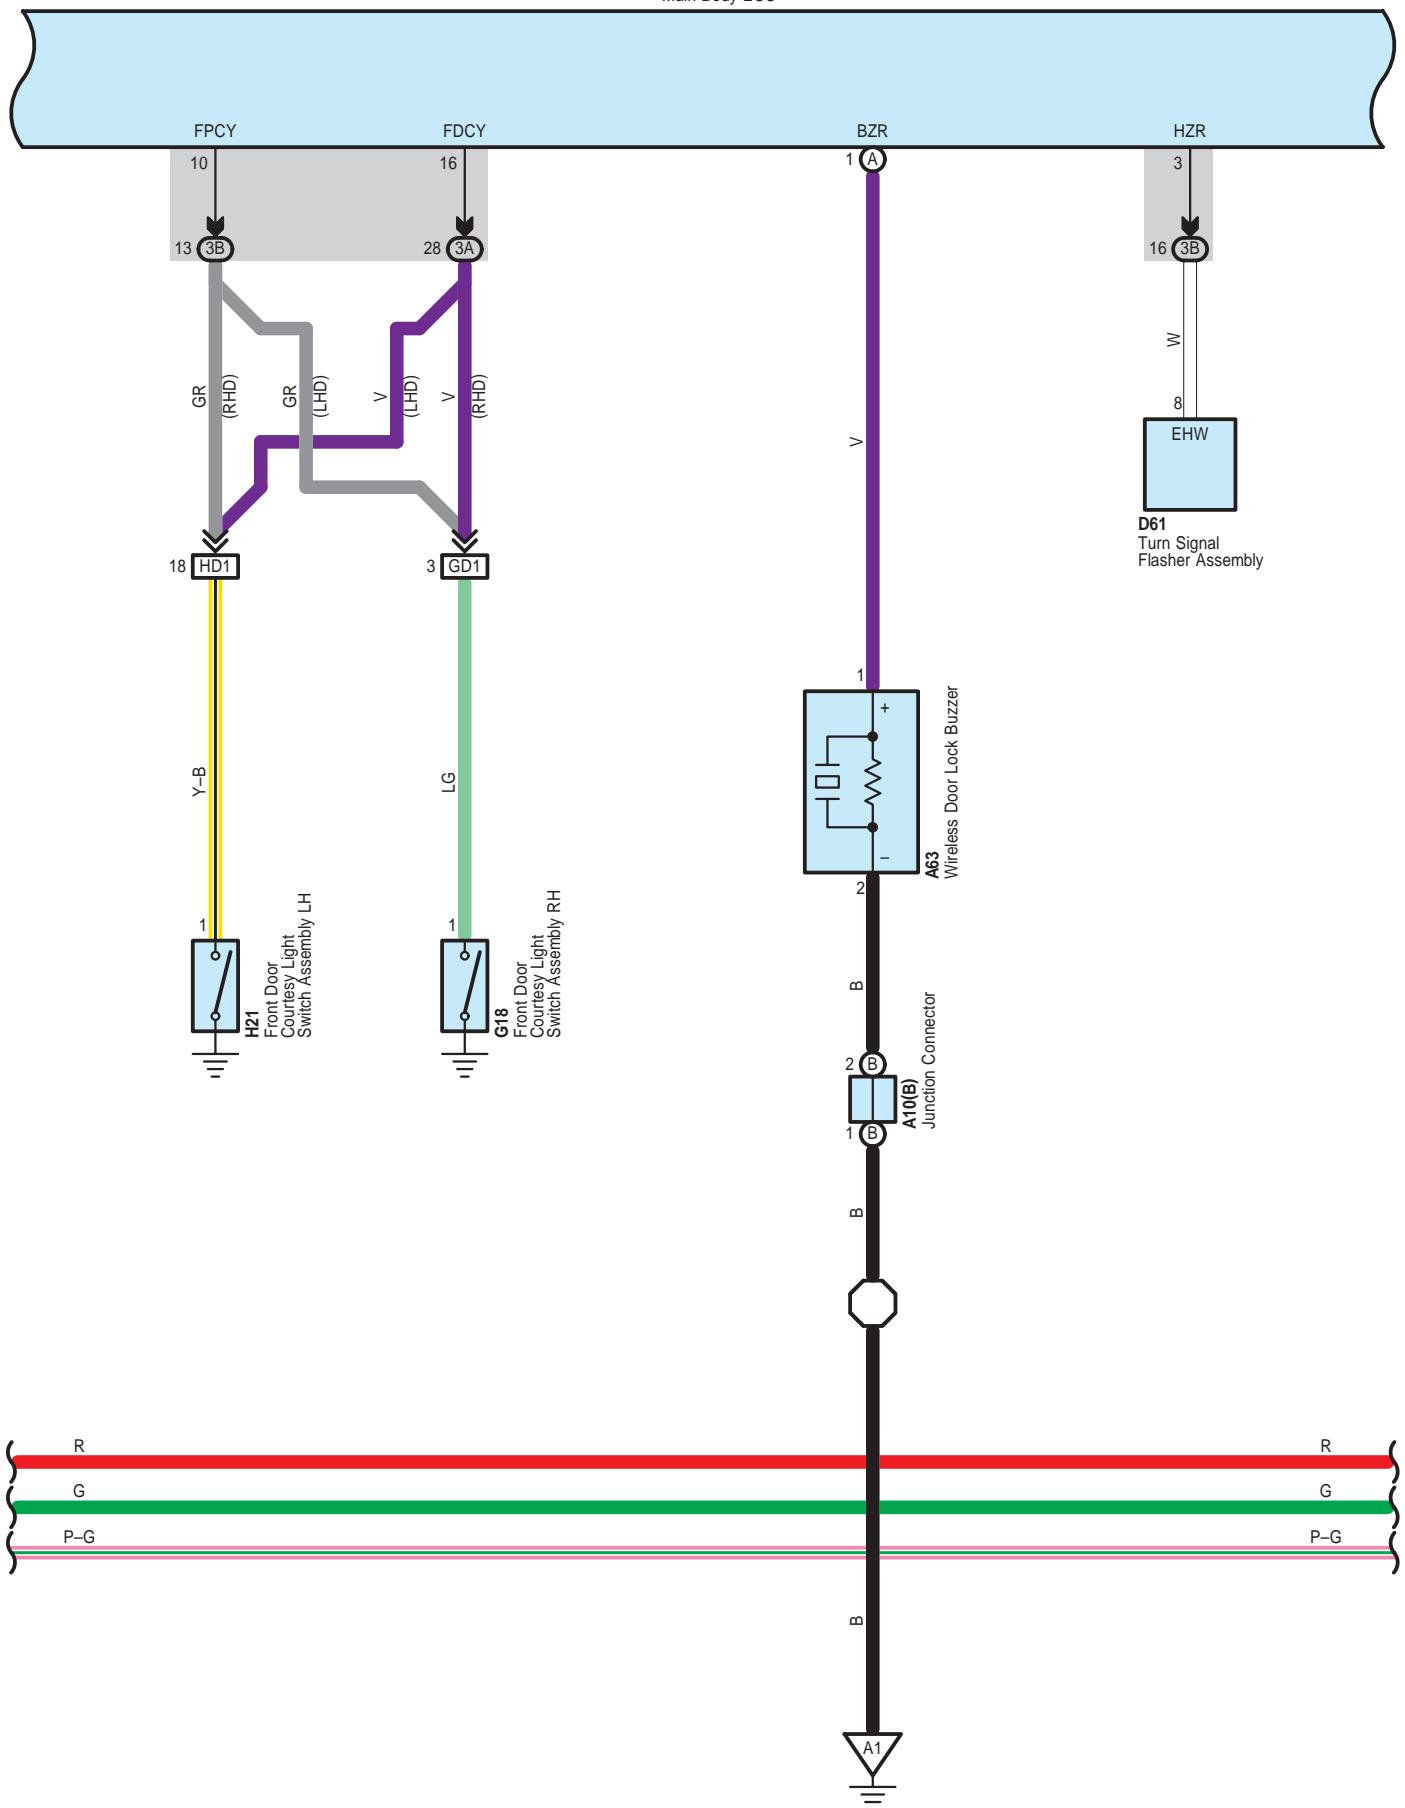


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

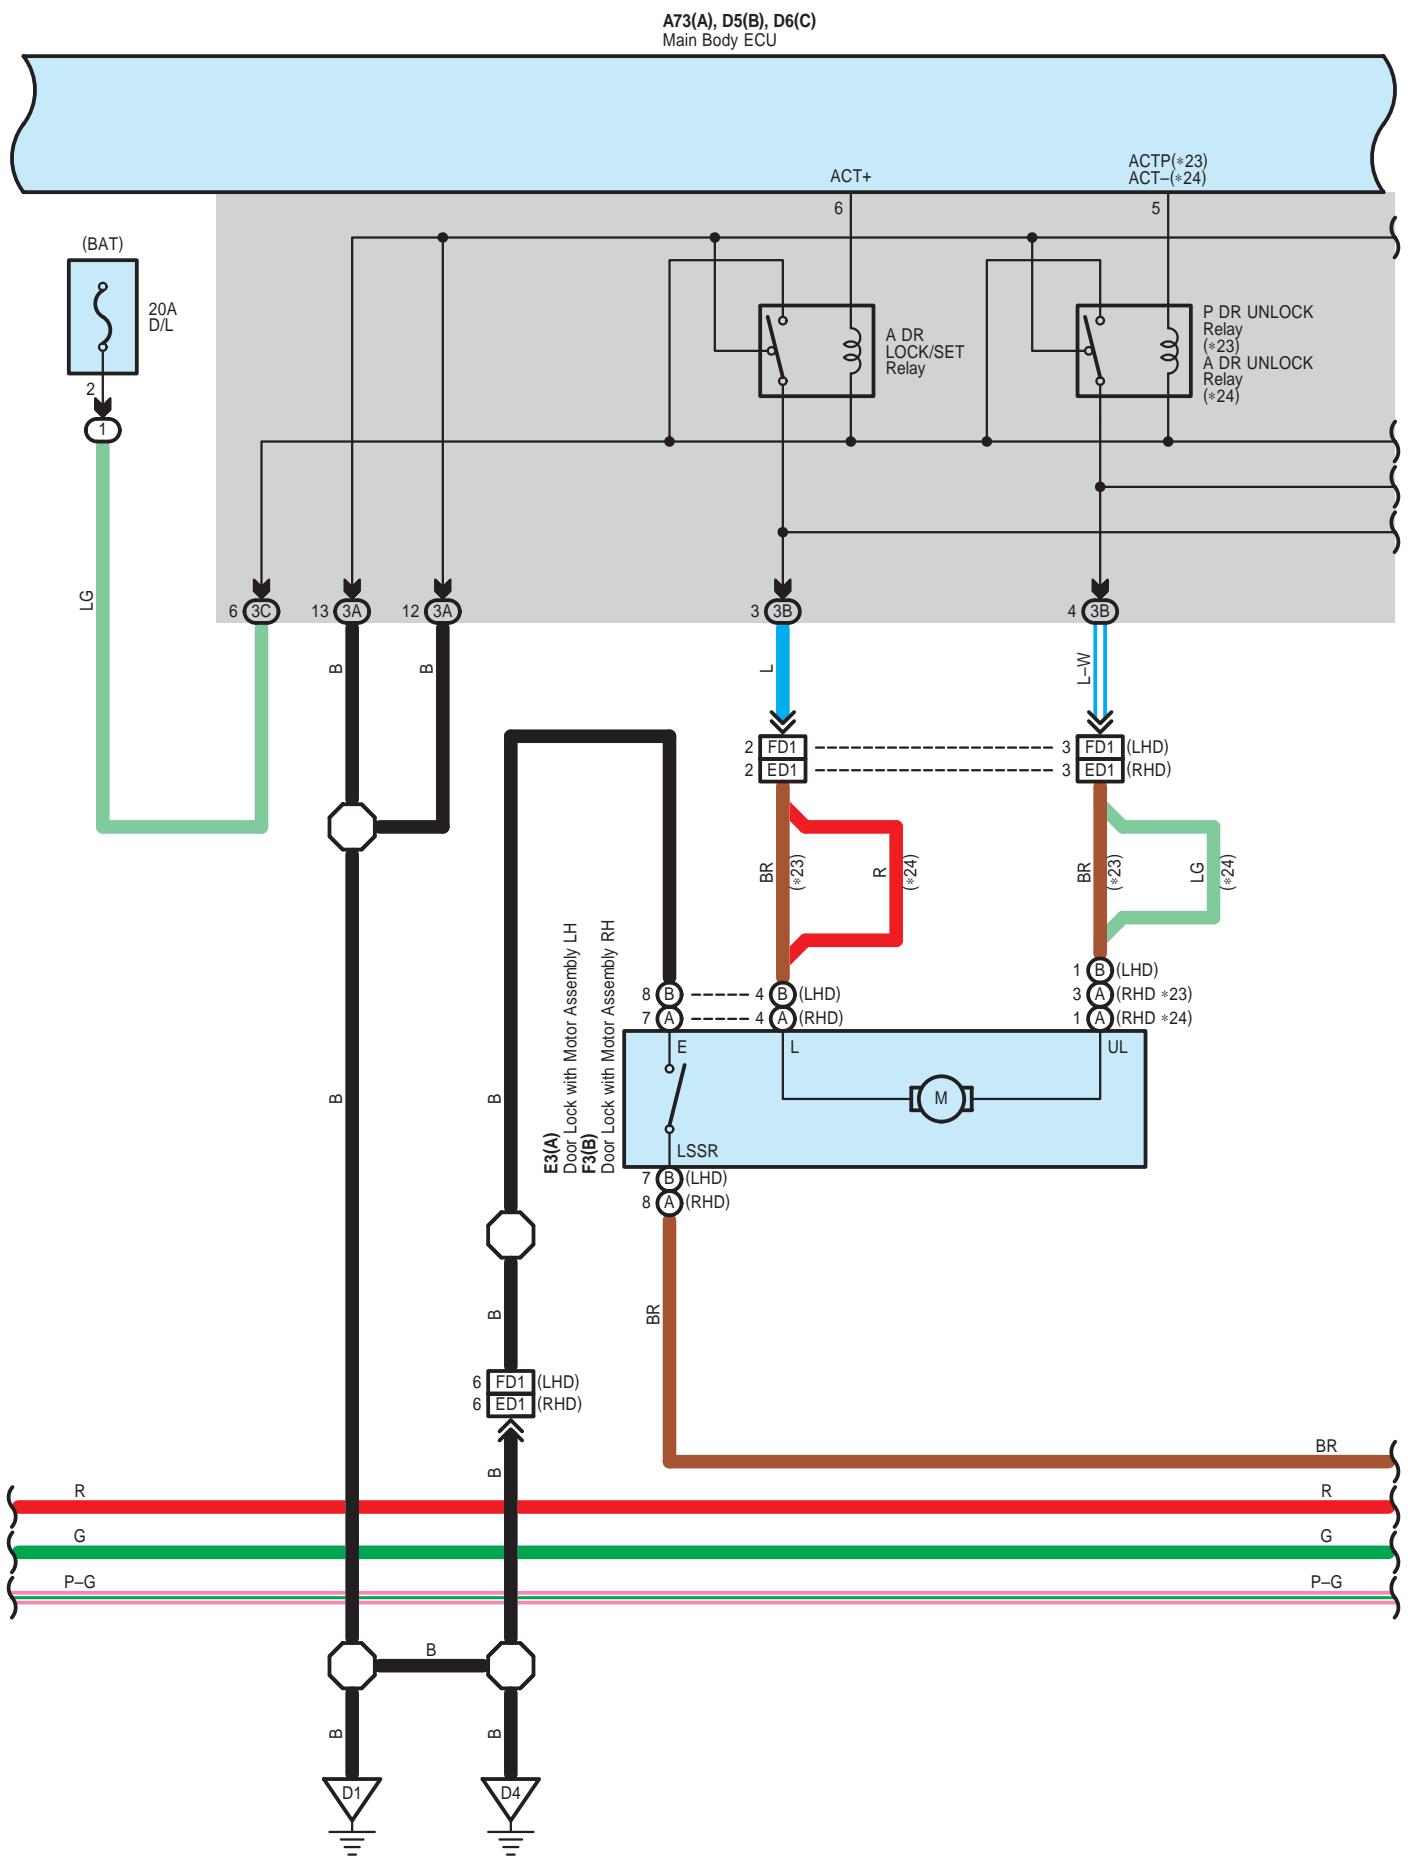


A73(A), D5(B), D6(C)
Main Body ECU

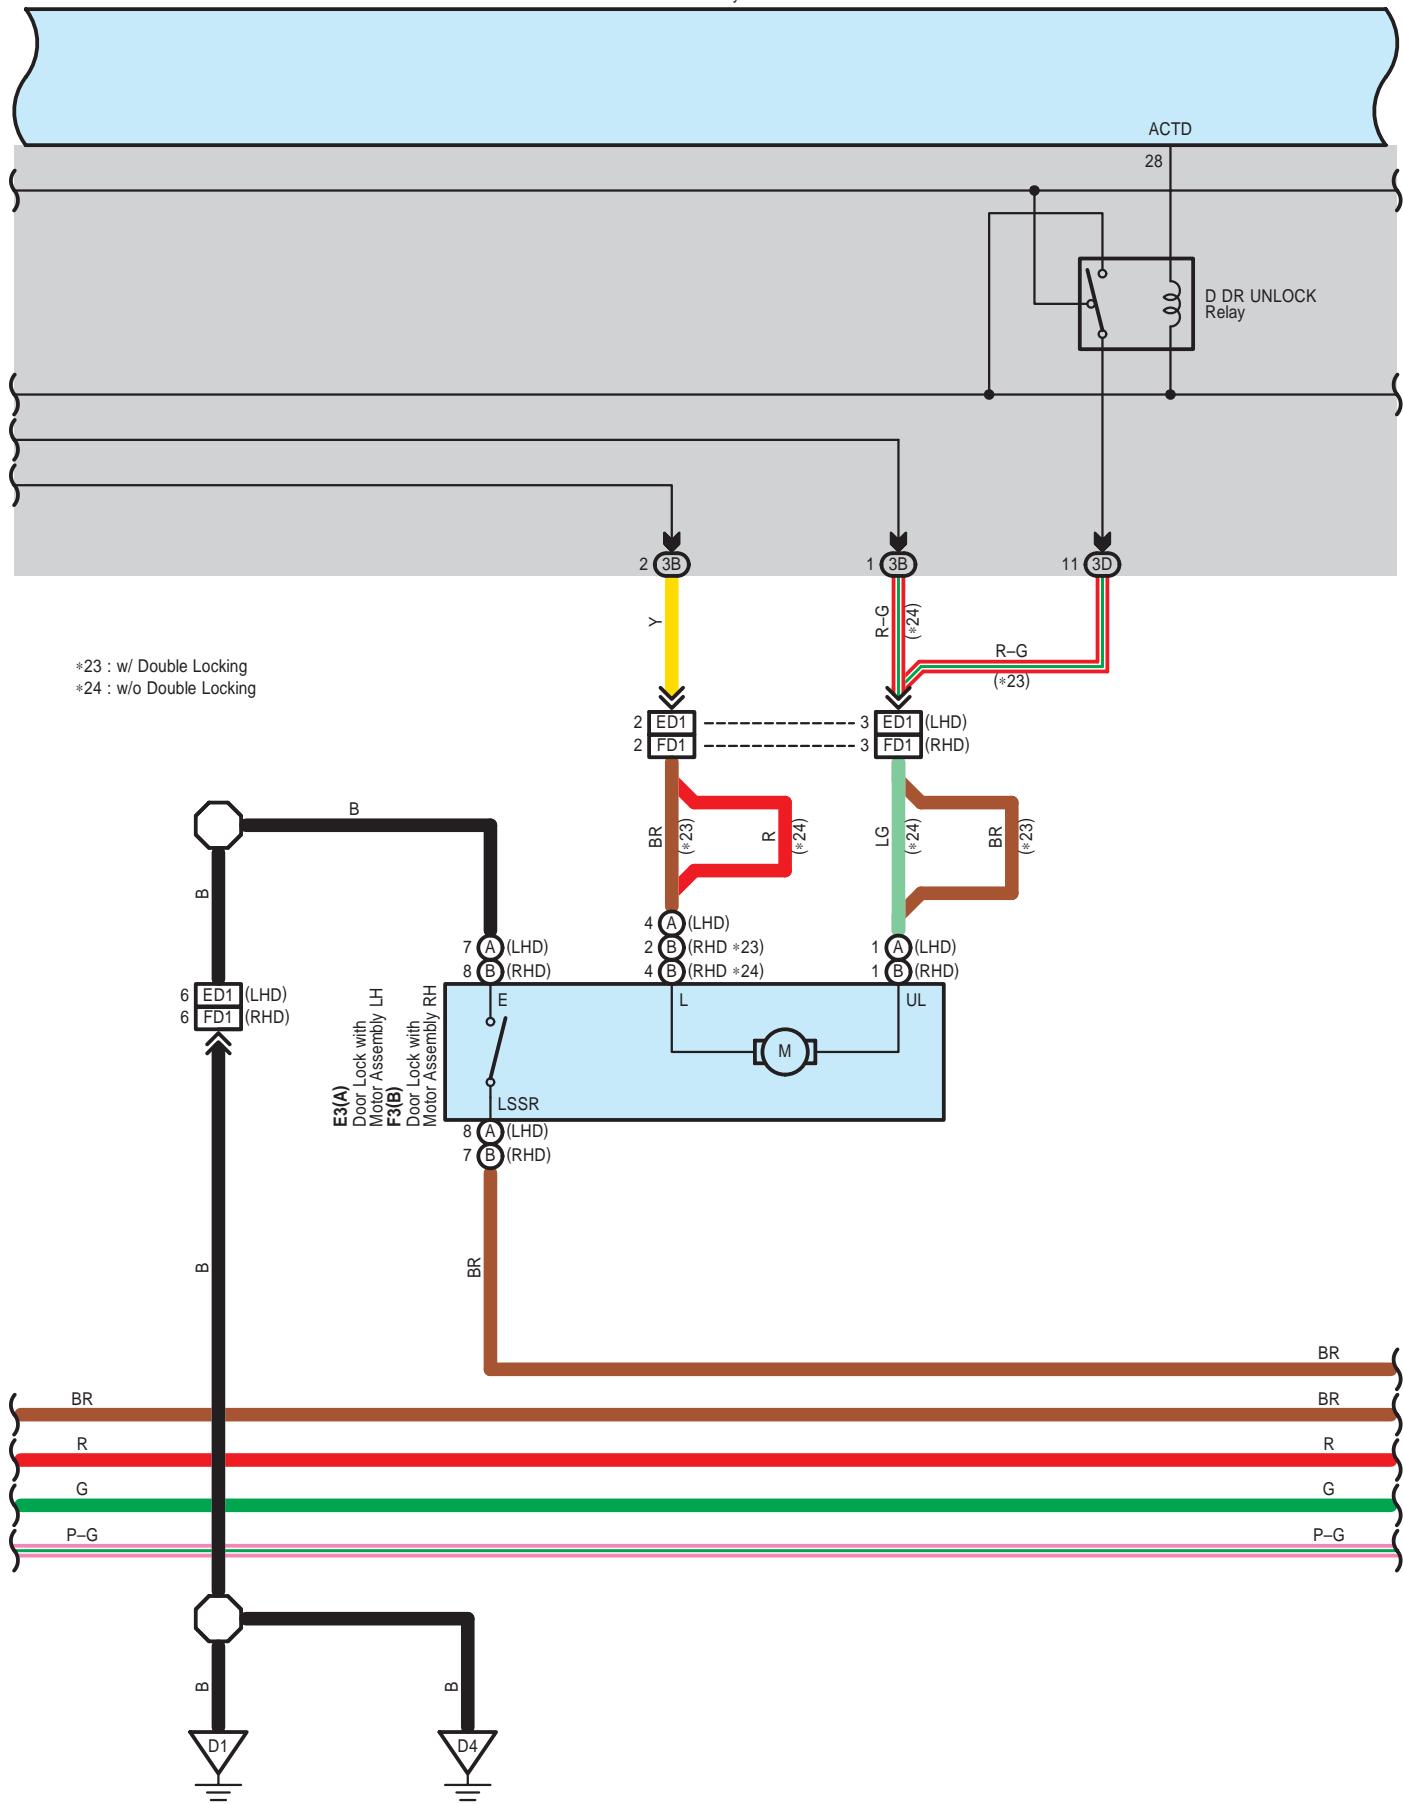


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

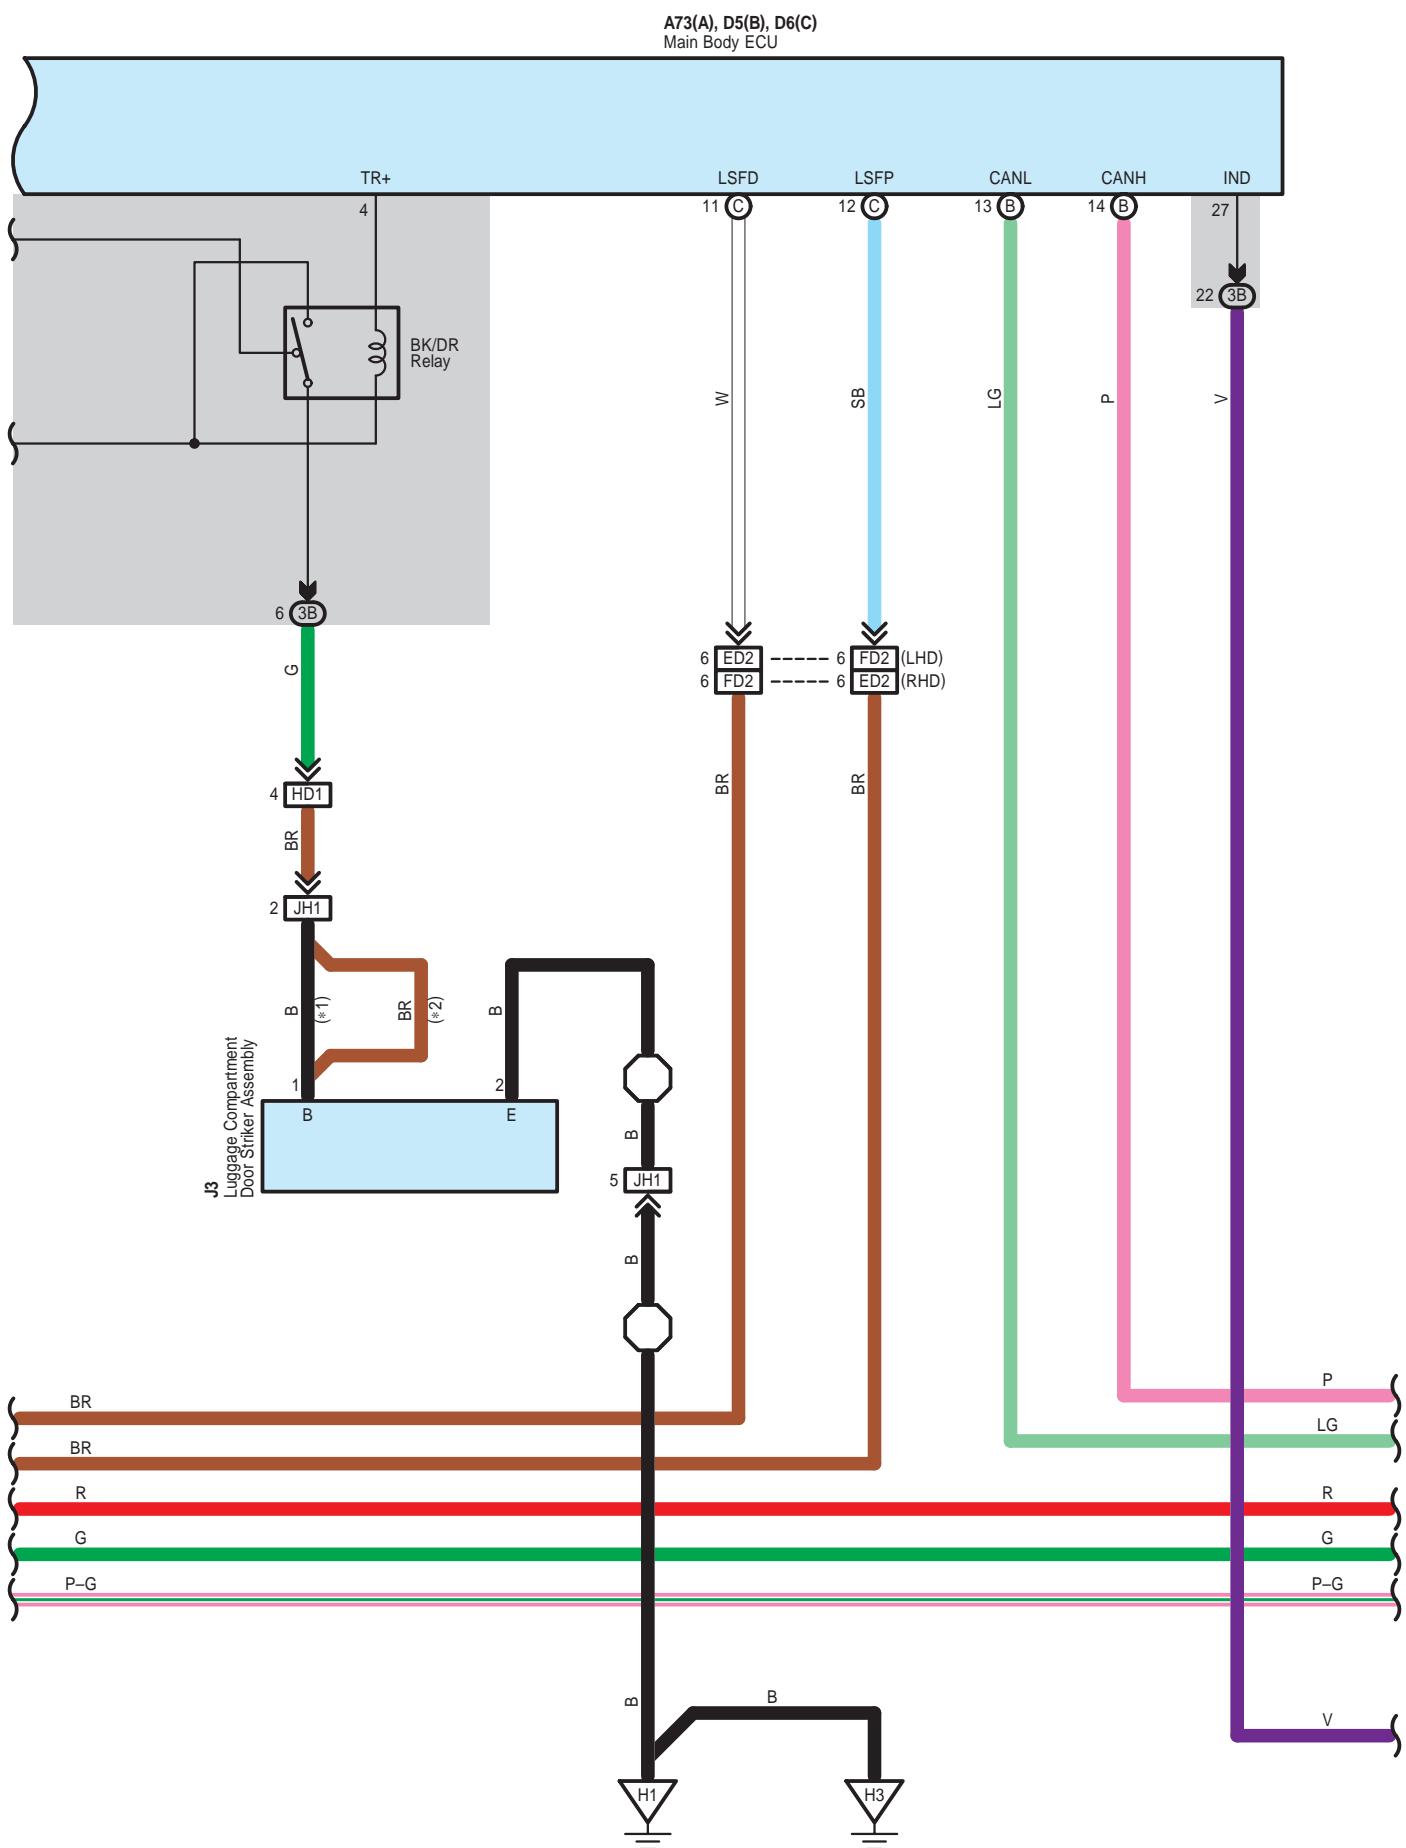


* 1 : U. K.
* 2 : Except U. K.

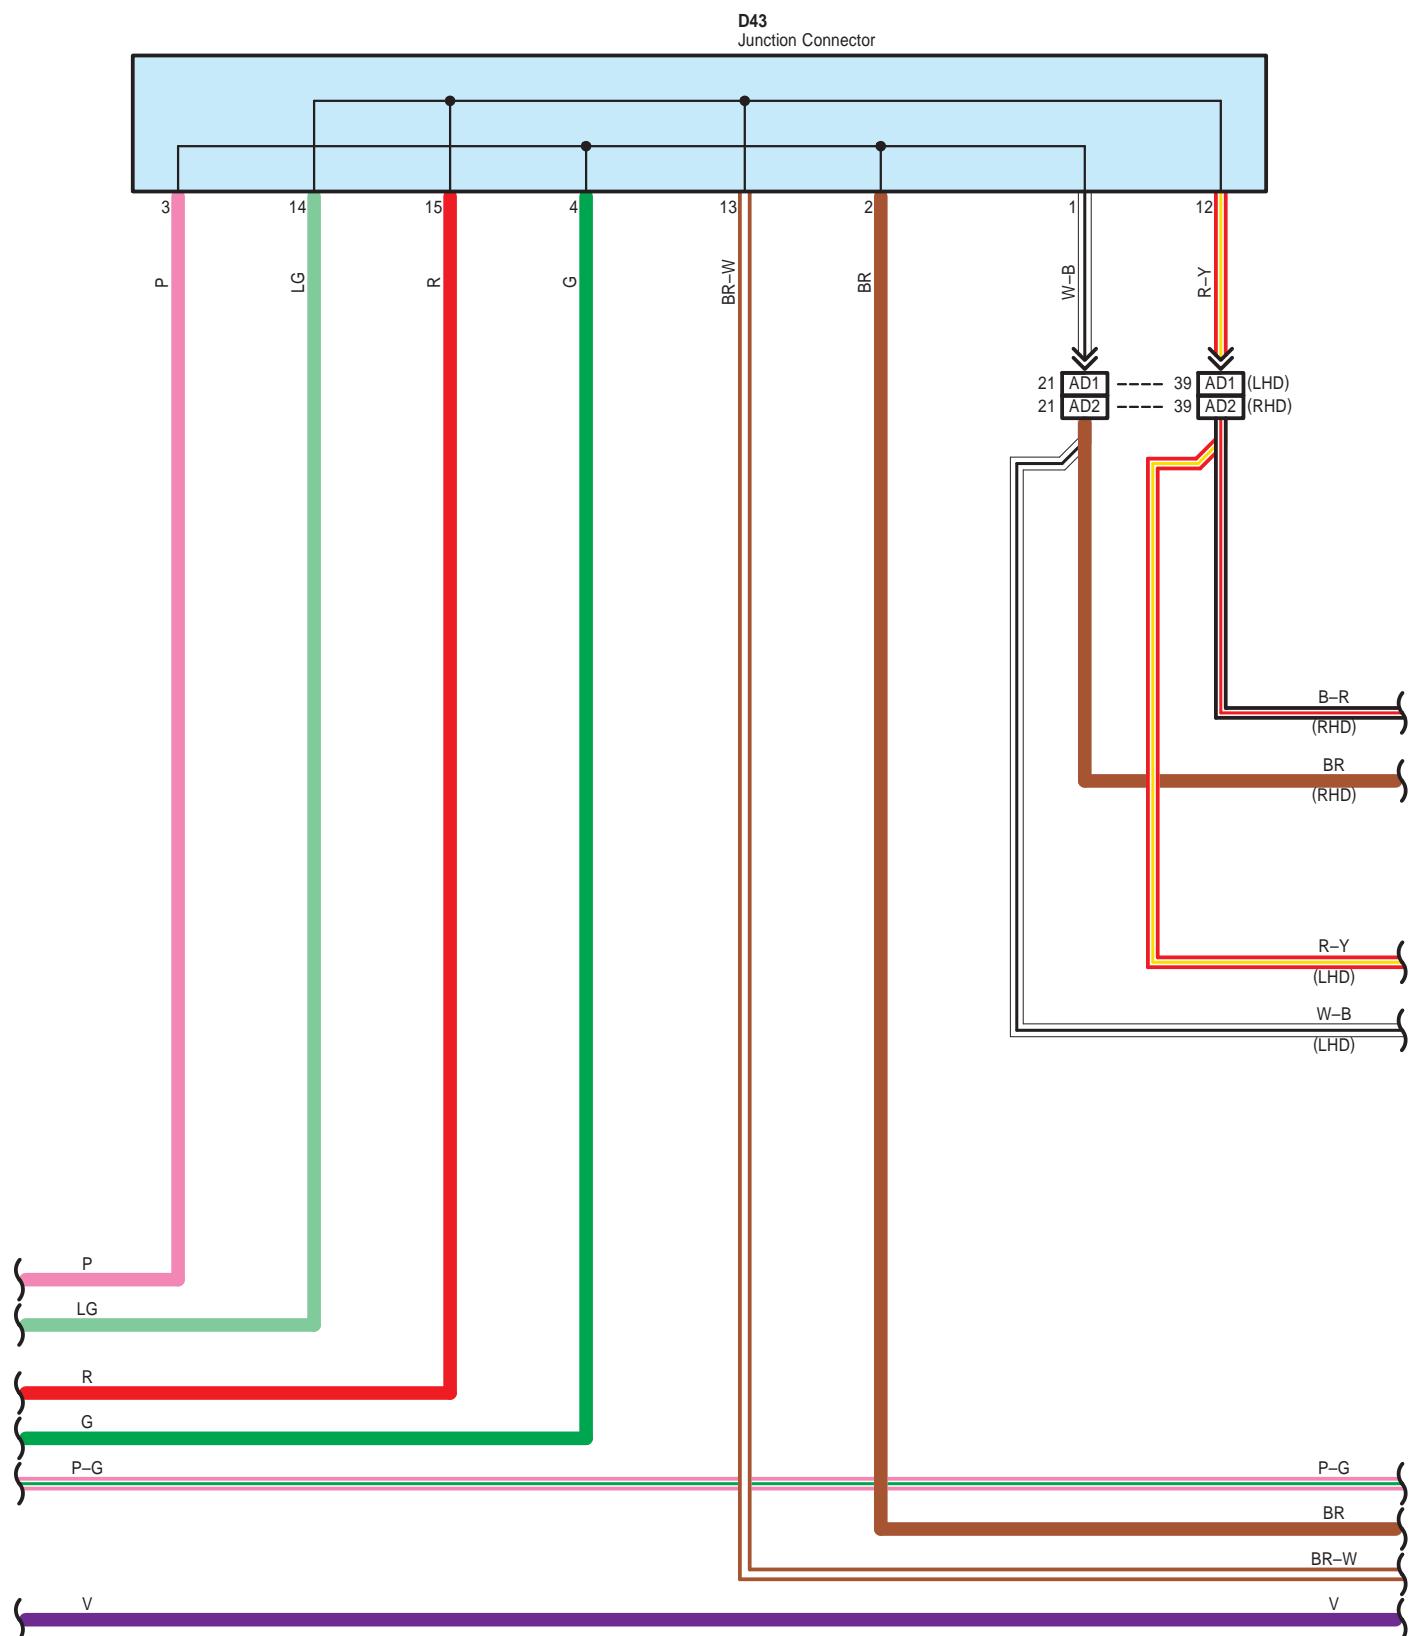


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

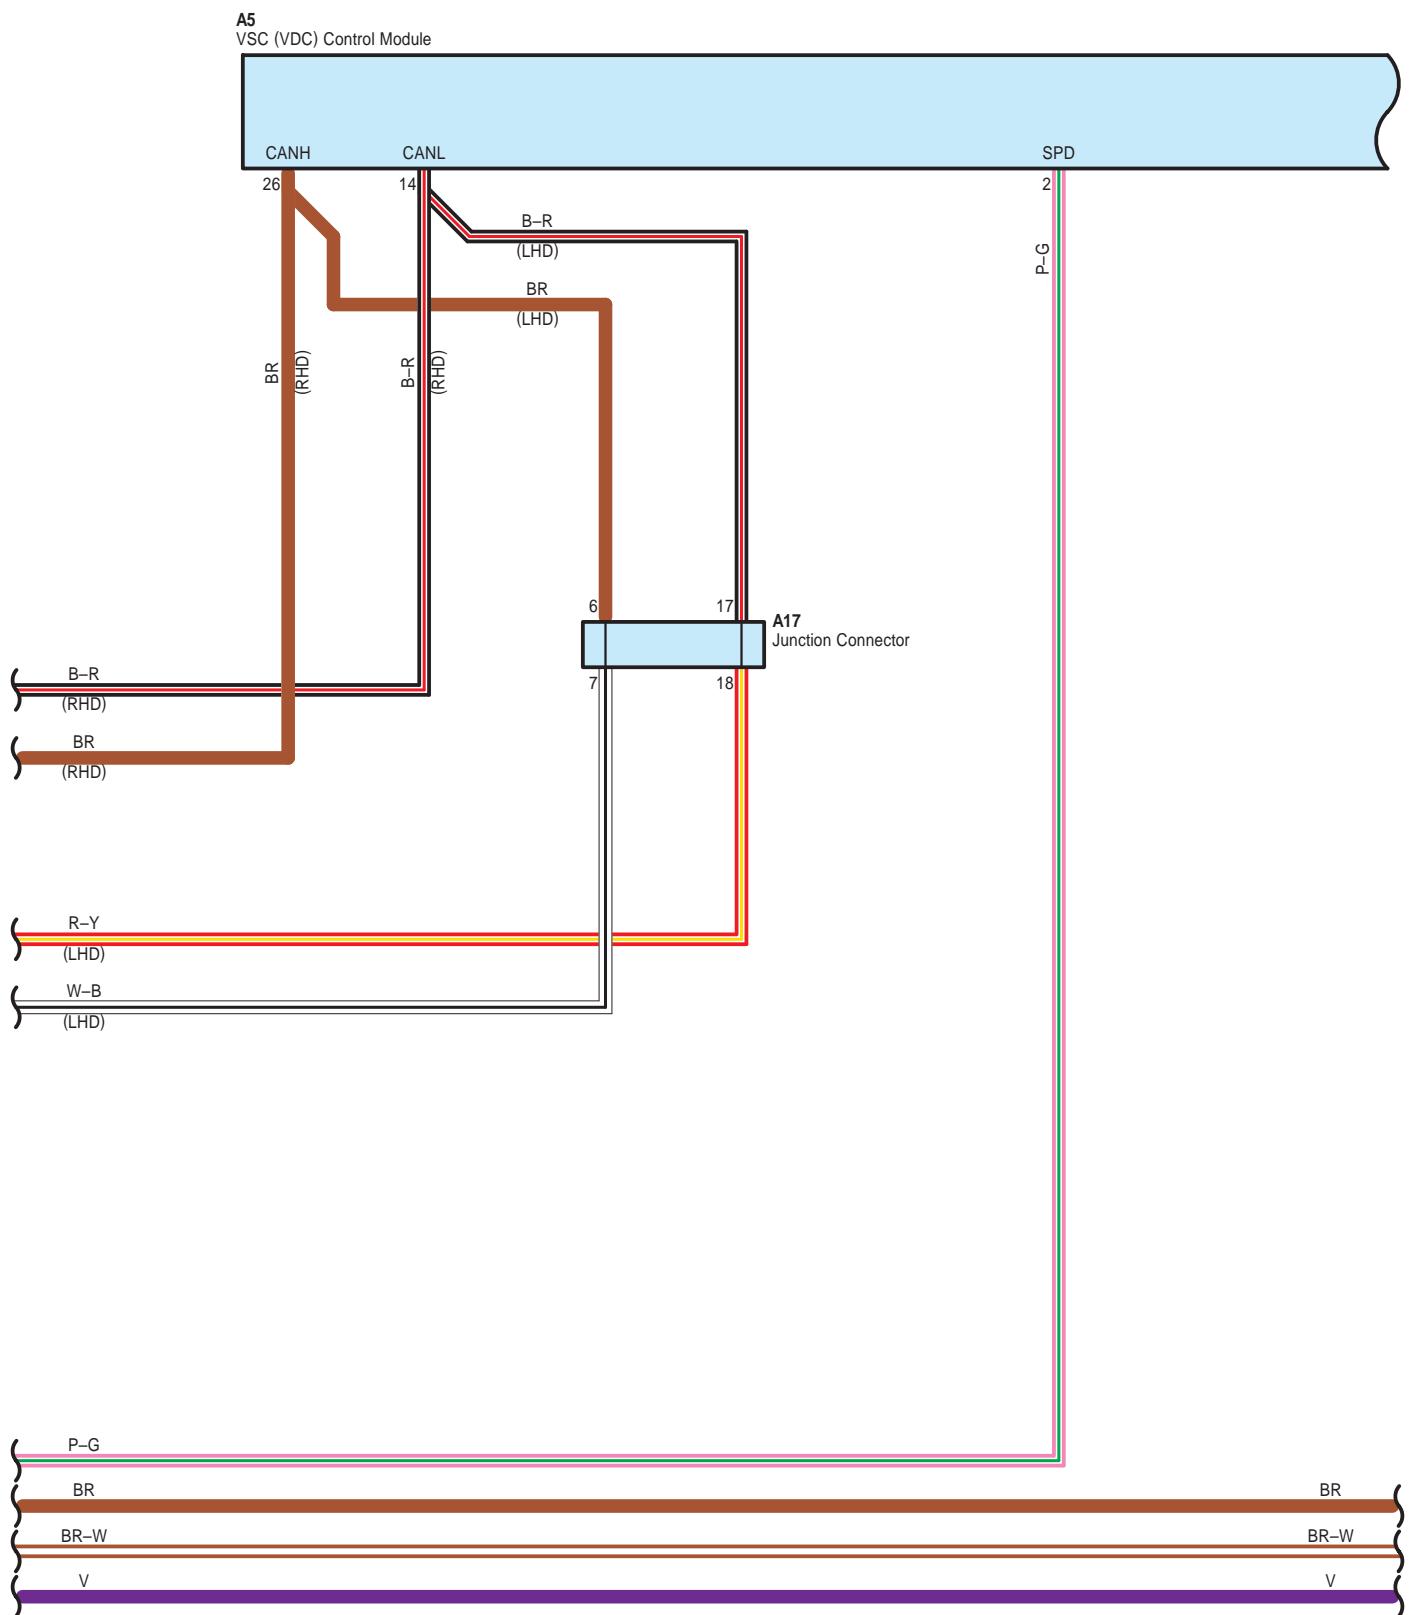

A5
VSC (VDC) Control Module

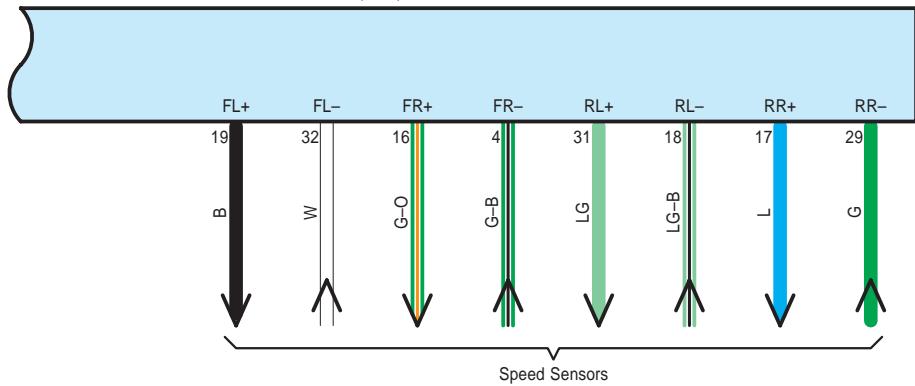

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

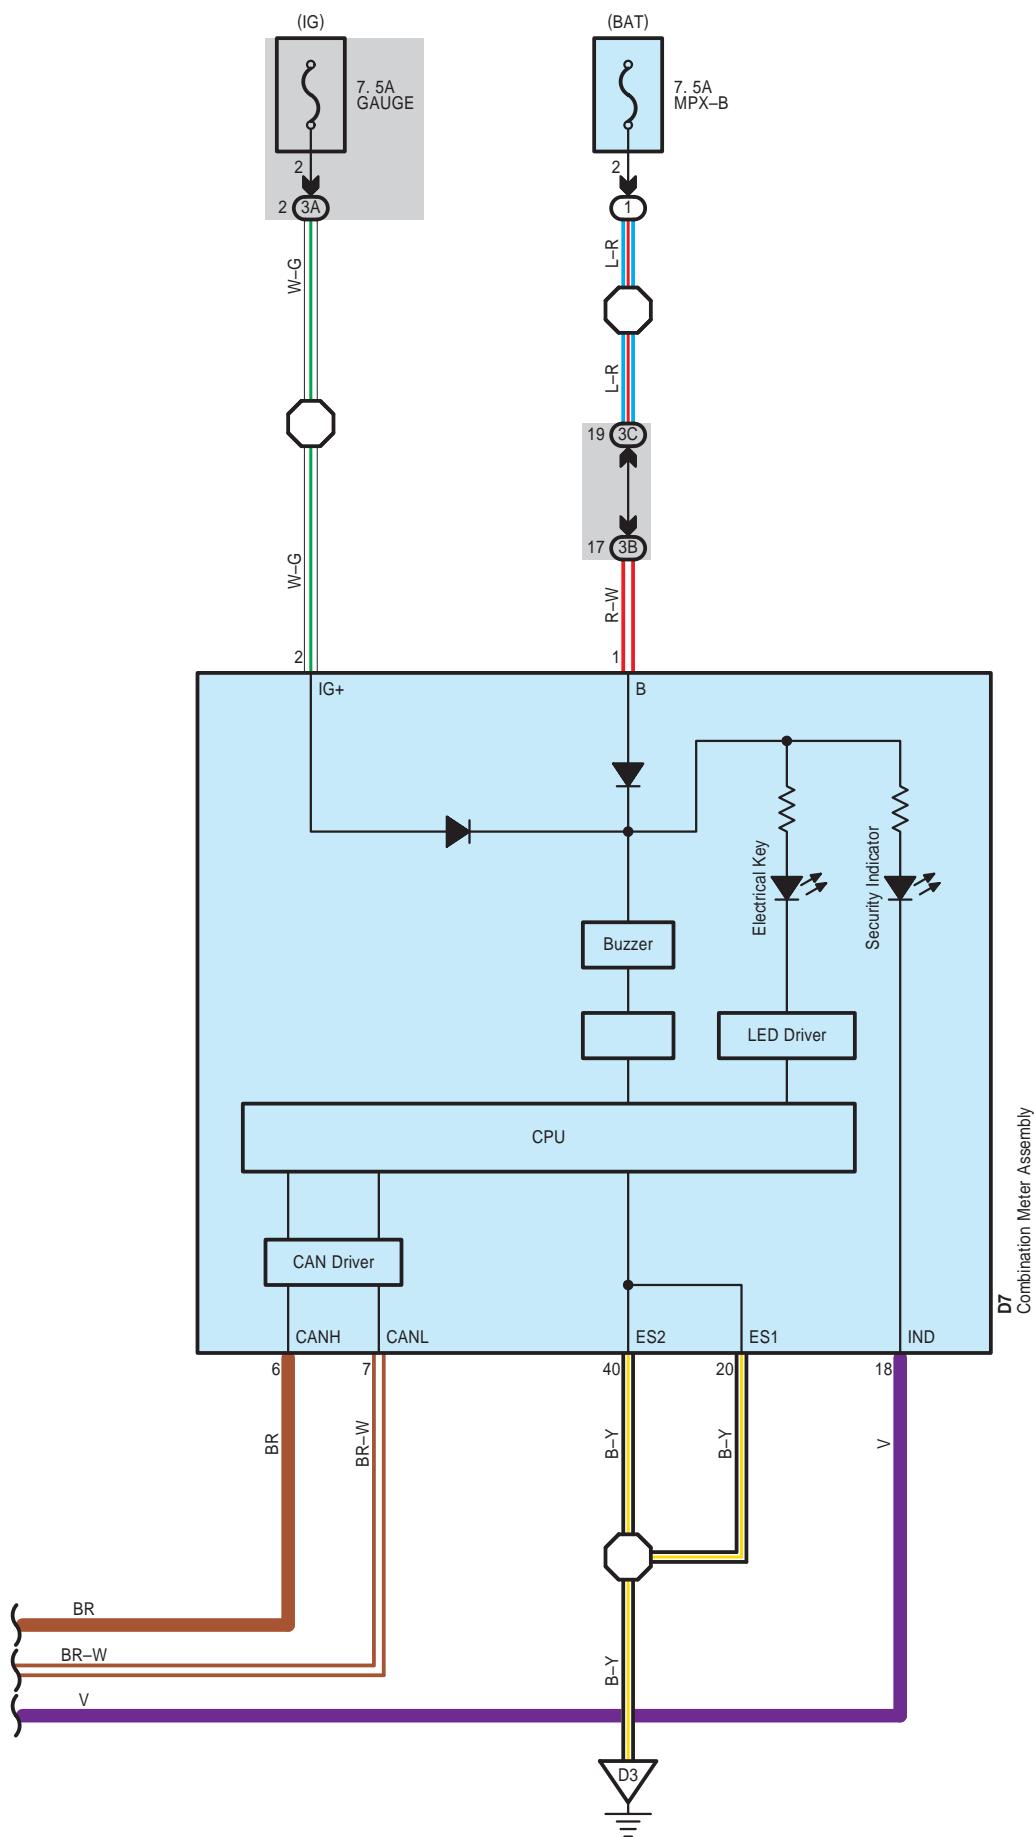

 : Parts Location

Code		See Page		Code		See Page		Code		See Page				
A5		39 (LHD)		D5	B	40 (LHD)		D59		41 (LHD)				
		47 (RHD)				48 (RHD)				49 (RHD)				
A9	A	42 (LHD)		D6	C	40 (LHD)		D61		41 (LHD)				
		50 (RHD)				48 (RHD)				49 (RHD)				
A10	B	42 (LHD)		D7		40 (LHD)		E1		44 (LHD)				
		50 (RHD)				48 (RHD)				52 (RHD)				
A13		42 (LHD)		D8	A	40 (LHD)		E3	A	44 (LHD)				
		50 (RHD)				48 (RHD)				52 (RHD)				
A17		42 (LHD)		D9	B	40 (LHD)		F3	B	44 (LHD)				
		42 (LHD)				48 (RHD)				52 (RHD)				
A20		50 (RHD)		D16	A	40 (LHD)		F5		44 (LHD)				
		42 (LHD)				48 (RHD)				52 (RHD)				
A22		50 (RHD)		D17	B	40 (LHD)		G18		44 (LHD)				
		50 (RHD)				48 (RHD)				52 (RHD)				
A30		50 (RHD)		D25		40 (LHD)		H3		45 (LHD)				
		42 (LHD)				48 (RHD)				53 (RHD)				
A33	A	42 (LHD)		D26		40 (LHD)		H9		45 (LHD)				
		50 (RHD)				48 (RHD)				53 (RHD)				
A37		42 (LHD)		D28		40 (LHD)		H15		45 (LHD)				
		50 (RHD)				48 (RHD)				53 (RHD)				
A54		39 (LHD)		D40	A	41 (LHD)		H21		45 (LHD)				
		47 (RHD)				49 (RHD)				53 (RHD)				
A63		39 (LHD)		D41	B	41 (LHD)		H26		45 (LHD)				
		47 (RHD)				49 (RHD)				53 (RHD)				
A66	A	50 (RHD)		D43		41 (LHD)		J2		45 (LHD)				
A72	B	50 (RHD)				49 (RHD)				53 (RHD)				
A73	A	42 (LHD)		D46	A	41 (LHD)		J3		45 (LHD)				
		50 (RHD)				49 (RHD)				53 (RHD)				
B1	A	39 (LHD)		D47	B	41 (LHD)		K3		45 (LHD)				
		47 (RHD)				49 (RHD)				53 (RHD)				
B2	B	39 (LHD)		D48	C	41 (LHD)		L2		39 (LHD)				
		47 (RHD)				49 (RHD)				47 (RHD)				

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AB1	54 (LHD) 58 (RHD)	Engine Room Main Wire and No. 2 Engine Room Wire (Engine Unit)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
AL2	54 (LHD) 58 (RHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)
DK1	55 (LHD) 59 (RHD)	Instrument Panel Wire and Roof Wire (Front Body Inner Pillar RH)

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)


: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
ED2	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
FD1	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
FD2	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
GD1	55 (LHD)	Luggage Room Wire and No. 2 Floor Wire (Quarter Panel LH)
	59 (RHD)	
HD1	55 (LHD)	Front Fender Apron LH
	59 (RHD)	
JH1	56 (LHD)	Cowl Side Panel RH
	60 (RHD)	

: Ground Points

Code	See Page	Ground Points Location
A1	54 (LHD)	Front Fender Apron LH
	58 (RHD)	
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
H1	56 (LHD)	Lower Back Panel
	60 (RHD)	
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	


Starting (w/o Entry & Start System)

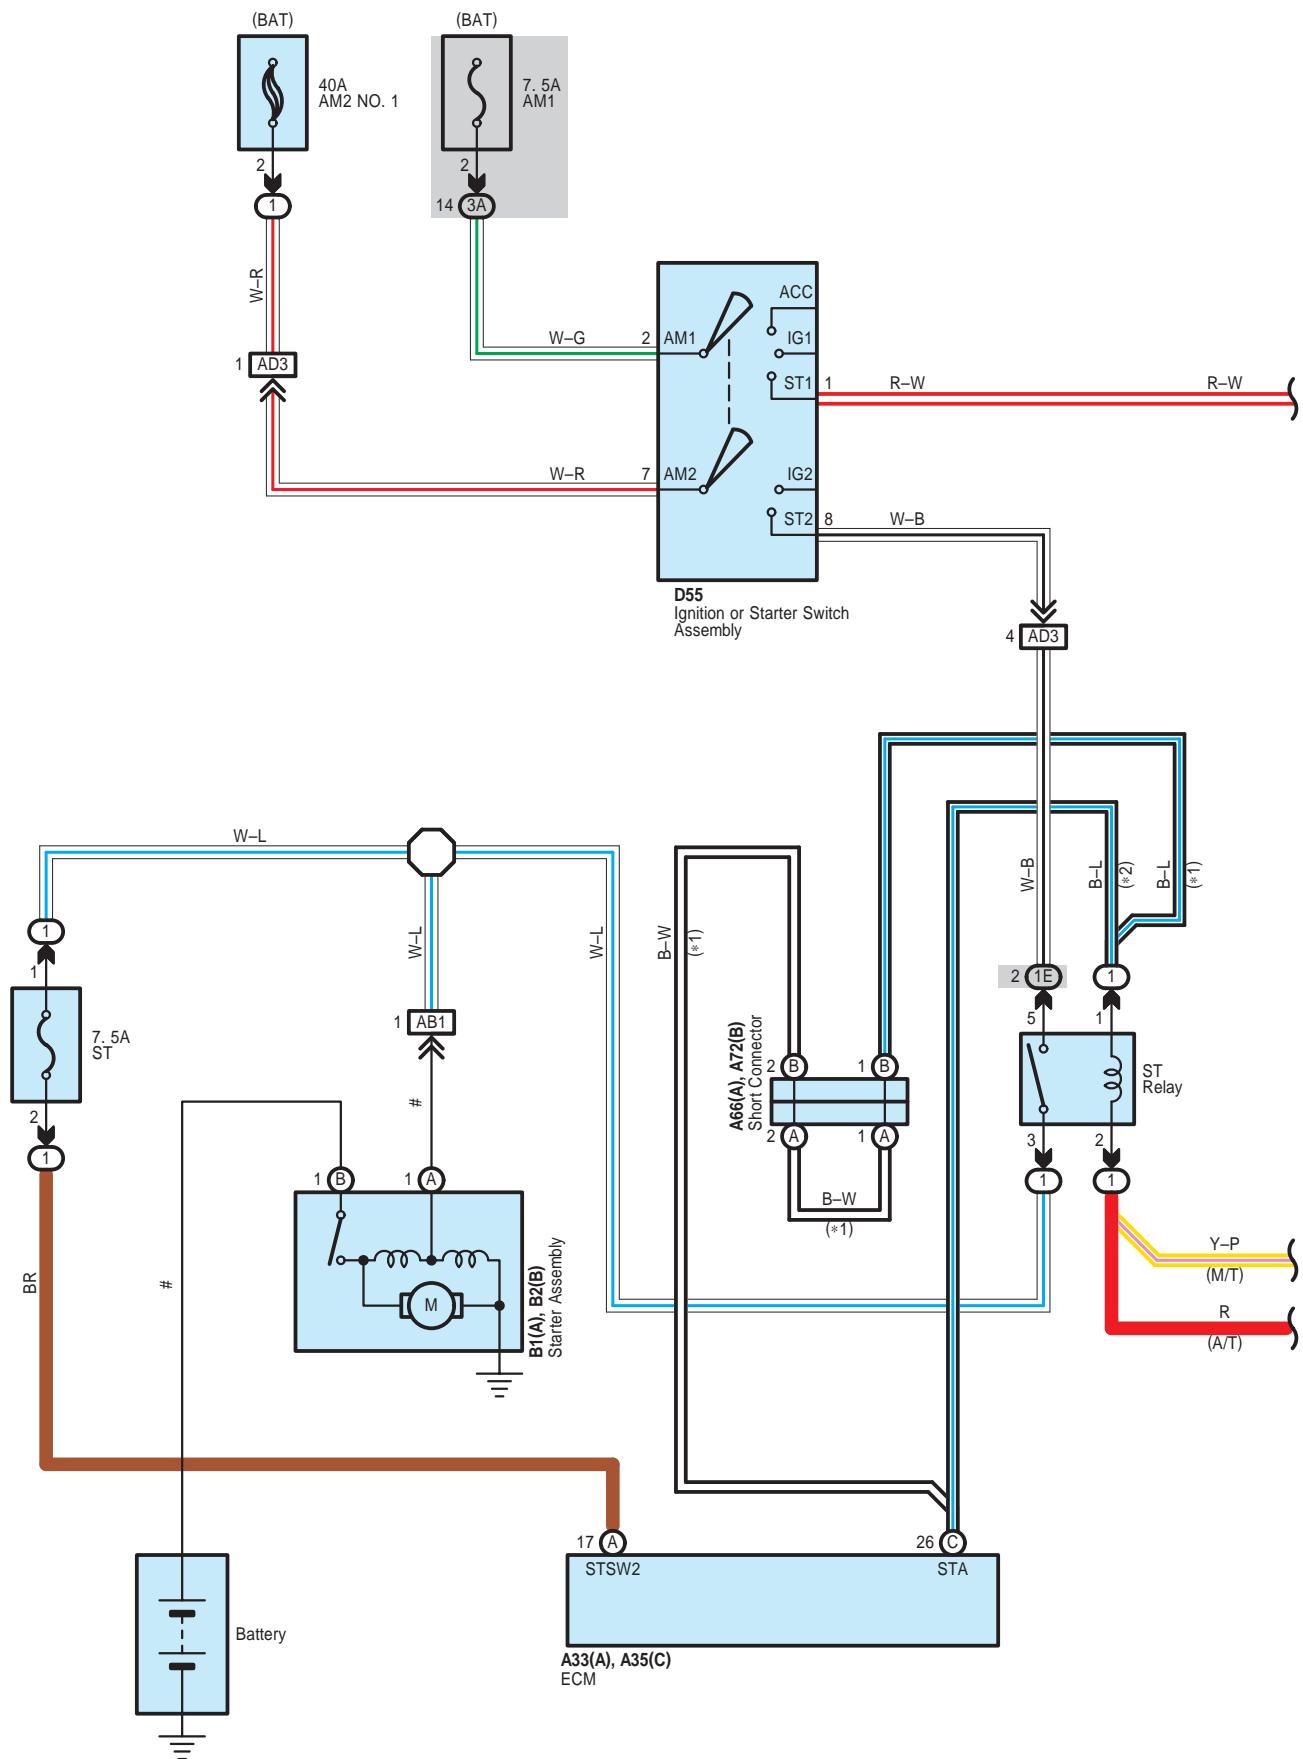

: There is no wire color information.

* 1 : U. K.

* 2 : Except U. K.

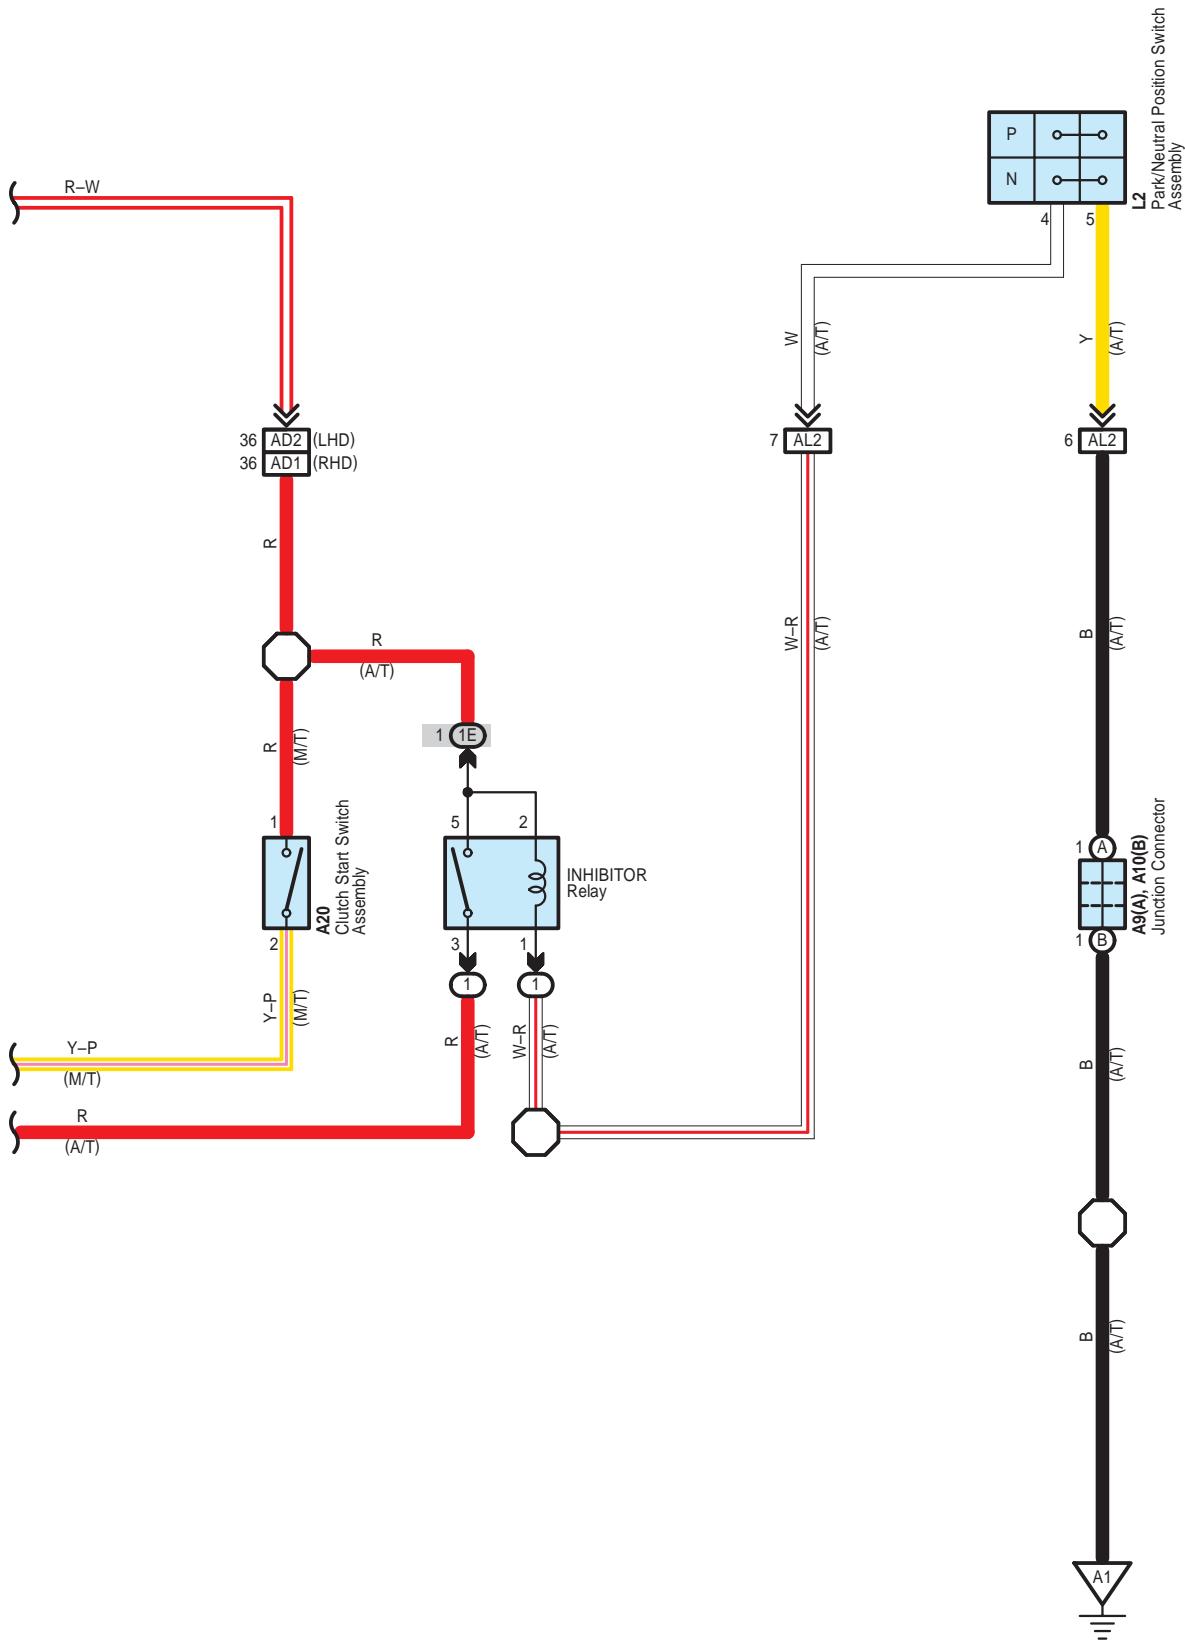

Starting (w/o Entry & Start System)

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page		
A9	A	42 (LHD)		A33	A	50 (RHD)		B2	B	39 (LHD)		
		50 (RHD)				42 (LHD)				47 (RHD)		
A10	B	42 (LHD)		A35	C	50 (RHD)		D55		41 (LHD)		
		50 (RHD)				50 (RHD)				49 (RHD)		
A20		42 (LHD)		A66	A	50 (RHD)		L2		39 (LHD)		
		50 (RHD)				39 (LHD)				47 (RHD)		
A33	A	42 (LHD)		B1	A	47 (RHD)						

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


□ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AB1	54 (LHD)	Engine Room Main Wire and No. 2 Engine Room Wire (Engine Unit)
	58 (RHD)	
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
AD3	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel LH)
AL2	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	54 (LHD)	
	58 (RHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
A1	54 (LHD) 58 (RHD)	Front Fender Apron LH

Charging

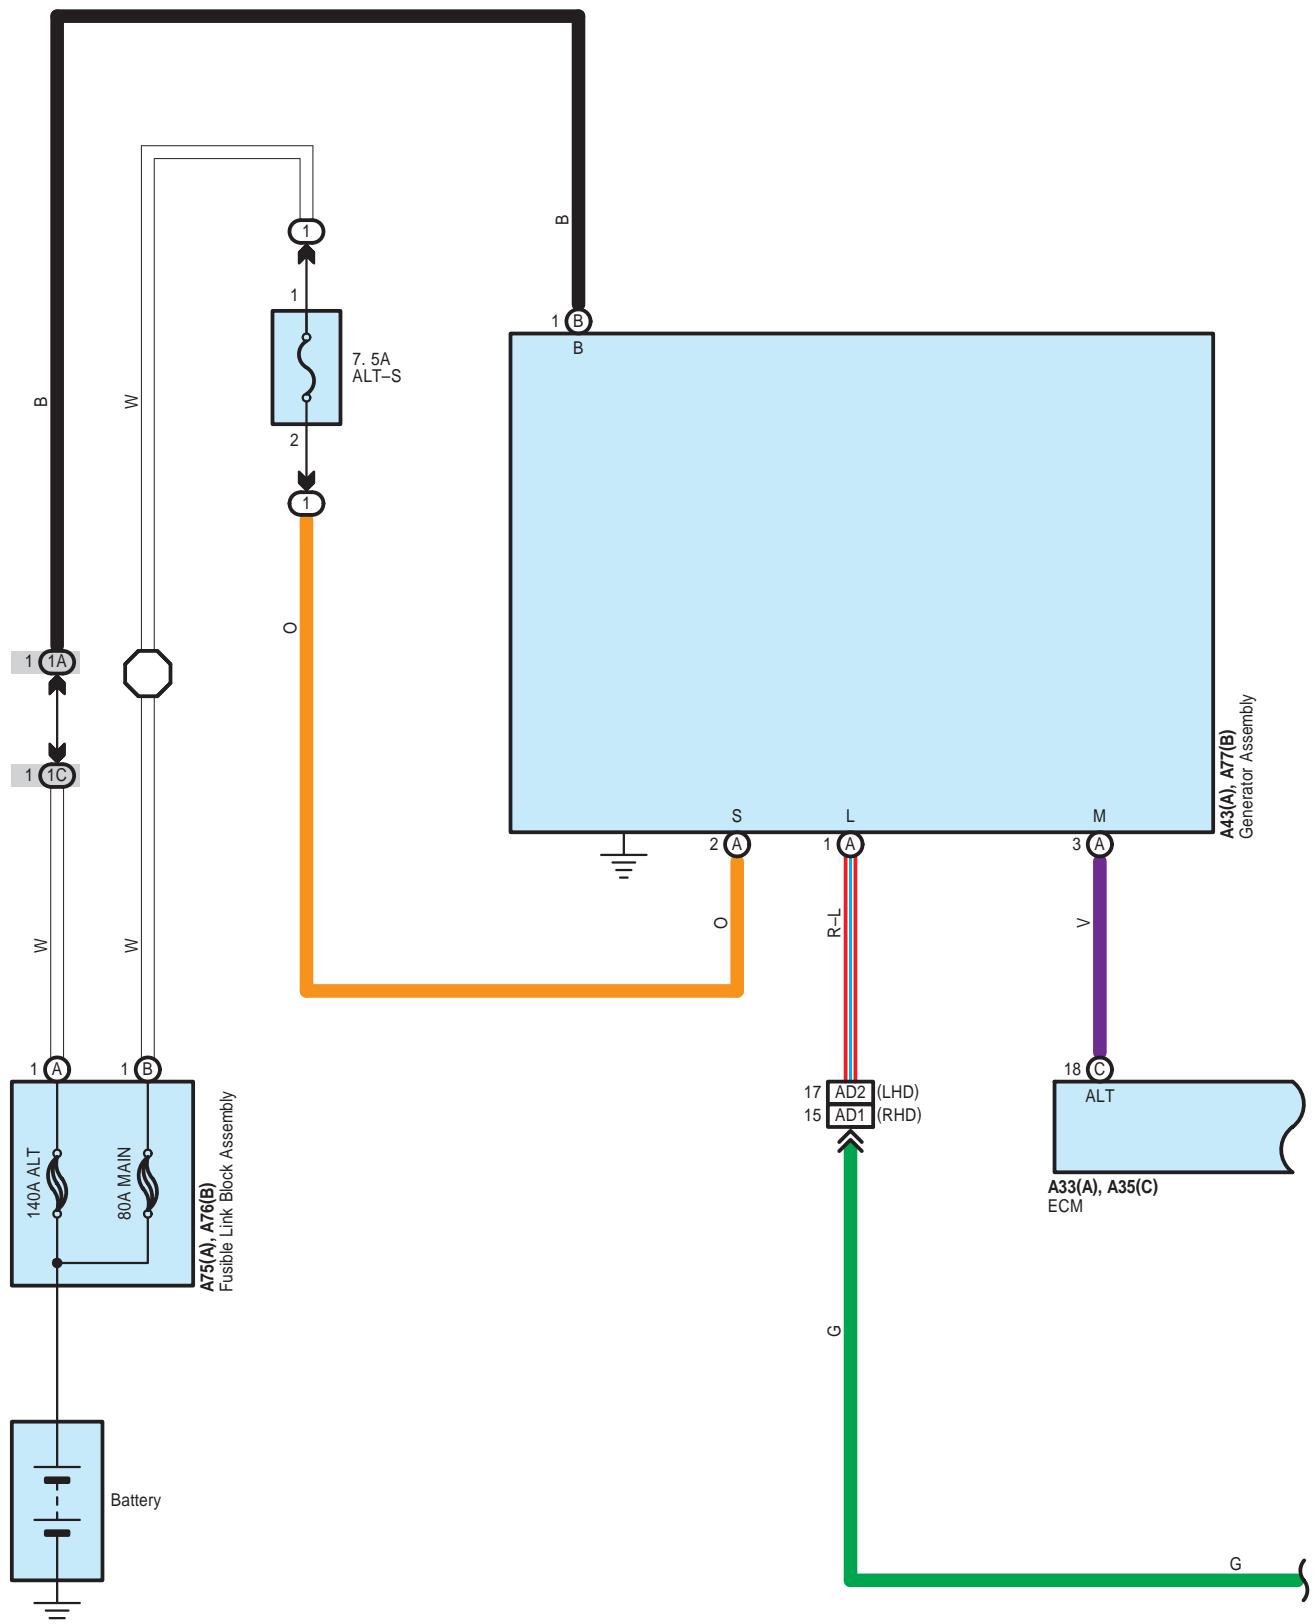

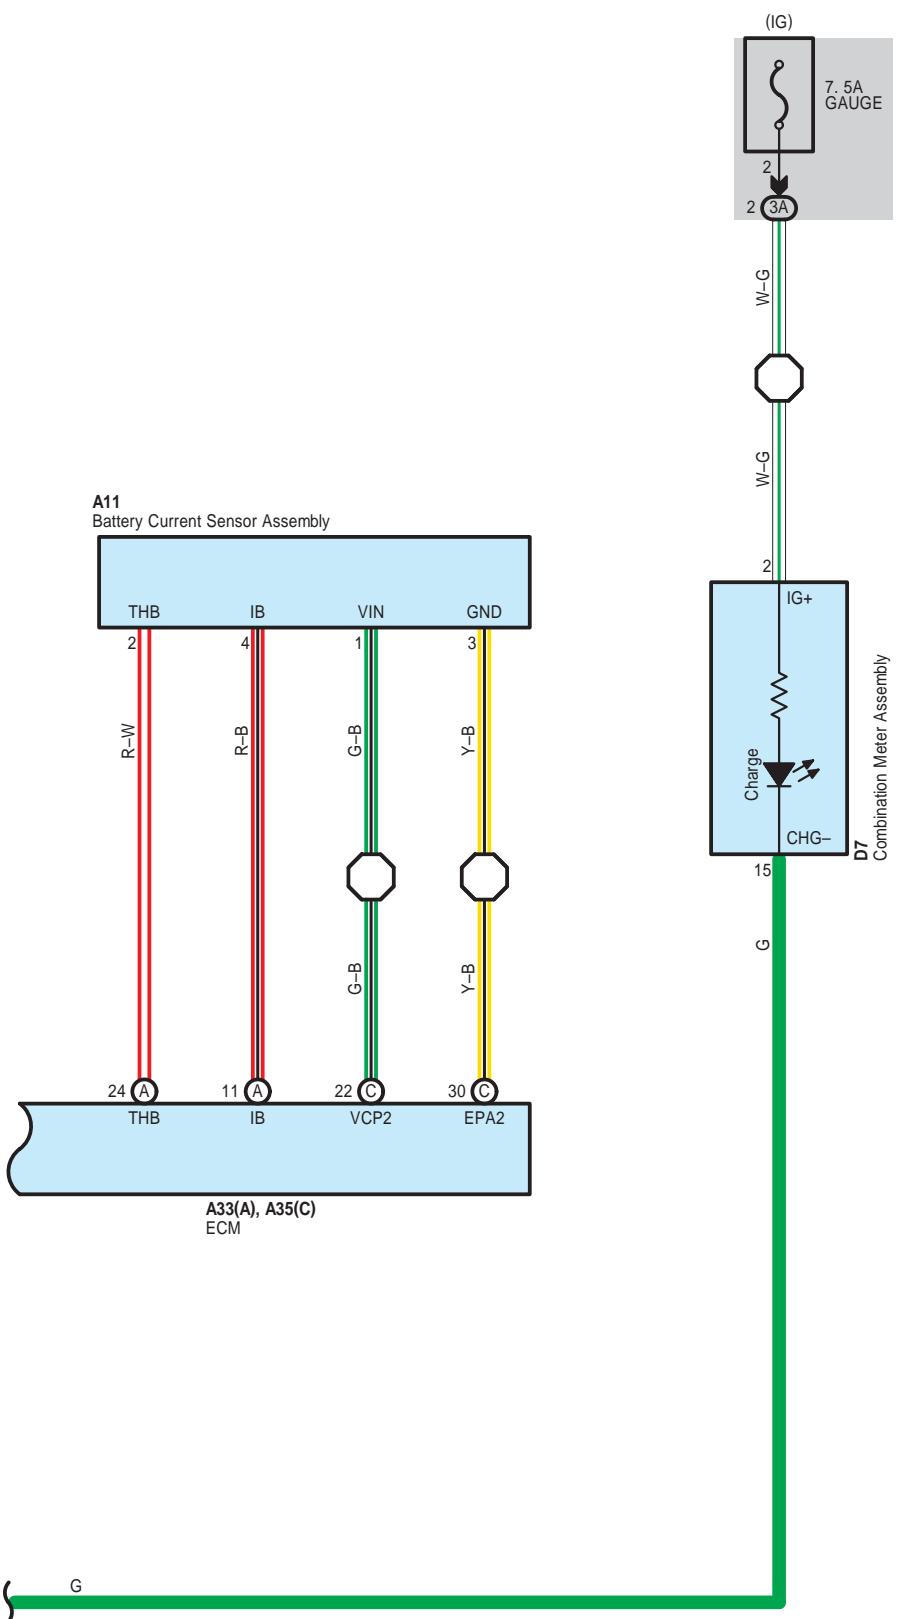

Charging

: Parts Location

Code		See Page		Code		See Page		Code		See Page		
A11		39 (LHD)		A43	A	39 (LHD)		A77	B	39 (LHD)		
		47 (RHD)				47 (RHD)				47 (RHD)		
A33	A	42 (LHD)		A75	A	39 (LHD)		D7		40 (LHD)		
		50 (RHD)				47 (RHD)				48 (RHD)		
A35	C	42 (LHD)		A76	B	39 (LHD)						
		50 (RHD)				47 (RHD)						

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)


: Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1A		
1C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

Ignition

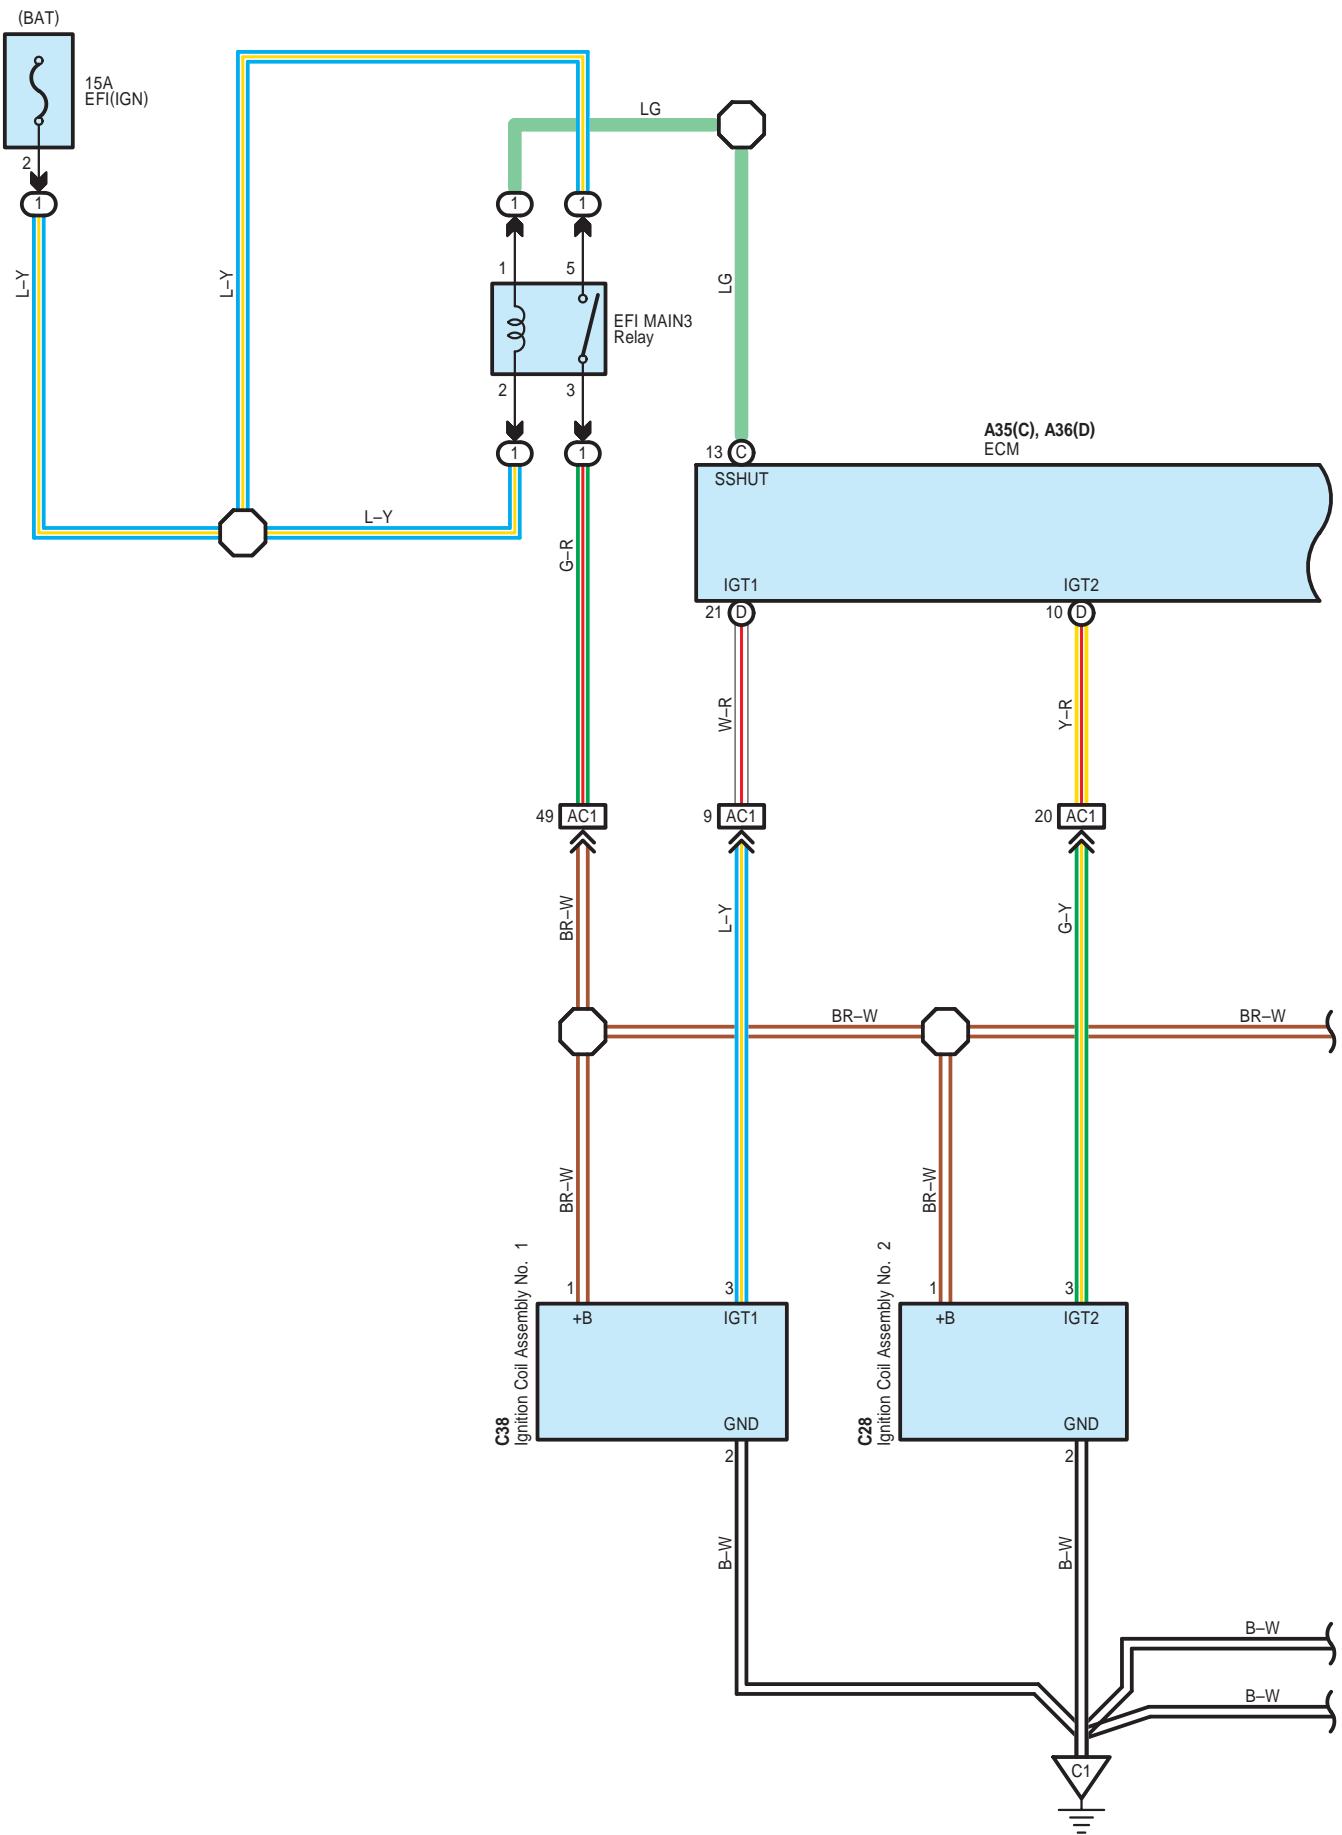

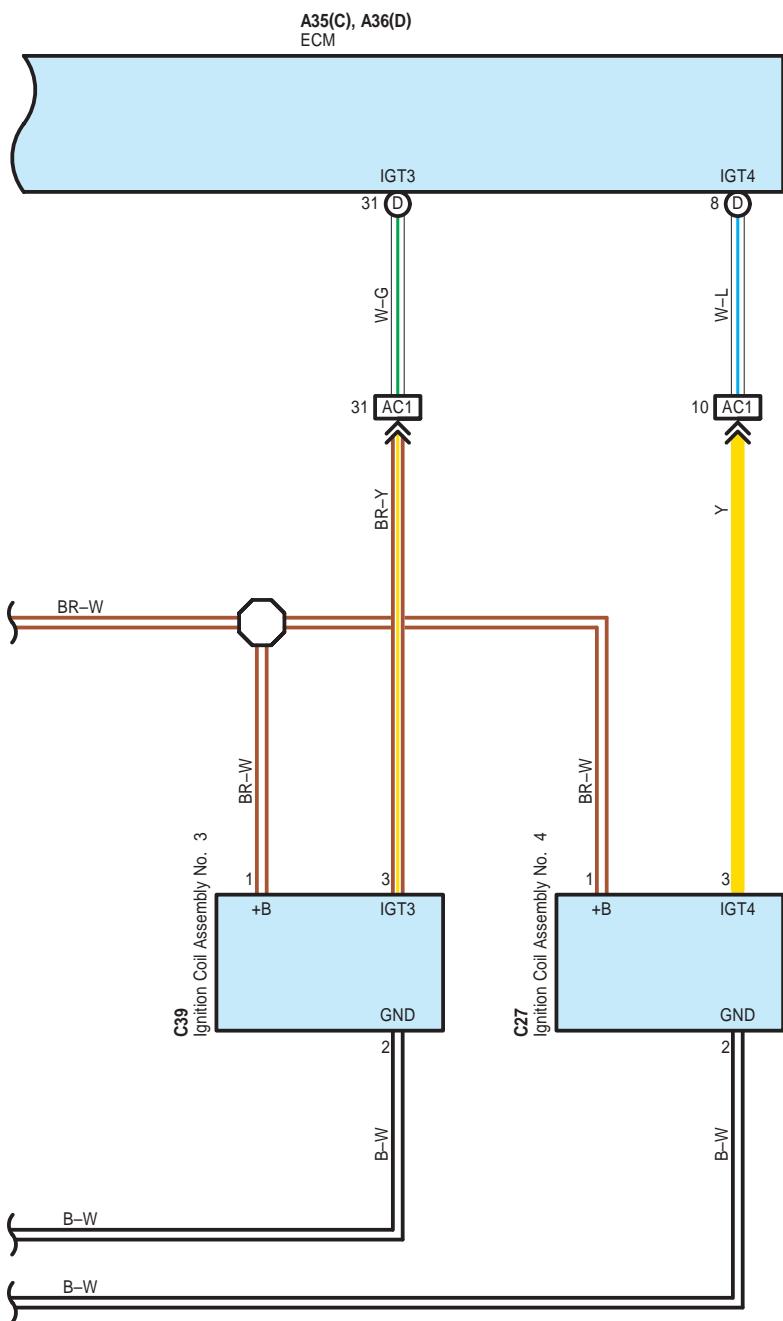

Ignition

: Parts Location

Code		See Page	Code	See Page	Code	See Page
A35	C	42 (LHD)	C27	38 (LHD)	C38	38 (LHD)
		50 (RHD)		46 (RHD)		46 (RHD)
A36	D	42 (LHD)	C28	38 (LHD)	C39	38 (LHD)
		50 (RHD)		46 (RHD)		46 (RHD)

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)


: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD) 58 (RHD)	Engine Room Main Wire and Engine Wire (Engine Unit)

: Ground Points


Code	See Page	Ground Points Location
C1	54 (LHD) 58 (RHD)	Engine Unit


Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

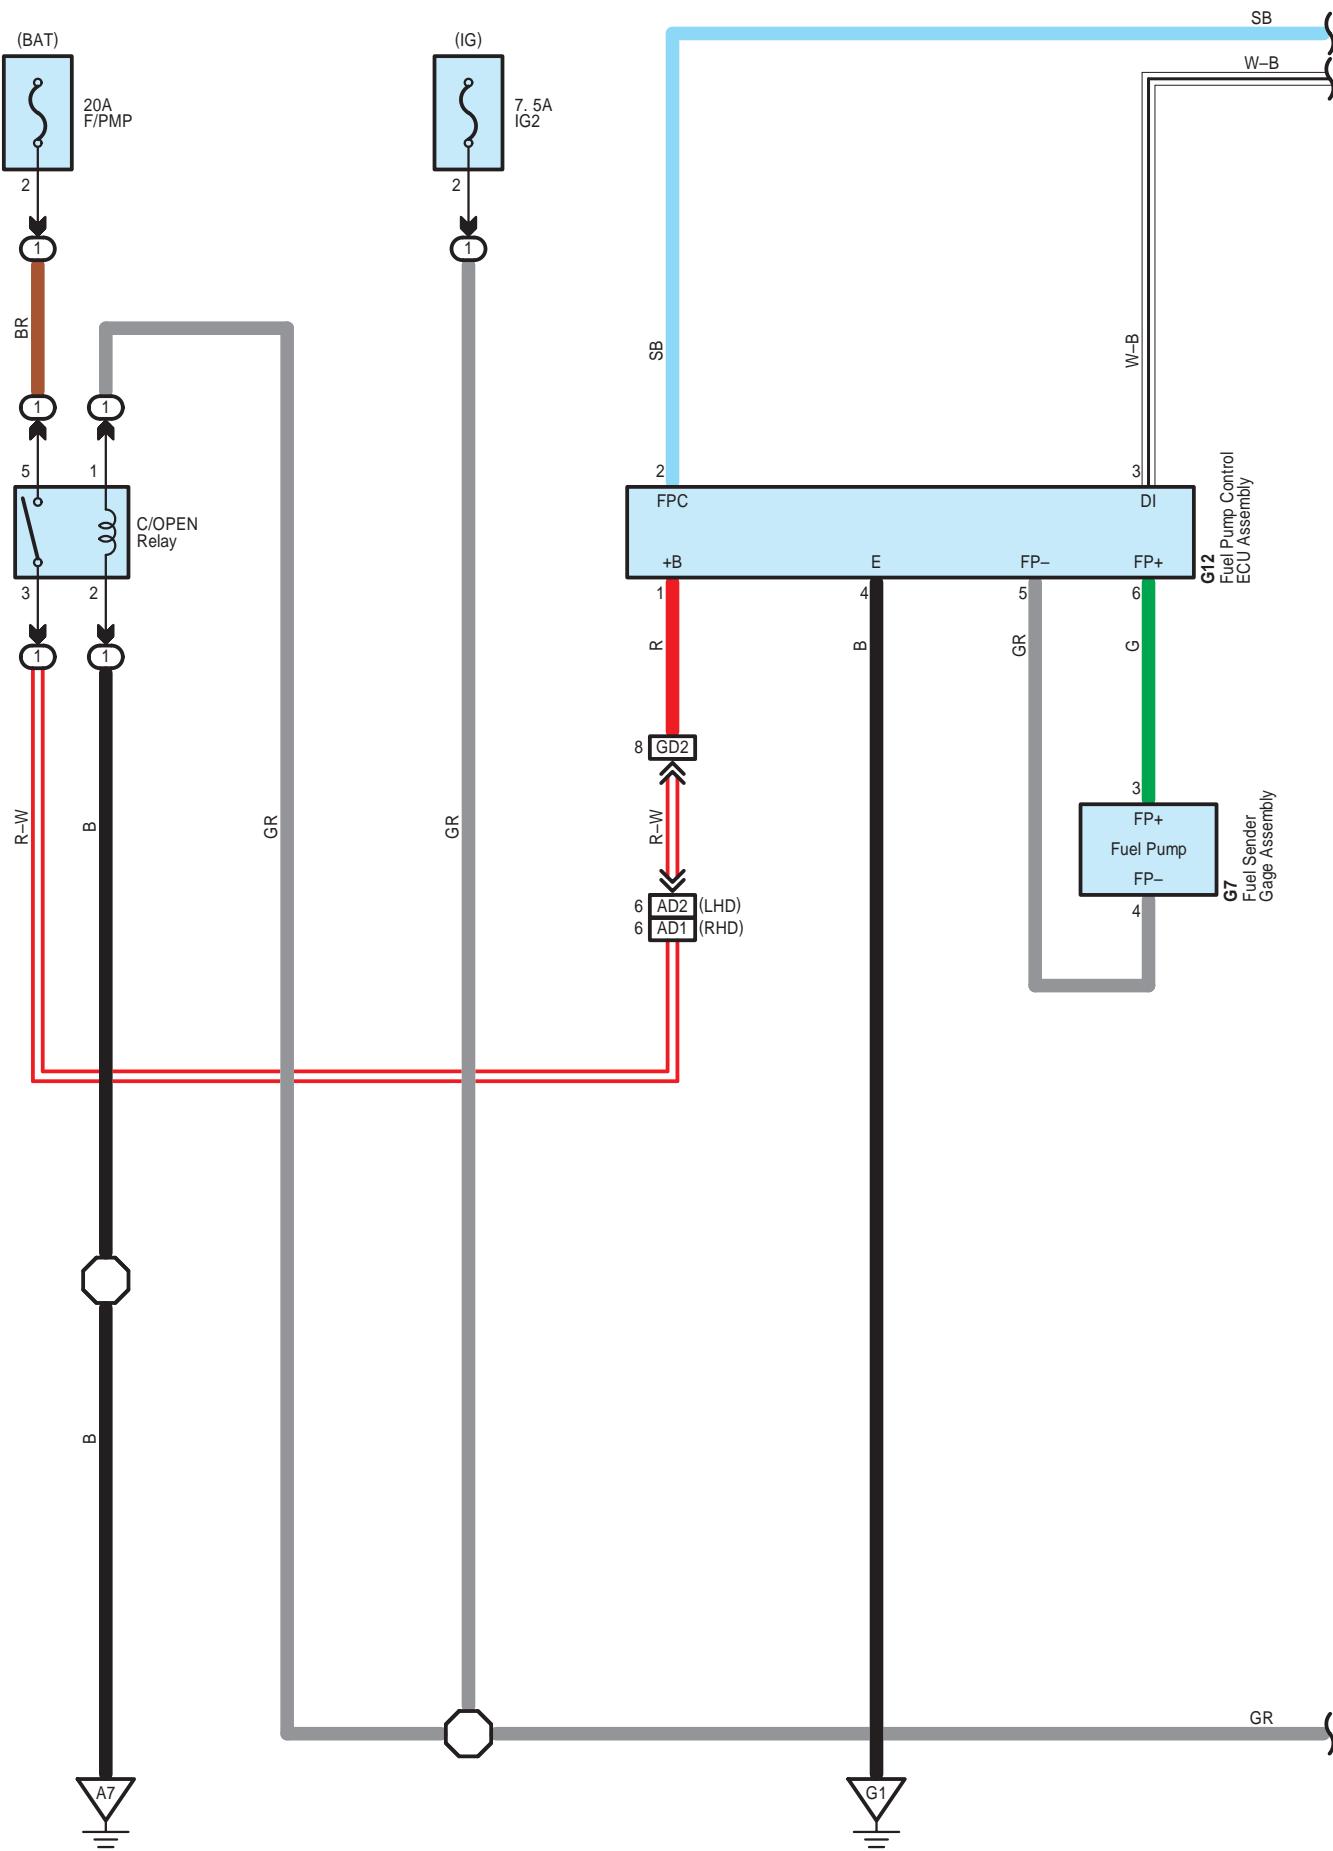

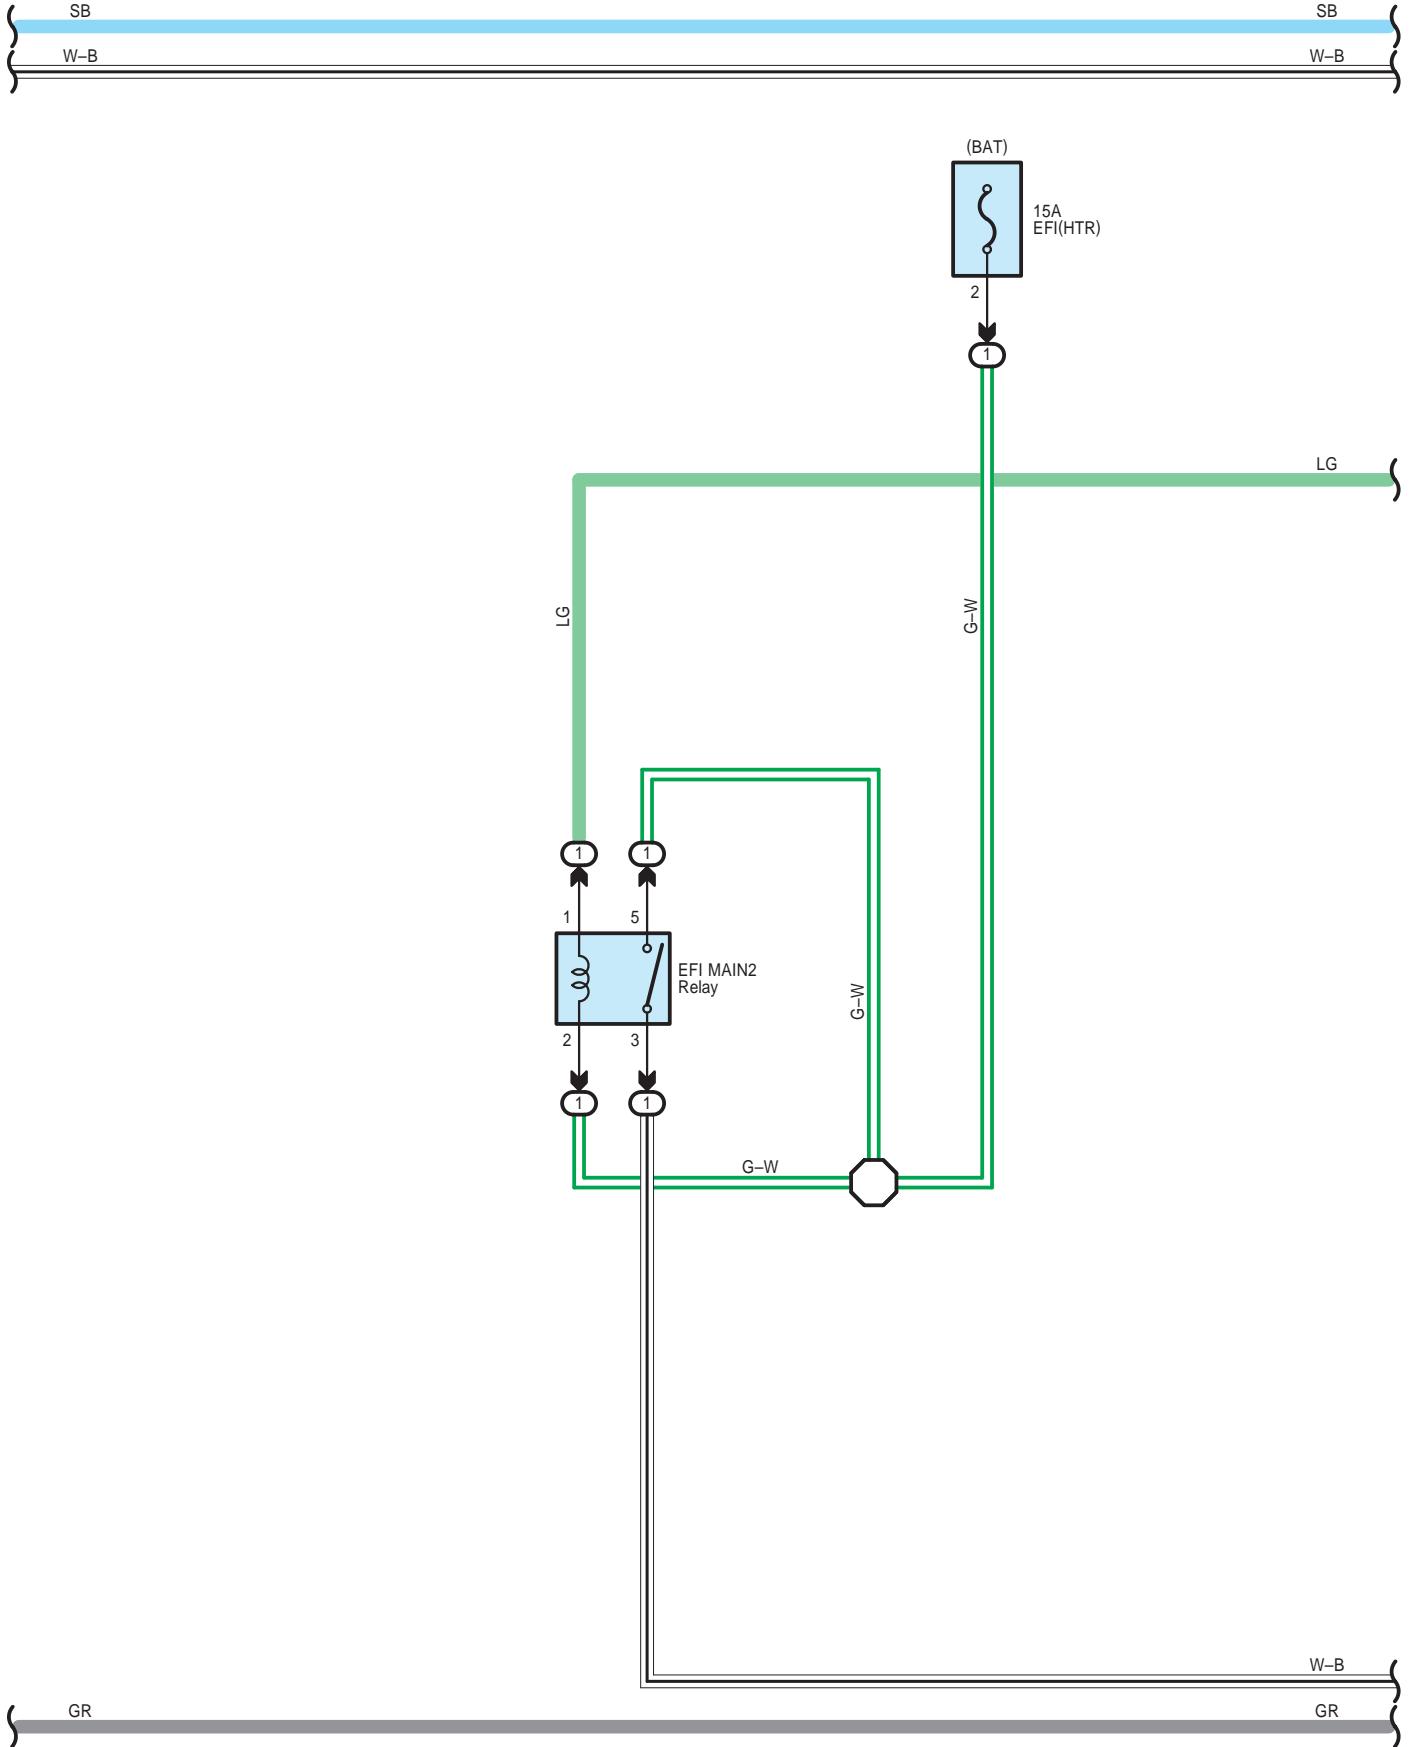



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

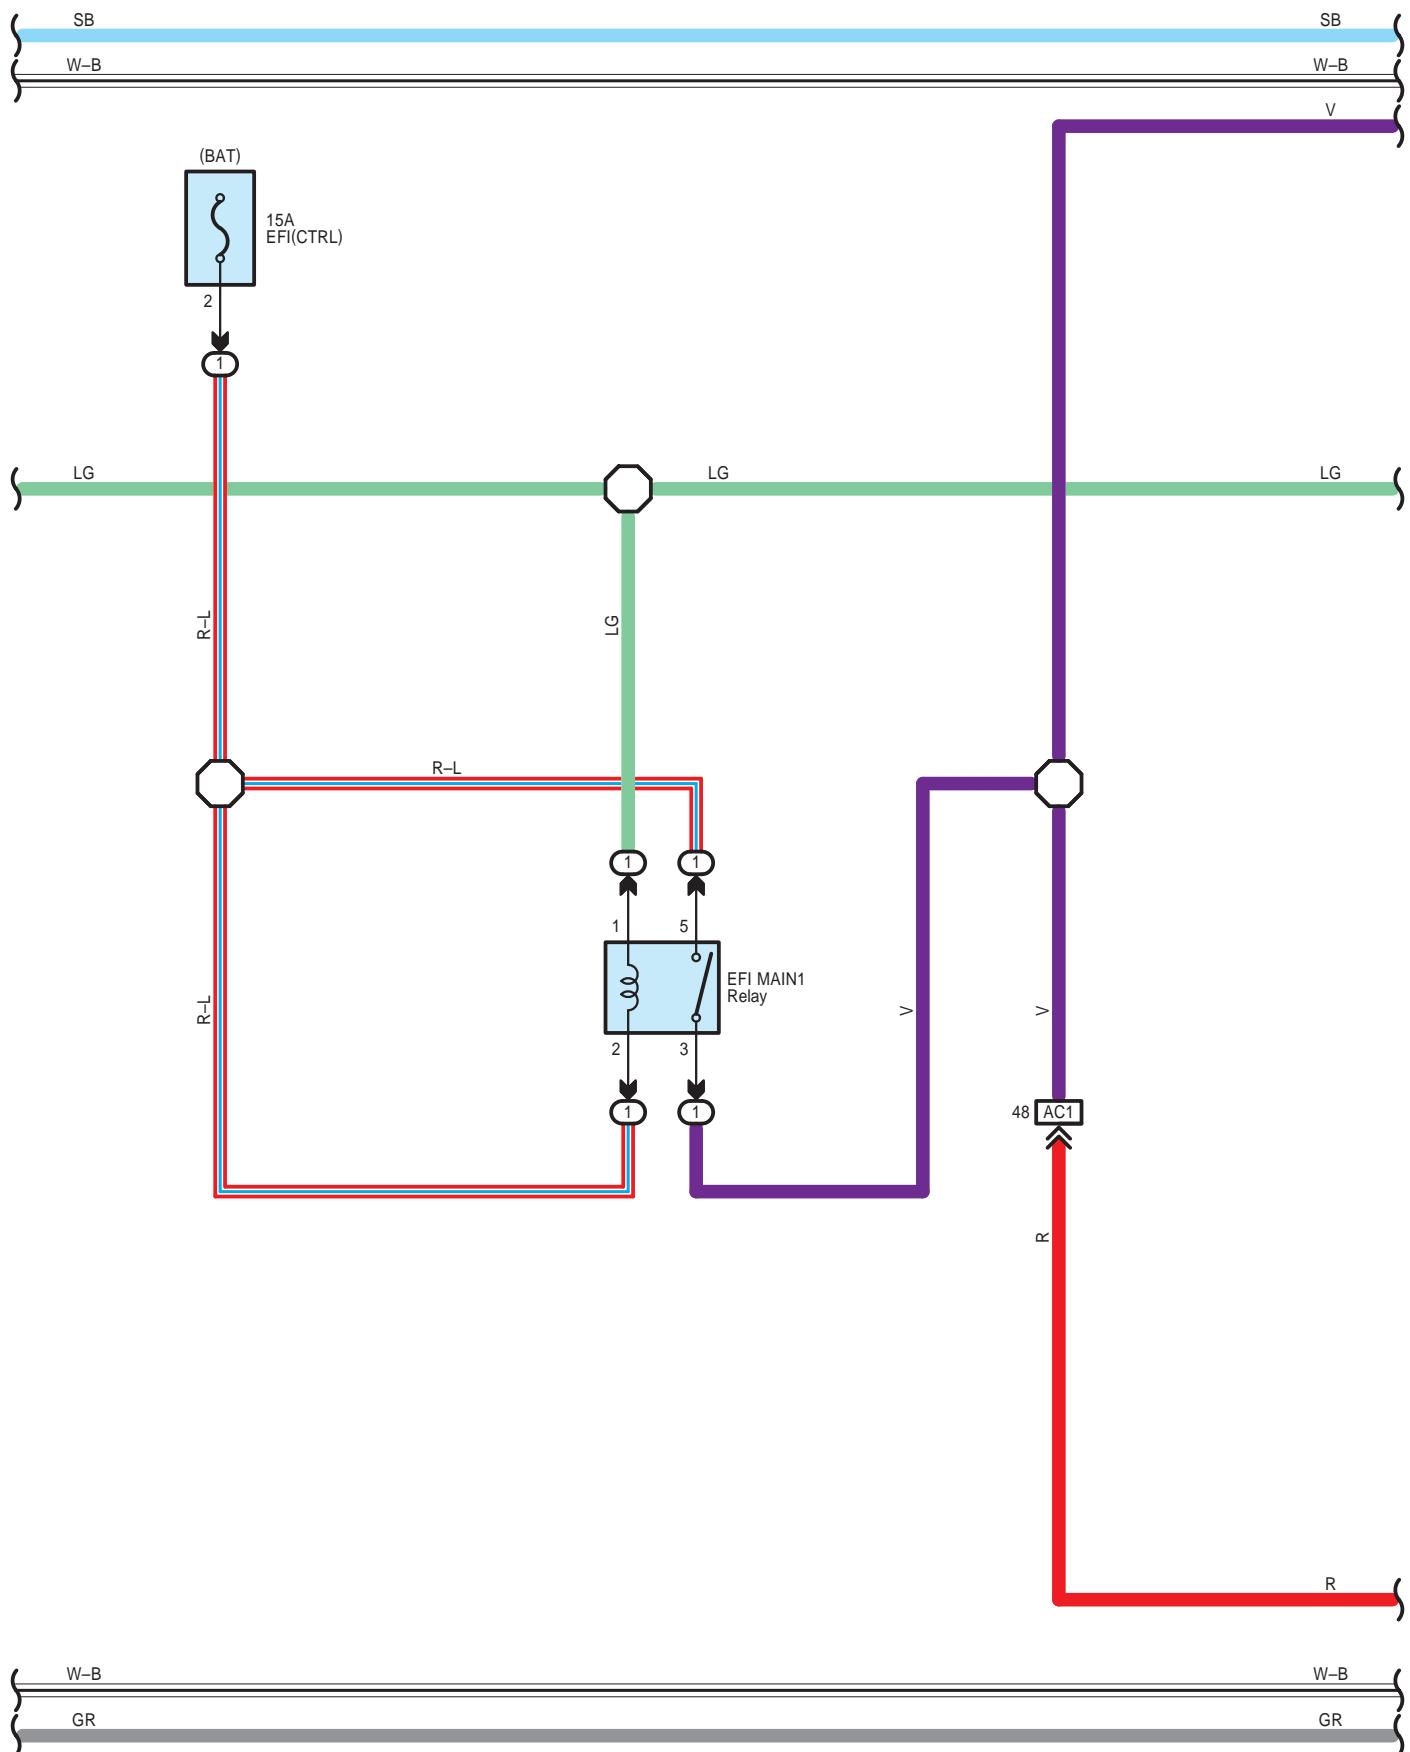

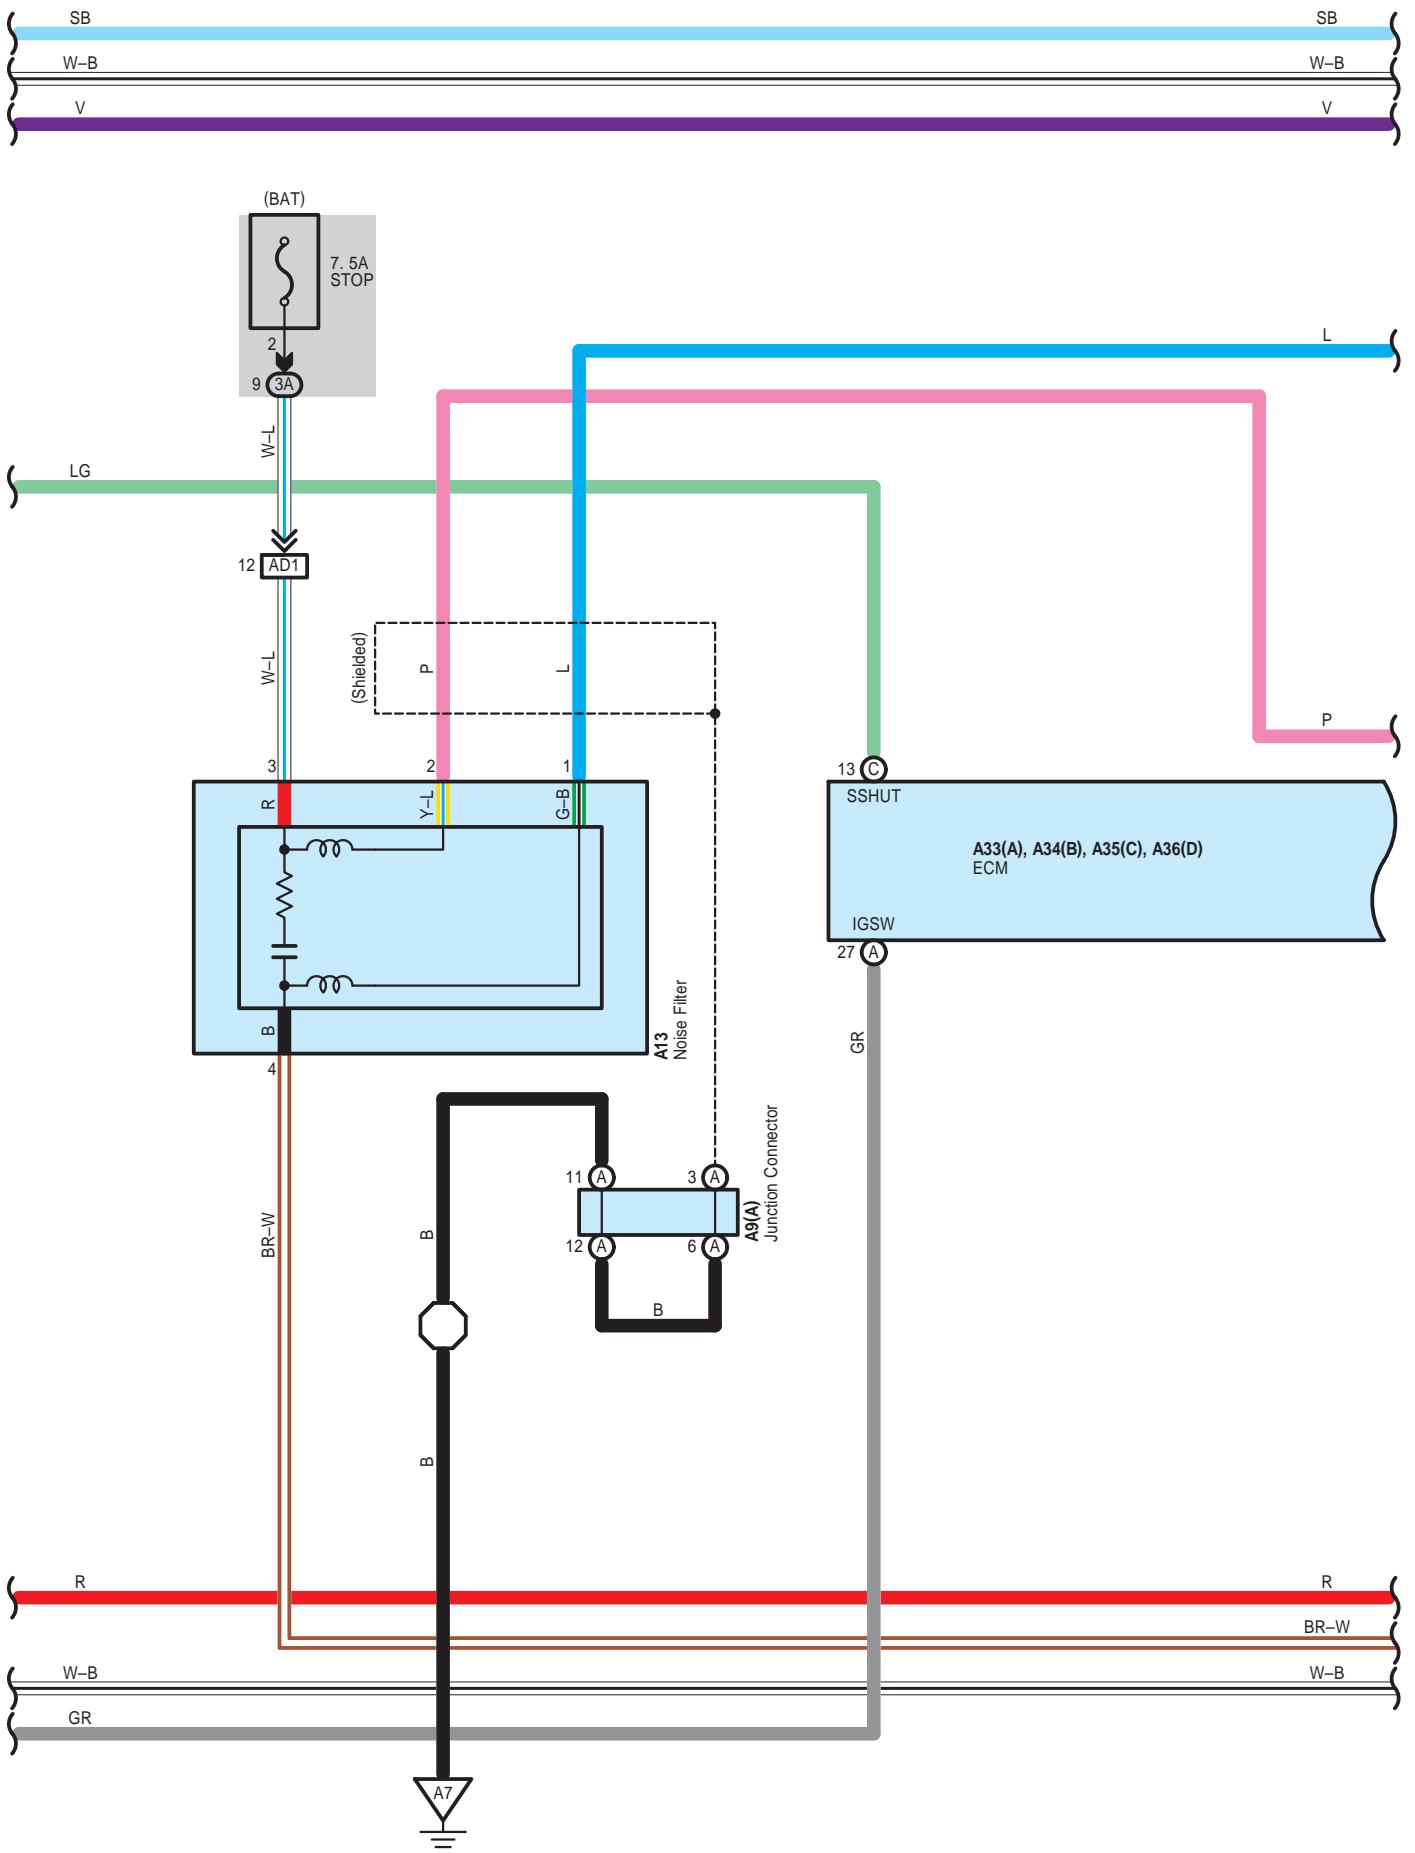



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

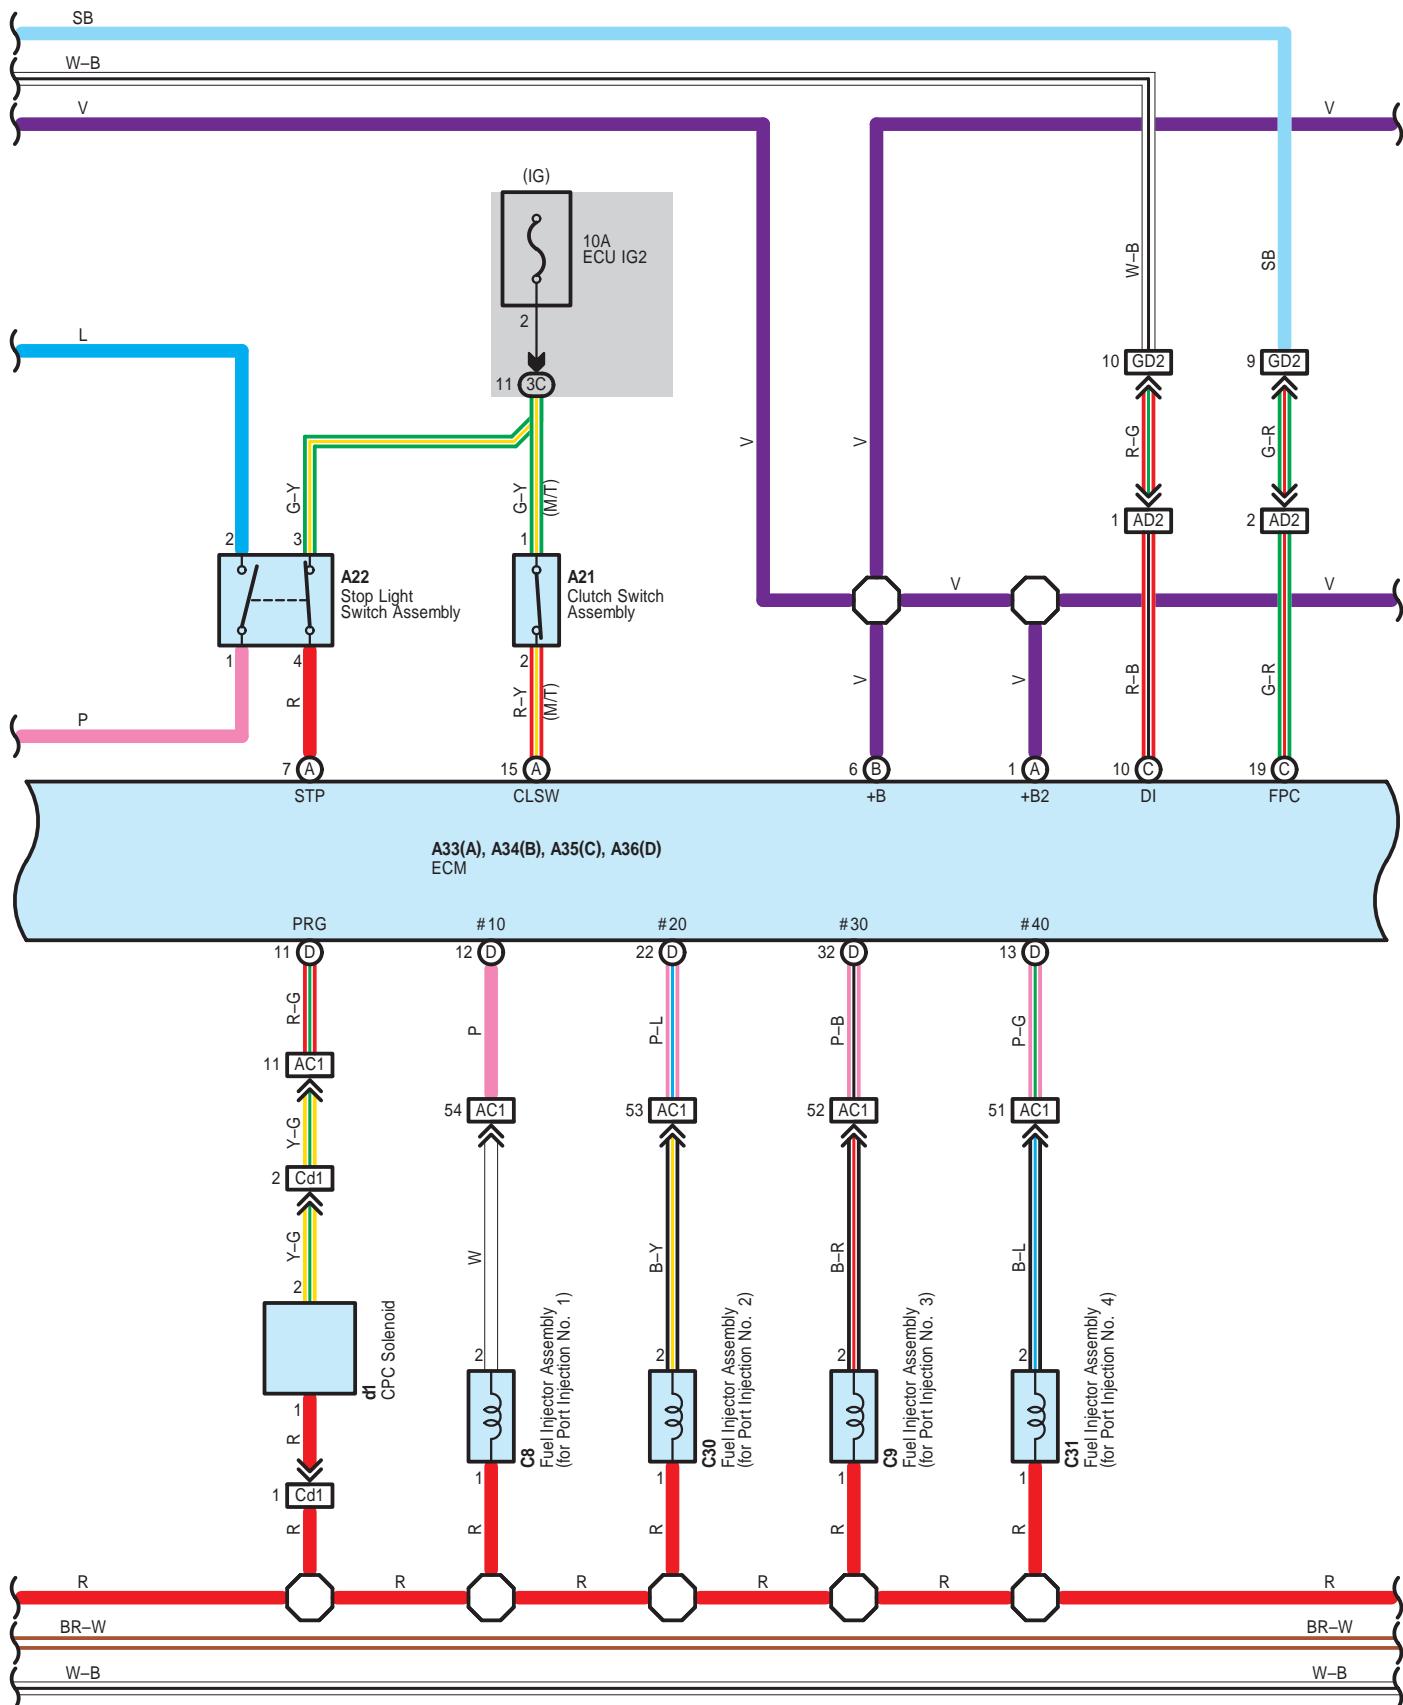

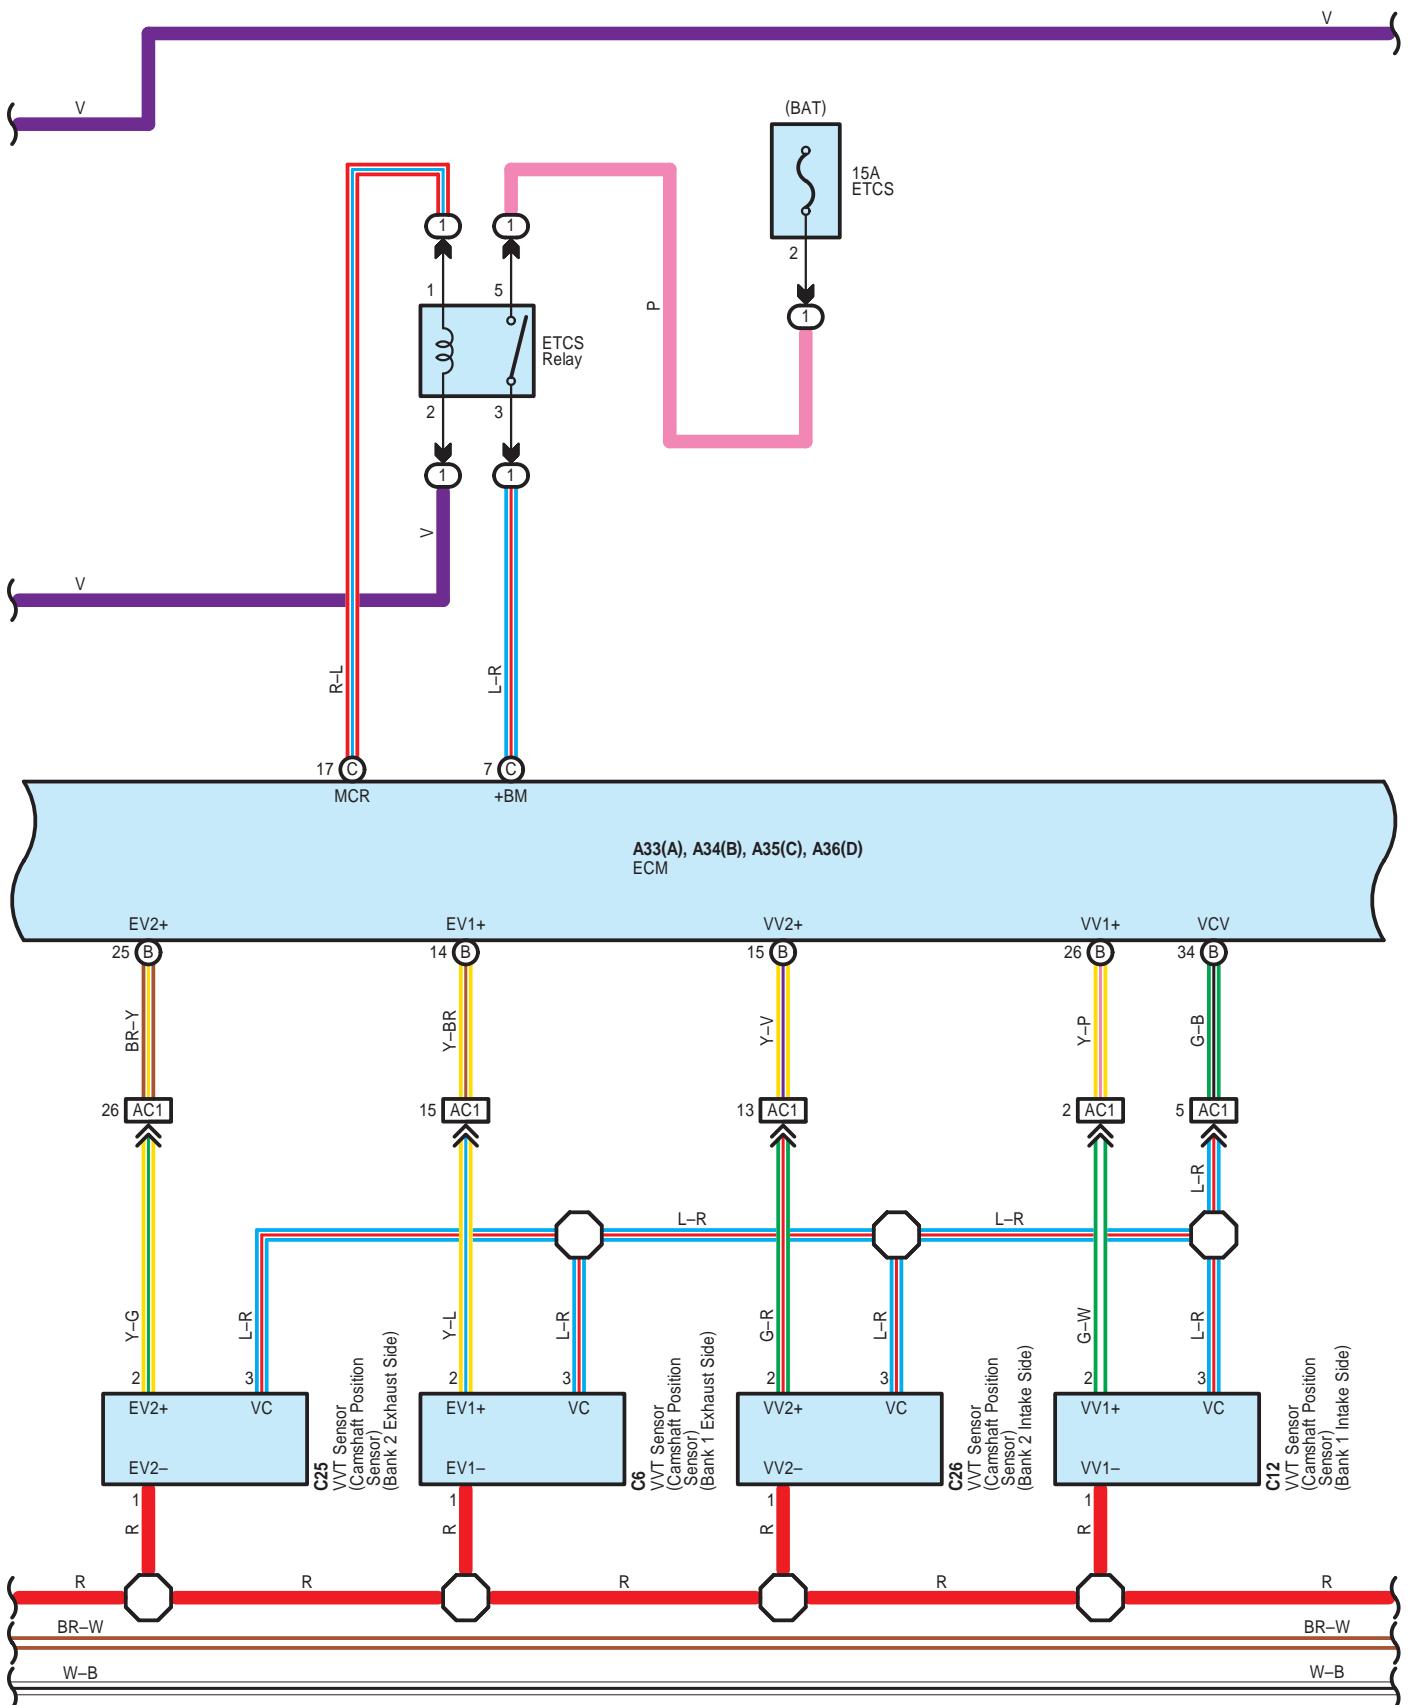



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

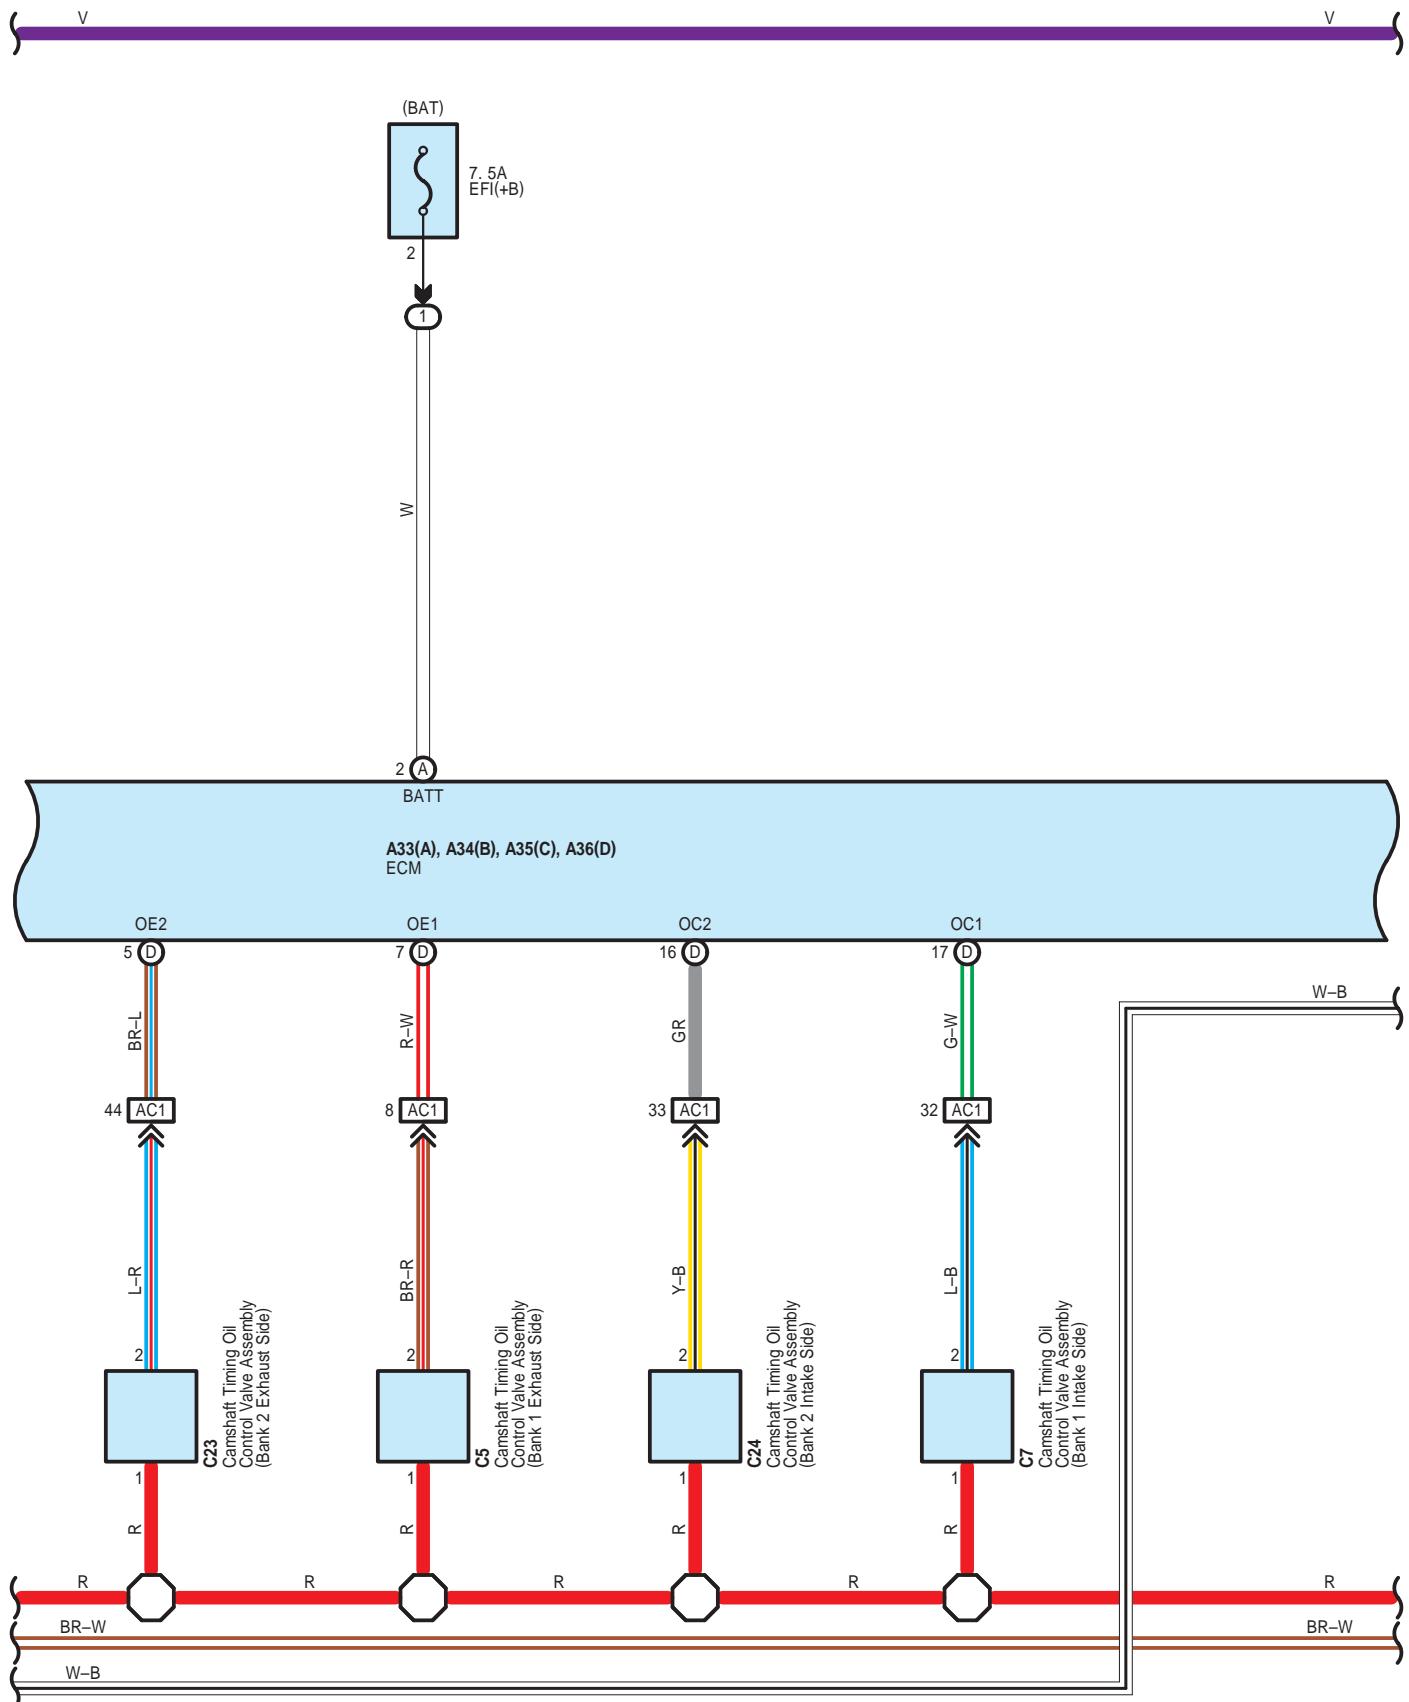

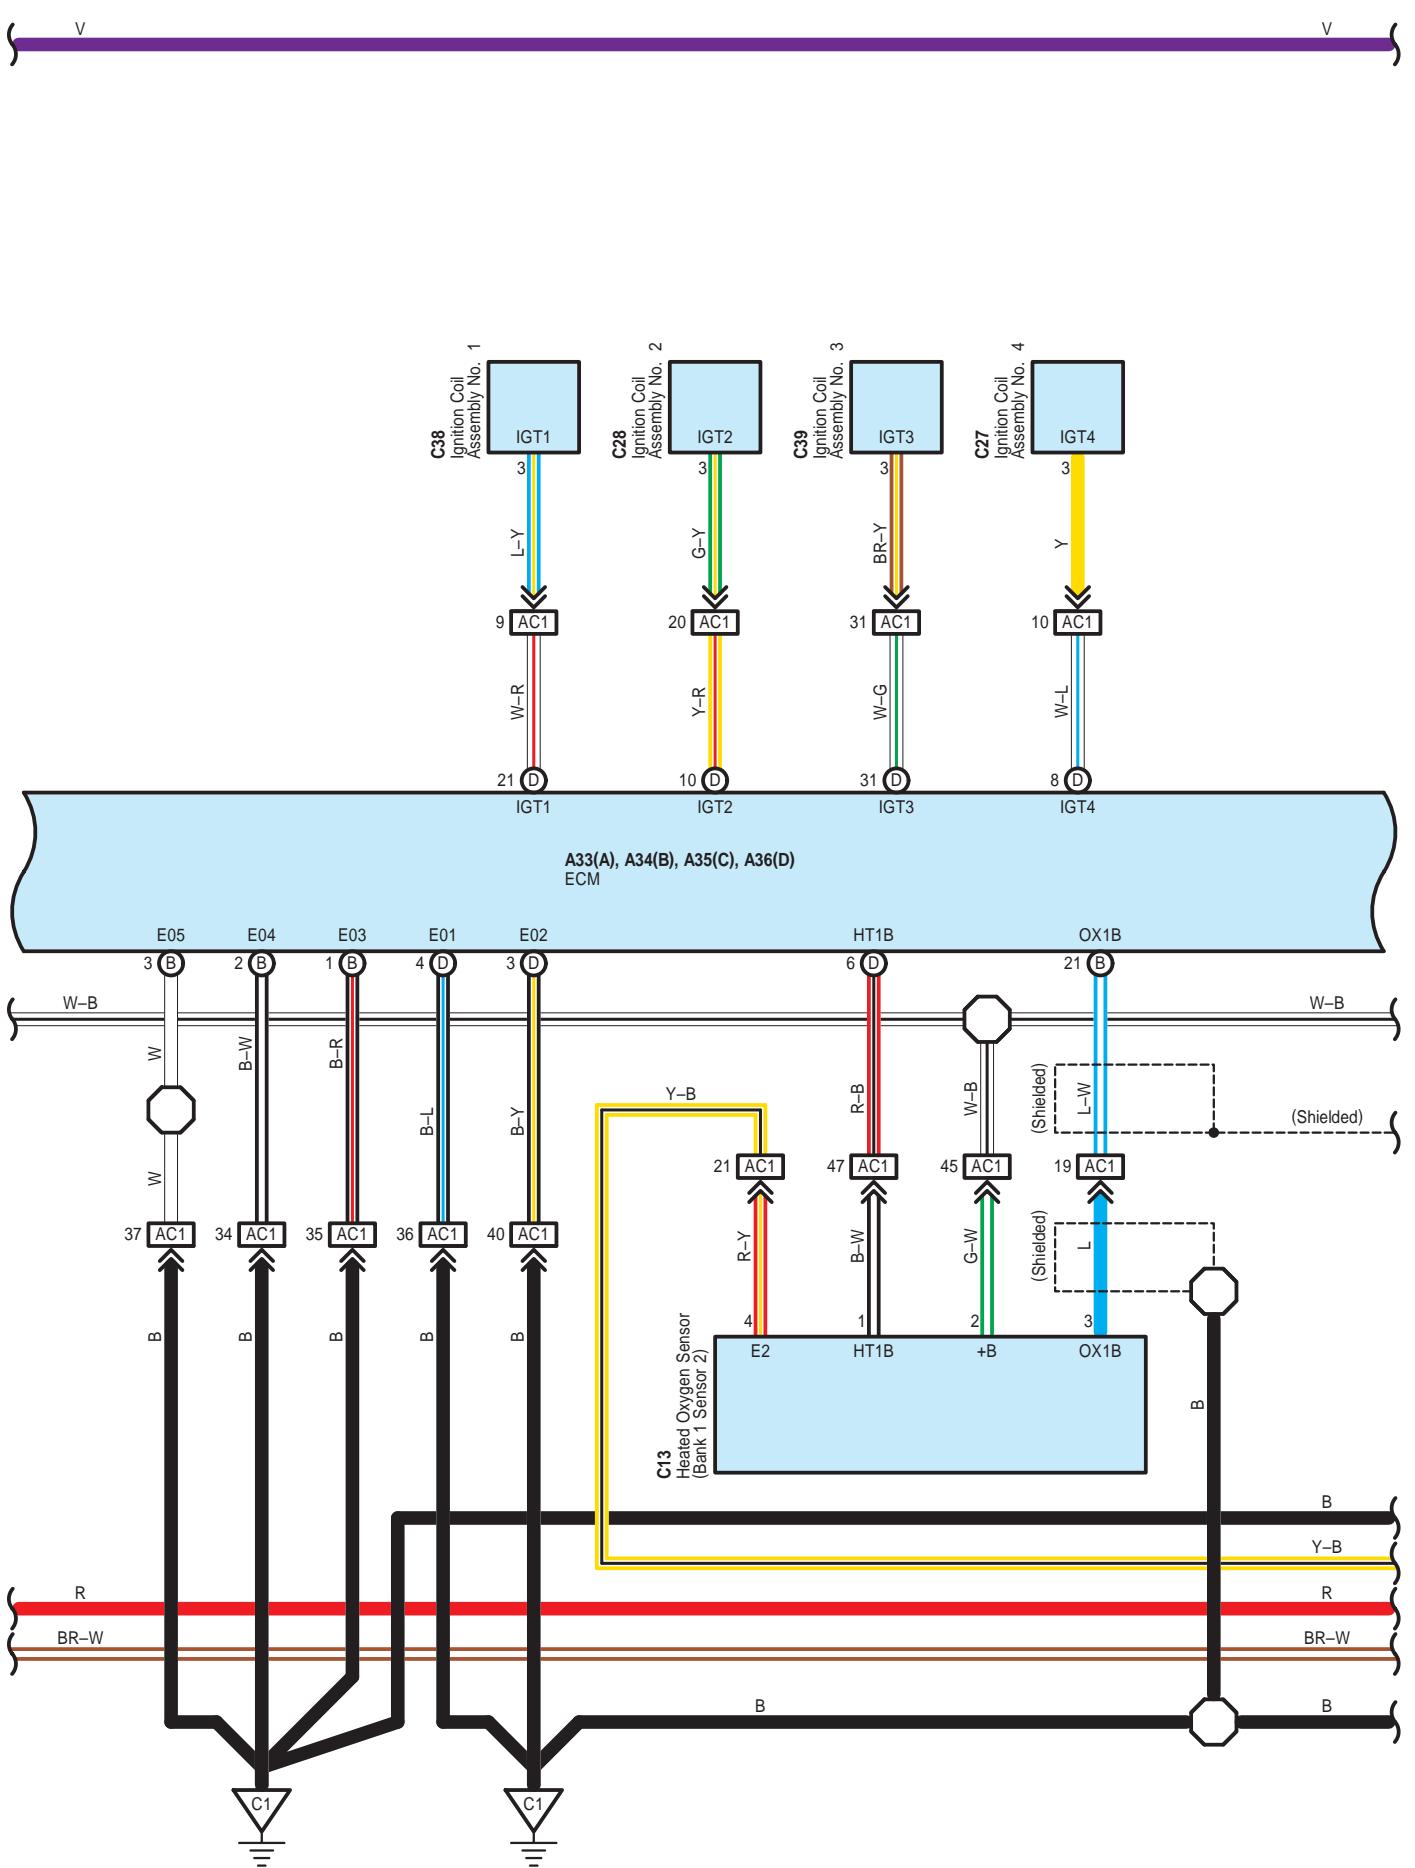



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

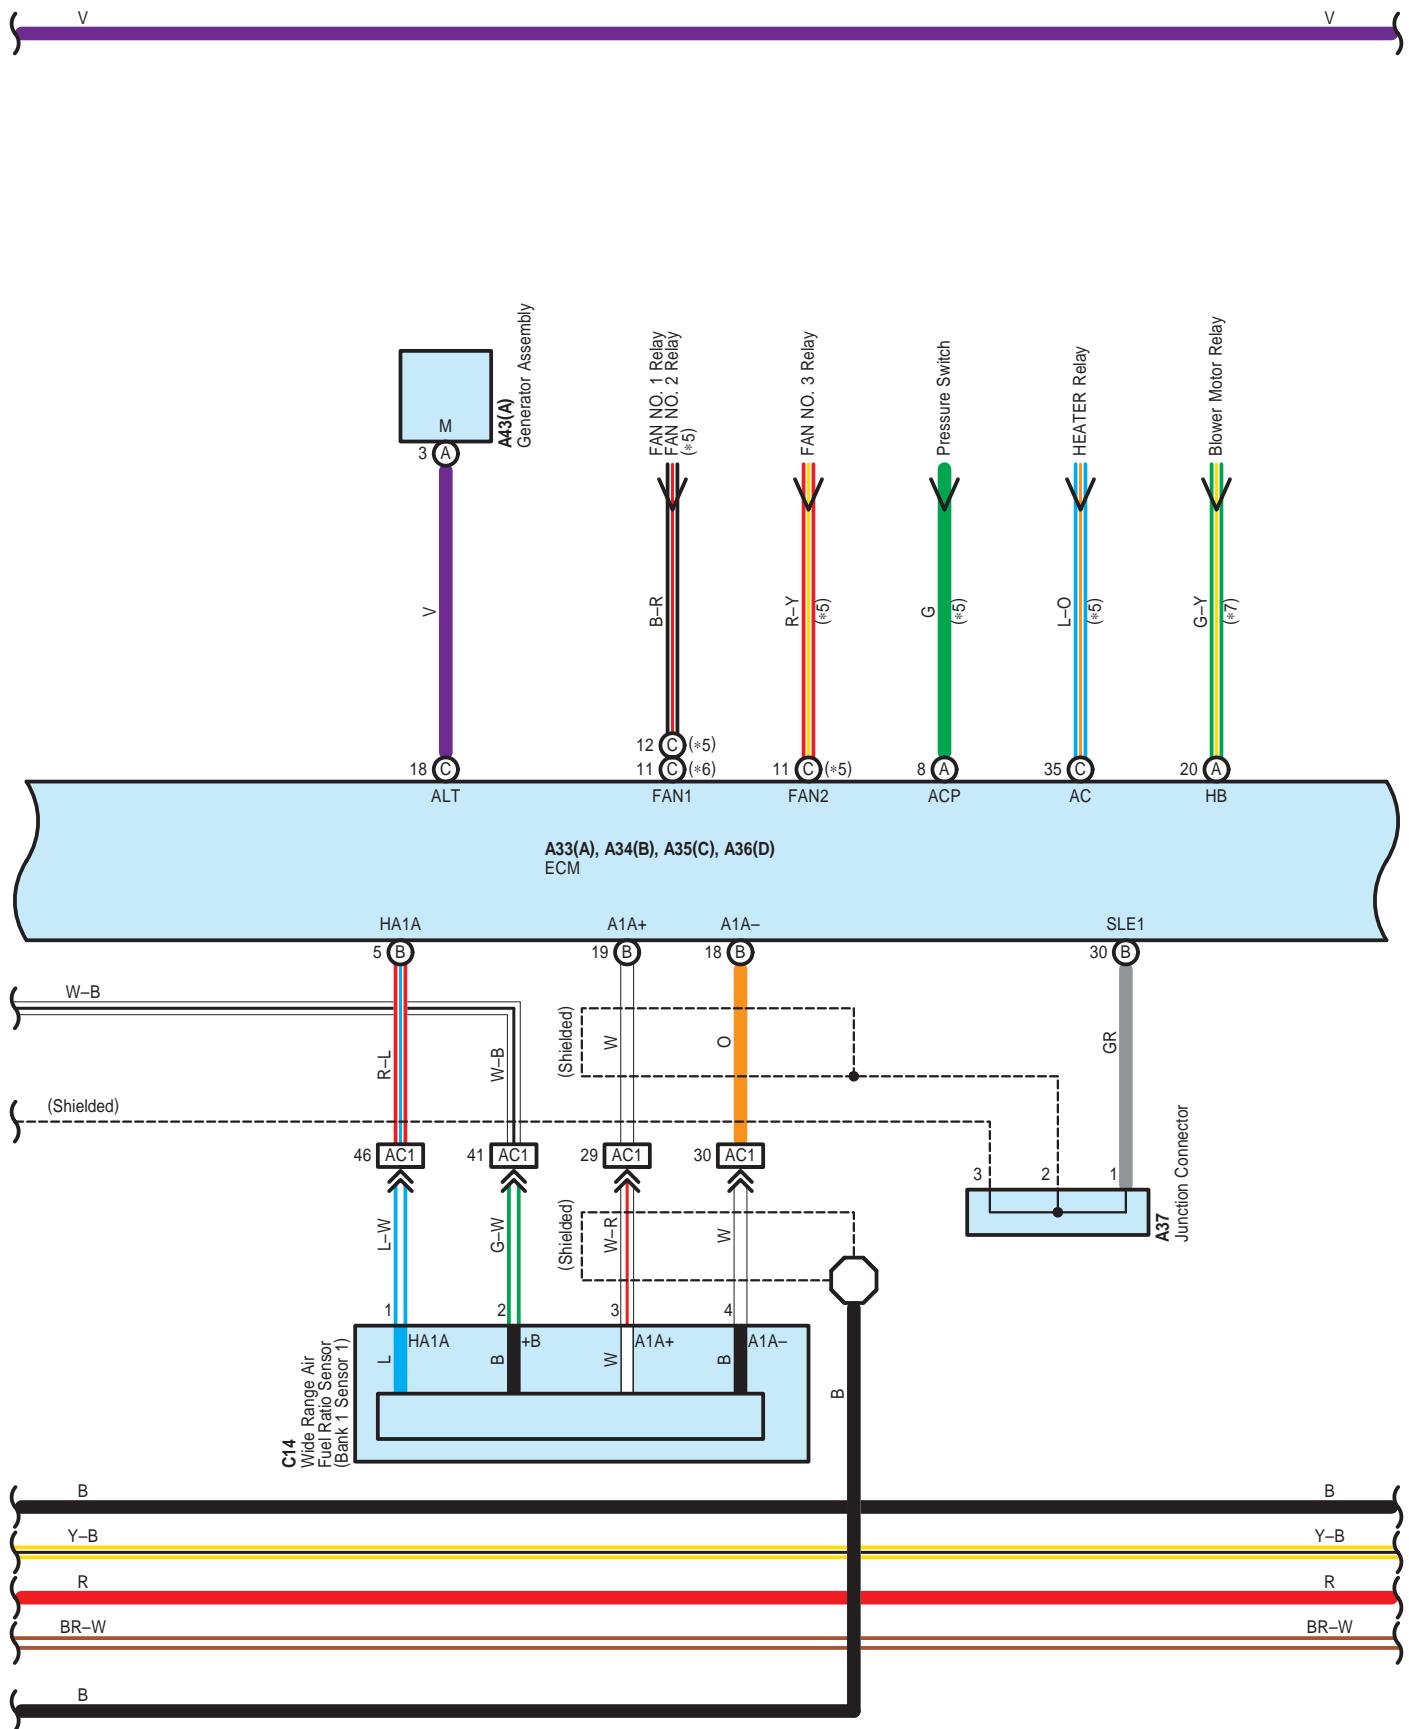

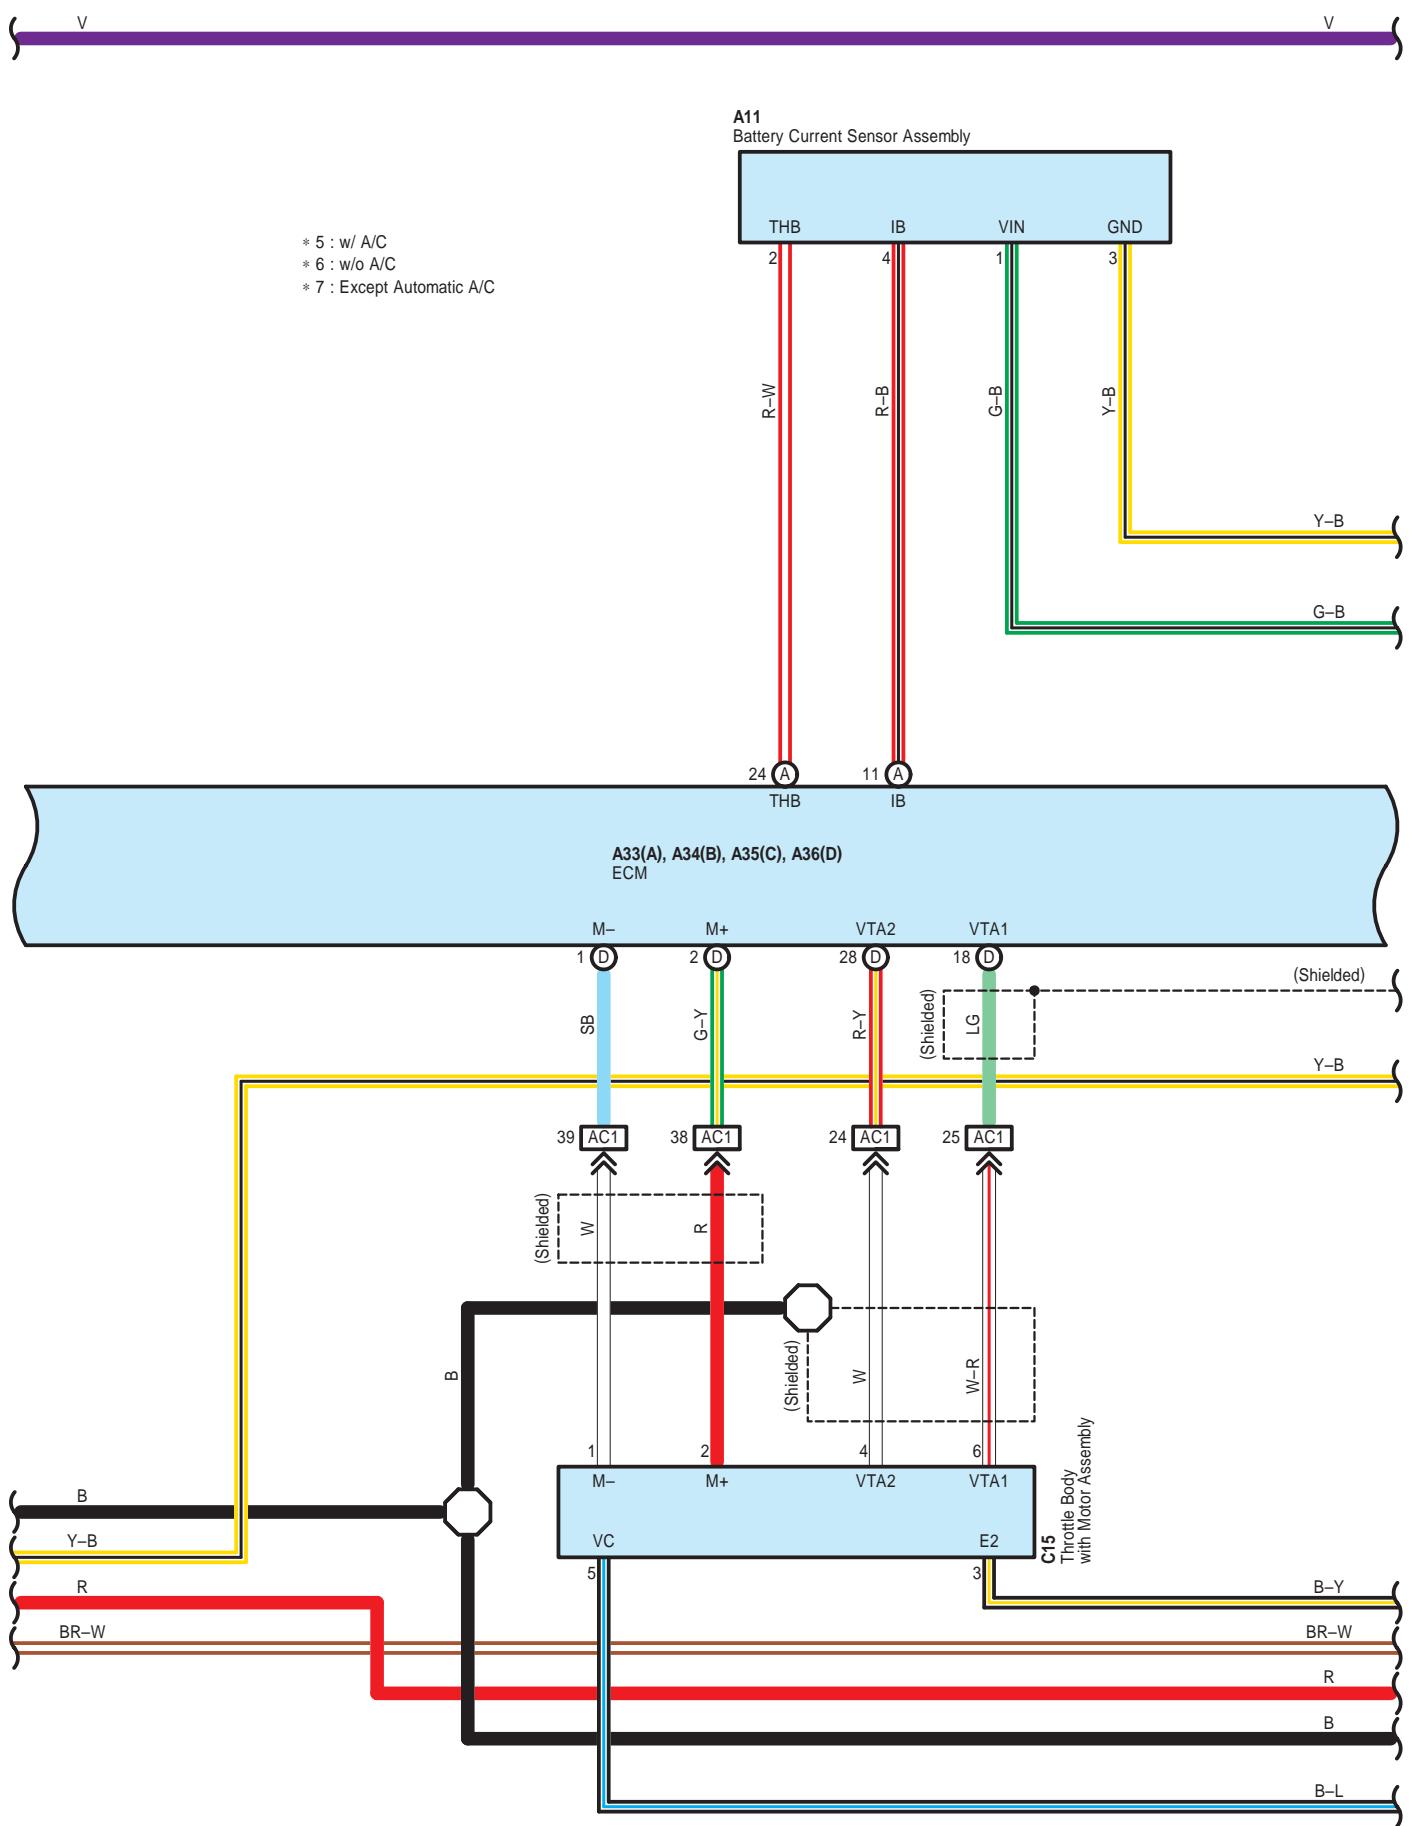



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

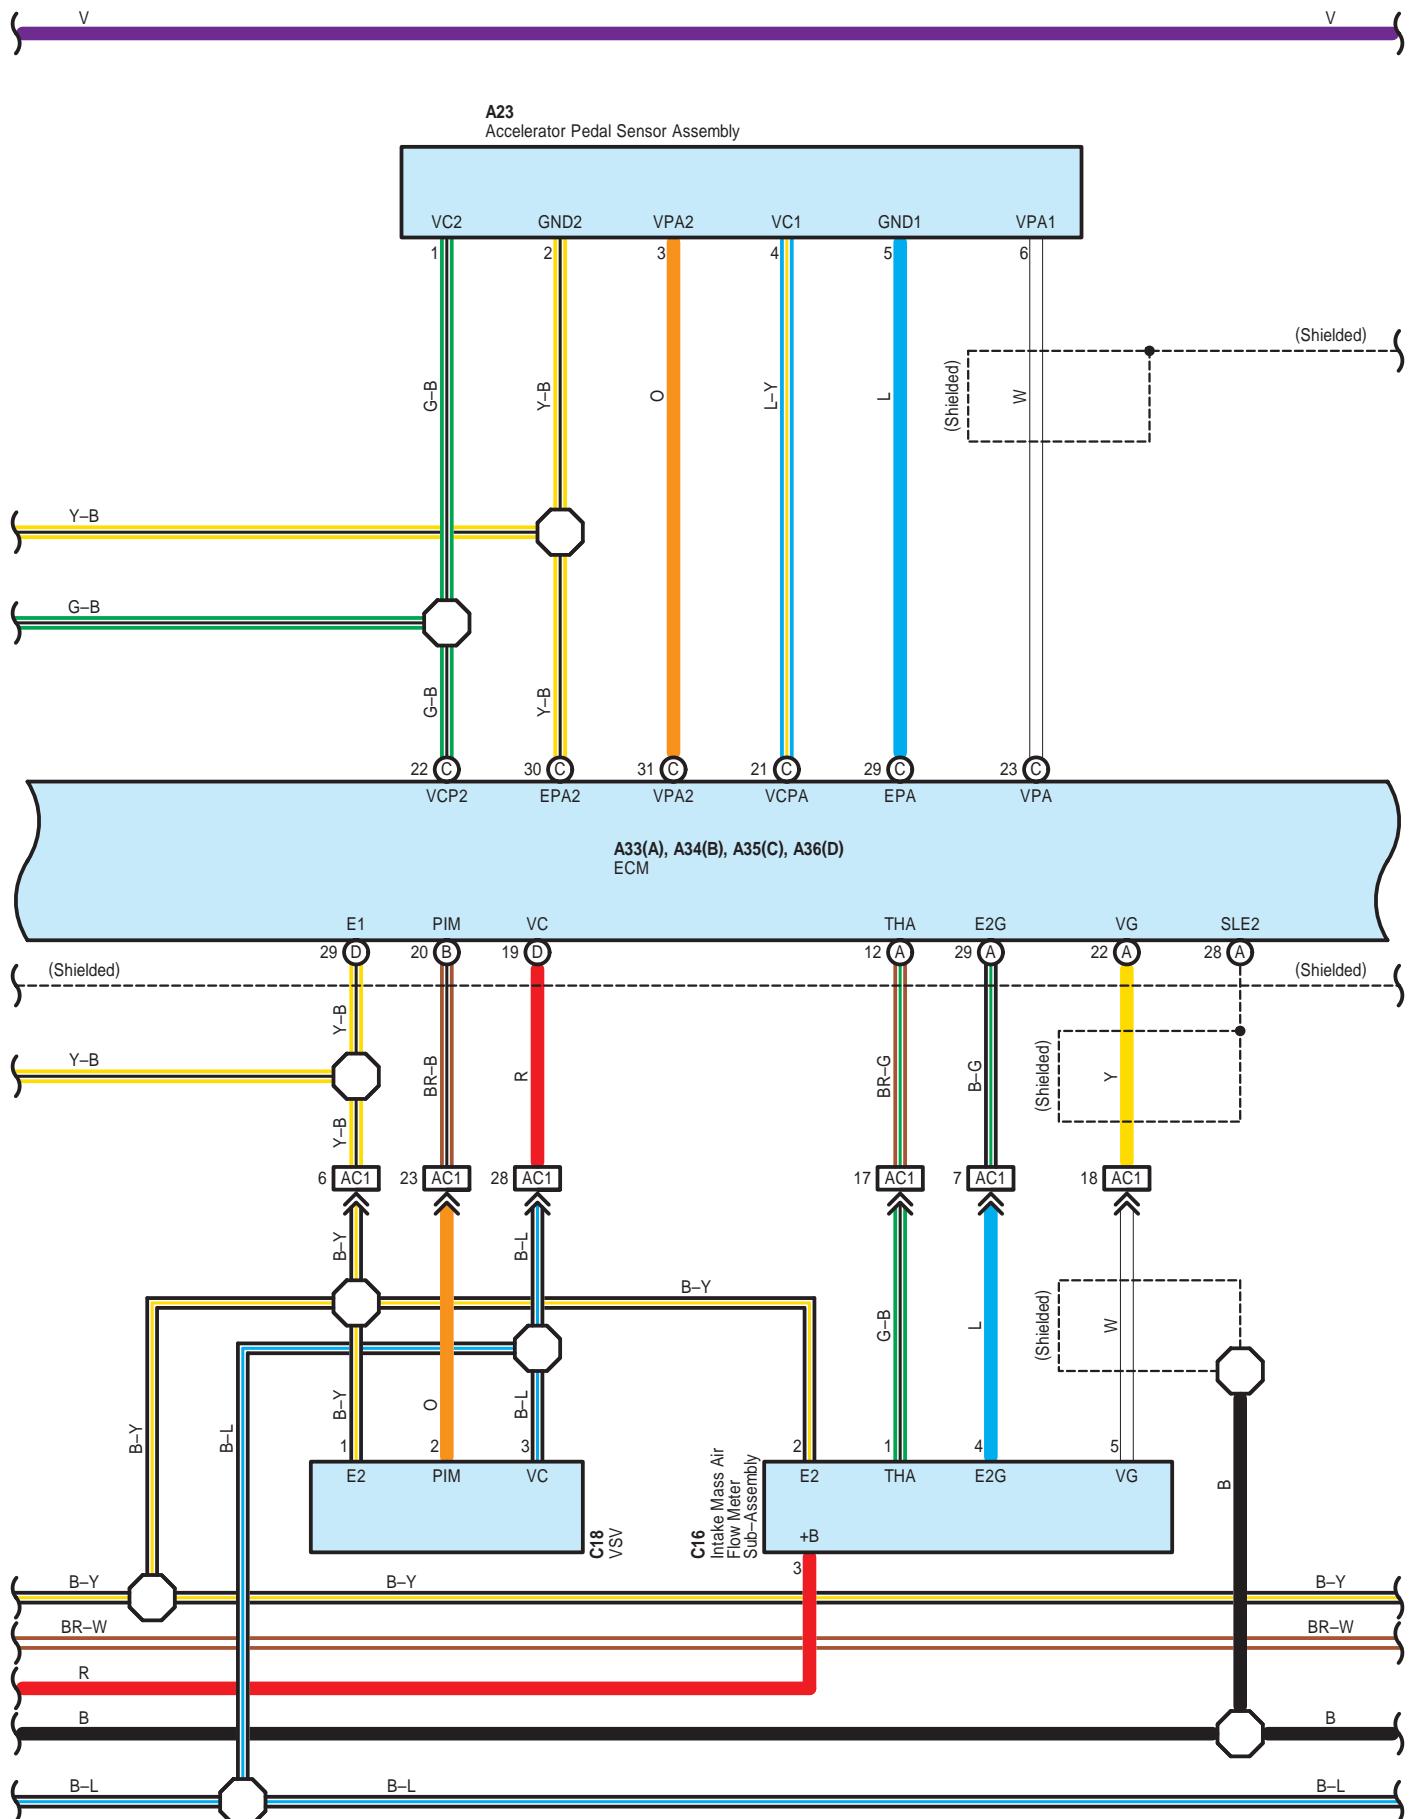

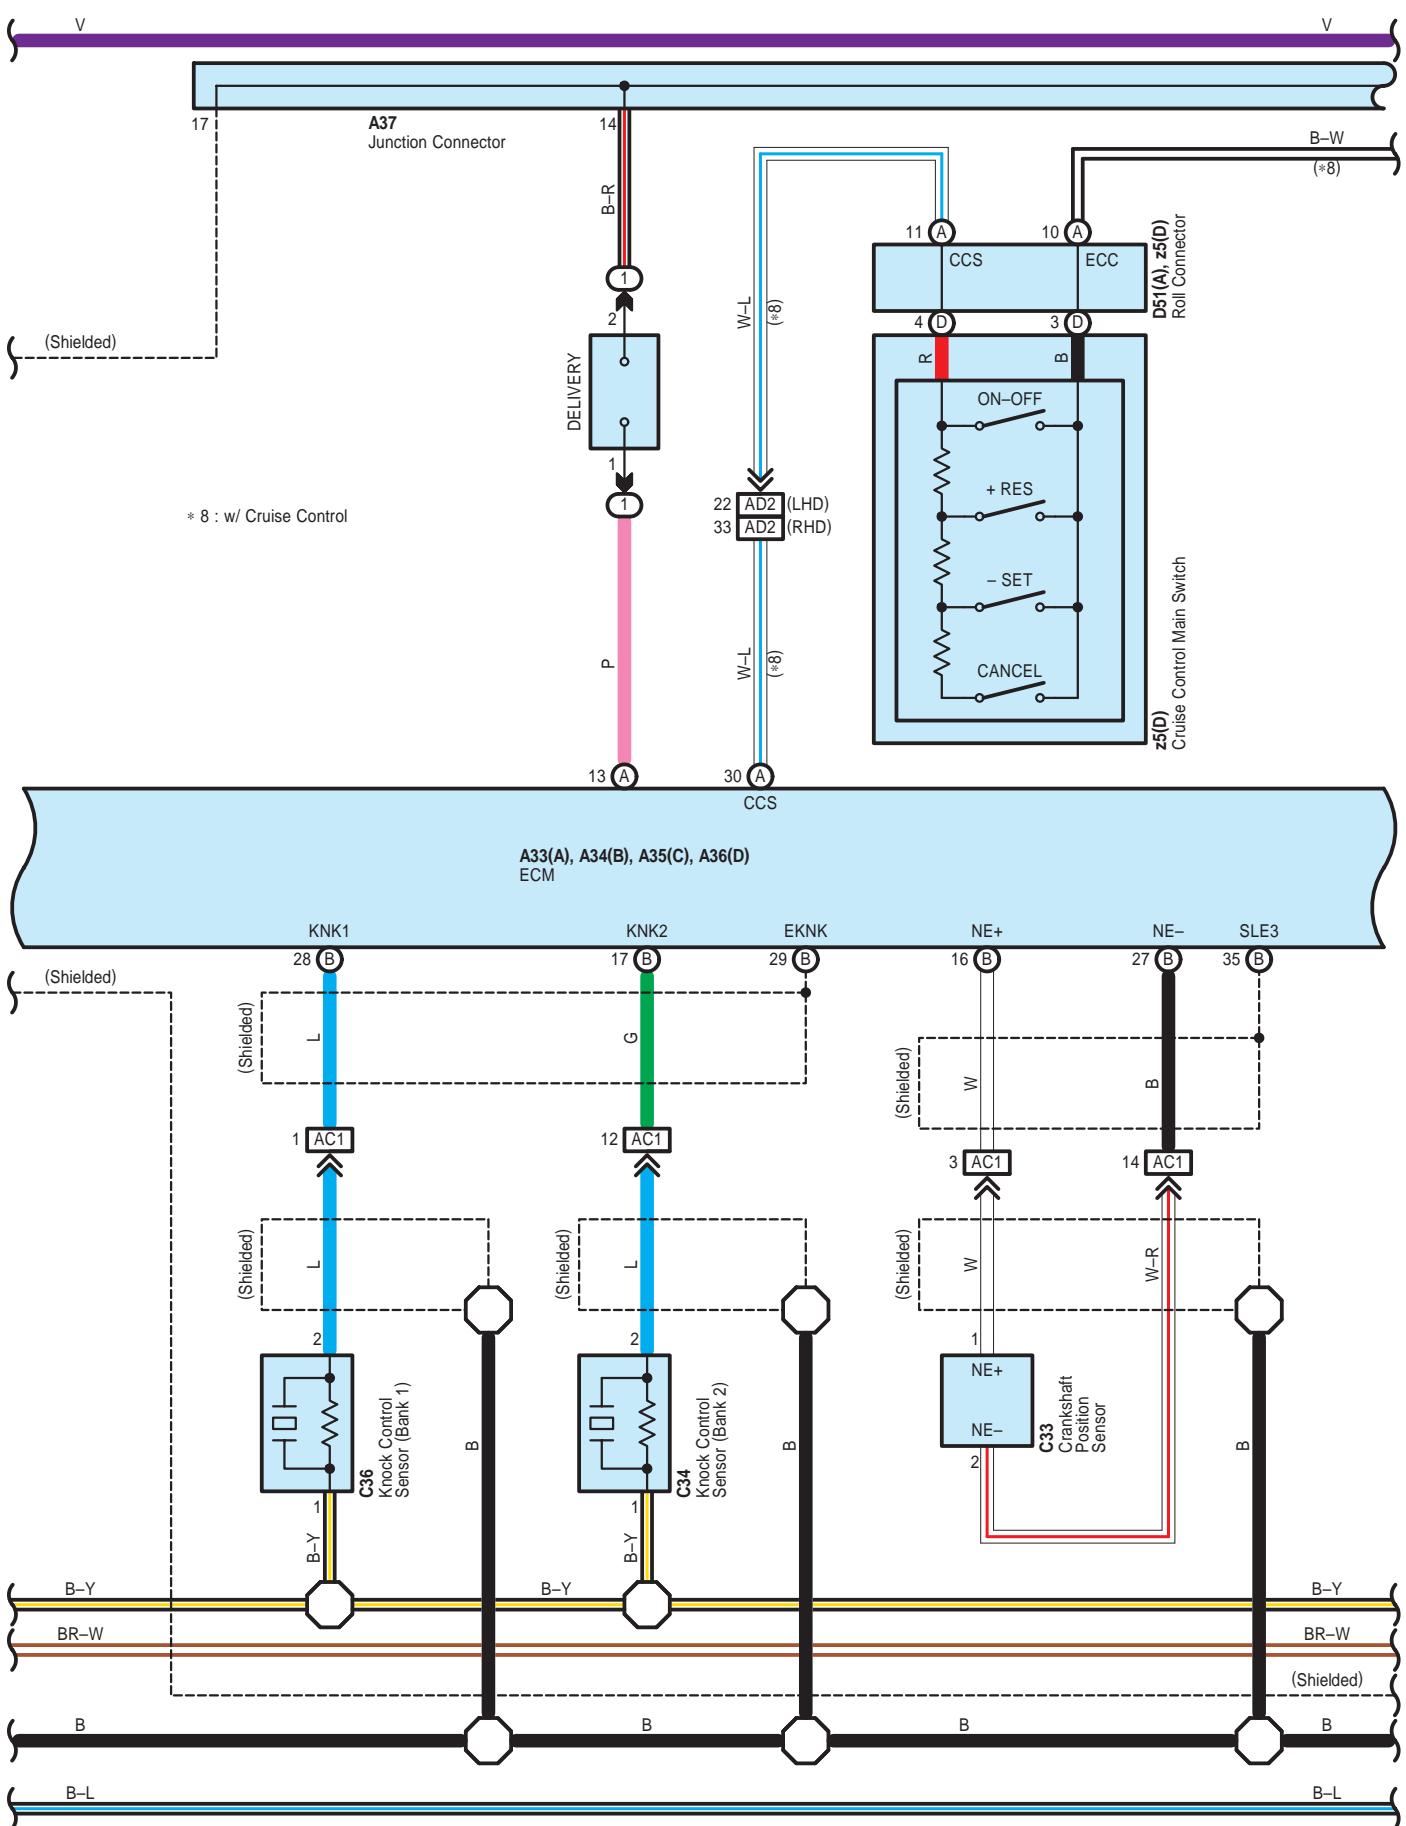



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

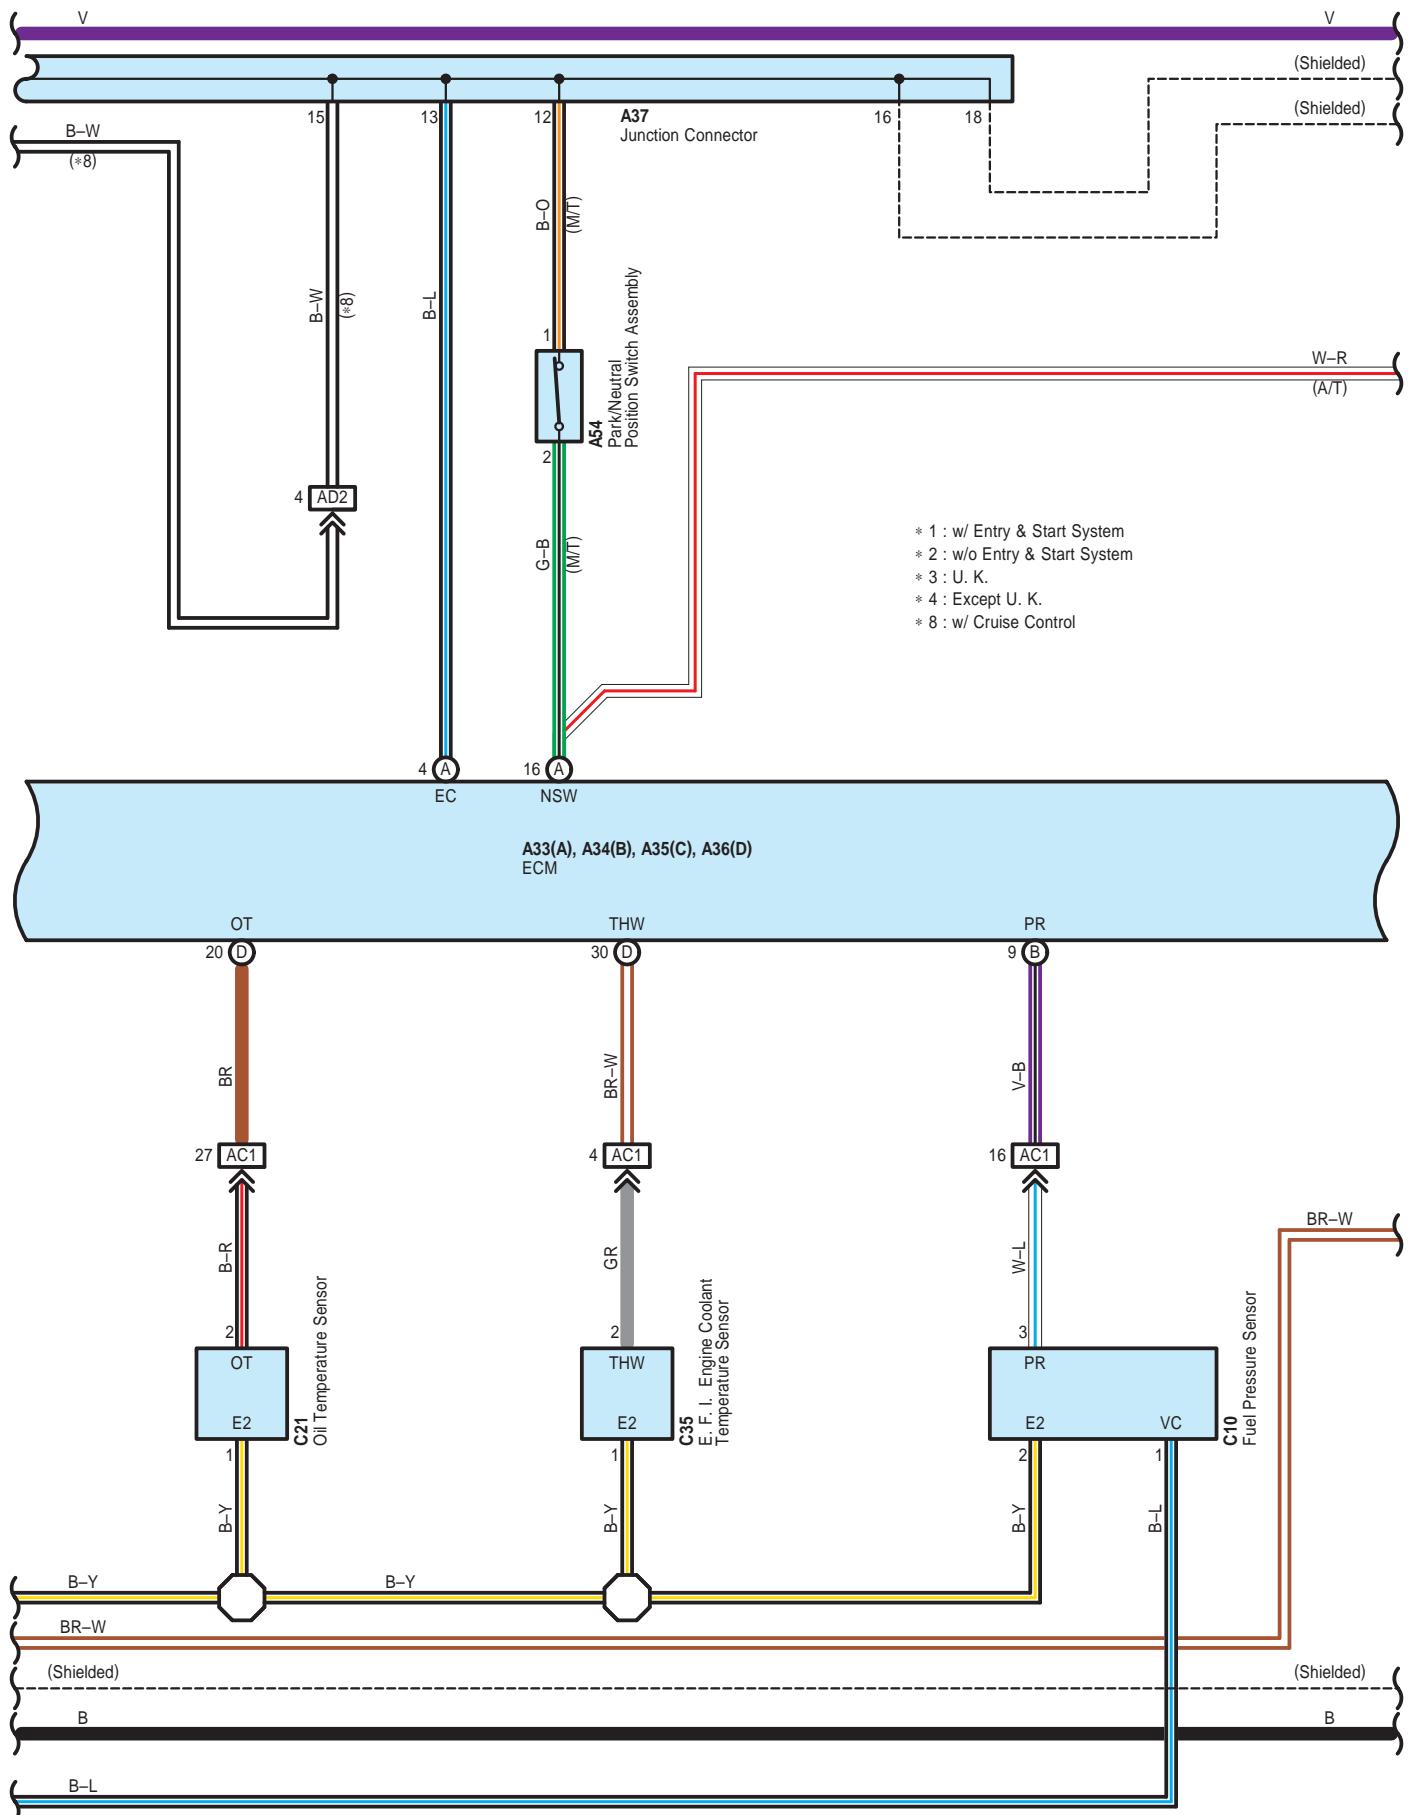

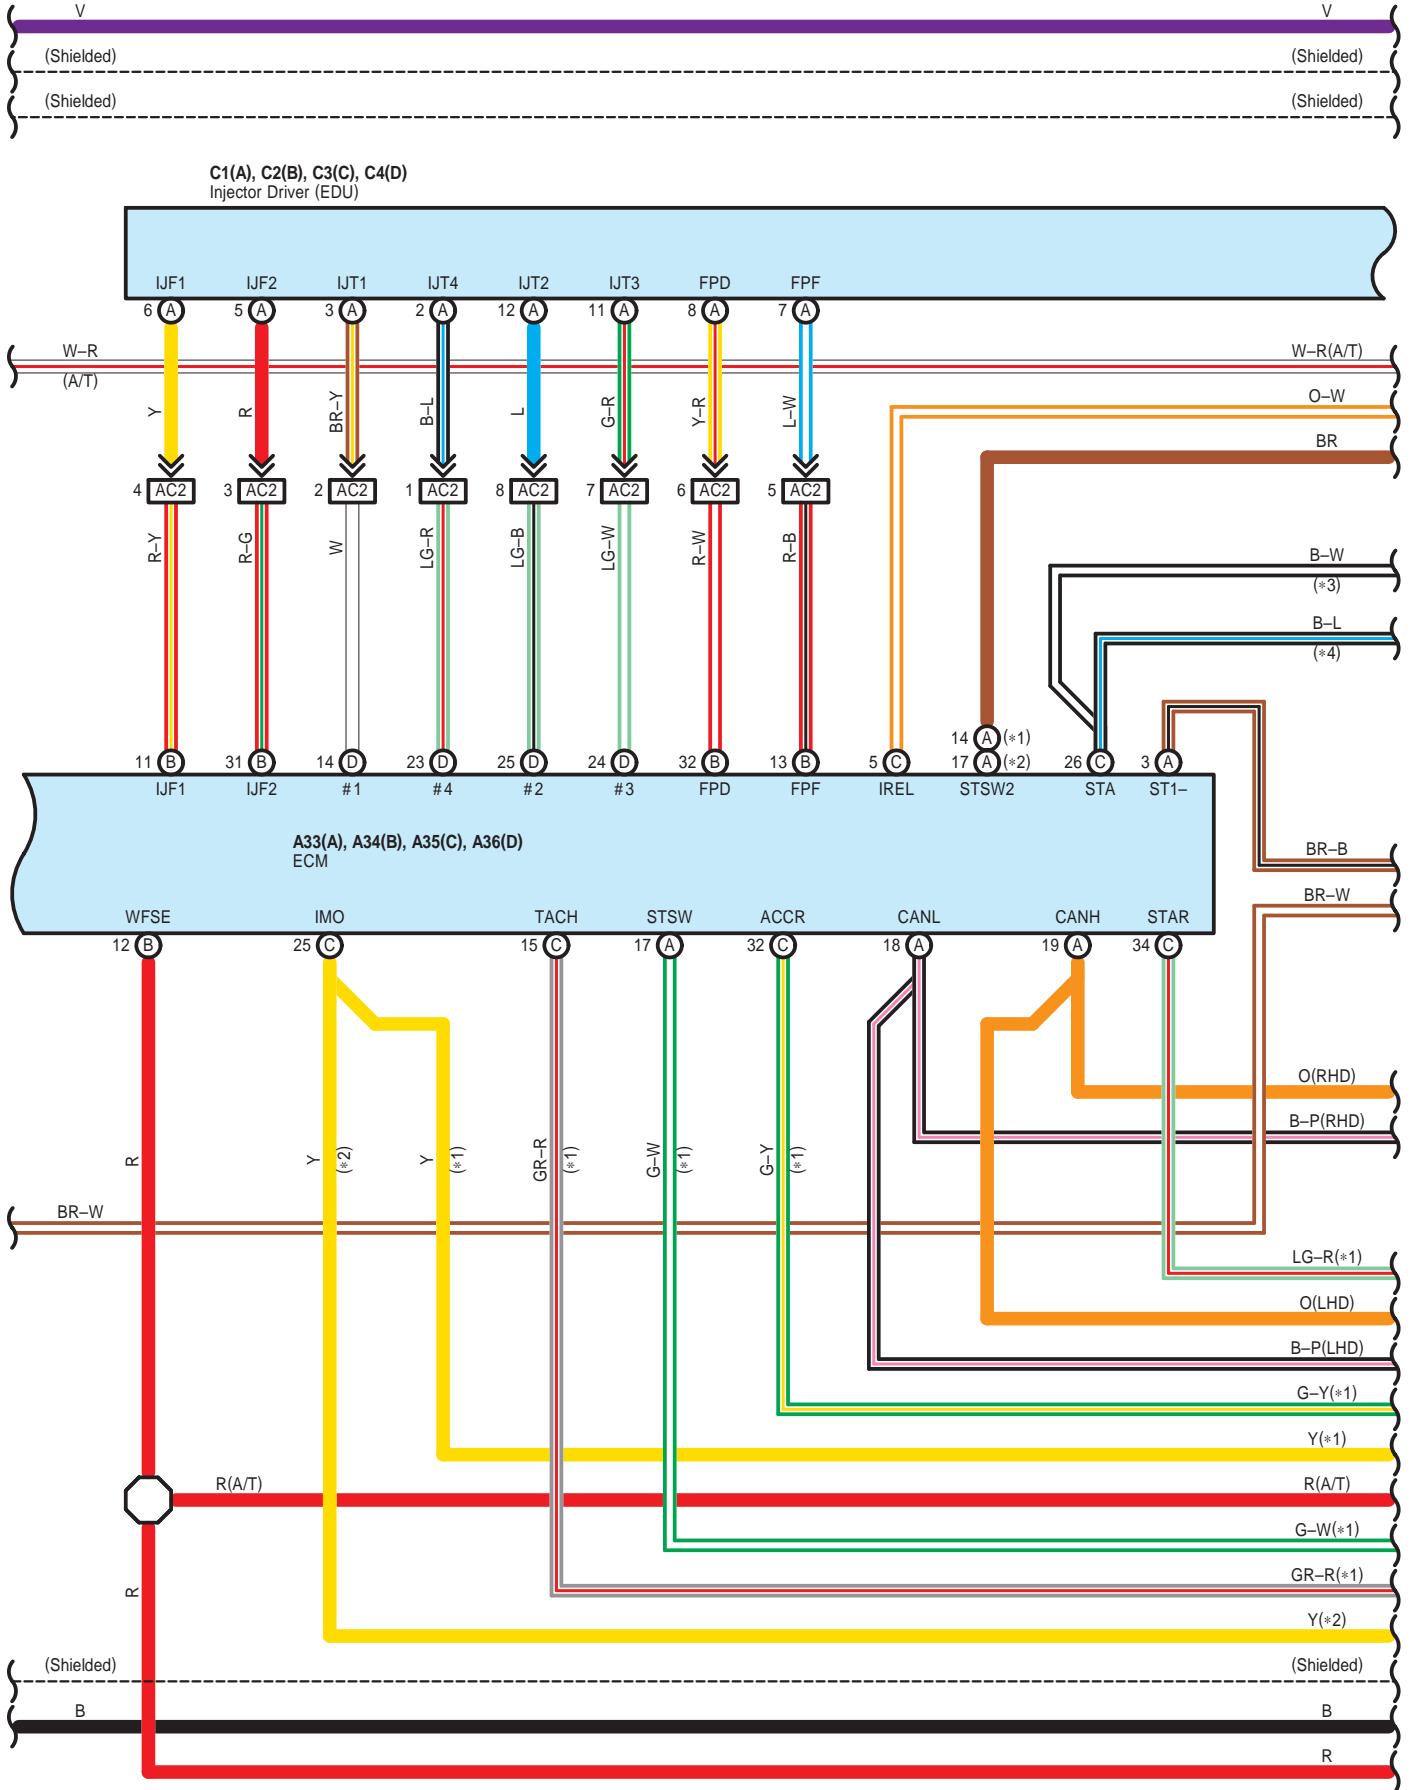



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

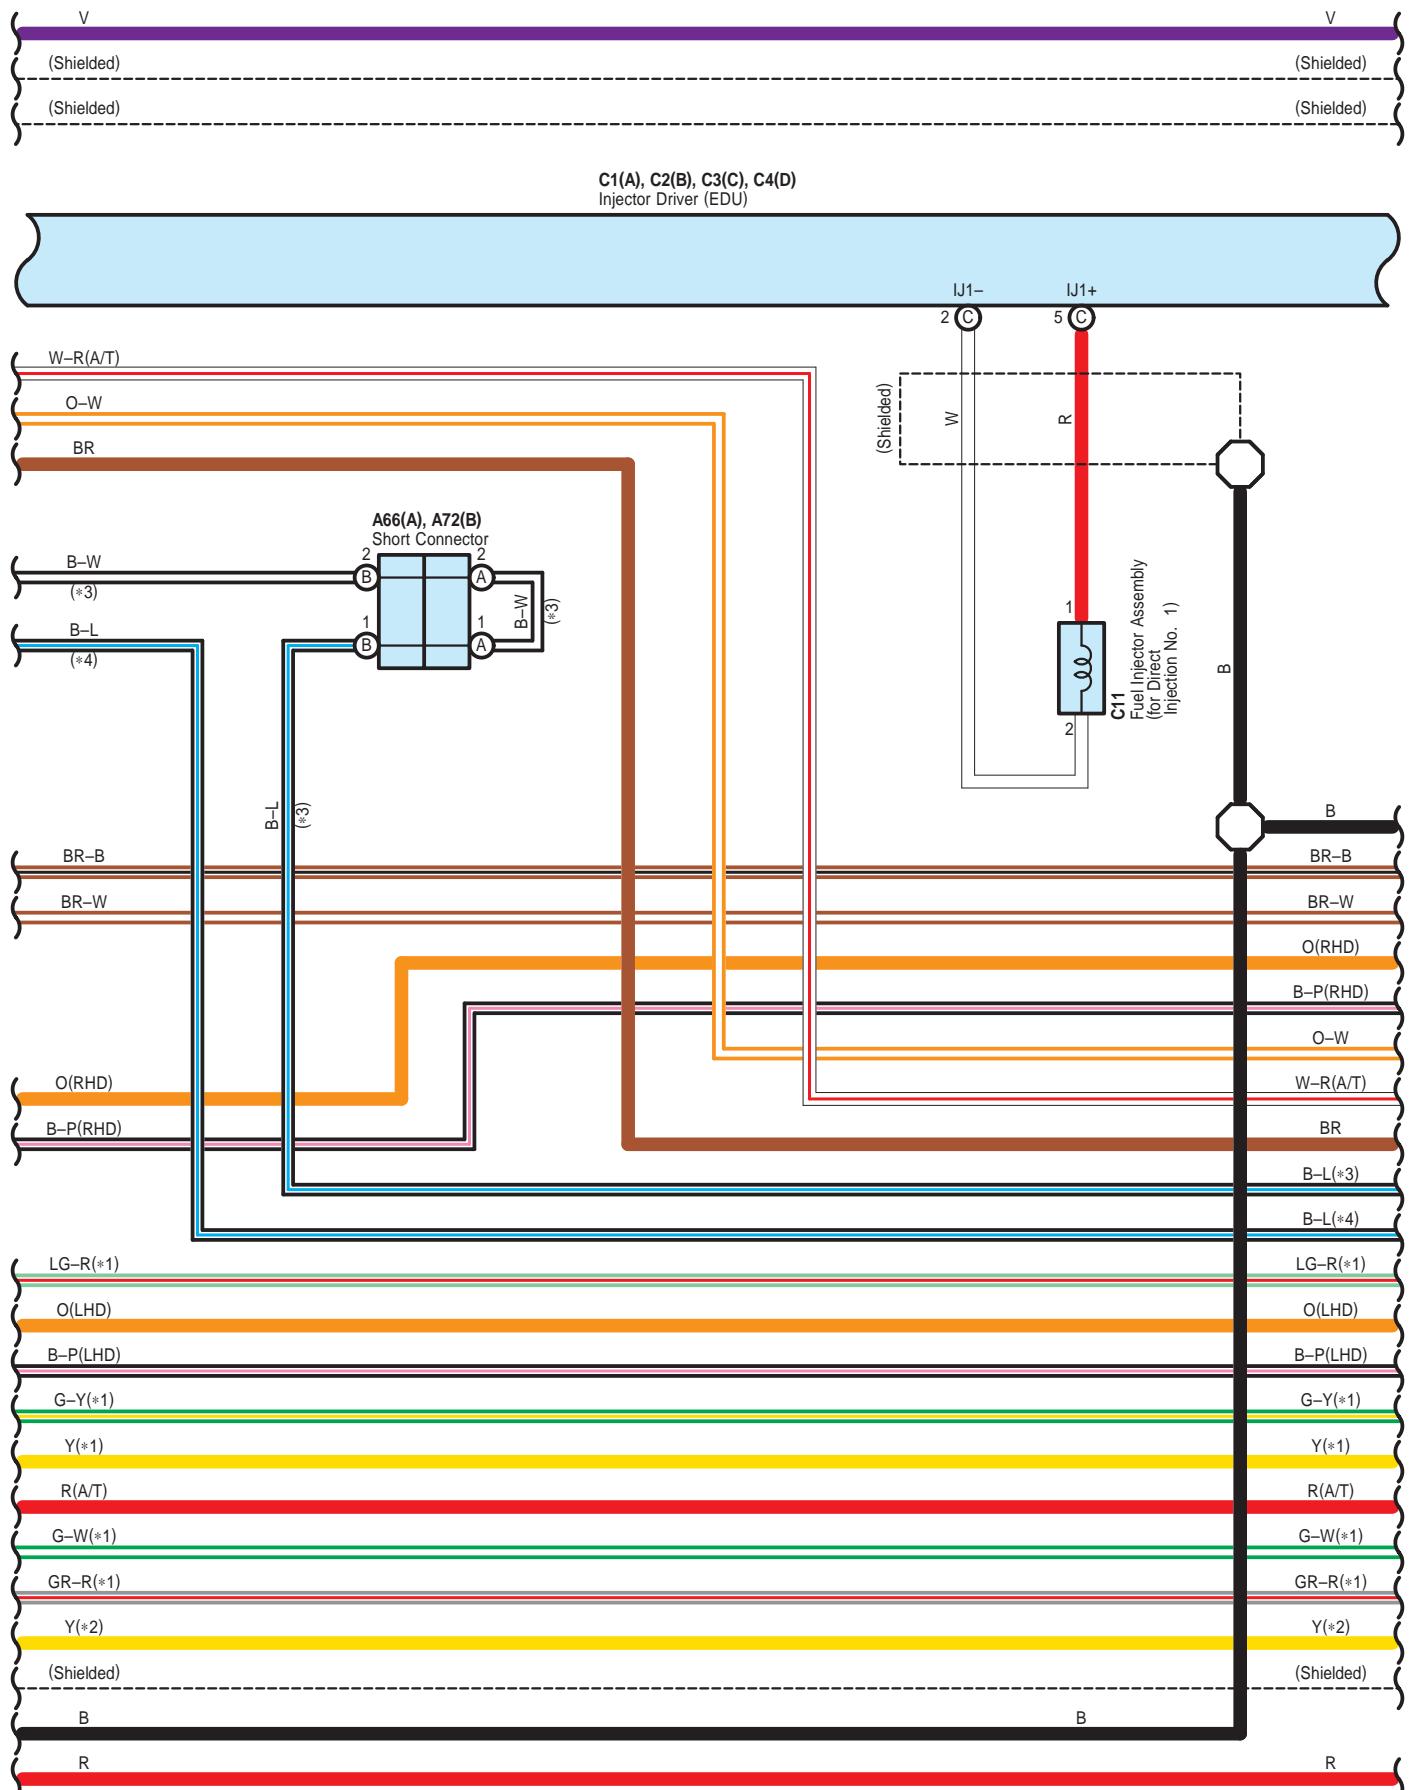

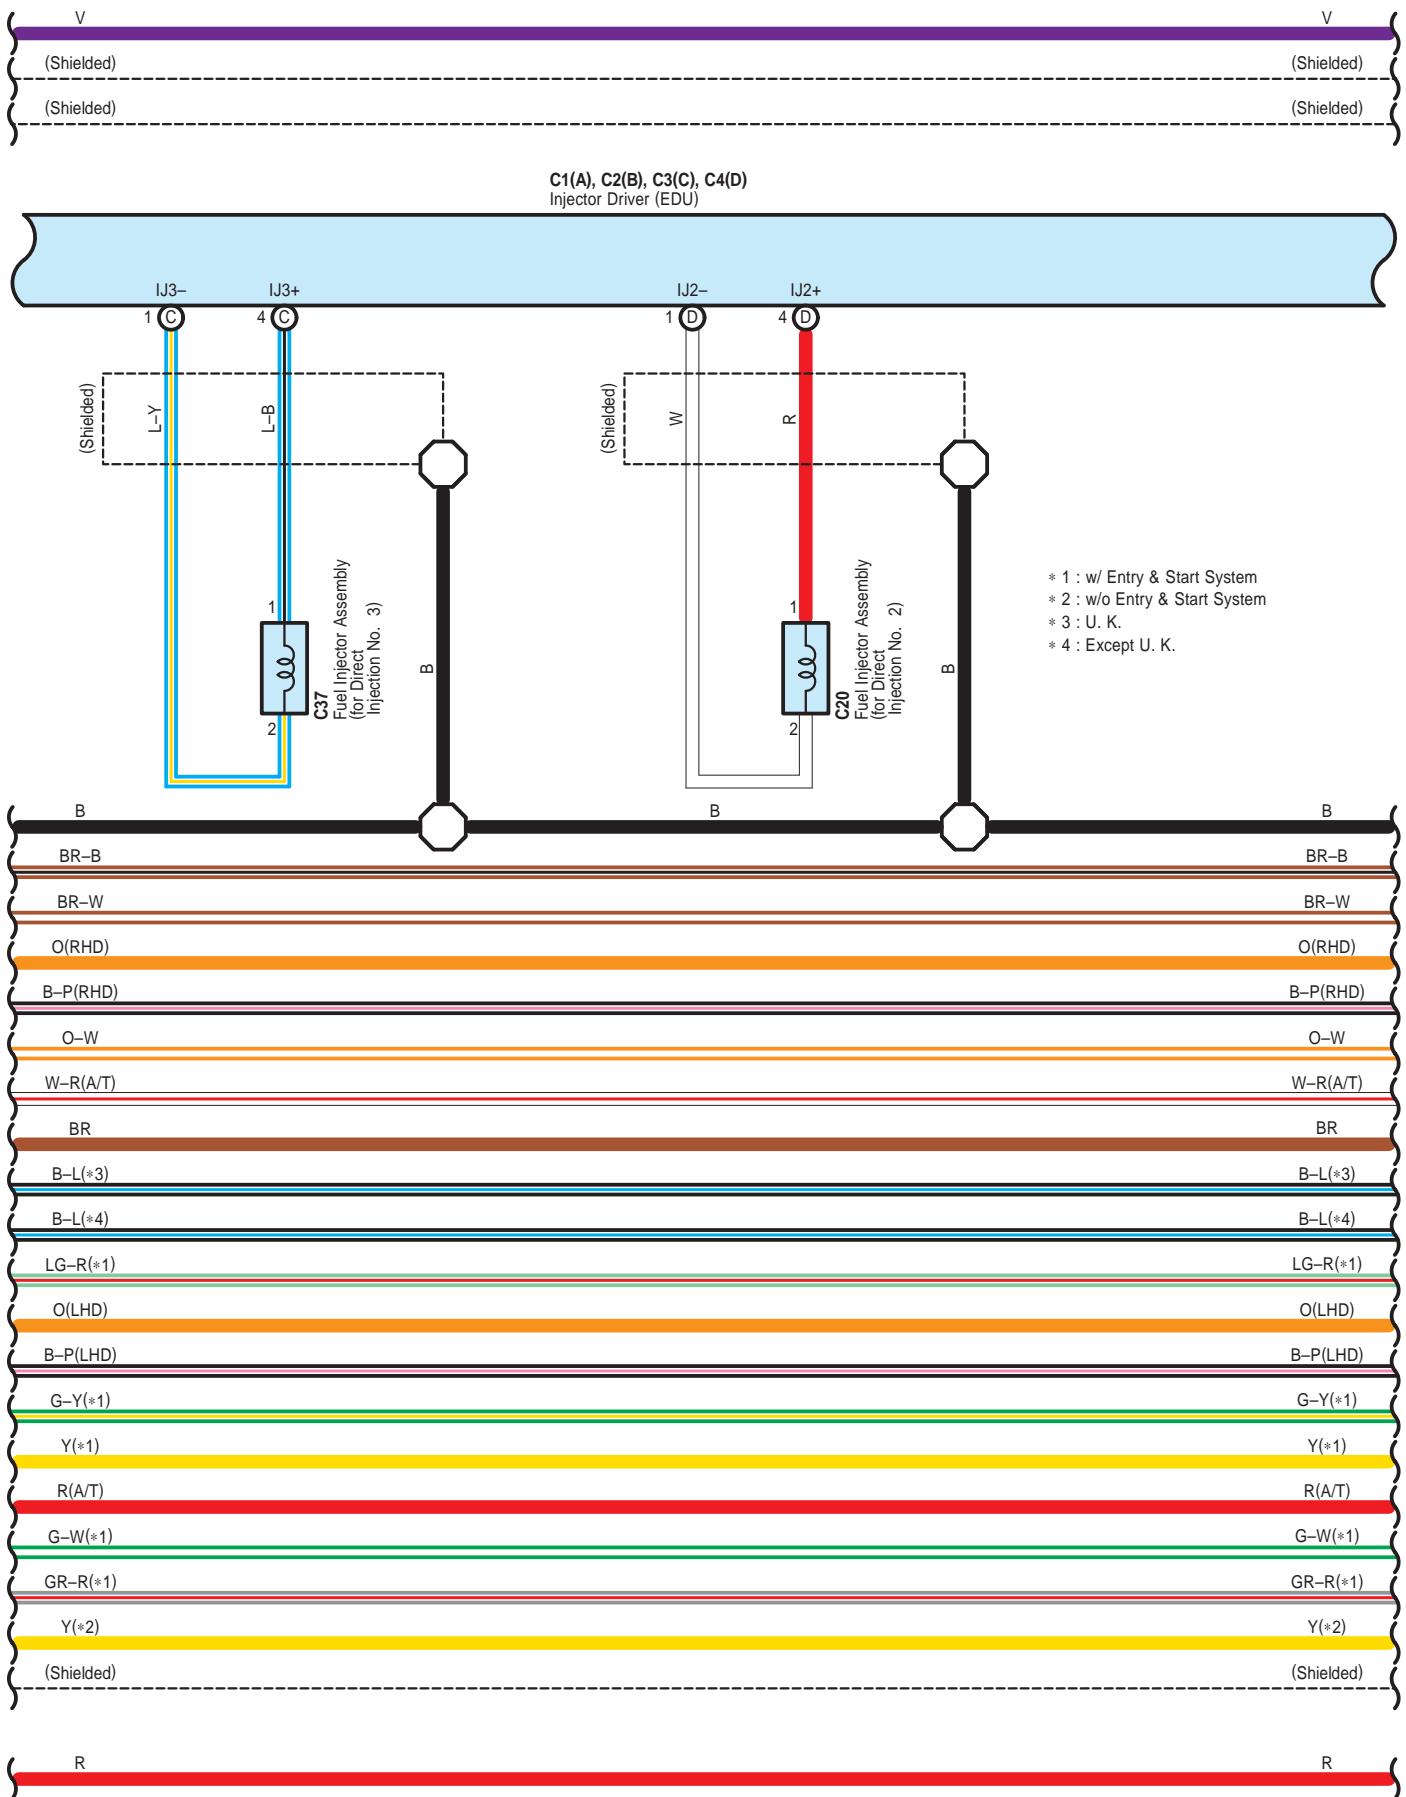



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

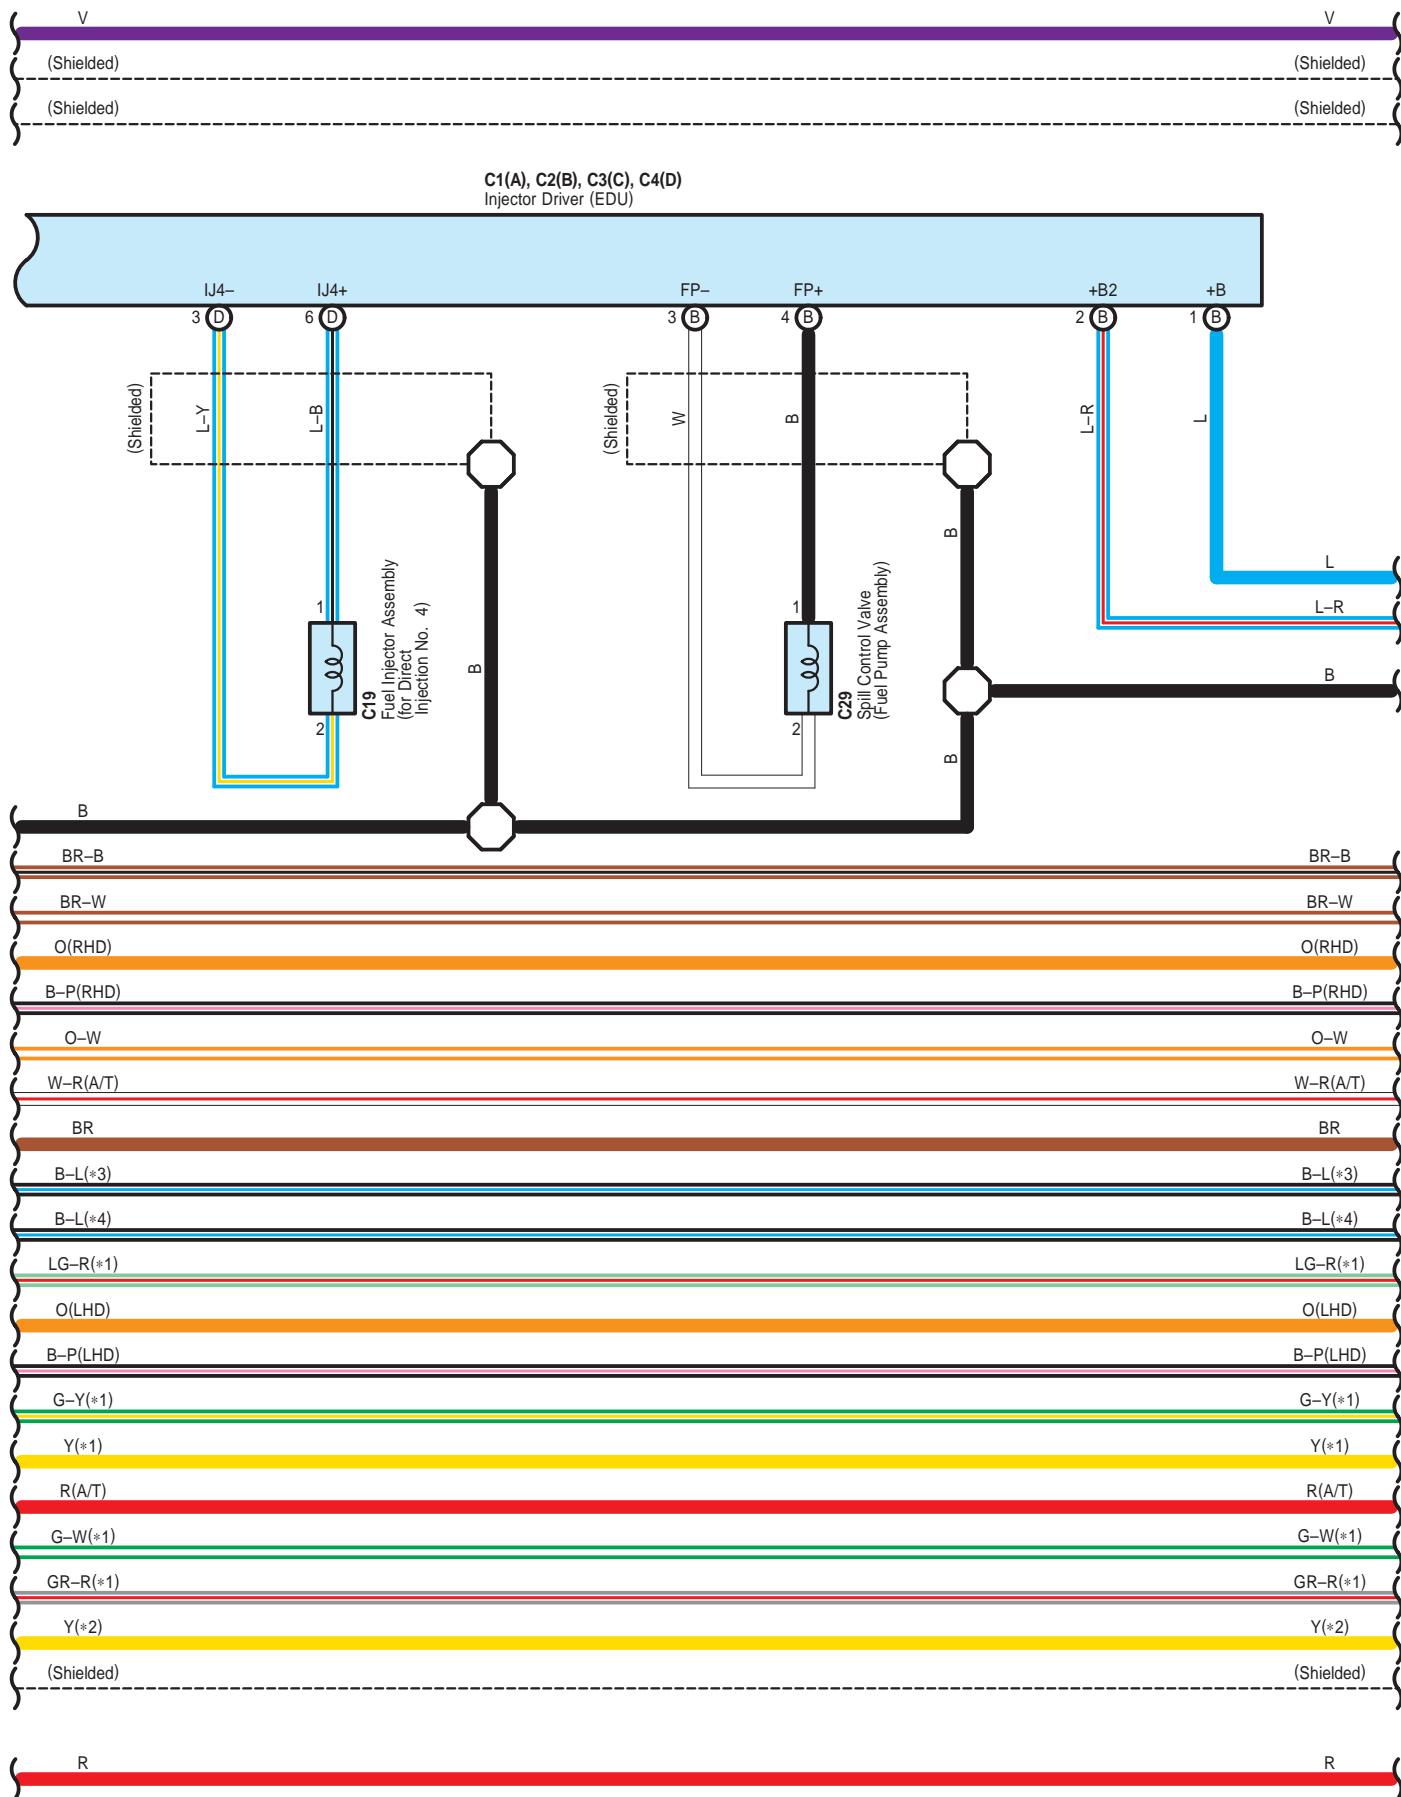

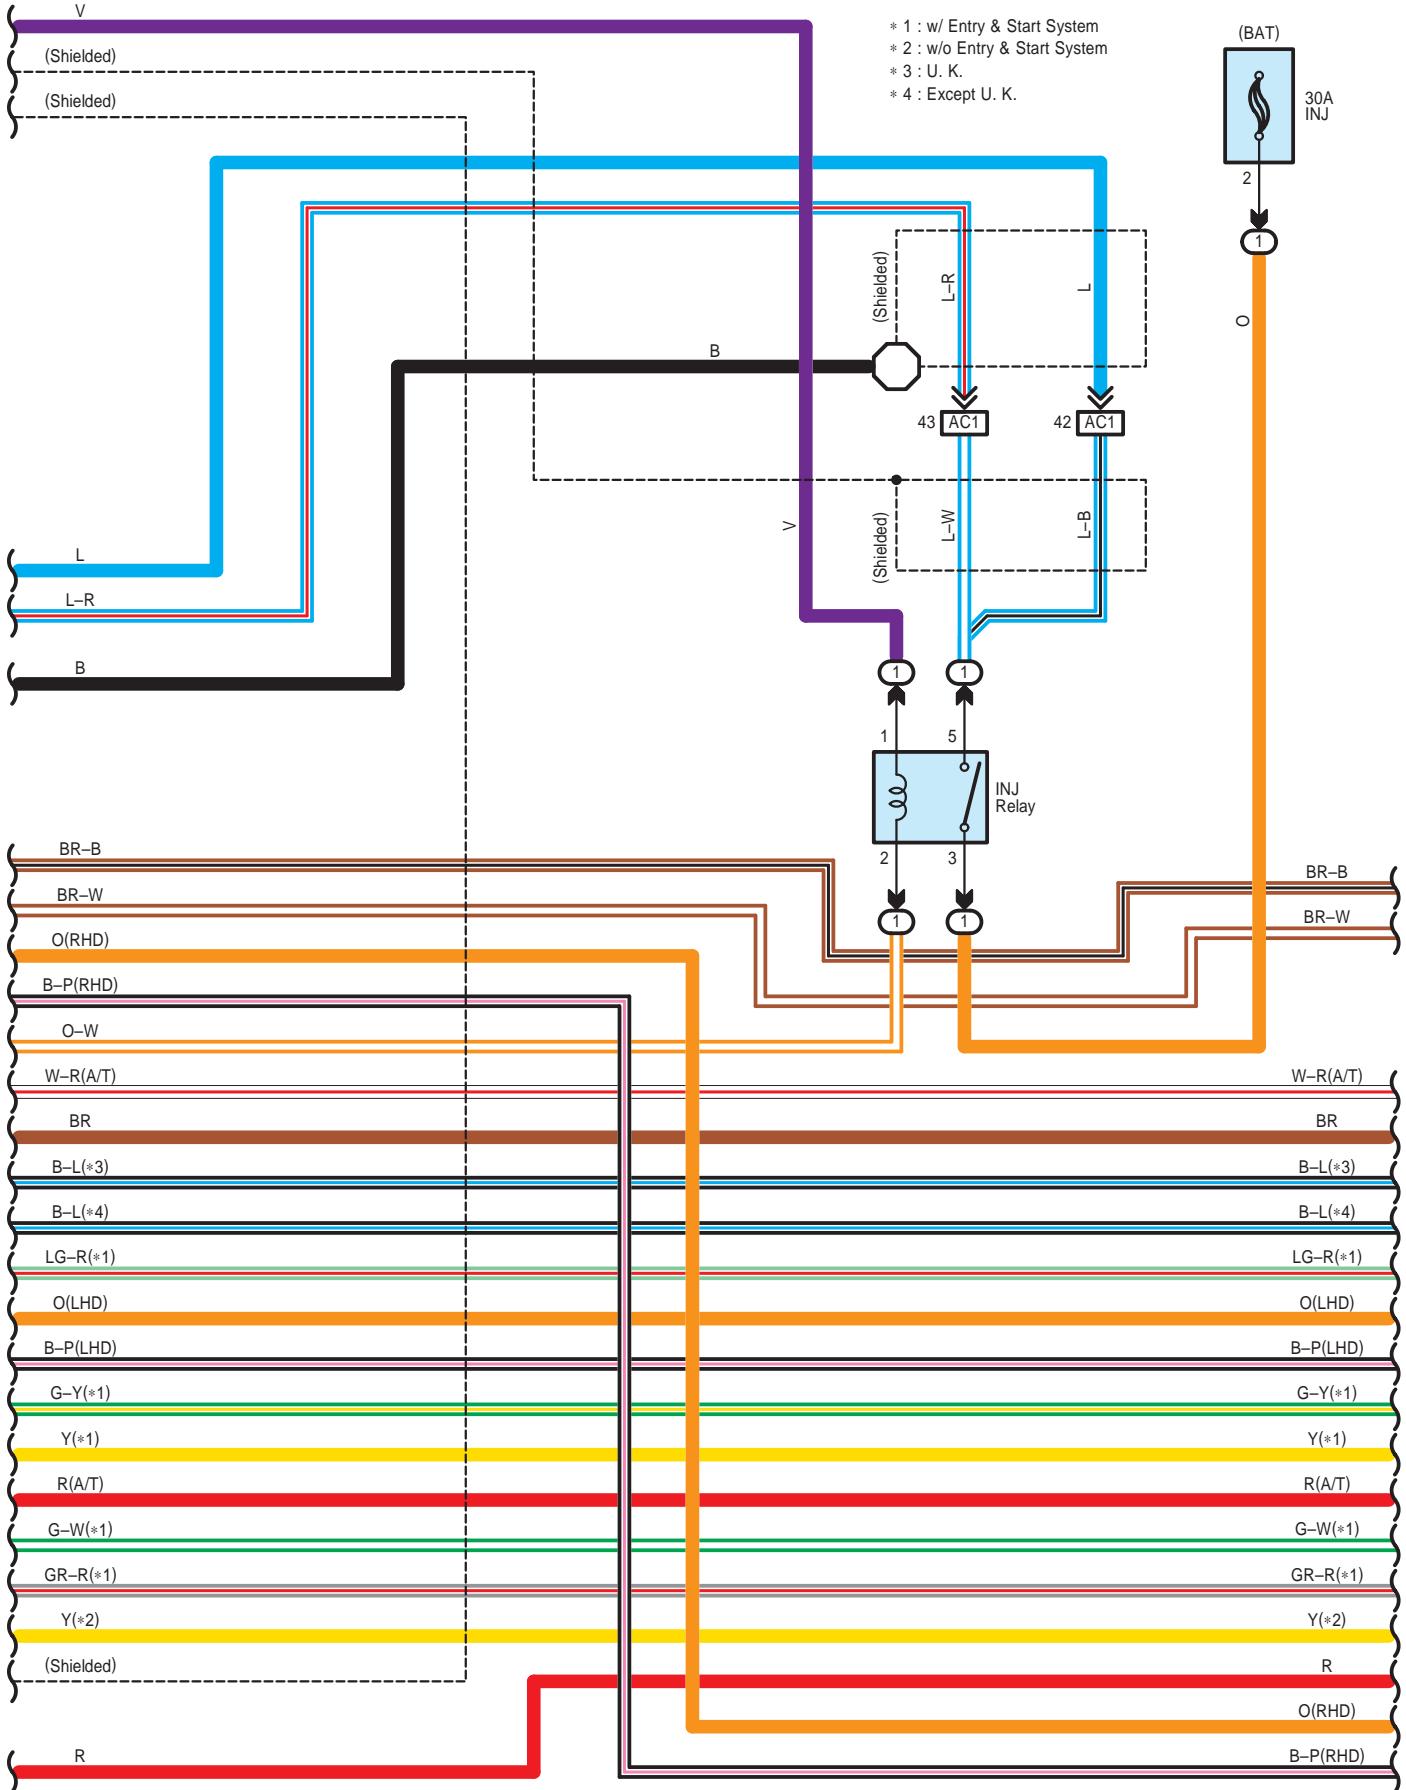


Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

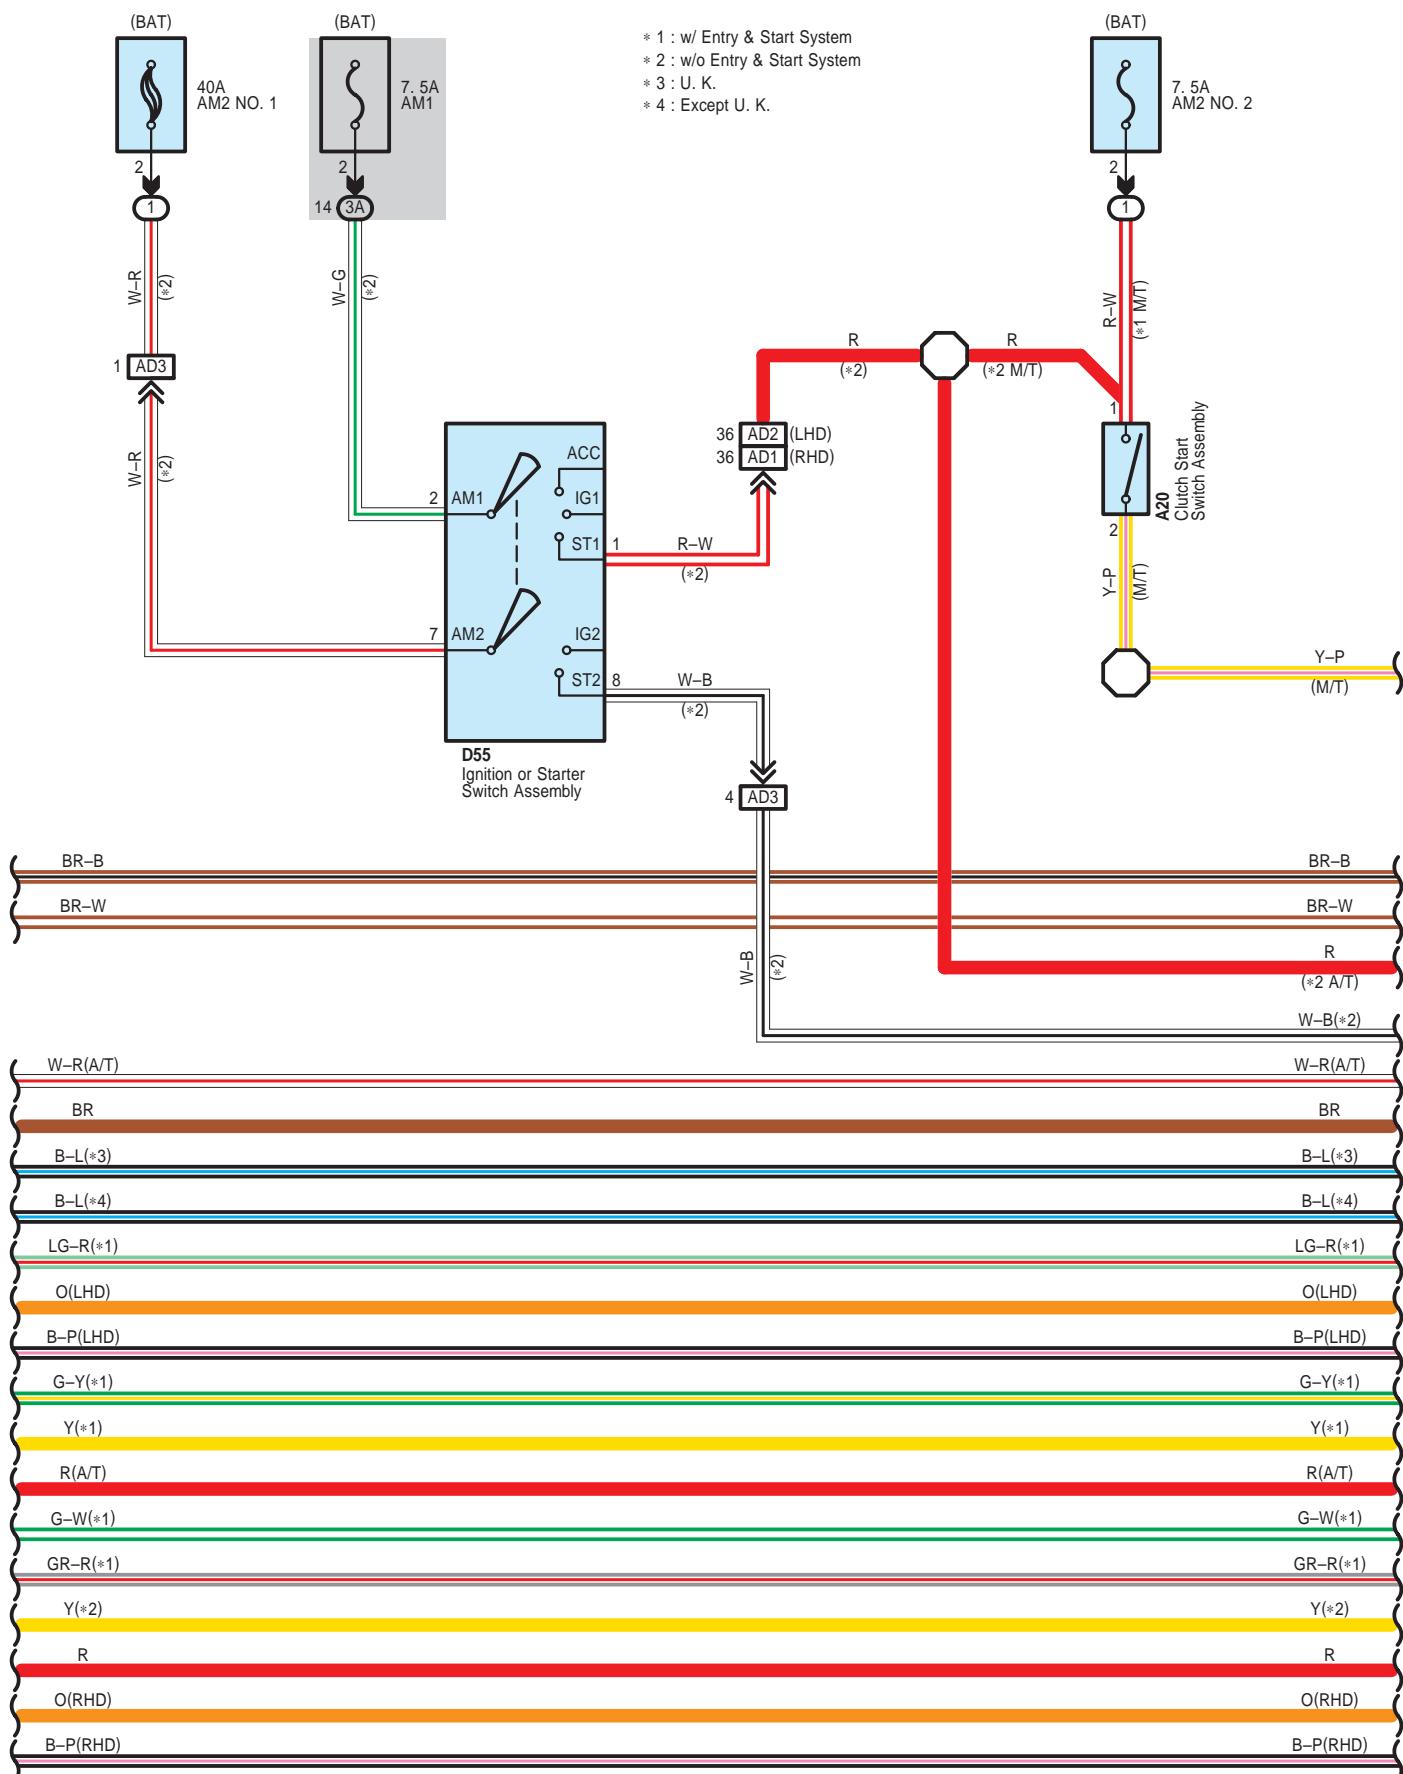


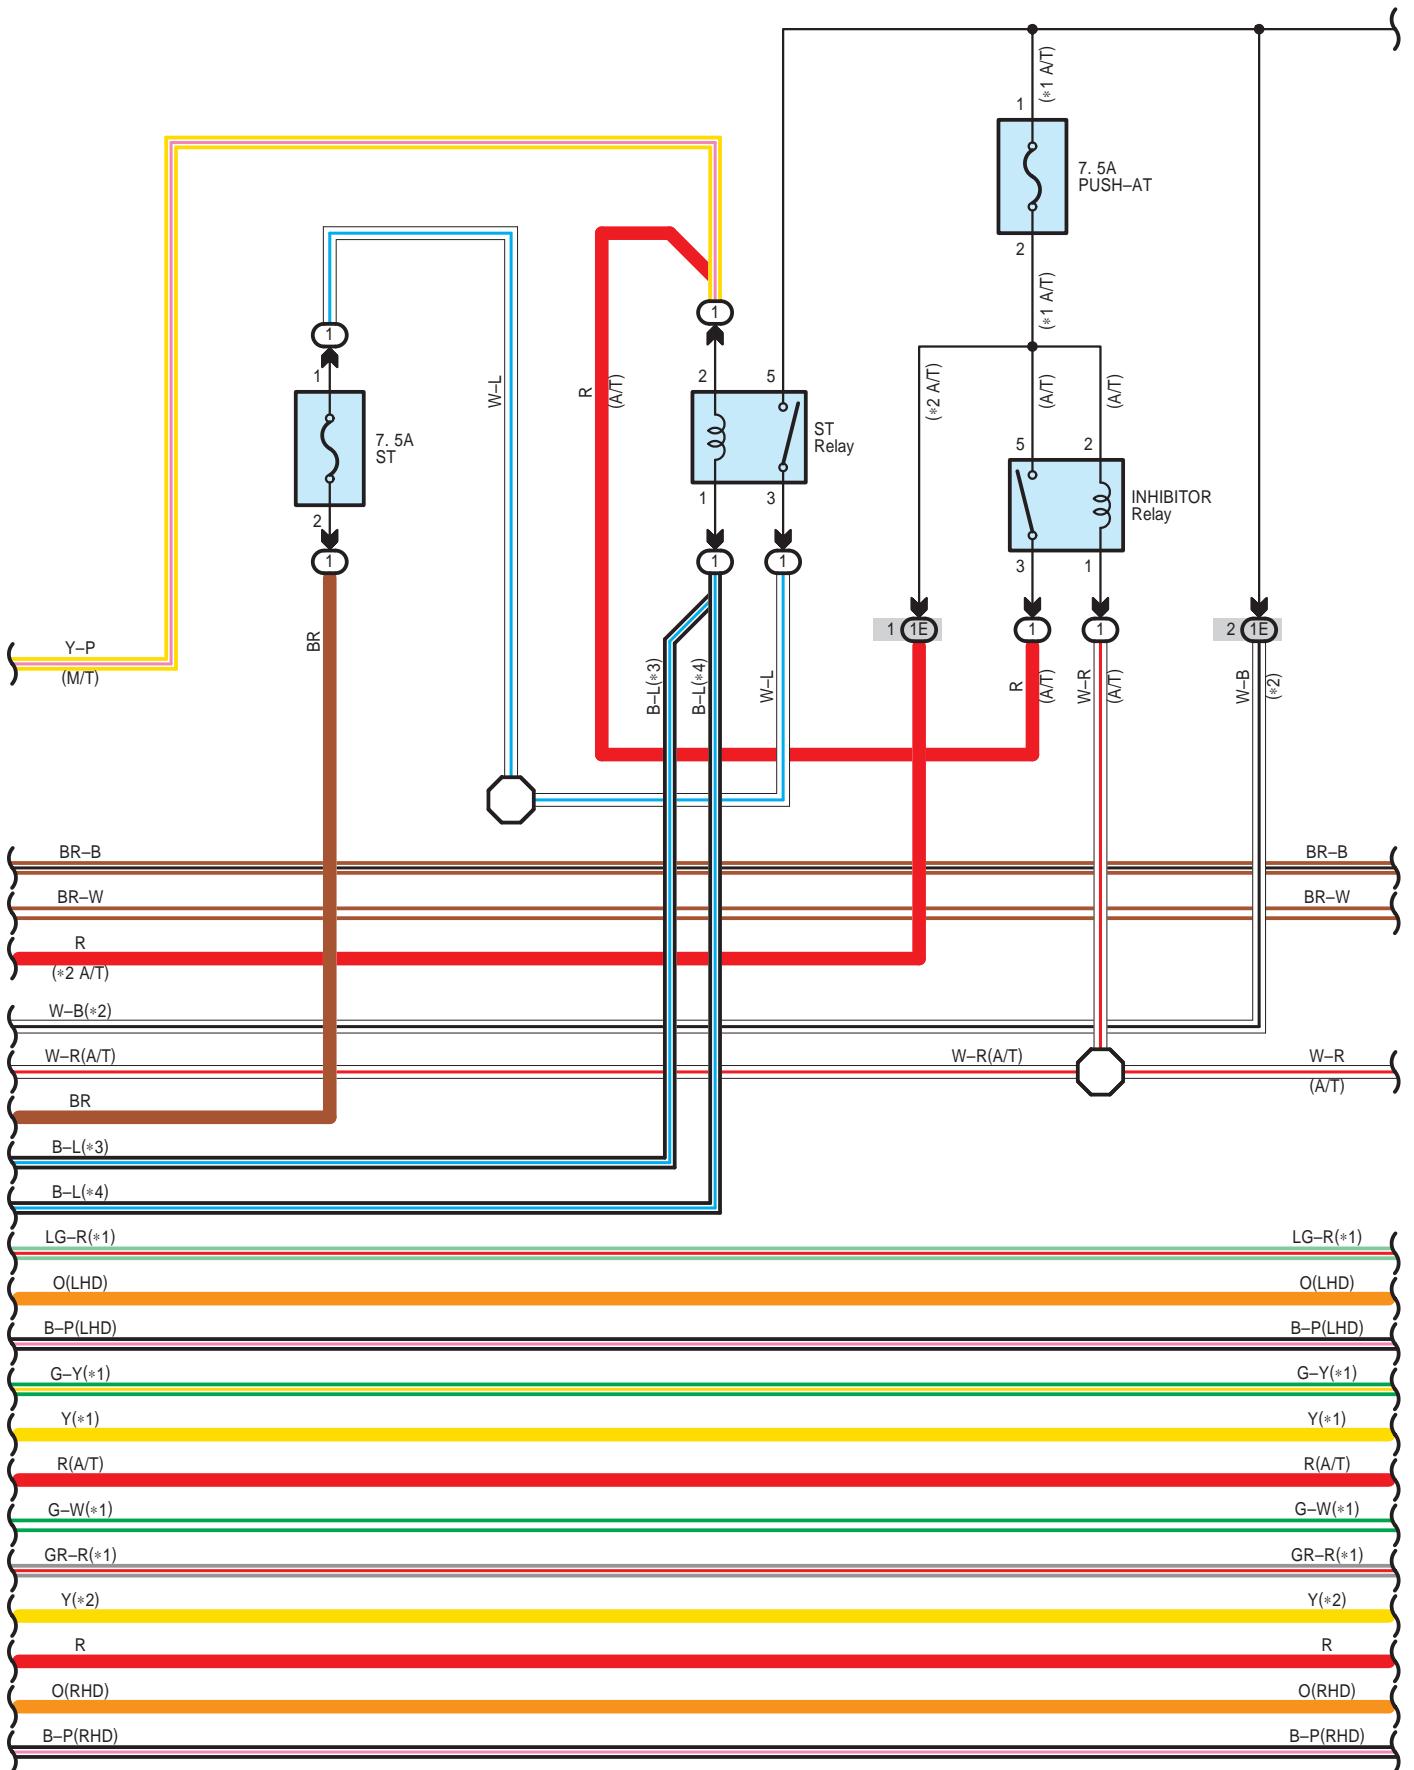

Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

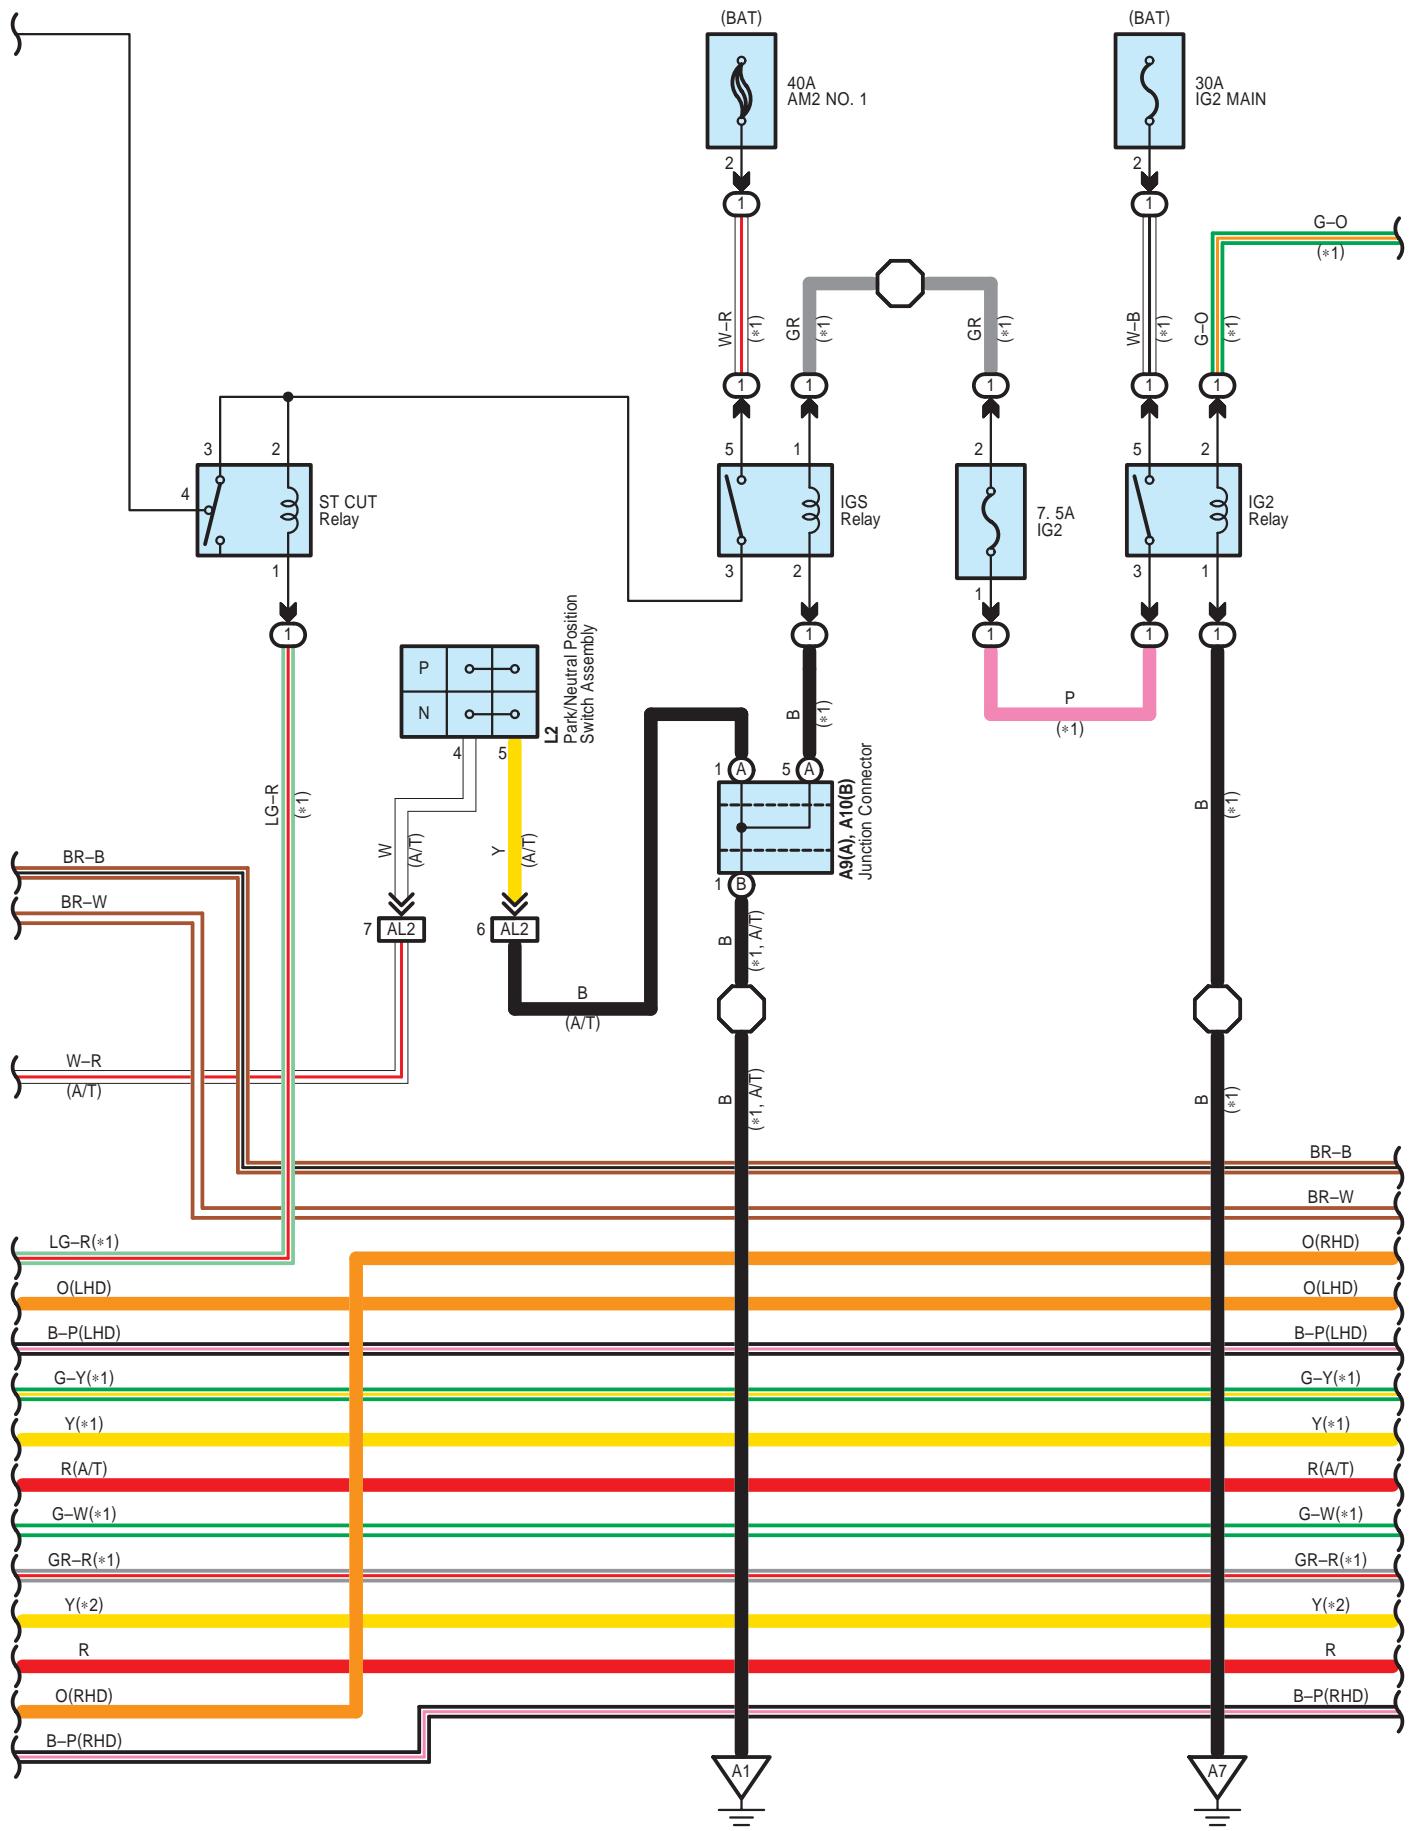


D40(A), D41(B), D48(C)
Certification ECU Assembly

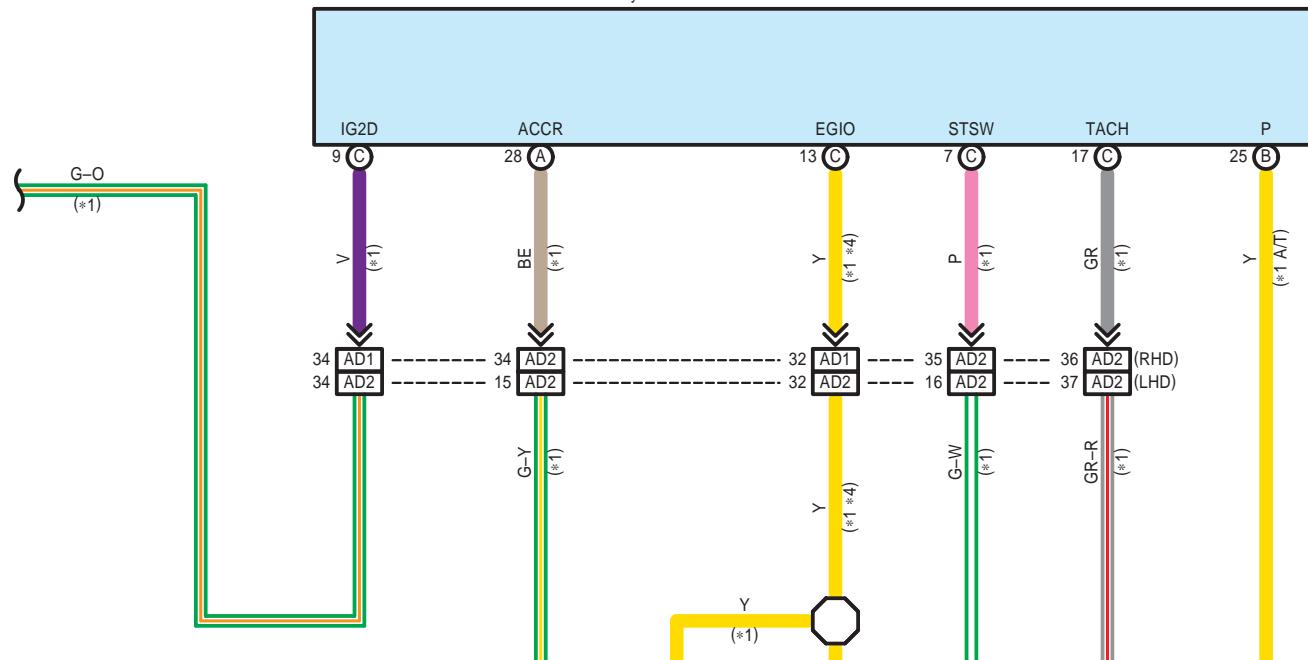


* 1 : w/ Entry & Start System

* 3 : U. K.


* 4 : Except U. K.

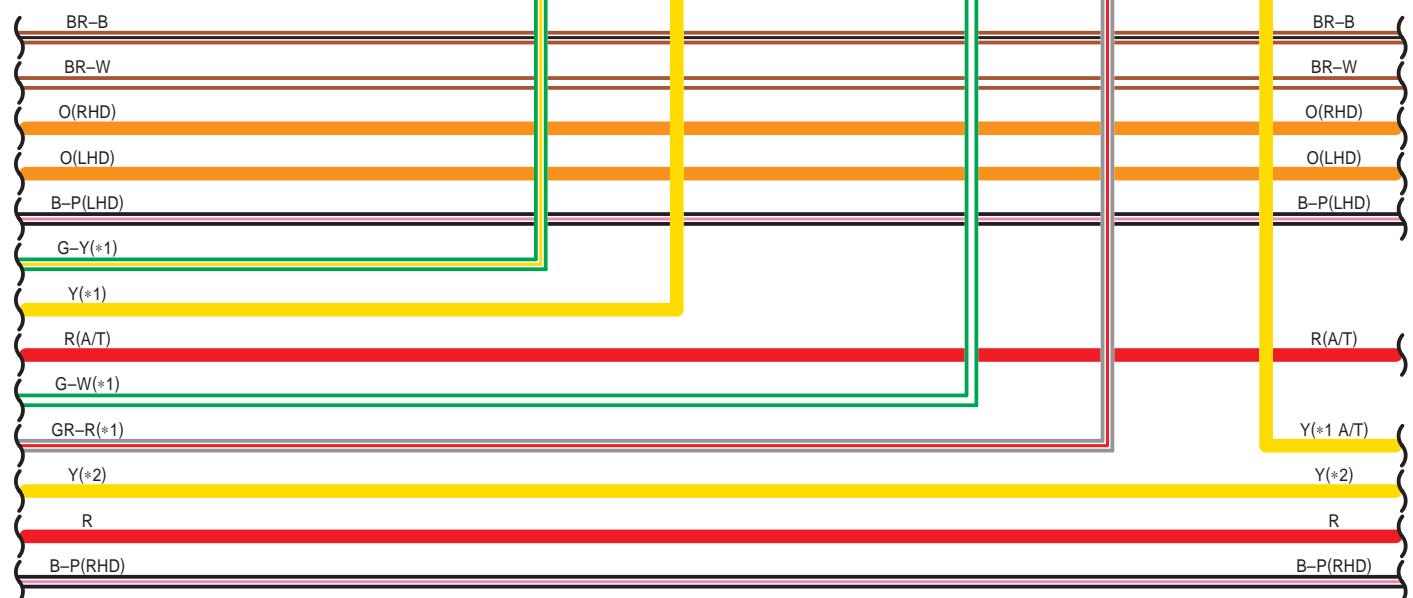


Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

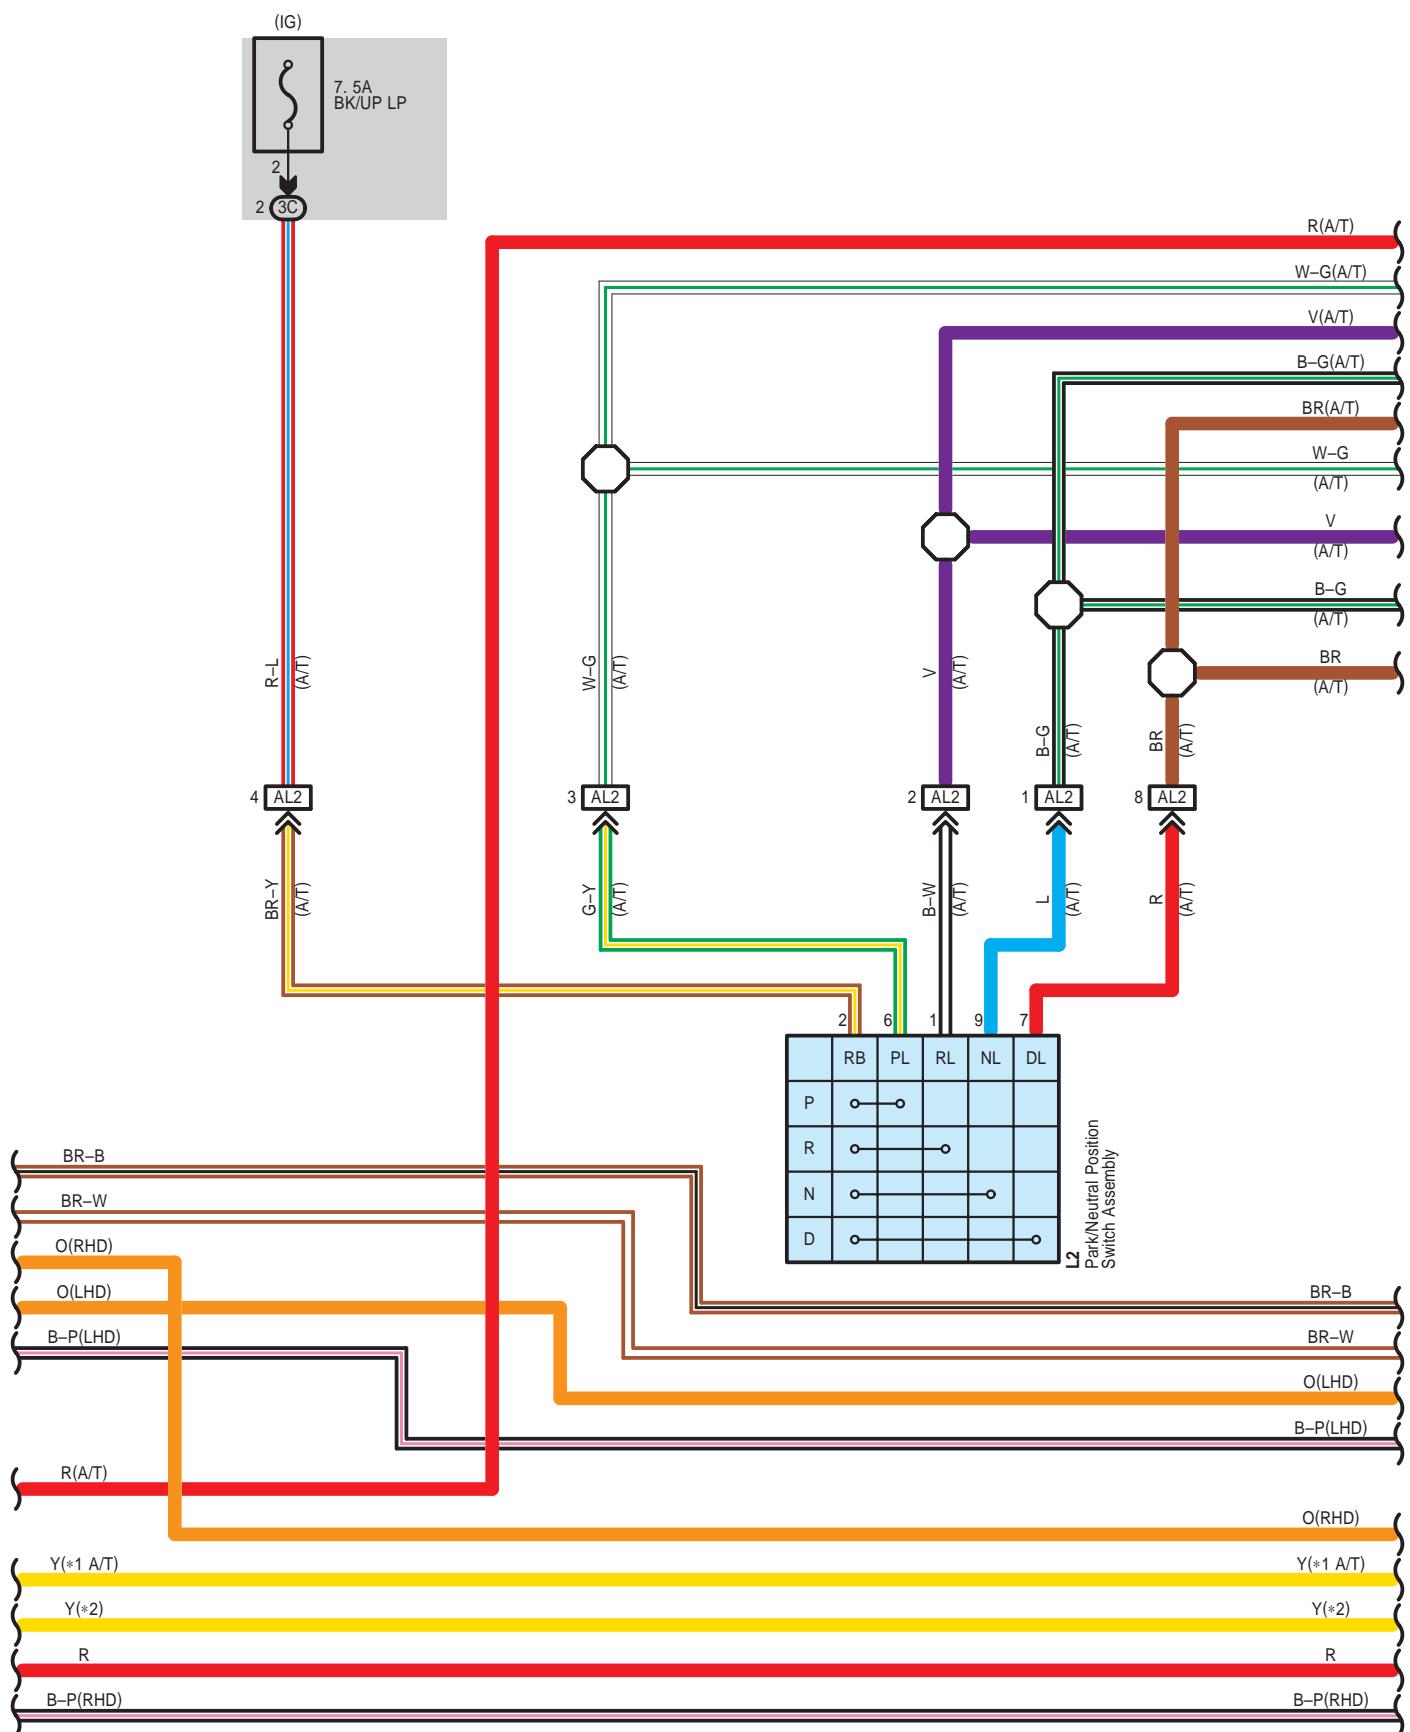


* 1 : w/ Entry & Start System
 * 2 : w/o Entry & Start System

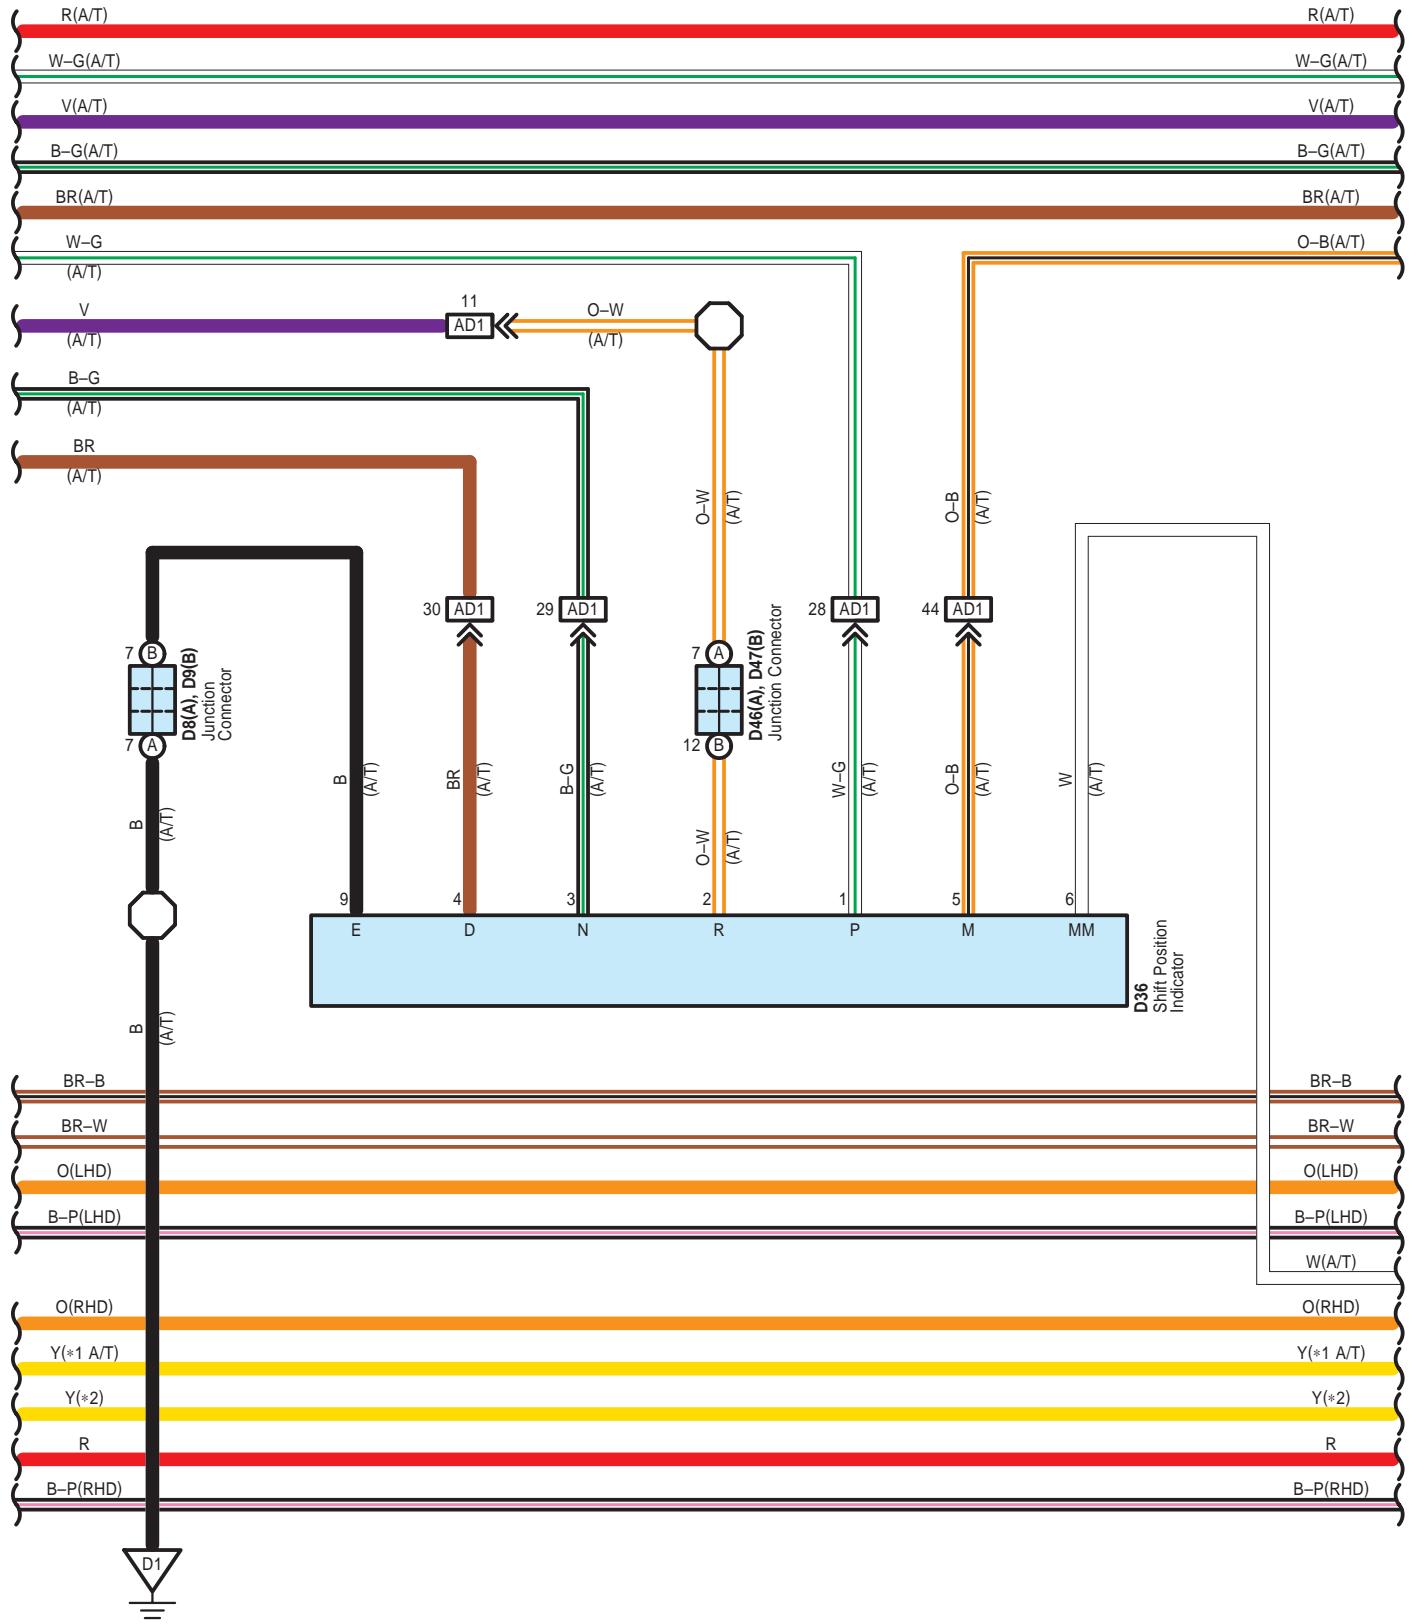



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

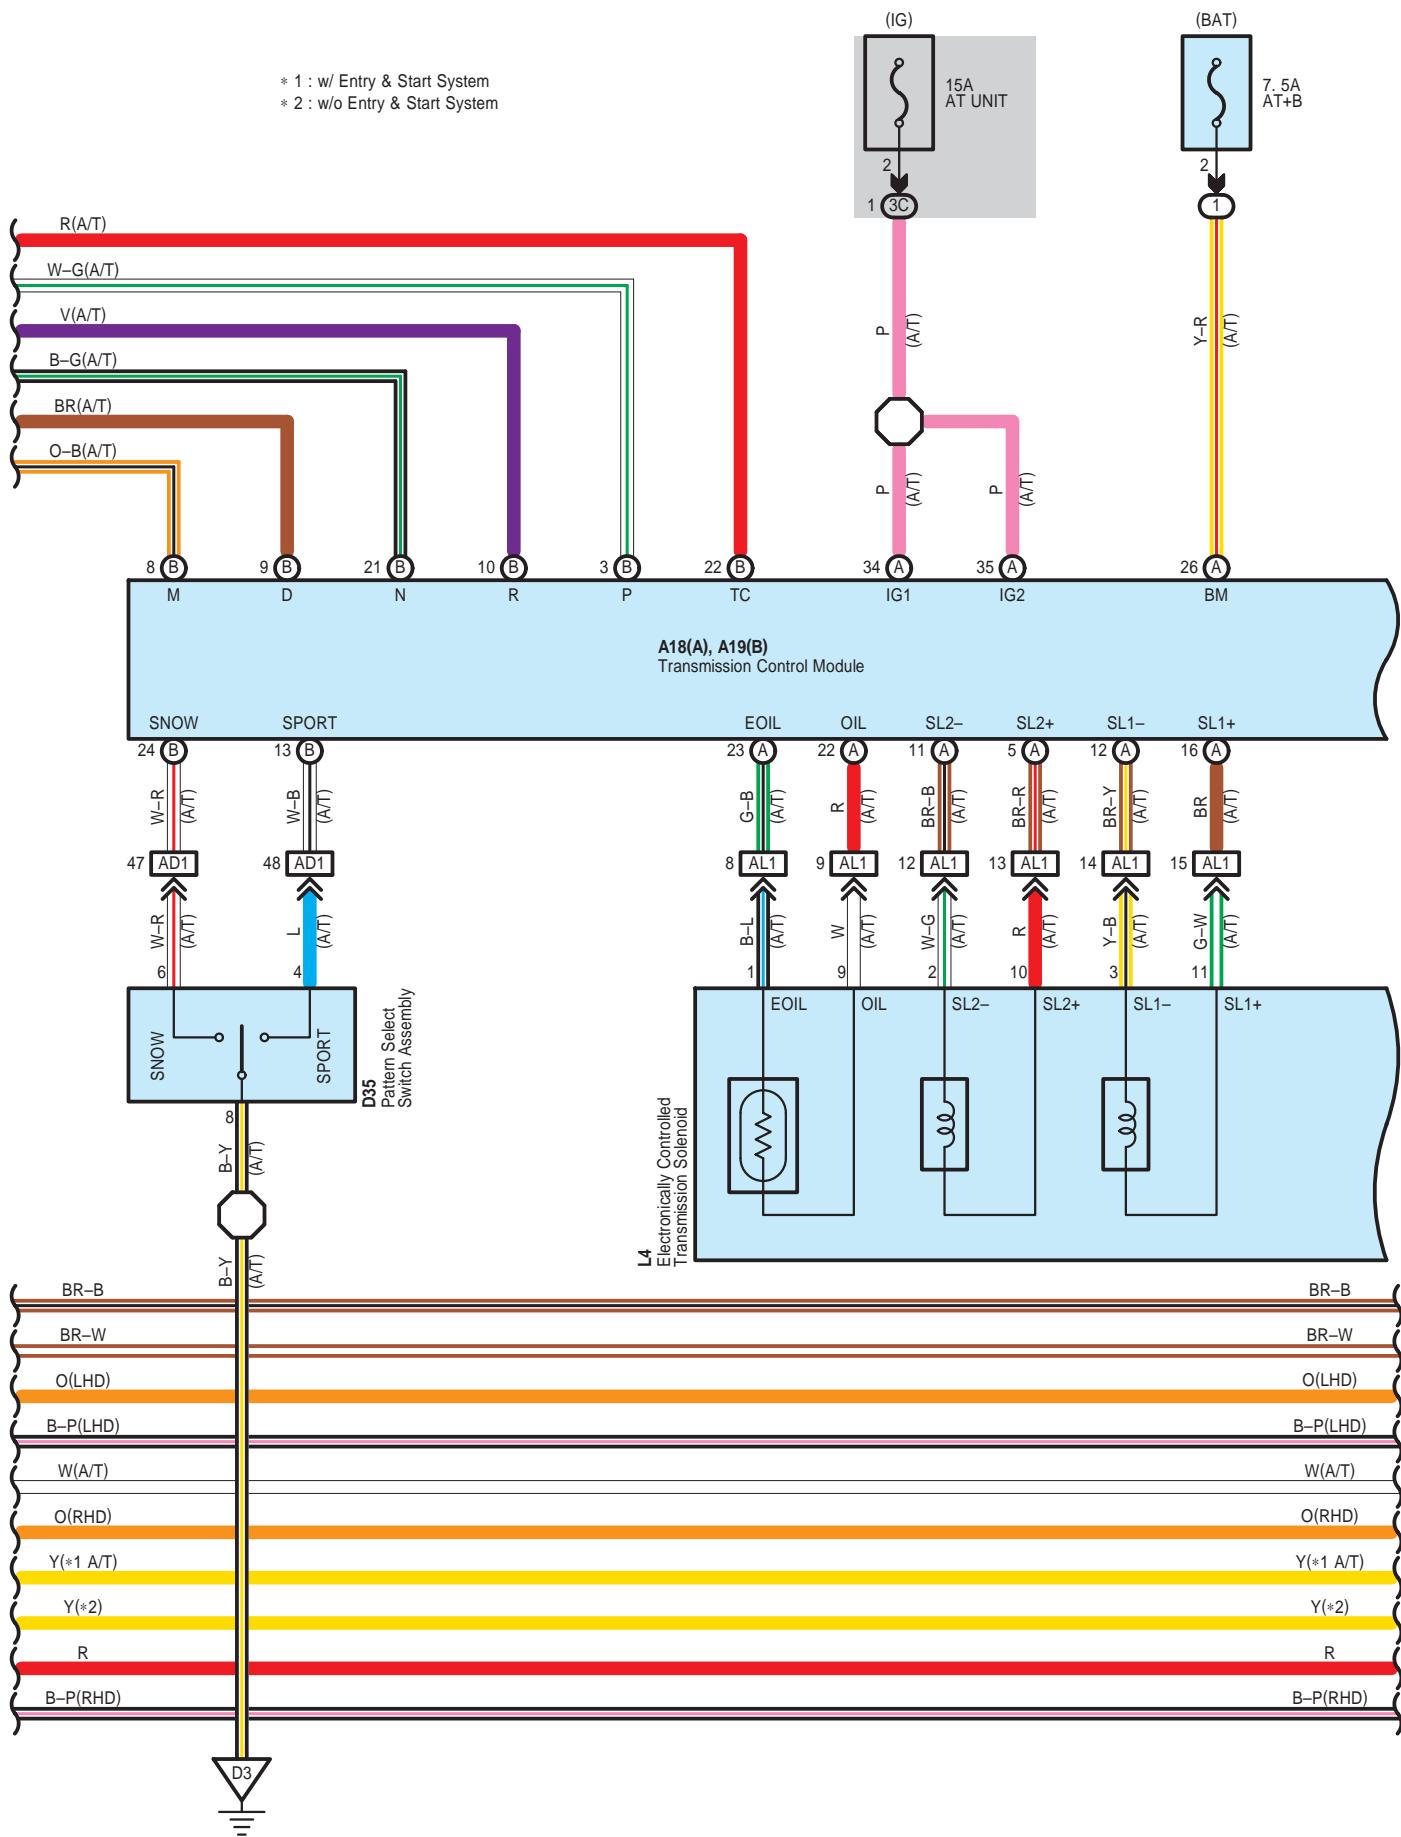

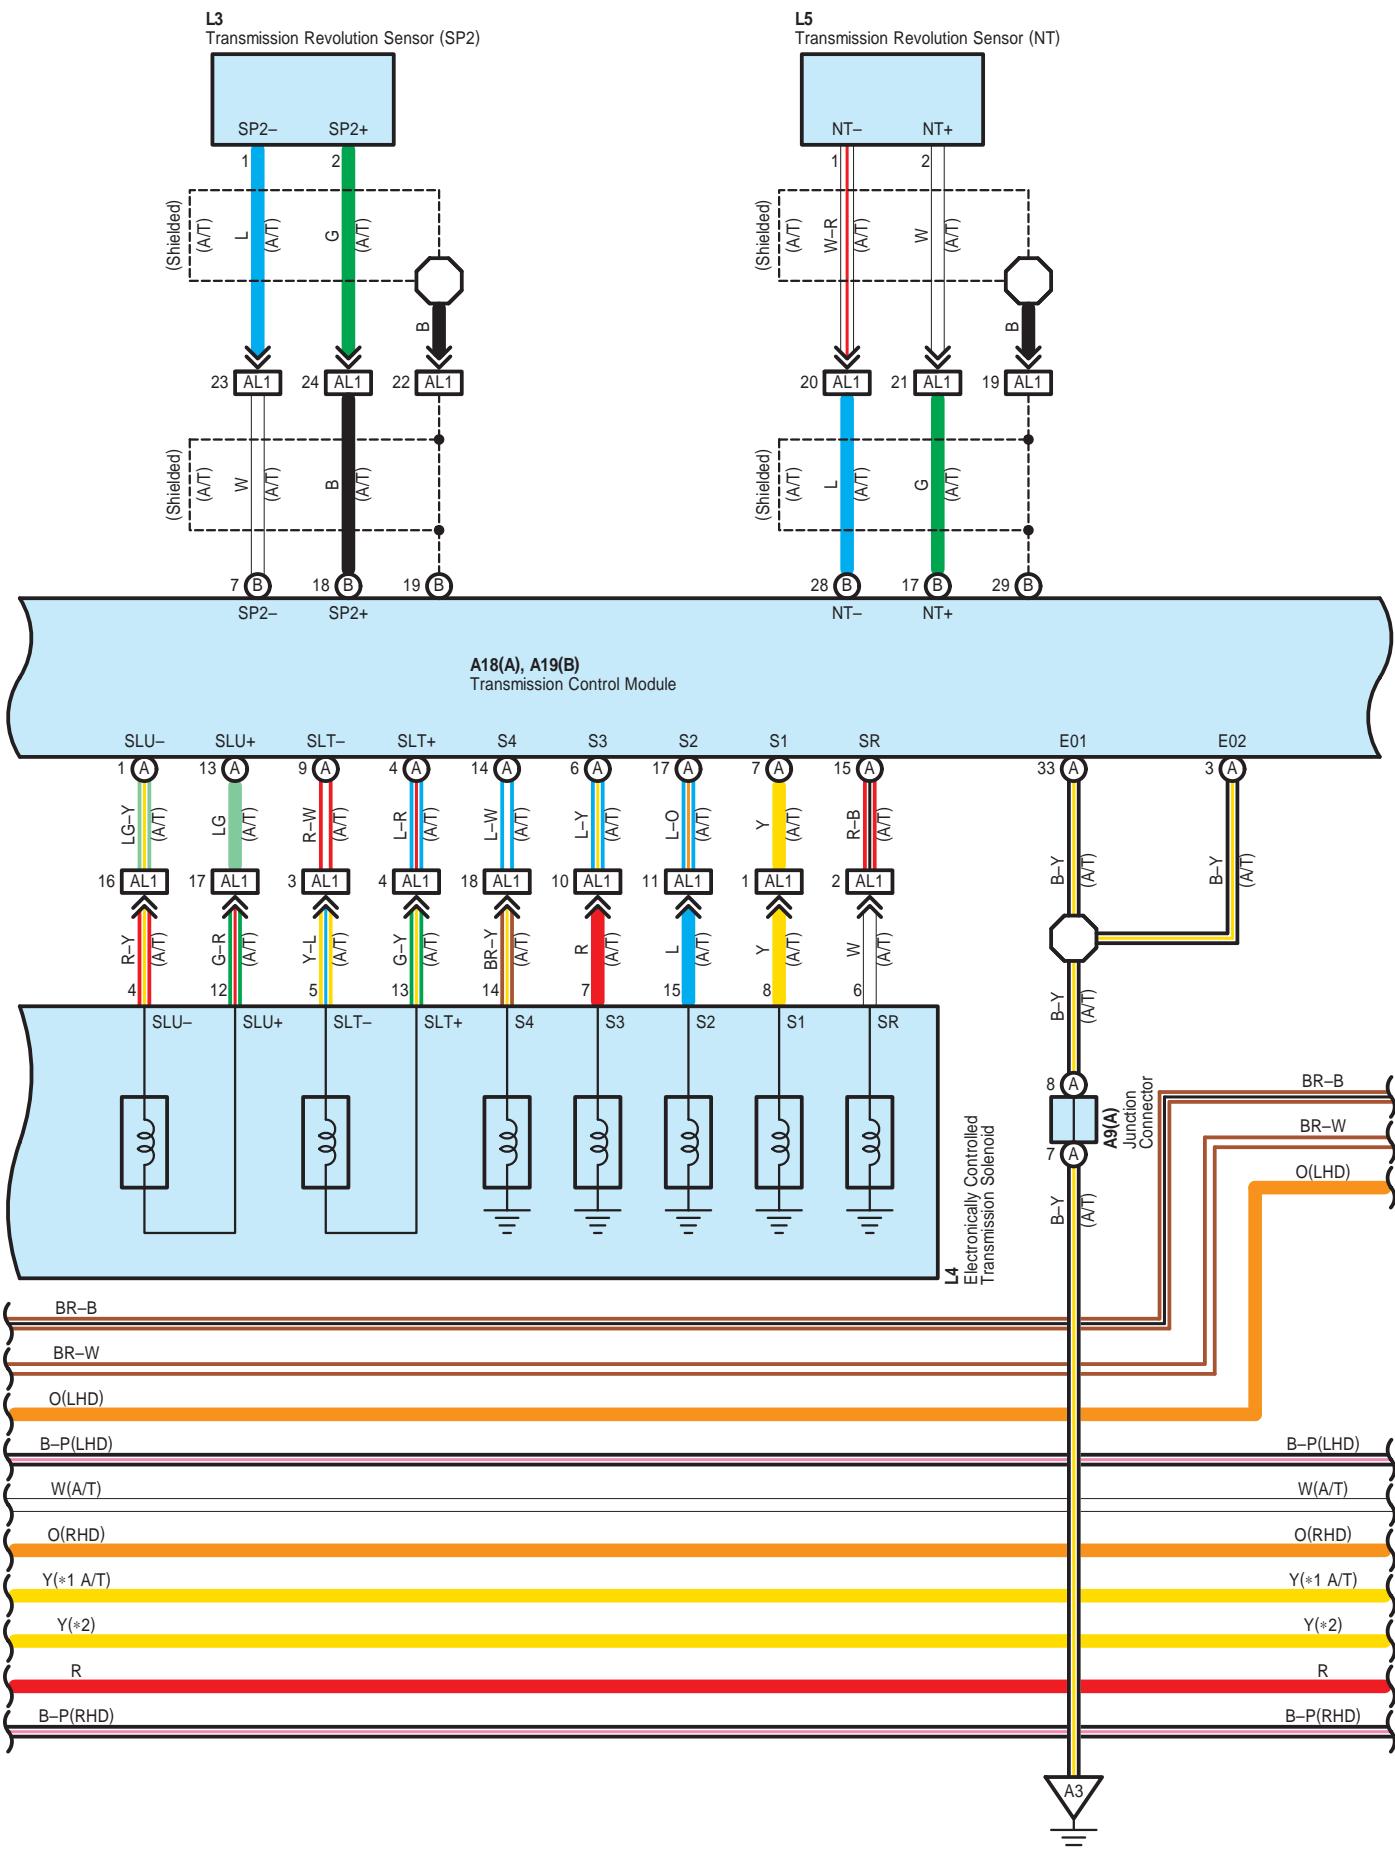



Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

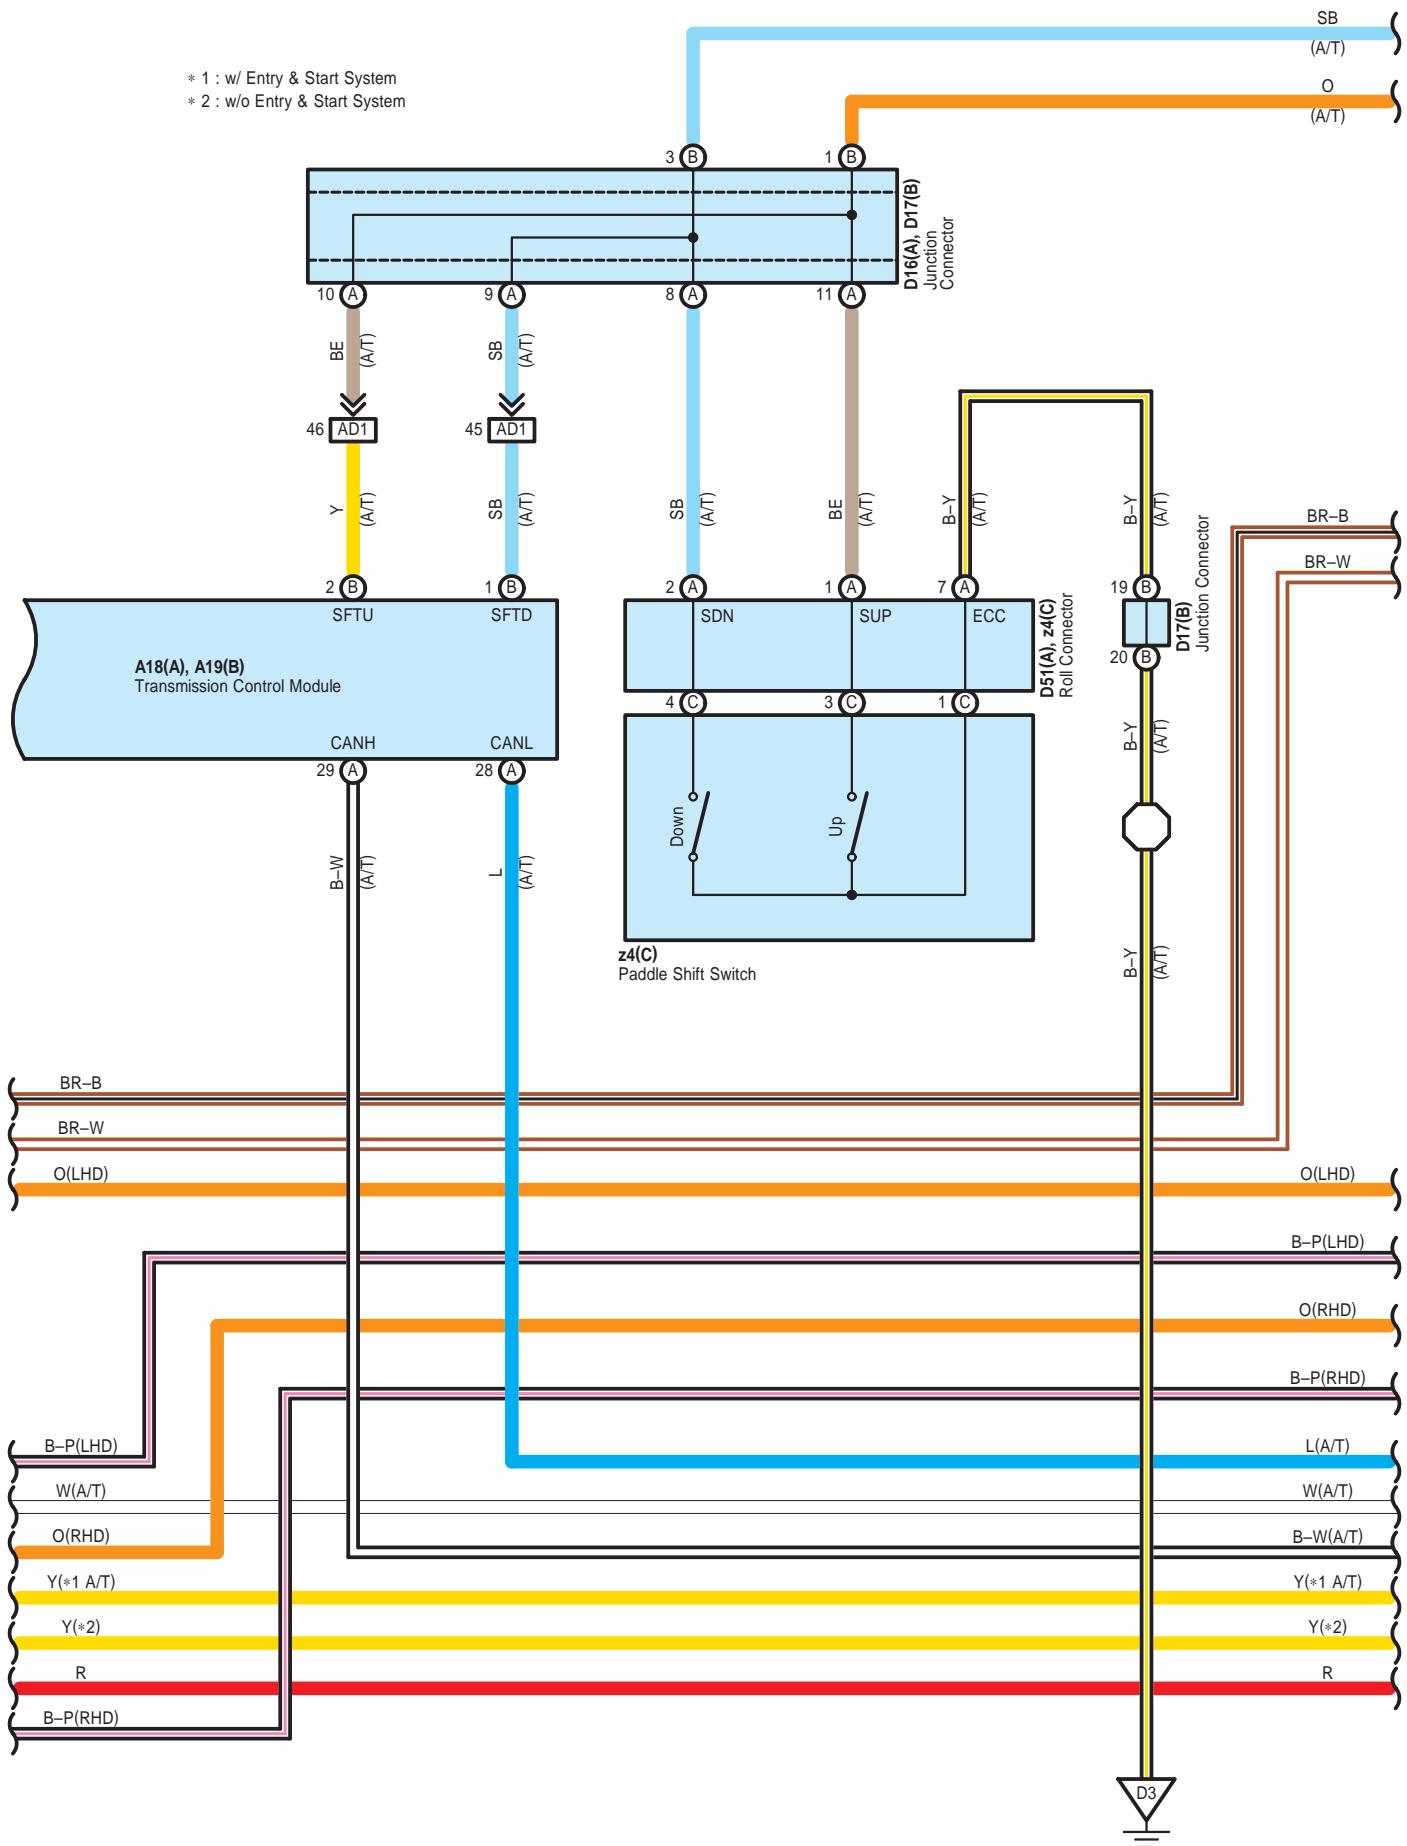

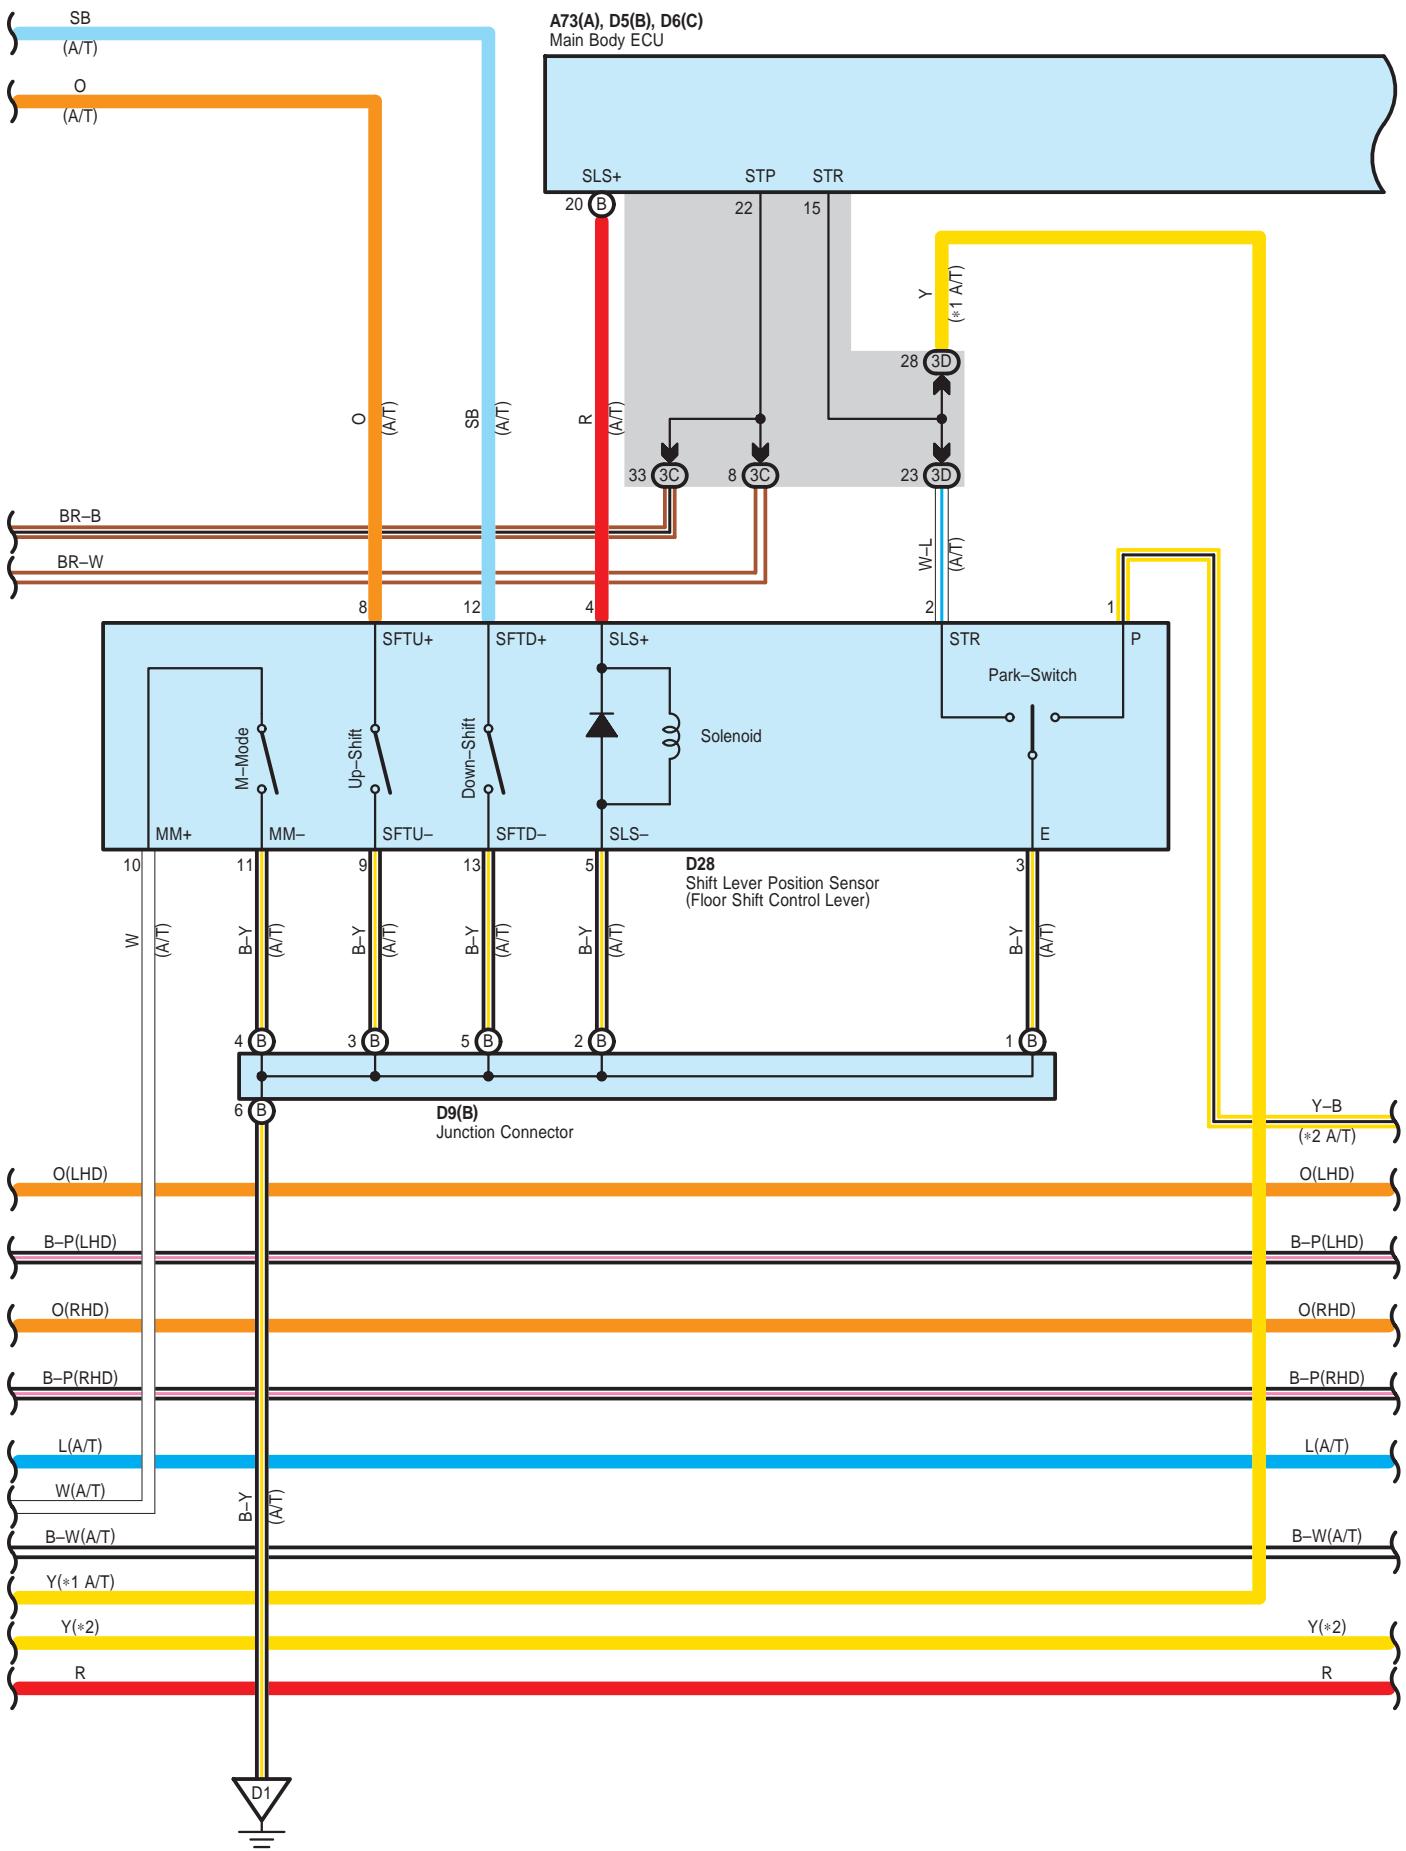


Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

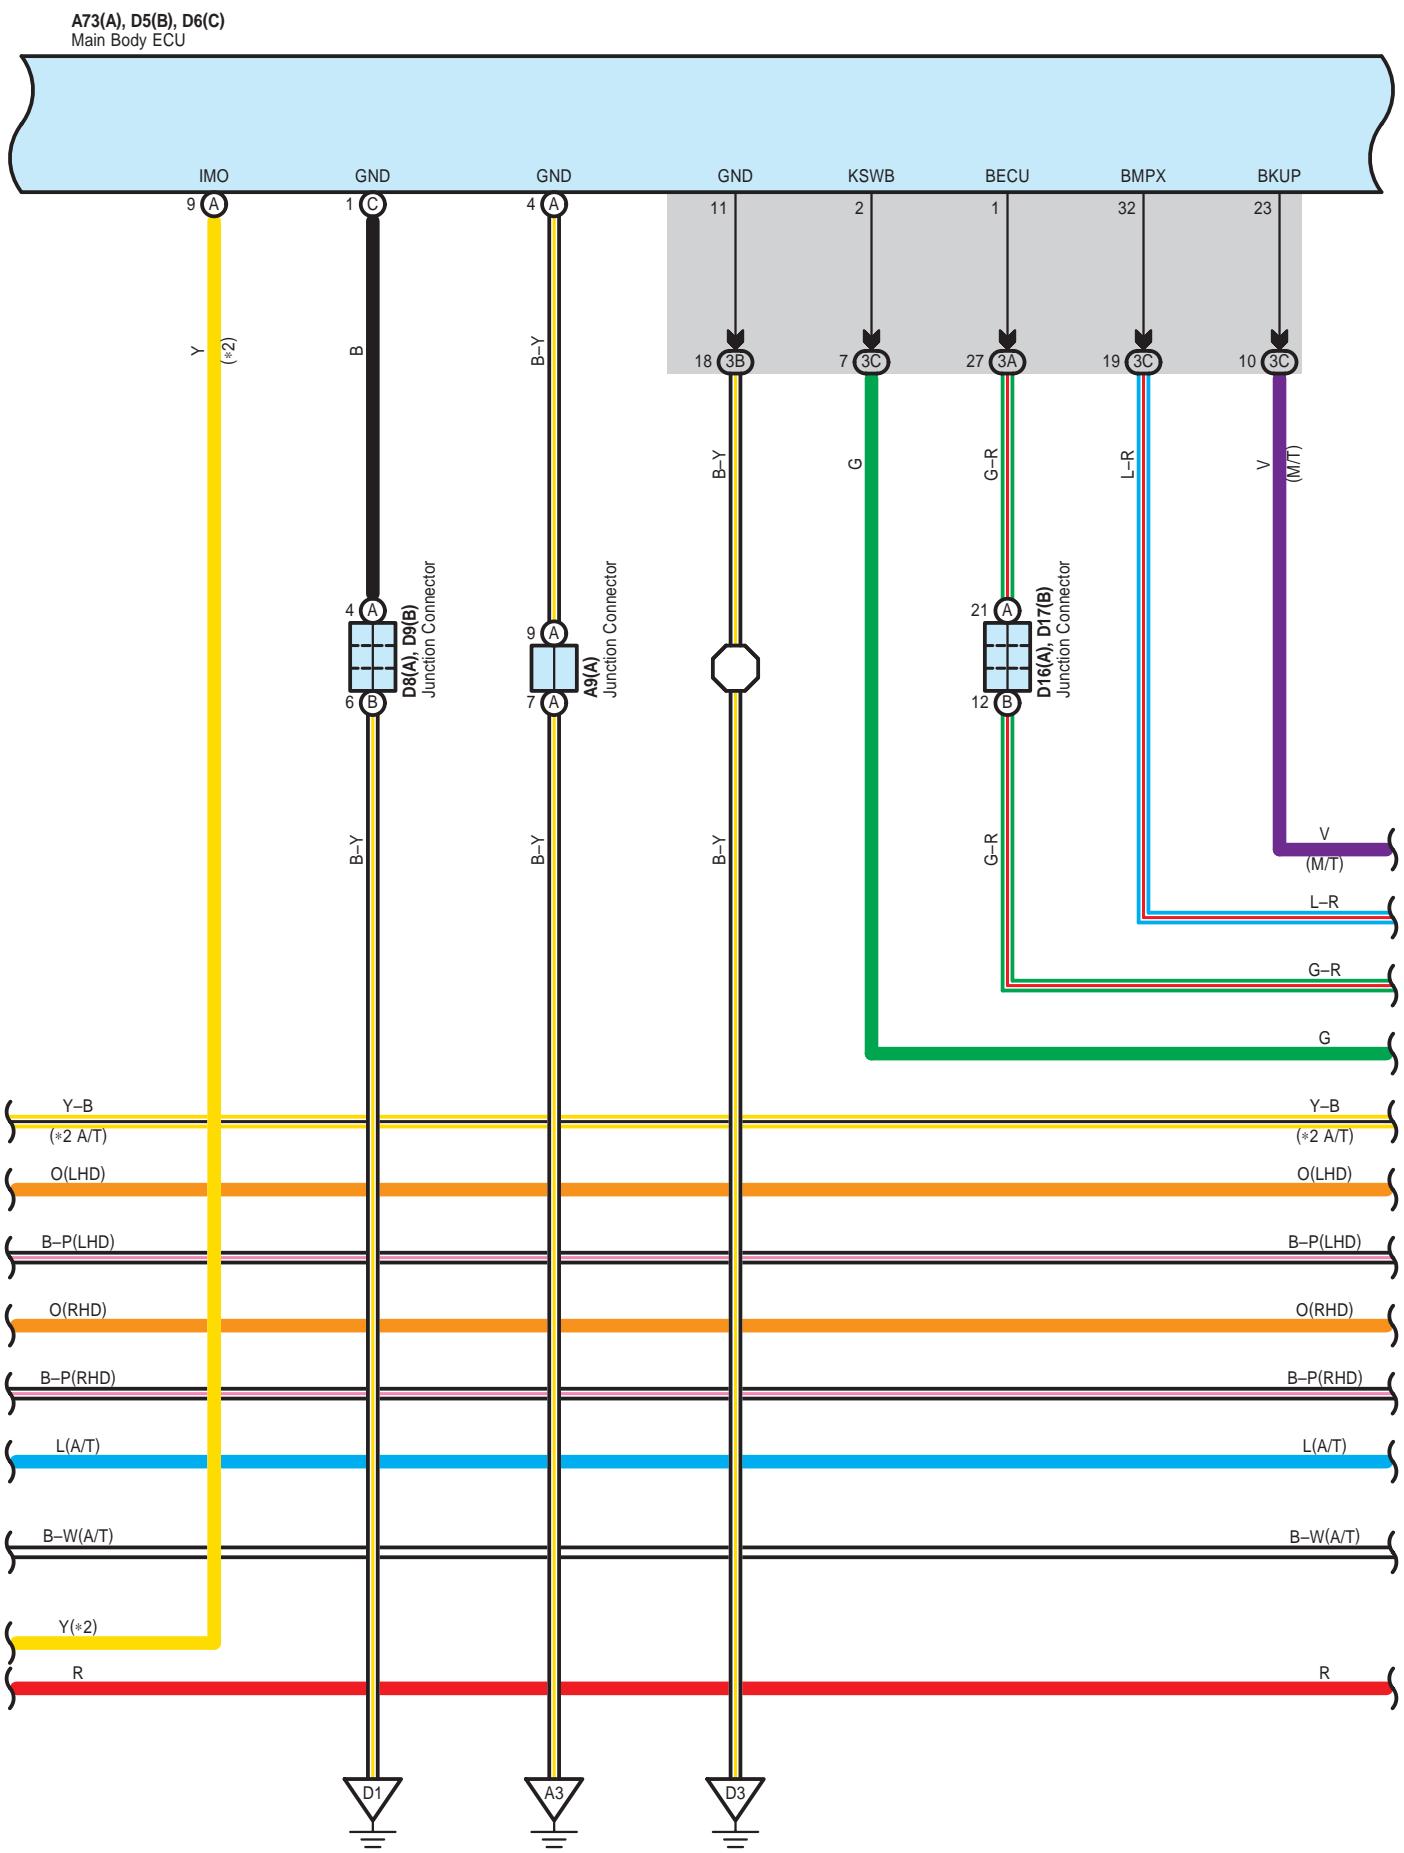


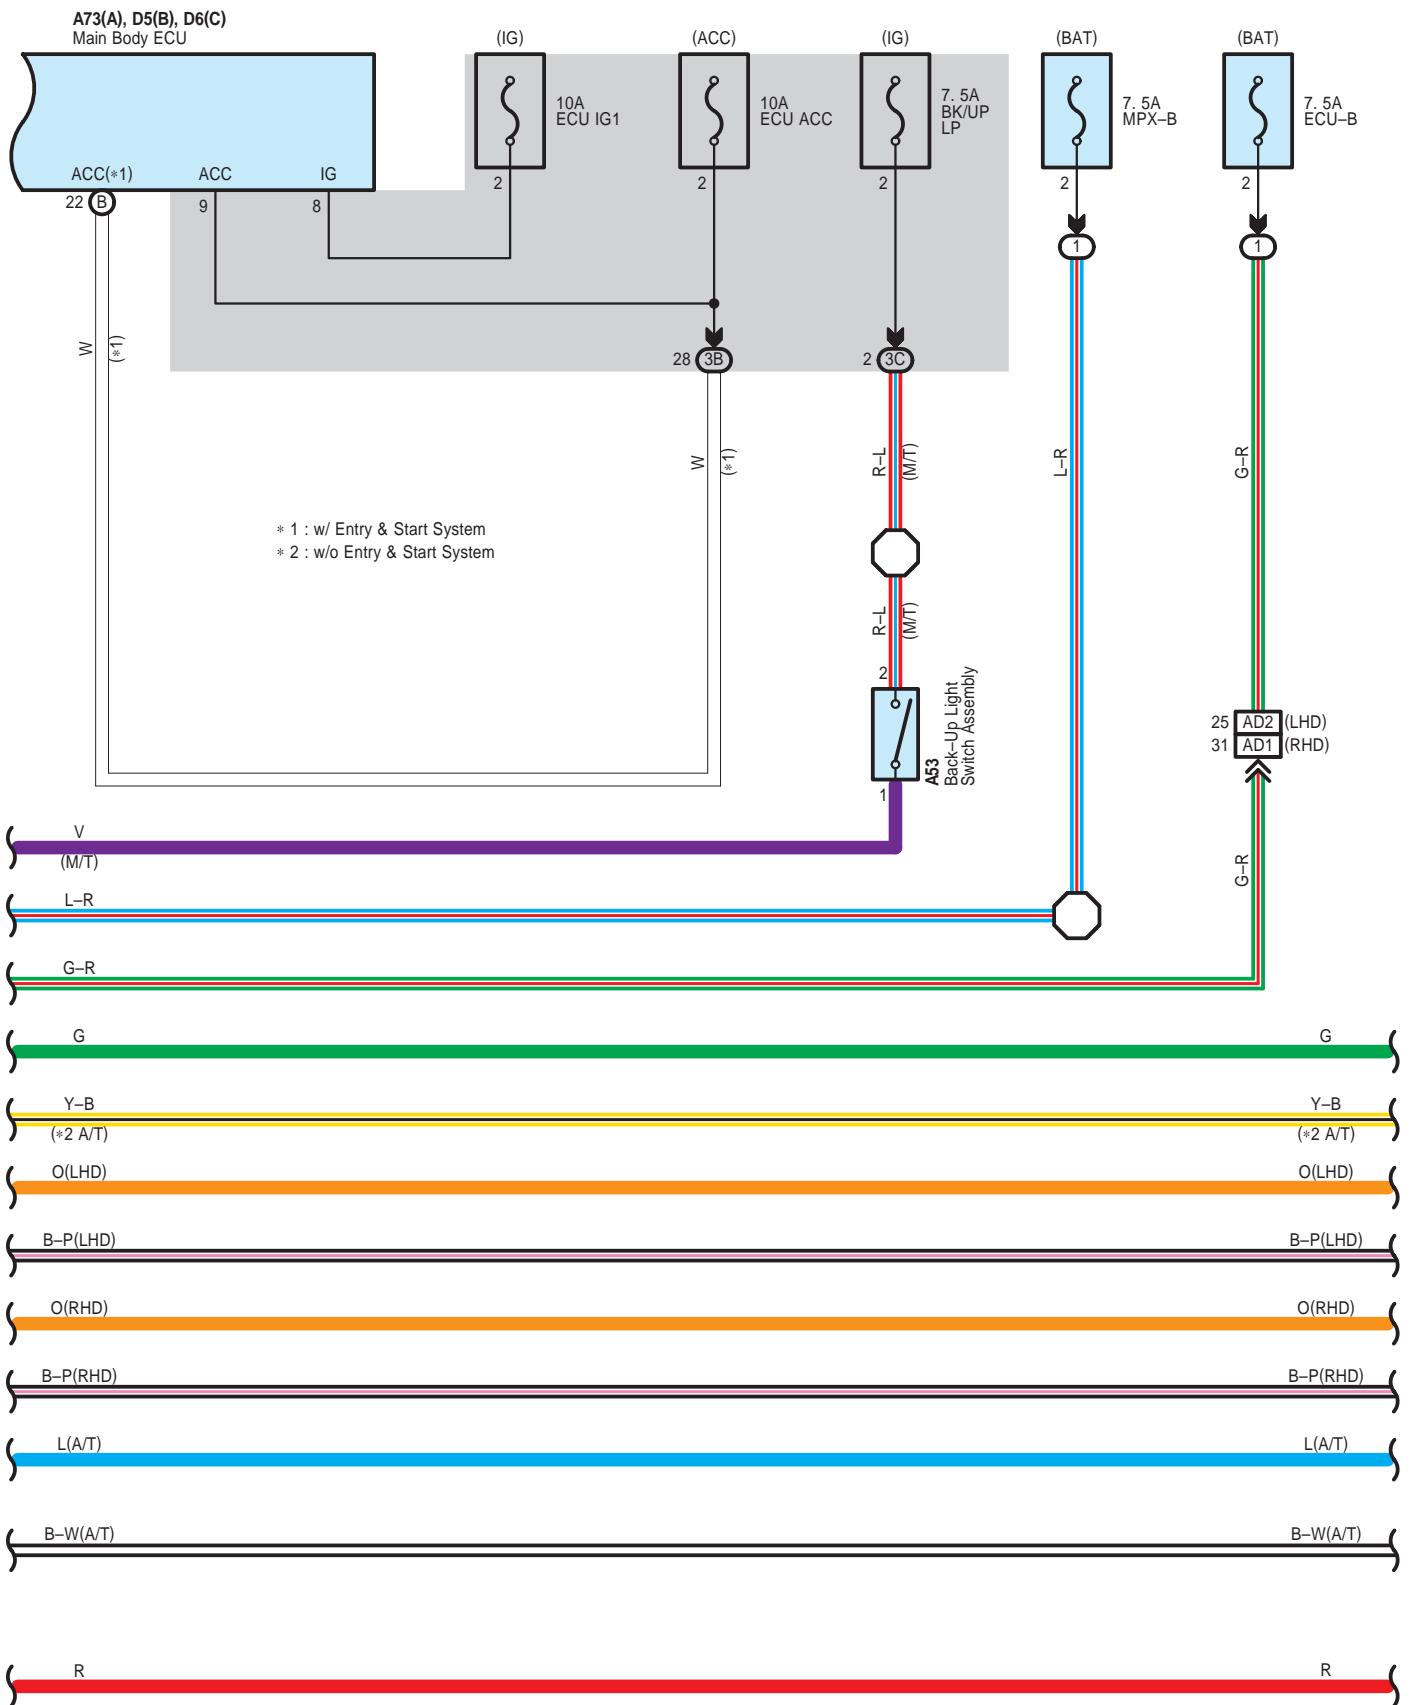


Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

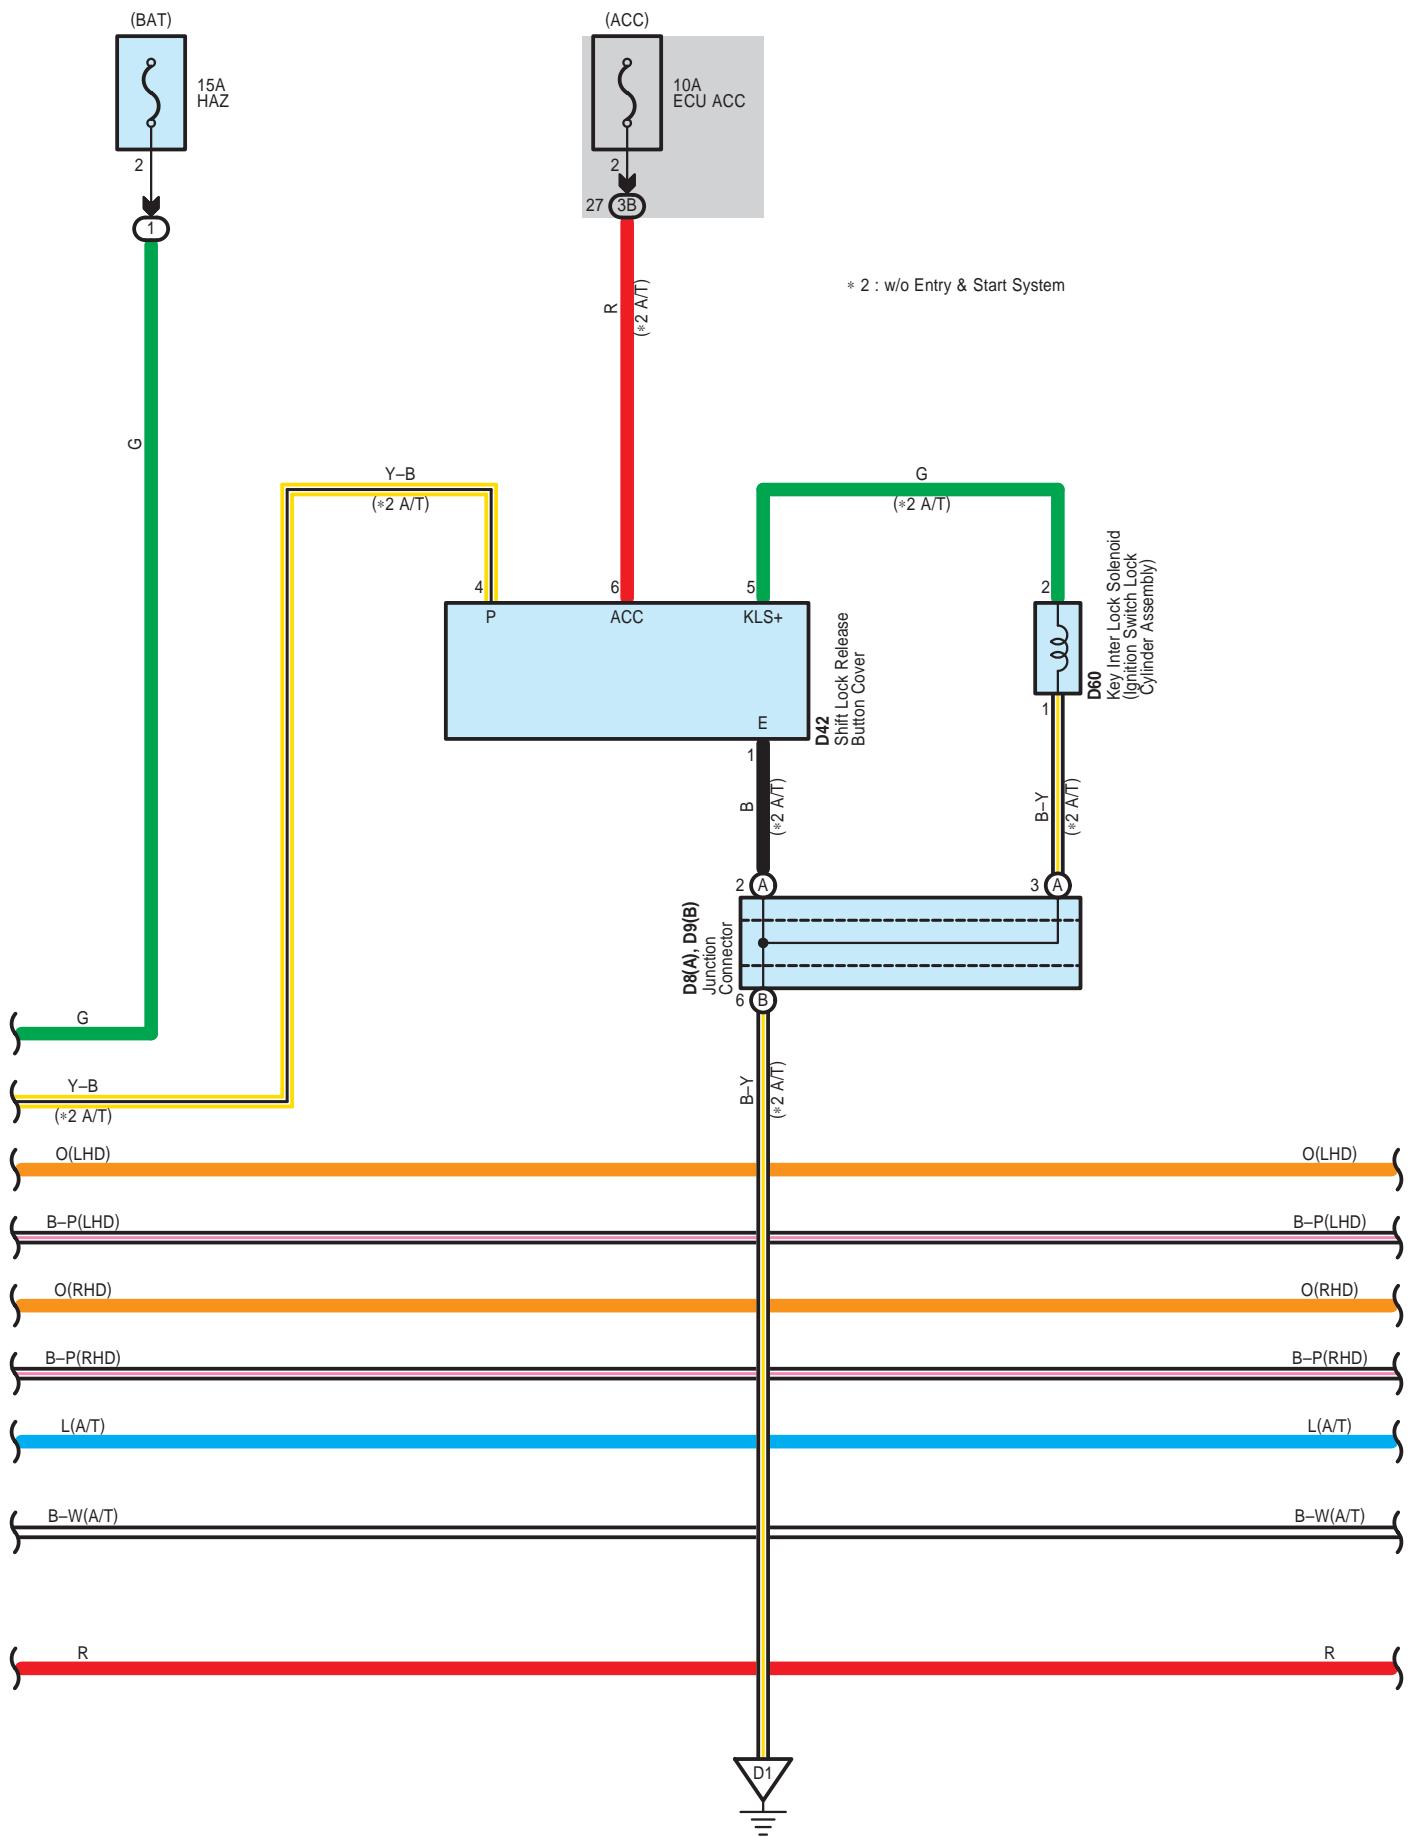


D43
Junction Connector

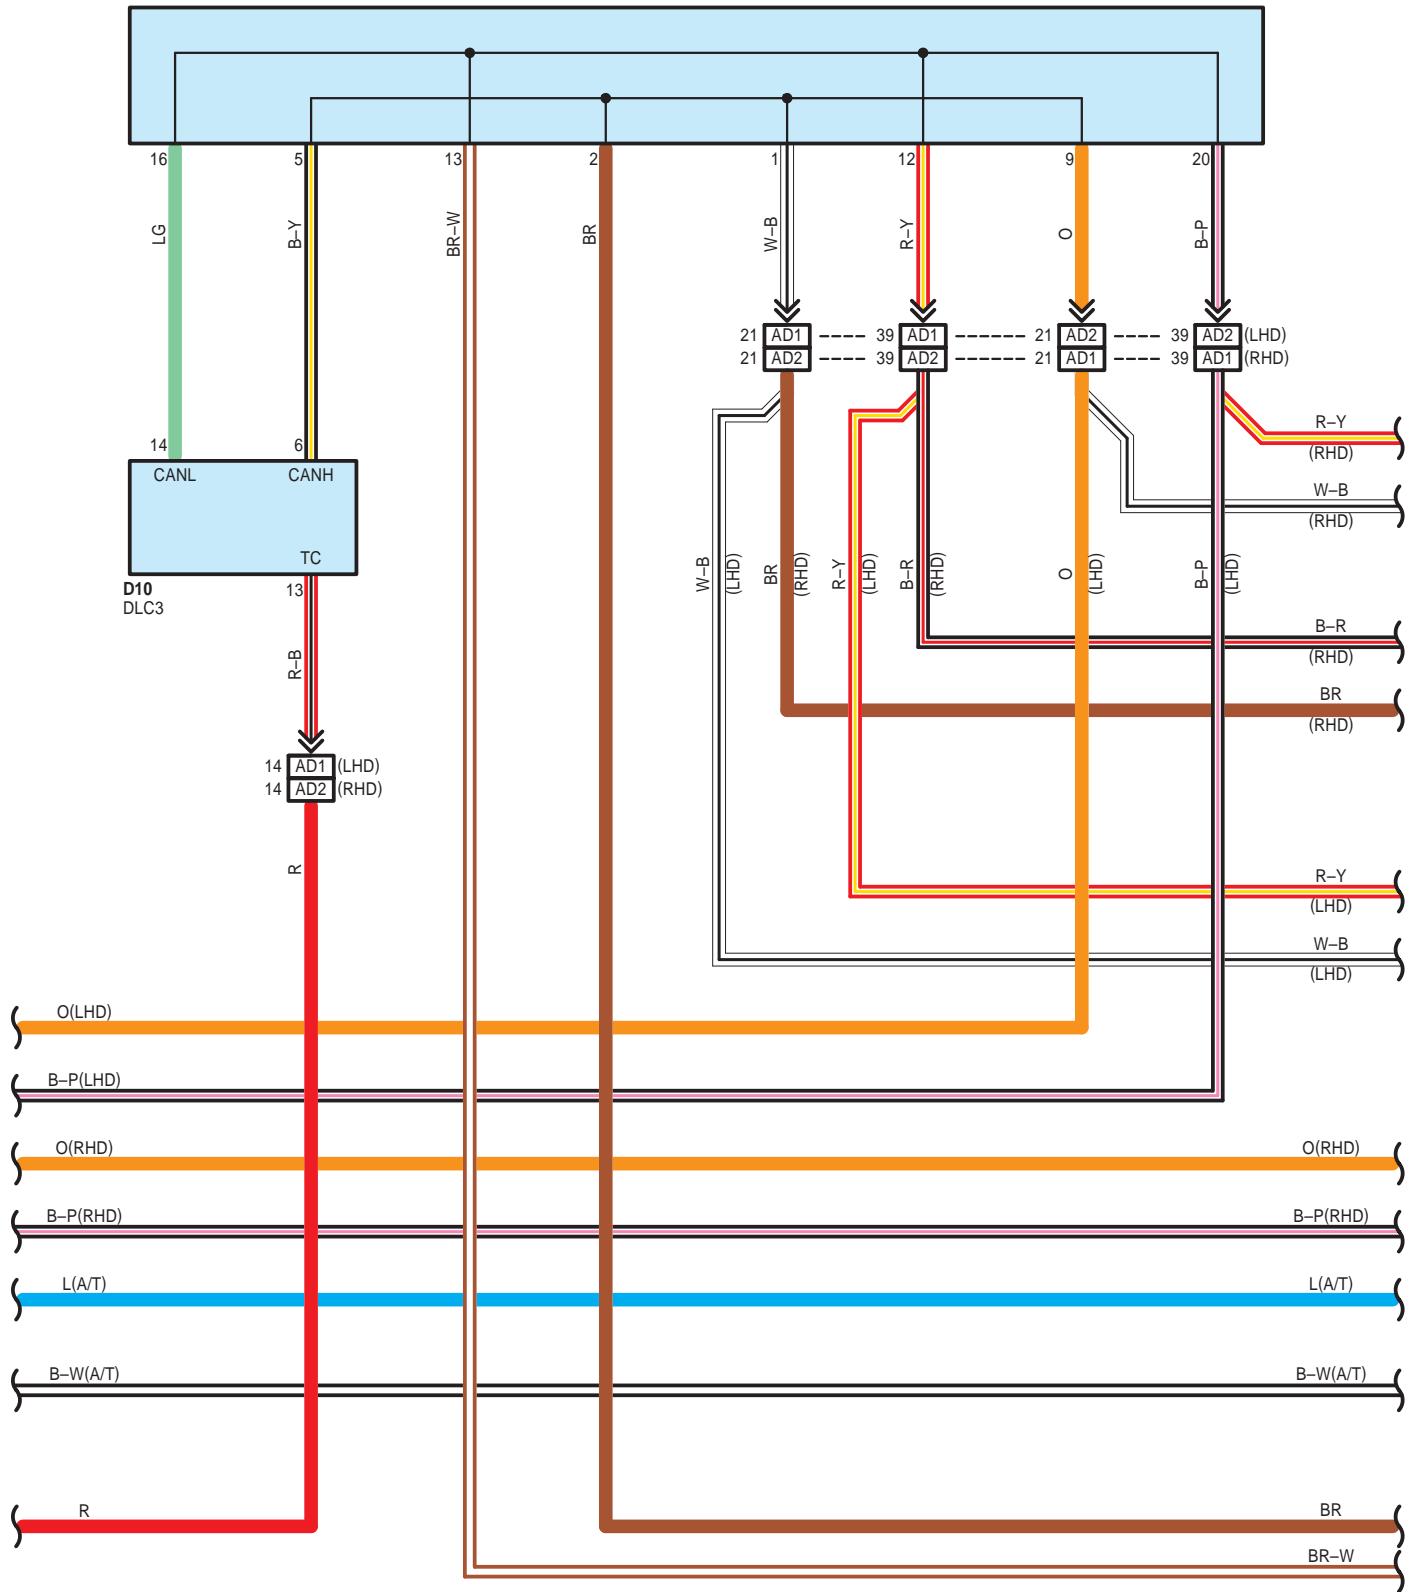


Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

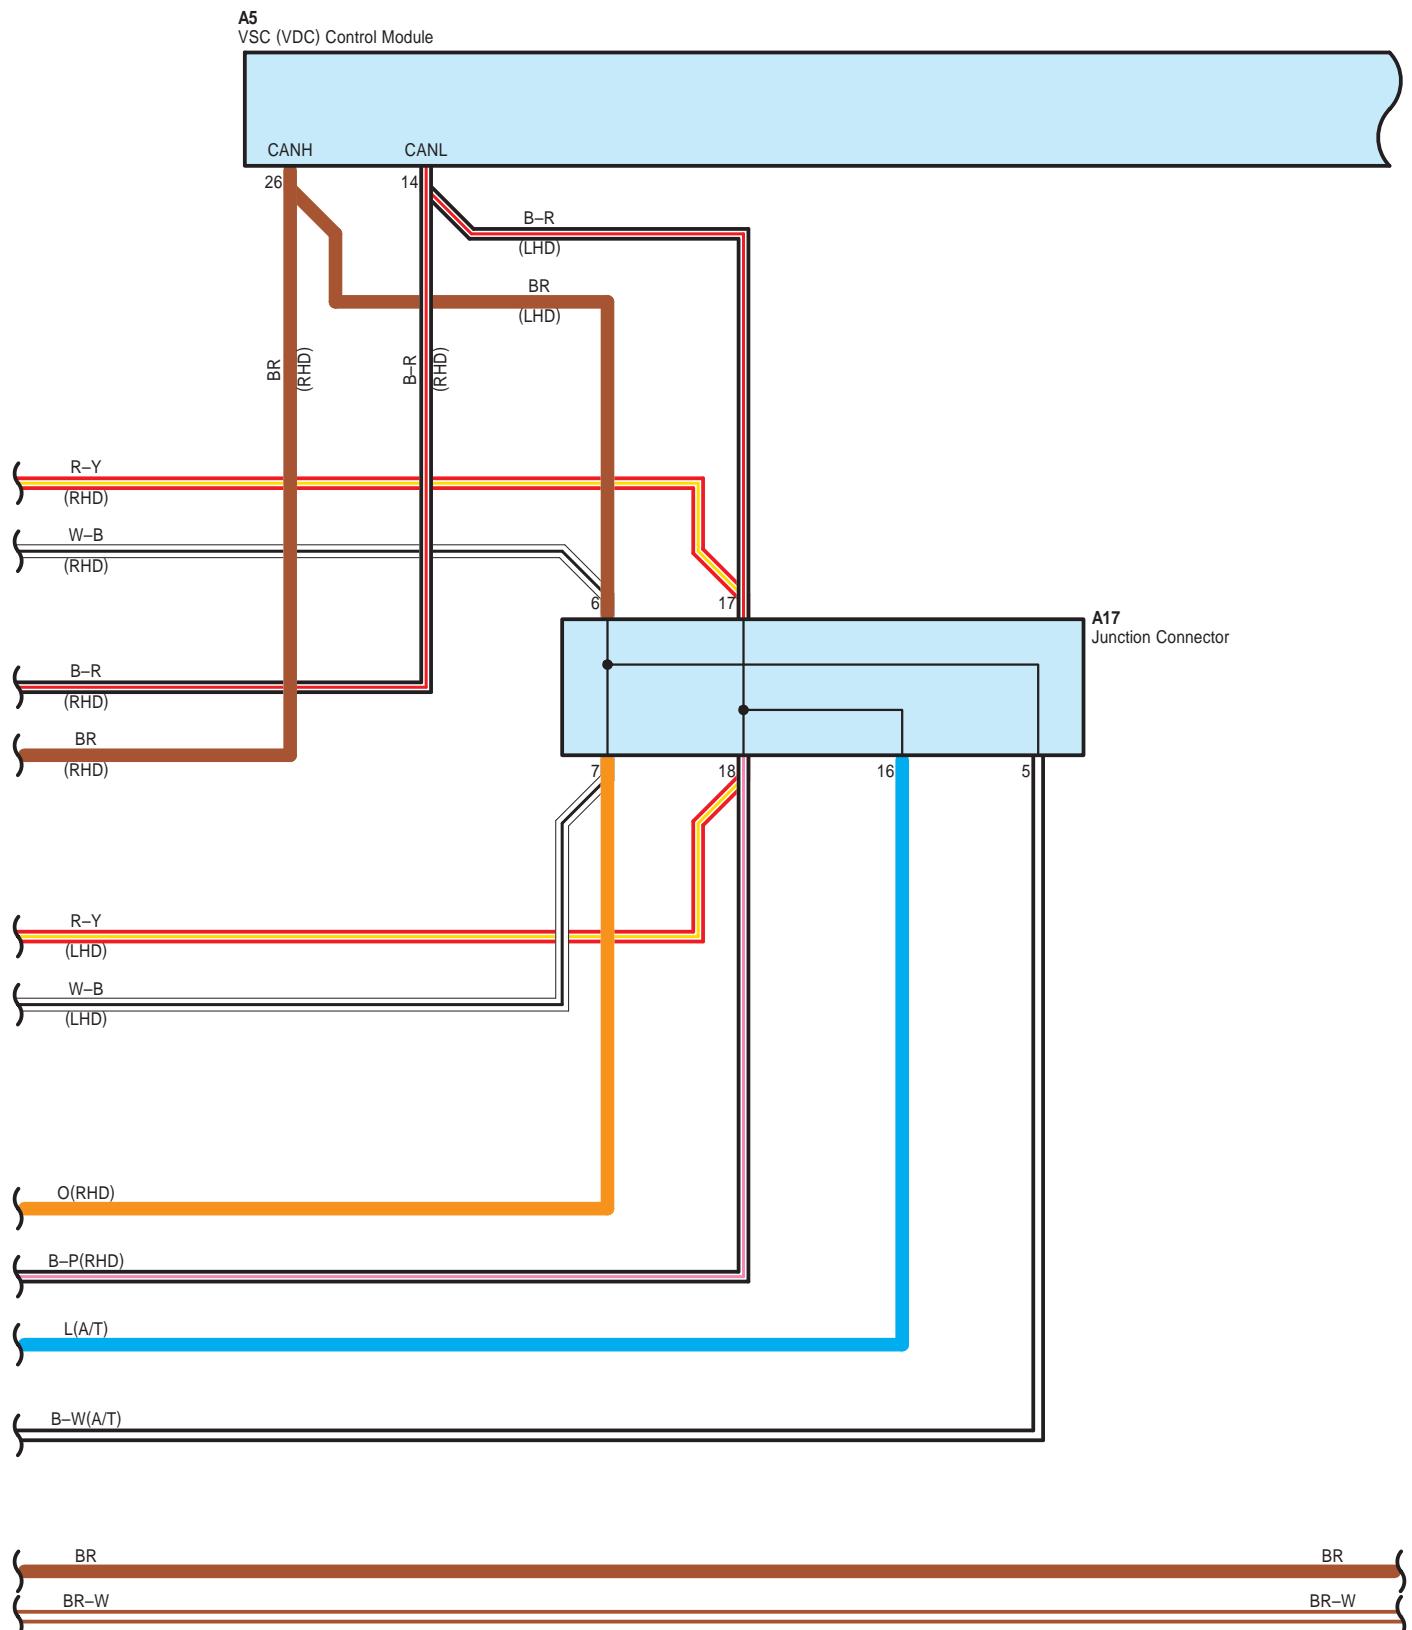

A5
VSC (VDC) Control Module

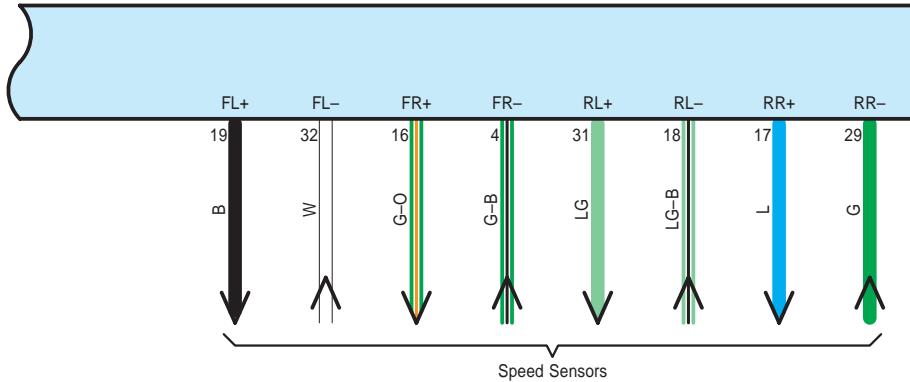

Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

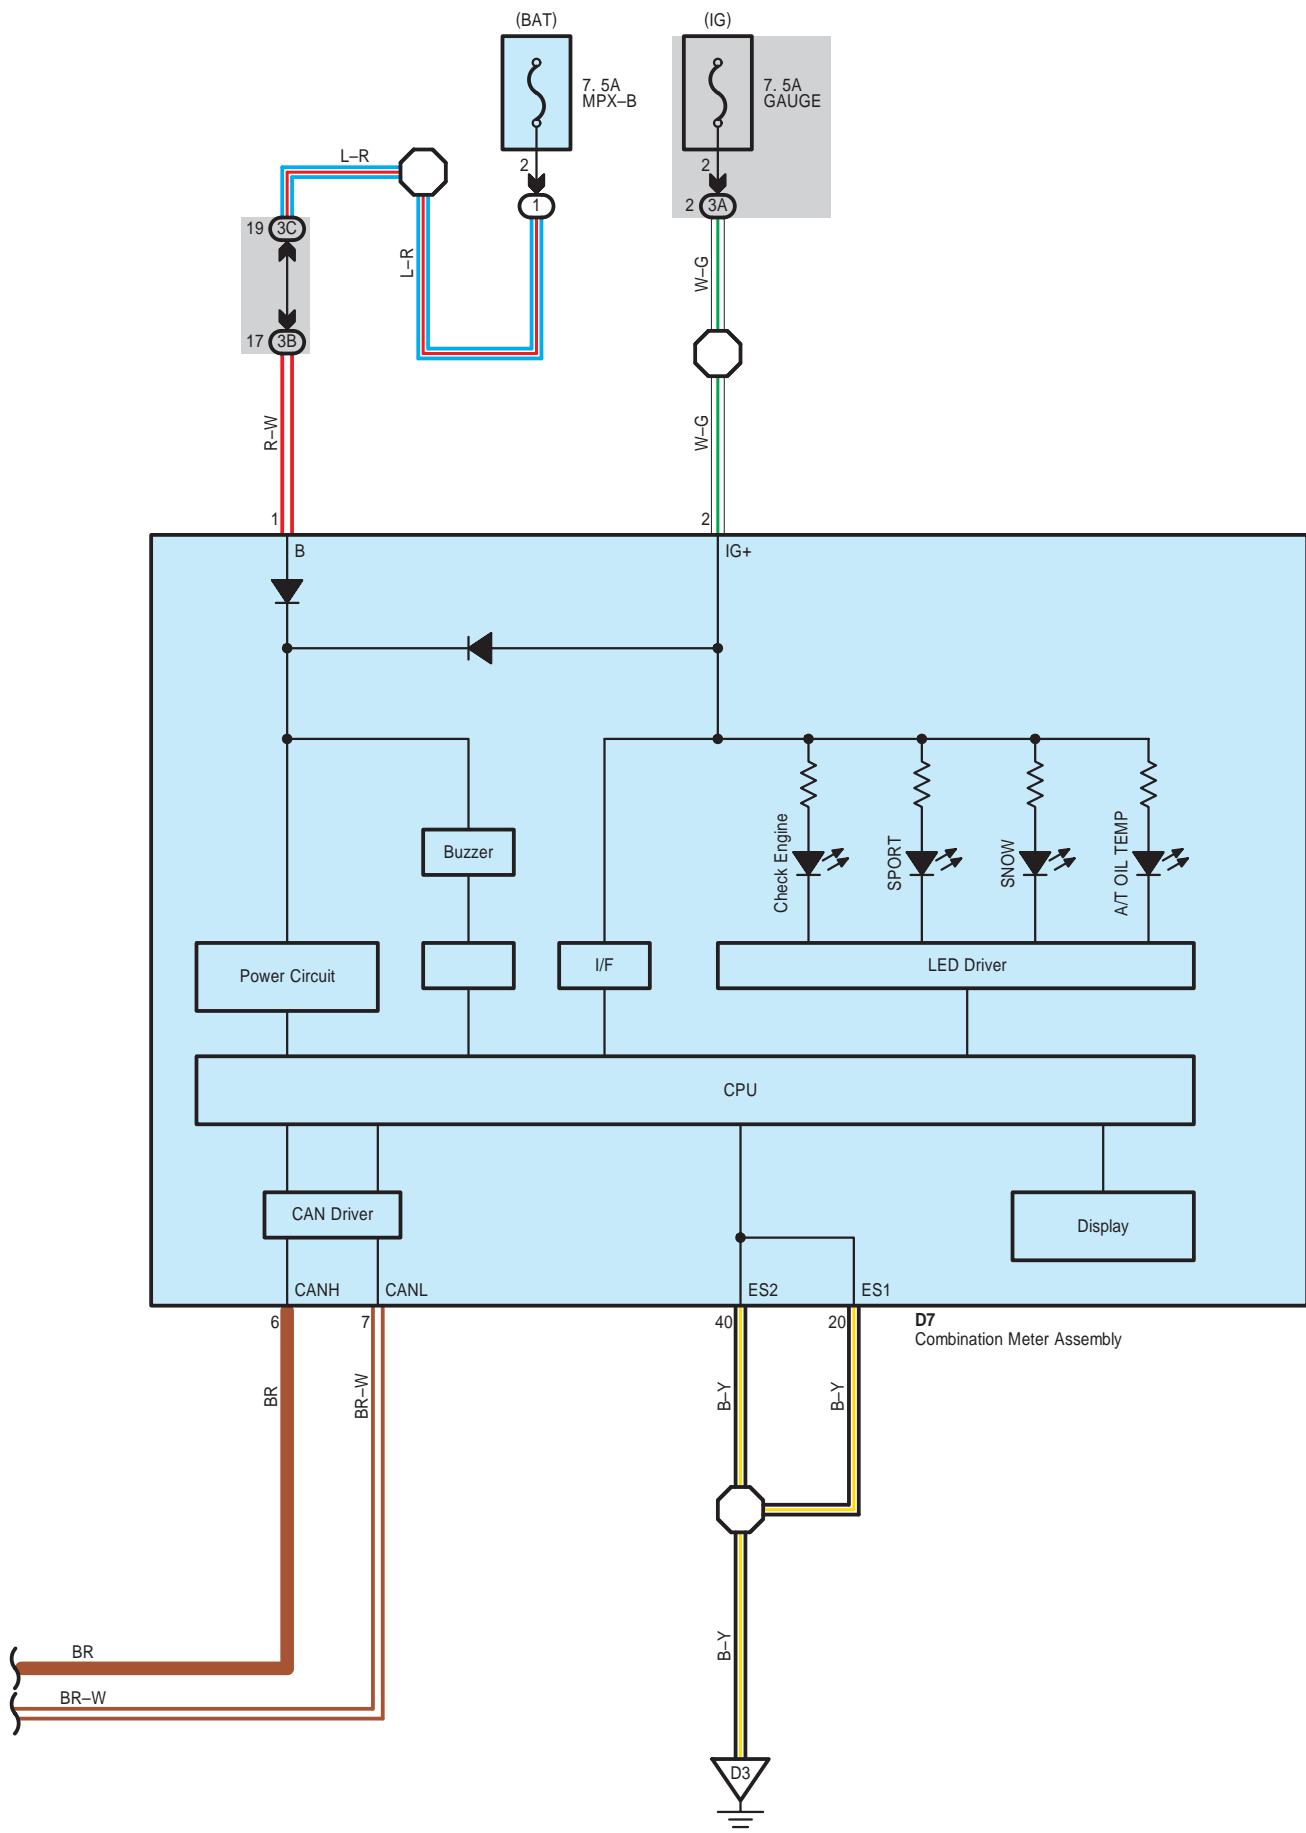

○ : Parts Location

Code	See Page	Code	See Page	Code		See Page	
A5	39 (LHD)	C8	38 (LHD)	D5	B	48 (RHD)	
	47 (RHD)		46 (RHD)	D6	C	40 (LHD)	
A9	A	C9	38 (LHD)		D7	48 (RHD)	
			46 (RHD)			40 (LHD)	
A10	B	C10	38 (LHD)	D8	A	40 (LHD)	
			46 (RHD)		B	48 (RHD)	
A11		C11	38 (LHD)	D9		40 (LHD)	
			46 (RHD)			48 (RHD)	
A13		C12	38 (LHD)	D10	B	40 (LHD)	
			46 (RHD)			48 (RHD)	
A17		C13	38 (LHD)	D16	A	40 (LHD)	
			46 (RHD)		B	48 (RHD)	
A18	A	C14	38 (LHD)	D17		40 (LHD)	
			46 (RHD)			48 (RHD)	
A19	B	C15	38 (LHD)	D17	B	40 (LHD)	
			46 (RHD)			48 (RHD)	
A20		C16	38 (LHD)	D28	B	40 (LHD)	
			46 (RHD)			48 (RHD)	
A21		C18	38 (LHD)	D35	B	40 (LHD)	
			46 (RHD)			48 (RHD)	
A22		C19	38 (LHD)	D36	B	40 (LHD)	
			46 (RHD)			48 (RHD)	
A23		C20	38 (LHD)	D40	A	41 (LHD)	
			46 (RHD)		B	49 (RHD)	
A30		C21	38 (LHD)	D41		41 (LHD)	
			46 (RHD)			49 (RHD)	
A33	A	C23	38 (LHD)	D42	B	41 (LHD)	
			46 (RHD)			49 (RHD)	
A34	B	C24	38 (LHD)	D43	B	41 (LHD)	
			46 (RHD)			49 (RHD)	
A35	C	C25	38 (LHD)	D46	A	41 (LHD)	
			46 (RHD)		B	49 (RHD)	
A36	D	C26	38 (LHD)	D47		41 (LHD)	
			46 (RHD)	C	49 (RHD)		
A37		C27	38 (LHD)		D48		41 (LHD)
			46 (RHD)	C	49 (RHD)		
A43	A	C28	38 (LHD)	D51	A	41 (LHD)	
			46 (RHD)		B	49 (RHD)	
A53		C29	38 (LHD)	D55		41 (LHD)	
			46 (RHD)			49 (RHD)	
A54		C30	38 (LHD)	D60	B	41 (LHD)	
			46 (RHD)			49 (RHD)	
A66	A	50 (RHD)	C31	G7	B	44 (LHD)	
A72	B	50 (RHD)				52 (RHD)	
A73	A	42 (LHD)	C32	G12	B	44 (LHD)	
		50 (RHD)				52 (RHD)	
C1	A	38 (LHD)	C33	L2	B	39 (LHD)	
		46 (RHD)				47 (RHD)	
C2	B	38 (LHD)	C34	L3	B	39 (LHD)	
		46 (RHD)				47 (RHD)	
C3	C	38 (LHD)	C35	L4	B	39 (LHD)	
		46 (RHD)				47 (RHD)	
C4	D	38 (LHD)	C36	L5	B	39 (LHD)	
		46 (RHD)				47 (RHD)	
C5		38 (LHD)	C37	d1	B	39 (LHD)	
		46 (RHD)				47 (RHD)	
C6		38 (LHD)	C38	z4	C	42 (LHD)	
		46 (RHD)			D	50 (RHD)	
C7		38 (LHD)	C39	z5		42 (LHD)	
		46 (RHD)		D	50 (RHD)		
		D5 B	40 (LHD)				

Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
	58 (RHD)	
AC2	54 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	58 (RHD)	
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
AD3	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AL1	54 (LHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)
	58 (RHD)	
AL2	54 (LHD)	Engine Wire and No. 1 Engine Wire (Engine Unit)
	58 (RHD)	
Cd1	54 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	58 (RHD)	
GD2	55 (LHD)	
	59 (RHD)	


 : Ground Points

Code	See Page	Ground Points Location
A1	54 (LHD)	Front Fender Apron LH
	58 (RHD)	
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
C1	54 (LHD)	Engine Unit
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	
G1	56 (LHD)	Quarter Wheel House Panel RH
	60 (RHD)	


Engine Immobiliser System (w/o Entry & Start System)

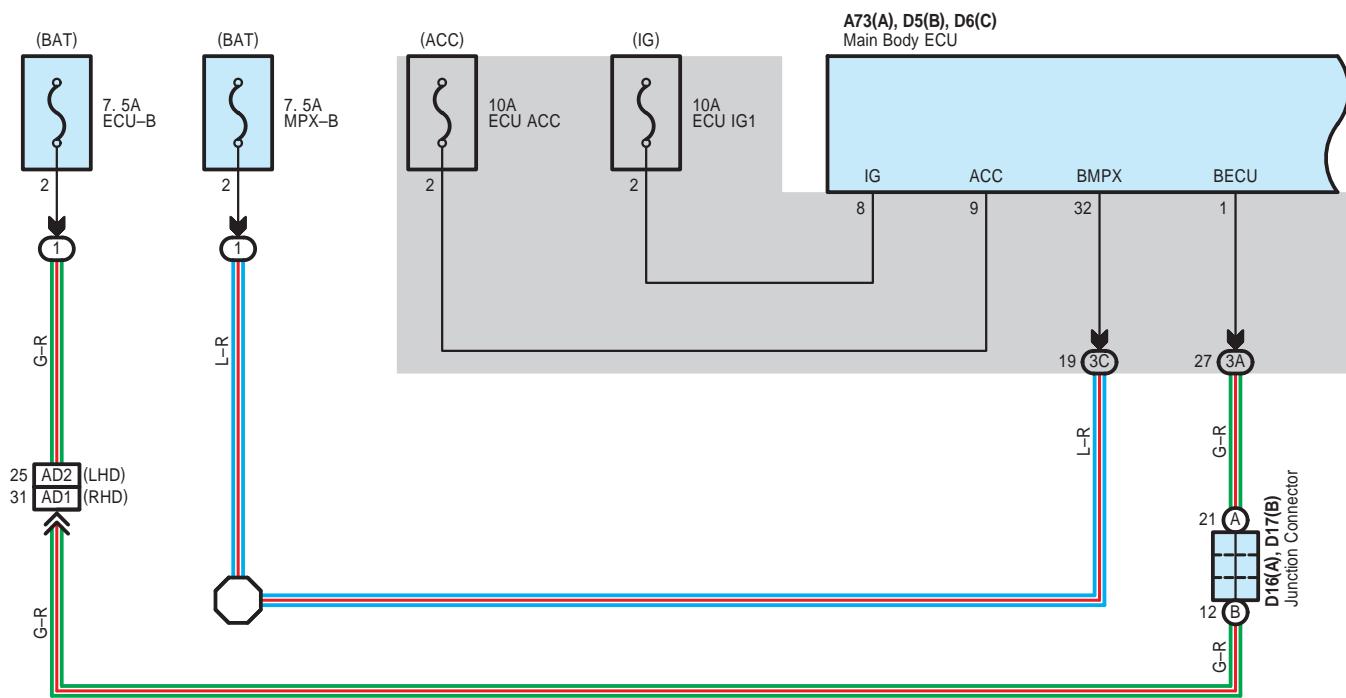


A73(A), D5(B), D6(C)
Main Body ECU

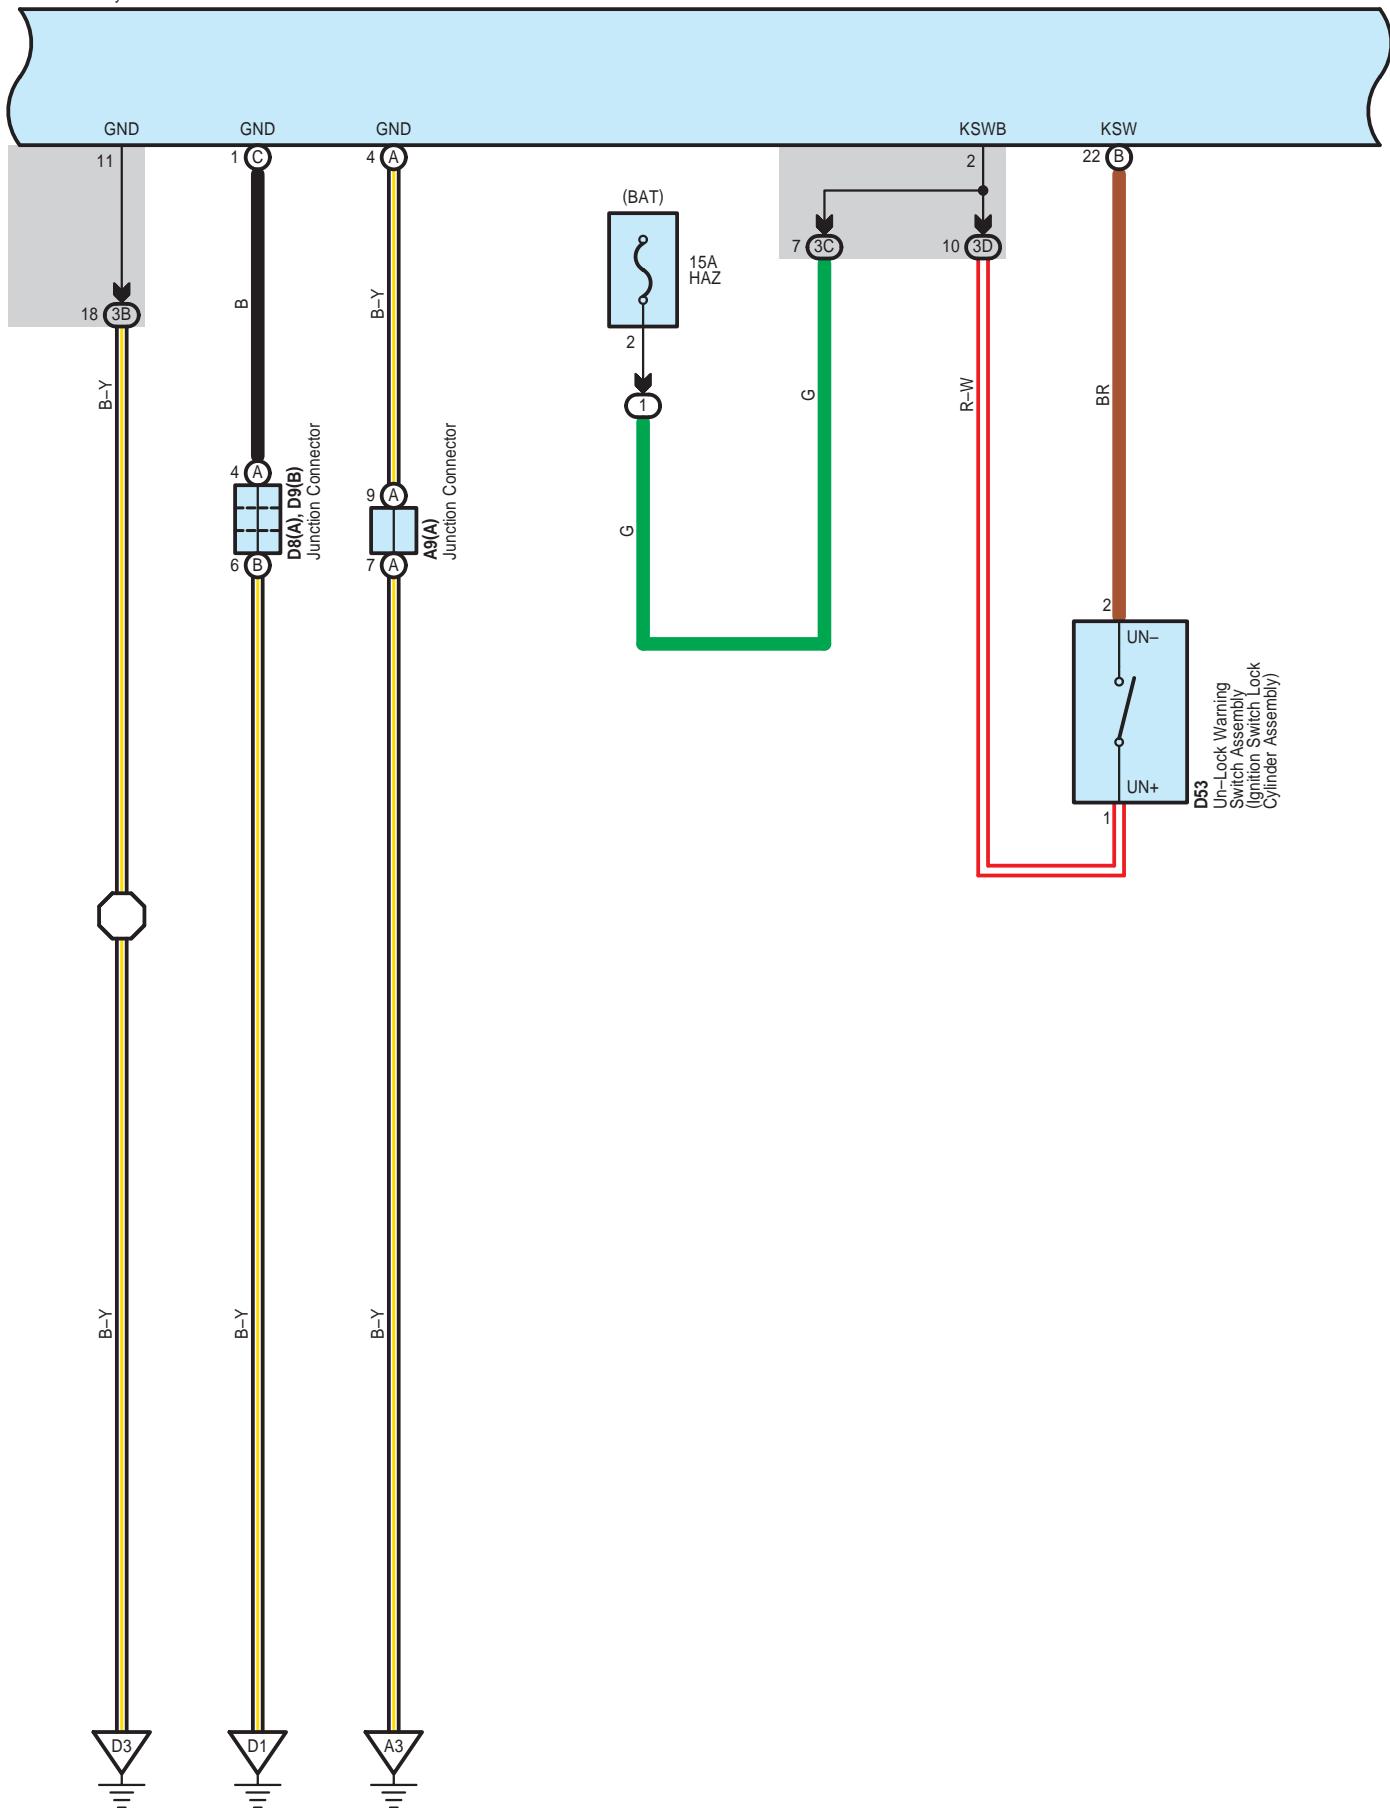


Engine Immobiliser System (w/o Entry & Start System)

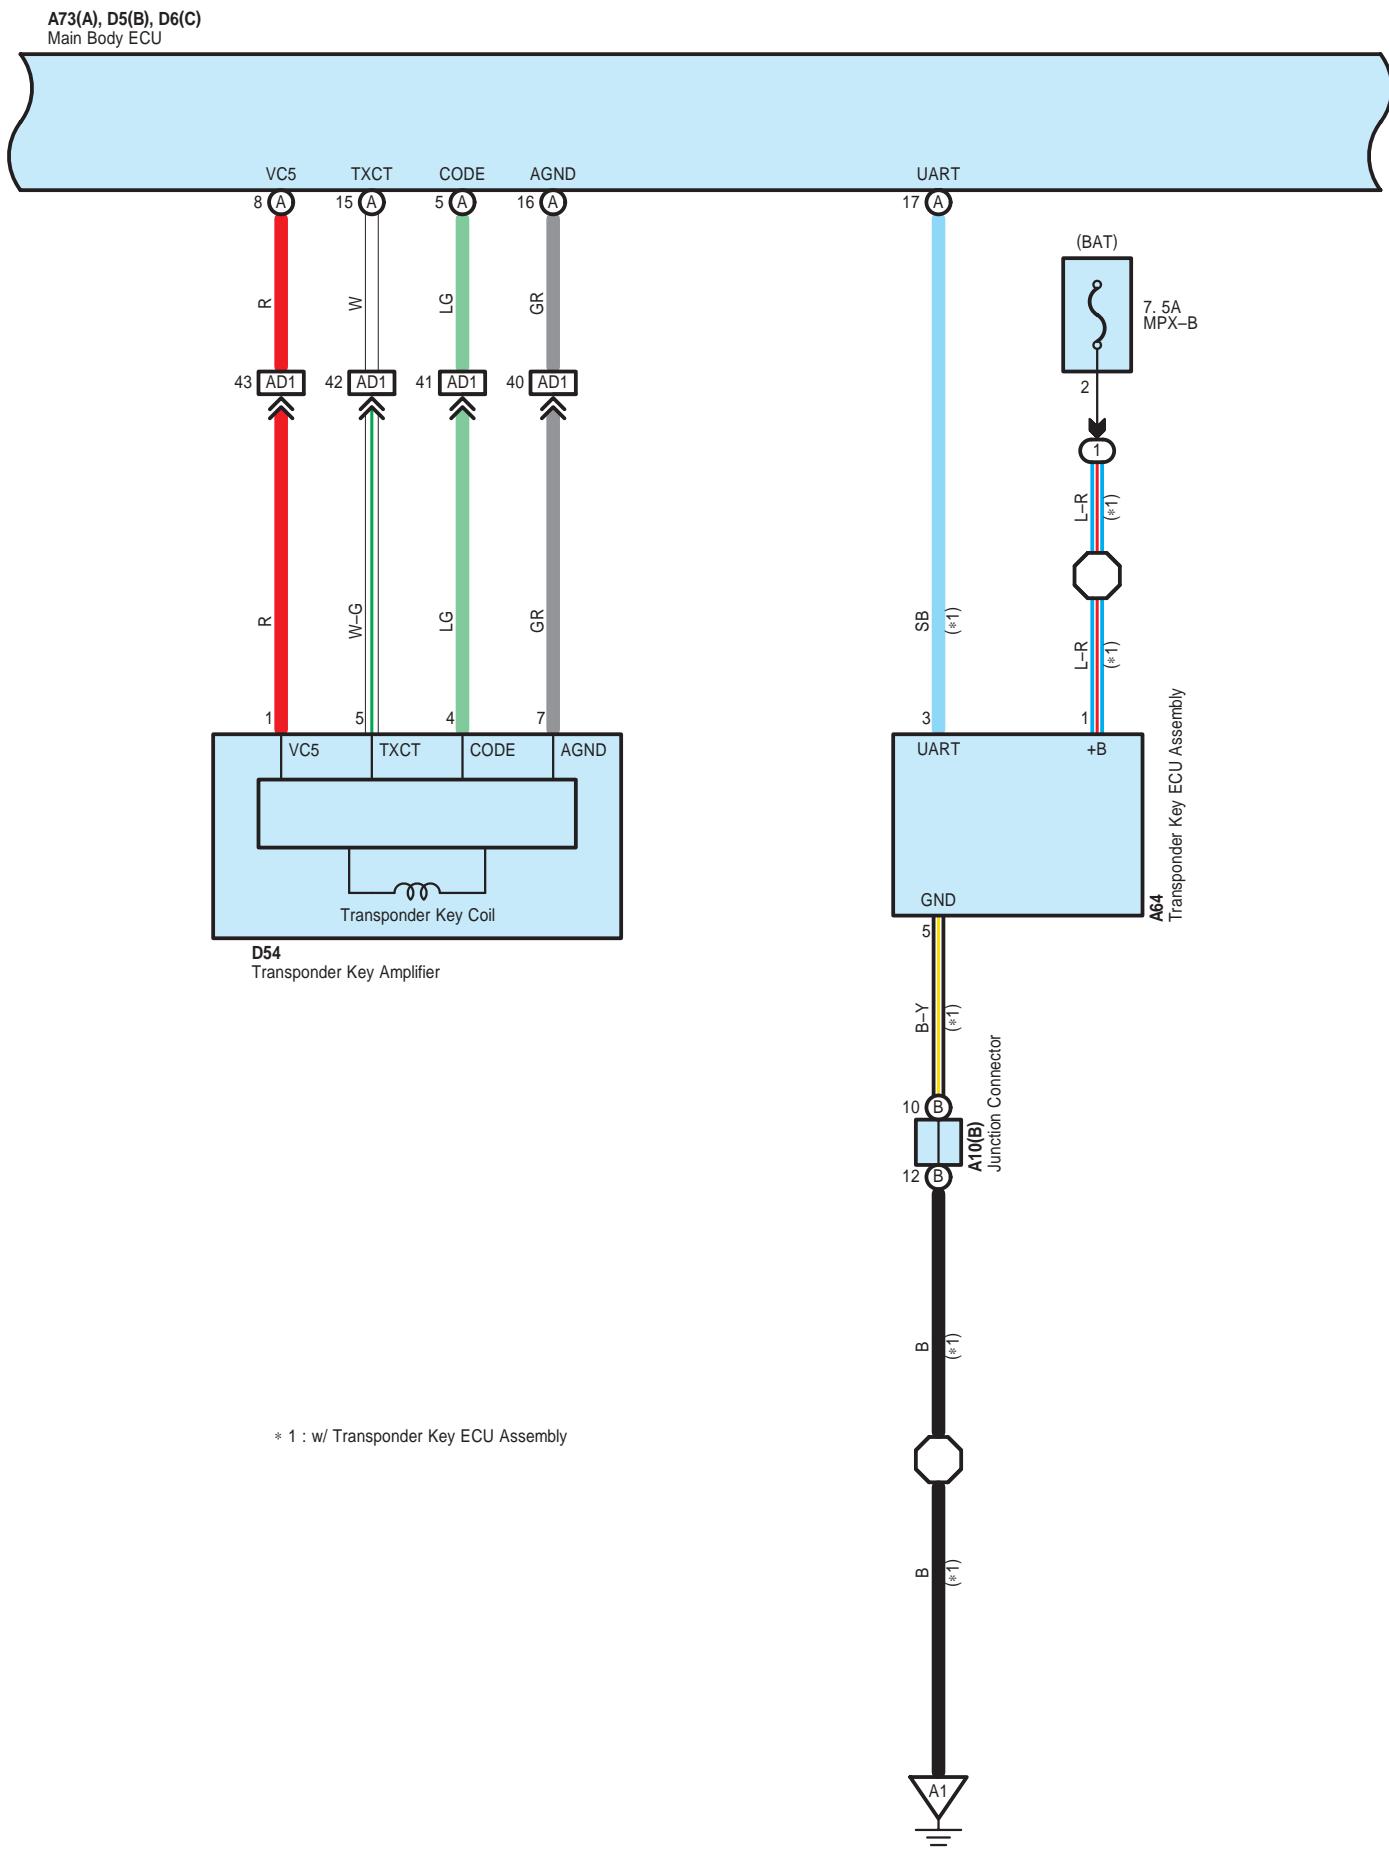

A73(A), D5(B), D6(C)
Main Body ECU

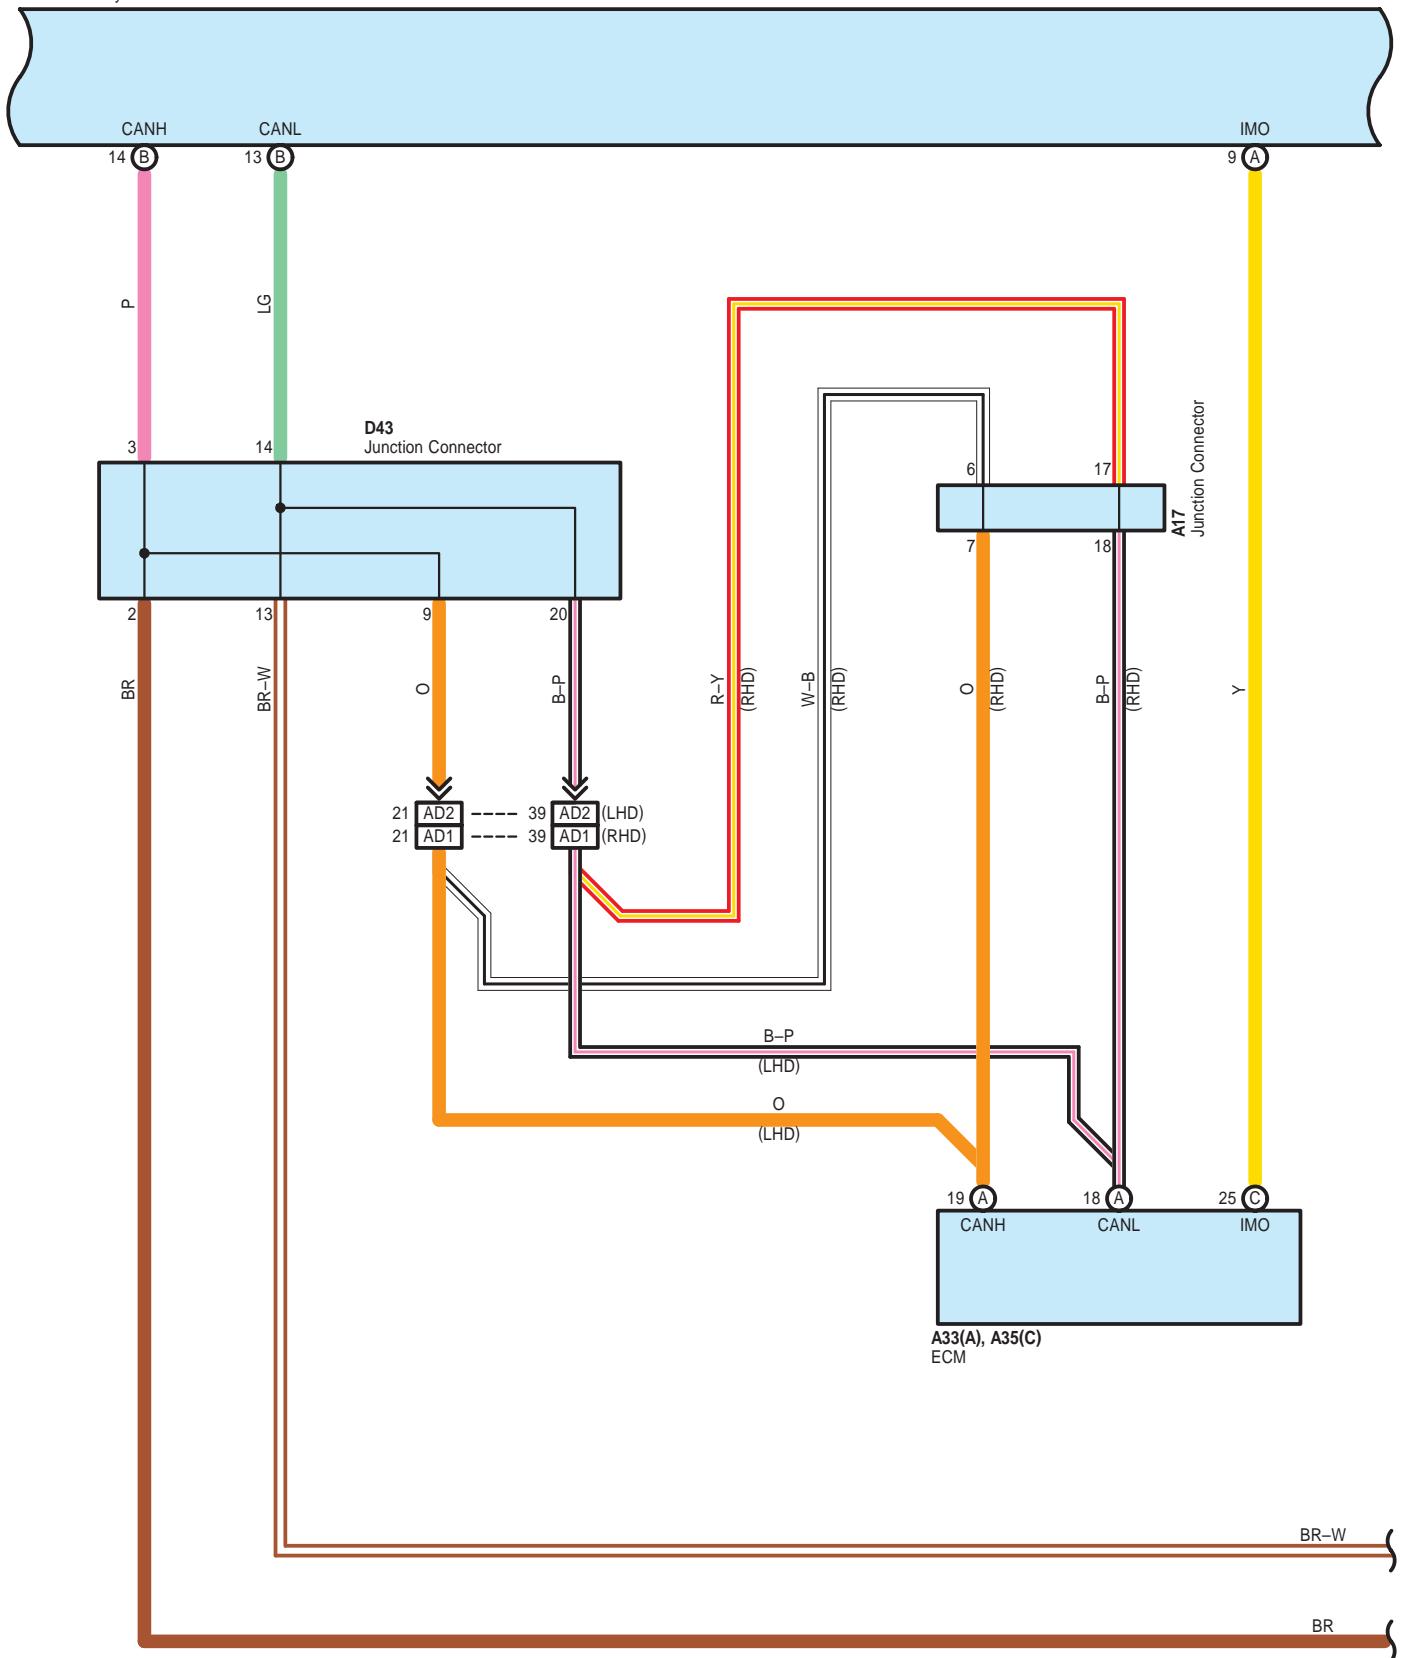

Engine Immobiliser System (w/o Entry & Start System)

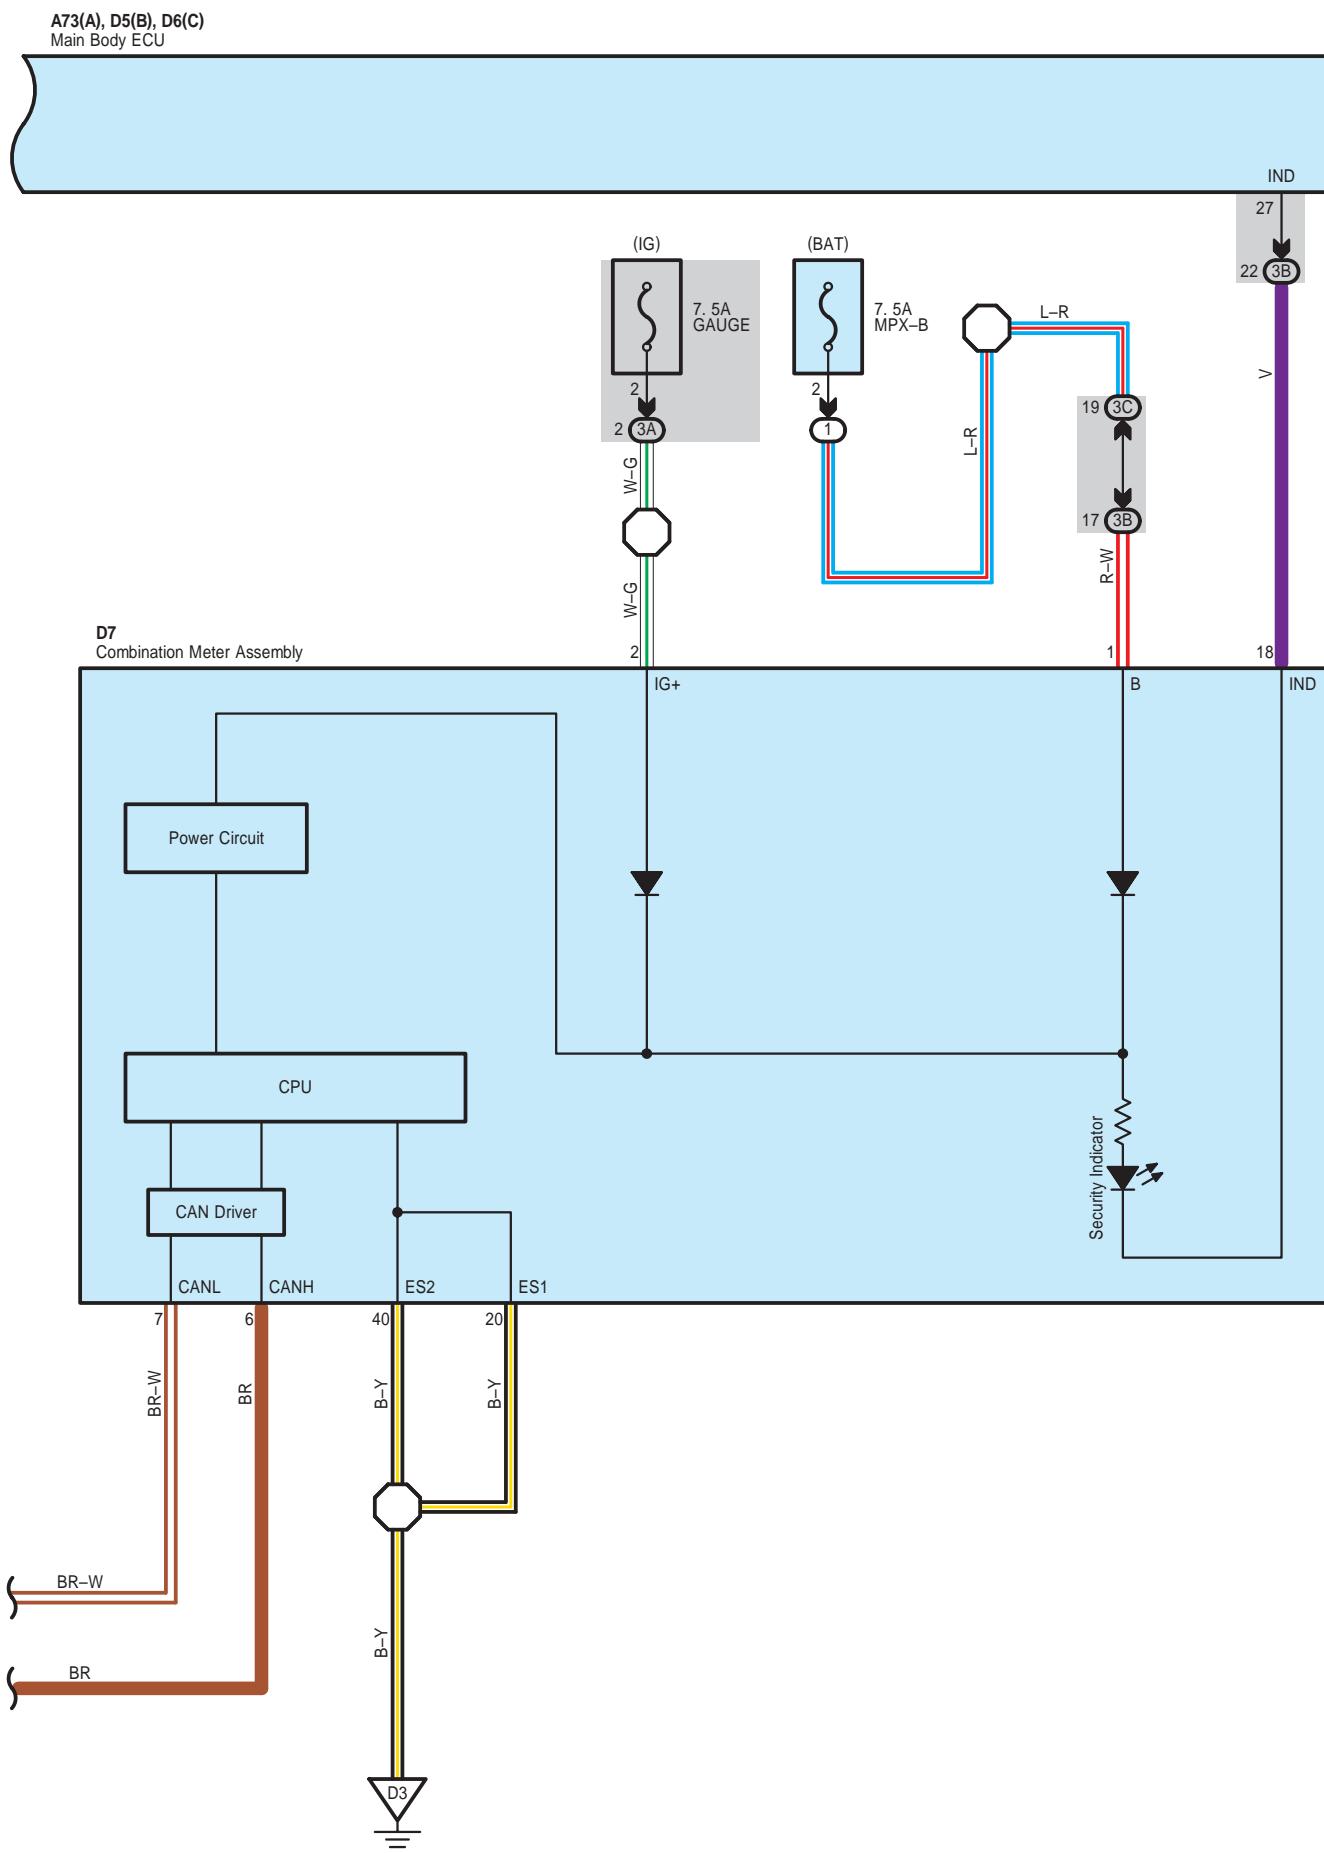

 : Parts Location

Code		See Page		Code		See Page		Code		See Page		
A9	A	42 (LHD)		A73	A	42 (LHD)		D9	B	48 (RHD)		
		50 (RHD)				50 (RHD)				40 (LHD)		
A10	B	42 (LHD)		D5	B	40 (LHD)		D16	A	48 (RHD)		
		50 (RHD)				48 (RHD)				40 (LHD)		
A17		50 (RHD)		D6	C	40 (LHD)		D17	B	48 (RHD)		
A33	A	42 (LHD)				48 (RHD)				41 (LHD)		
		50 (RHD)		D7		40 (LHD)		D43		49 (RHD)		
A35	C	42 (LHD)		D8	A	48 (RHD)		D53		41 (LHD)		
		50 (RHD)				40 (LHD)		D53		49 (RHD)		
A64		42 (LHD)		D9	B	48 (RHD)		D54		41 (LHD)		
		50 (RHD)				40 (LHD)				49 (RHD)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
3A		
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

 : Ground Points

Code	See Page	Ground Points Location
A1	54 (LHD) 58 (RHD)	Front Fender Apron LH
A3	55 (LHD) 59 (RHD)	Cowl Side Panel RH
D1	55 (LHD) 59 (RHD)	Cowl Side Panel LH
D3	55 (LHD) 59 (RHD)	Instrument Panel Brace RH Instrument Panel Brace LH

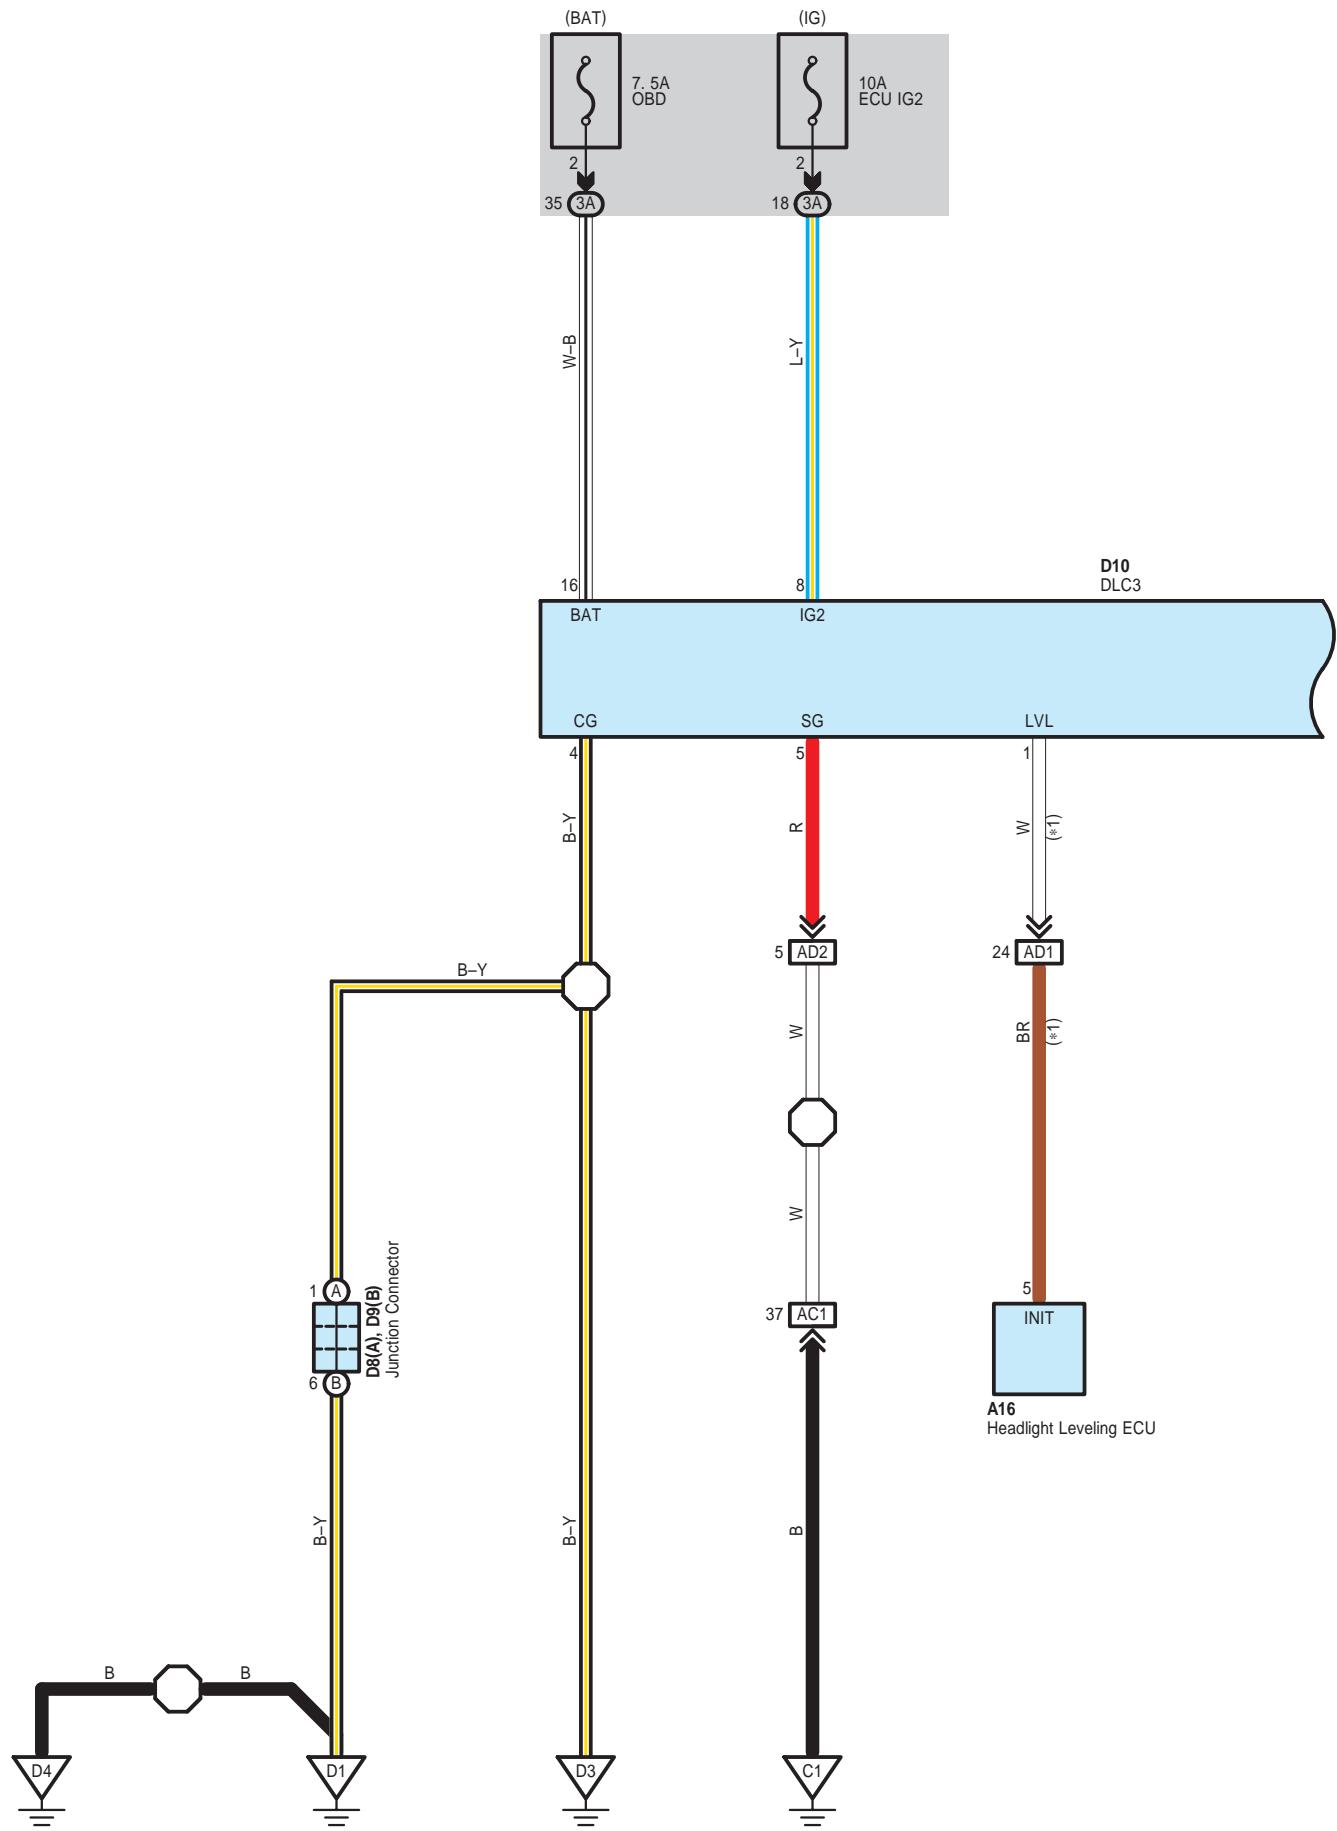

* 1 : w/ Headlight Beam Level Control (Automatic)

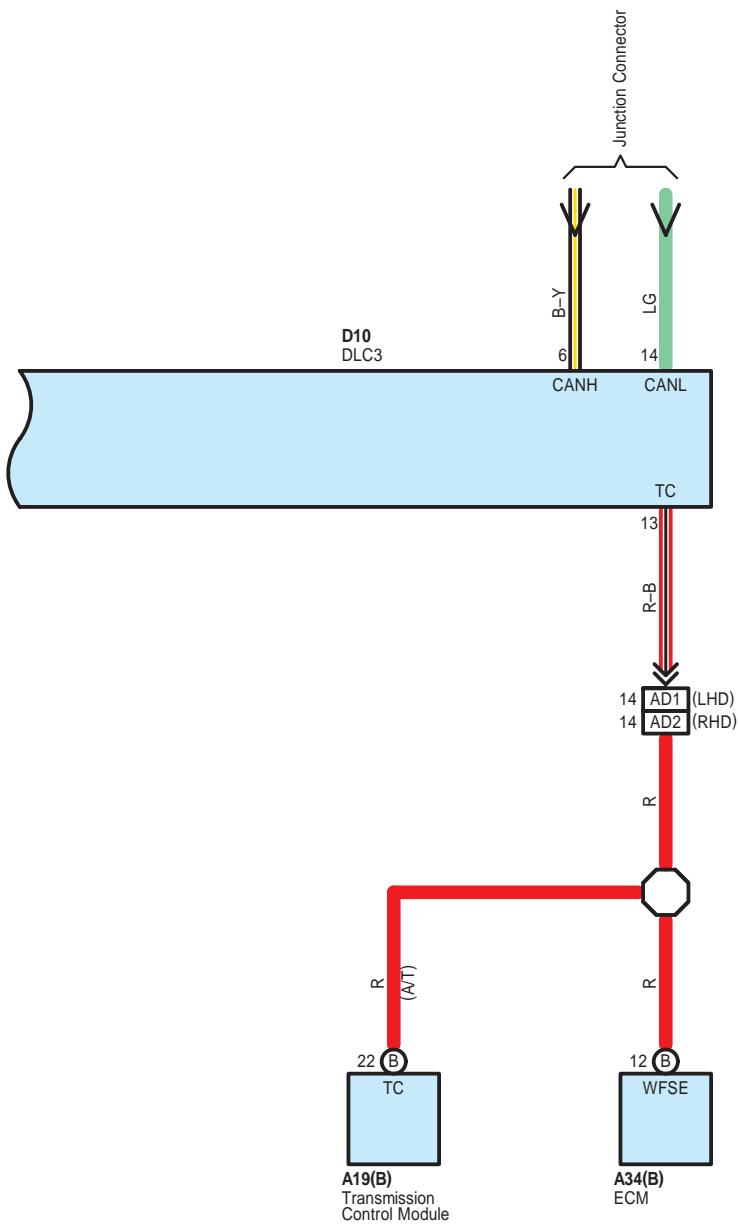

DLC3

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A16		42 (LHD)		A34	B	42 (LHD)		D9	B	40 (LHD)	
		50 (RHD)				50 (RHD)				48 (RHD)	
A19	B	42 (LHD)		D8	A	40 (LHD)		D10		40 (LHD)	
		50 (RHD)				48 (RHD)				48 (RHD)	

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
	58 (RHD)	
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	


▽ : Ground Points

Code	See Page	Ground Points Location
C1	54 (LHD)	Engine Unit
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH


Multiplex Communication System (CAN)

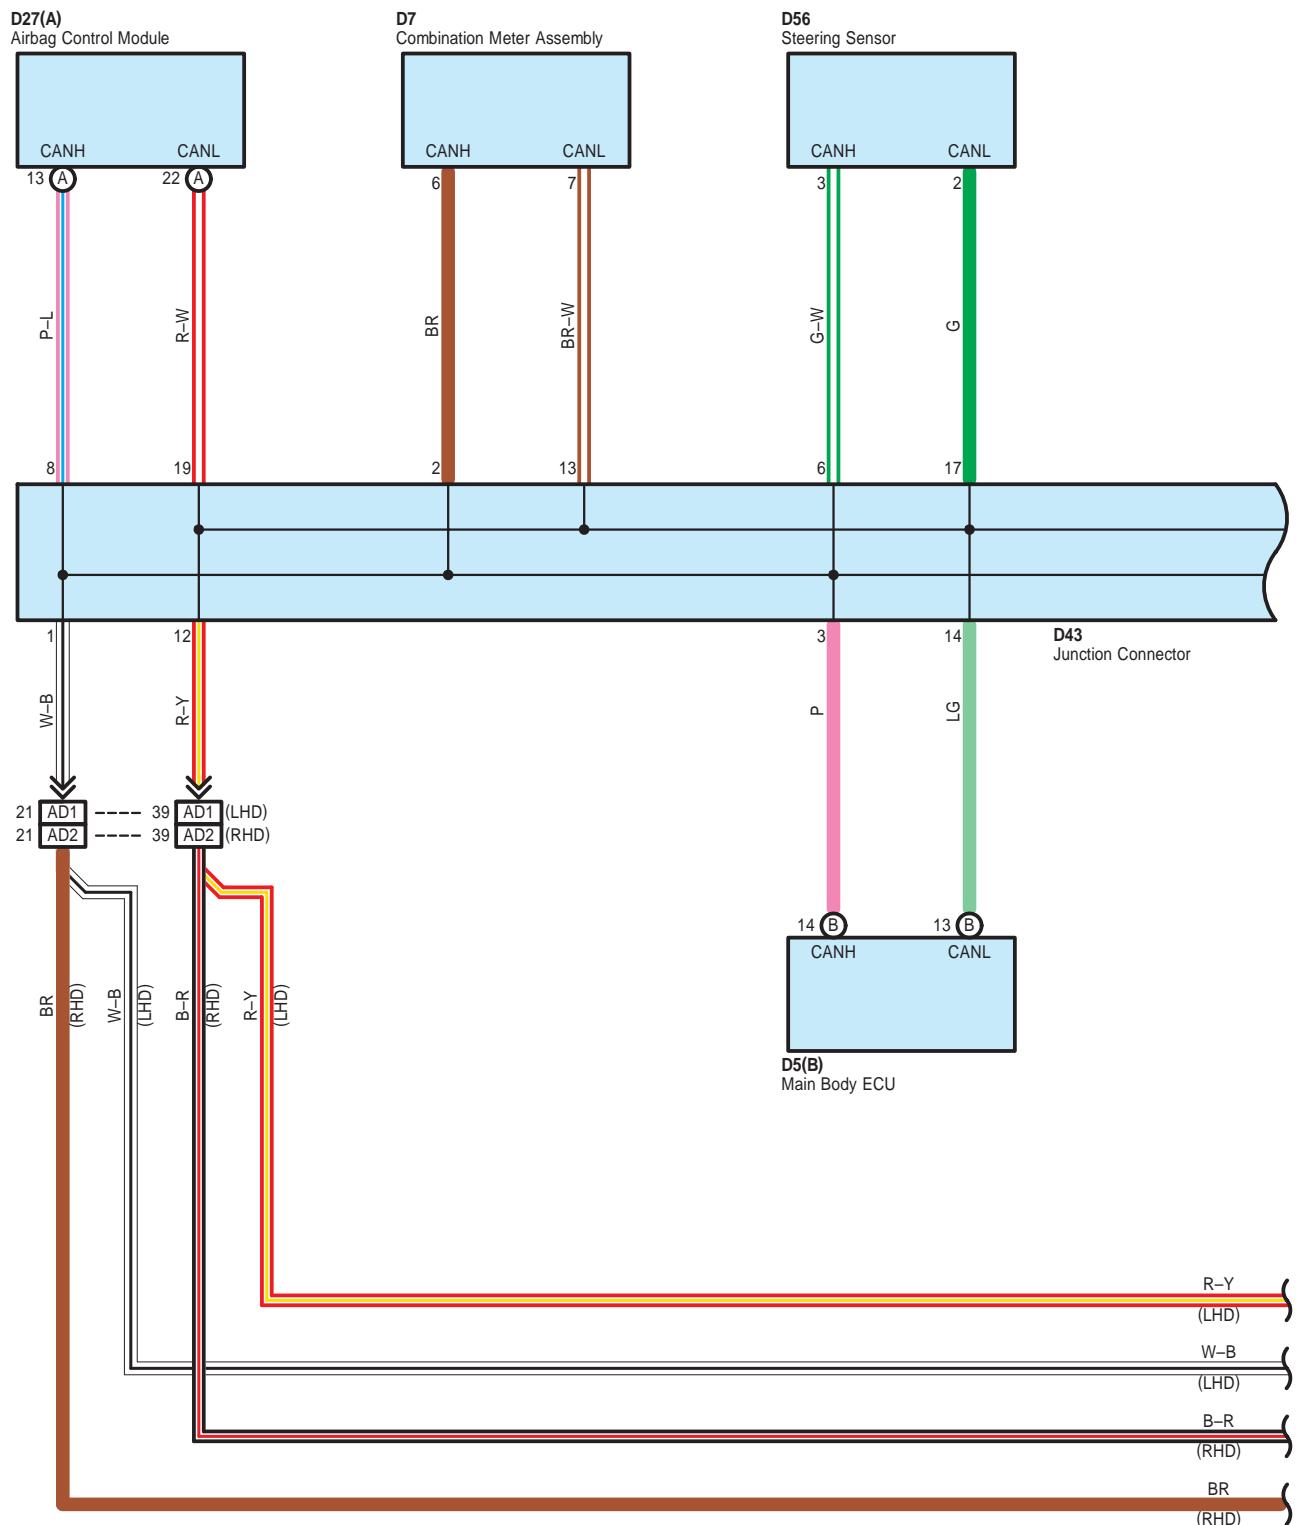

* 1 : Automatic A/C
 * 2 : w/ Entry & Start System

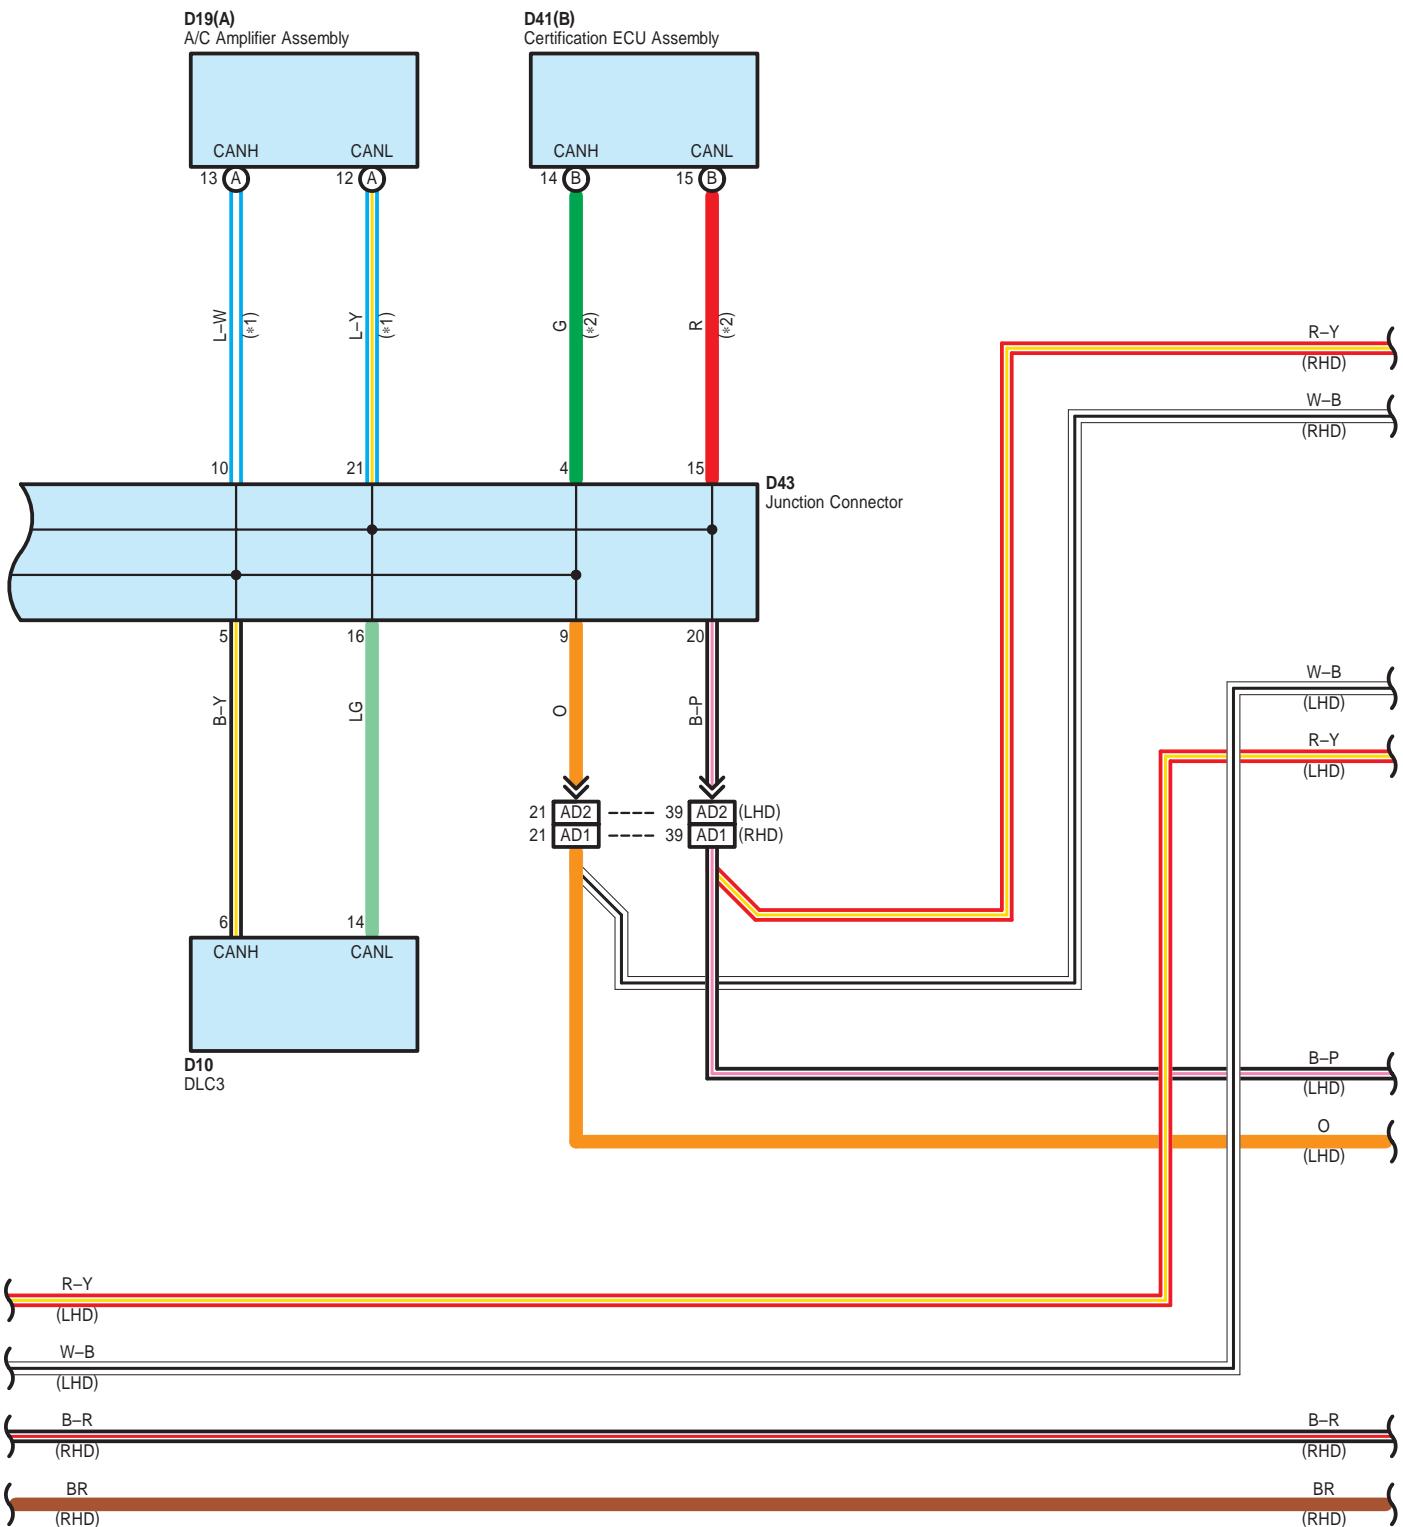

Multiplex Communication System (CAN)

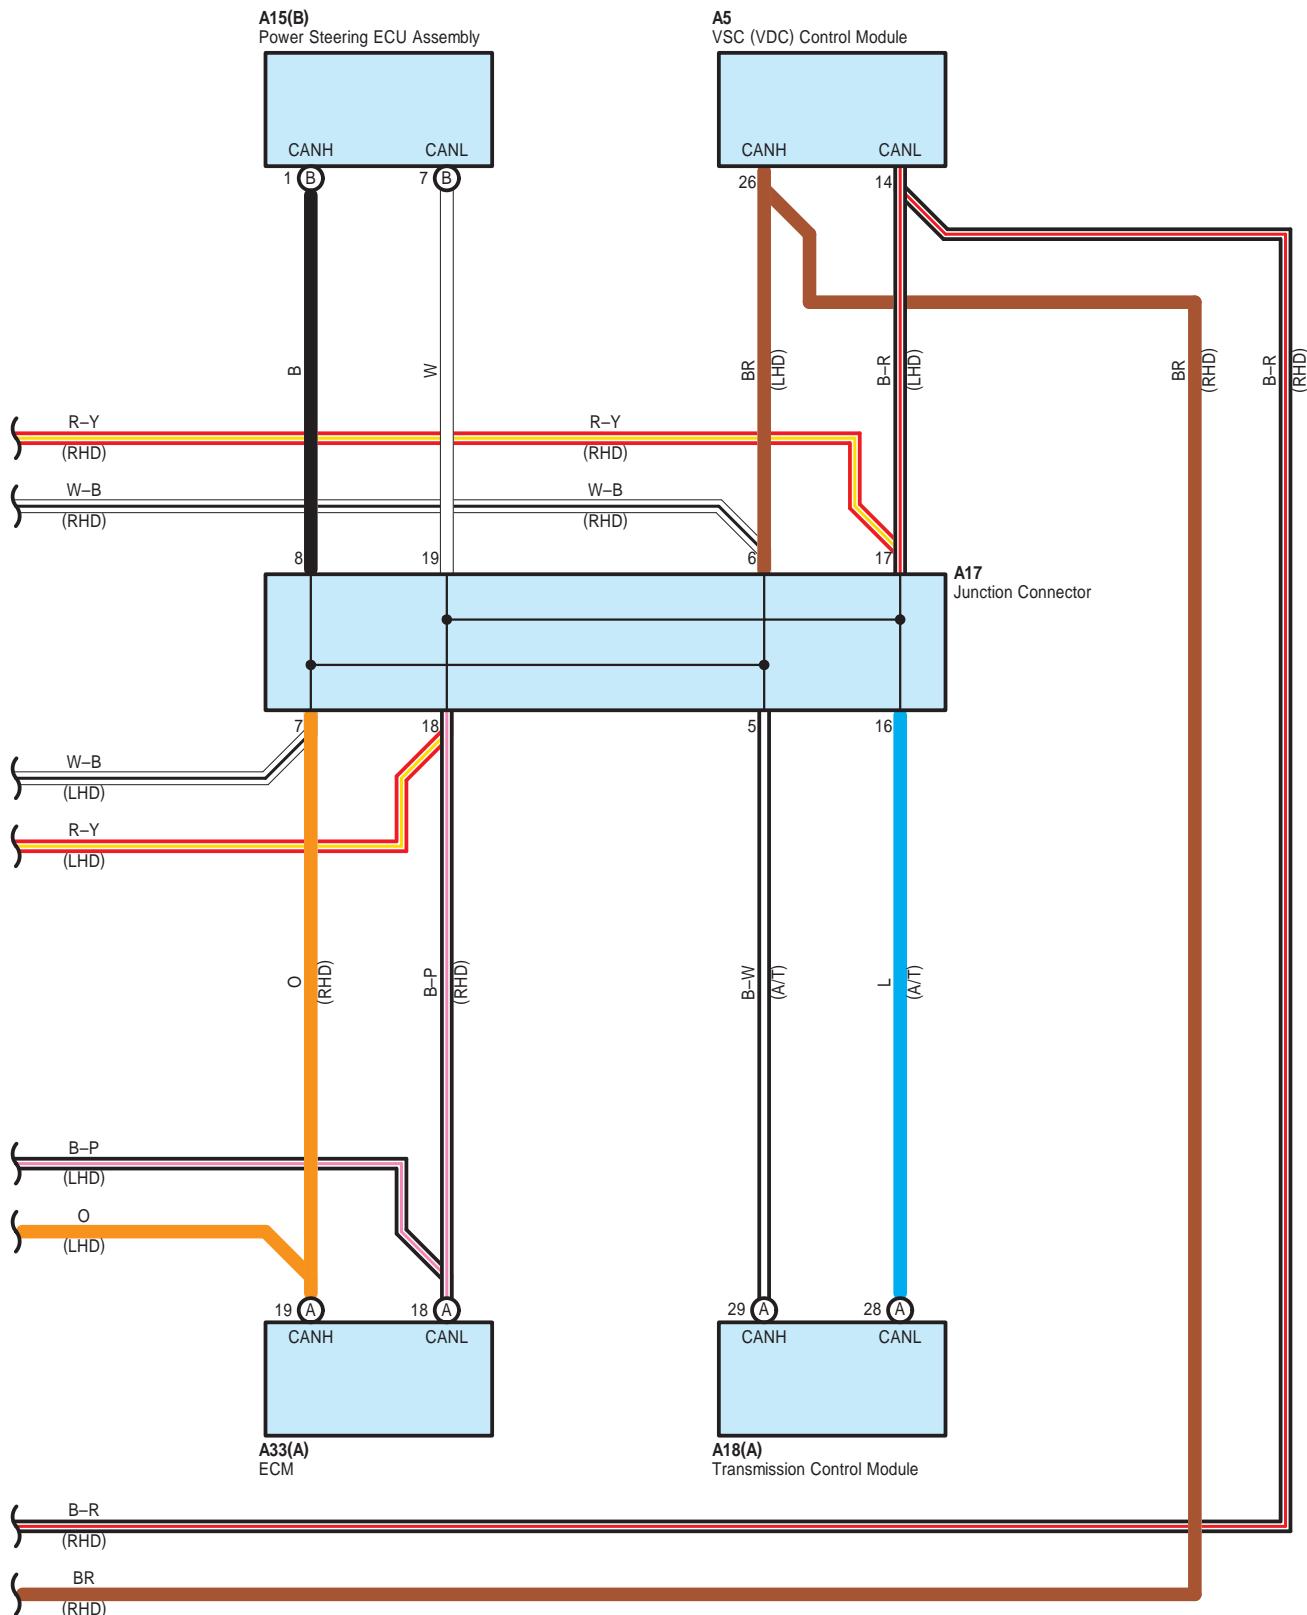


○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A5		39 (LHD)		A33	A	50 (RHD)		D27	A	40 (LHD)	
		47 (RHD)		D5	B	40 (LHD)				48 (RHD)	
A15	B	42 (LHD)				48 (RHD)		D41	B	41 (LHD)	
		50 (RHD)		D7		40 (LHD)				49 (RHD)	
A17		42 (LHD)				48 (RHD)		D43		41 (LHD)	
		50 (RHD)		D10		40 (LHD)				49 (RHD)	
A18	A	42 (LHD)				48 (RHD)		D56		41 (LHD)	
		50 (RHD)		D19	A	40 (LHD)				49 (RHD)	
A33	A	42 (LHD)				48 (RHD)					

□ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

Headlight

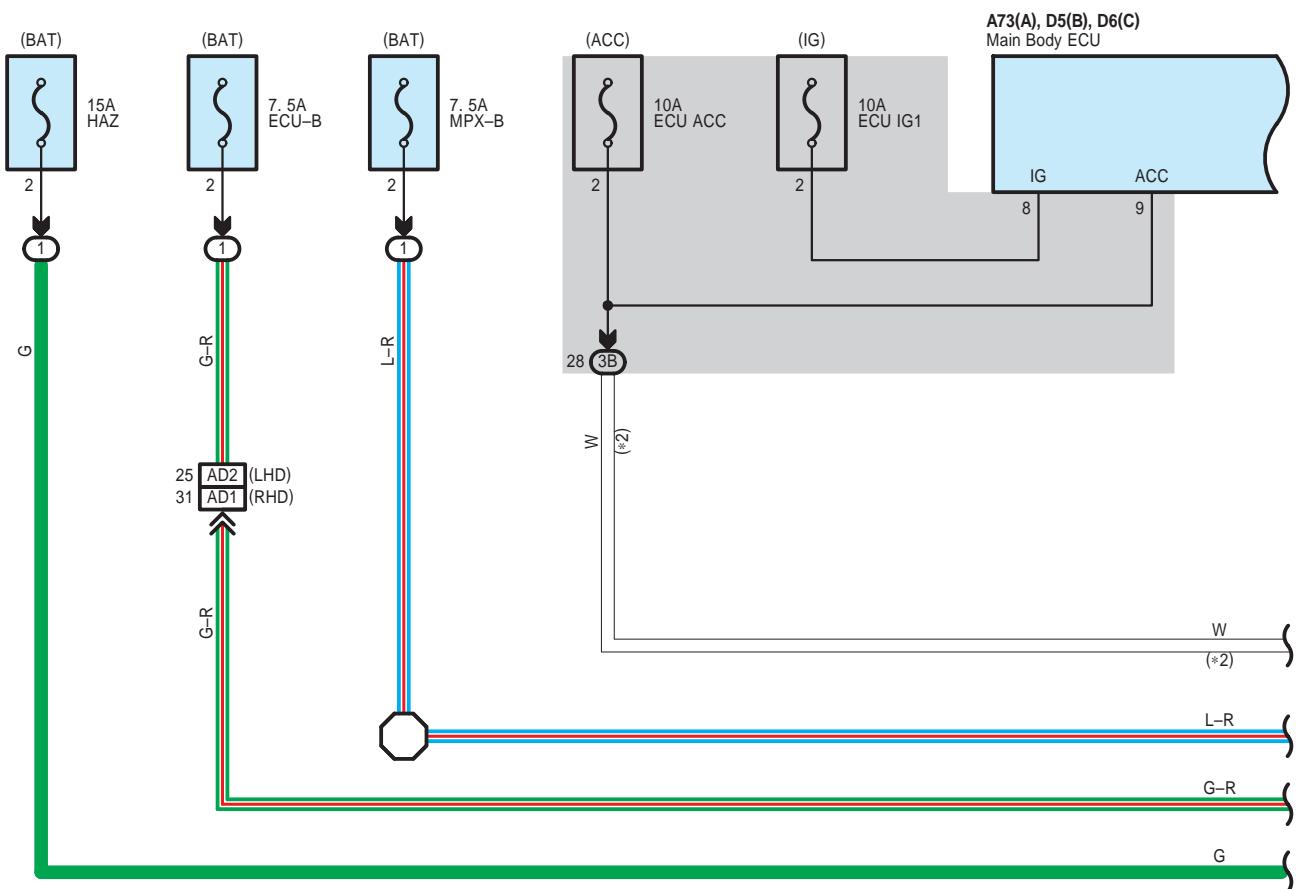


* 2 : w/ Entry & Start System

A73(A), D5(B), D6(C)
Main Body ECU

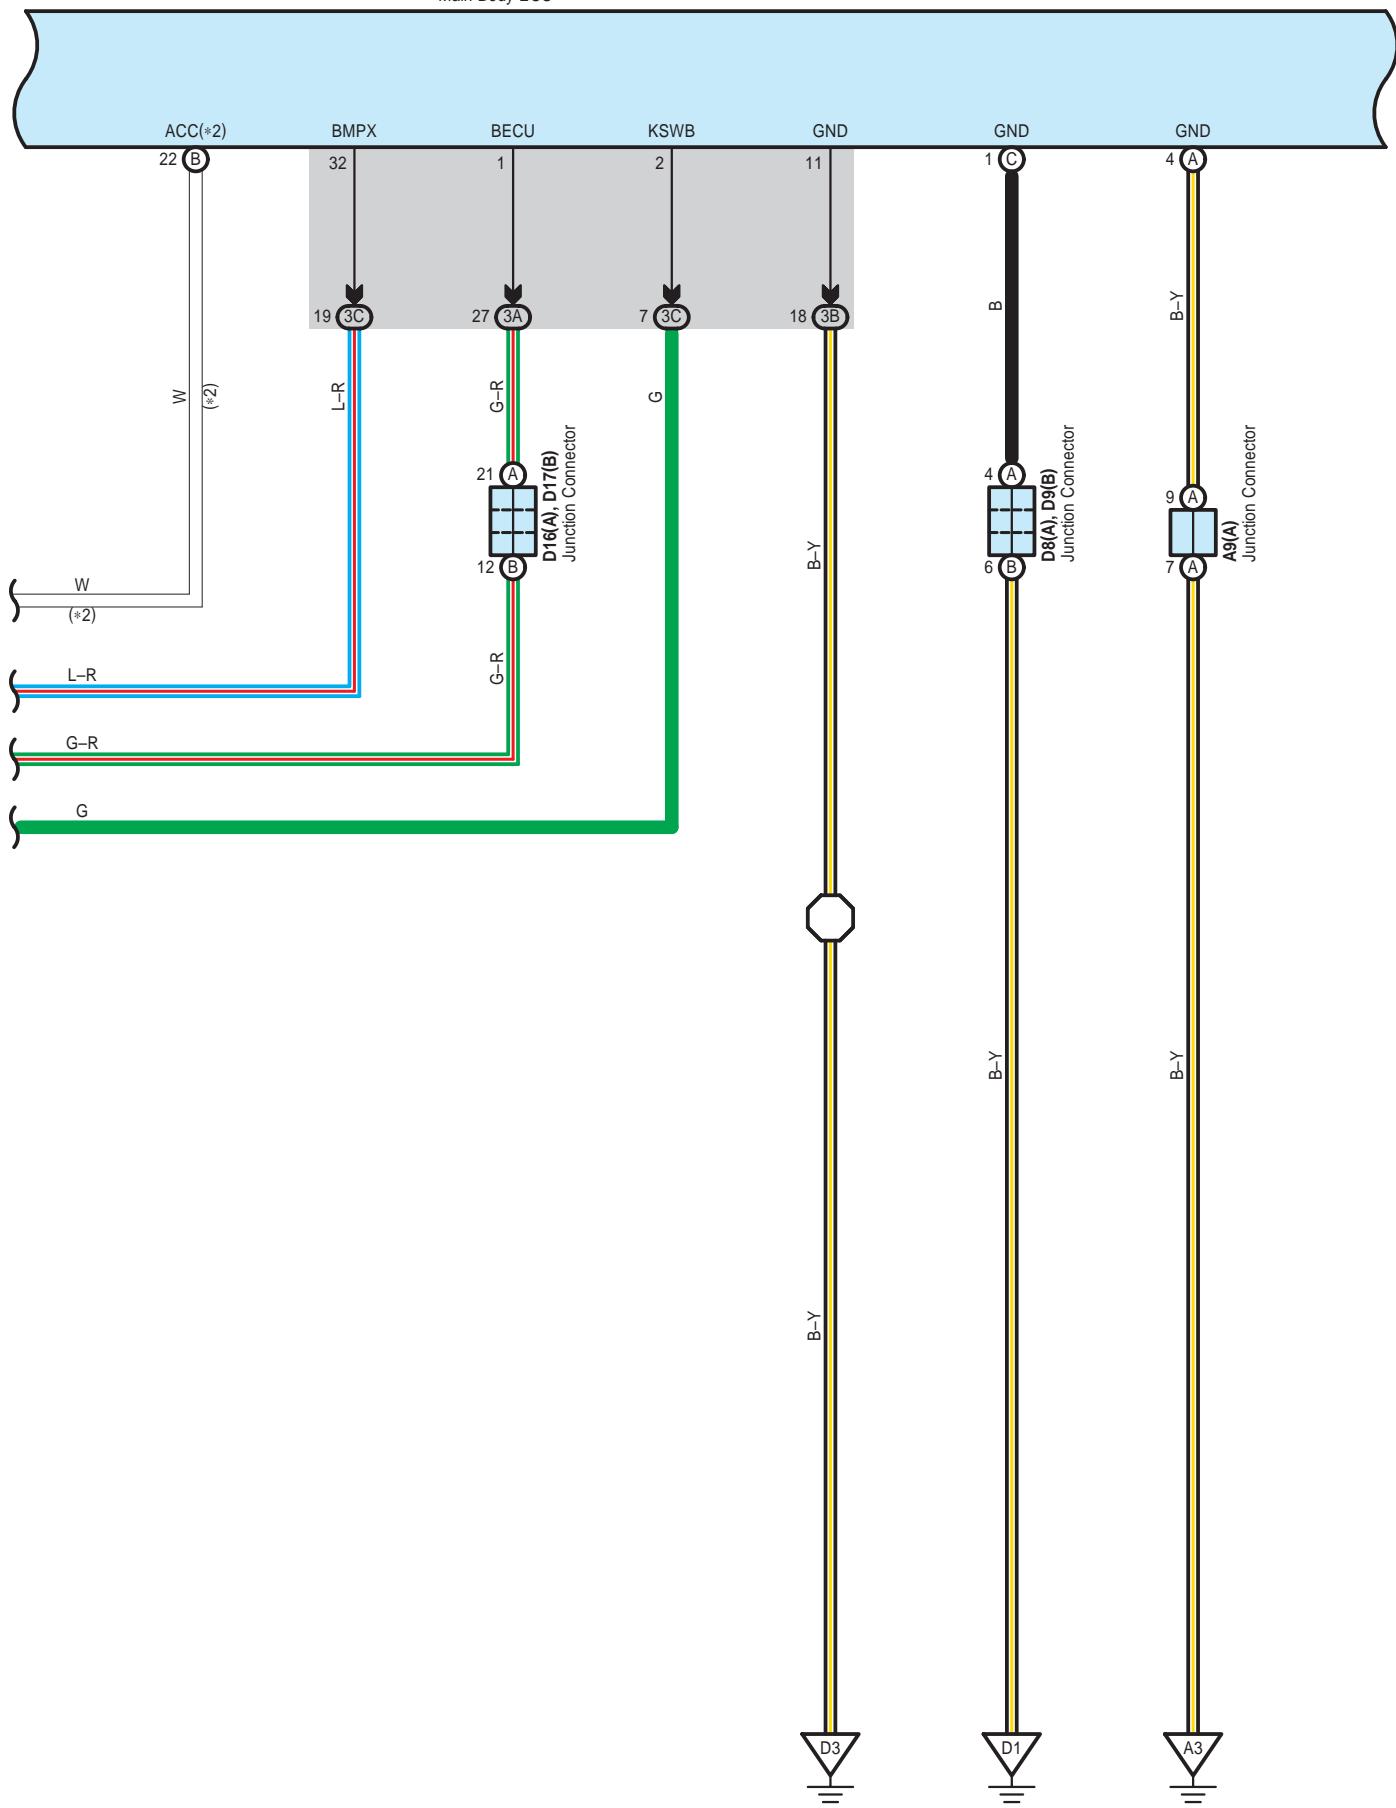


Headlight


A73(A), D5(B), D6(C)
Main Body ECU

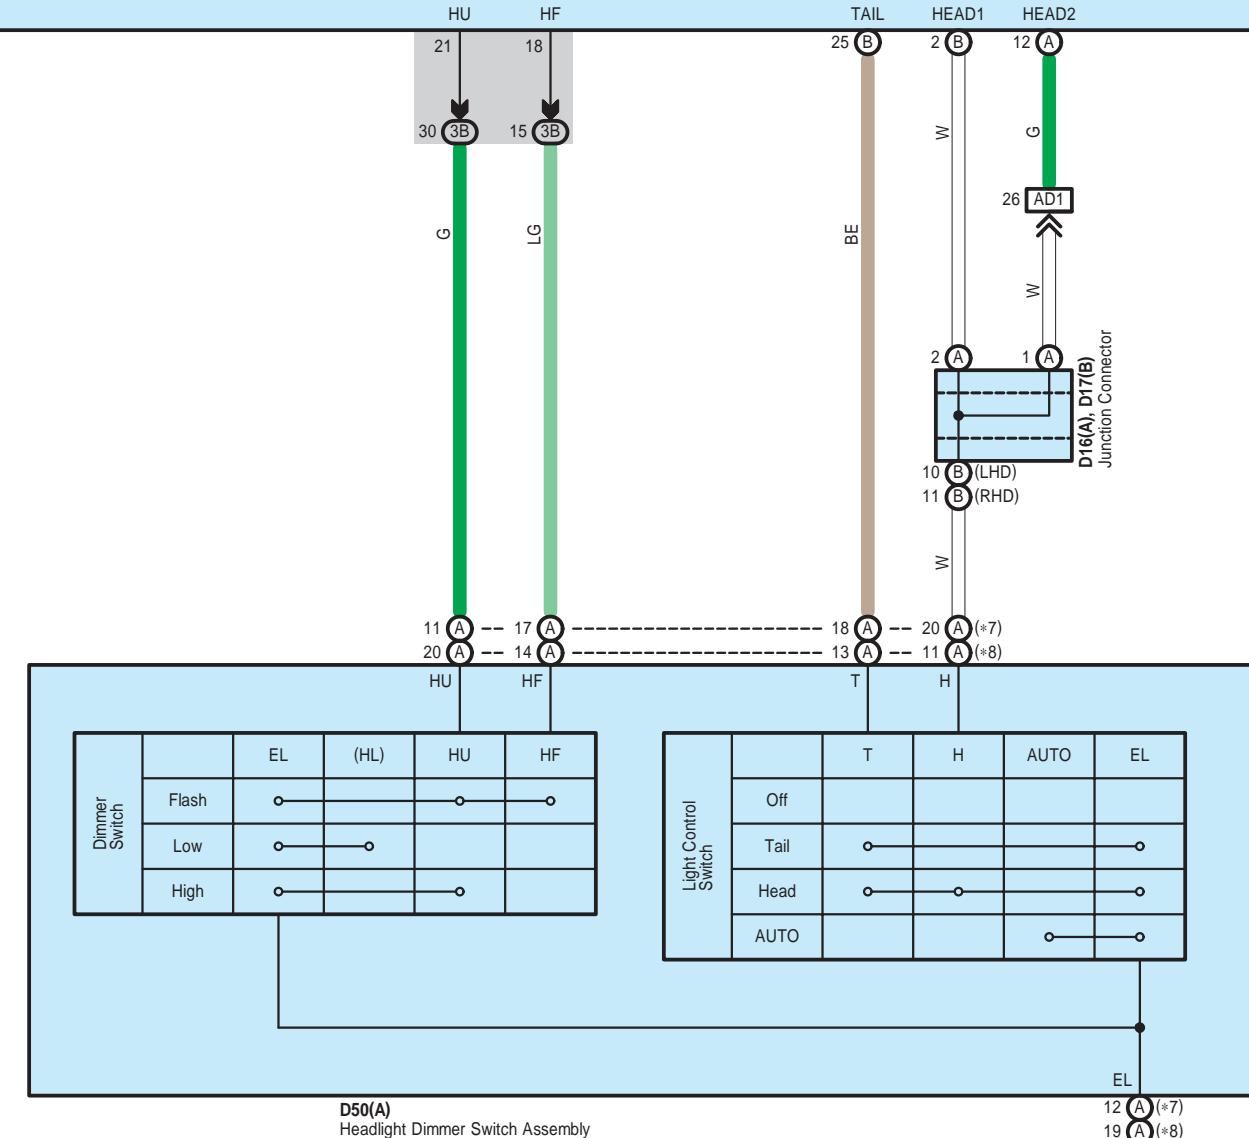

* 7 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
* 8 : RHD Headlight Dimmer Switch Assembly RH Side Type

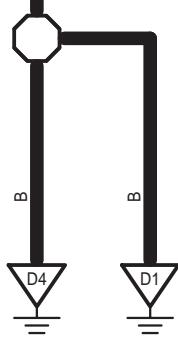


A73(A), D5(B), D6(C)
Main Body ECU

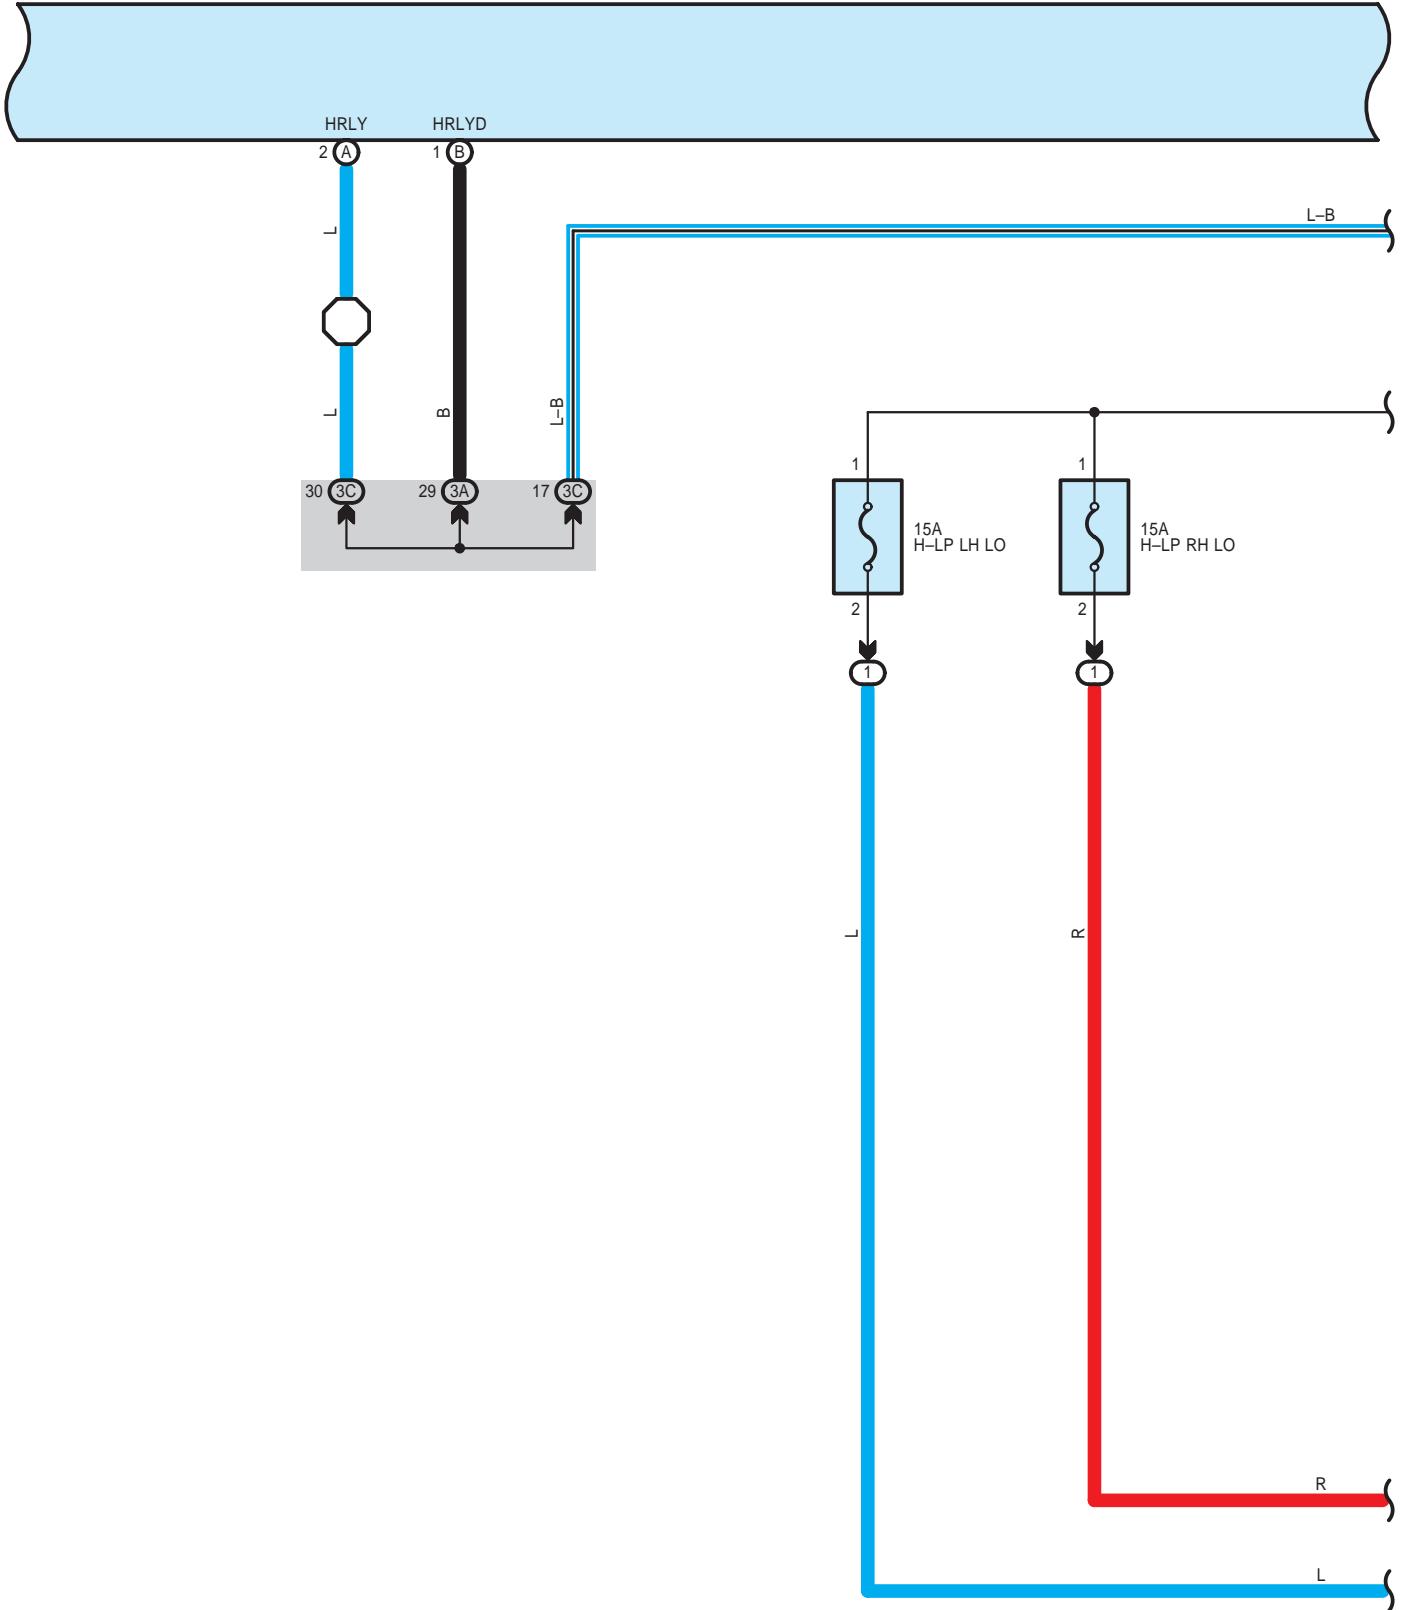


Headlight


A73(A), D5(B), D6(C)
Main Body ECU

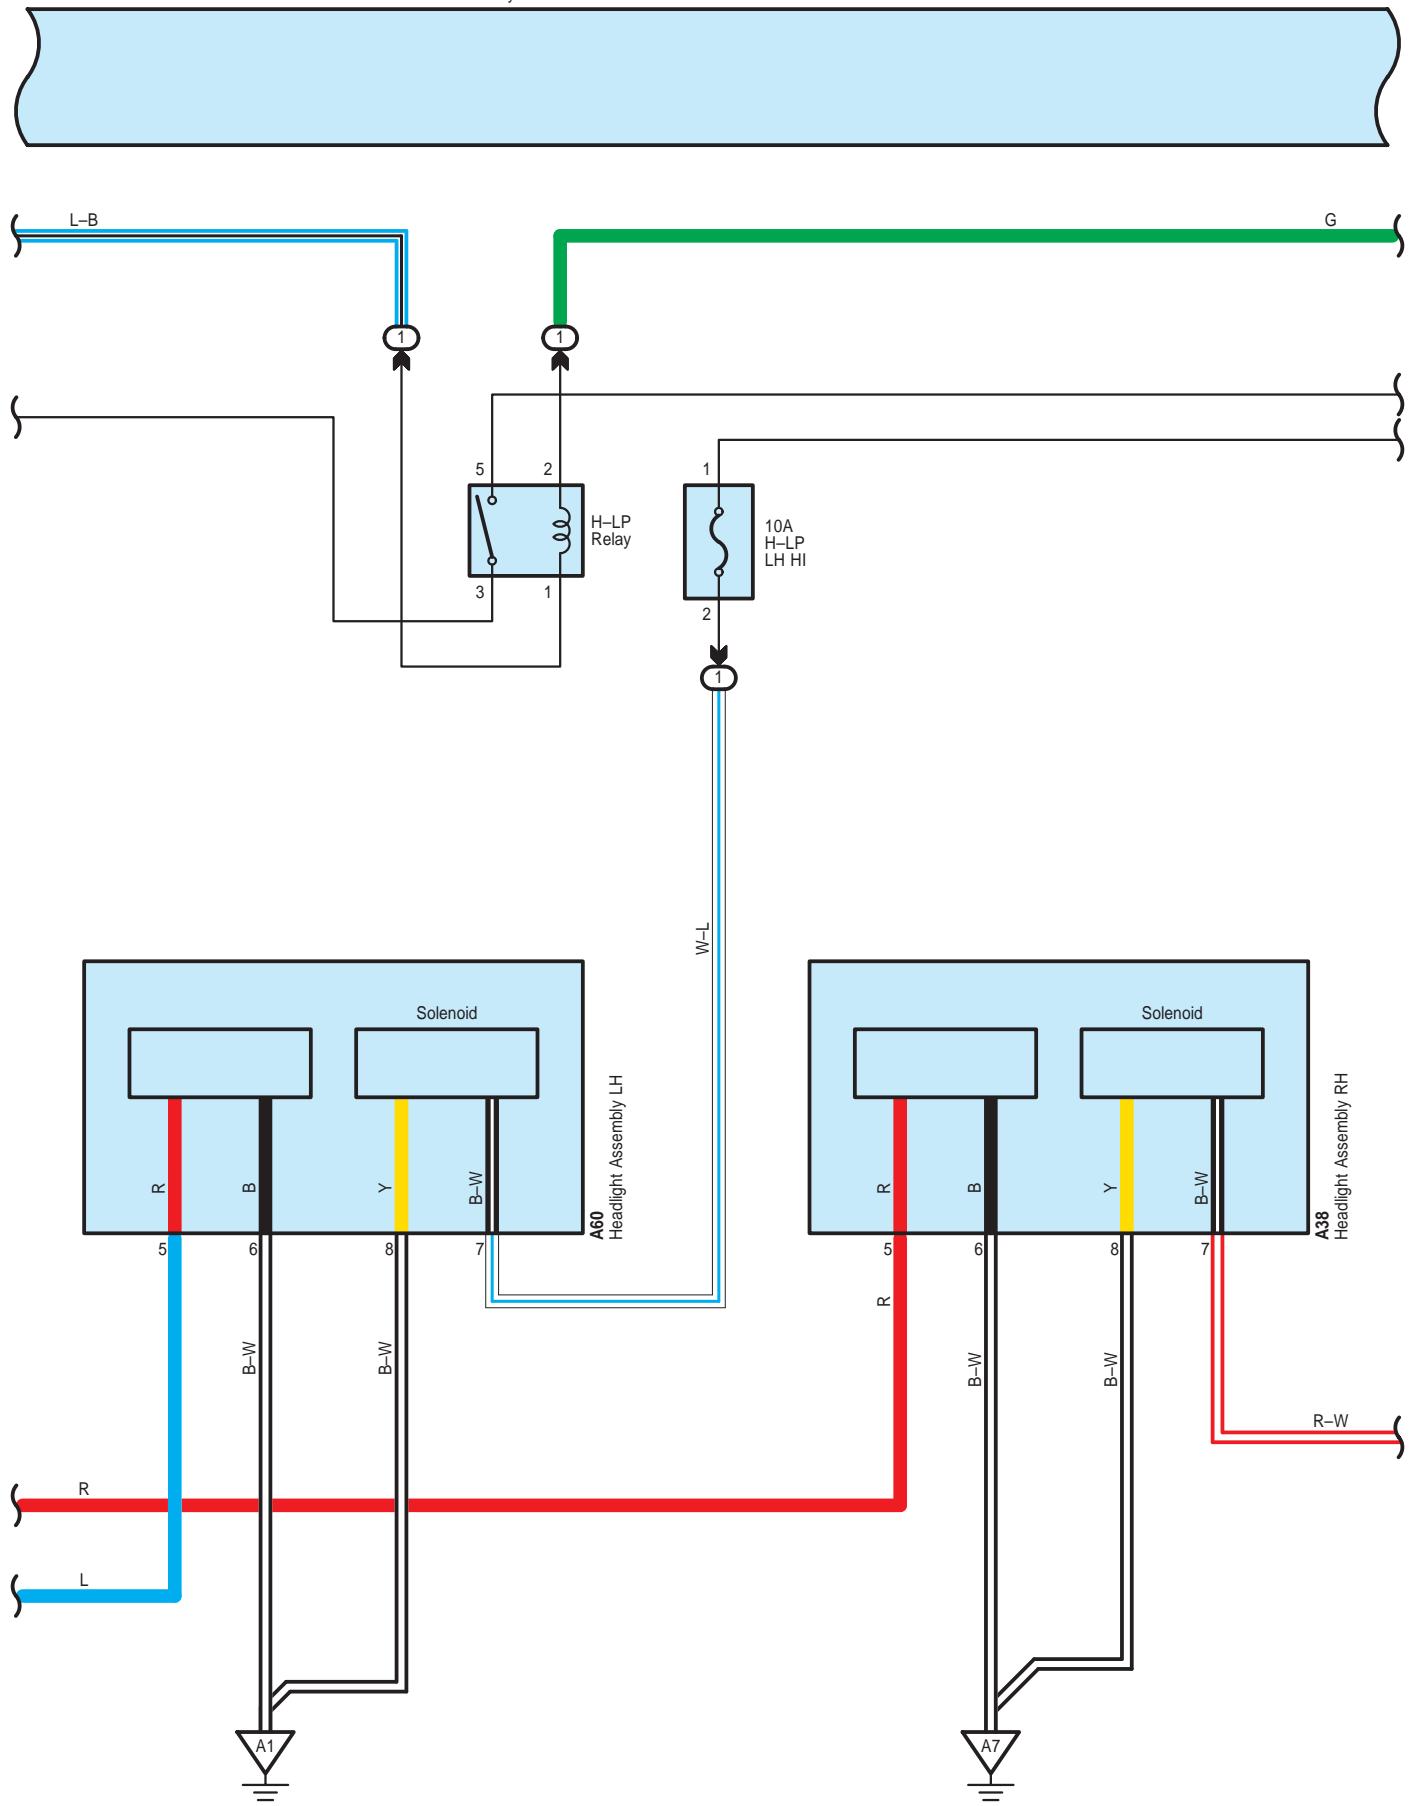


A73(A), D5(B), D6(C)
Main Body ECU

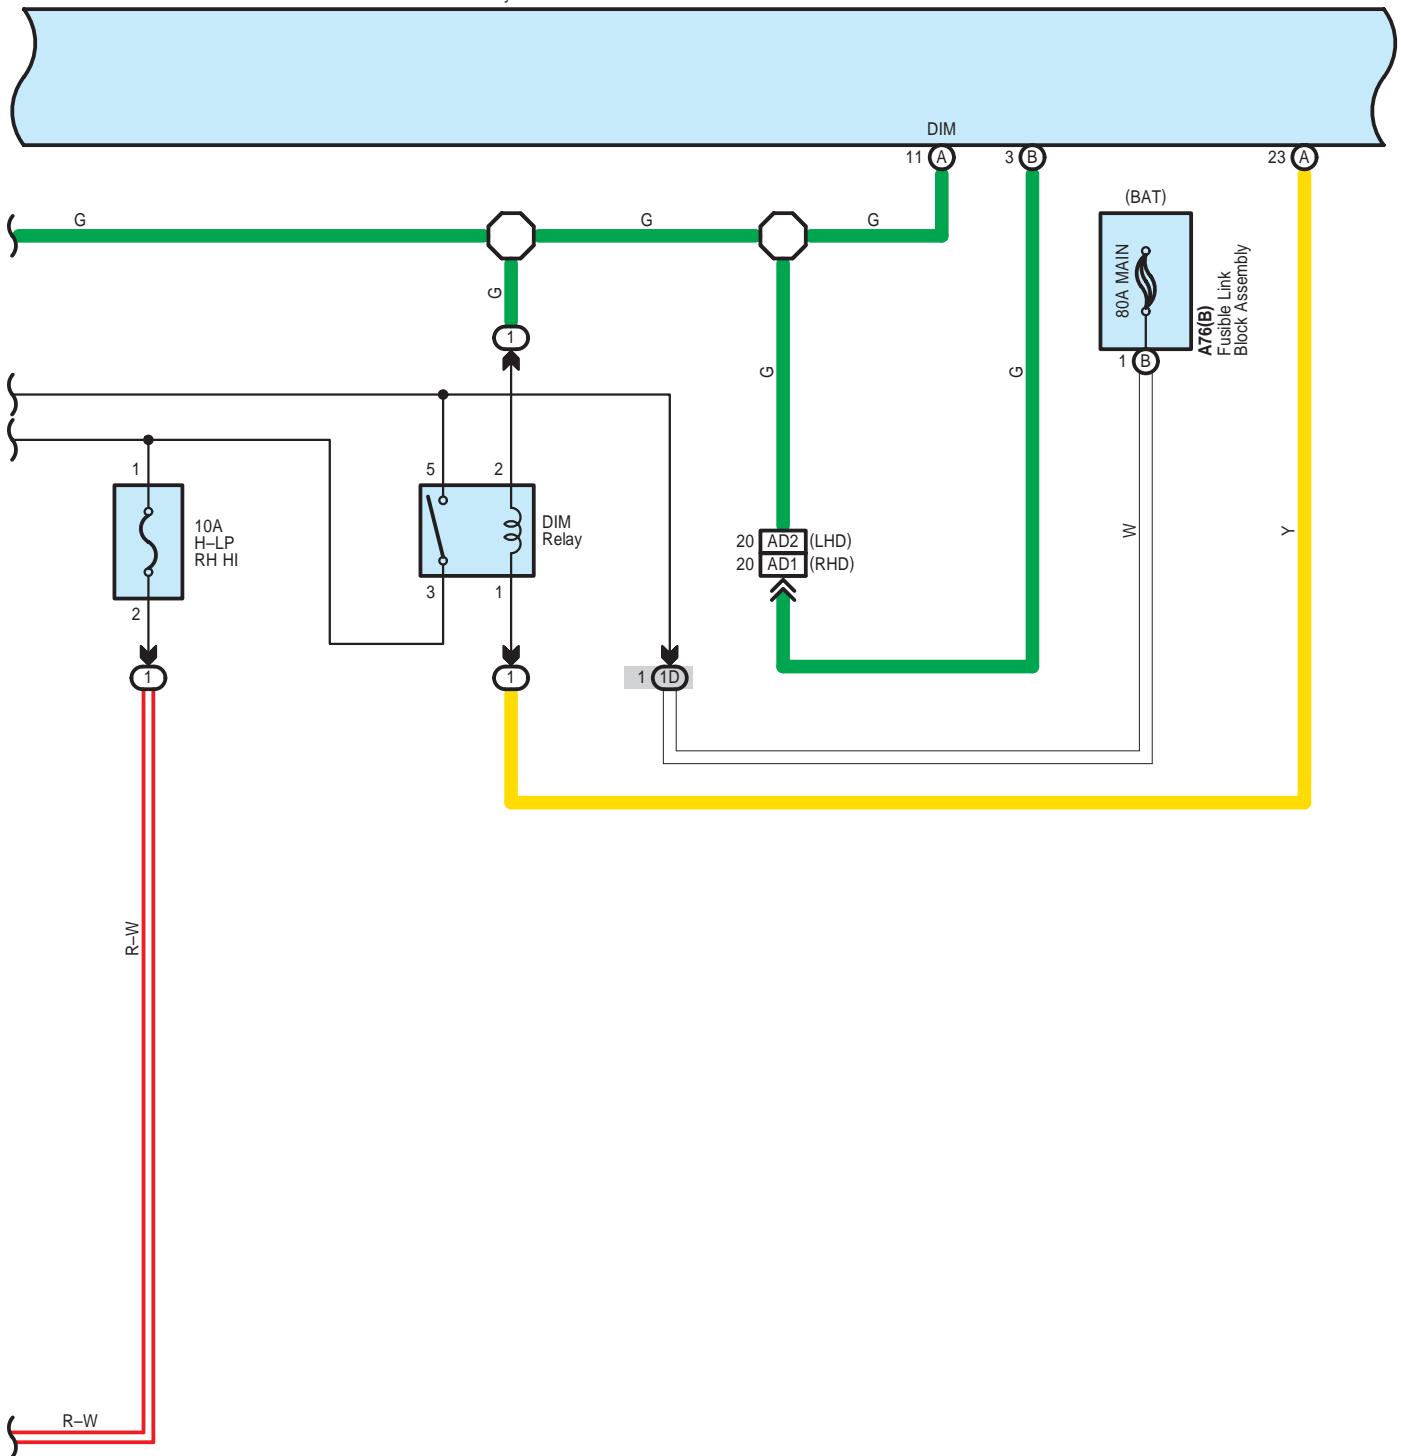


Headlight

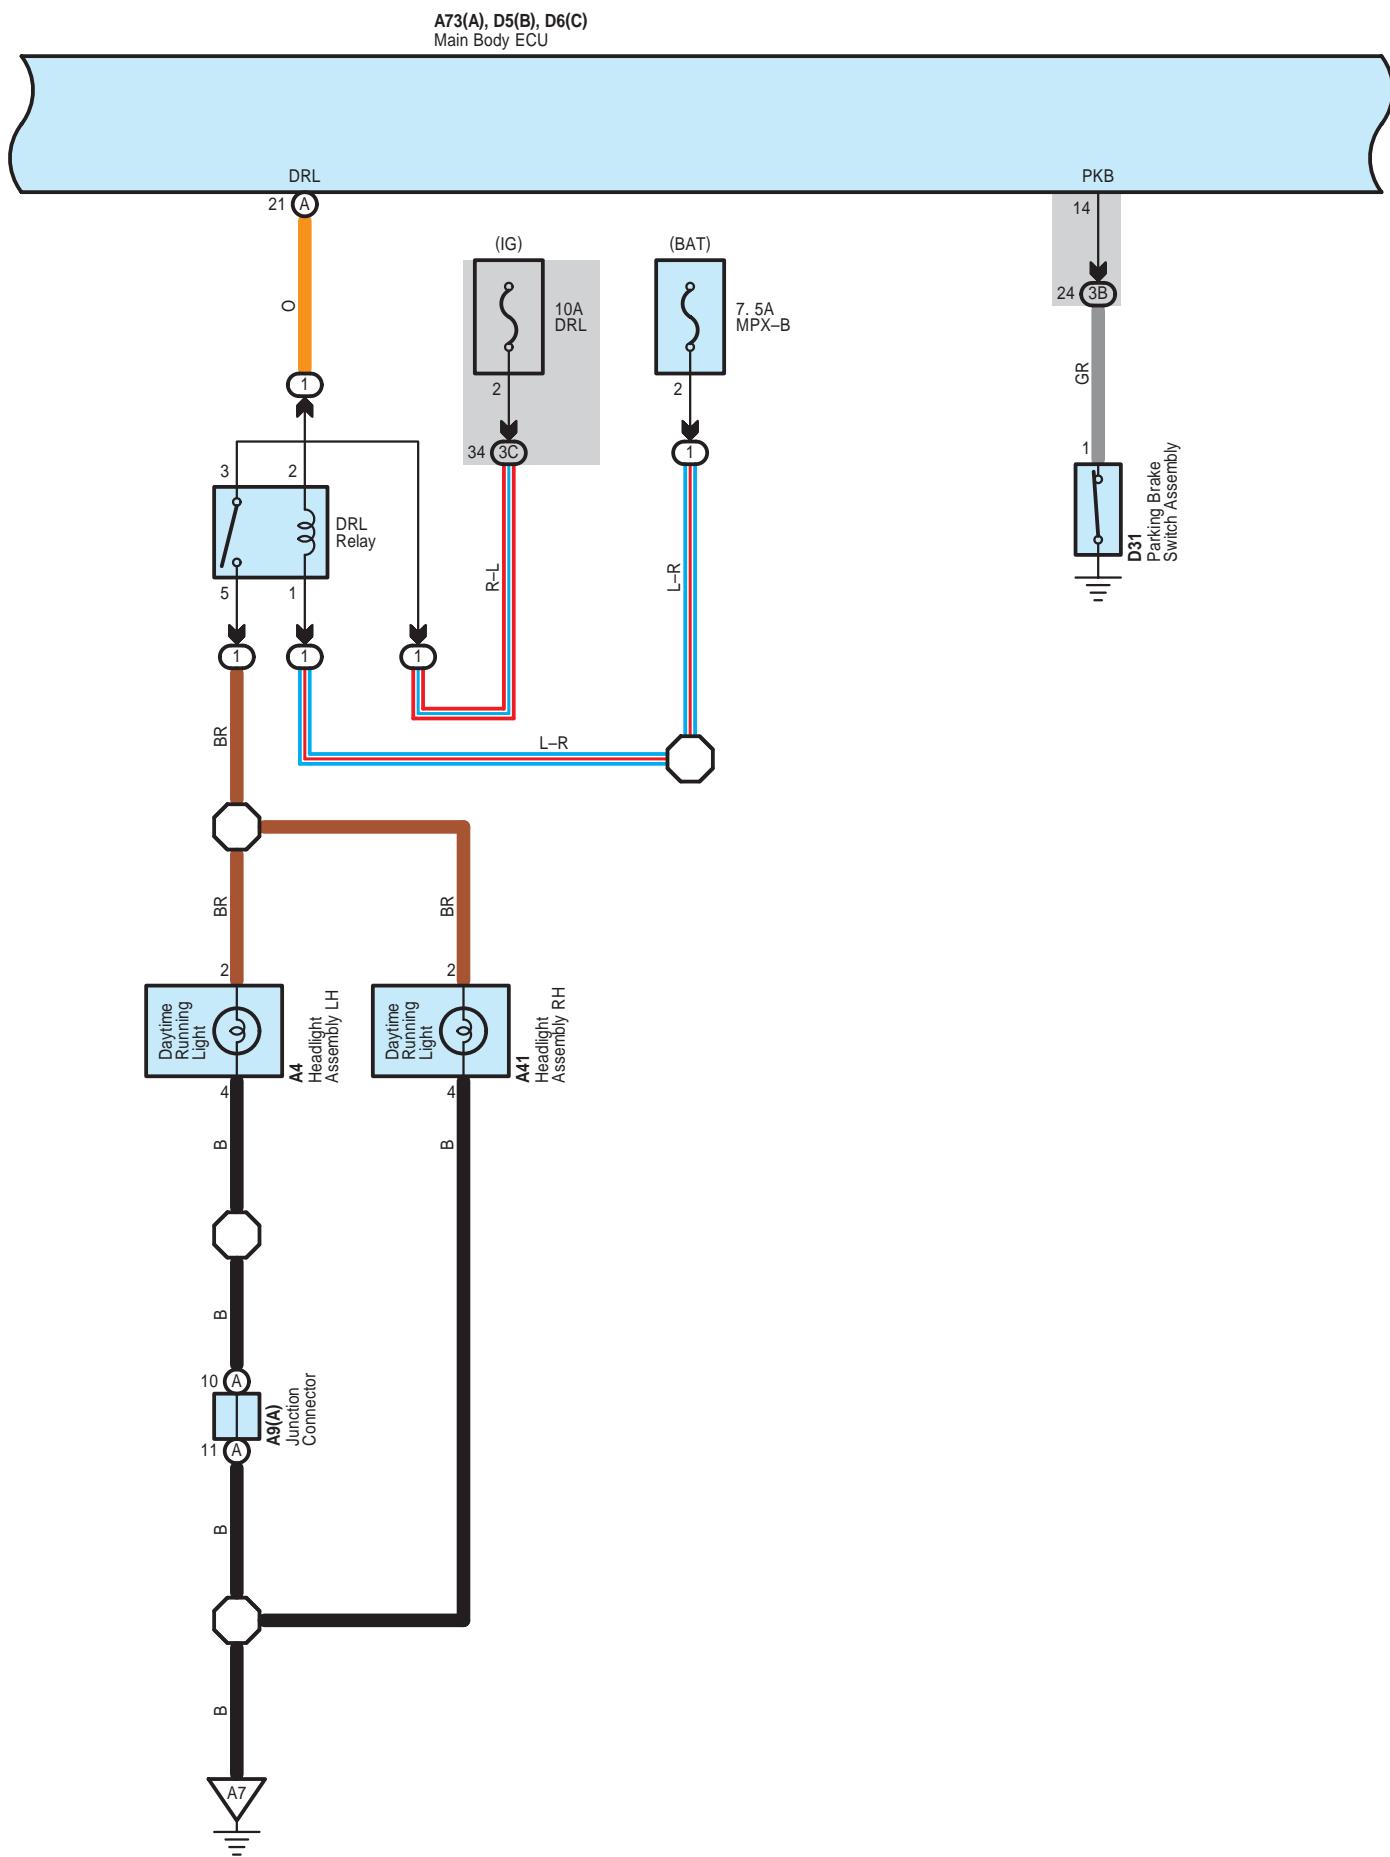

A73(A), D5(B), D6(C)
Main Body ECU

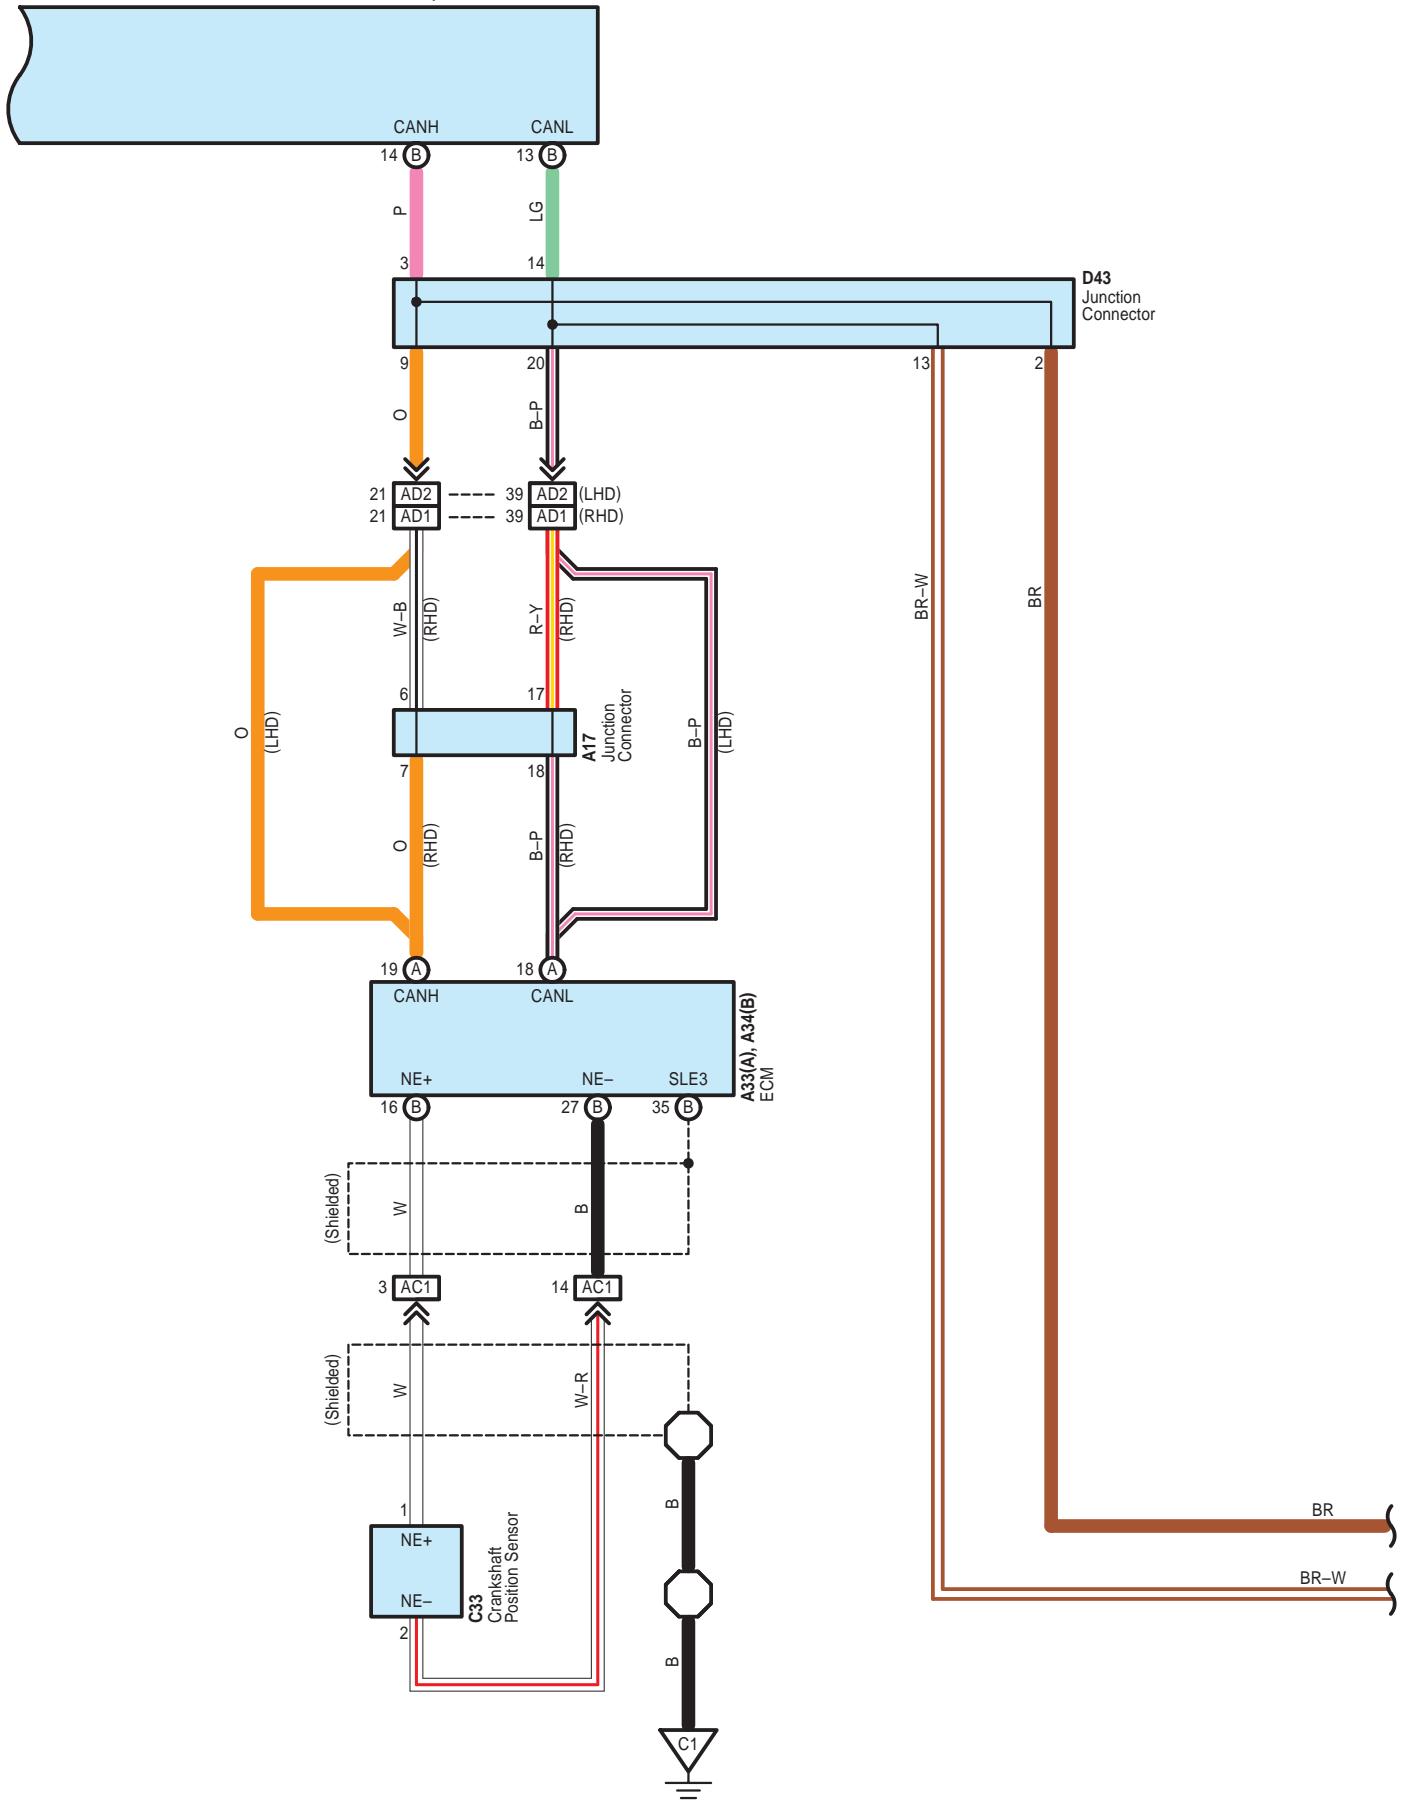

Headlight

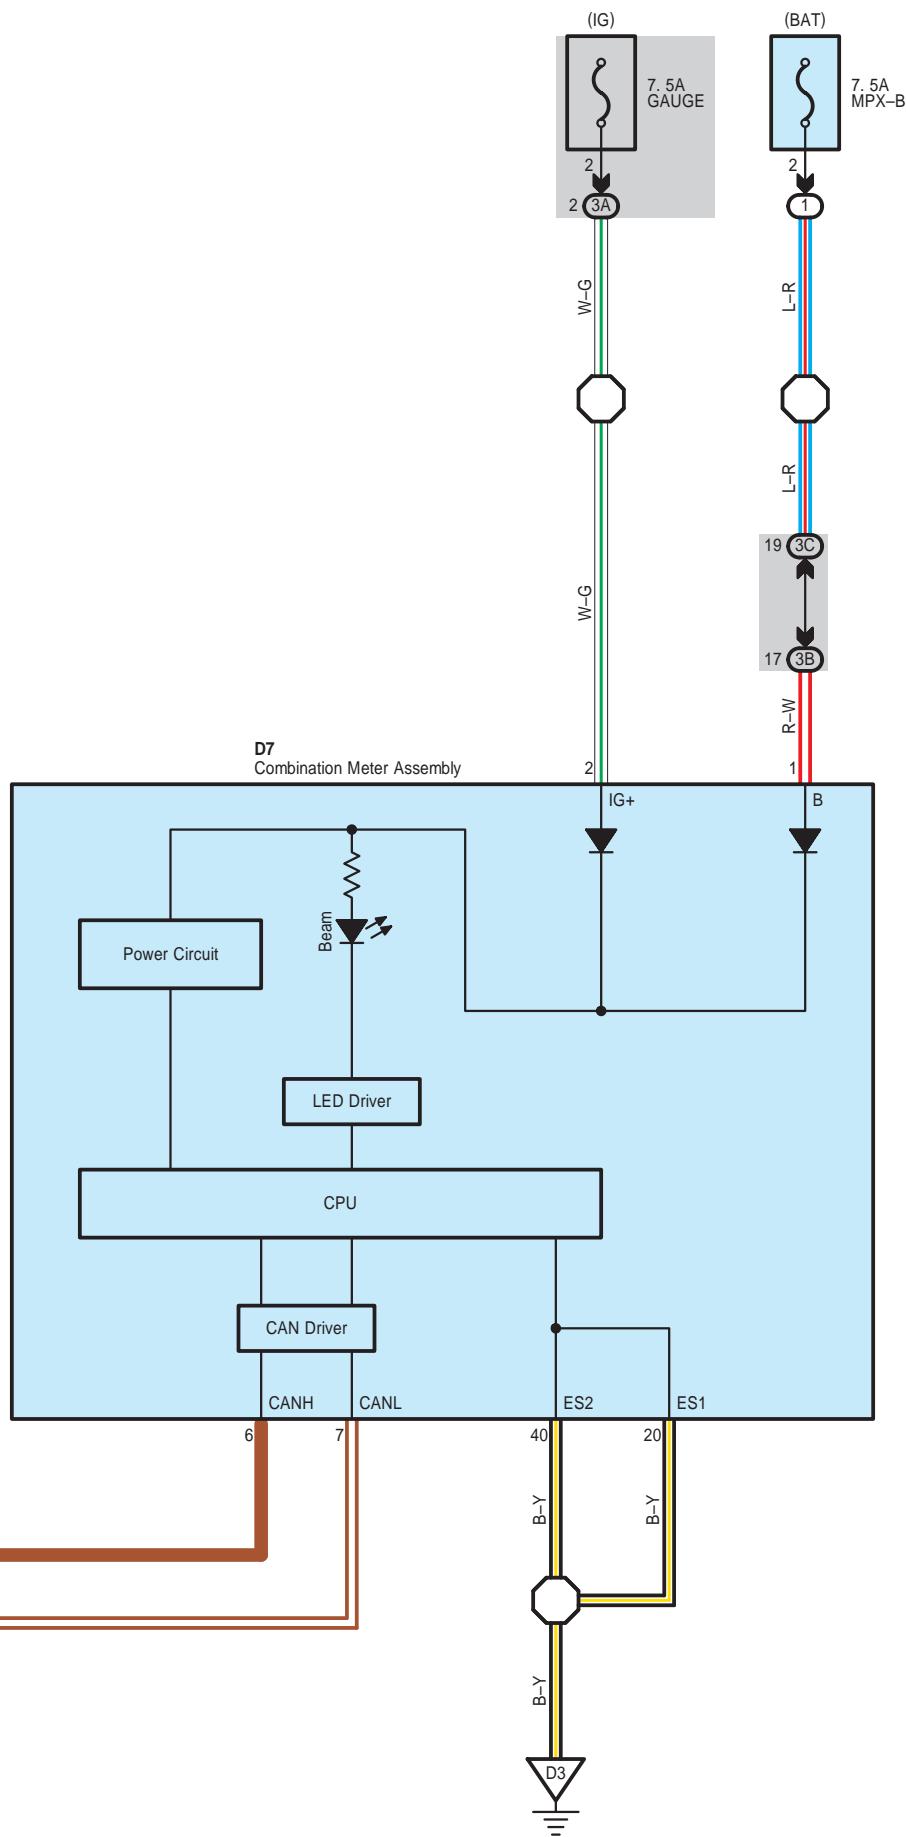

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	39 (LHD)	A60	47 (RHD)	D8	48 (RHD)
	47 (RHD)		42 (LHD)	D9	40 (LHD)
A9	A	A73	50 (RHD)		48 (RHD)
	42 (LHD)		39 (LHD)	D16	40 (LHD)
A17	50 (RHD)	A76	47 (RHD)		48 (RHD)
	50 (RHD)		C33	D17	40 (LHD)
A33	A	D5	38 (LHD)		48 (RHD)
	42 (LHD)		46 (RHD)		40 (LHD)
A34	B	D6	40 (LHD)	D31	48 (RHD)
	50 (RHD)		48 (RHD)		40 (LHD)
A38	39 (LHD)	D7	40 (LHD)	D43	41 (LHD)
	47 (RHD)		48 (RHD)		49 (RHD)
A41	39 (LHD)	D8	40 (LHD)	D50	41 (LHD)
	47 (RHD)		48 (RHD)		49 (RHD)
A60	39 (LHD)	A	40 (LHD)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD) 58 (RHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

 : Ground Points


Code	See Page	Ground Points Location
A1	54 (LHD) 58 (RHD)	Front Fender Apron LH
A3	55 (LHD) 59 (RHD)	Cowl Side Panel RH Cowl Side Panel LH
A7	54 (LHD) 58 (RHD)	Front Fender Apron RH
C1	54 (LHD) 58 (RHD)	Engine Unit
D1	55 (LHD) 59 (RHD)	Cowl Side Panel LH Cowl Side Panel RH
D3	55 (LHD) 59 (RHD)	Instrument Panel Brace RH Instrument Panel Brace LH
D4	55 (LHD) 59 (RHD)	Cowl Side Panel RH Cowl Side Panel LH

Stop Light

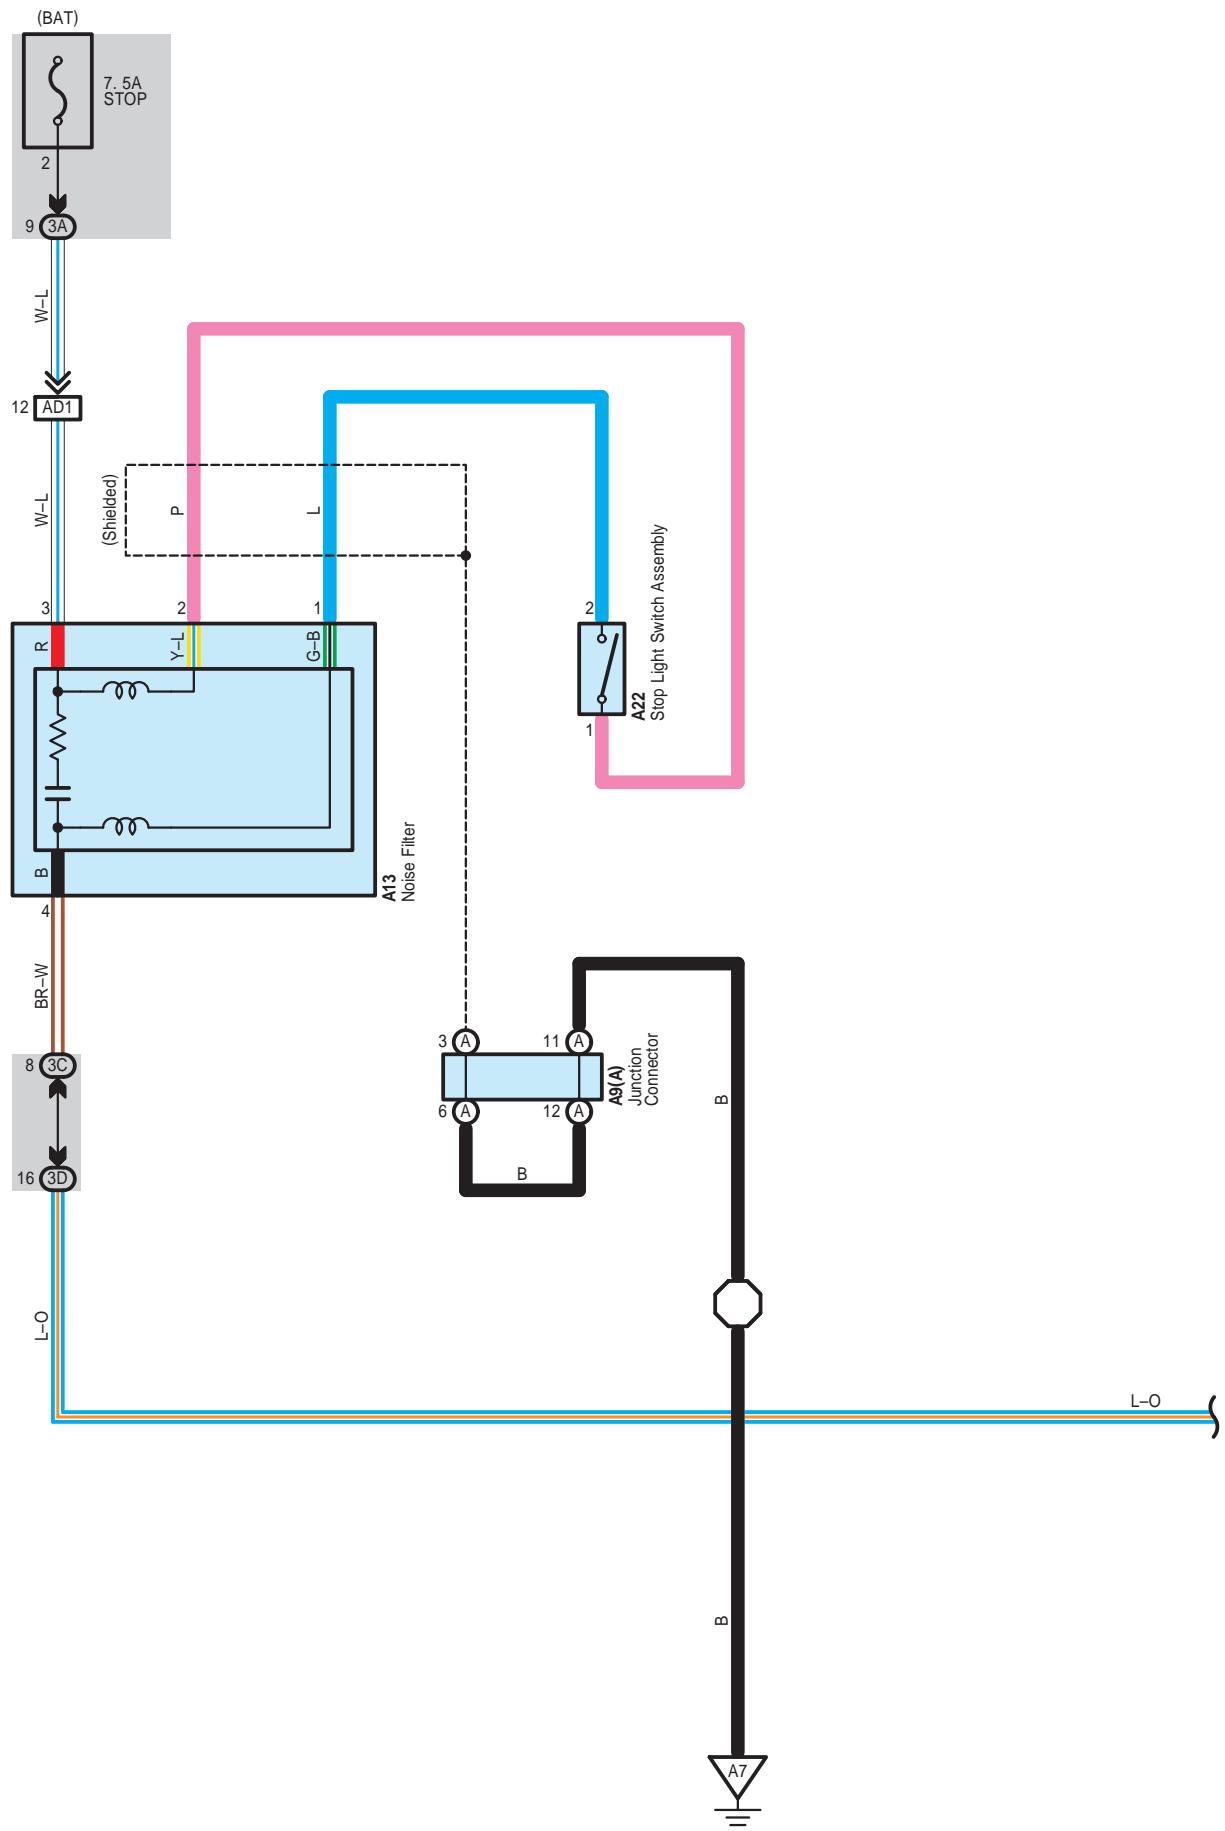

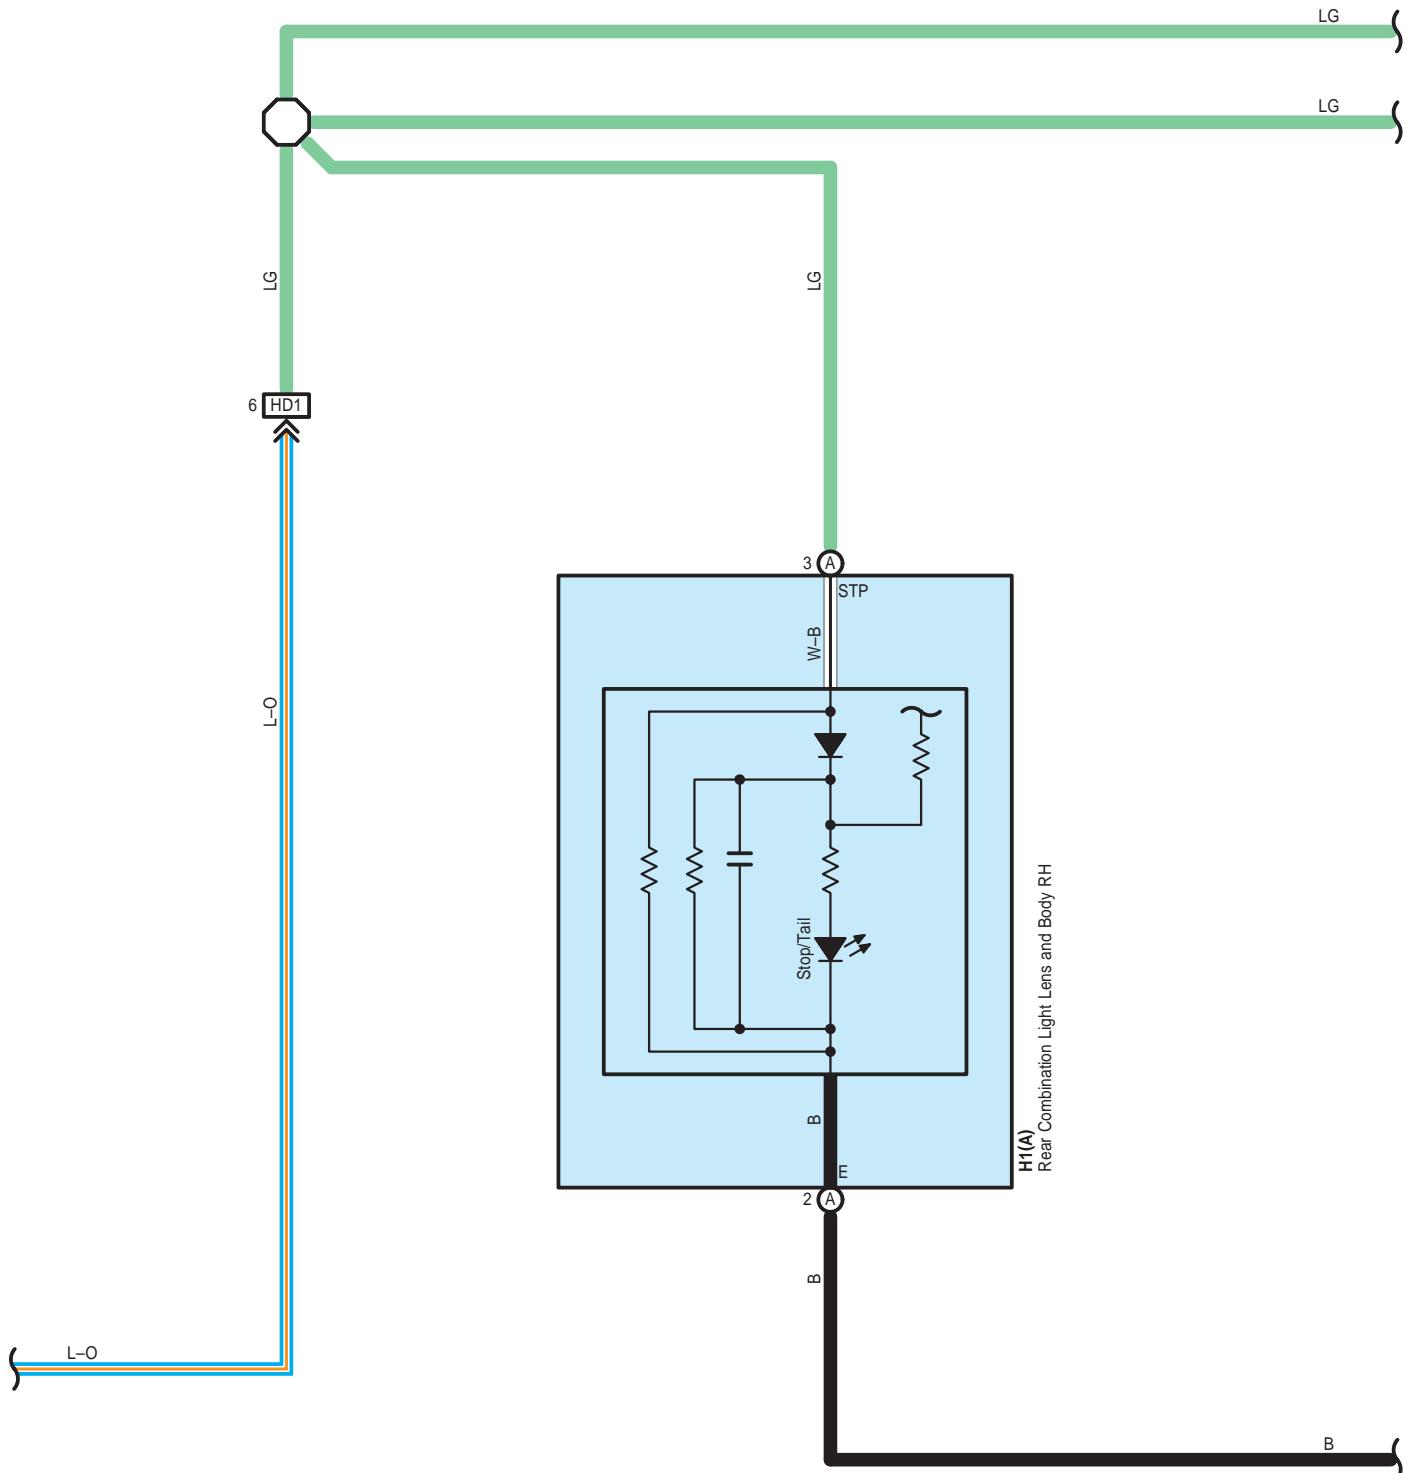

Stop Light

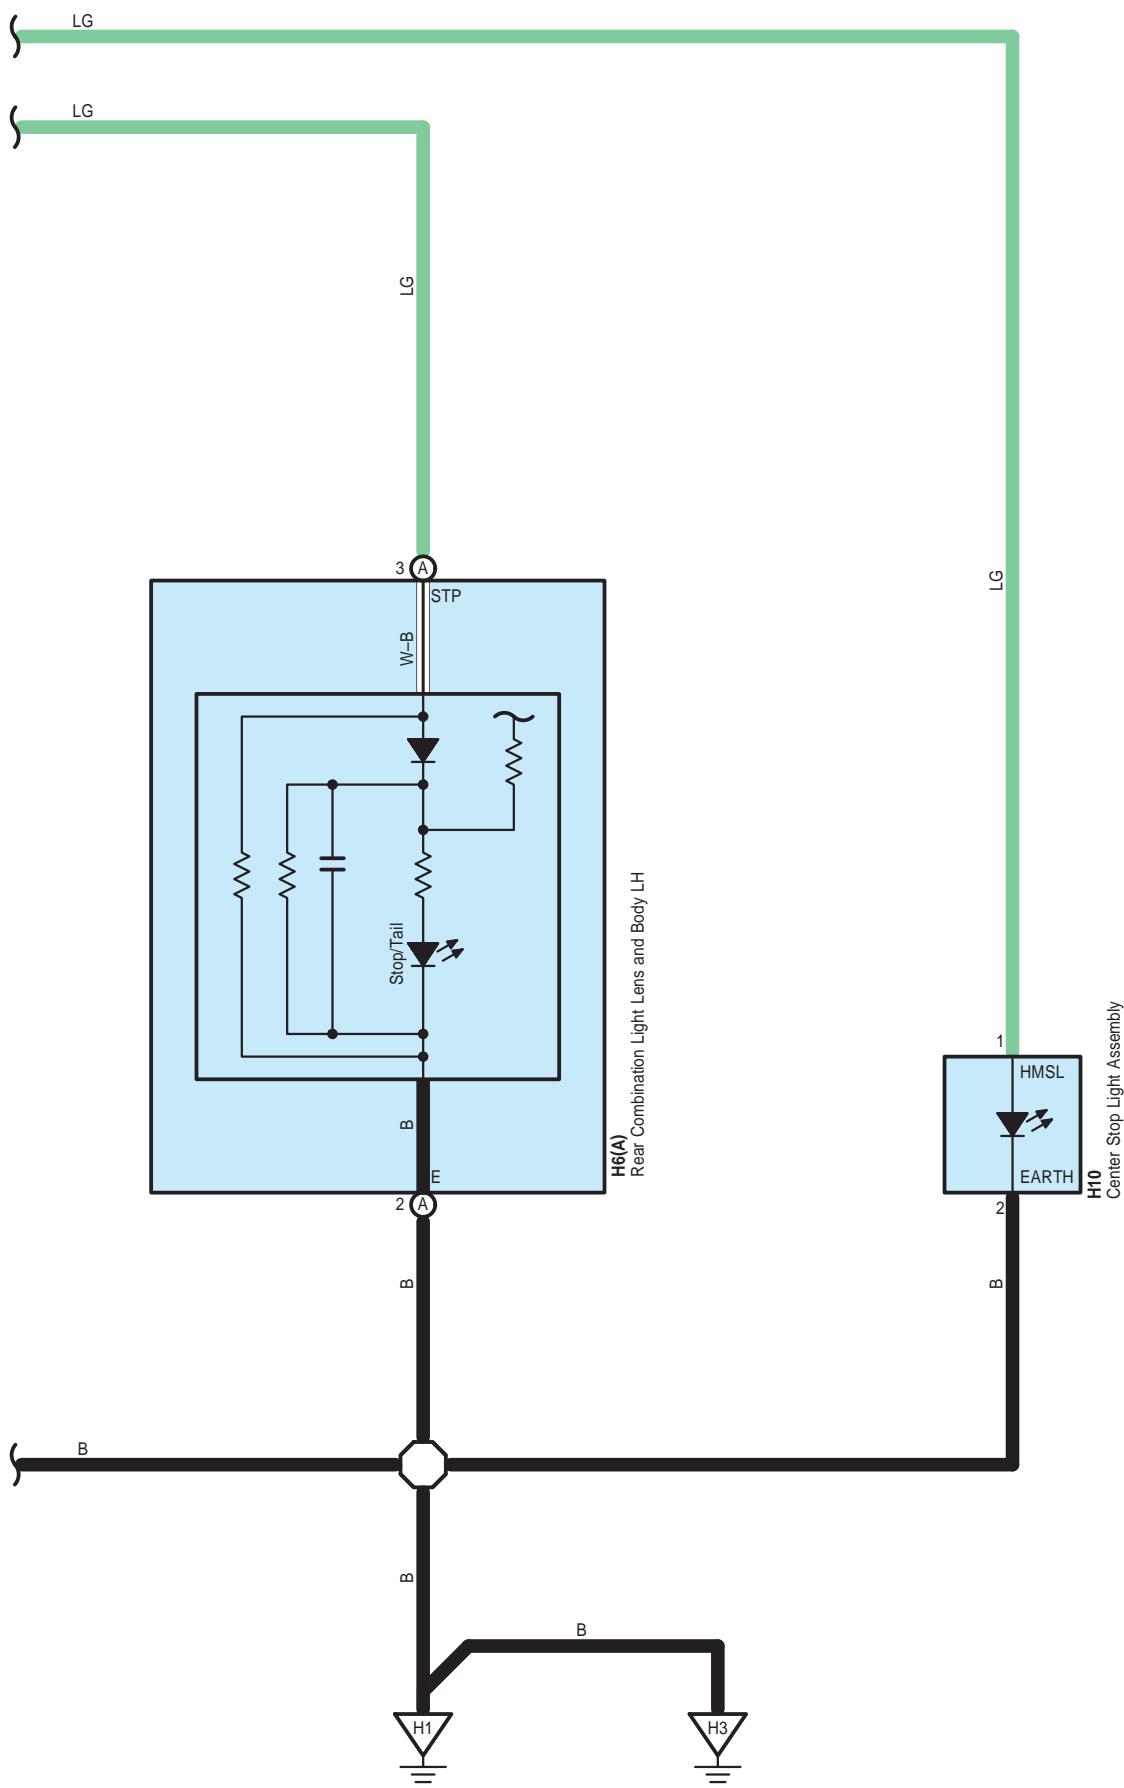

 : Parts Location

Code		See Page	Code		See Page	Code		See Page	
A9	A	42 (LHD)		A22	42 (LHD)	H6	A	45 (LHD)	
		50 (RHD)			50 (RHD)			53 (RHD)	
A13		42 (LHD)	H1	A	45 (LHD)	H10		45 (LHD)	
		50 (RHD)			53 (RHD)			53 (RHD)	

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
H1	56 (LHD)	Lower Back Panel
	60 (RHD)	
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	

Back-Up Light

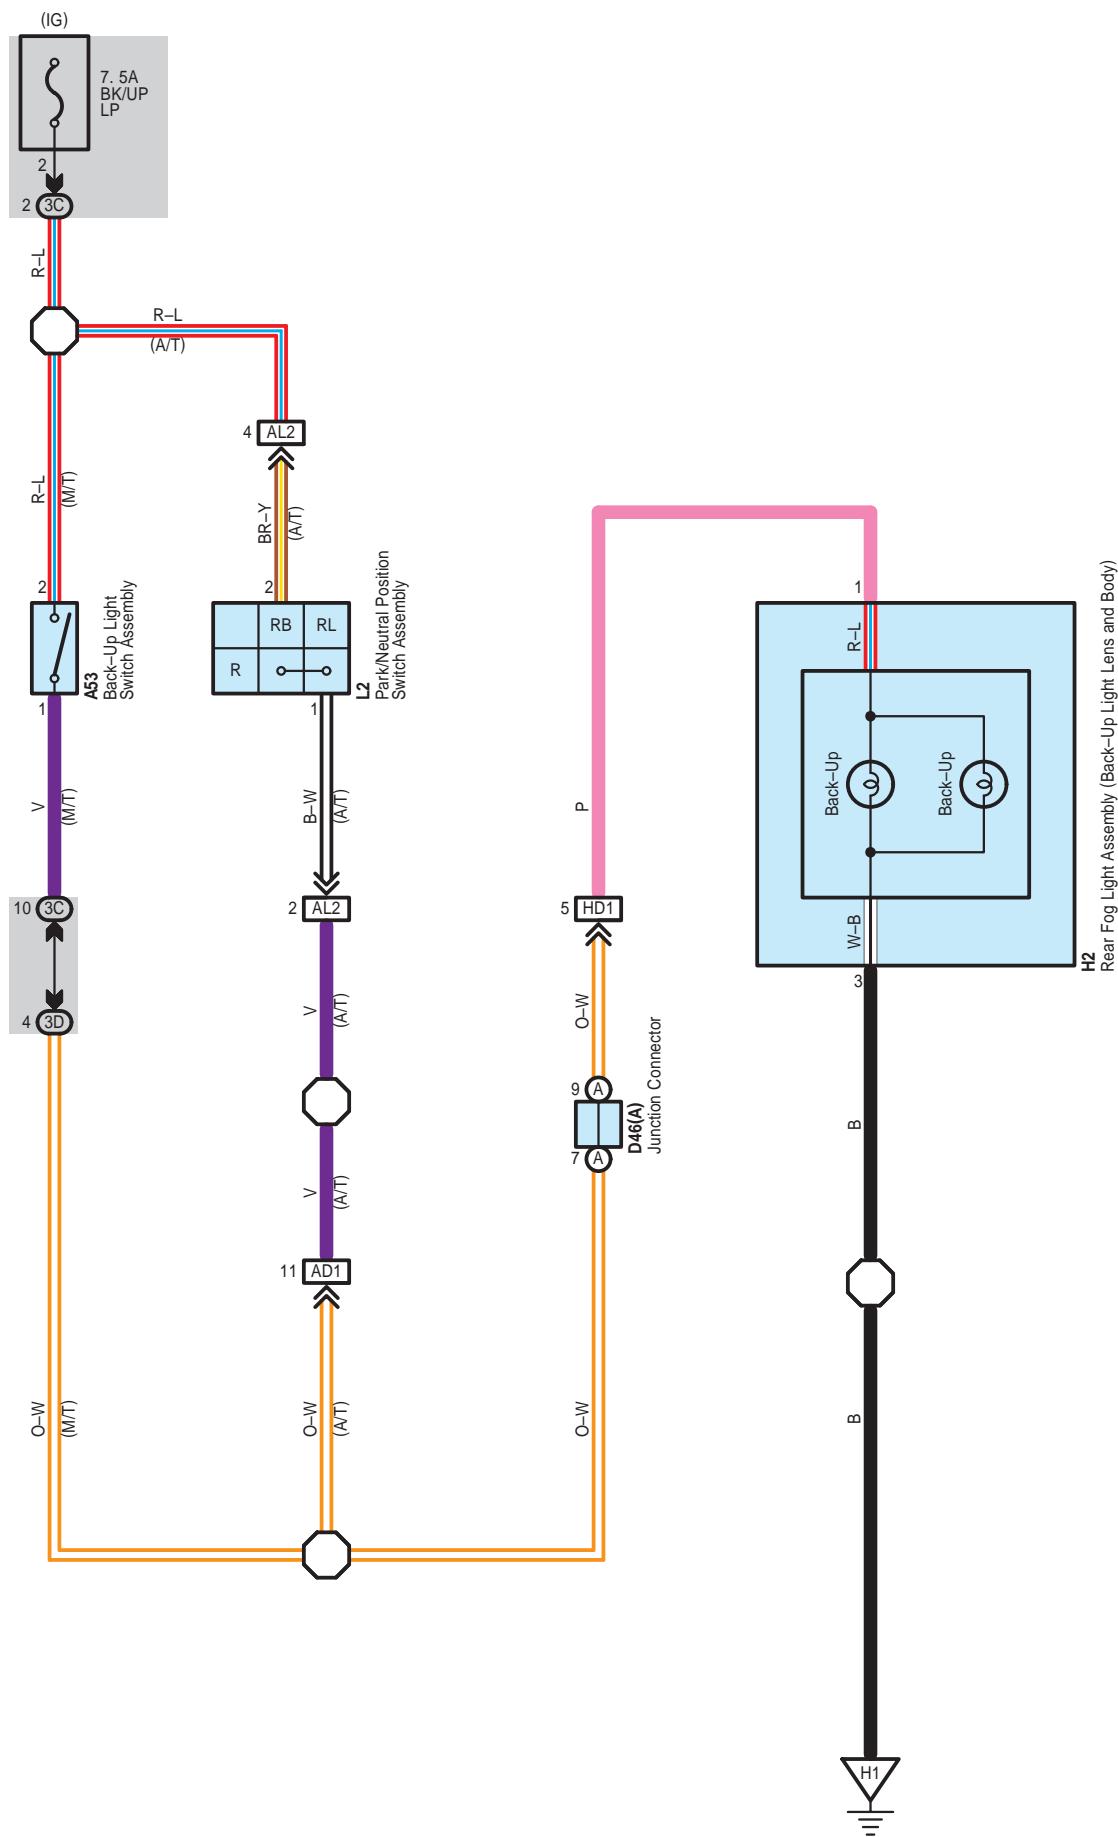

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A53	39 (LHD)	D46	A	49 (RHD)	L2
	47 (RHD)	H2		45 (LHD)	
D46	A	41 (LHD)		53 (RHD)	

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AL2	54 (LHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)
	58 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	


 : Ground Points

Code	See Page	Ground Points Location
H1	56 (LHD) 60 (RHD)	Lower Back Panel


Turn Signal and Hazard Warning Light

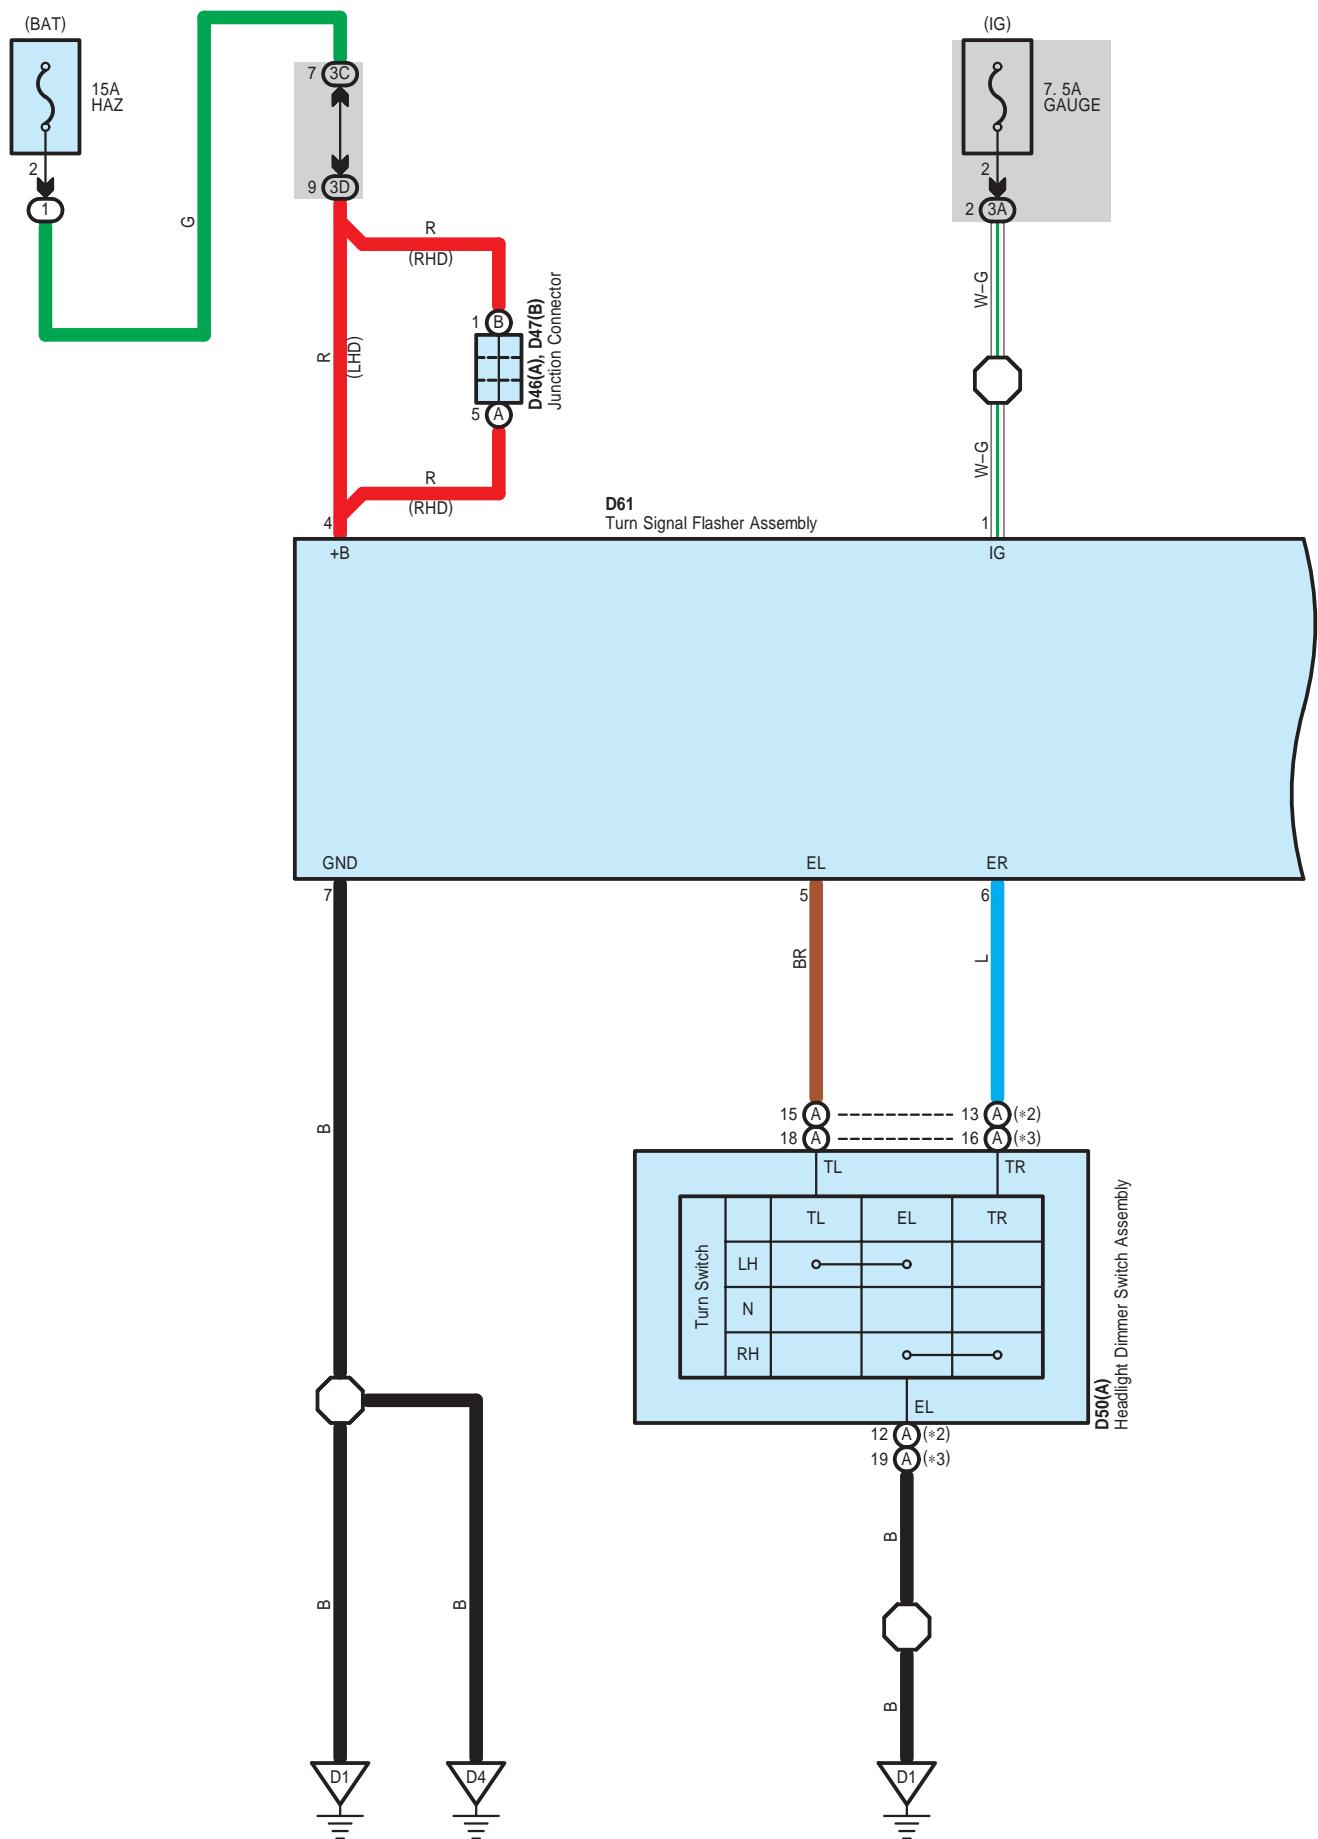


* 2 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
 * 3 : RHD Headlight Dimmer Switch Assembly RH Side Type

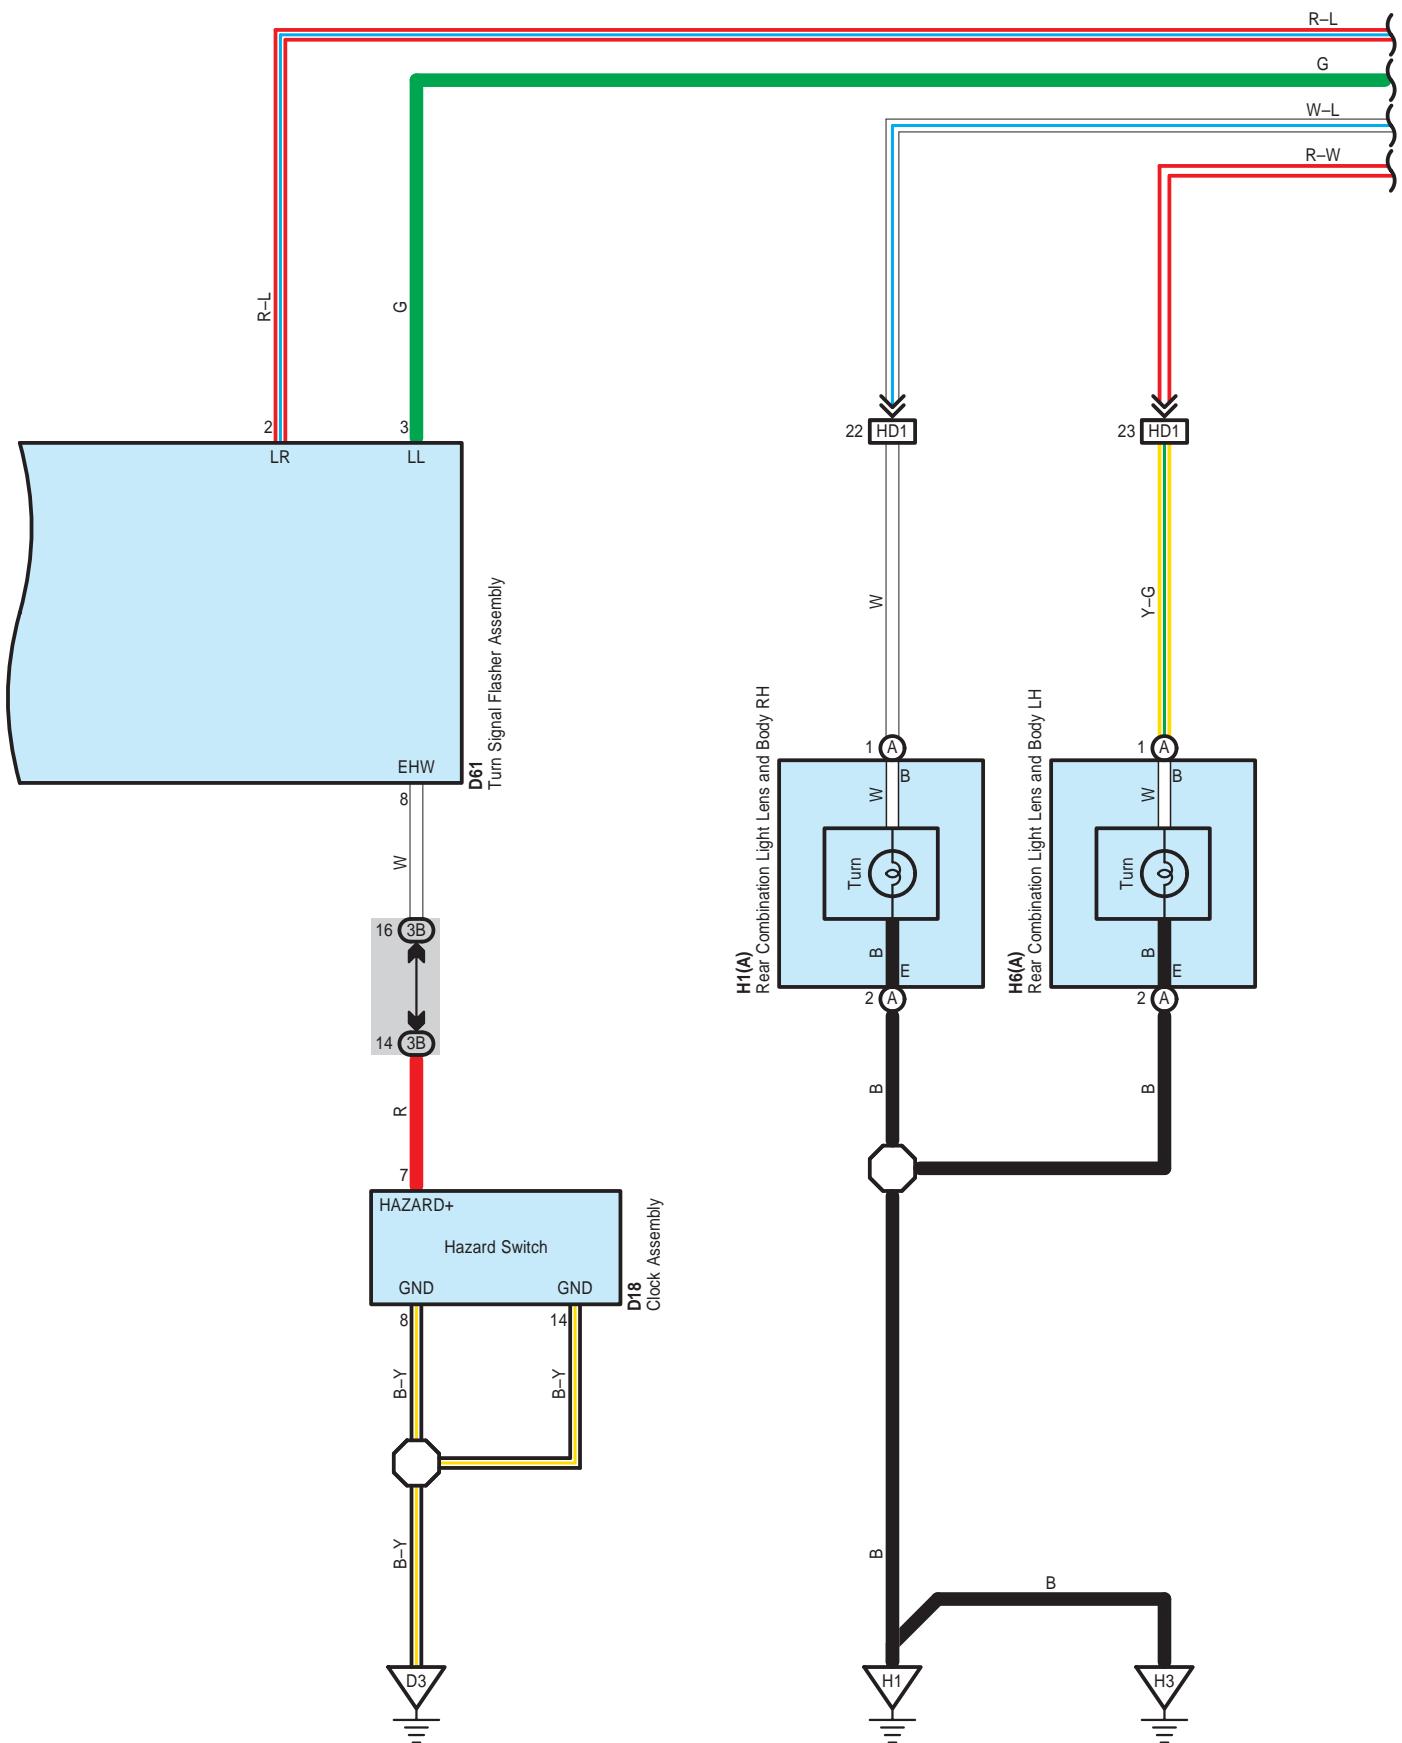

Turn Signal and Hazard Warning Light

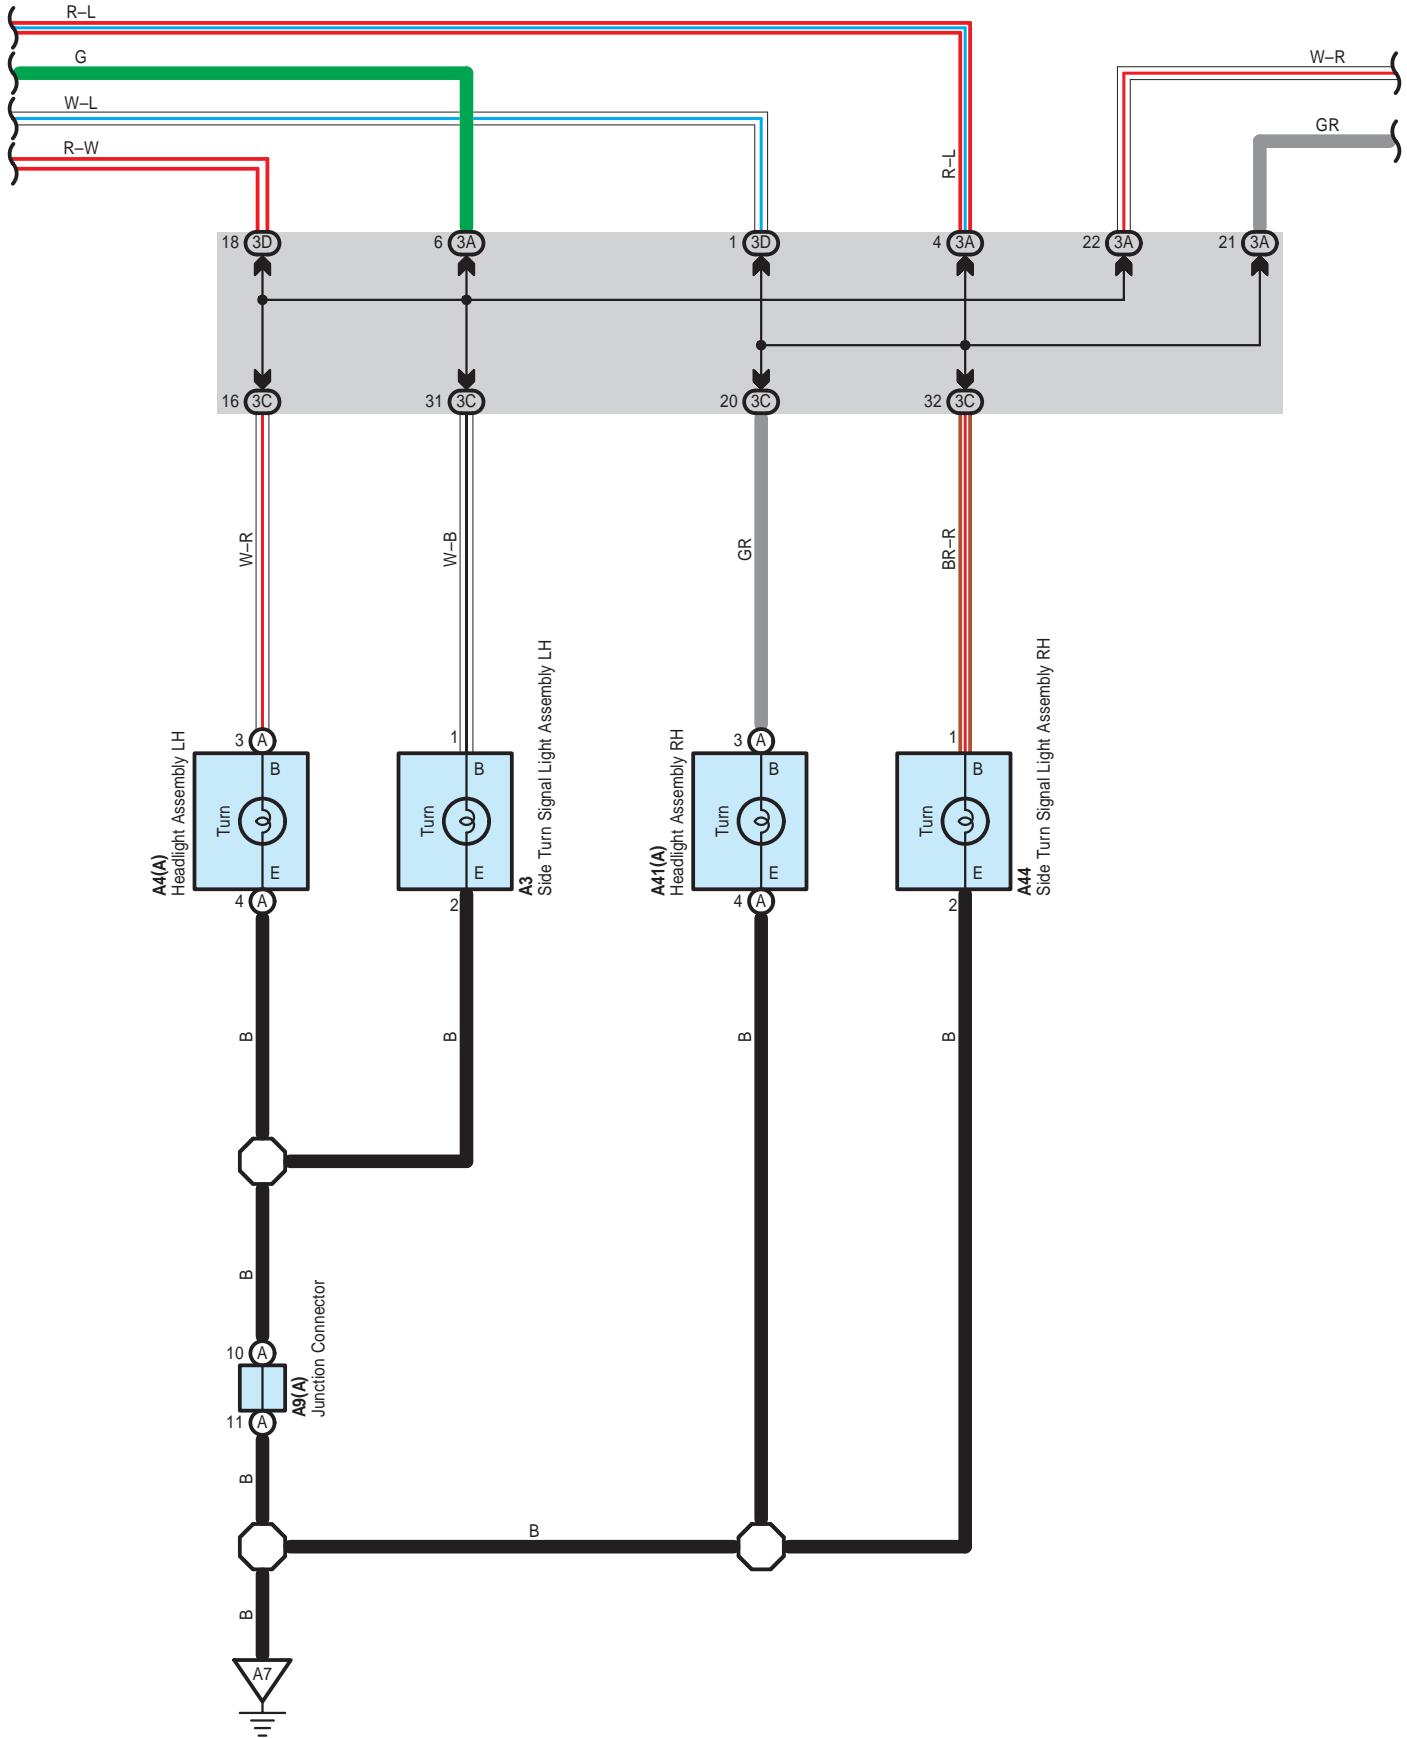

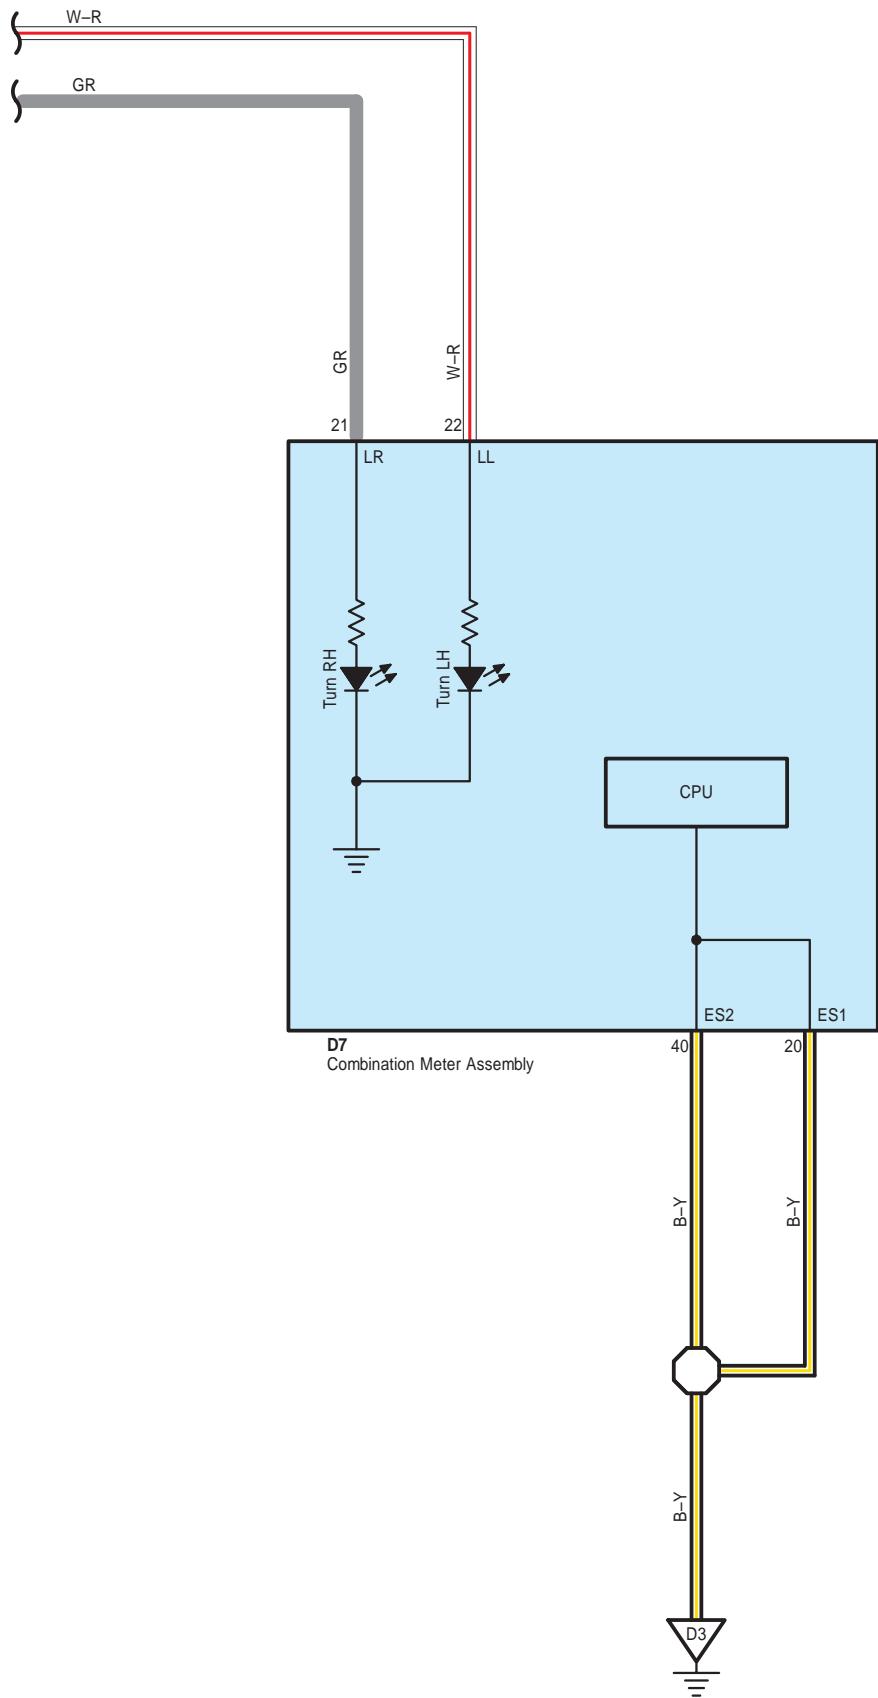

Turn Signal and Hazard Warning Light

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A3		39 (LHD) 47 (RHD)	A44		39 (LHD) 47 (RHD)	D50	A	41 (LHD) 49 (RHD)
A4	A	39 (LHD) 47 (RHD)	D7		40 (LHD) 48 (RHD)	D61	A	41 (LHD) 49 (RHD)
A9	A	42 (LHD) 50 (RHD)	D18		40 (LHD) 48 (RHD)	H1	A	45 (LHD) 53 (RHD)
A41	A	39 (LHD) 47 (RHD)	D46	A	49 (RHD)	H6	A	45 (LHD) 53 (RHD)
			D47	B	41 (LHD)			

□ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A		
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
HD1	55 (LHD) 59 (RHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)

▽ : Ground Points


Code	See Page	Ground Points Location
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
H1	56 (LHD)	Lower Back Panel
	60 (RHD)	
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	

Illumination and Taillight

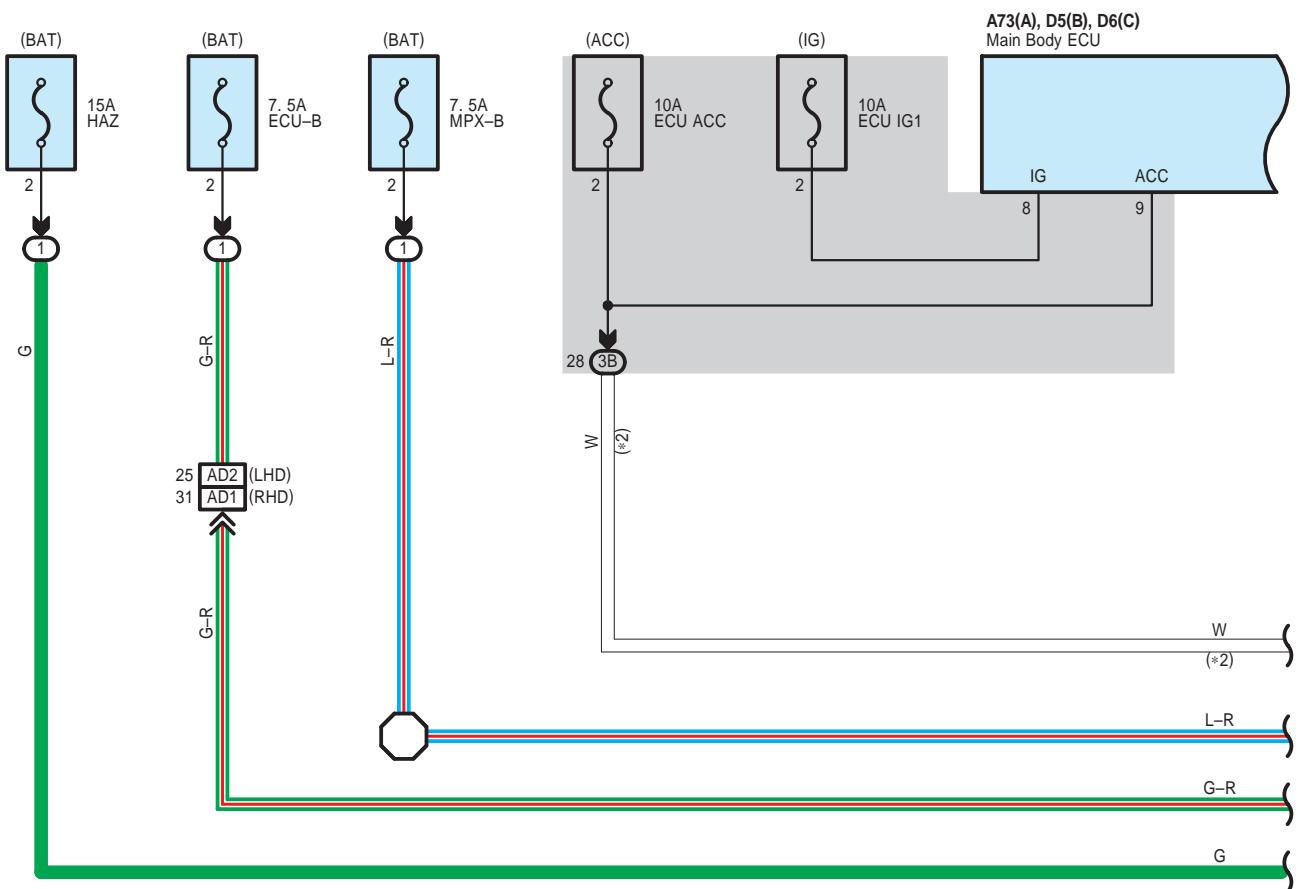



* 2 : w/ Entry & Start System

A73(A), D5(B), D6(C)
Main Body ECU

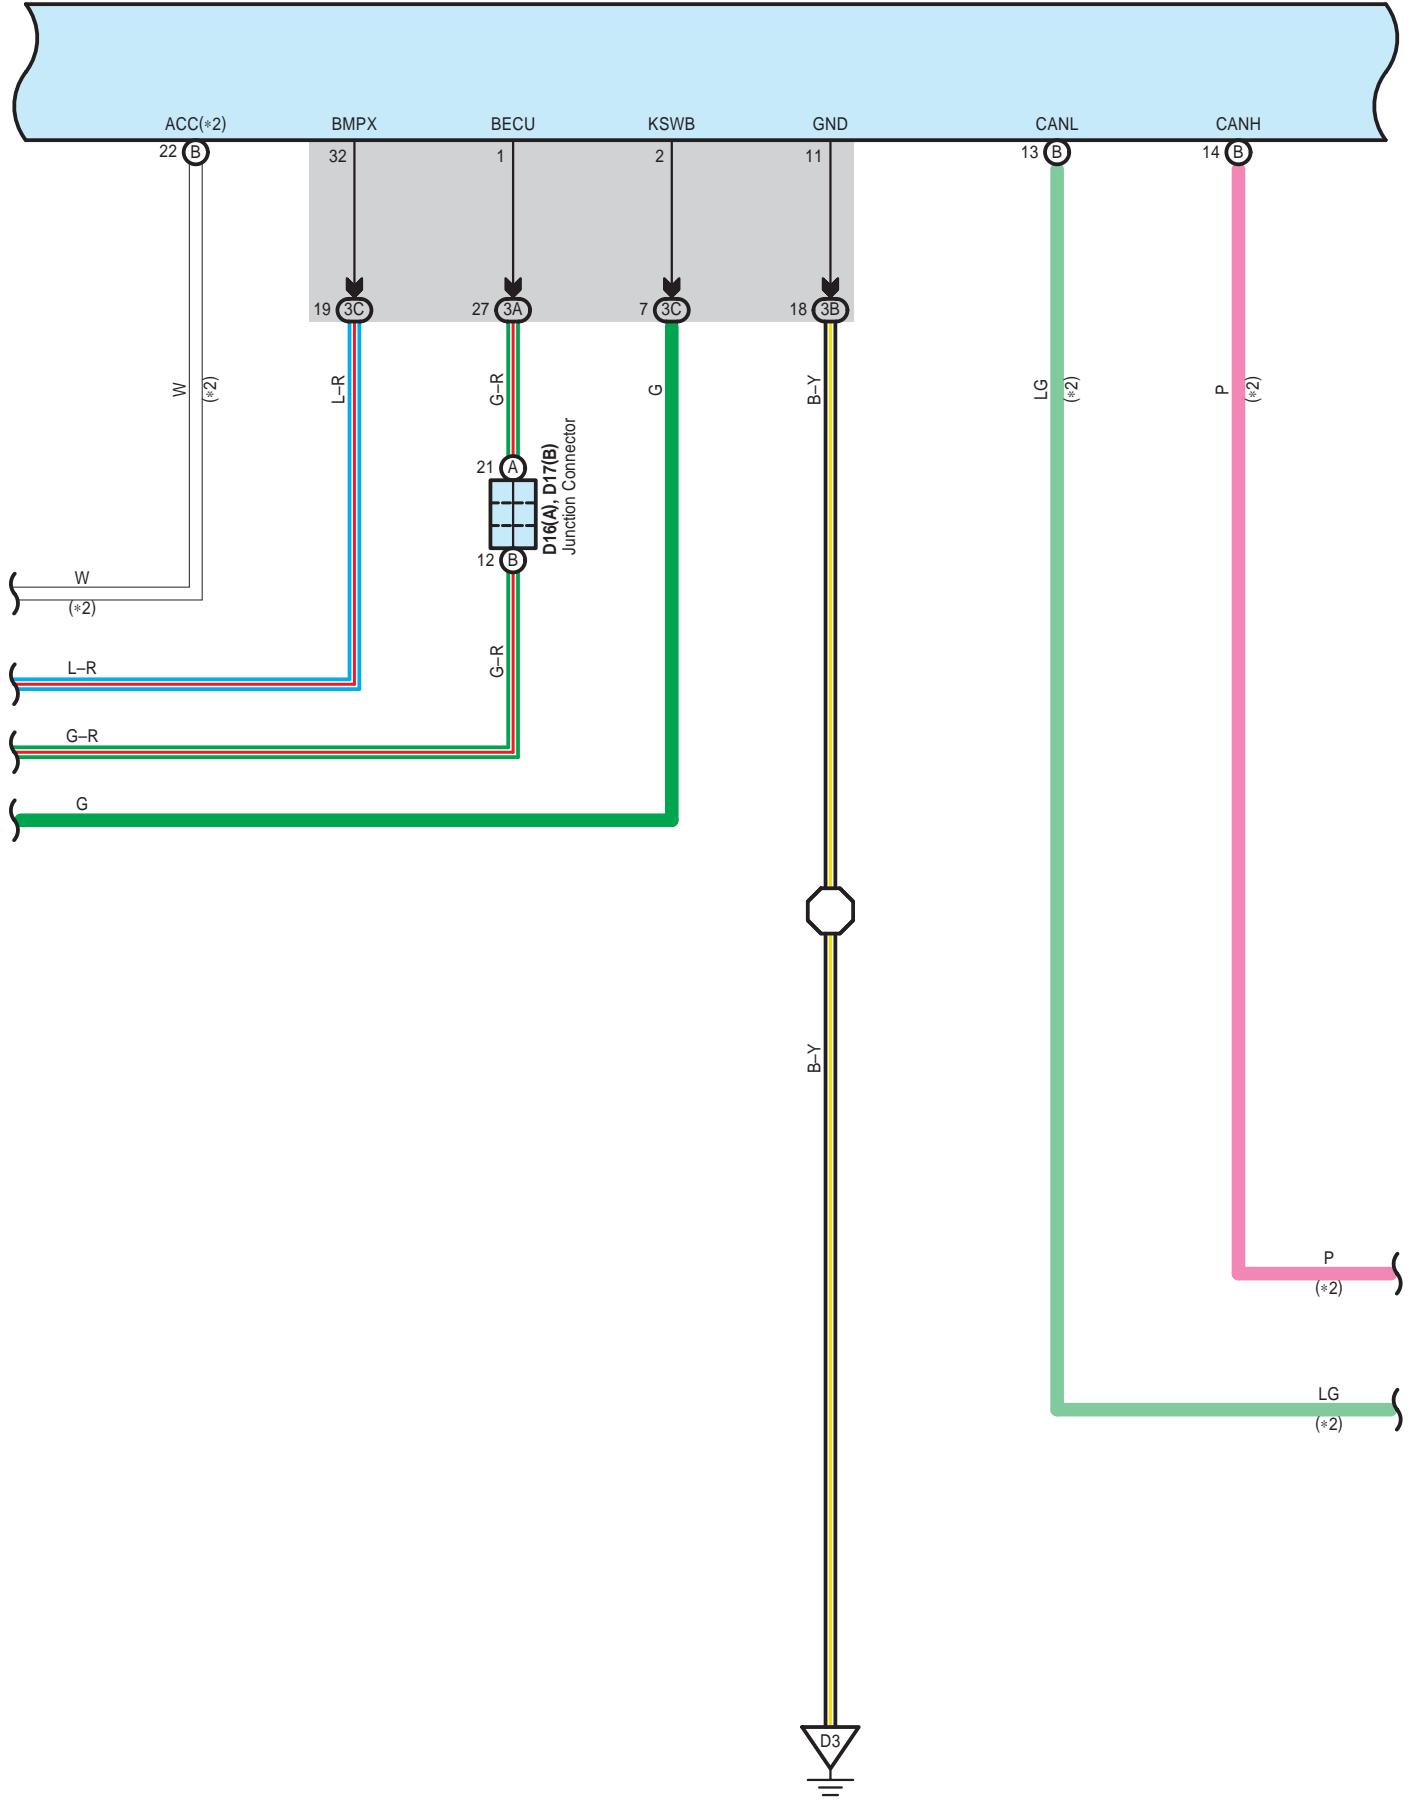


Illumination and Taillight

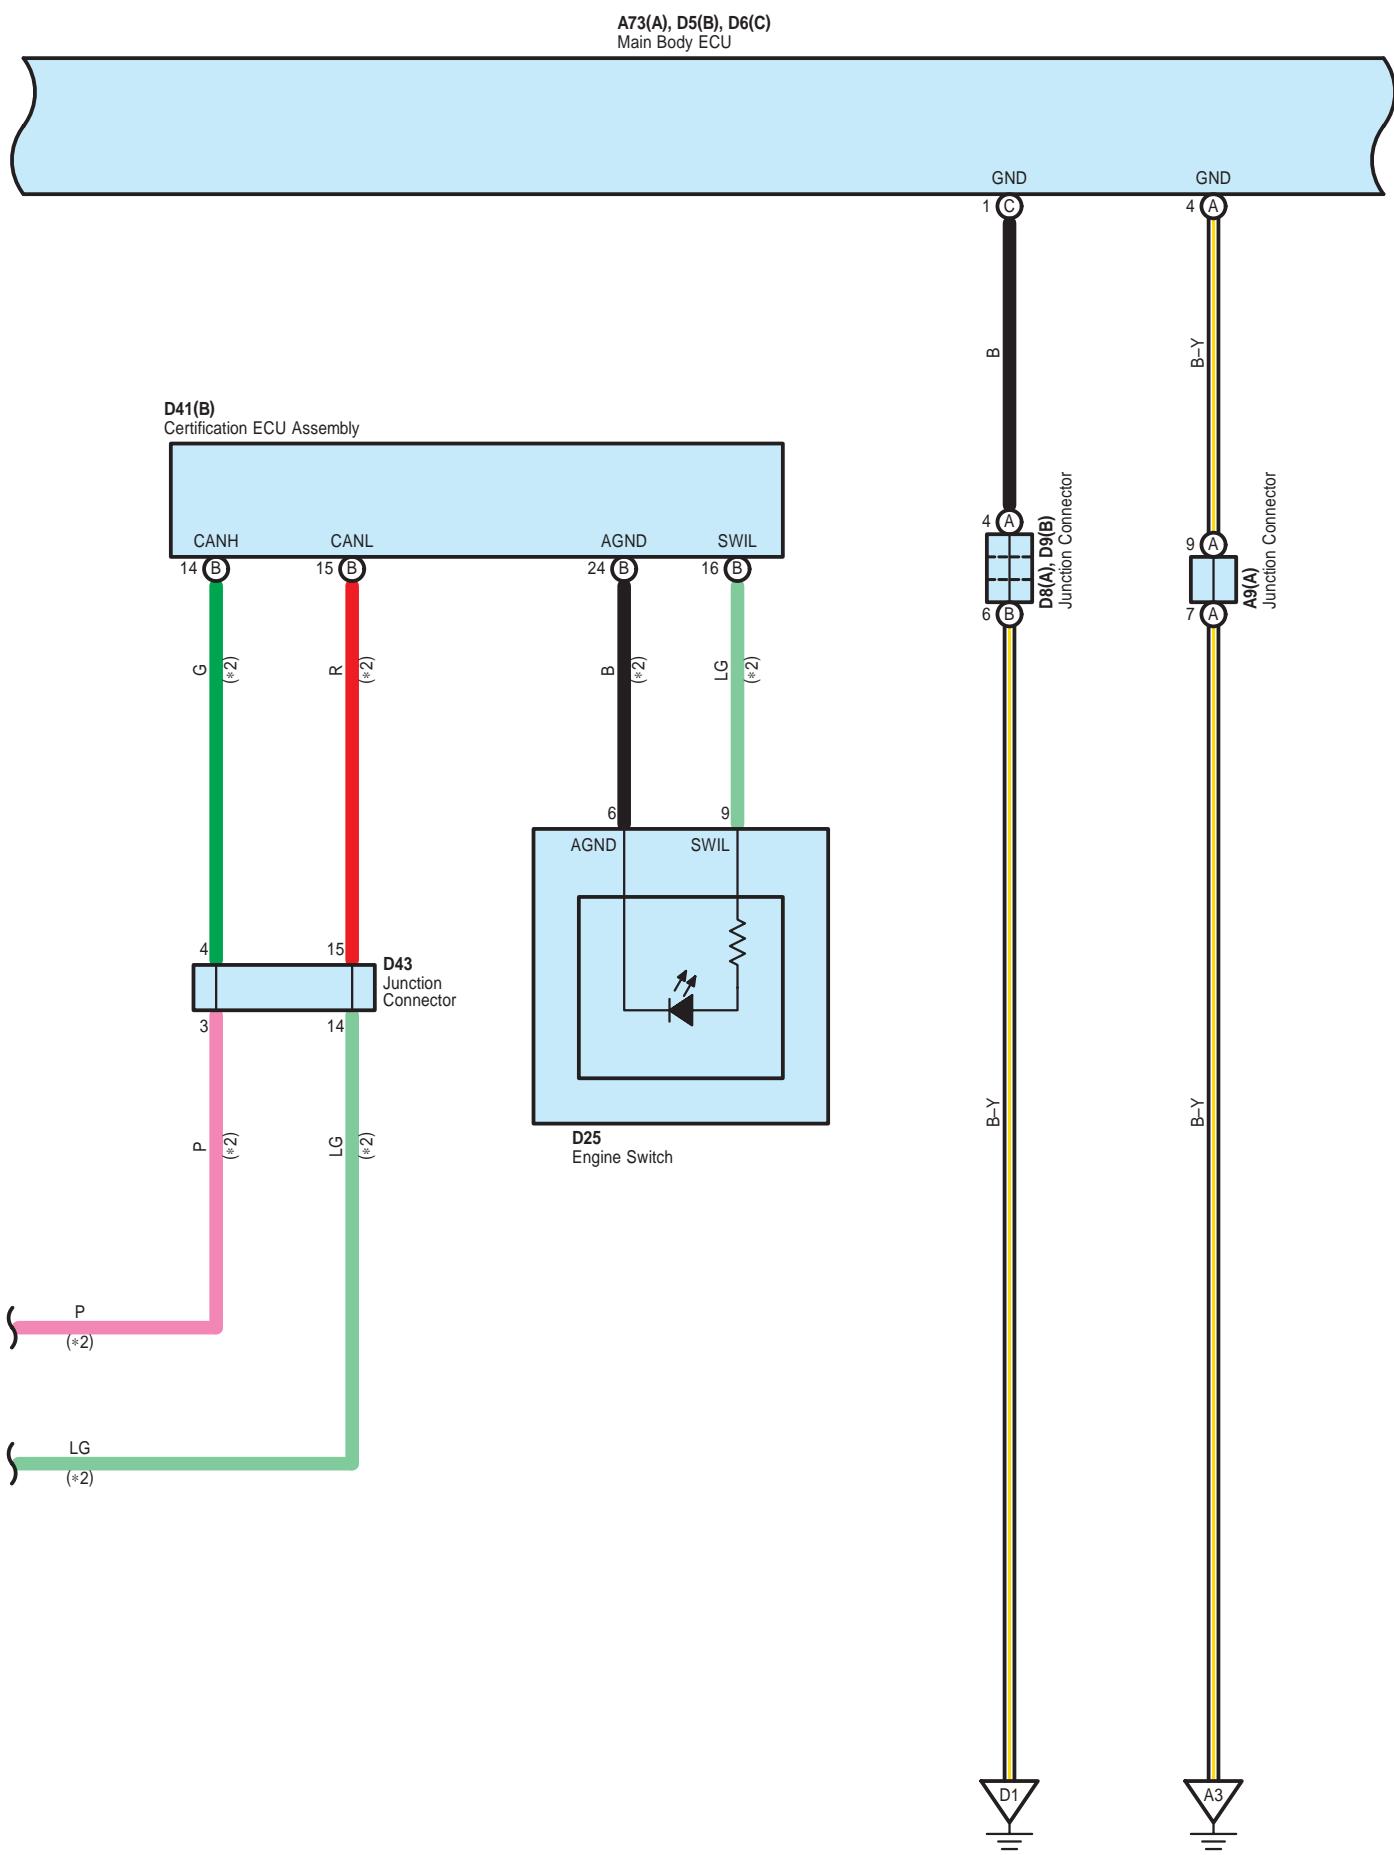

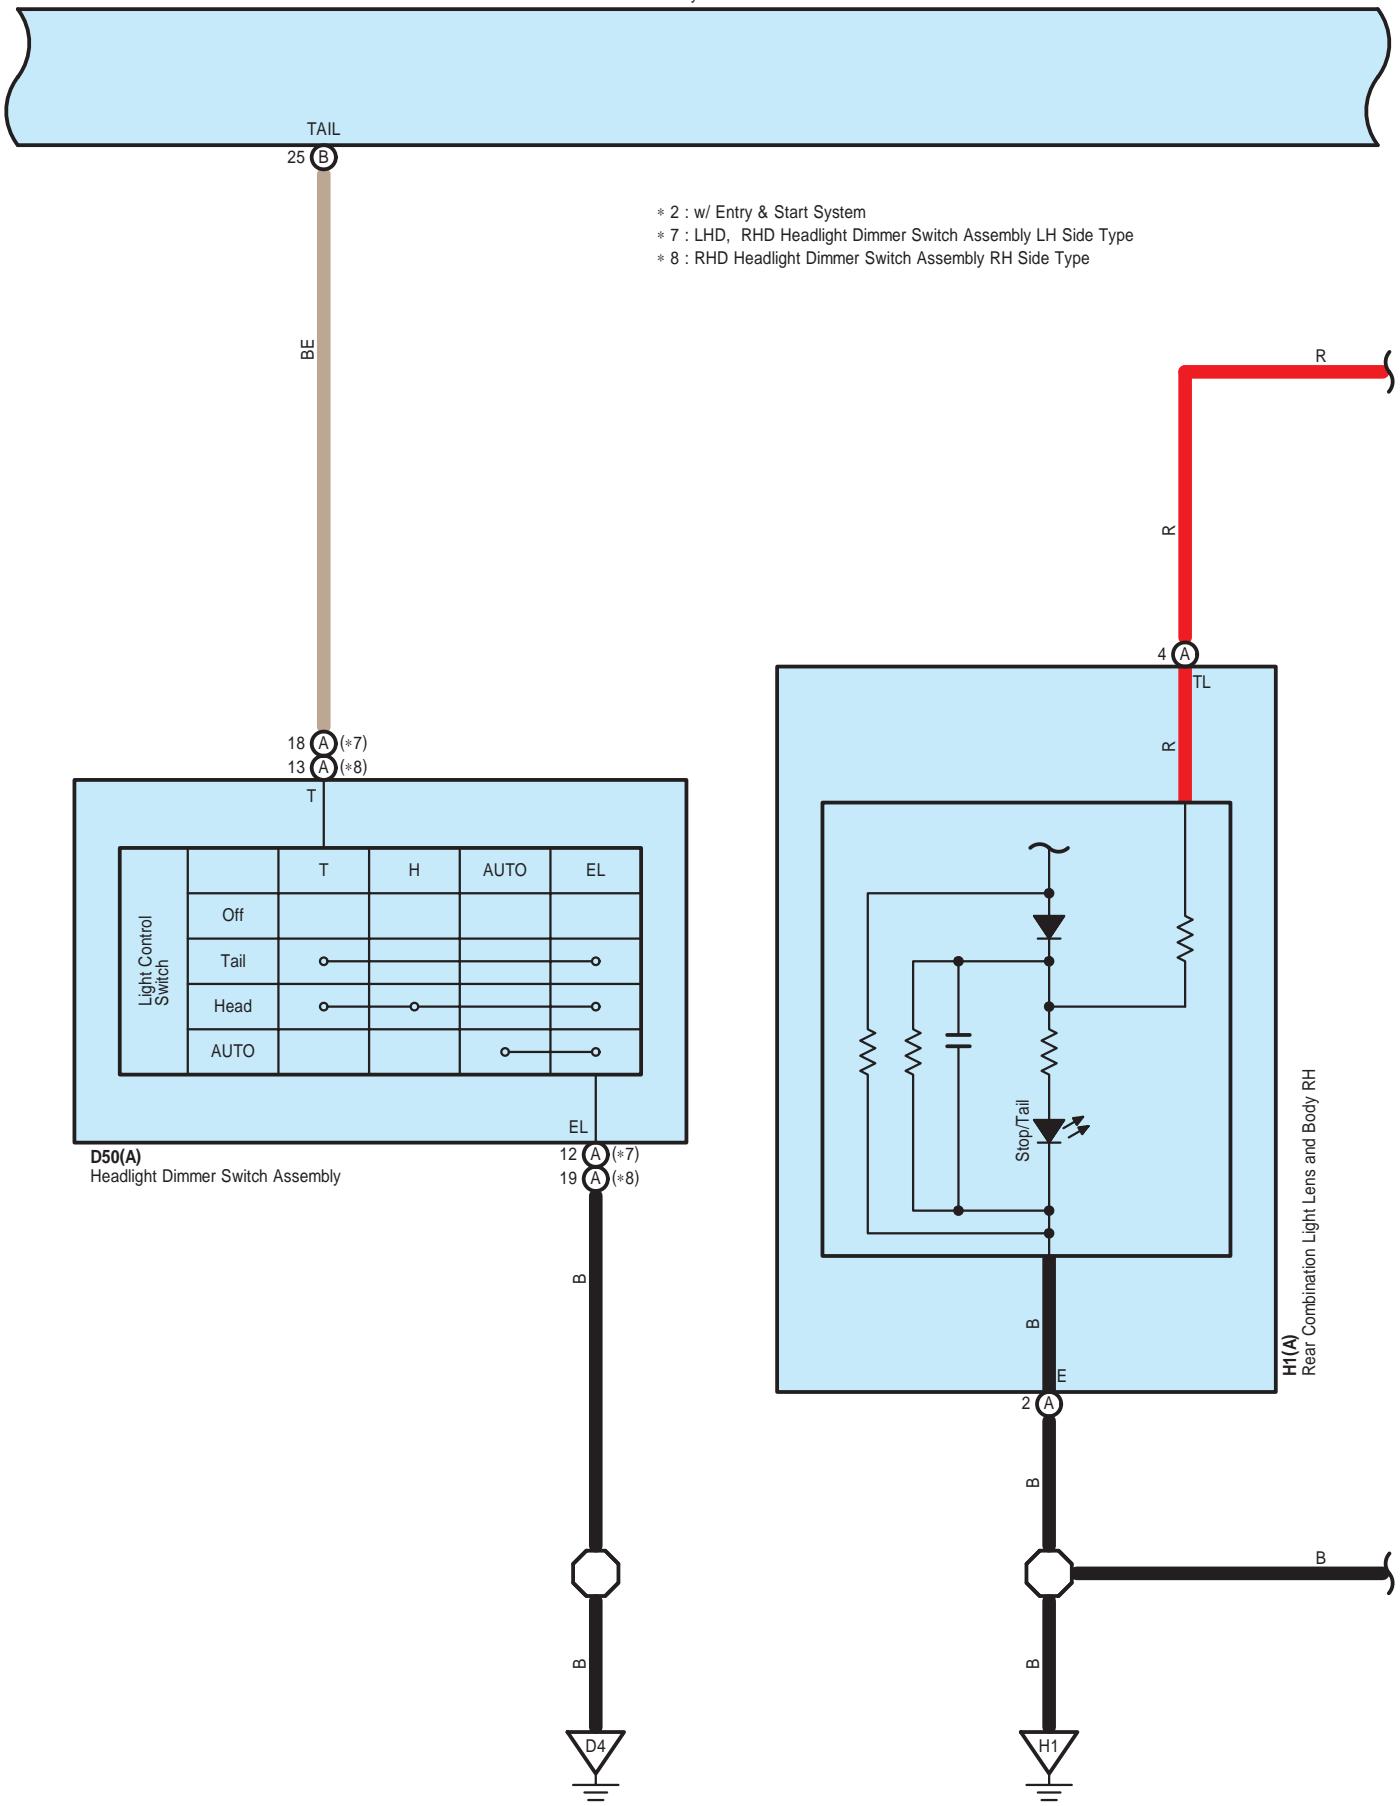


Illumination and Taillight

A73(A), D5(B), D6(C)
Main Body ECU

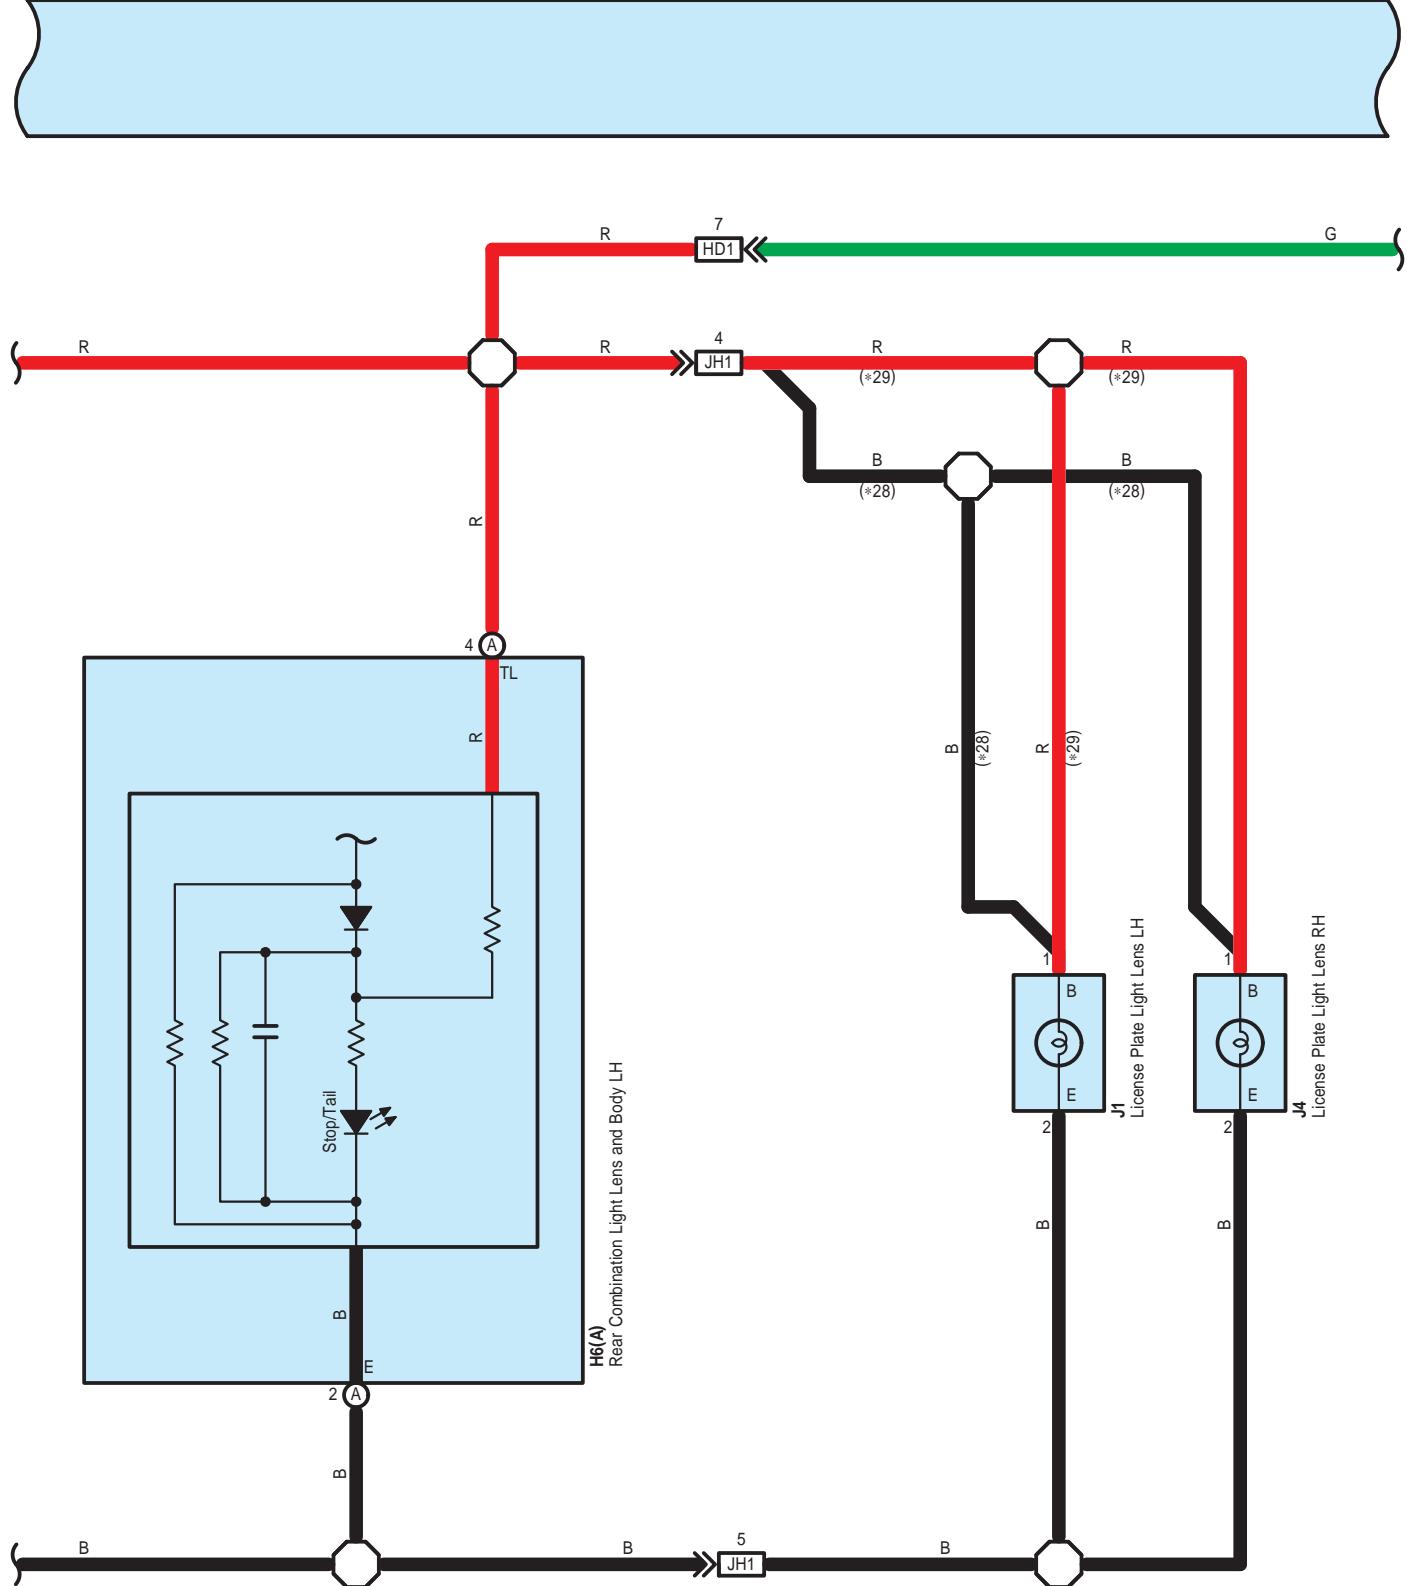


A73(A), D5(B), D6(C)
Main Body ECU


*28 : U. K.
*29 : Except U. K.

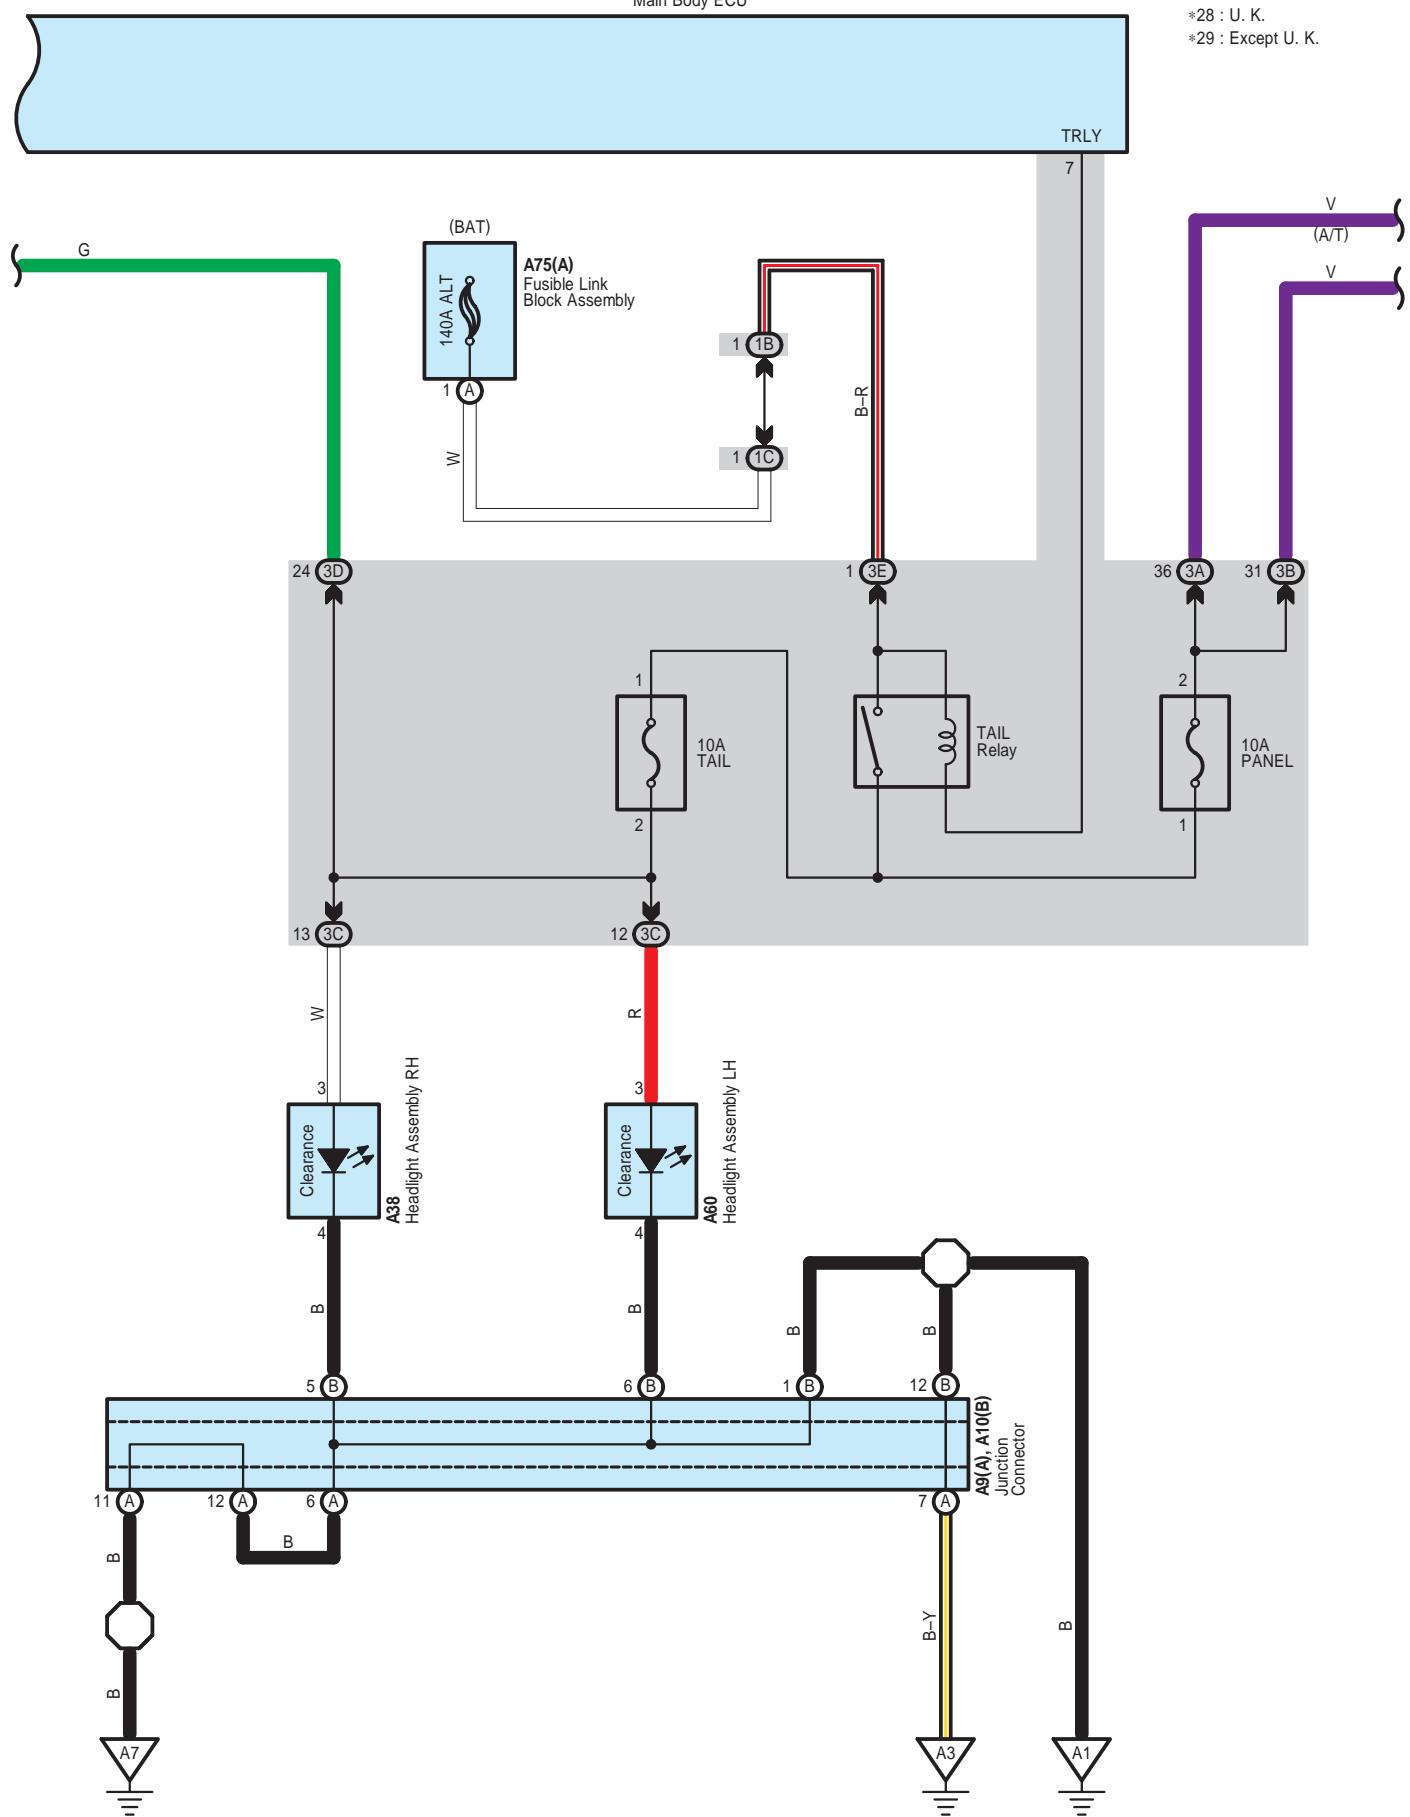


Illumination and Taillight

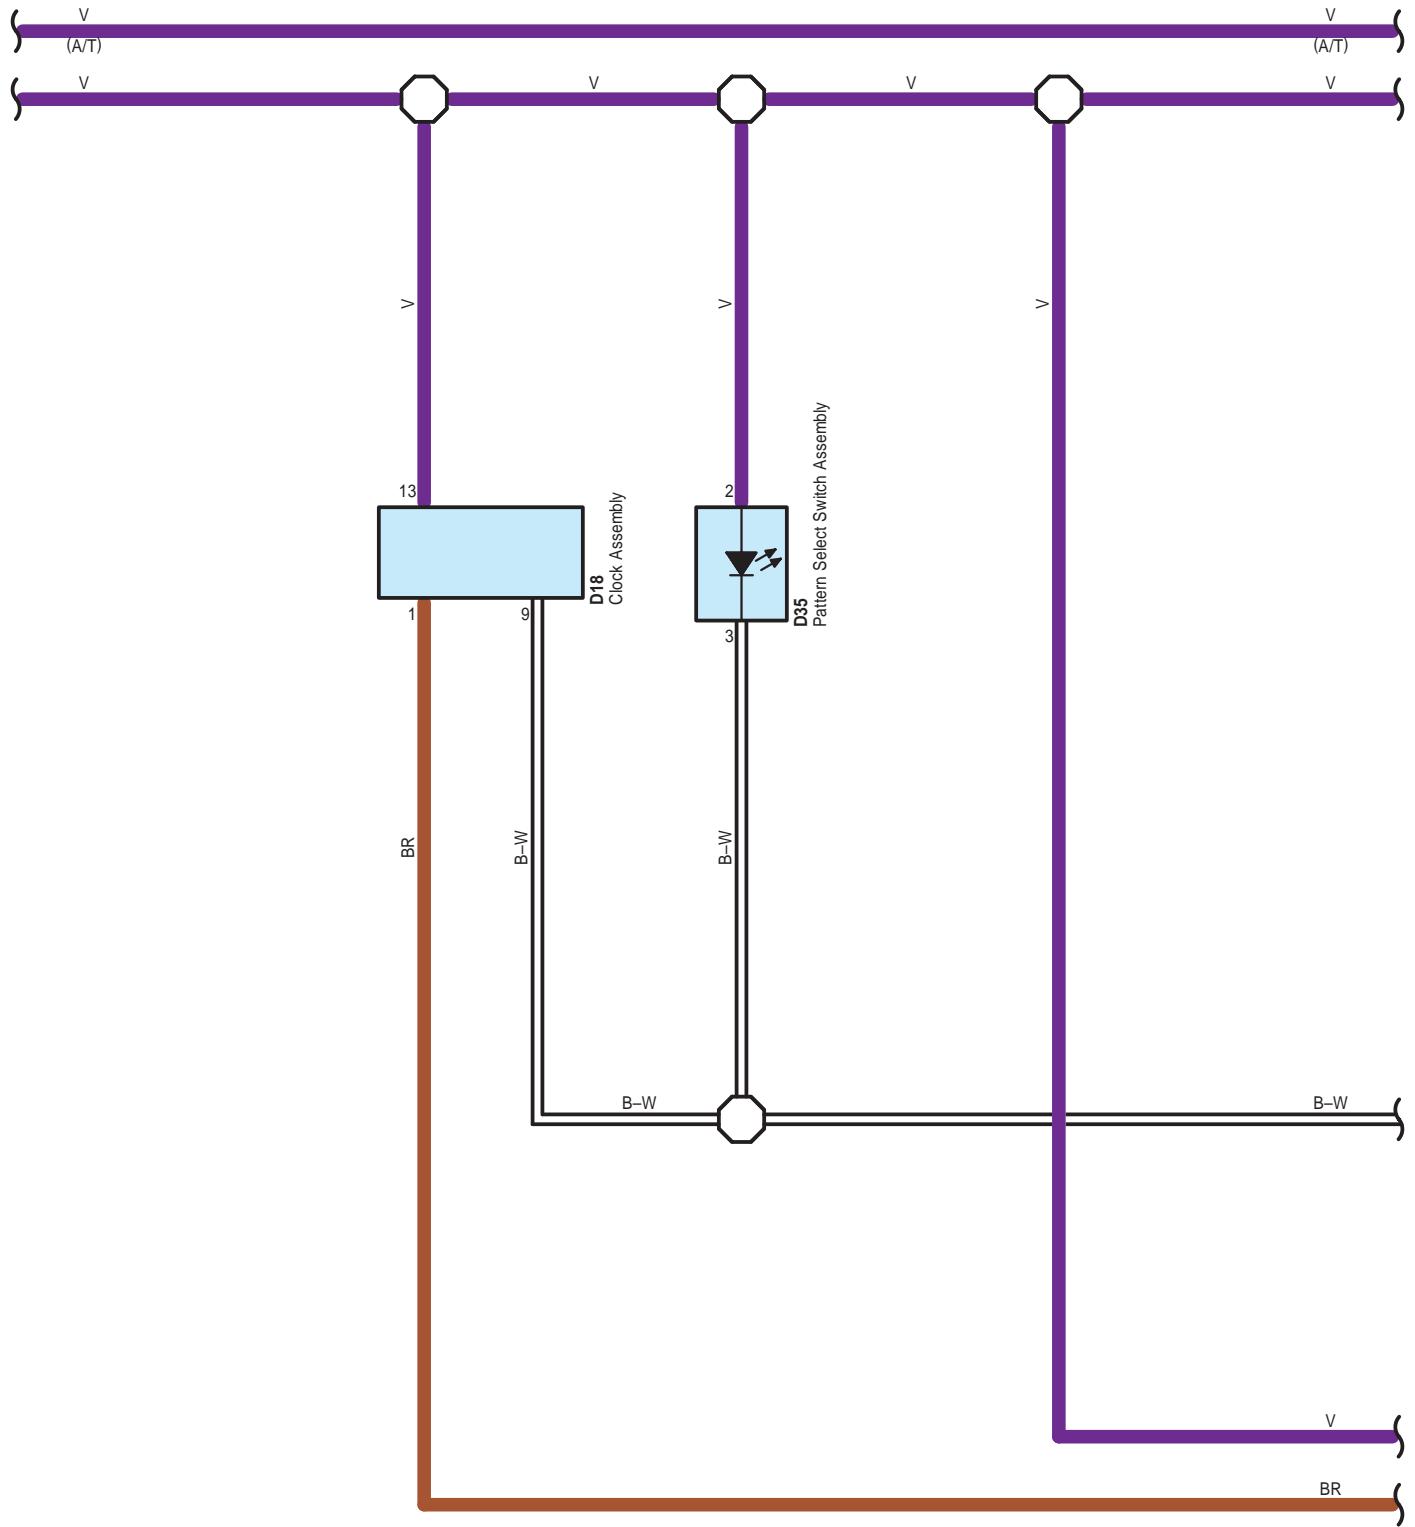


*11 : Automatic A/C
*12 : Except Automatic A/C

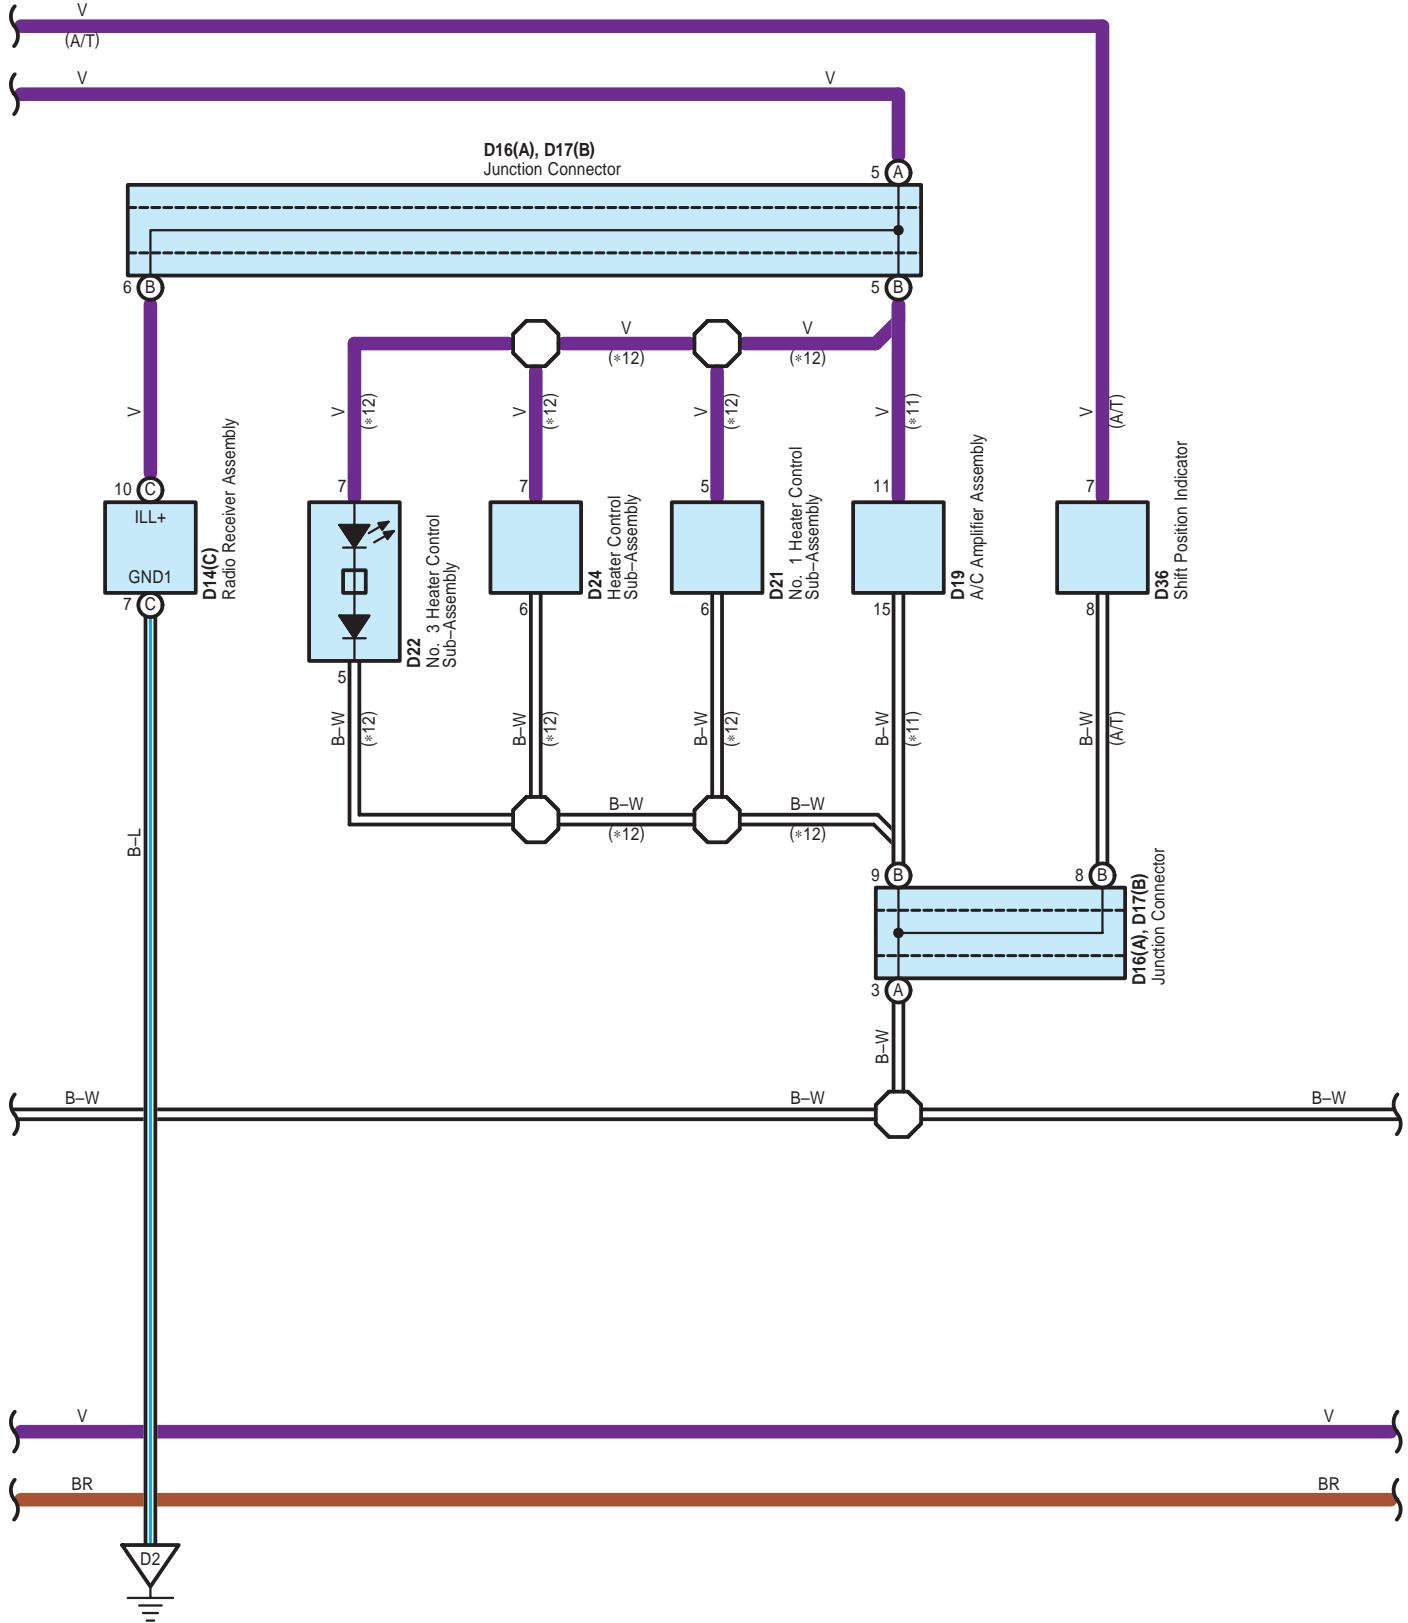

Illumination and Taillight

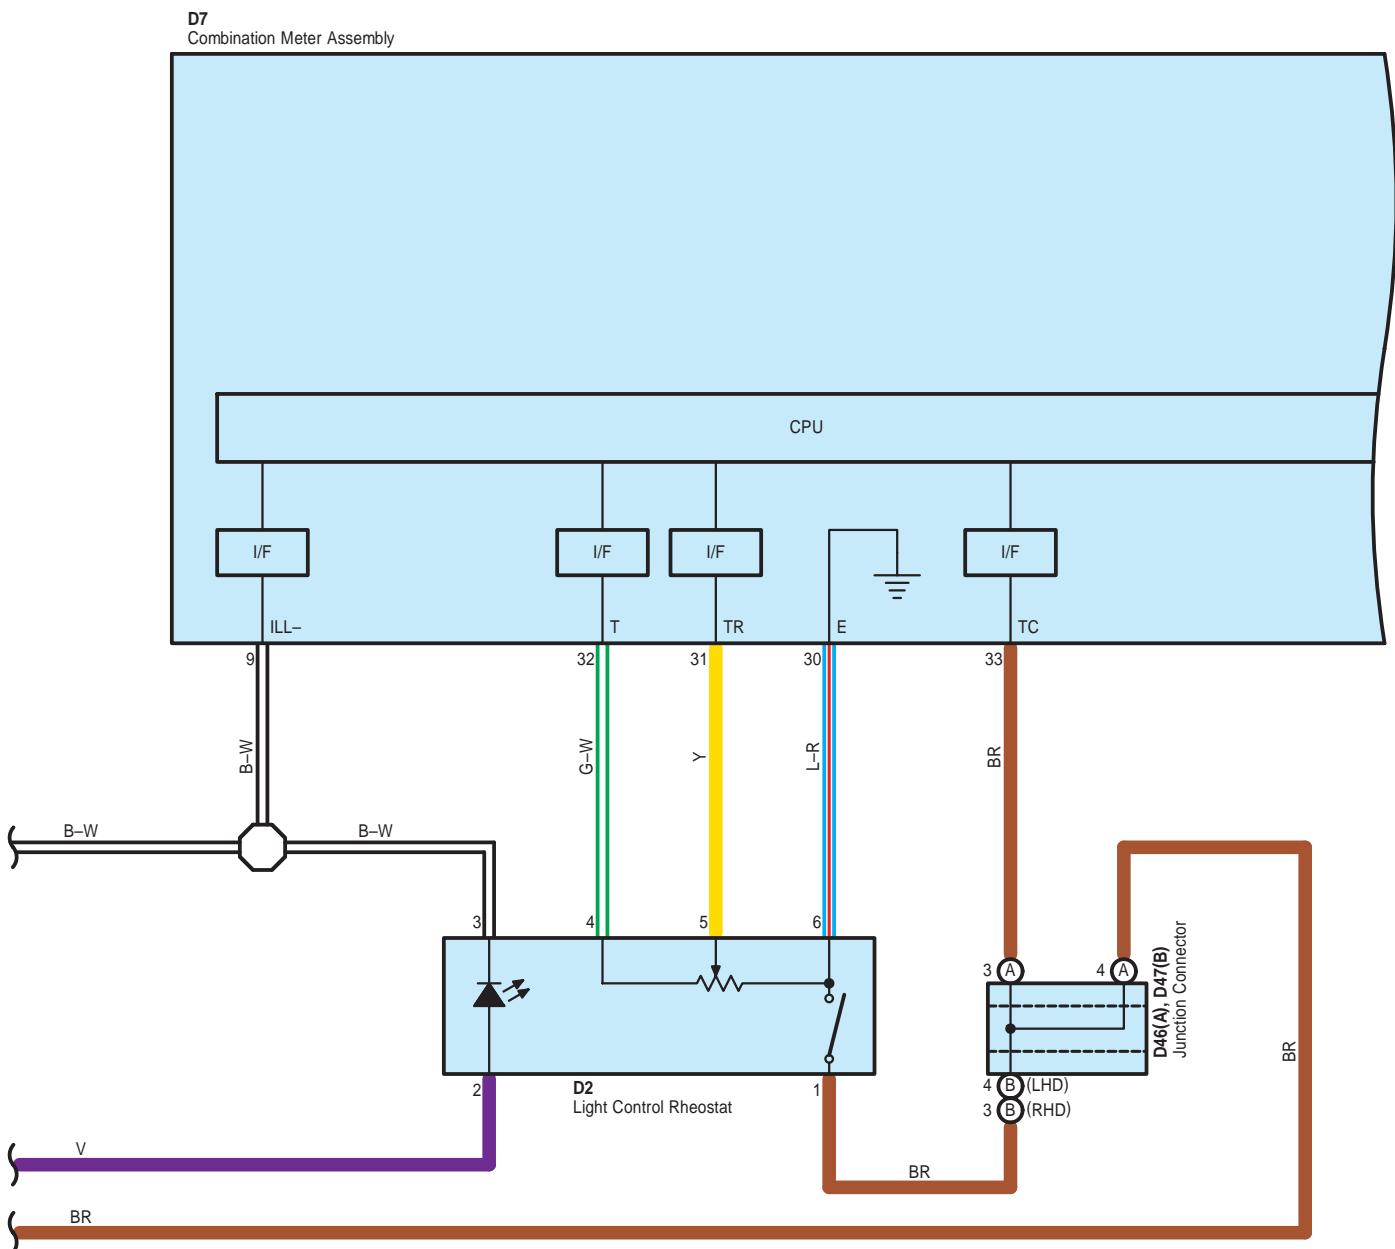

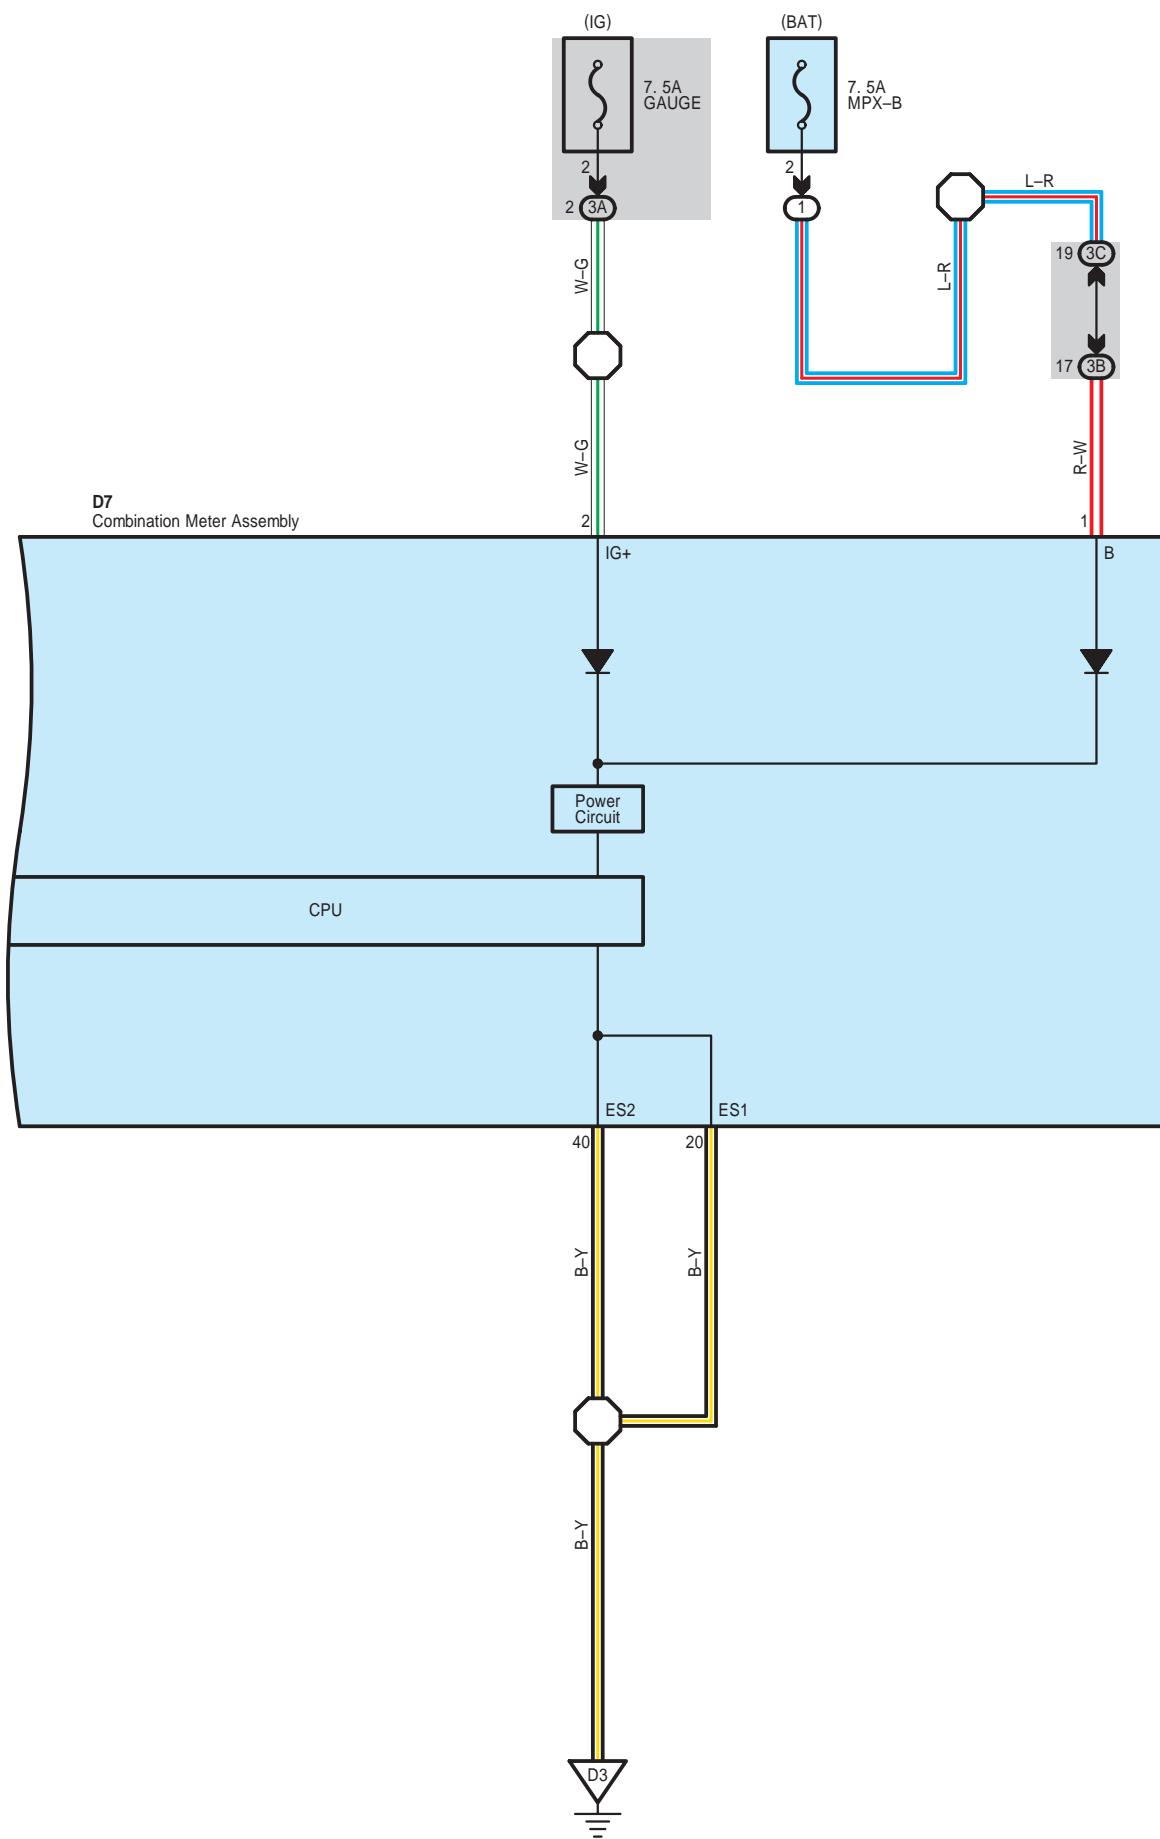

Illumination and Taillight

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page					
A9	A	42 (LHD)		D9	B	40 (LHD)		D36	B	40 (LHD)					
		50 (RHD)				48 (RHD)				48 (RHD)					
A10	B	42 (LHD)		D14	C	40 (LHD)		D41	B	41 (LHD)					
		50 (RHD)				48 (RHD)				49 (RHD)					
A38		39 (LHD)		D16	A	40 (LHD)		D43		41 (LHD)					
		47 (RHD)				48 (RHD)				49 (RHD)					
A60		39 (LHD)		D17	B	40 (LHD)		D46	A	41 (LHD)					
		47 (RHD)				48 (RHD)				49 (RHD)					
A73	A	42 (LHD)		D18		40 (LHD)		D47	B	41 (LHD)					
		50 (RHD)				48 (RHD)				49 (RHD)					
A75	A	39 (LHD)		D19		40 (LHD)		D50	A	41 (LHD)					
		47 (RHD)				48 (RHD)				49 (RHD)					
D2		40 (LHD)		D21		40 (LHD)		H1	A	45 (LHD)					
		48 (RHD)				48 (RHD)				53 (RHD)					
D5	B	40 (LHD)		D22		40 (LHD)		H6	A	45 (LHD)					
		48 (RHD)				48 (RHD)				53 (RHD)					
D6	C	40 (LHD)		D24		40 (LHD)		J1		45 (LHD)					
		48 (RHD)				48 (RHD)				53 (RHD)					
D7		40 (LHD)		D25		40 (LHD)		J4		45 (LHD)					
		48 (RHD)				48 (RHD)				53 (RHD)					
D8	A	40 (LHD)		D35		40 (LHD)									
		48 (RHD)				48 (RHD)									

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B		
1C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3A		
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3E	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
HD1	55 (LHD) 59 (RHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
JH1	56 (LHD) 60 (RHD)	Luggage Room Wire and No. 2 Floor Wire (Quarter Panel LH)

▽ : Ground Points


Code	See Page	Ground Points Location
A1	54 (LHD) 58 (RHD)	Front Fender Apron LH
A3	55 (LHD) 59 (RHD)	Cowl Side Panel RH Cowl Side Panel LH
A7	54 (LHD) 58 (RHD)	Front Fender Apron RH
D1	55 (LHD) 59 (RHD)	Cowl Side Panel LH Cowl Side Panel RH



: Ground Points


Code	See Page	Ground Points Location
D2	55 (LHD)	Instrument Panel Brace LH
	59 (RHD)	Instrument Panel Brace RH
D3	55 (LHD)	Instrument Panel Brace LH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
H1	56 (LHD)	Lower Back Panel
	60 (RHD)	

Interior Light

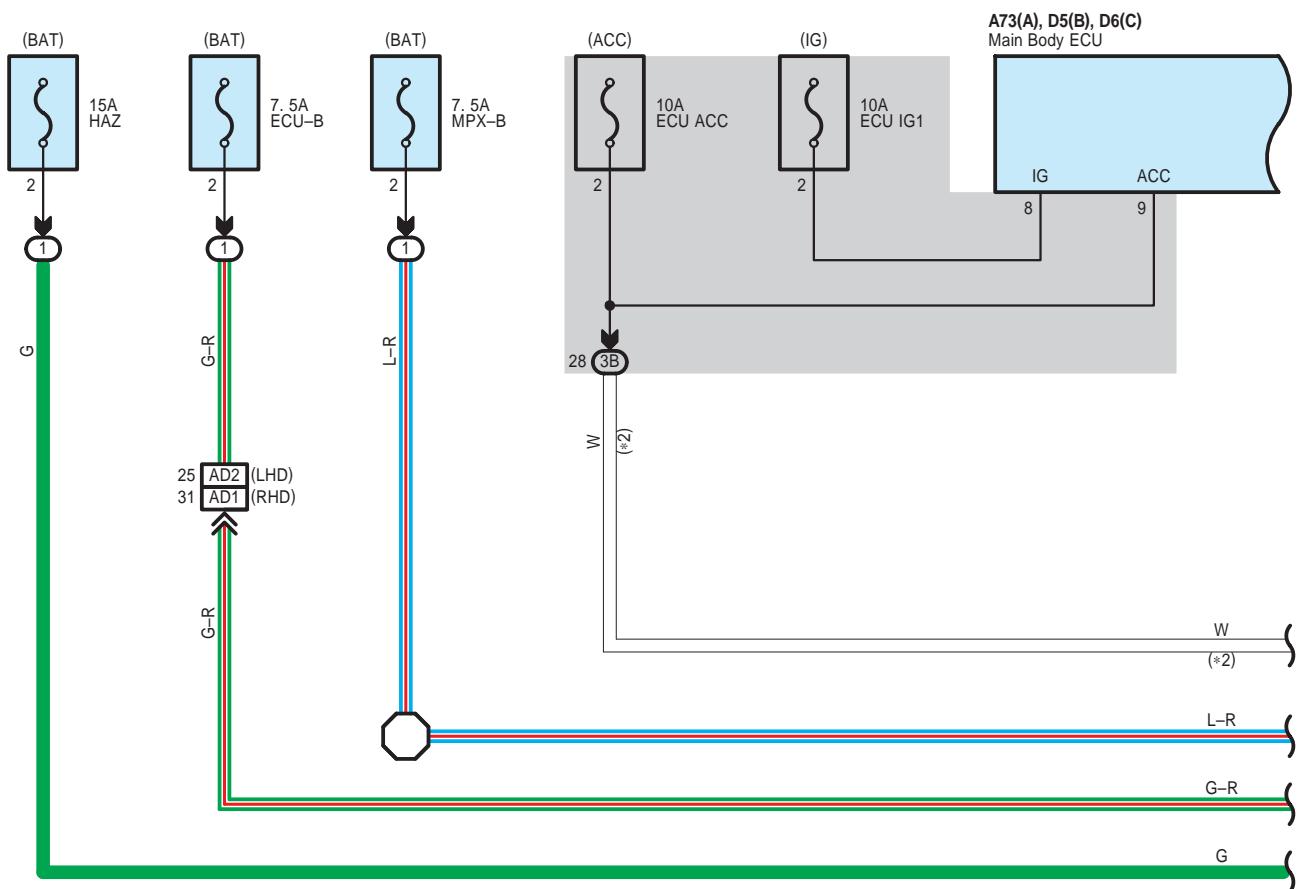


* 2 : w/ Entry & Start System

A73(A), D5(B), D6(C)
Main Body ECU

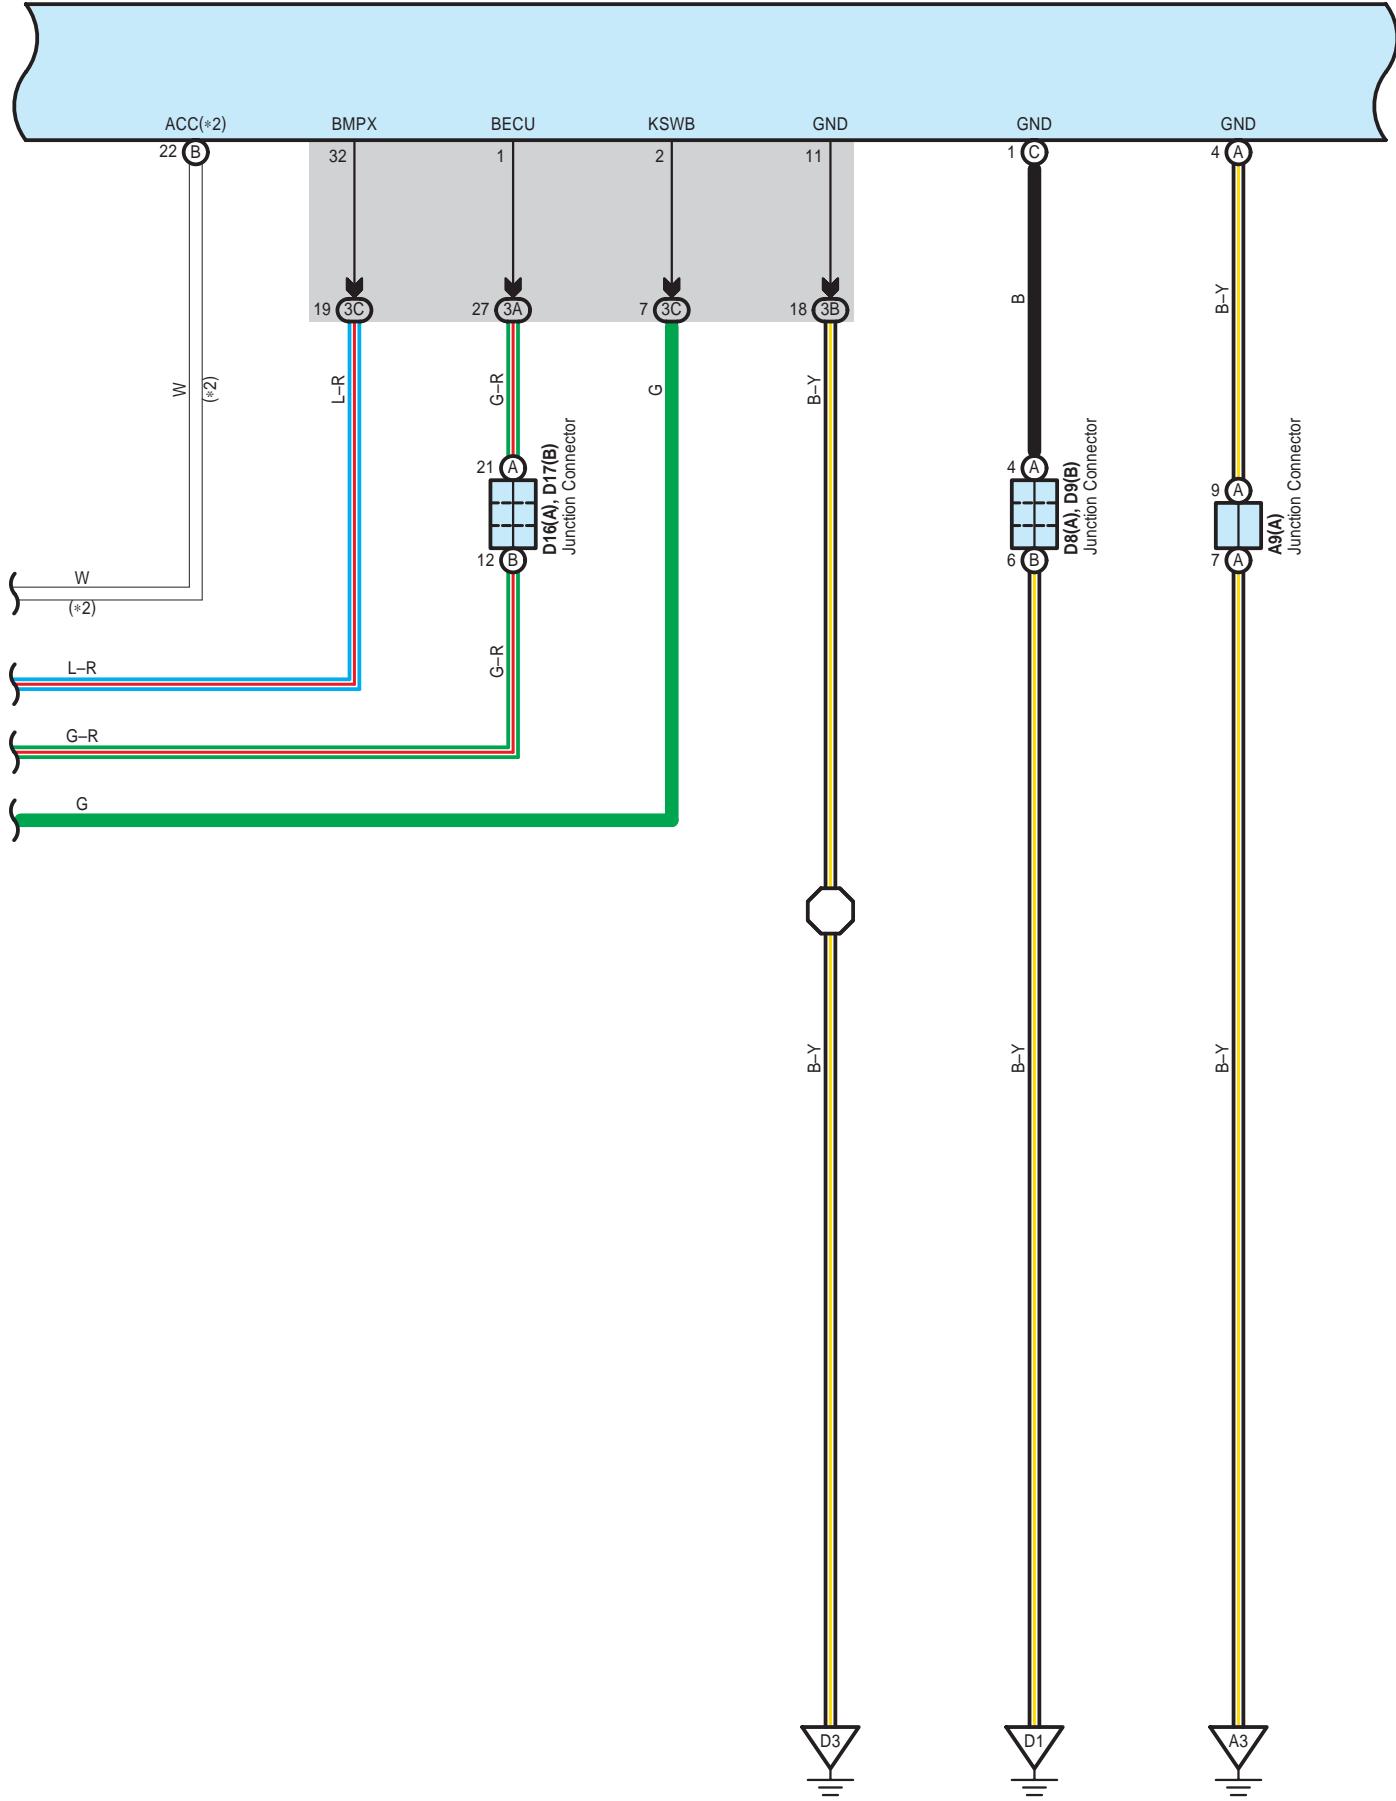


Interior Light

A73(A), D5(B), D6(C)
Main Body ECU

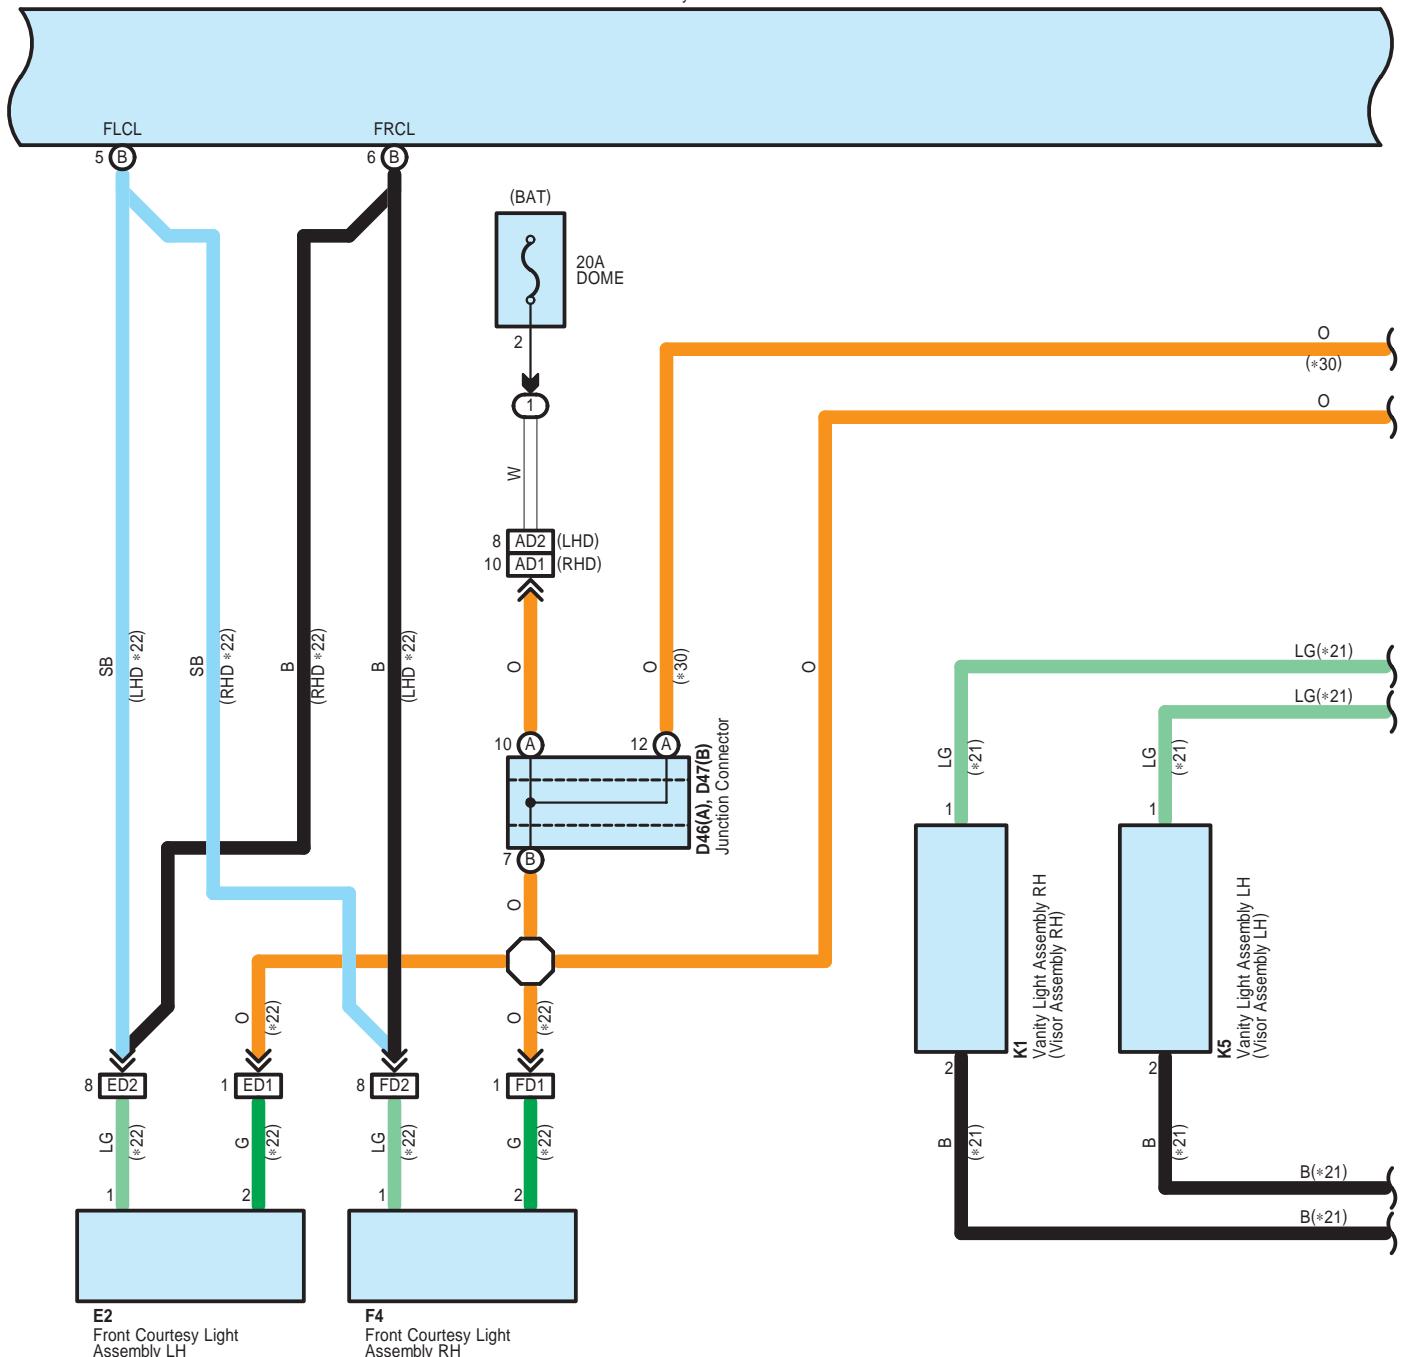


*21 : w/ Vanity Light Assembly
*22 : w/ Courtesy Light
*30 : w/ Luggage Compartment Light


A73(A), D5(B), D6(C)
Main Body ECU

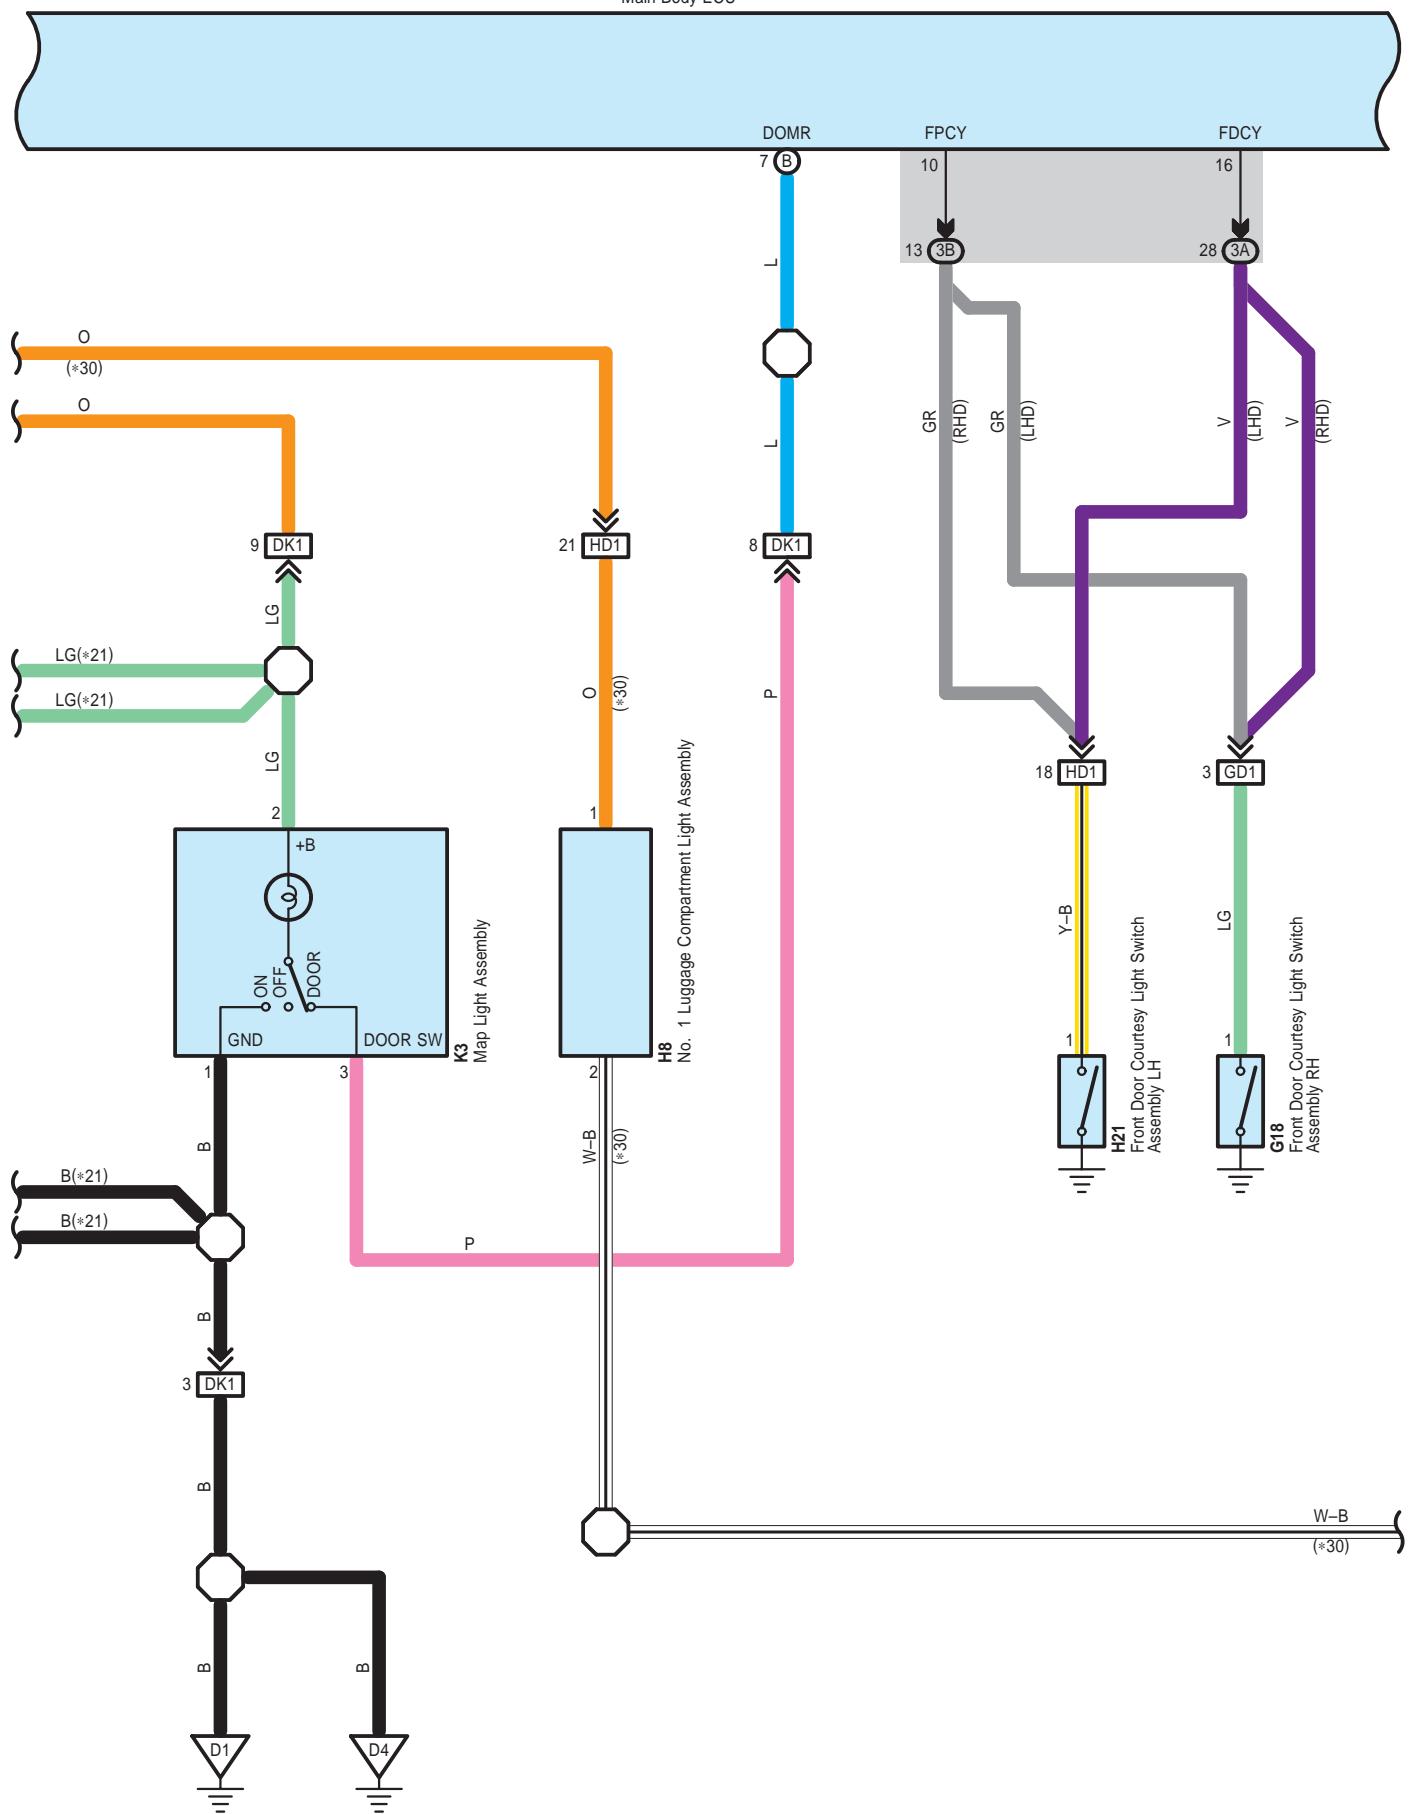


Interior Light

A73(A), D5(B), D6(C)
Main Body ECU

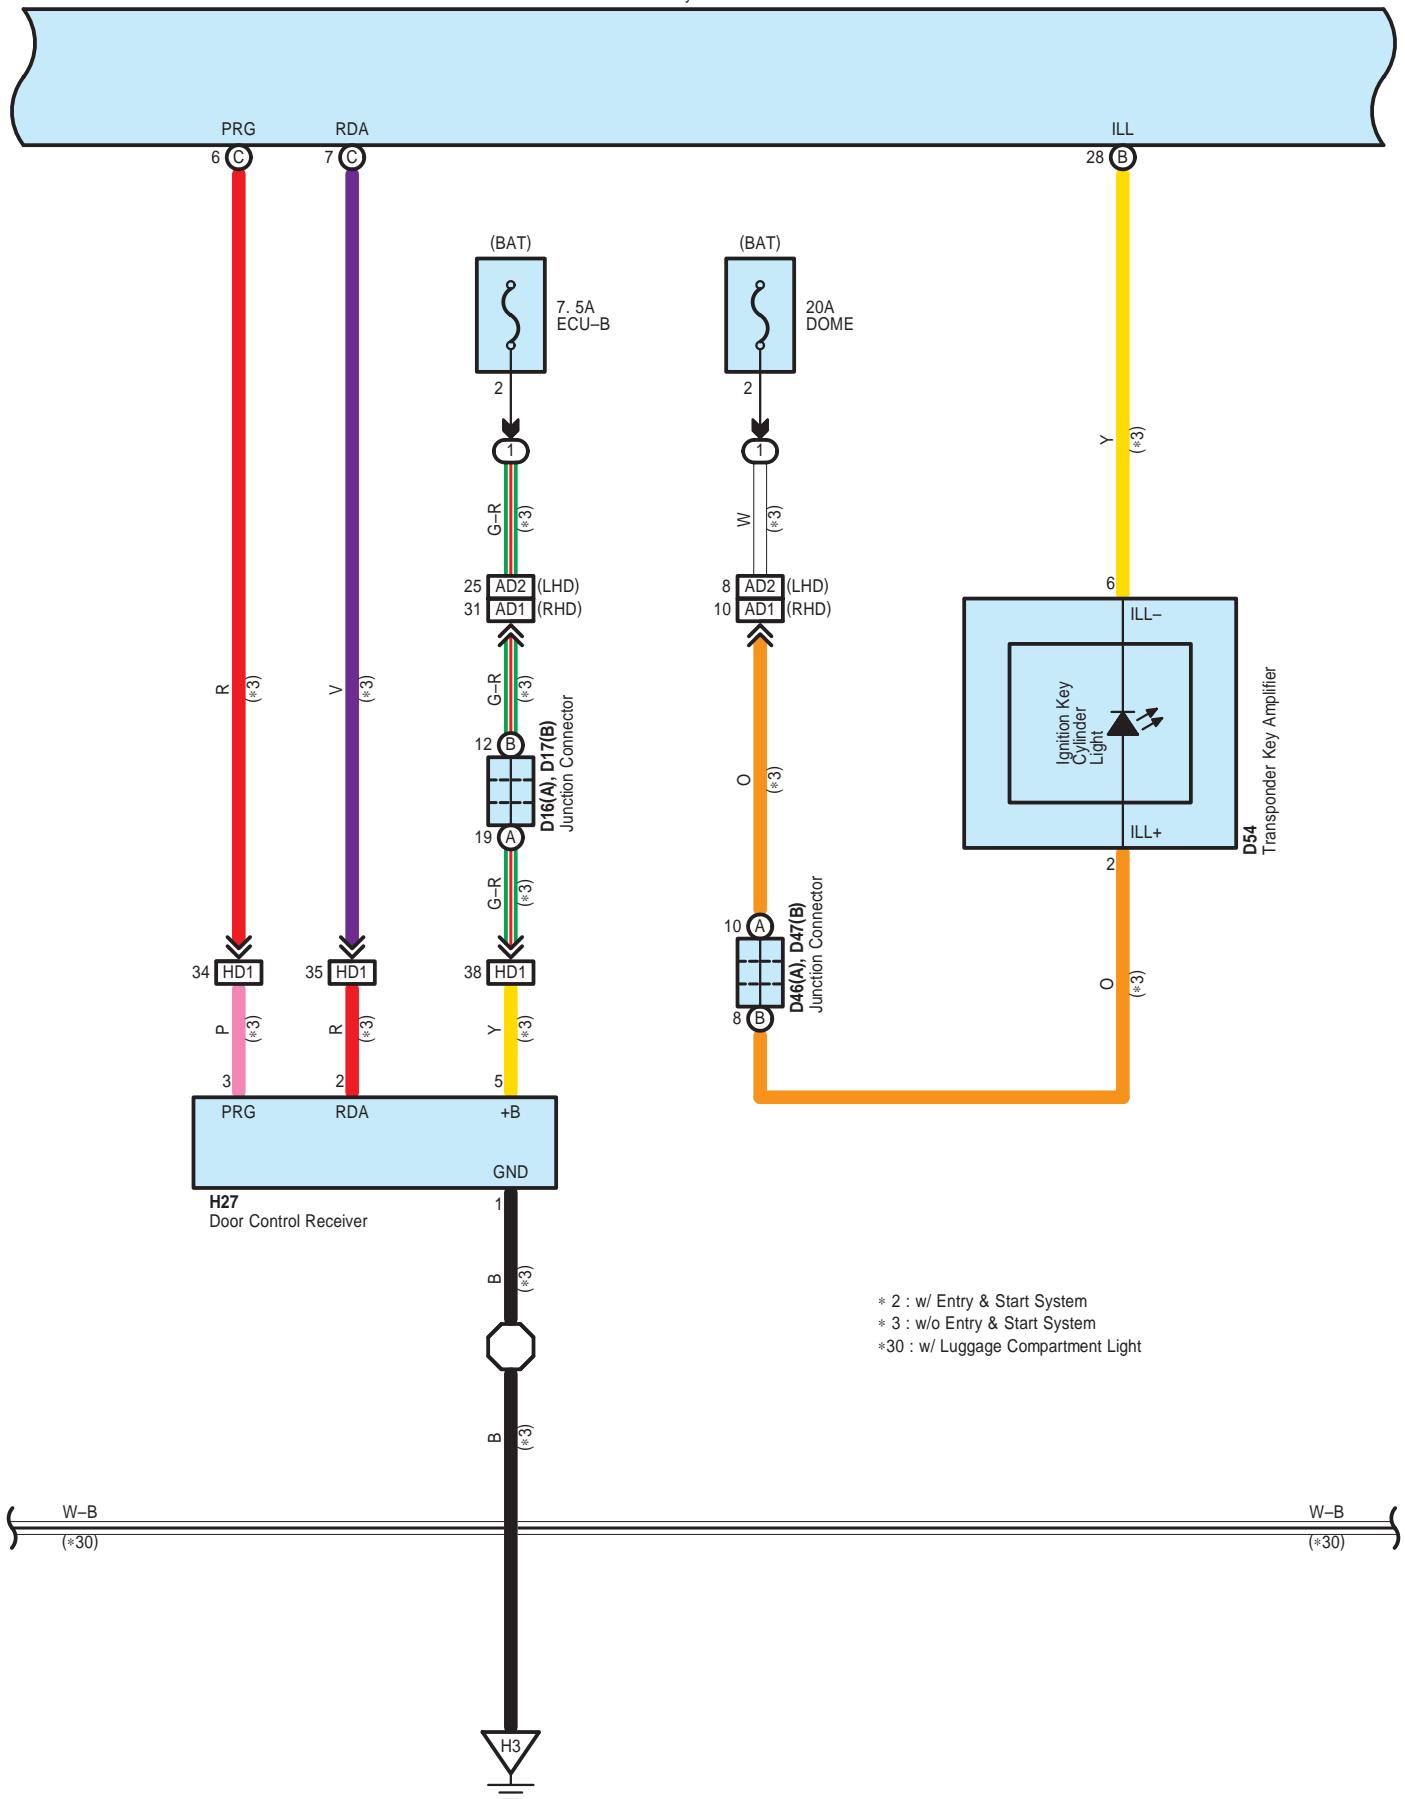


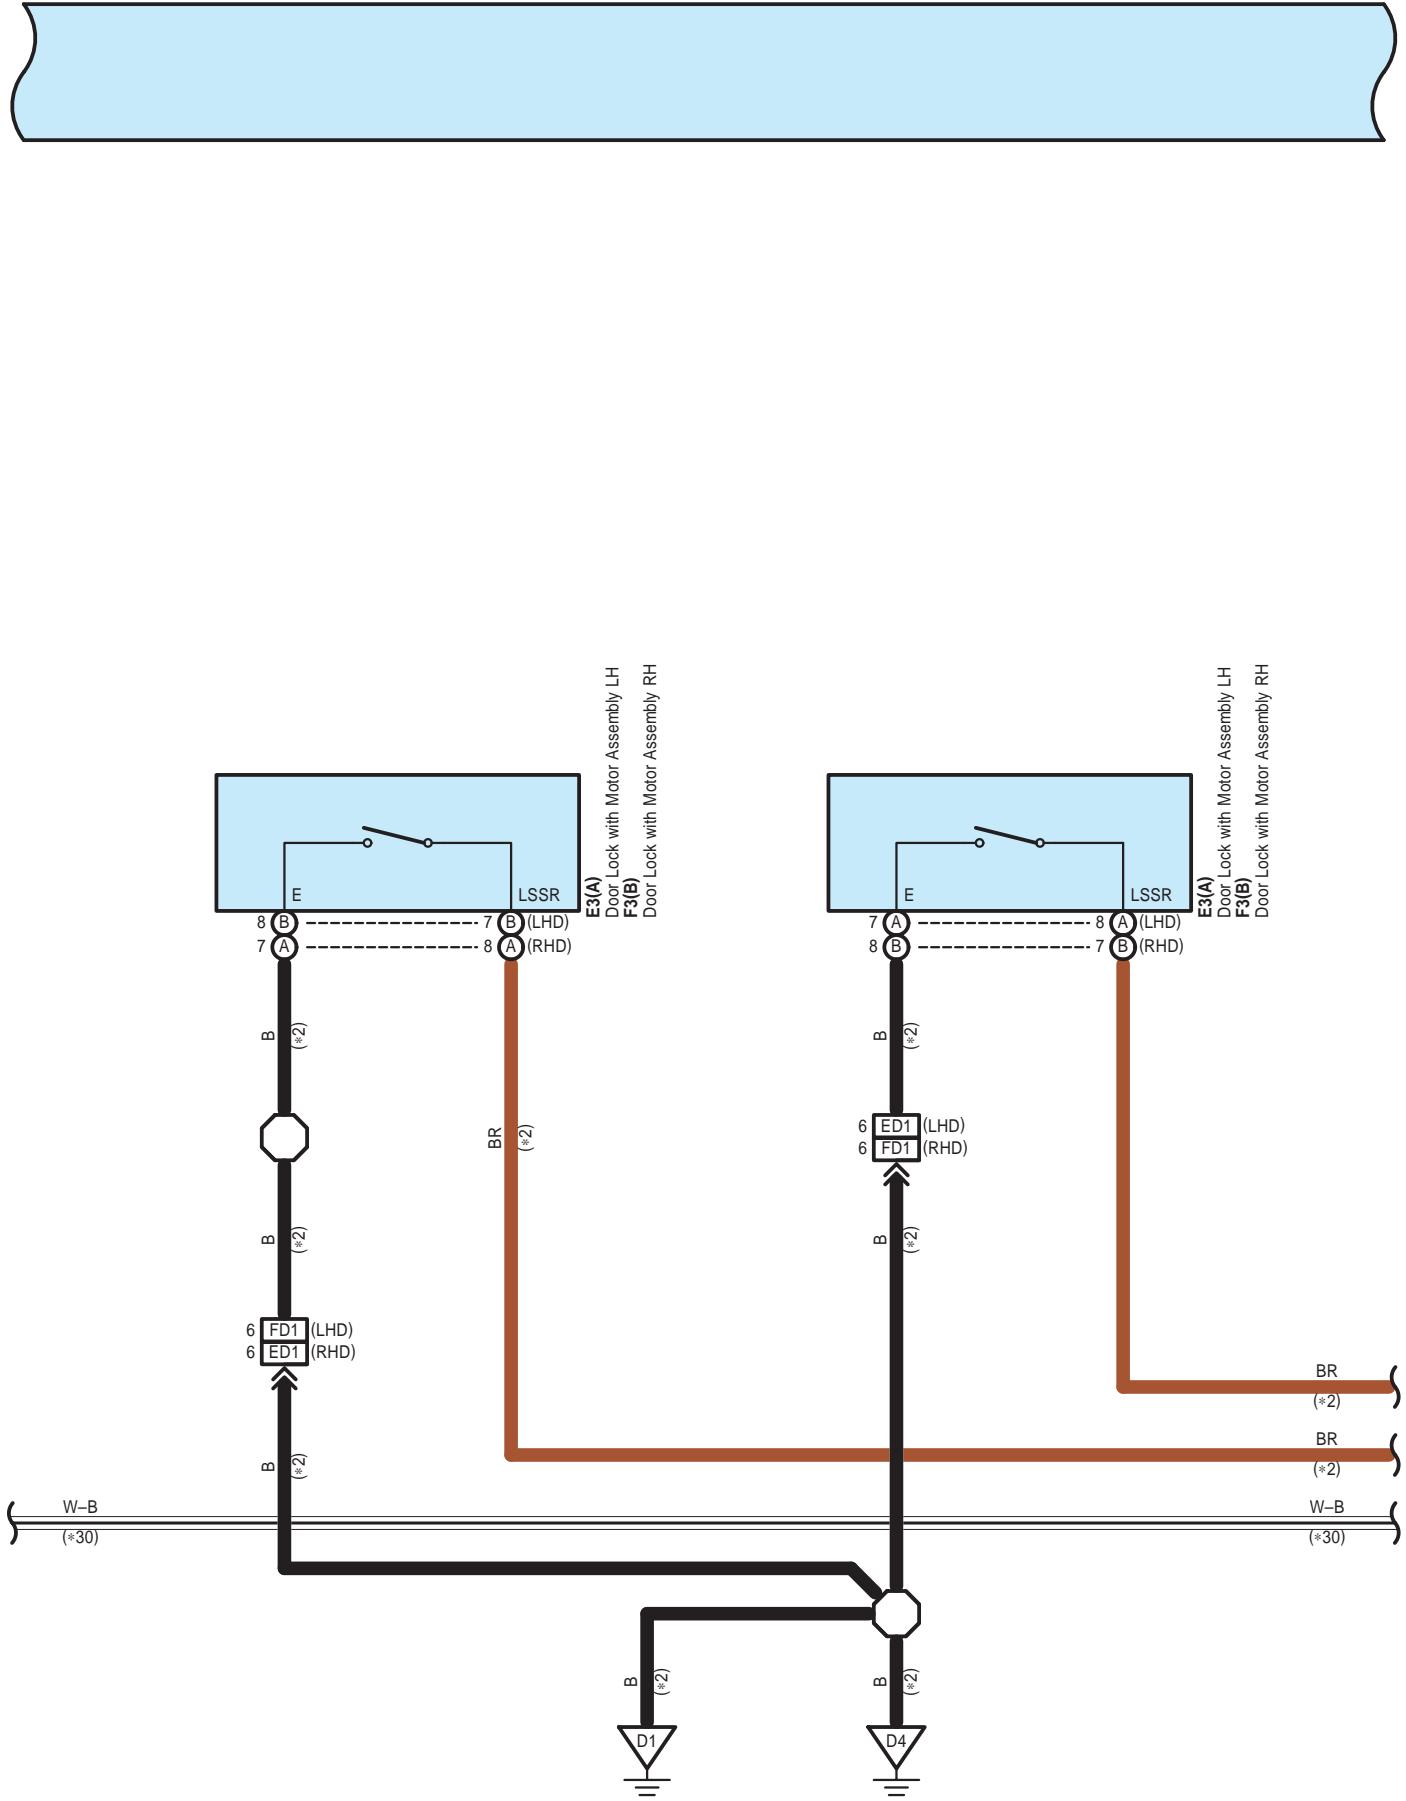

Interior Light

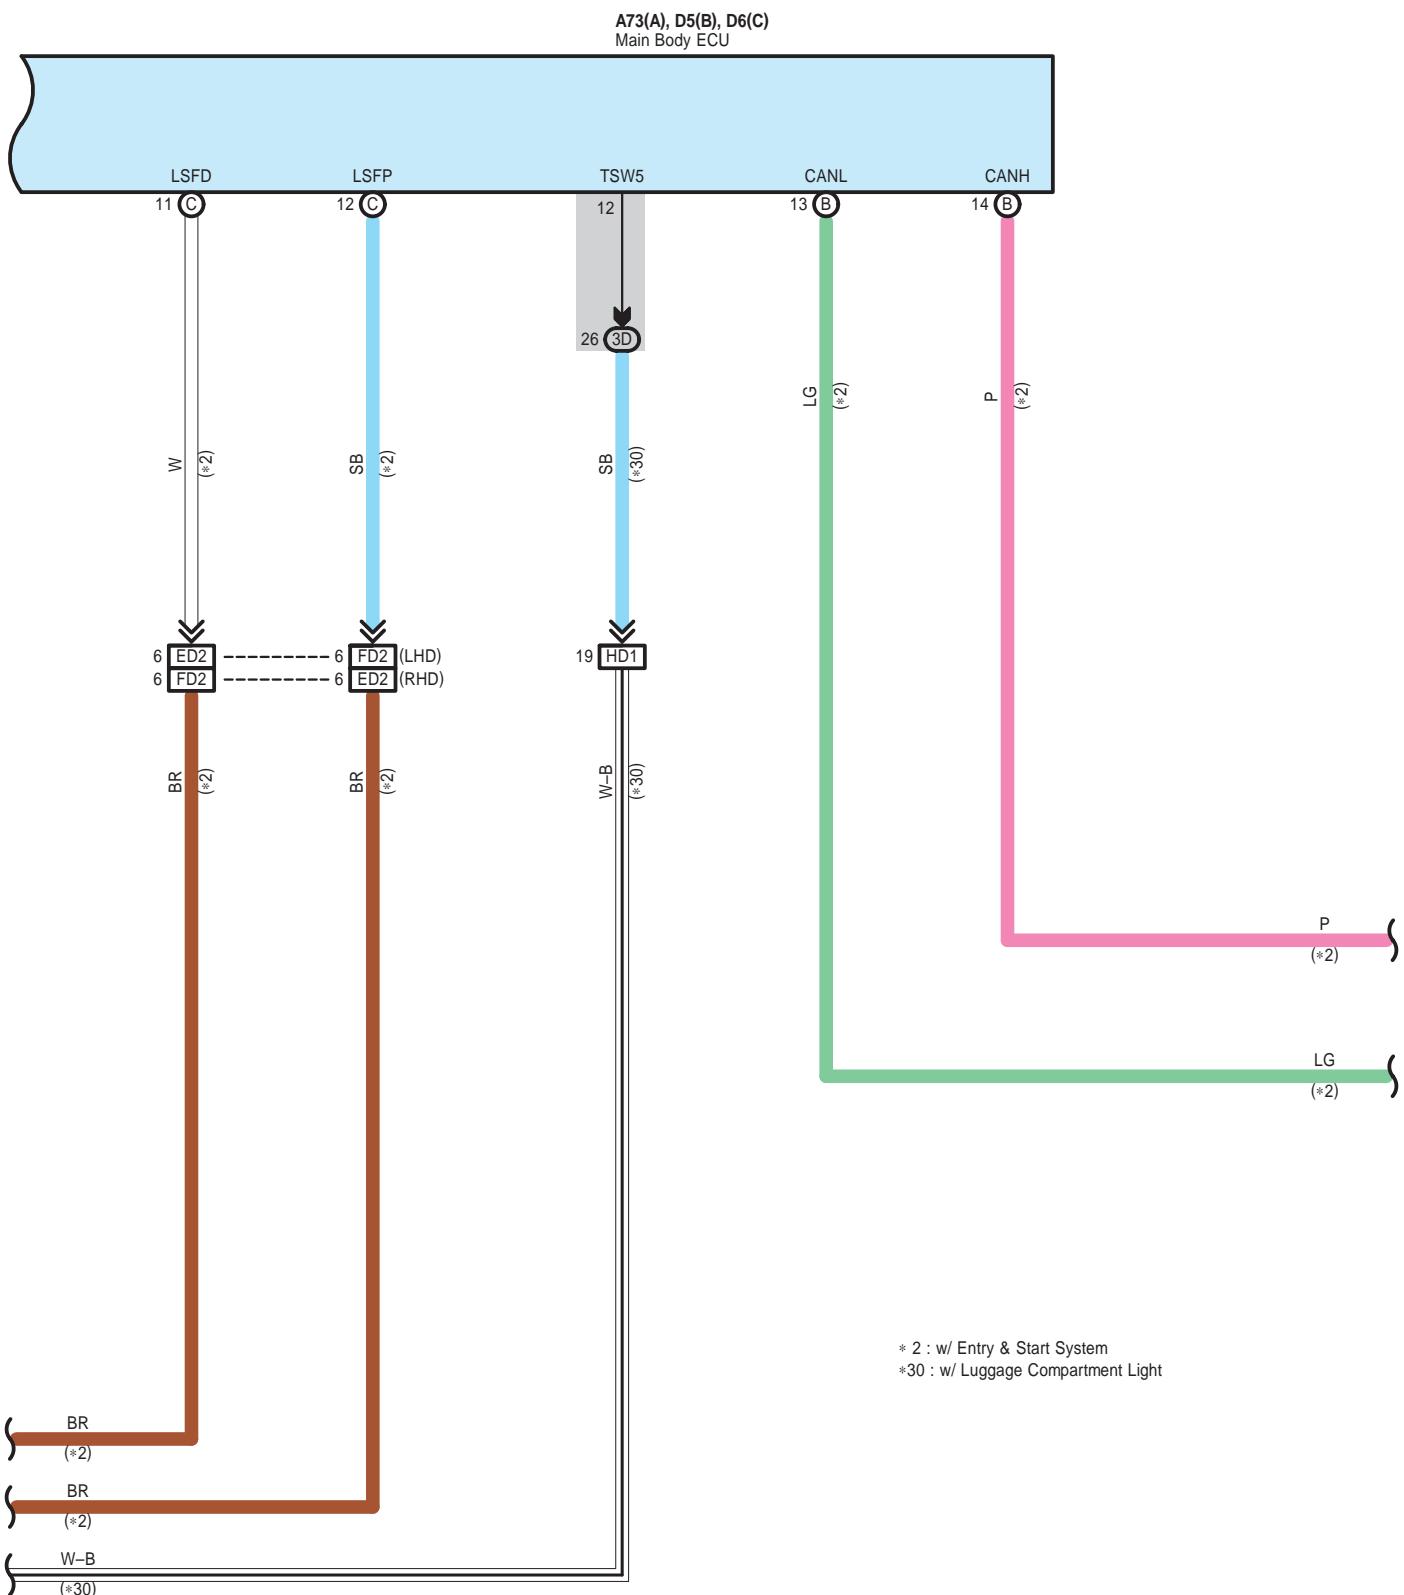

D40(A), D41(B)
Certification ECU Assembly

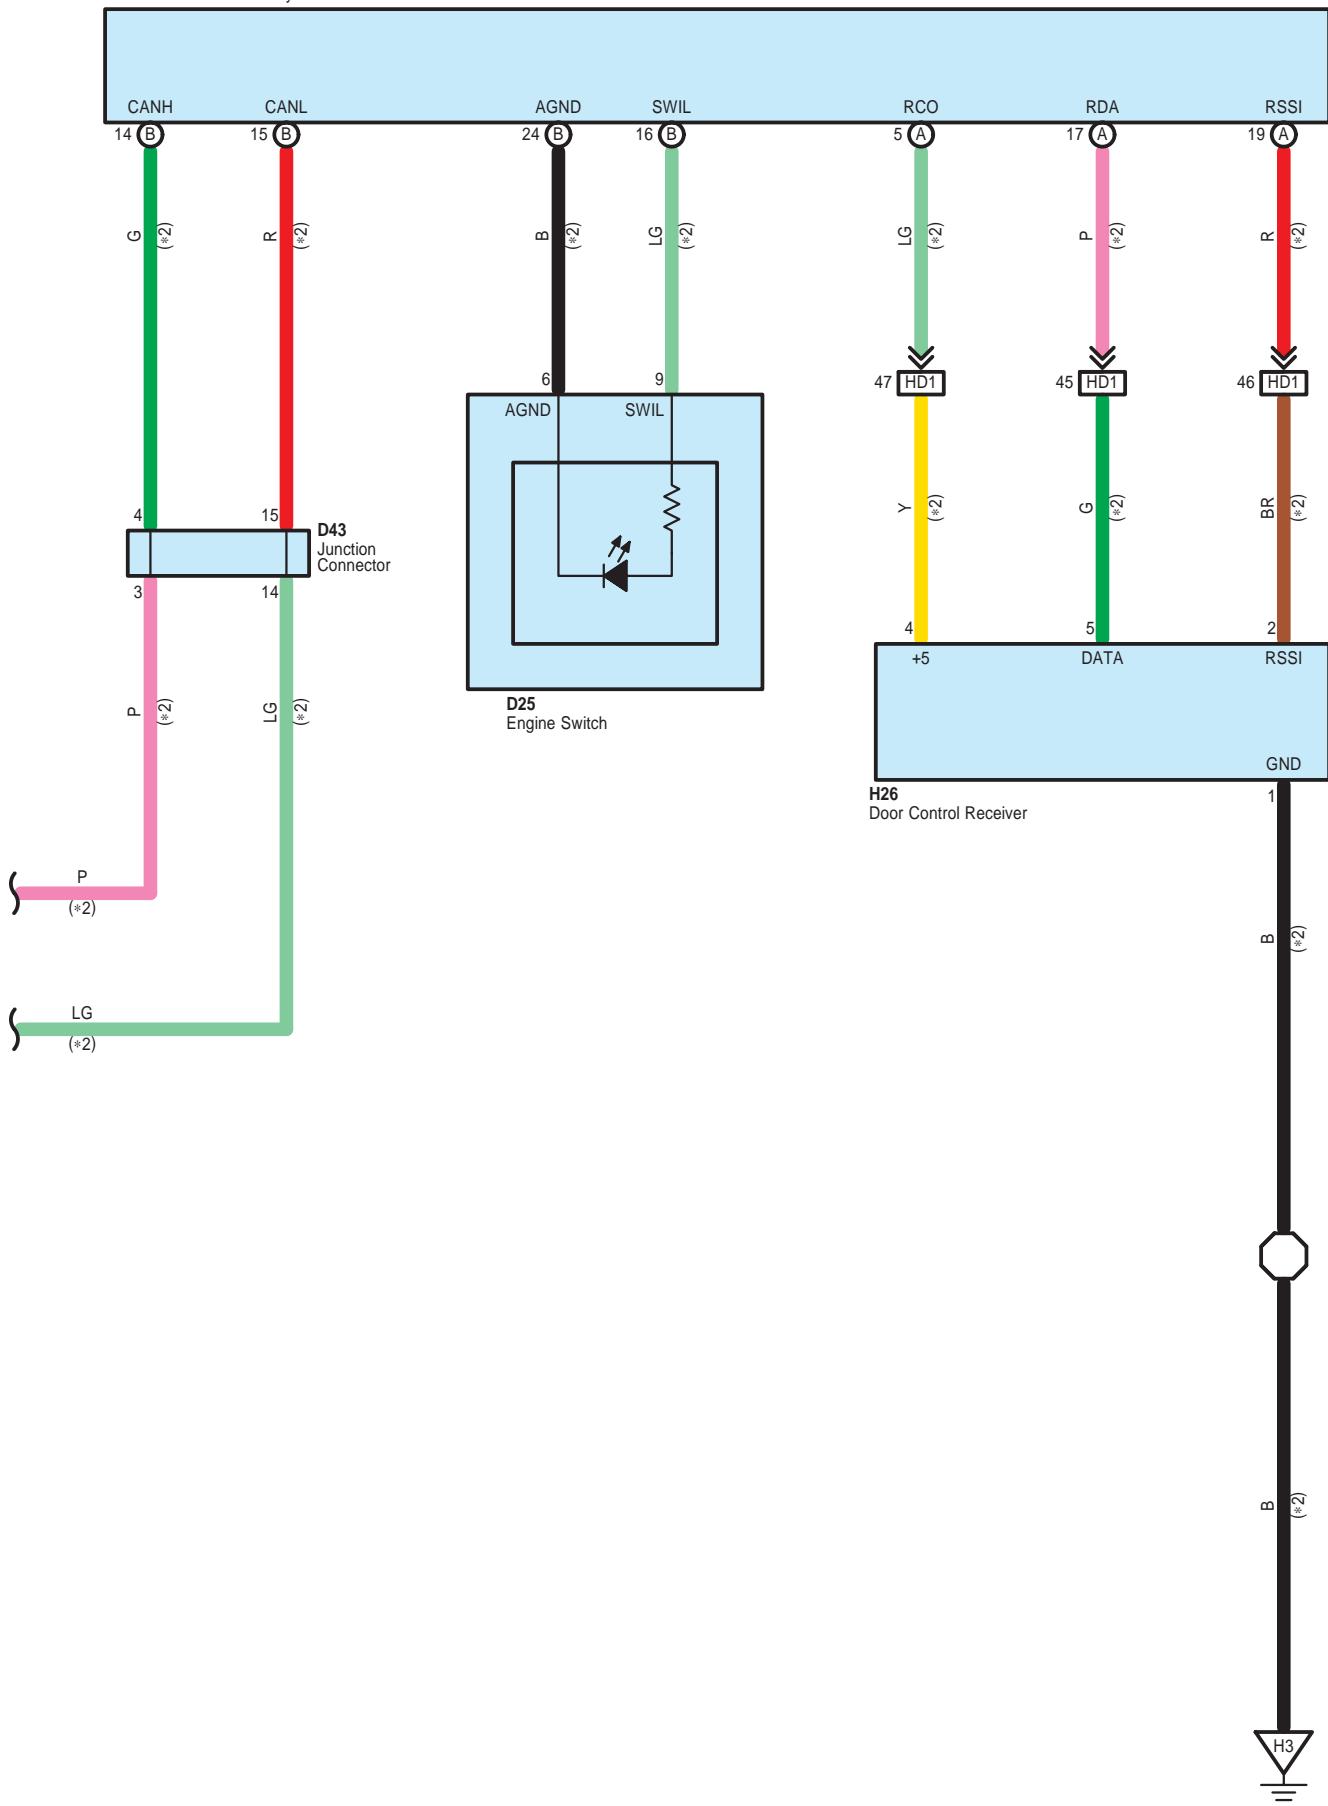

Interior Light

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page		
A9	A	42 (LHD) 50 (RHD)	D40	A	41 (LHD)		
					49 (RHD)		
A73	A	42 (LHD) 50 (RHD)	D41	B	41 (LHD)		
					49 (RHD)		
D5	B	40 (LHD) 48 (RHD)	D43		41 (LHD)		
					49 (RHD)		
D6	C	40 (LHD) 48 (RHD)	D46	A	41 (LHD)		
					49 (RHD)		
D8	A	40 (LHD) 48 (RHD)	D47	B	41 (LHD)		
					49 (RHD)		
D9	B	40 (LHD) 48 (RHD)	D54		41 (LHD)		
					49 (RHD)		
D16	A	40 (LHD) 48 (RHD)	E2		44 (LHD)		
					52 (RHD)		
D17	B	40 (LHD) 48 (RHD)	E3	A	44 (LHD)		
					52 (RHD)		
D25		40 (LHD) 48 (RHD)	F3	B	44 (LHD)		
					52 (RHD)		
				K5	45 (LHD)		
					53 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
DK1	55 (LHD)	Instrument Panel Wire and Roof Wire (Front Body Inner Pillar RH)
	59 (RHD)	
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
ED2	55 (LHD)	
	59 (RHD)	
FD1	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
FD2	55 (LHD)	
	59 (RHD)	
GD1	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	

▽ : Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
D1	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH



: Ground Points


Code	See Page	Ground Points Location
D3	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	

Front Fog Light

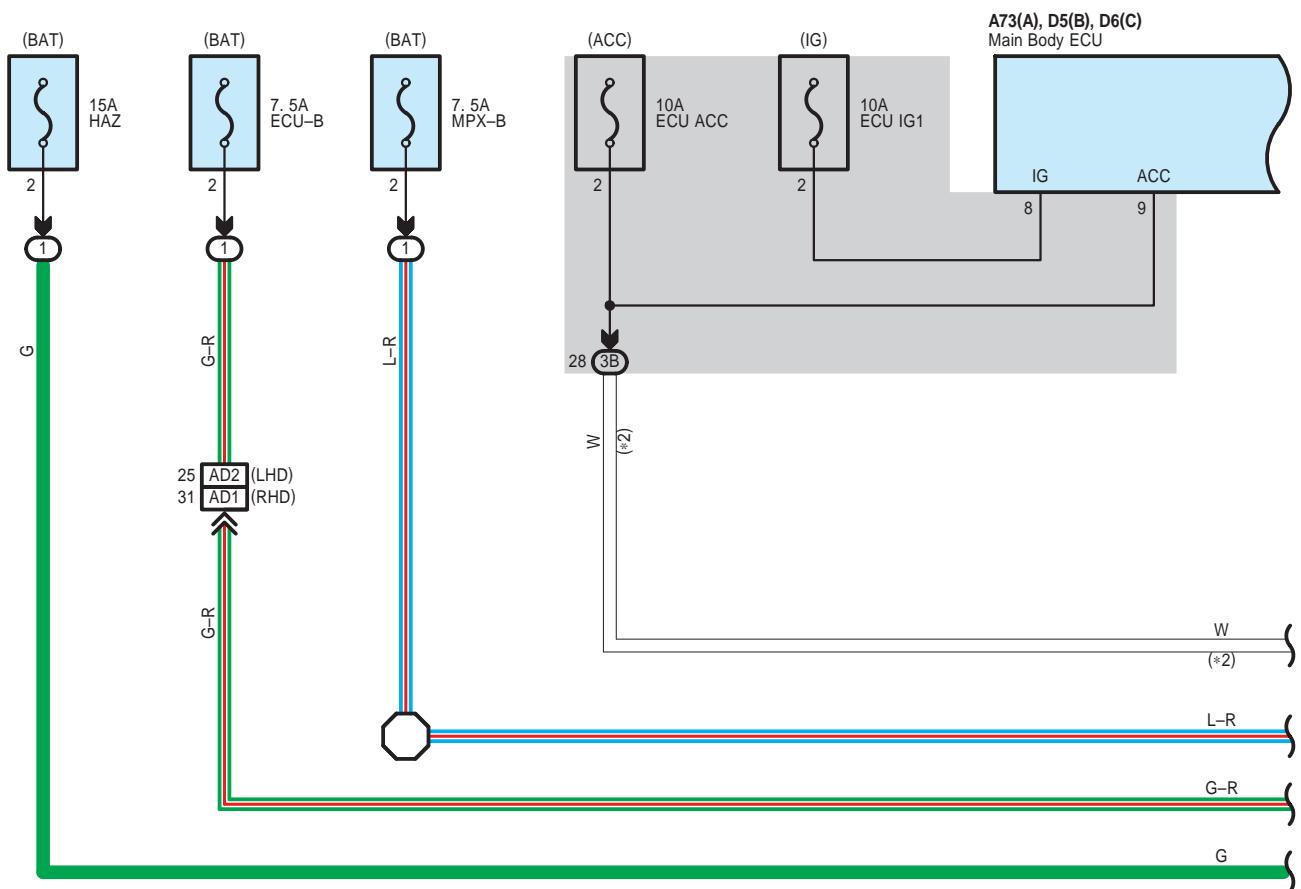


* 2 : w/ Entry & Start System


A73(A), D5(B), D6(C)
Main Body ECU

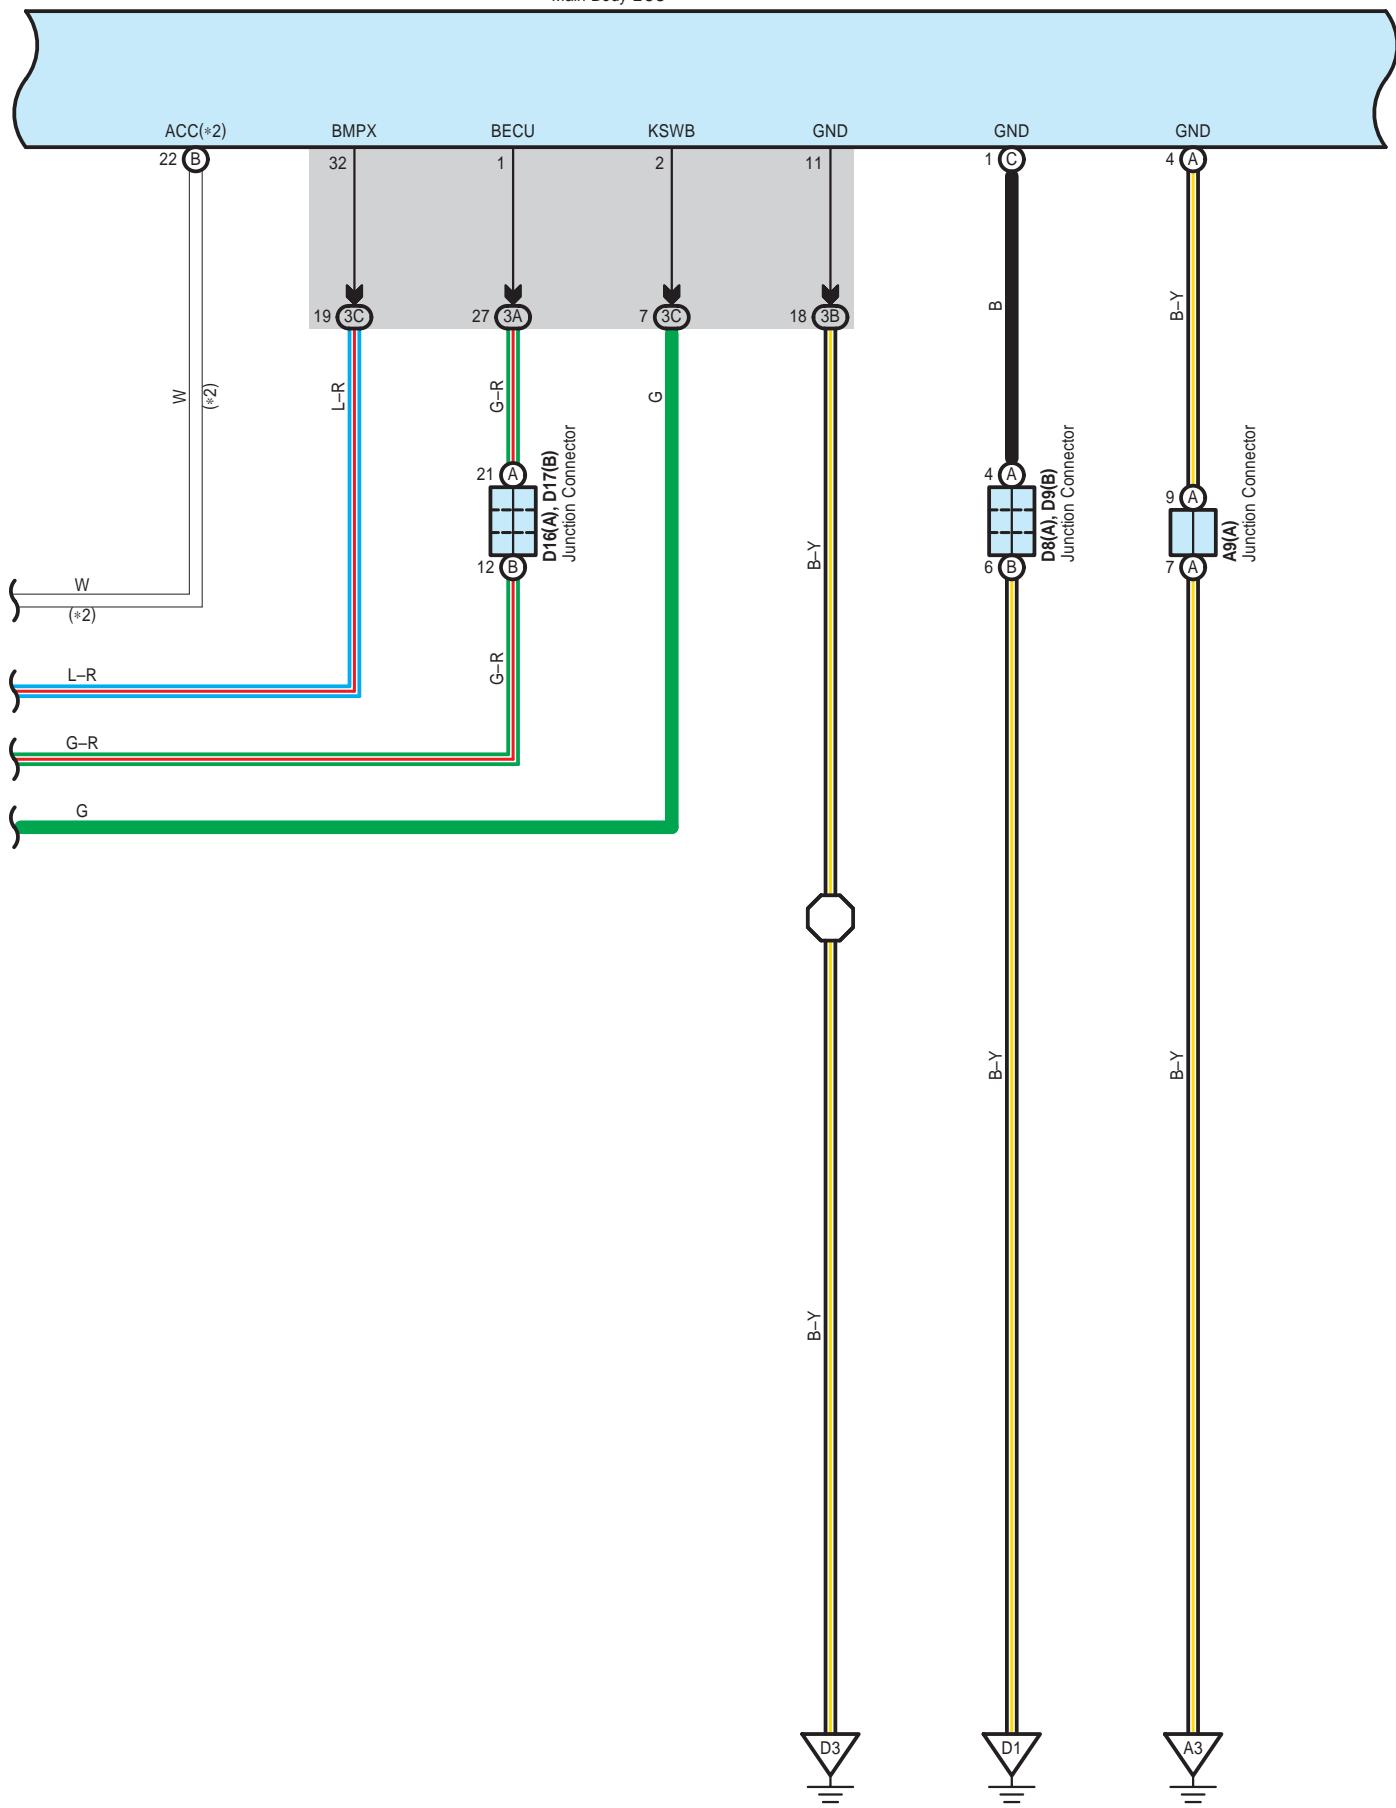


Front Fog Light

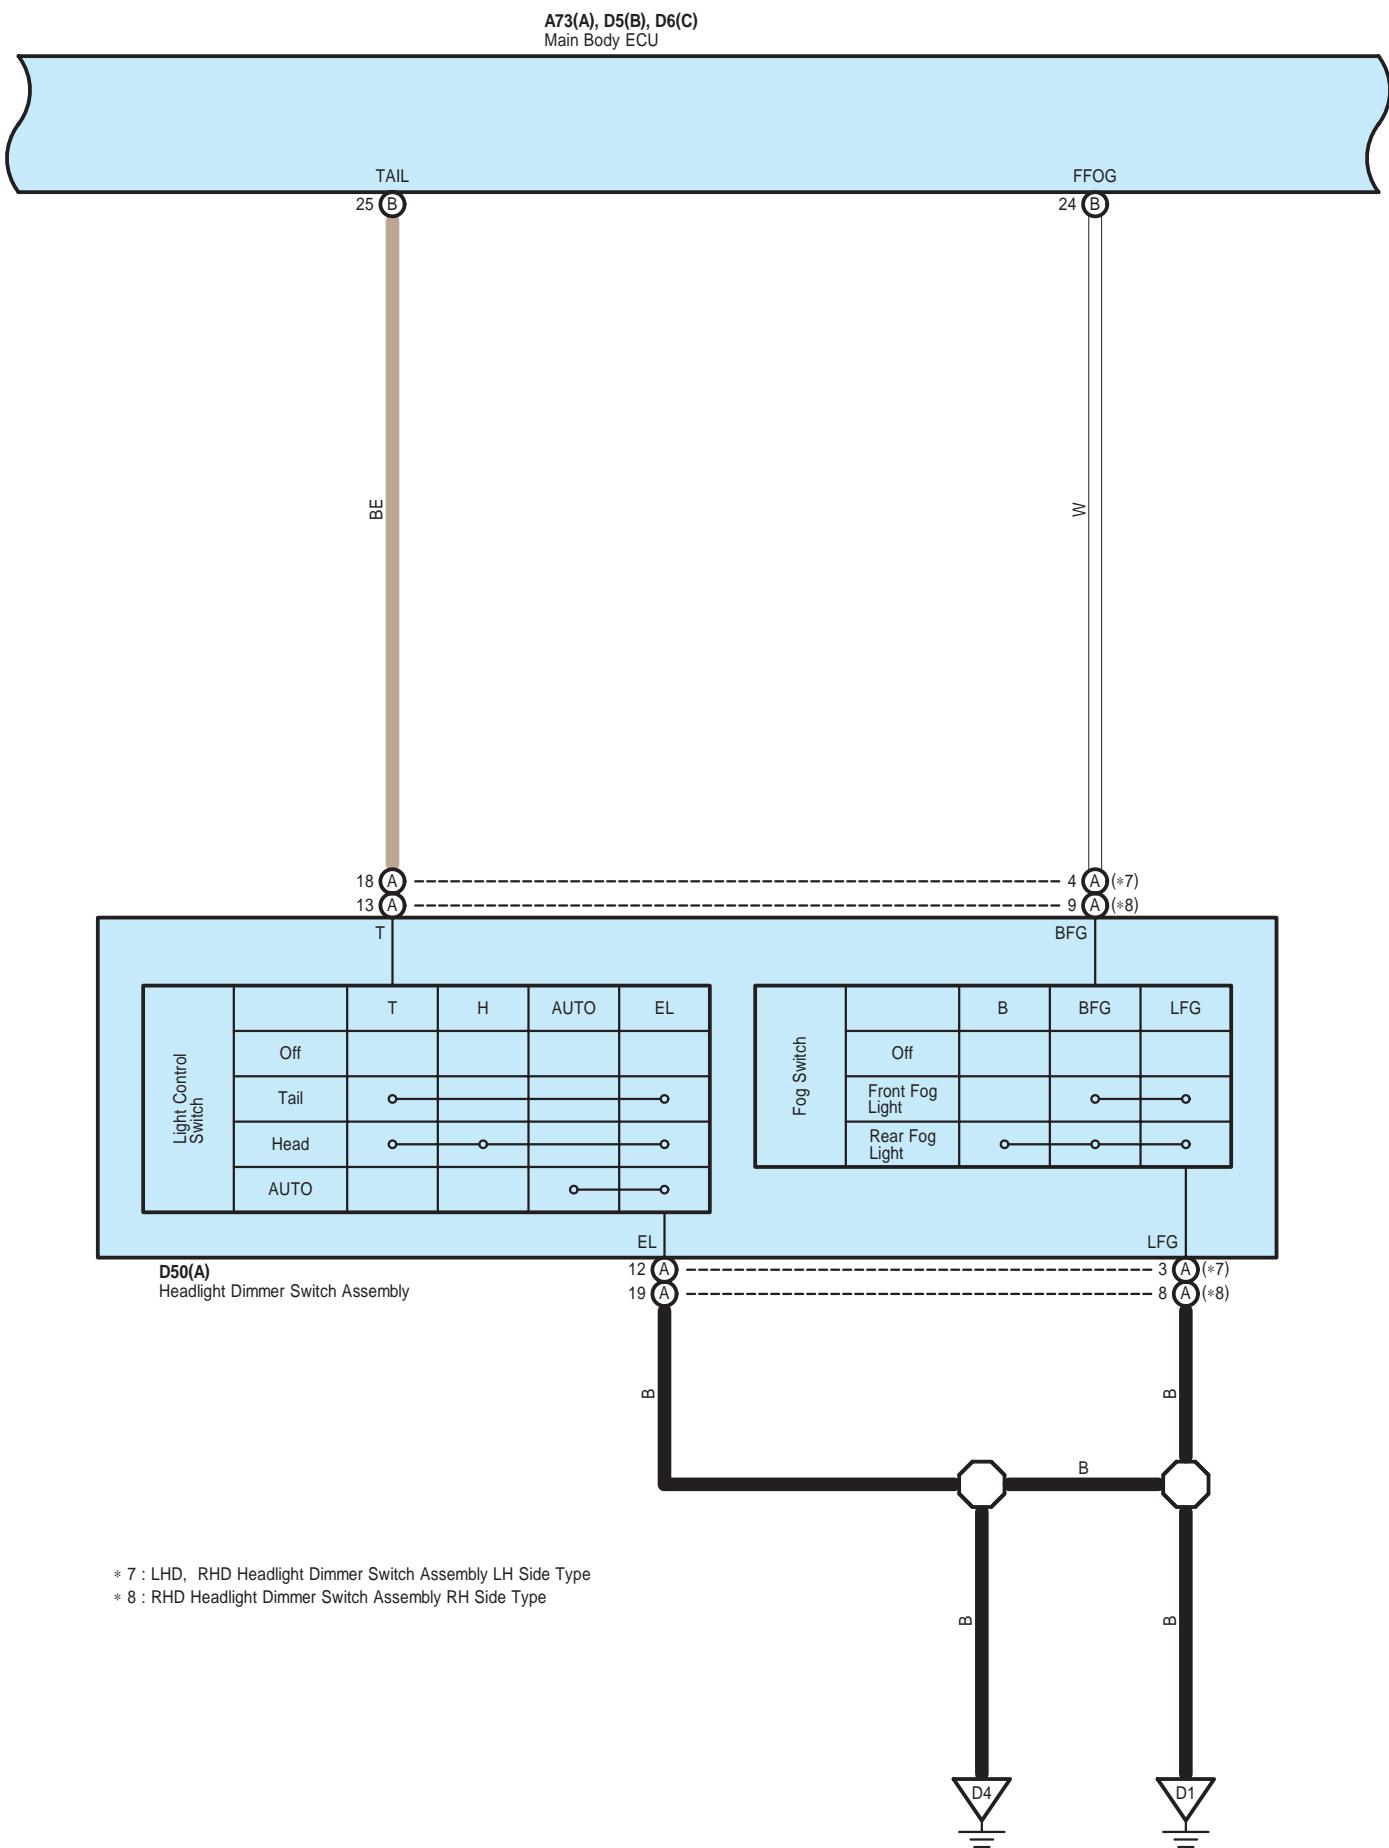


A73(A), D5(B), D6(C)
Main Body ECU

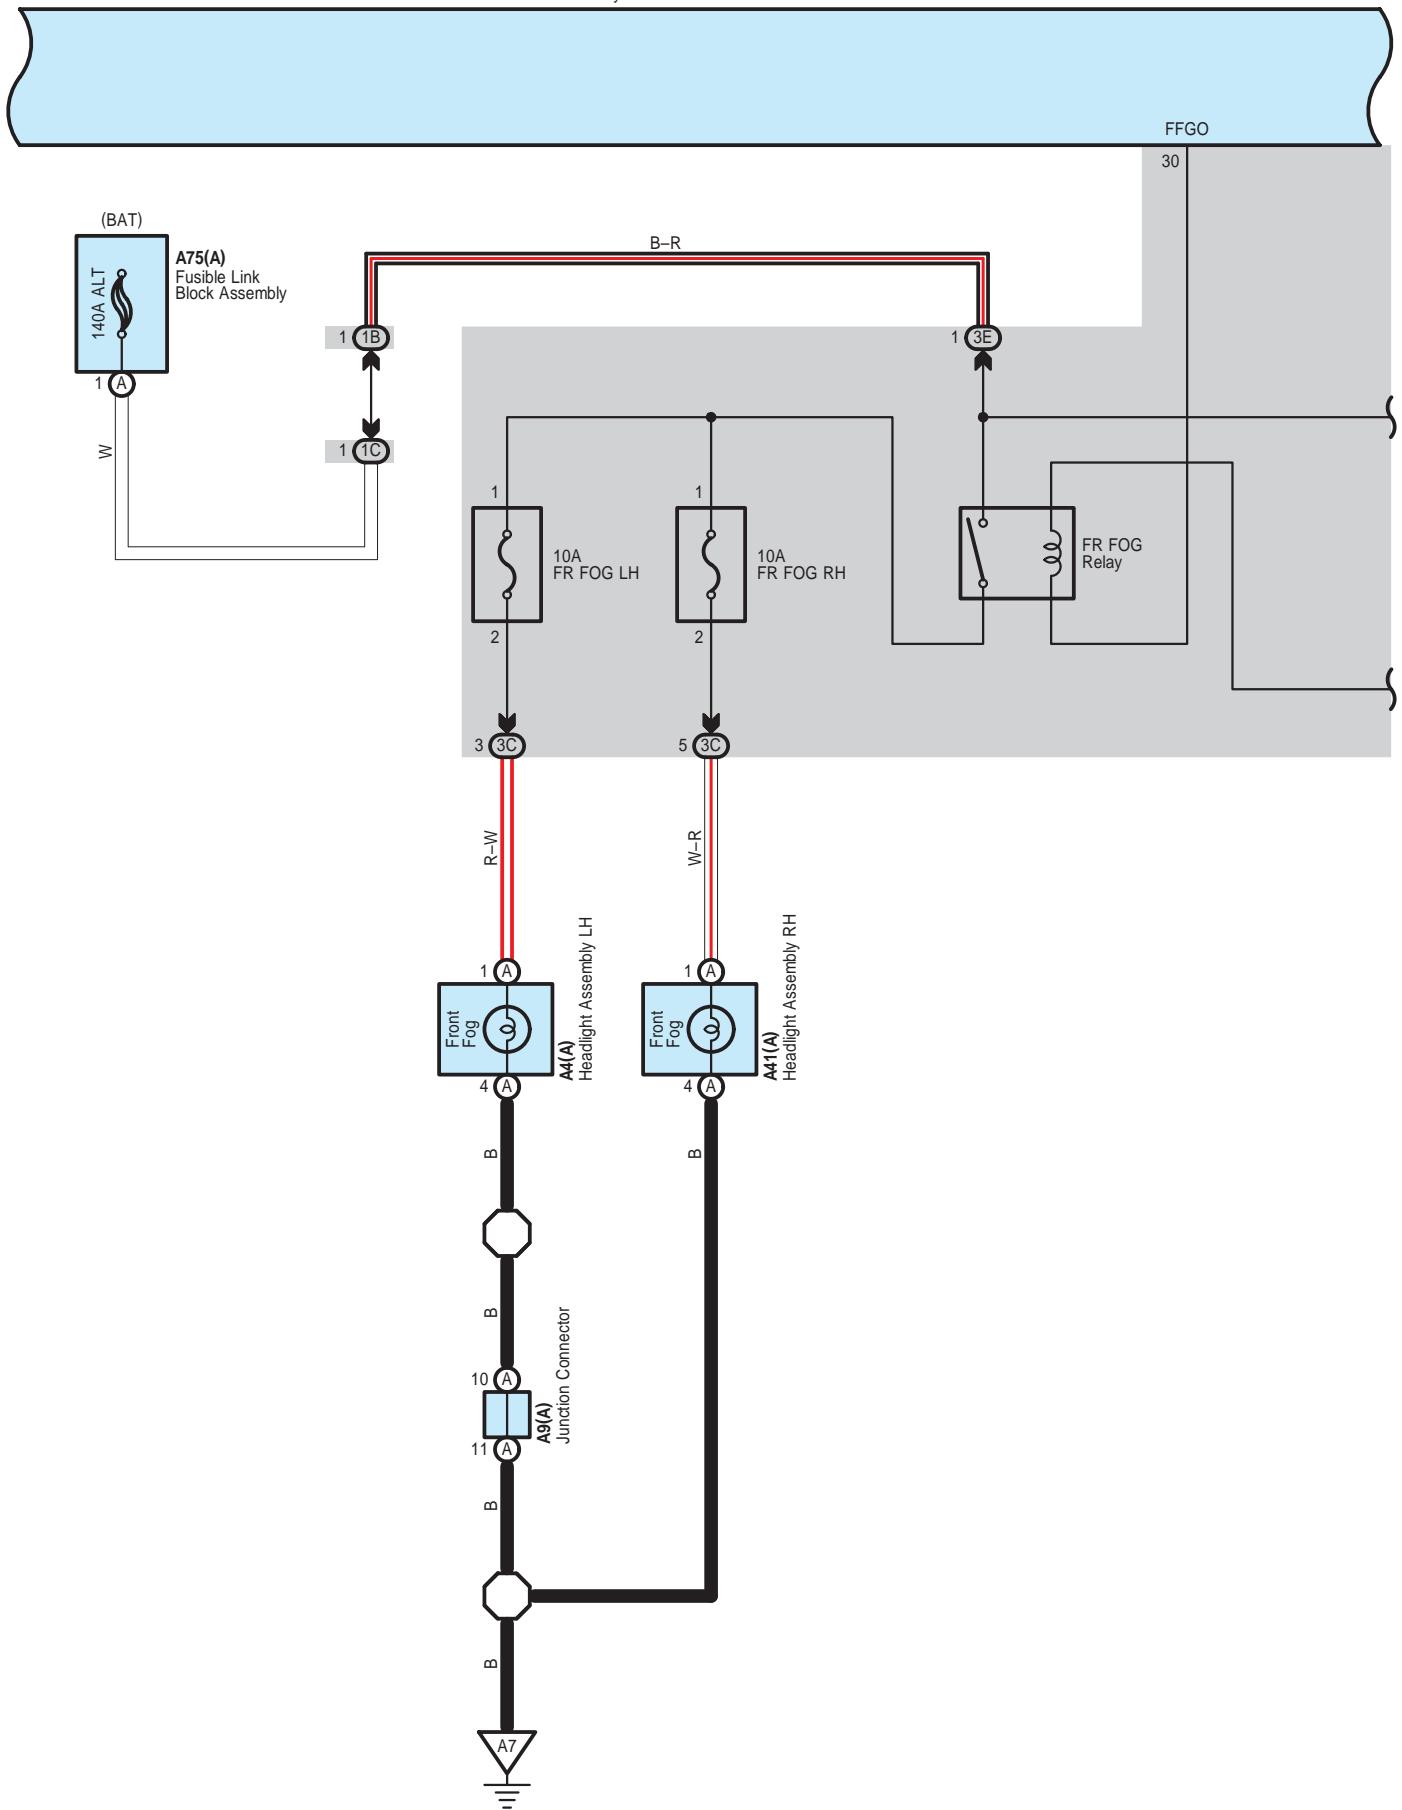

Front Fog Light

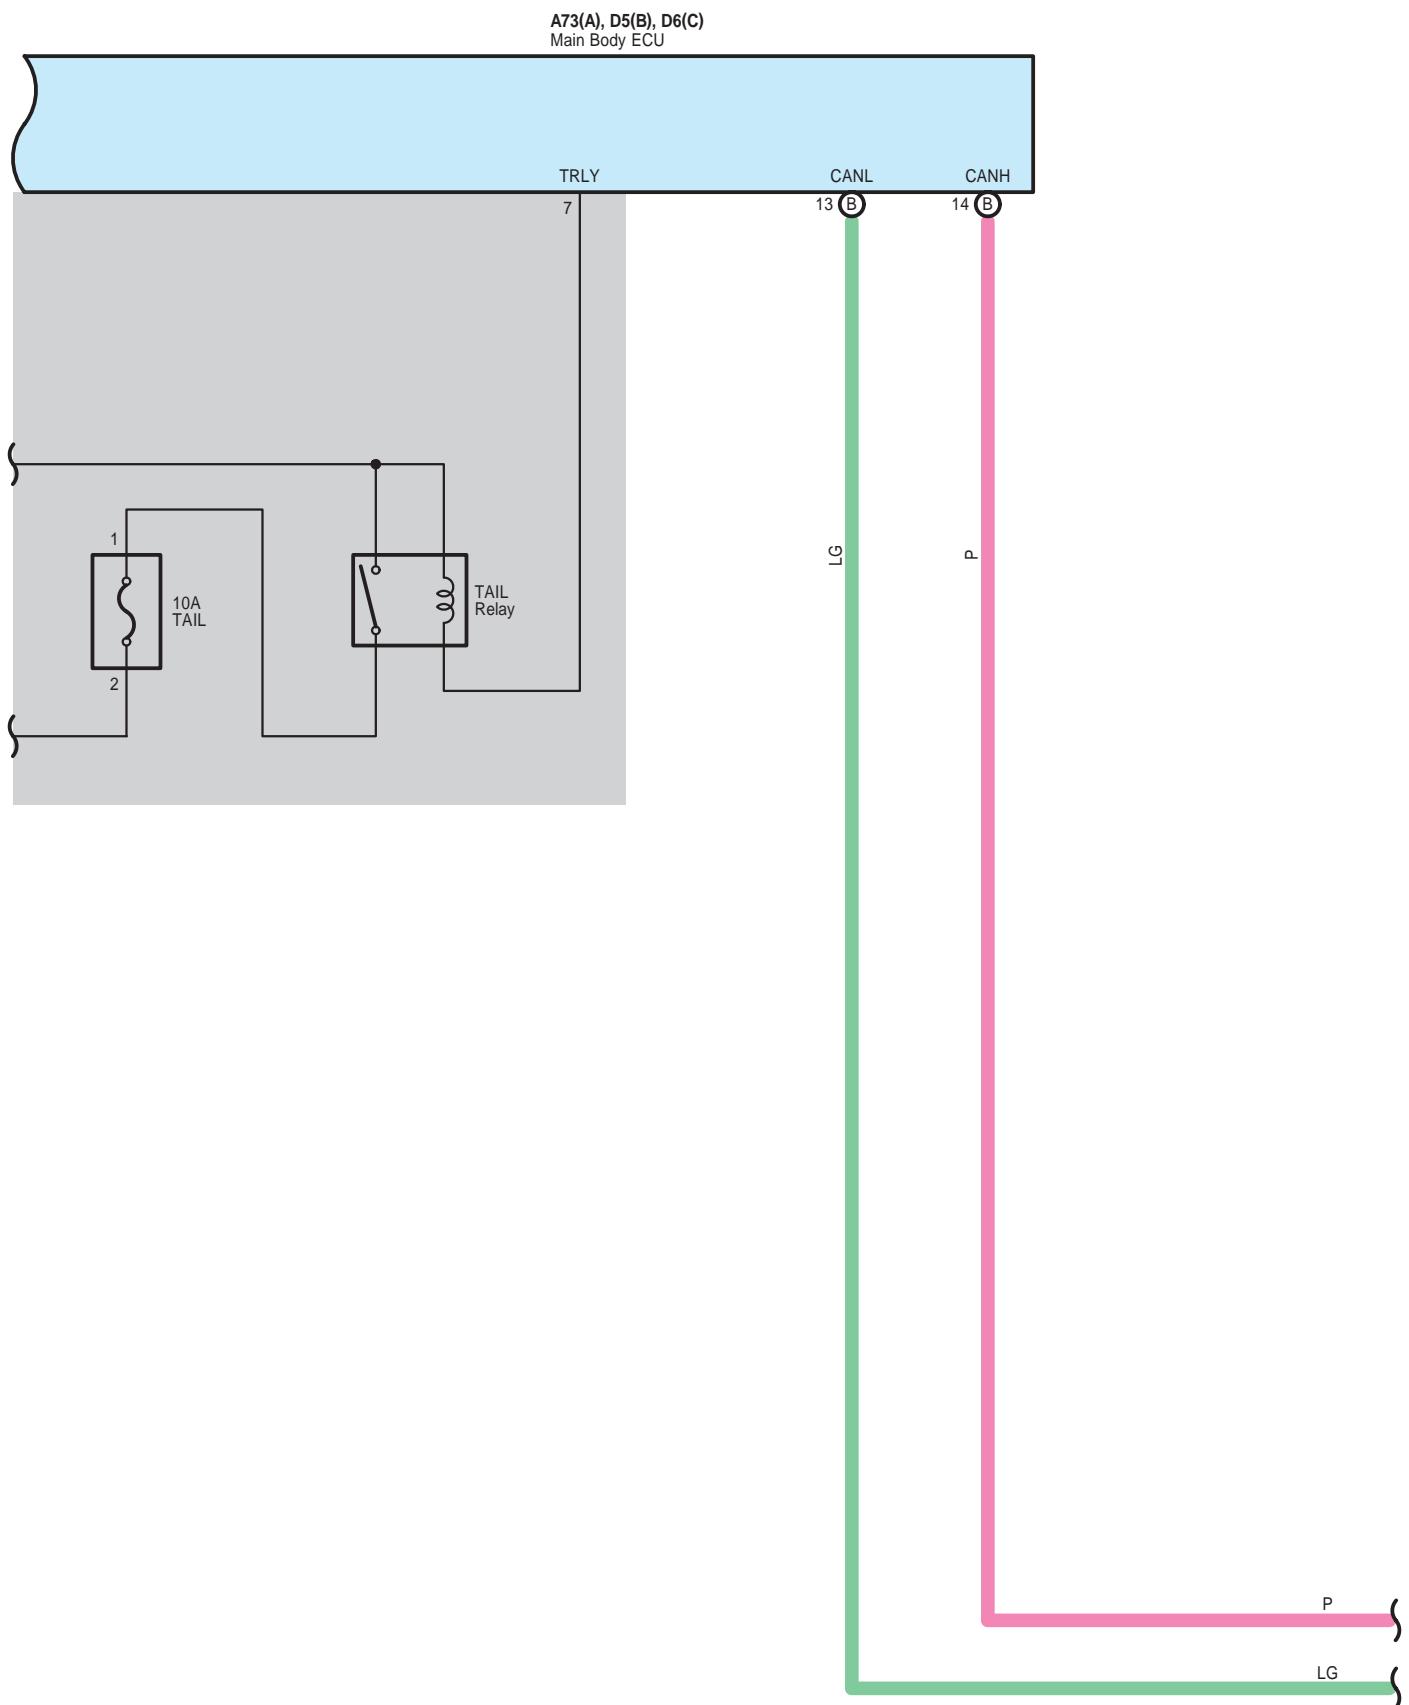

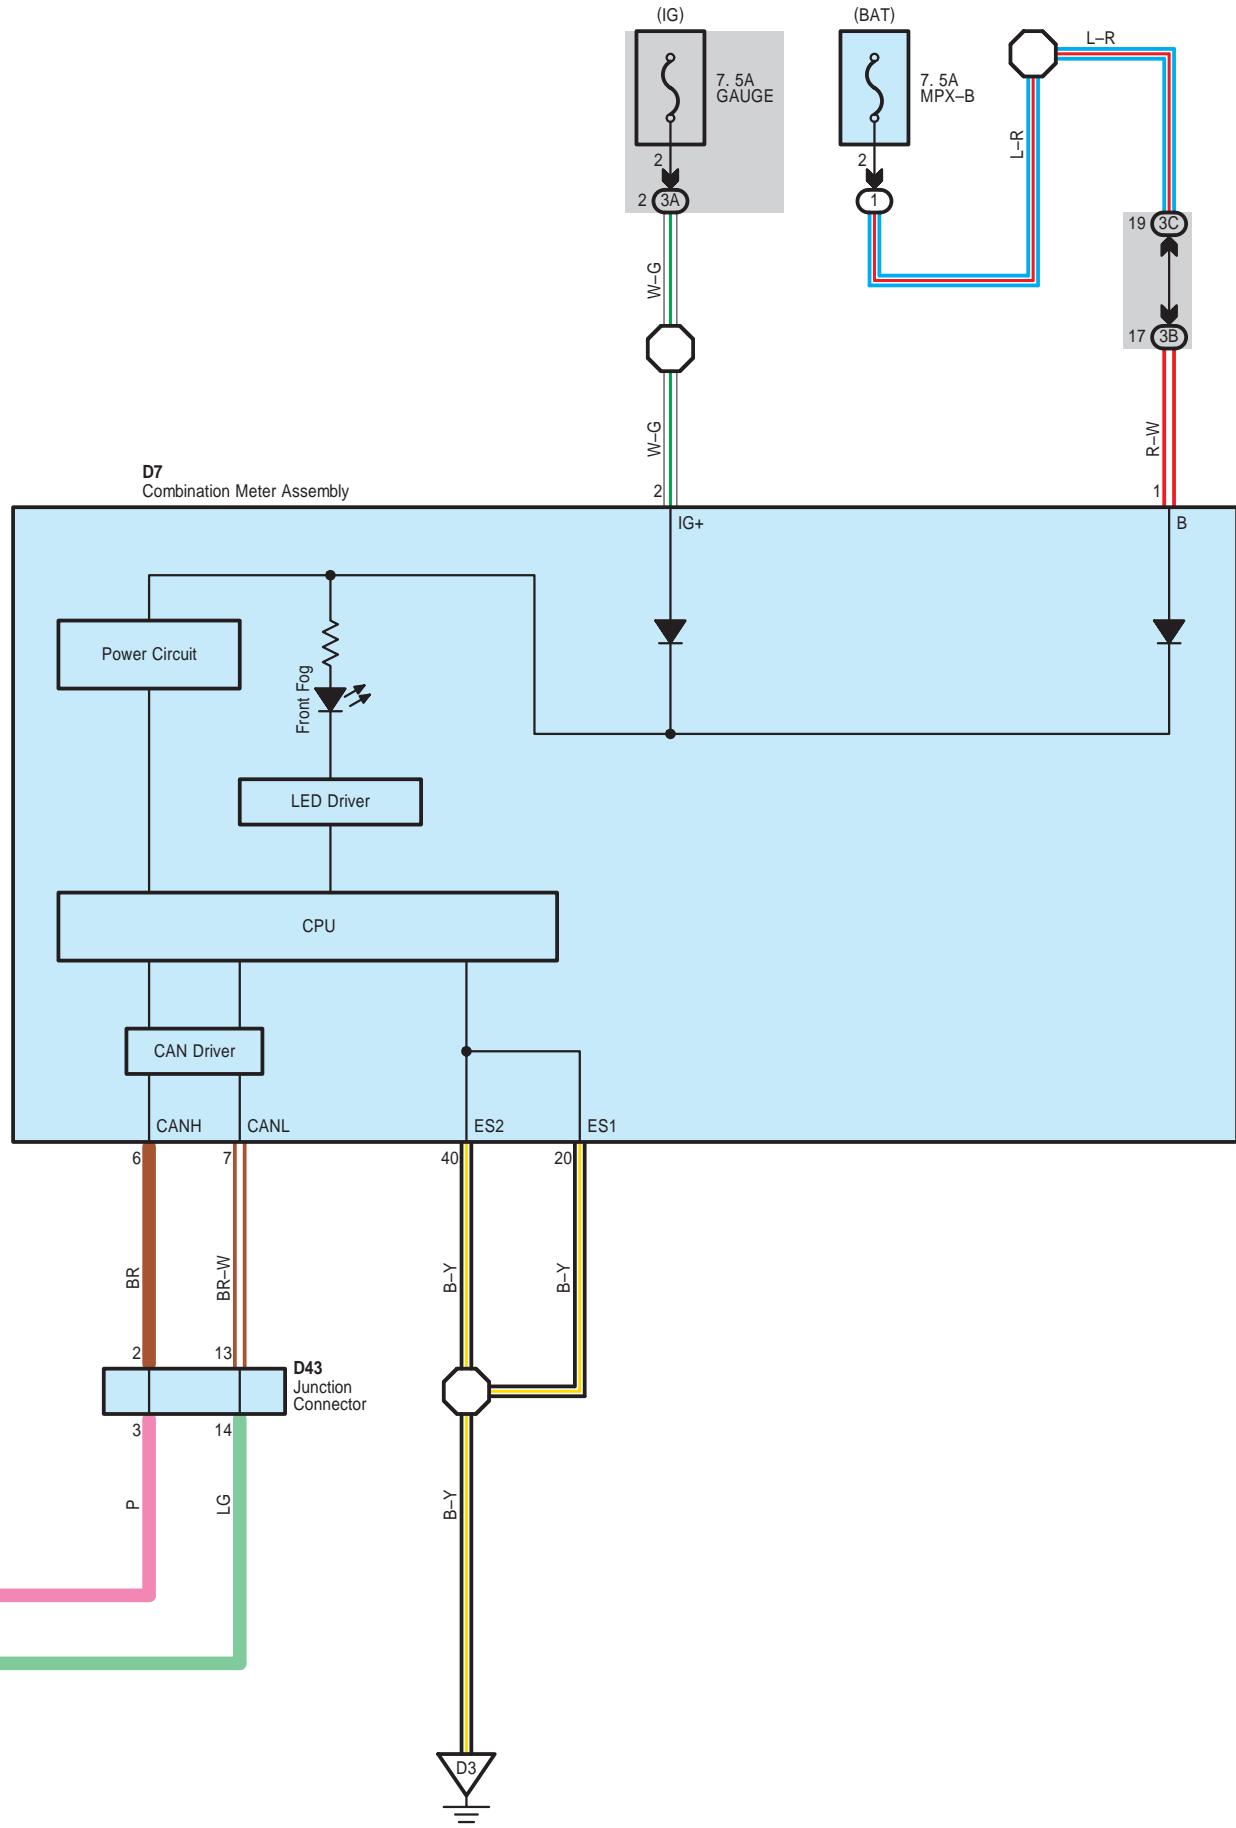

Front Fog Light

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page			
A4	A	39 (LHD)		D5	B	40 (LHD)		D16	A	40 (LHD)			
		47 (RHD)				48 (RHD)				48 (RHD)			
A9	A	42 (LHD)		D6	C	40 (LHD)		D17	B	40 (LHD)			
		50 (RHD)				48 (RHD)				48 (RHD)			
A41	A	39 (LHD)		D7		40 (LHD)		D43		41 (LHD)			
		47 (RHD)				48 (RHD)				49 (RHD)			
A73	A	42 (LHD)		D8	A	40 (LHD)		D50	A	41 (LHD)			
		50 (RHD)				48 (RHD)				49 (RHD)			
A75	A	39 (LHD)		D9	B	40 (LHD)							
		47 (RHD)				48 (RHD)							

□ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B		
1C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3A		
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C		
3E	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

▽ : Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
A7	54 (LHD)	
	58 (RHD)	Front Fender Apron RH
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH

Rear Fog Light

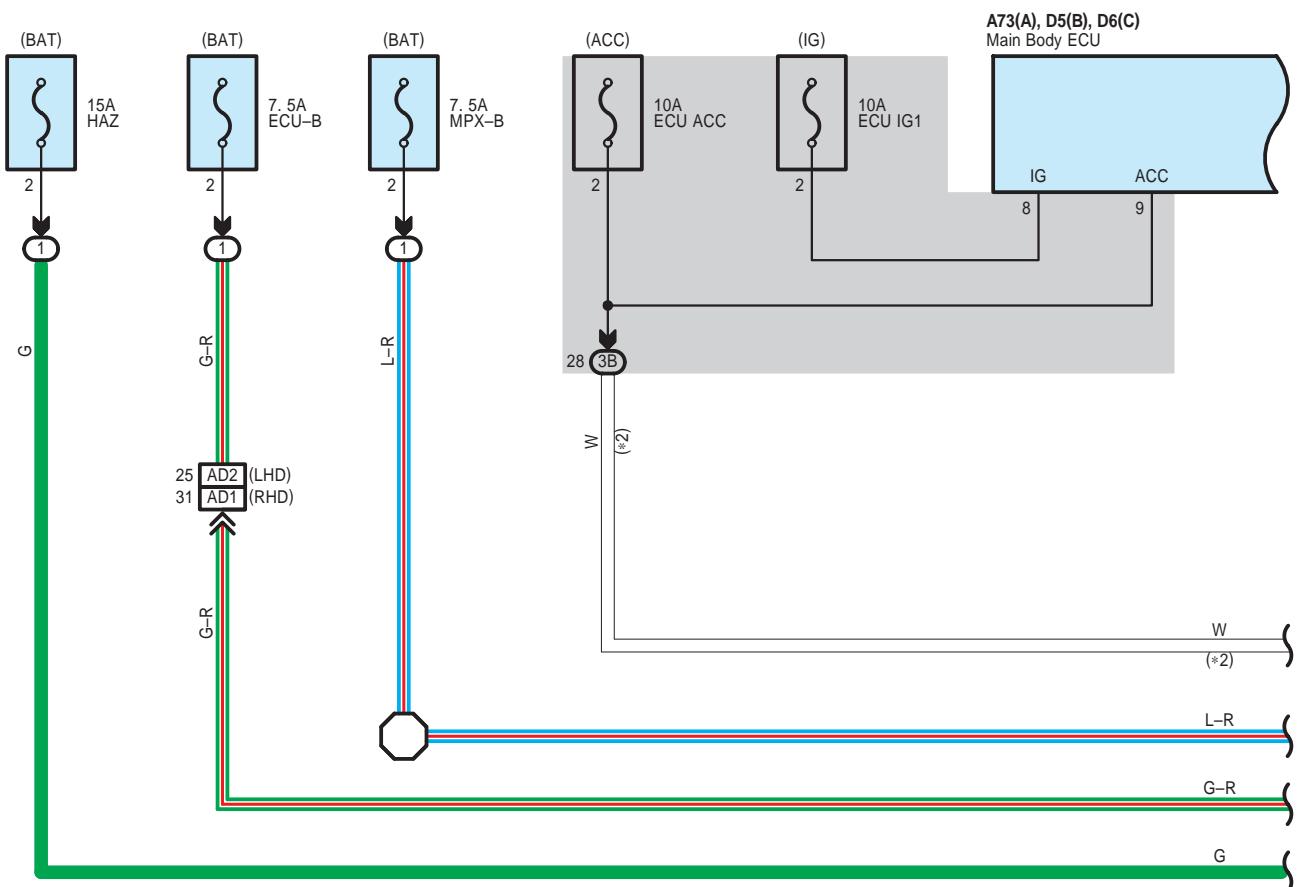



* 2 : w/ Entry & Start System

A73(A), D5(B), D6(C)
Main Body ECU

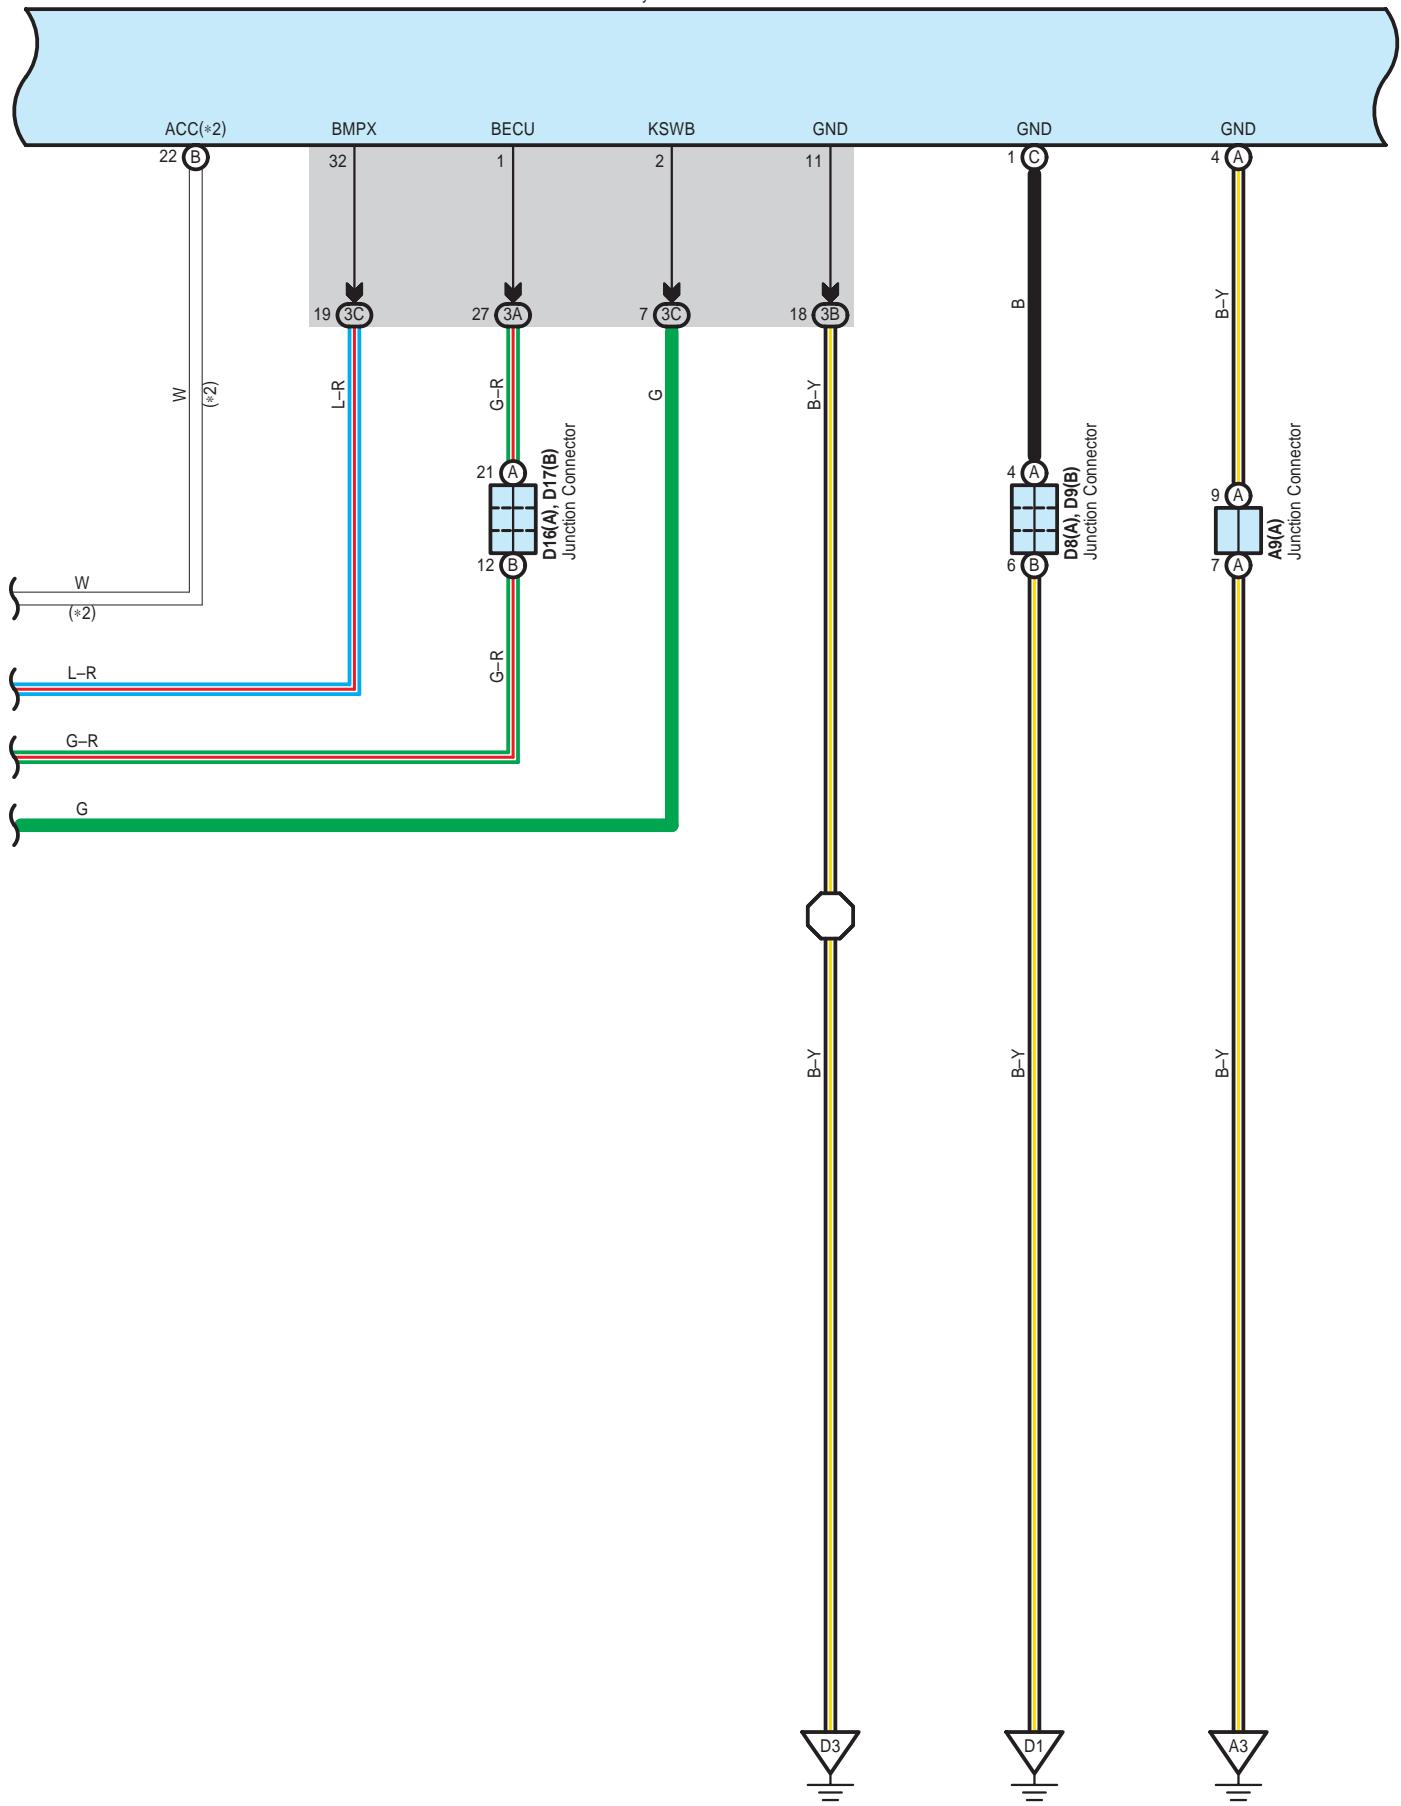


Rear Fog Light

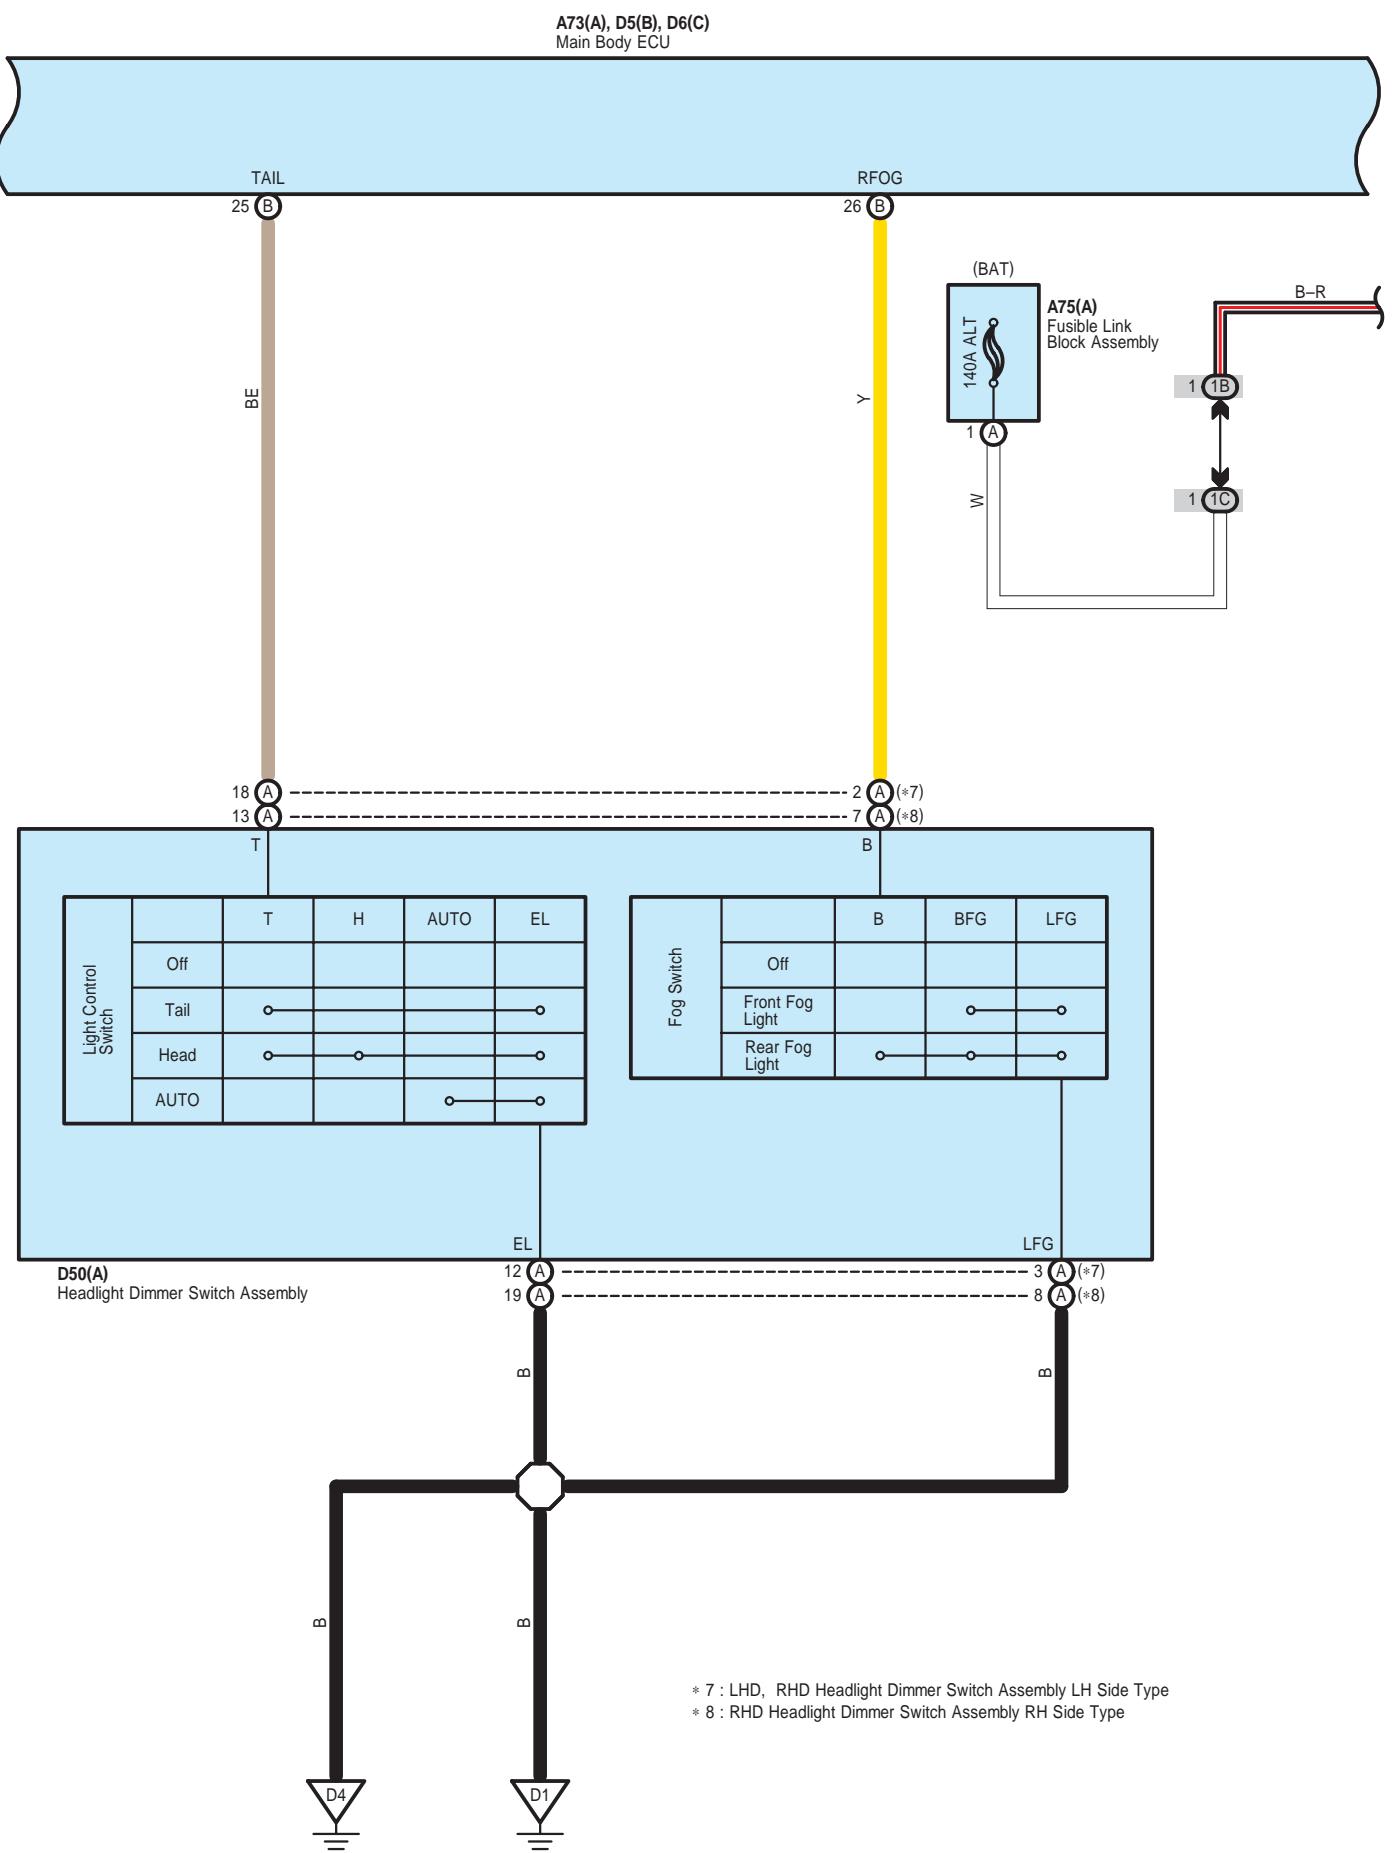

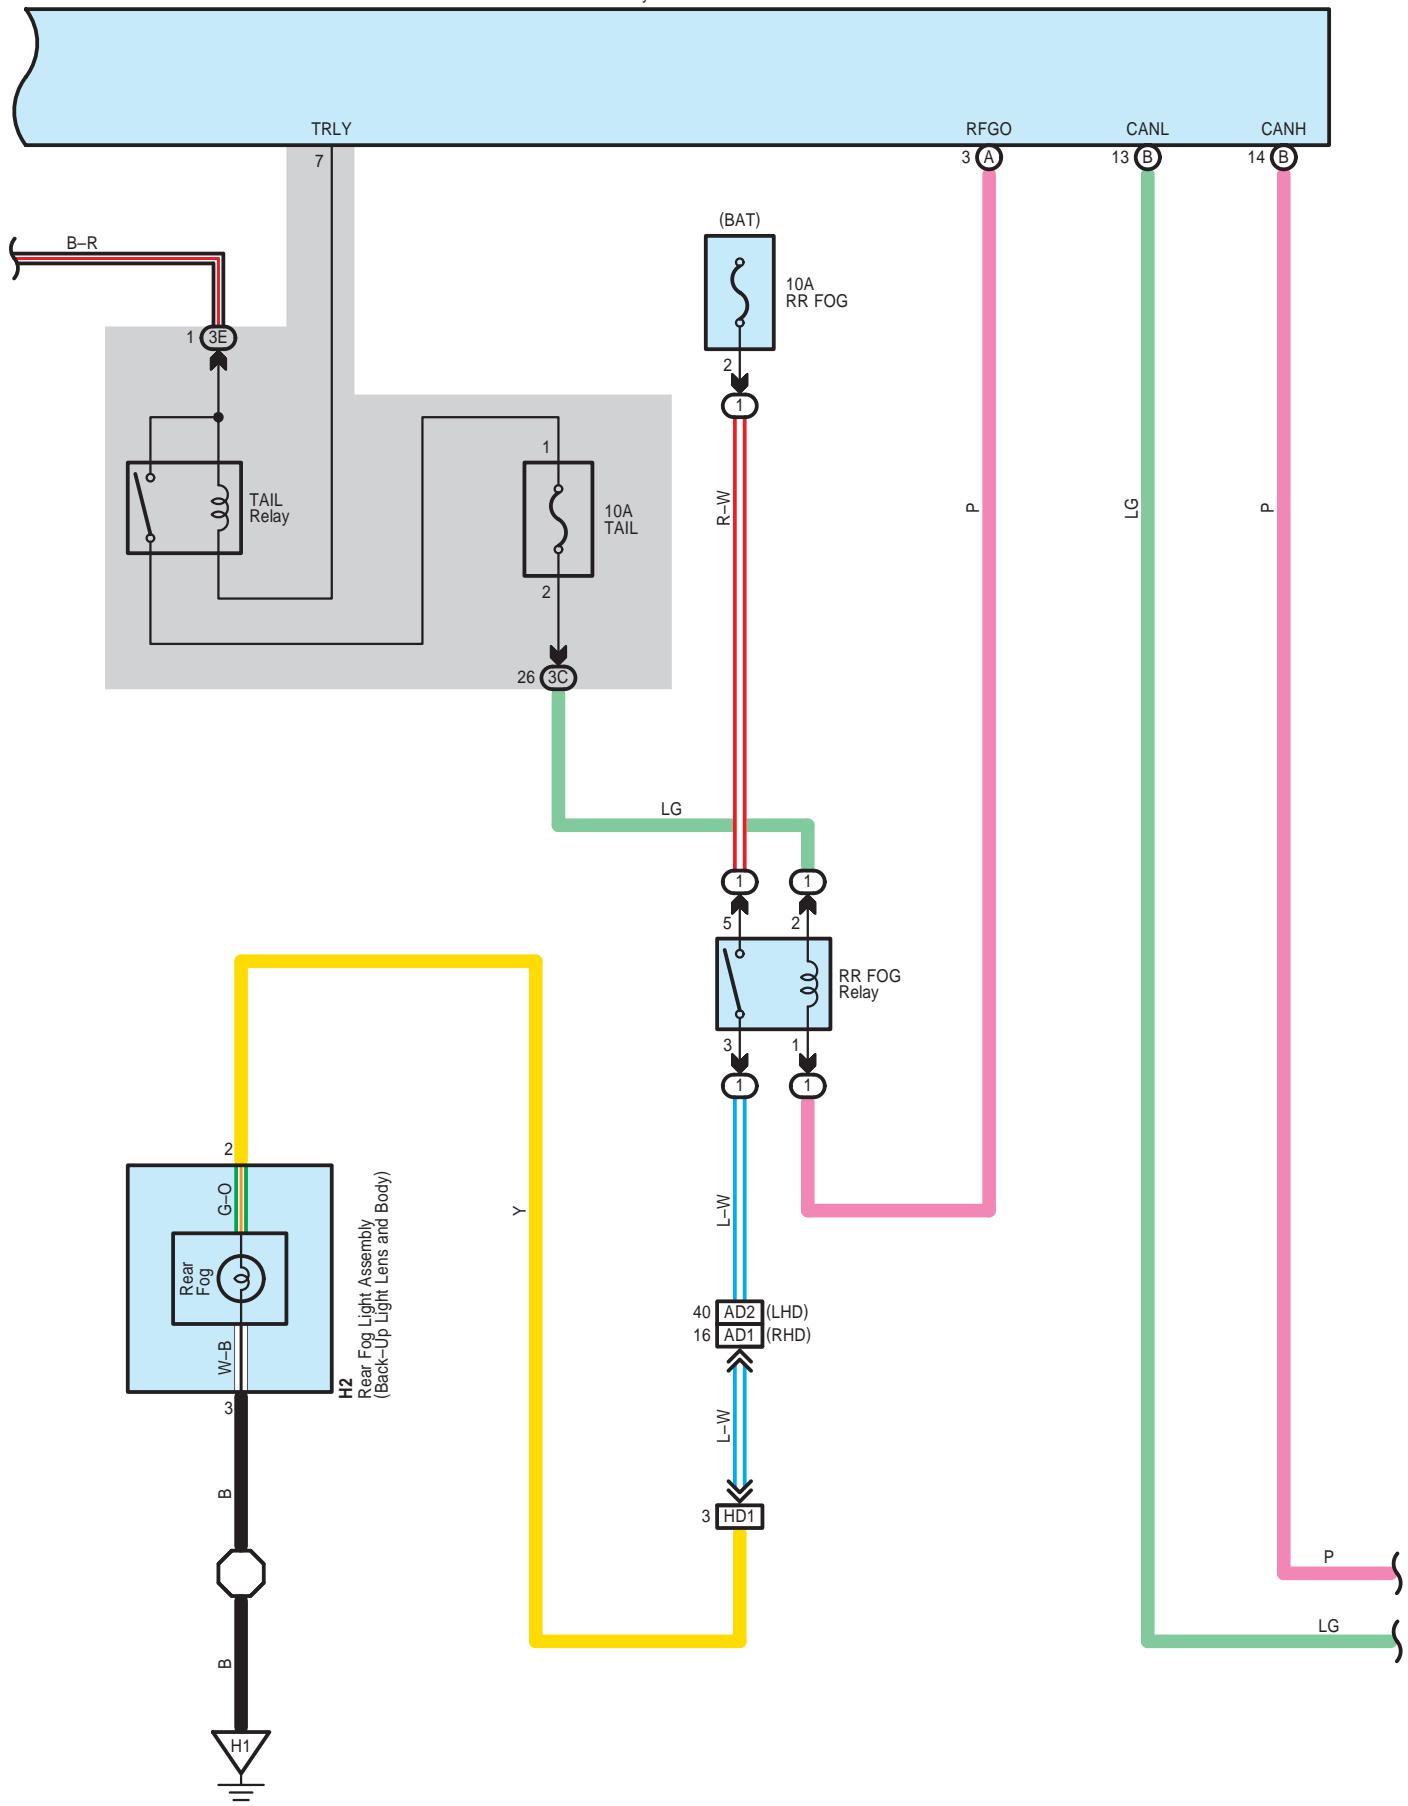

Rear Fog Light

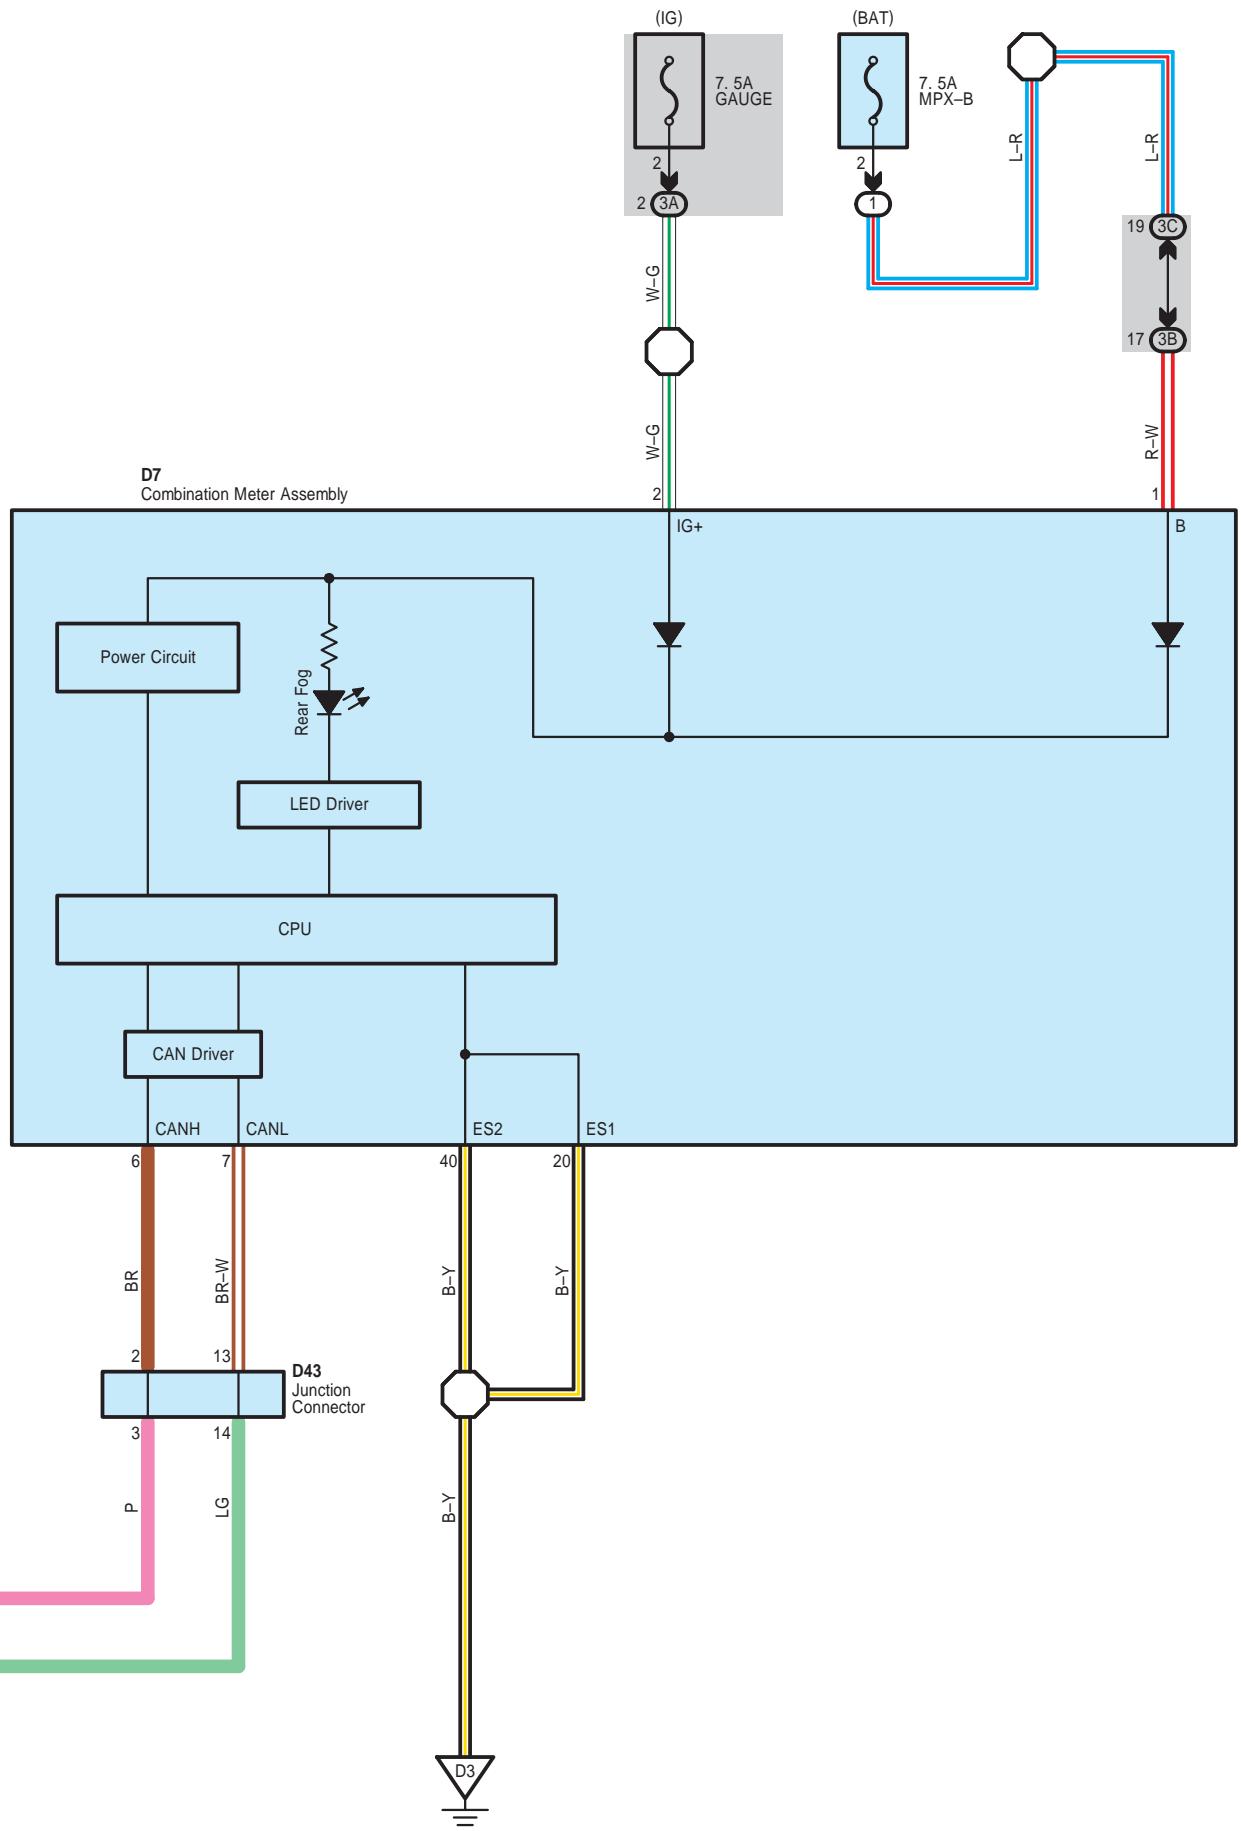

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	42 (LHD)	D6	C	48 (RHD)	D17	B	40 (LHD)
		50 (RHD)			40 (LHD)			48 (RHD)
A73	A	42 (LHD)	D7		48 (RHD)	D43		41 (LHD)
		50 (RHD)			40 (LHD)			49 (RHD)
A75	A	39 (LHD)	D8	A	48 (RHD)	D50	A	41 (LHD)
		47 (RHD)			40 (LHD)			49 (RHD)
D5	B	40 (LHD)	D9	B	48 (RHD)	H2		45 (LHD)
		48 (RHD)			40 (LHD)			53 (RHD)
D6	C	40 (LHD)	D16	A	48 (RHD)			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
1C		
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B		
3C	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3E		


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	


 : Ground Points

Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
H1	56 (LHD)	Lower Back Panel
	60 (RHD)	

Automatic Light Control and Light Auto Turn Off System

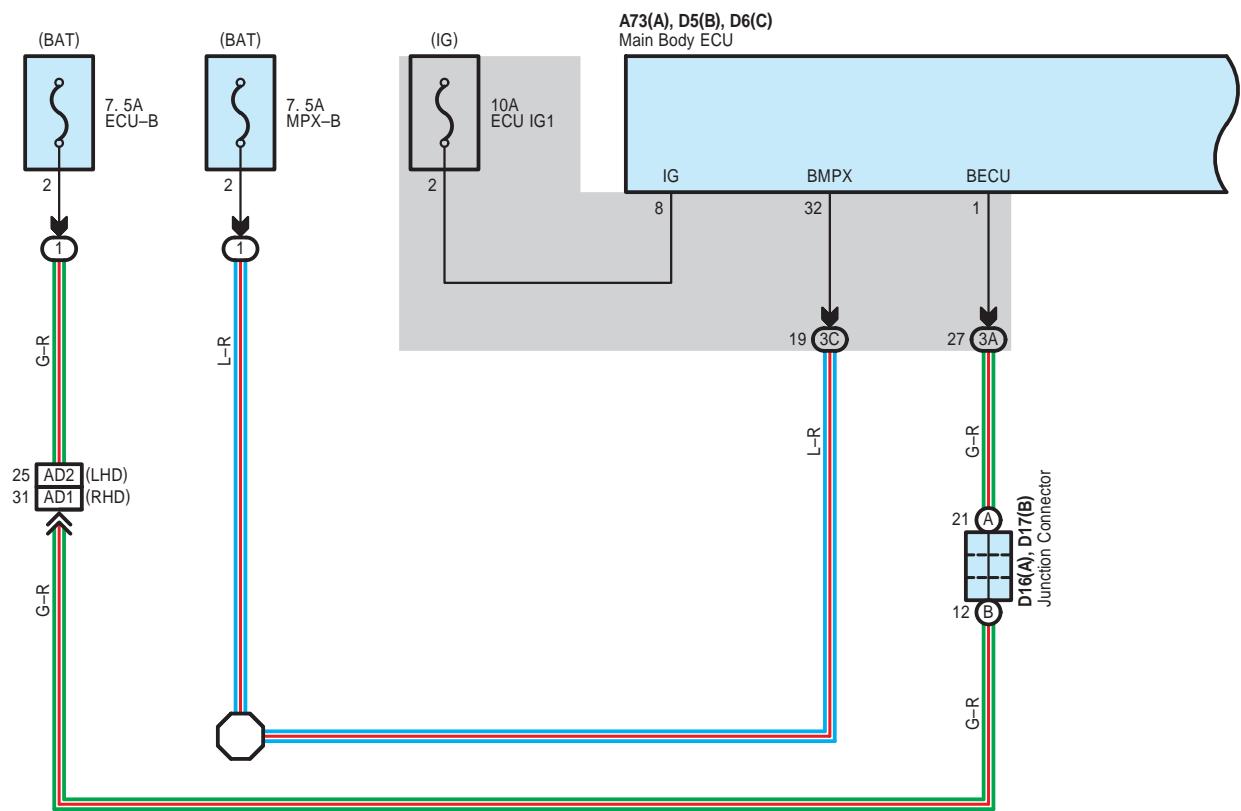


A73(A), D5(B), D6(C)
Main Body ECU

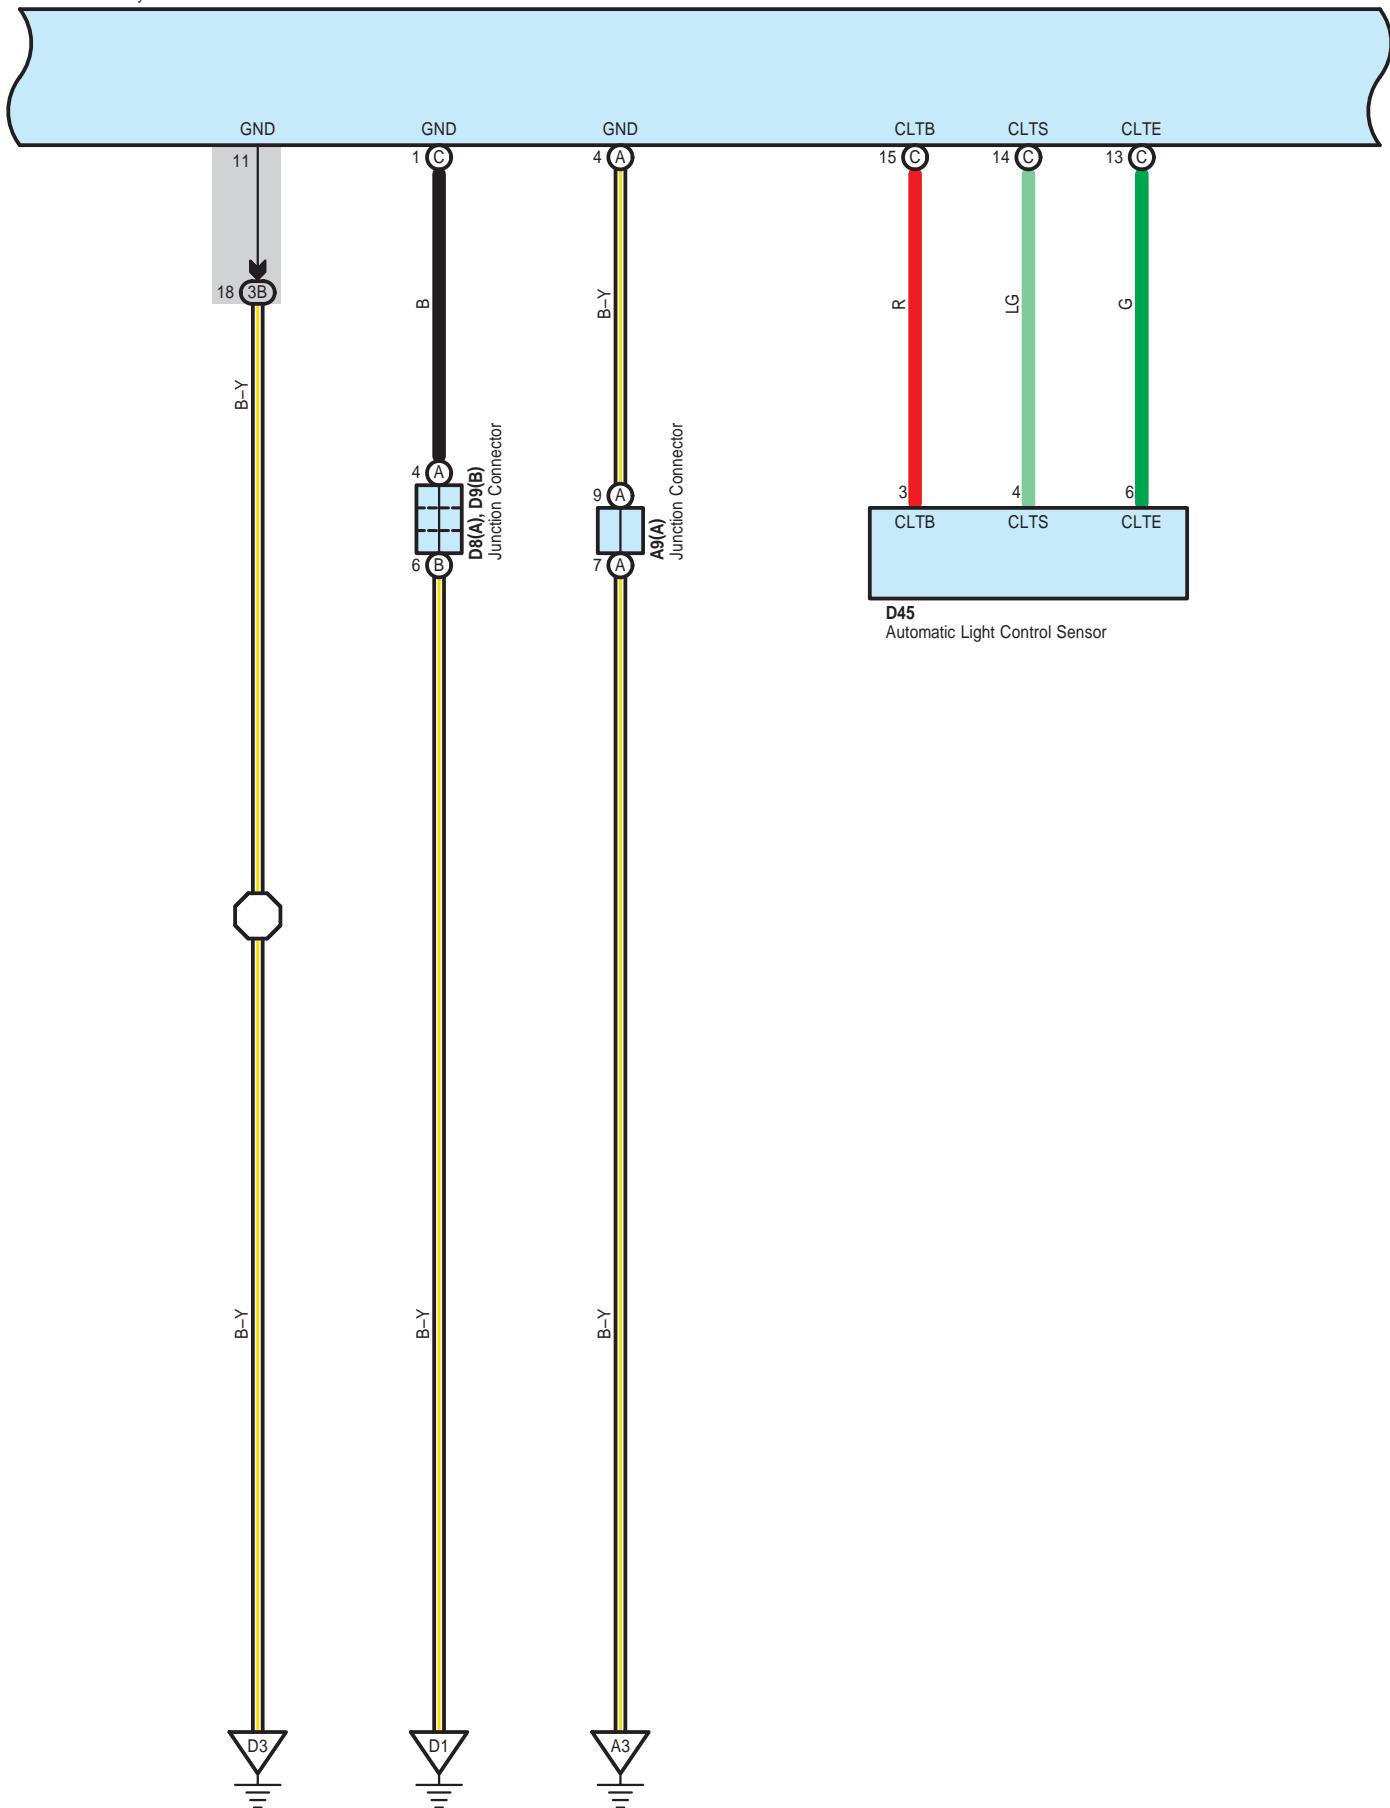


Automatic Light Control and Light Auto Turn Off System


A73(A), D5(B), D6(C)
Main Body ECU

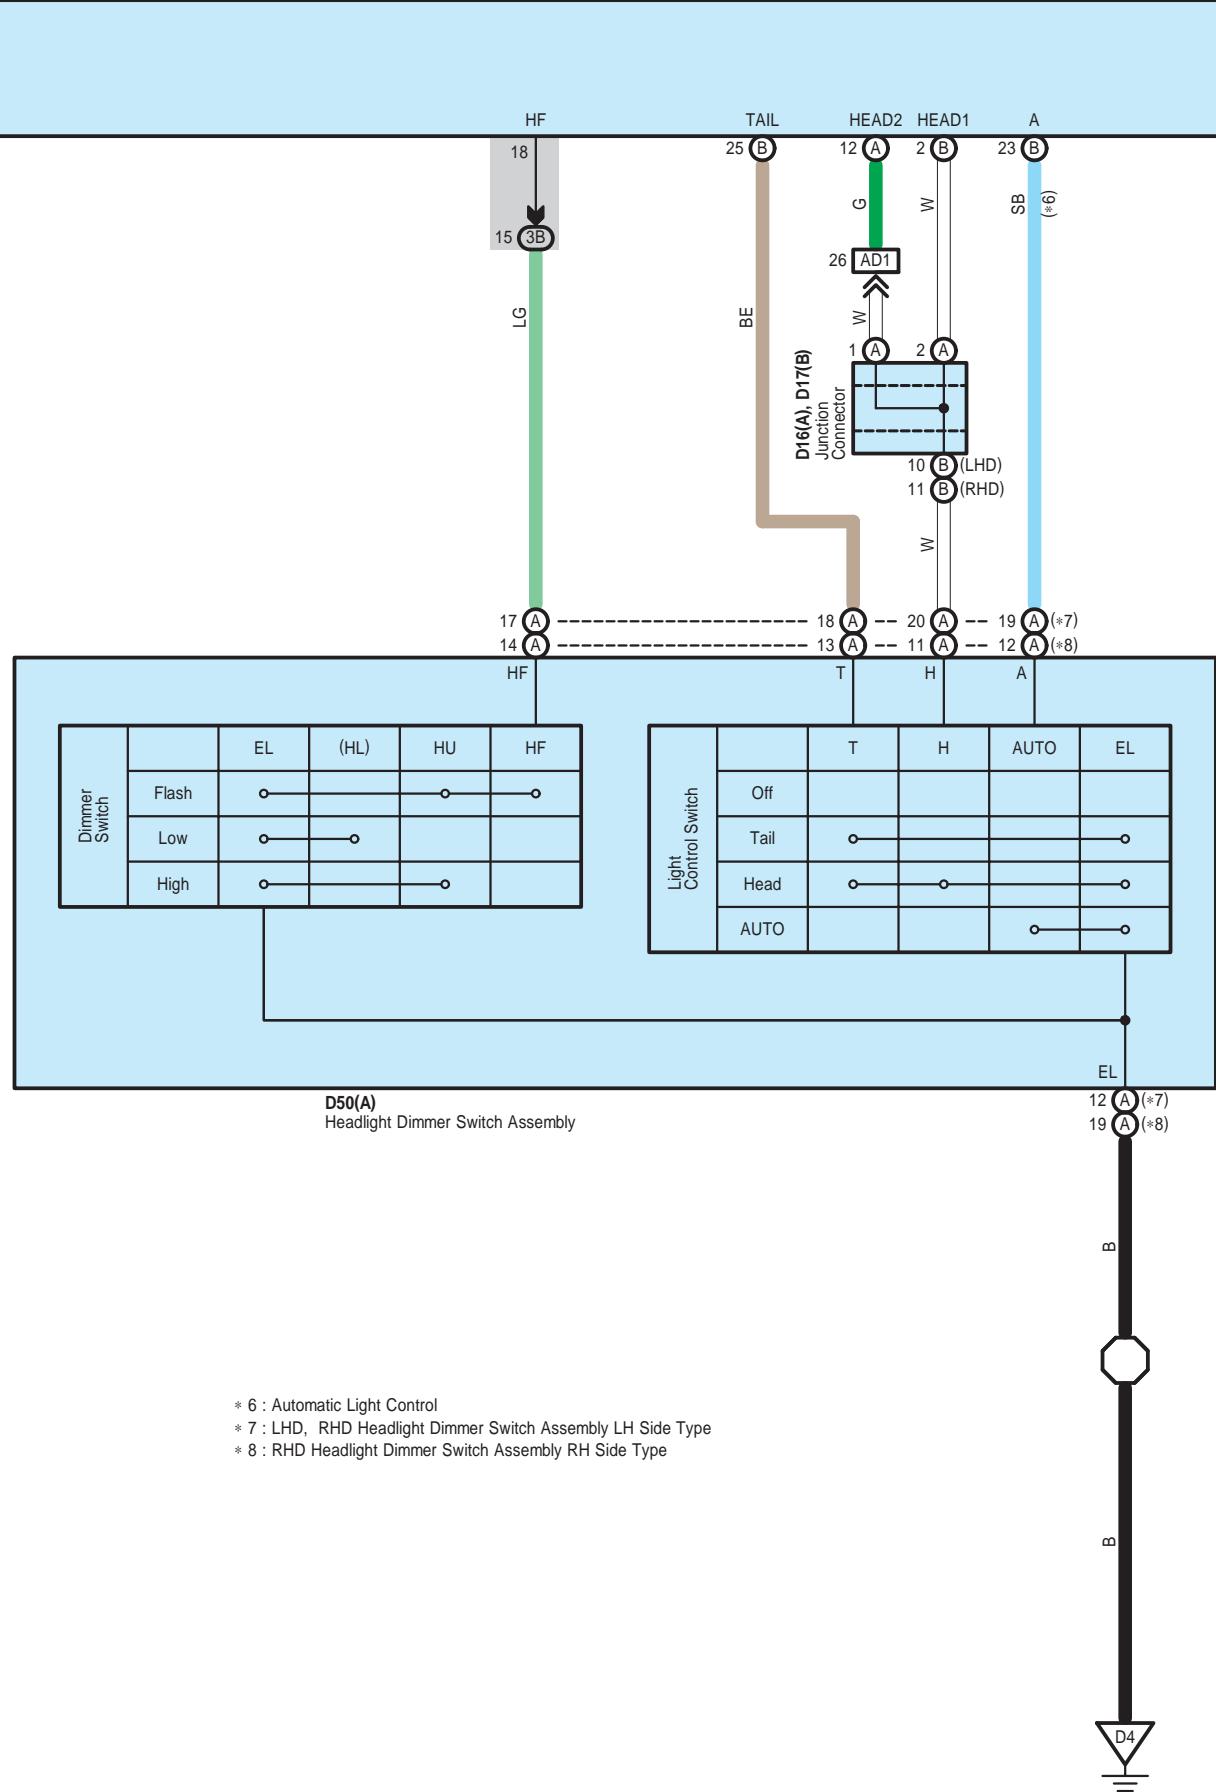

A73(A), D5(B), D6(C)
Main Body ECU

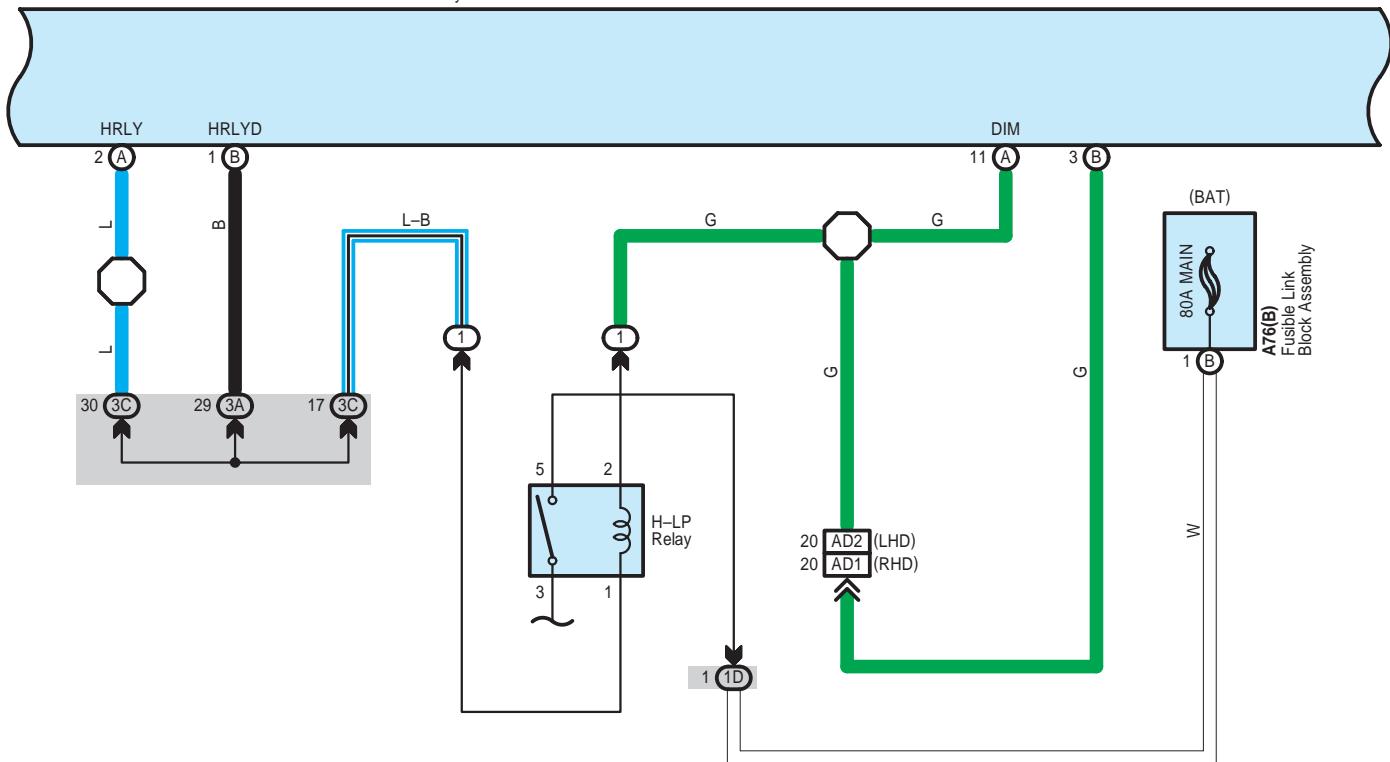

Automatic Light Control and Light Auto Turn Off System

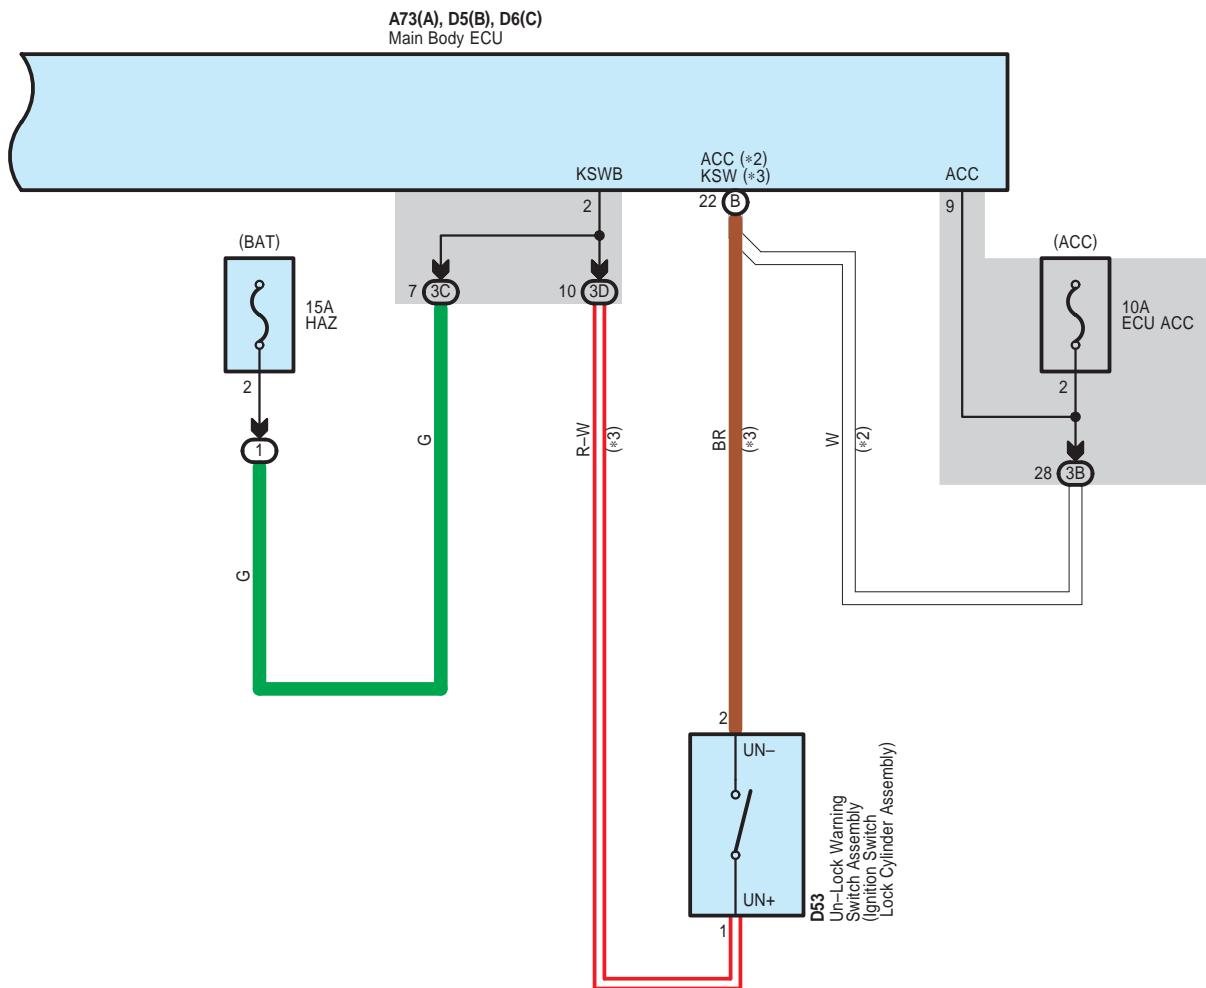

 : Parts Location

Code		See Page		Code		See Page		Code		See Page		
A9	A	42 (LHD)		D6	C	40 (LHD)		D17	B	40 (LHD)		
		50 (RHD)				48 (RHD)				48 (RHD)		
A73	A	42 (LHD)		D8	A	40 (LHD)		D45		41 (LHD)		
		50 (RHD)				48 (RHD)				49 (RHD)		
A76	B	39 (LHD)		D9	B	40 (LHD)		D50	A	41 (LHD)		
		47 (RHD)				48 (RHD)				49 (RHD)		
D5	B	40 (LHD)		D16	A	40 (LHD)		D53		41 (LHD)		
		48 (RHD)				48 (RHD)				49 (RHD)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B		
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

 : Ground Points

Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH

Headlight Beam Level Control

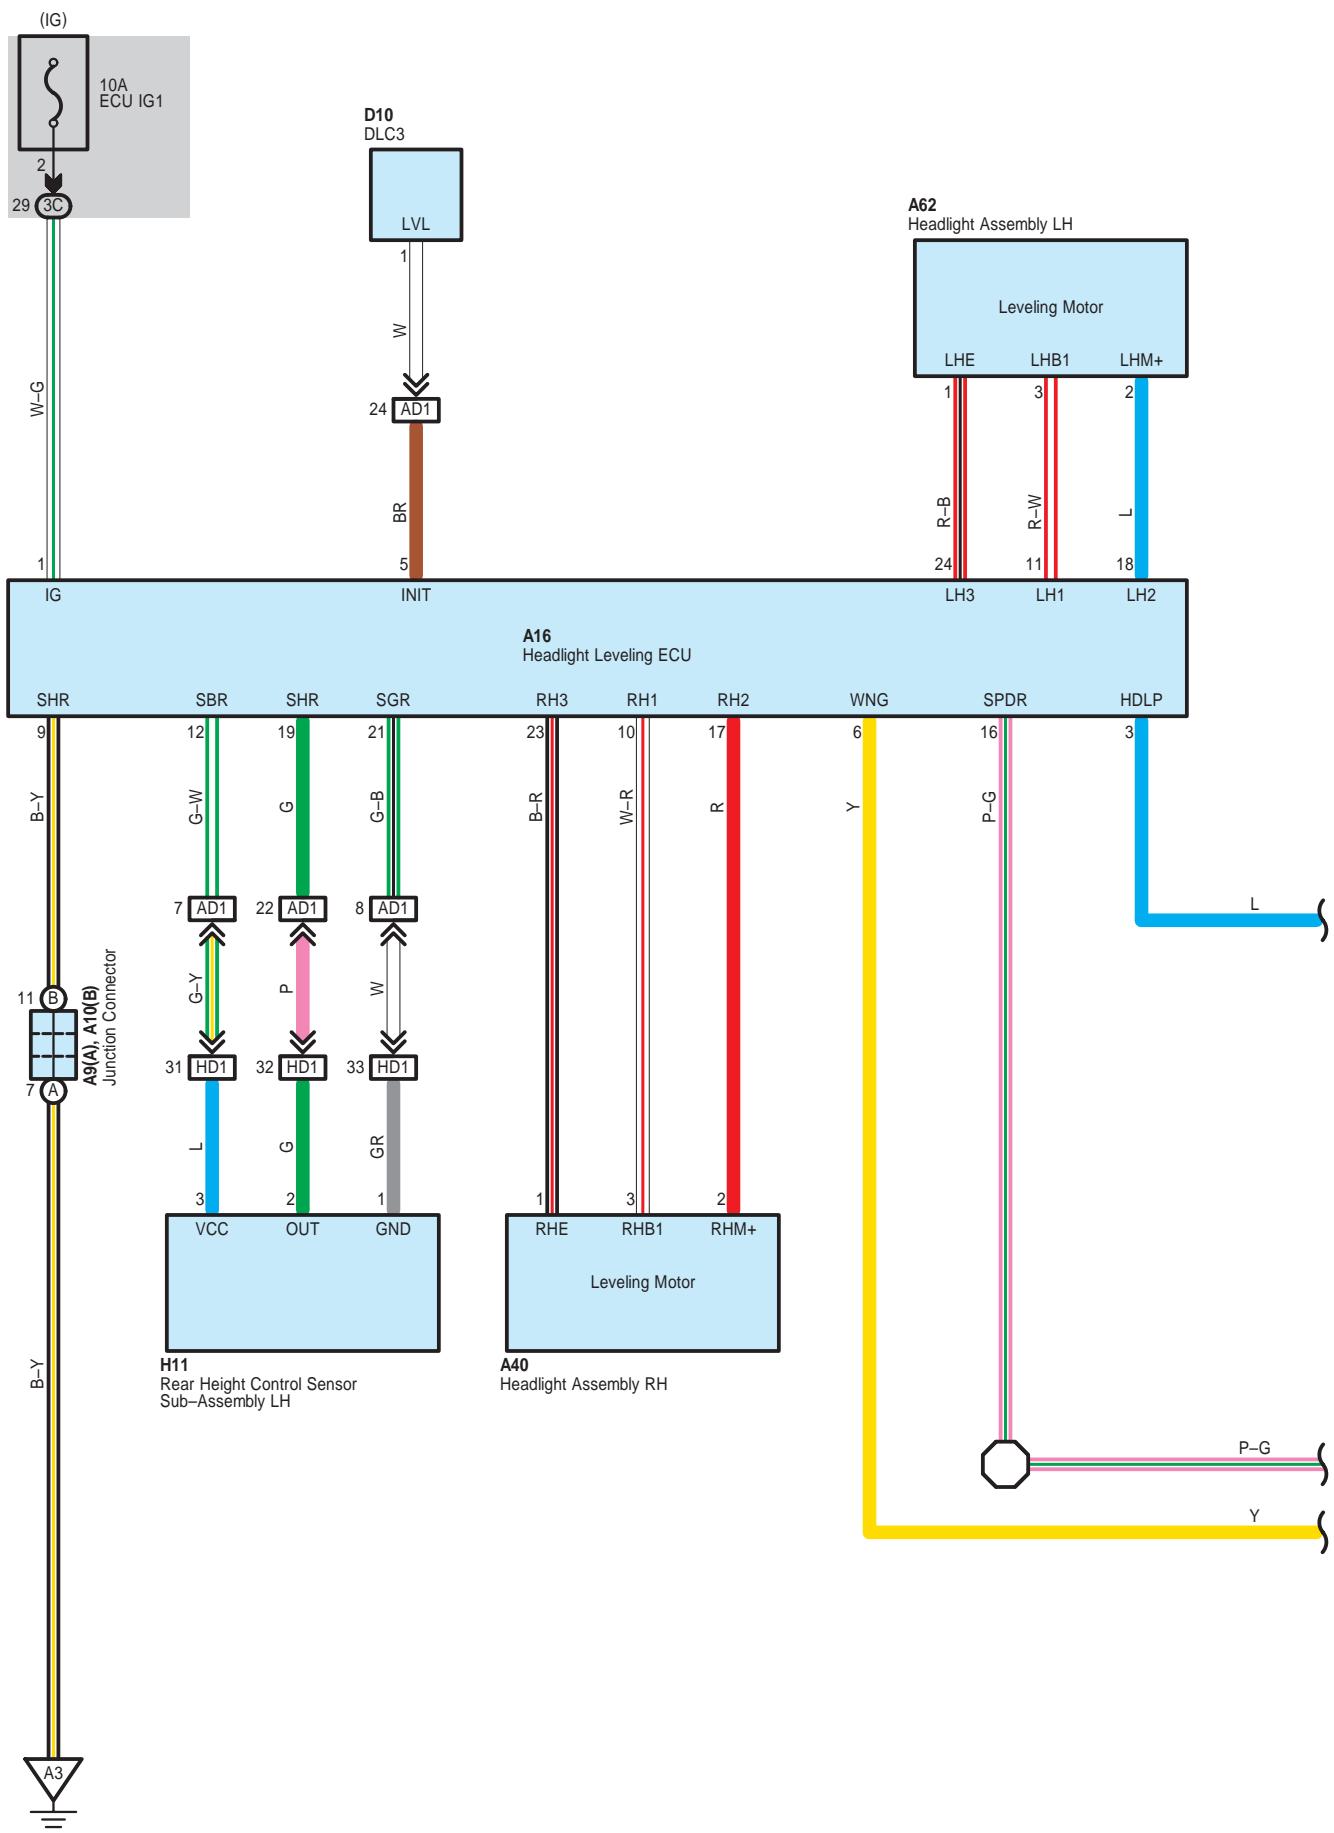


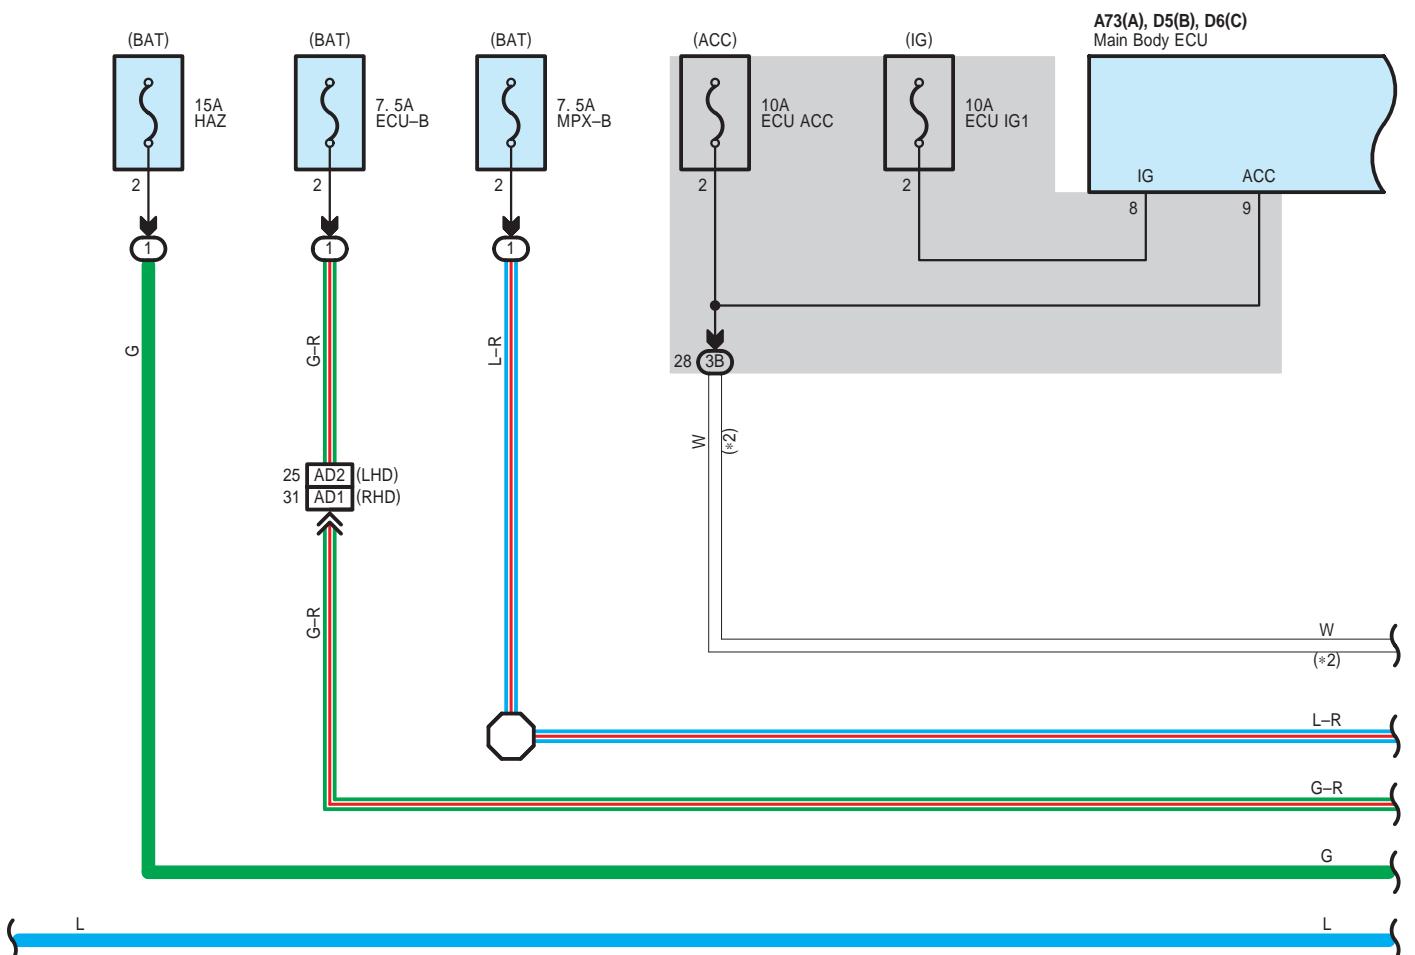


* 2 : w/ Entry & Start System



Headlight Beam Level Control

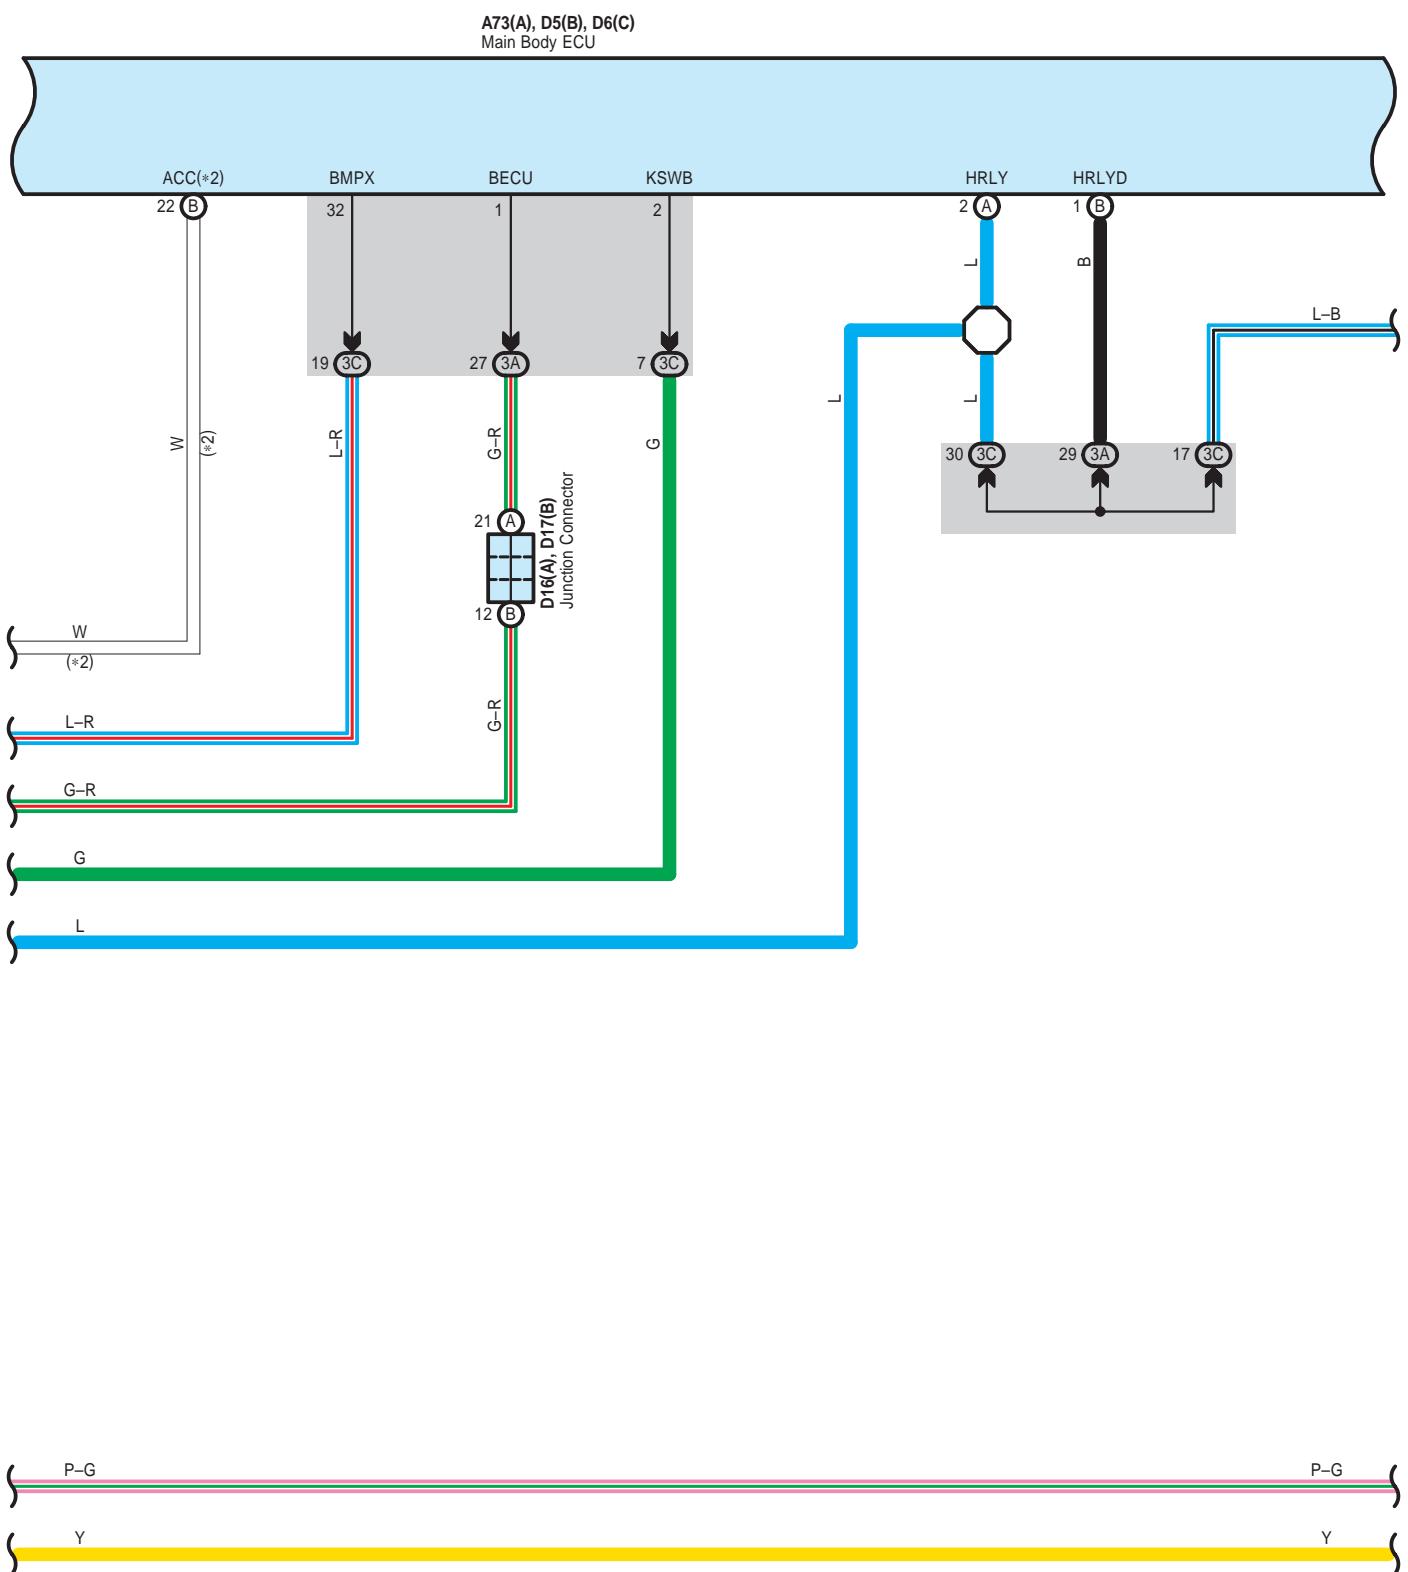


A73(A), D5(B), D6(C)
Main Body ECU

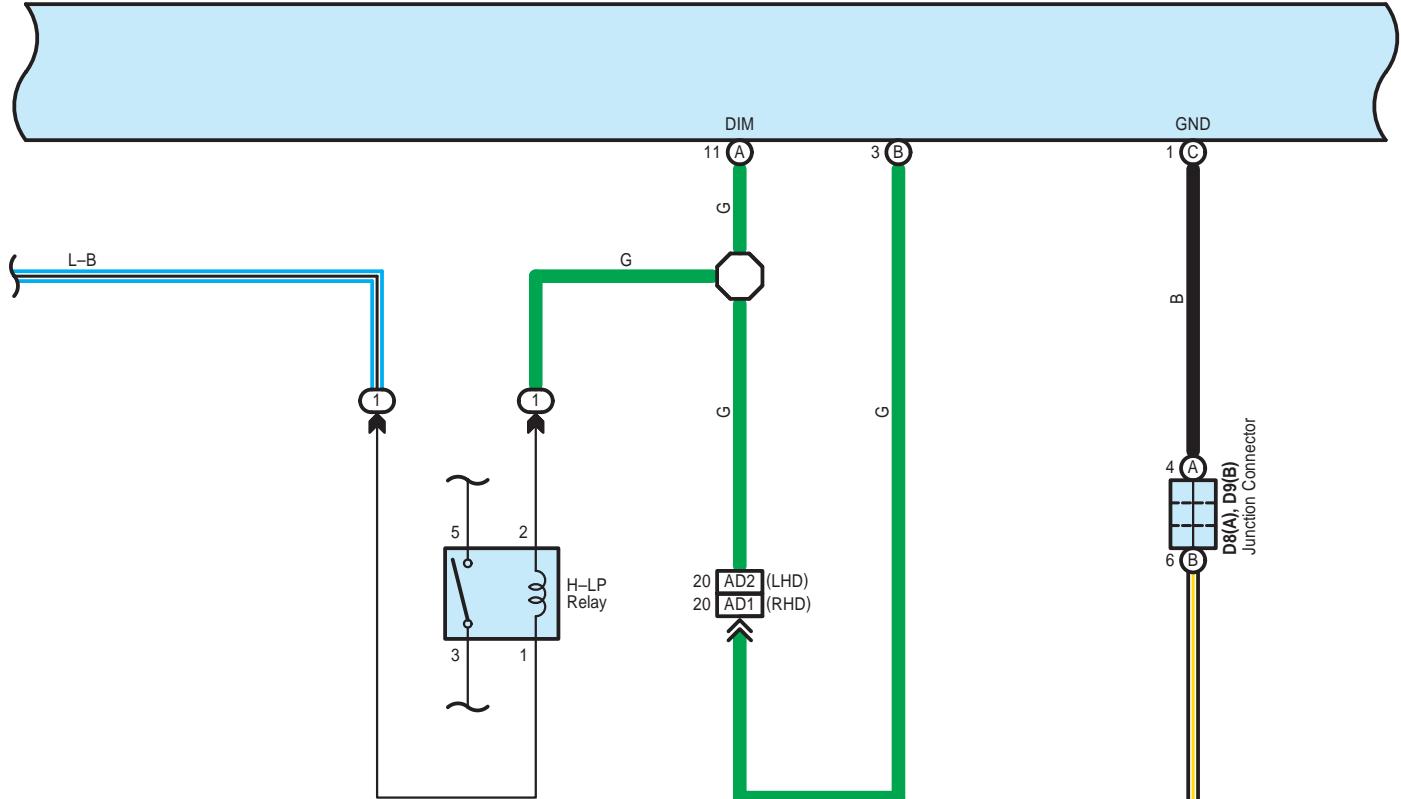


* 2 : w/ Entry & Start System



Headlight Beam Level Control

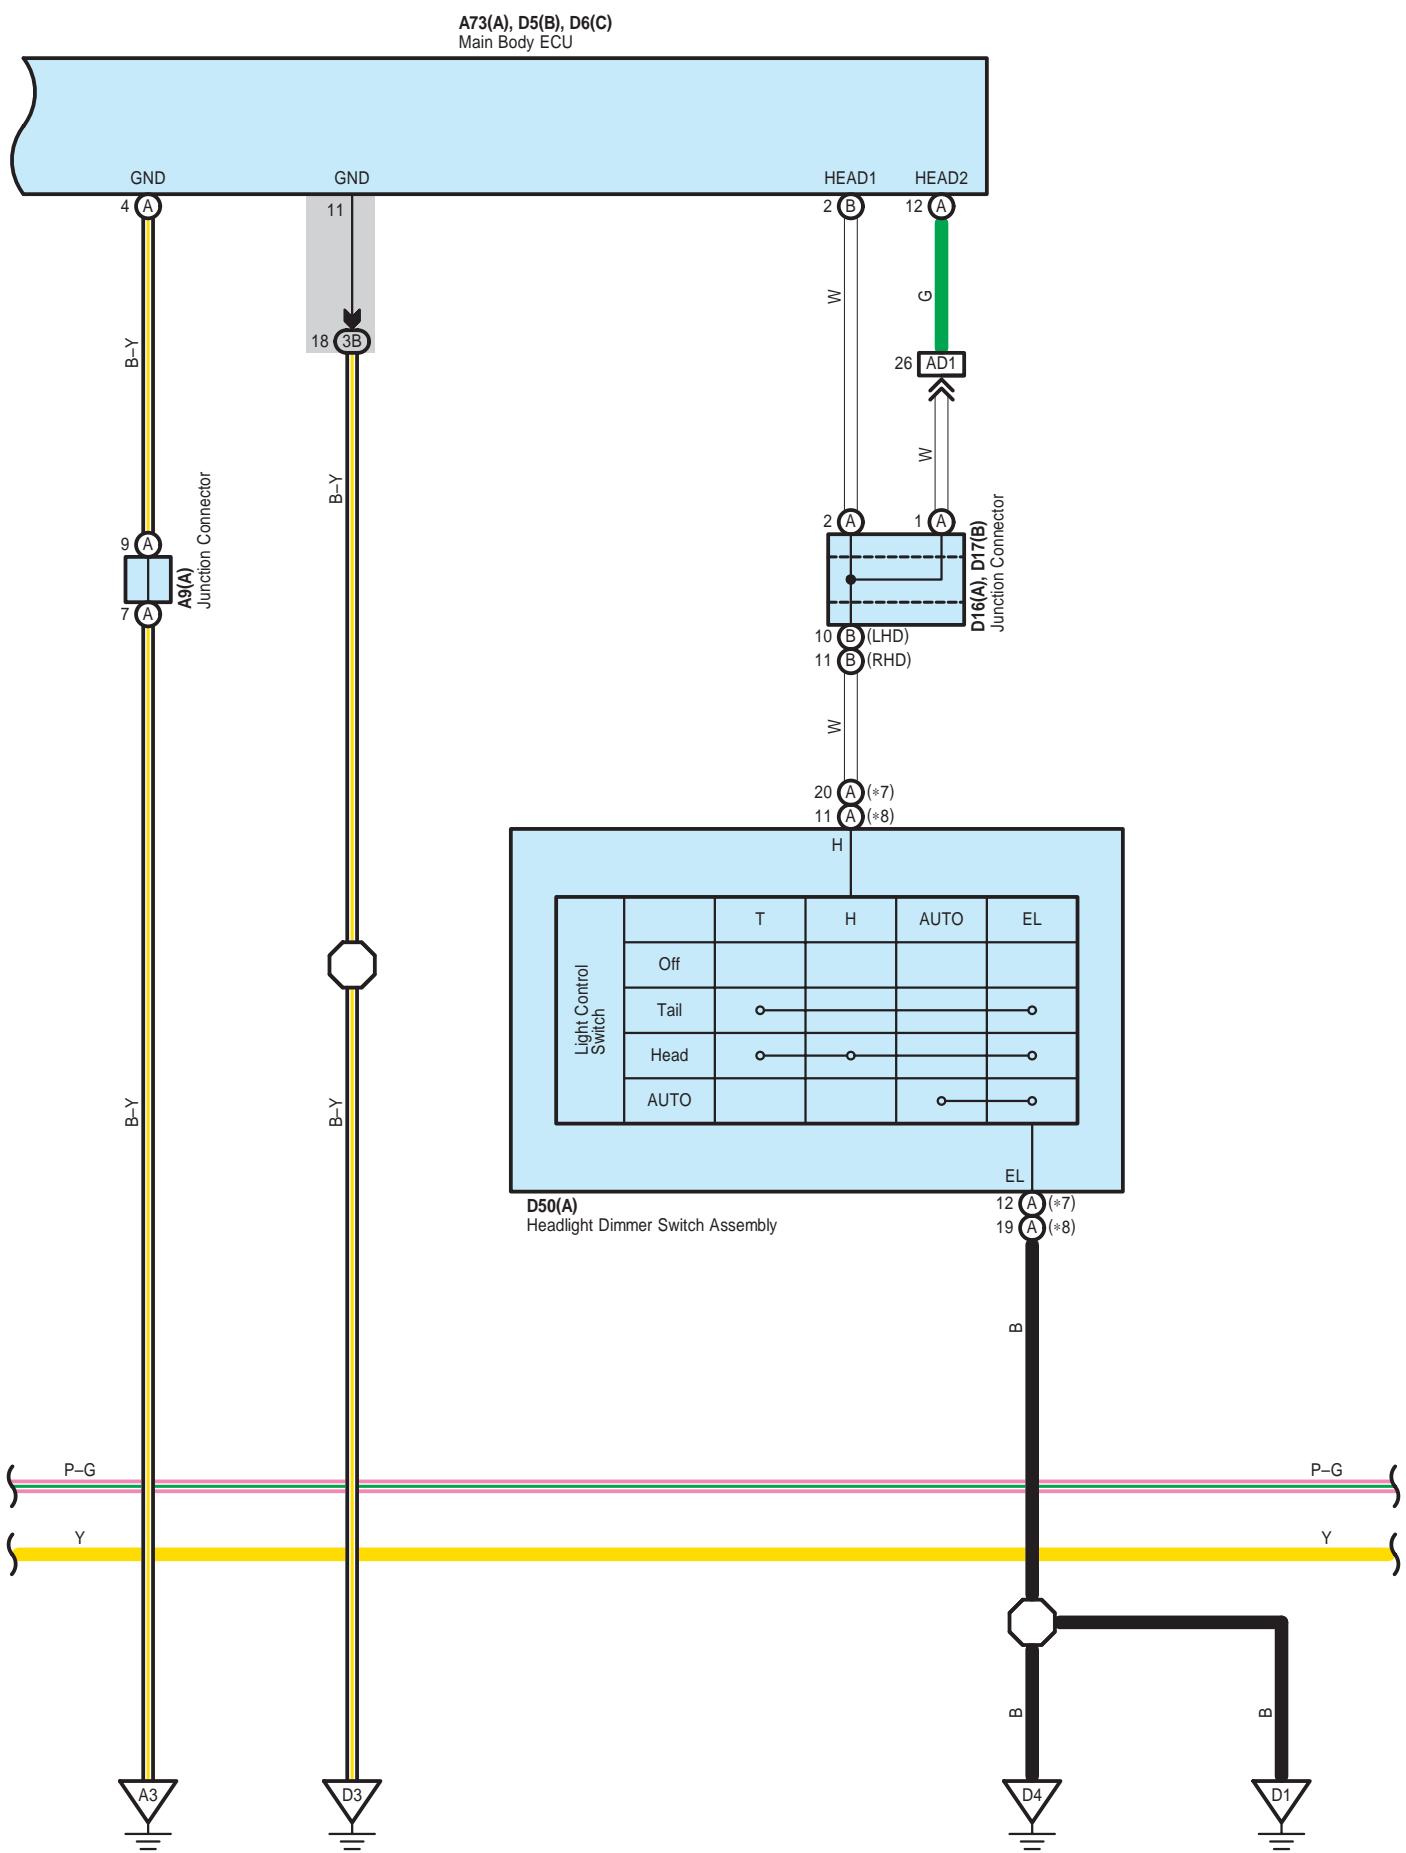


A5
VSC (VDC) Control Module

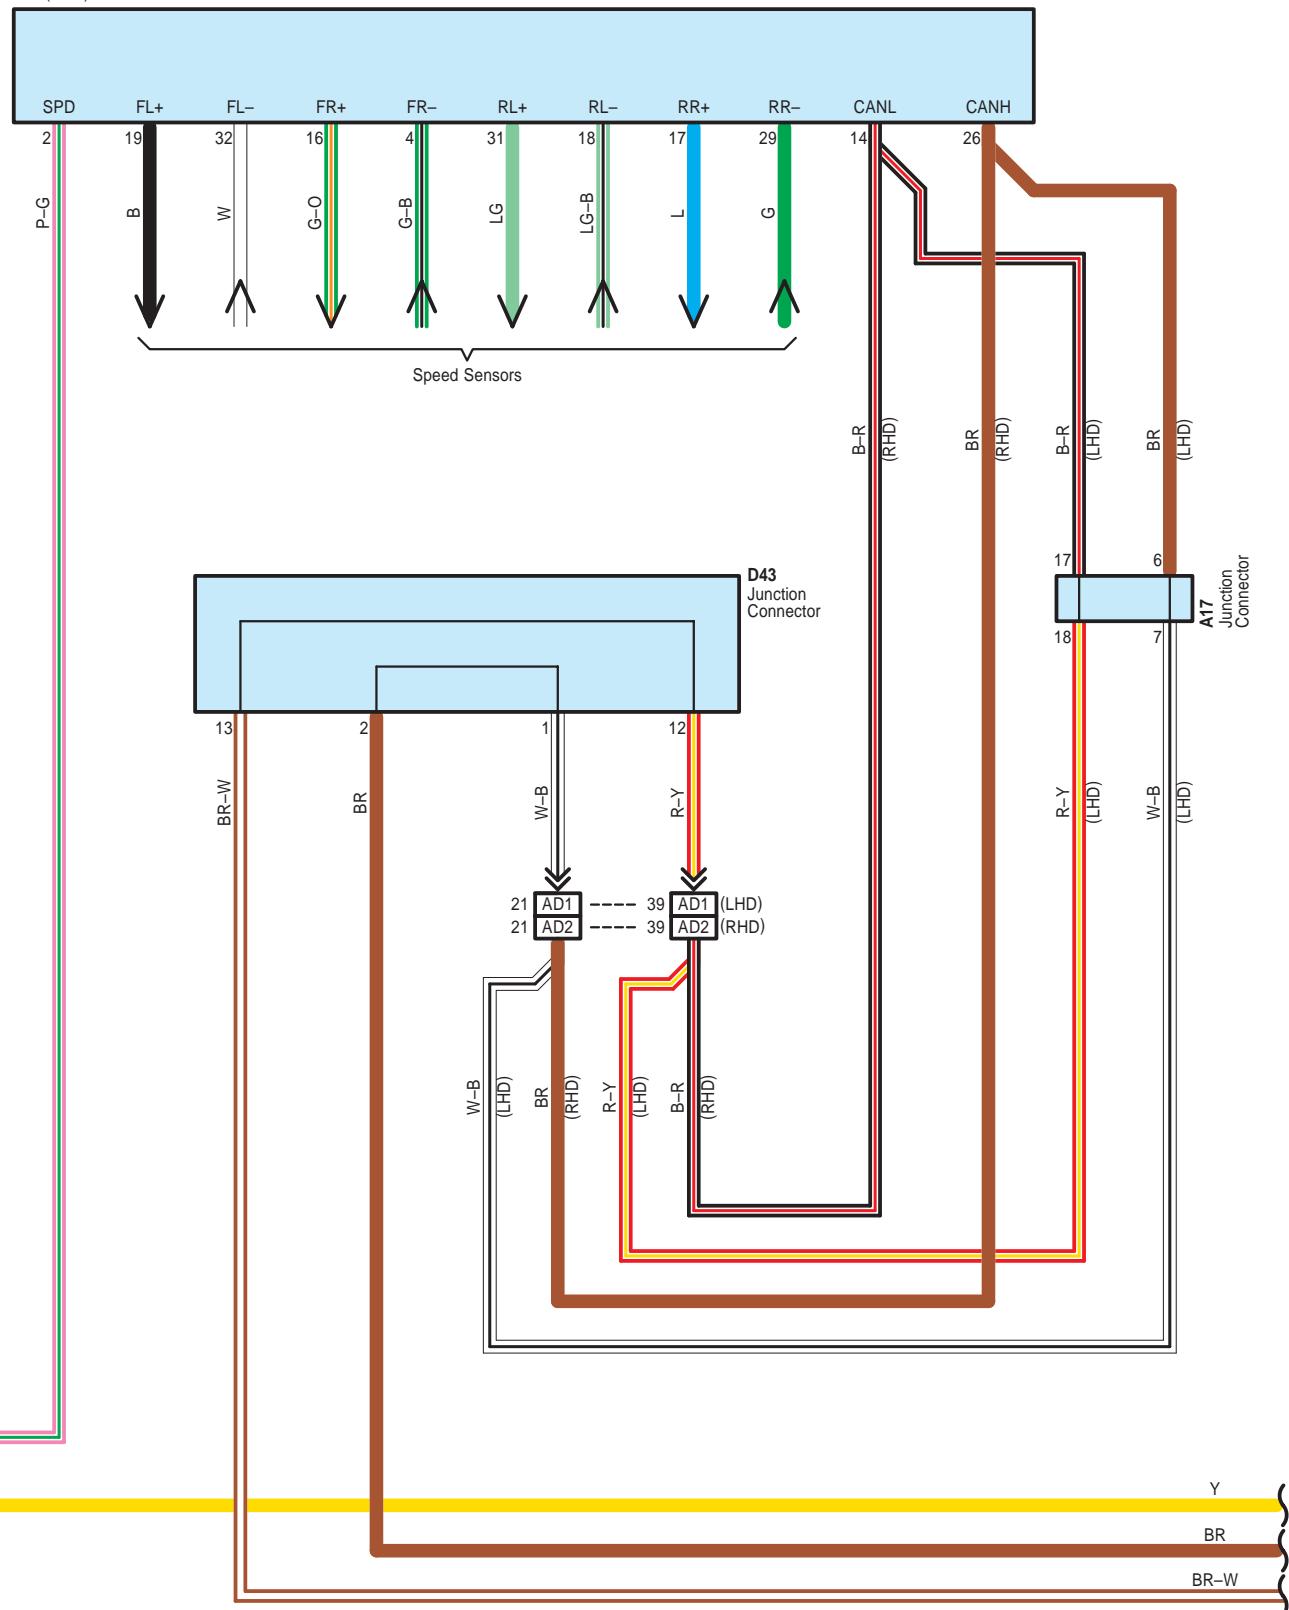

* 7 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
 * 8 : RHD Headlight Dimmer Switch Assembly RH Side Type

Headlight Beam Level Control

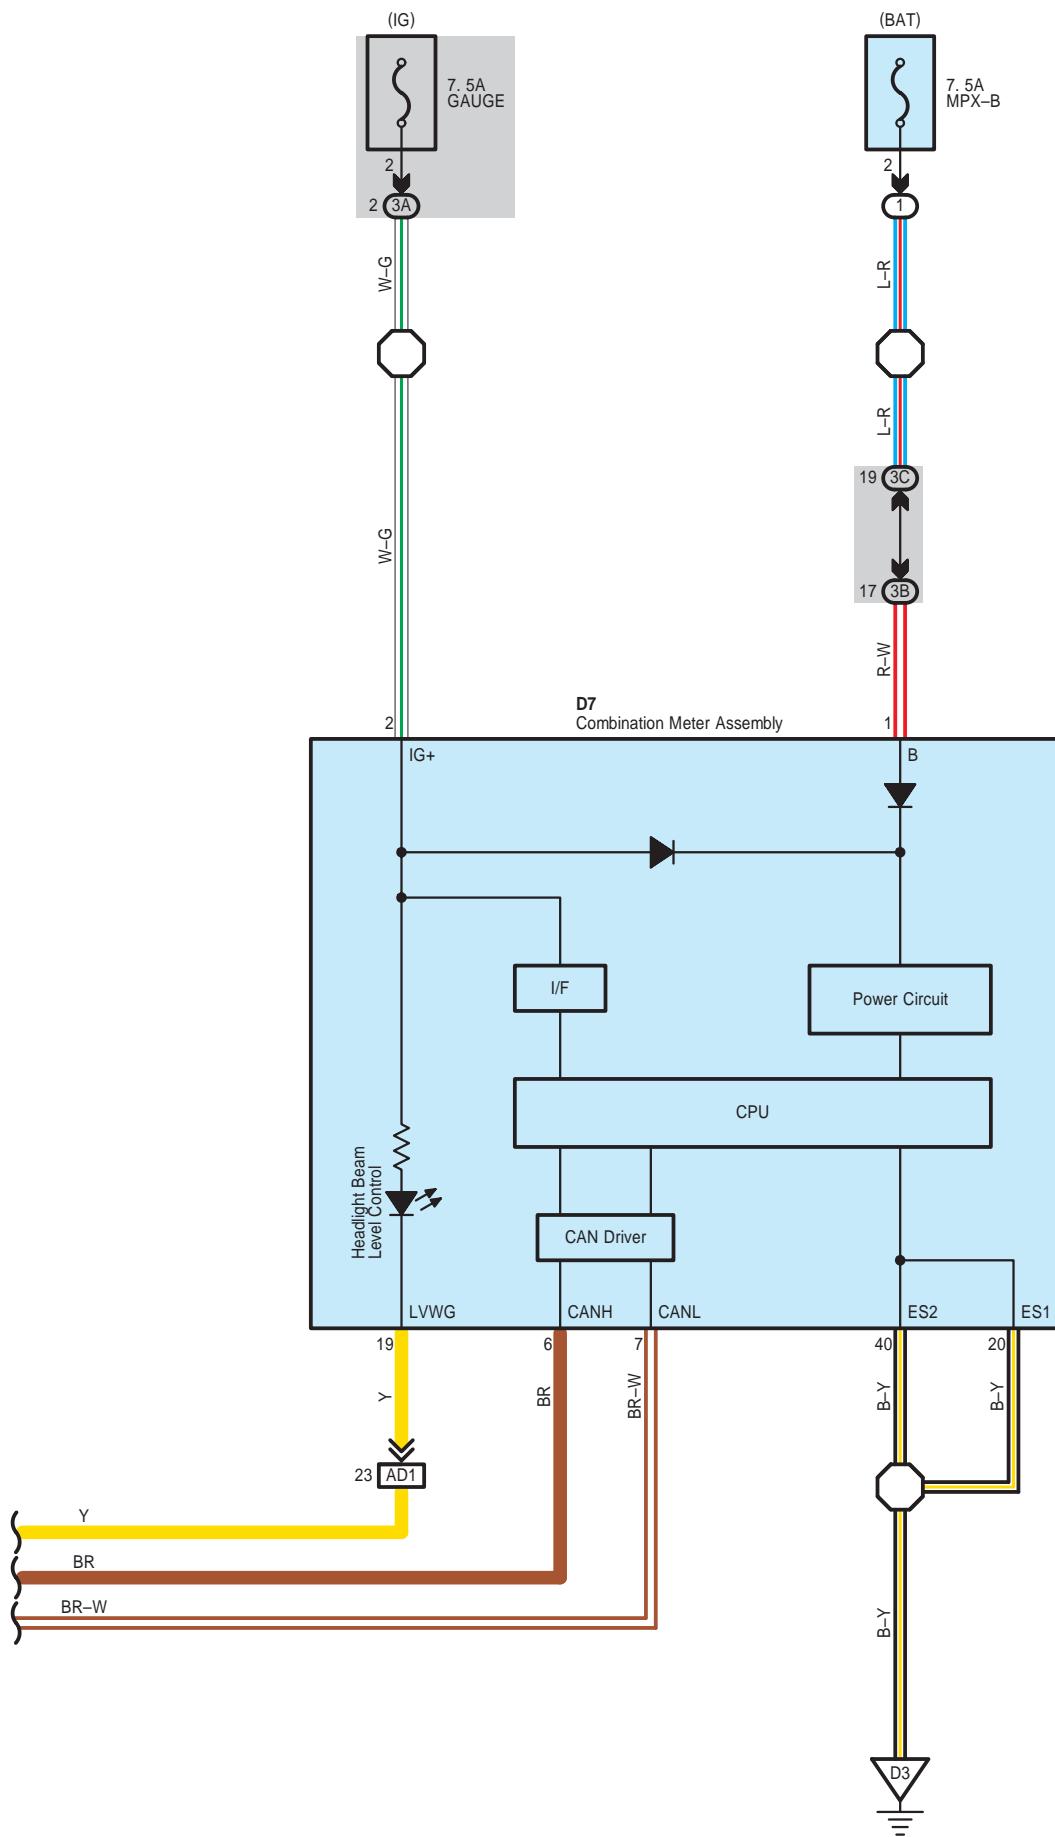

 : Parts Location

Code		See Page		Code		See Page		Code		See Page			
A5		39 (LHD)		A73	A	42 (LHD)		D10		48 (RHD)			
		47 (RHD)				50 (RHD)		D16	A	40 (LHD)			
A9	A	42 (LHD)		D5	B	40 (LHD)				48 (RHD)			
		50 (RHD)				48 (RHD)	D17	B	40 (LHD)				
A10	B	42 (LHD)		D6	C	40 (LHD)						48 (RHD)	
		50 (RHD)				48 (RHD)	D43		41 (LHD)				
A16		42 (LHD)		D7		40 (LHD)		D50	A	49 (RHD)			
		50 (RHD)				48 (RHD)				41 (LHD)			
A17		42 (LHD)		D8	A	40 (LHD)		H11		49 (RHD)			
A40		39 (LHD)				48 (RHD)				45 (LHD)			
A62		47 (RHD)		D9	B	40 (LHD)				53 (RHD)			
		39 (LHD)				48 (RHD)							
A62		47 (RHD)		D10		40 (LHD)							

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B		Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
HD1	55 (LHD) 59 (RHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)

 : Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH

Headlight Cleaner

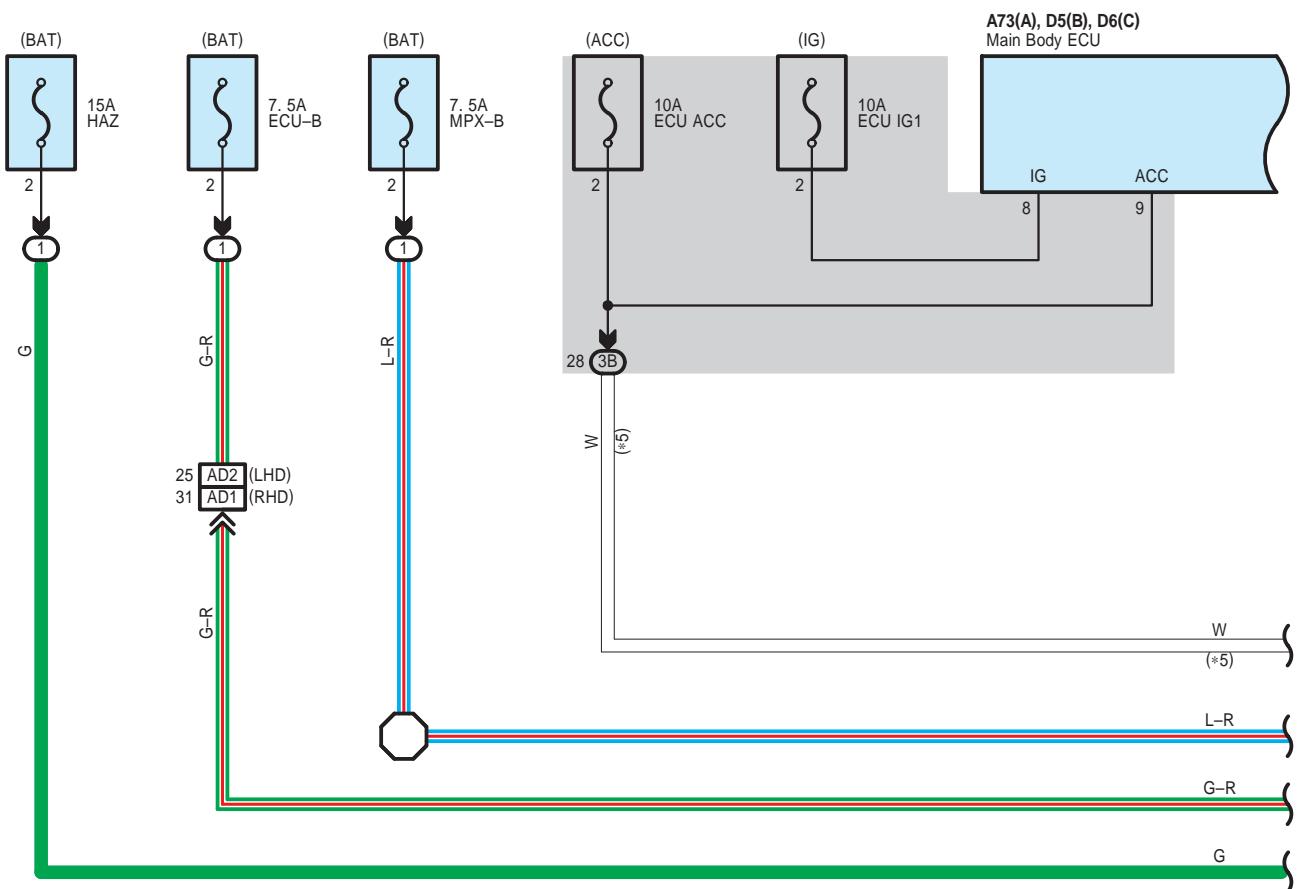


* 5 : w/ Entry & Start System


A73(A), D5(B), D6(C)
Main Body ECU

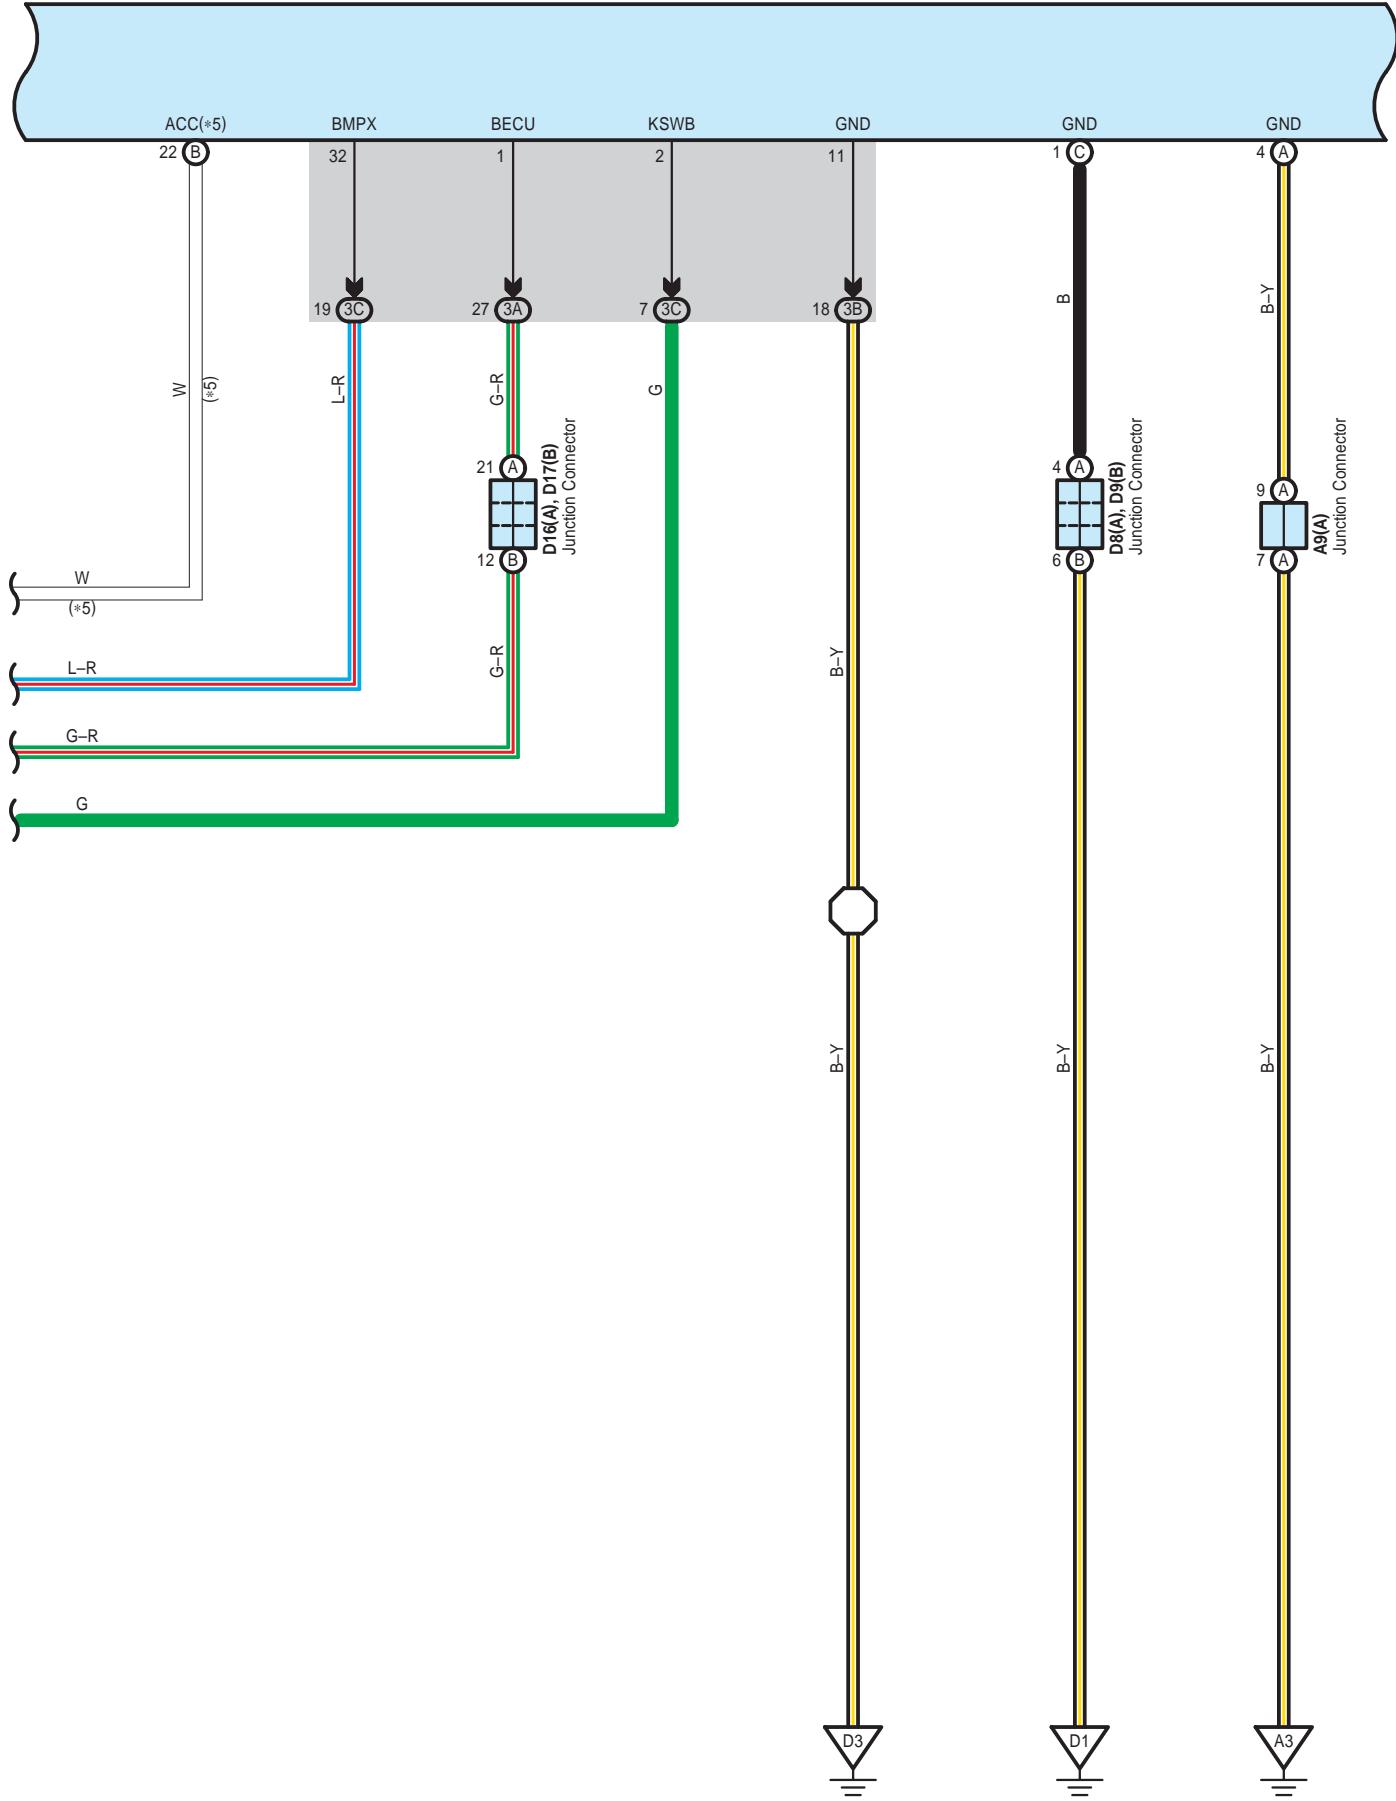

Headlight Cleaner

A73(A), D5(B), D6(C)
Main Body ECU

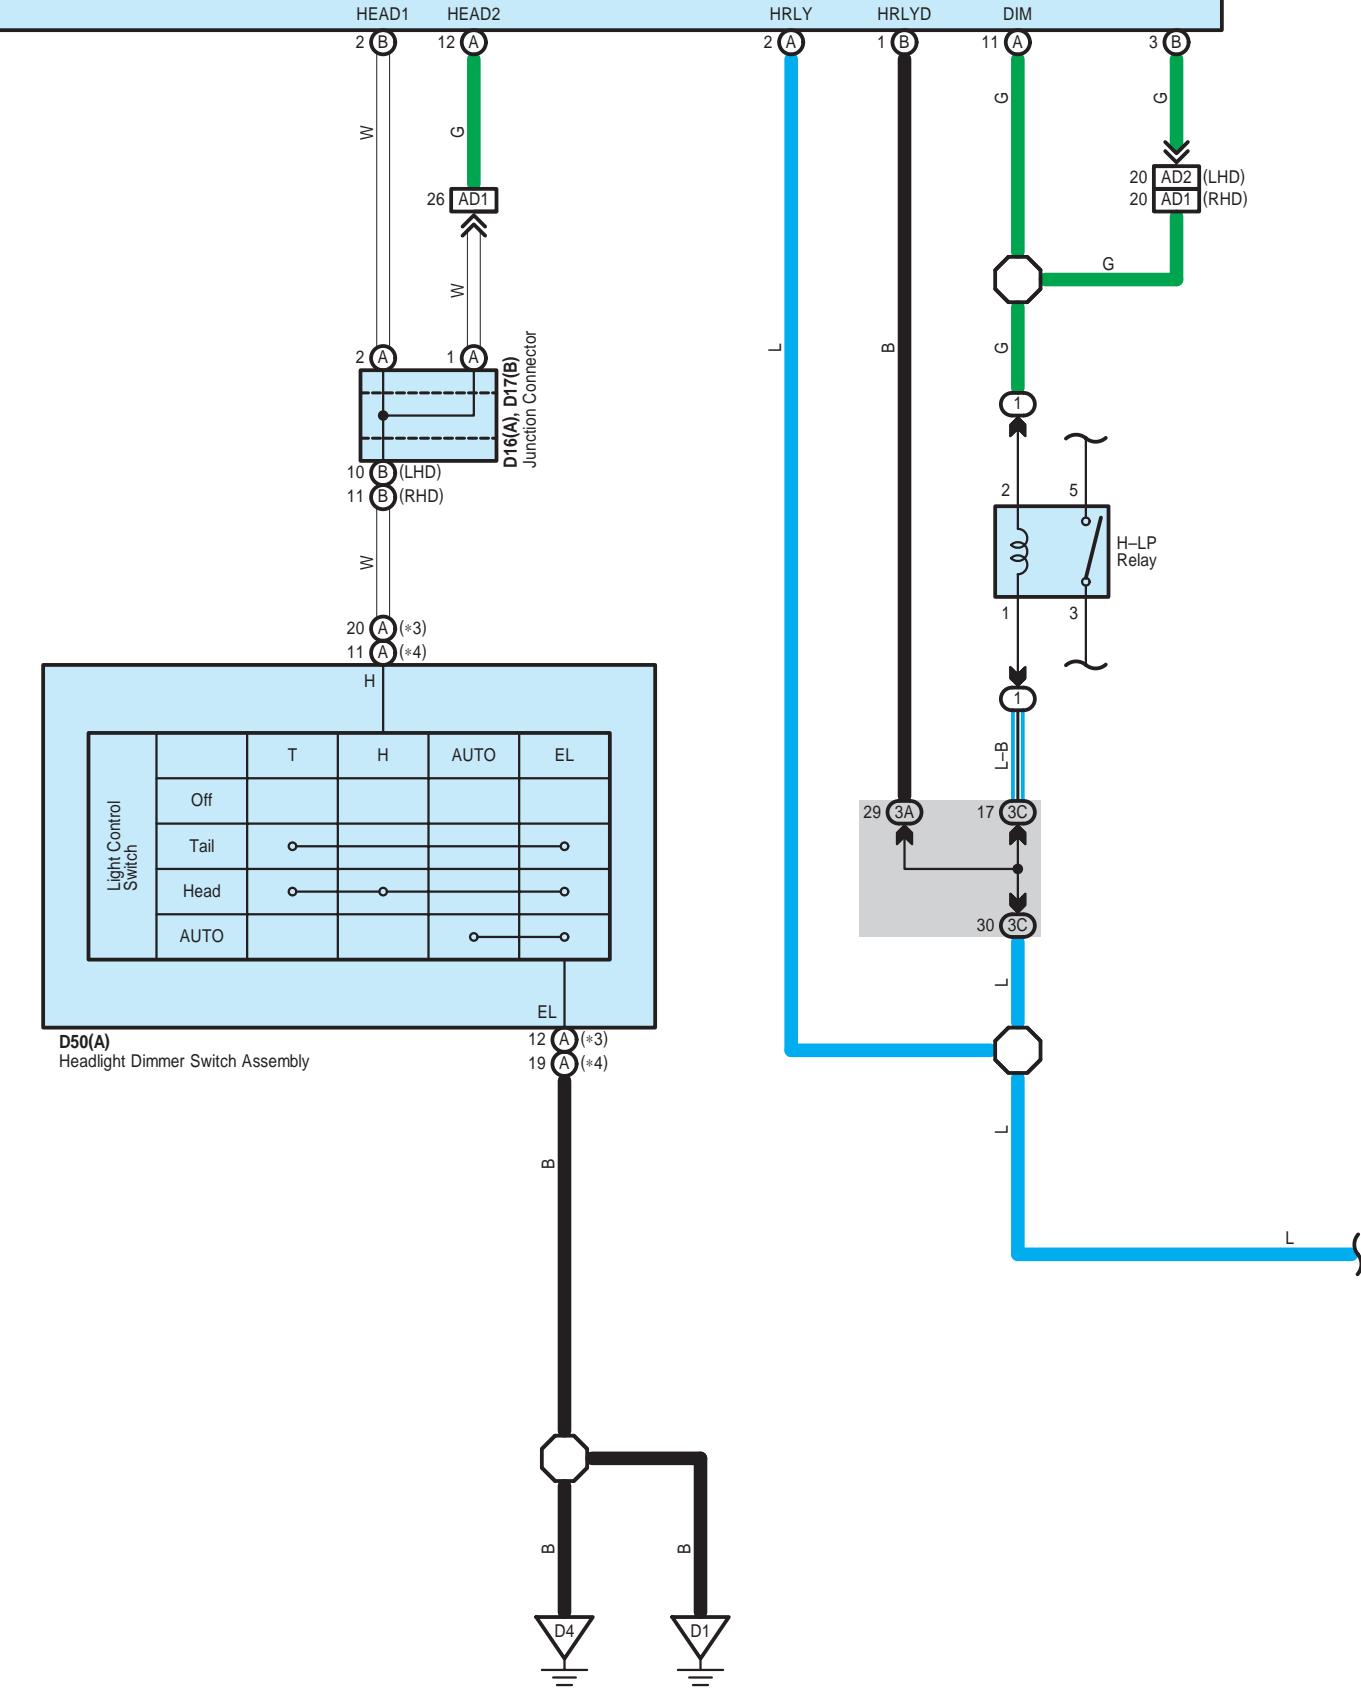

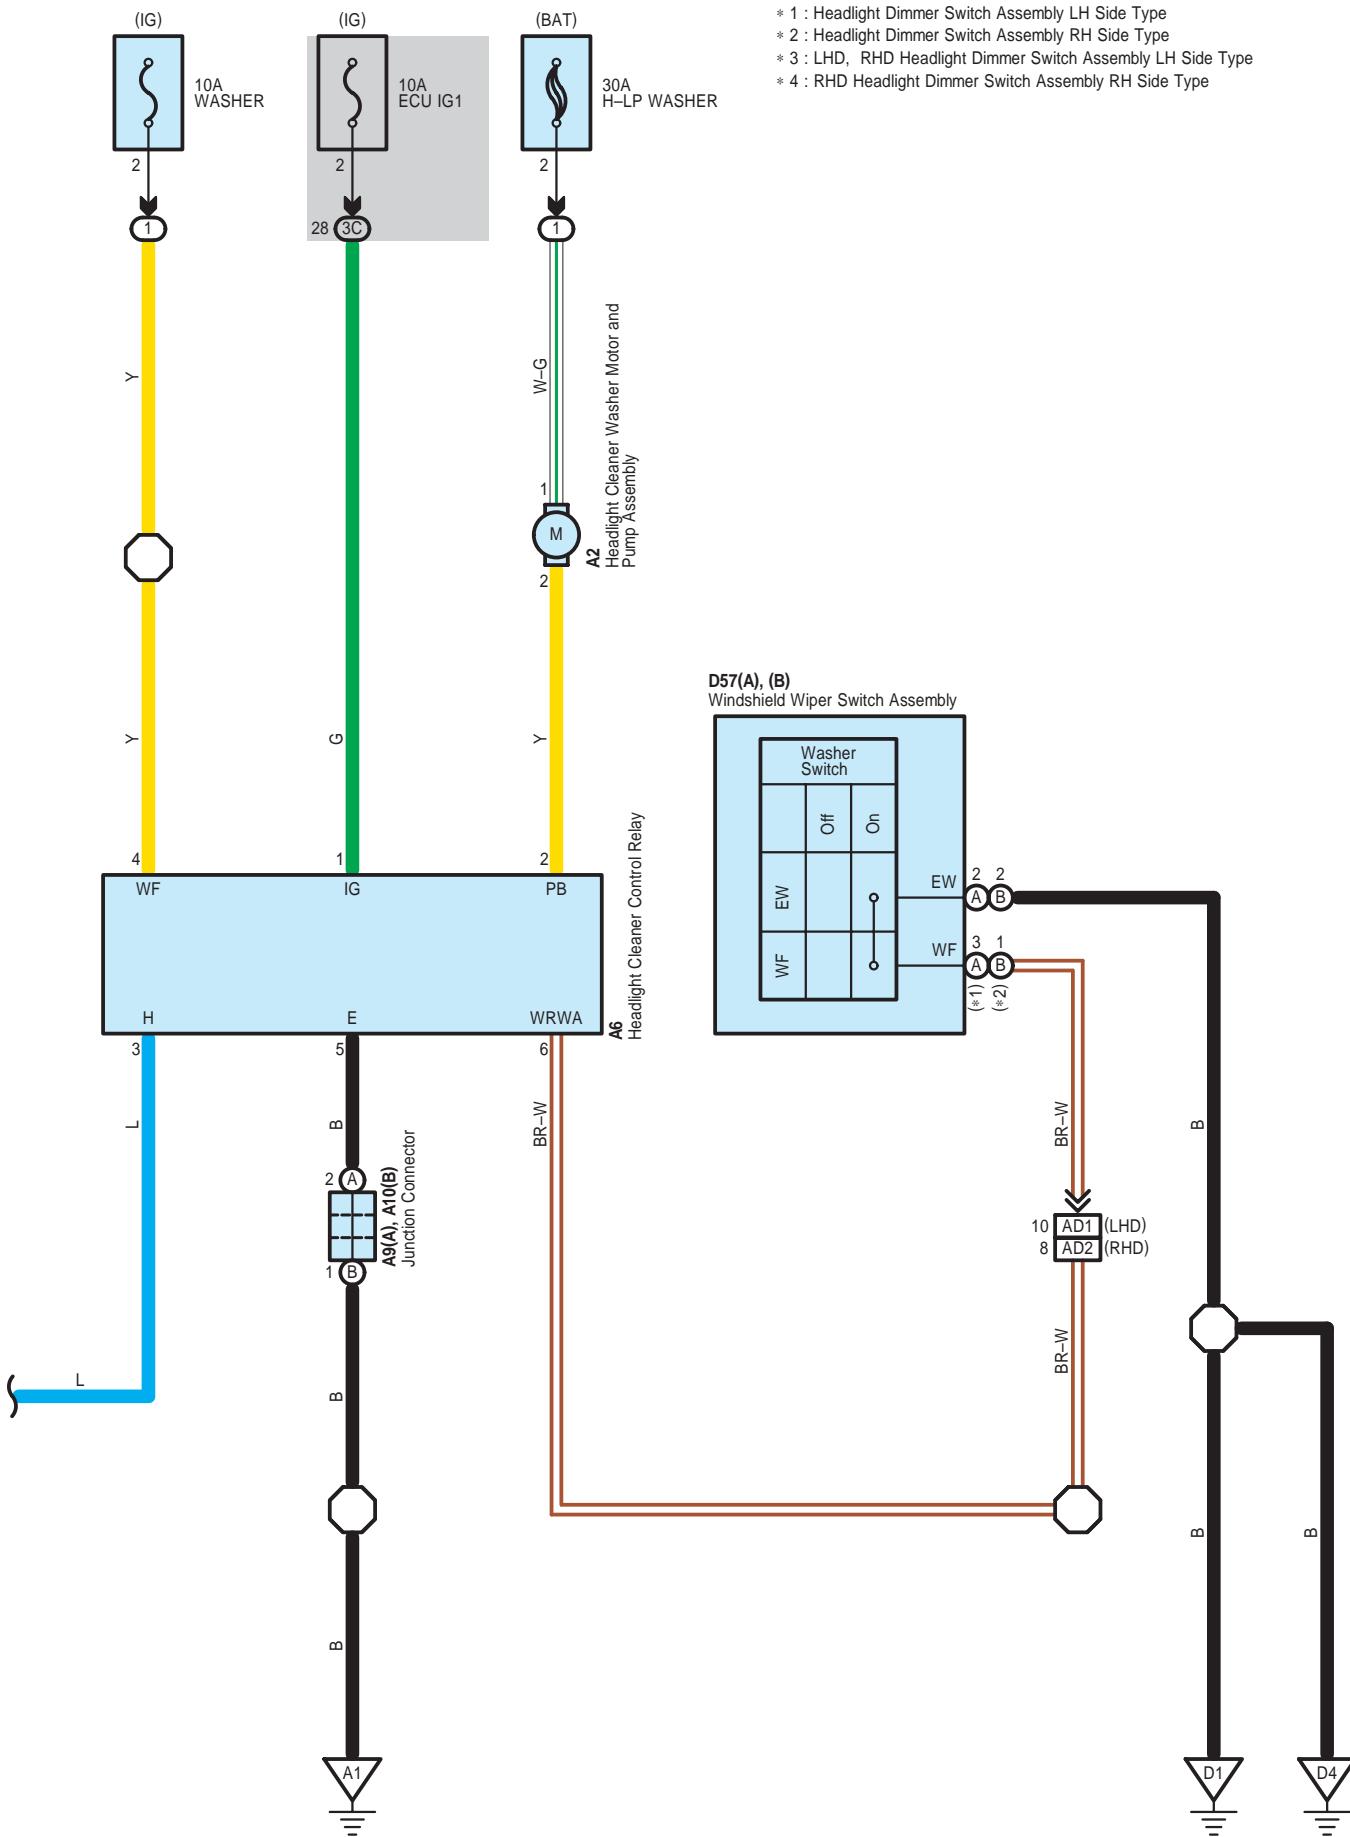

Headlight Cleaner

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A2		39 (LHD)		A73	A	50 (RHD)		D16	A	40 (LHD)	
		47 (RHD)		D5	B	40 (LHD)				48 (RHD)	
A6		39 (LHD)		D6	C	48 (RHD)		D17	B	40 (LHD)	
		47 (RHD)				40 (LHD)				48 (RHD)	
A9	A	42 (LHD)		D8	A	48 (RHD)		D50	A	41 (LHD)	
		50 (RHD)				40 (LHD)				49 (RHD)	
A10	B	42 (LHD)		D9	B	48 (RHD)		D57	A	41 (LHD)	
		50 (RHD)				40 (LHD)				49 (RHD)	
A73	A	42 (LHD)				48 (RHD)			B	49 (RHD)	

□ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A		Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	

▽ : Ground Points


Code	See Page	Ground Points Location
A1	54 (LHD)	Front Fender Apron LH
	58 (RHD)	
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	

Key Reminder (w/o Entry & Start System) and Light Reminder

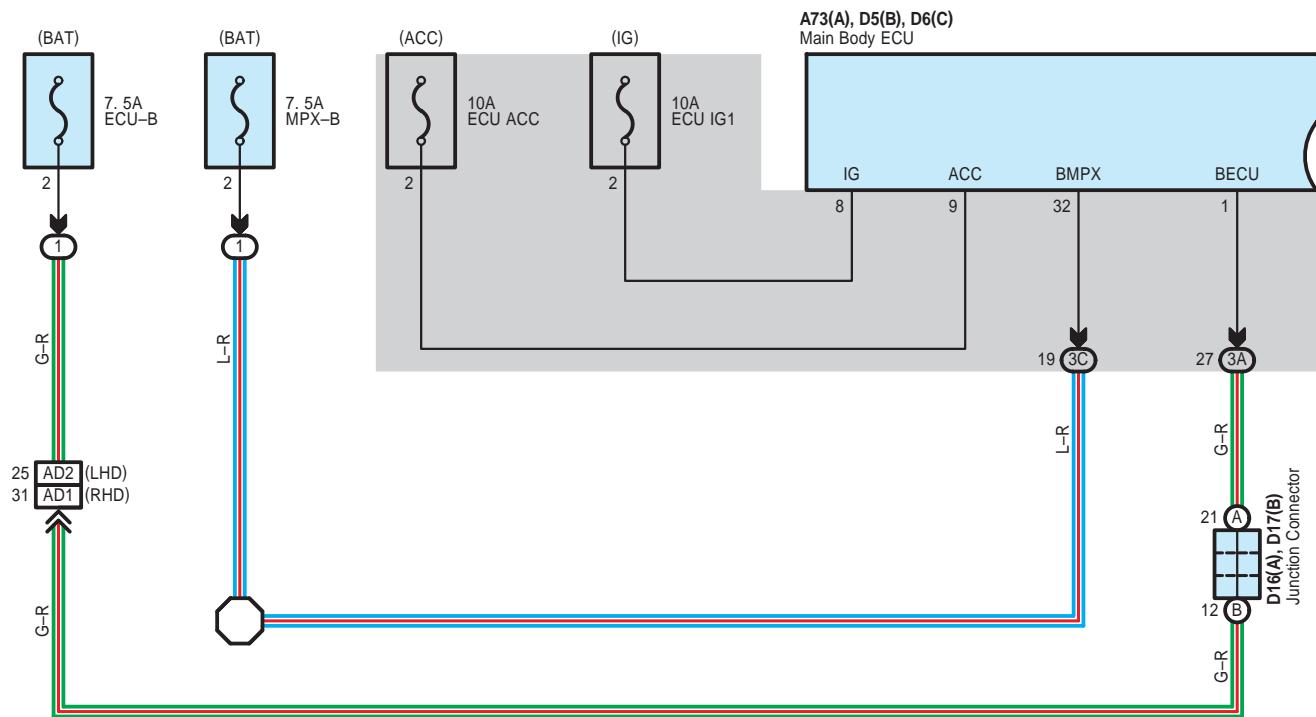






* 7 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
 * 8 : RHD Headlight Dimmer Switch Assembly RH Side Type

A73(A), D5(B), D6(C)
Main Body ECU

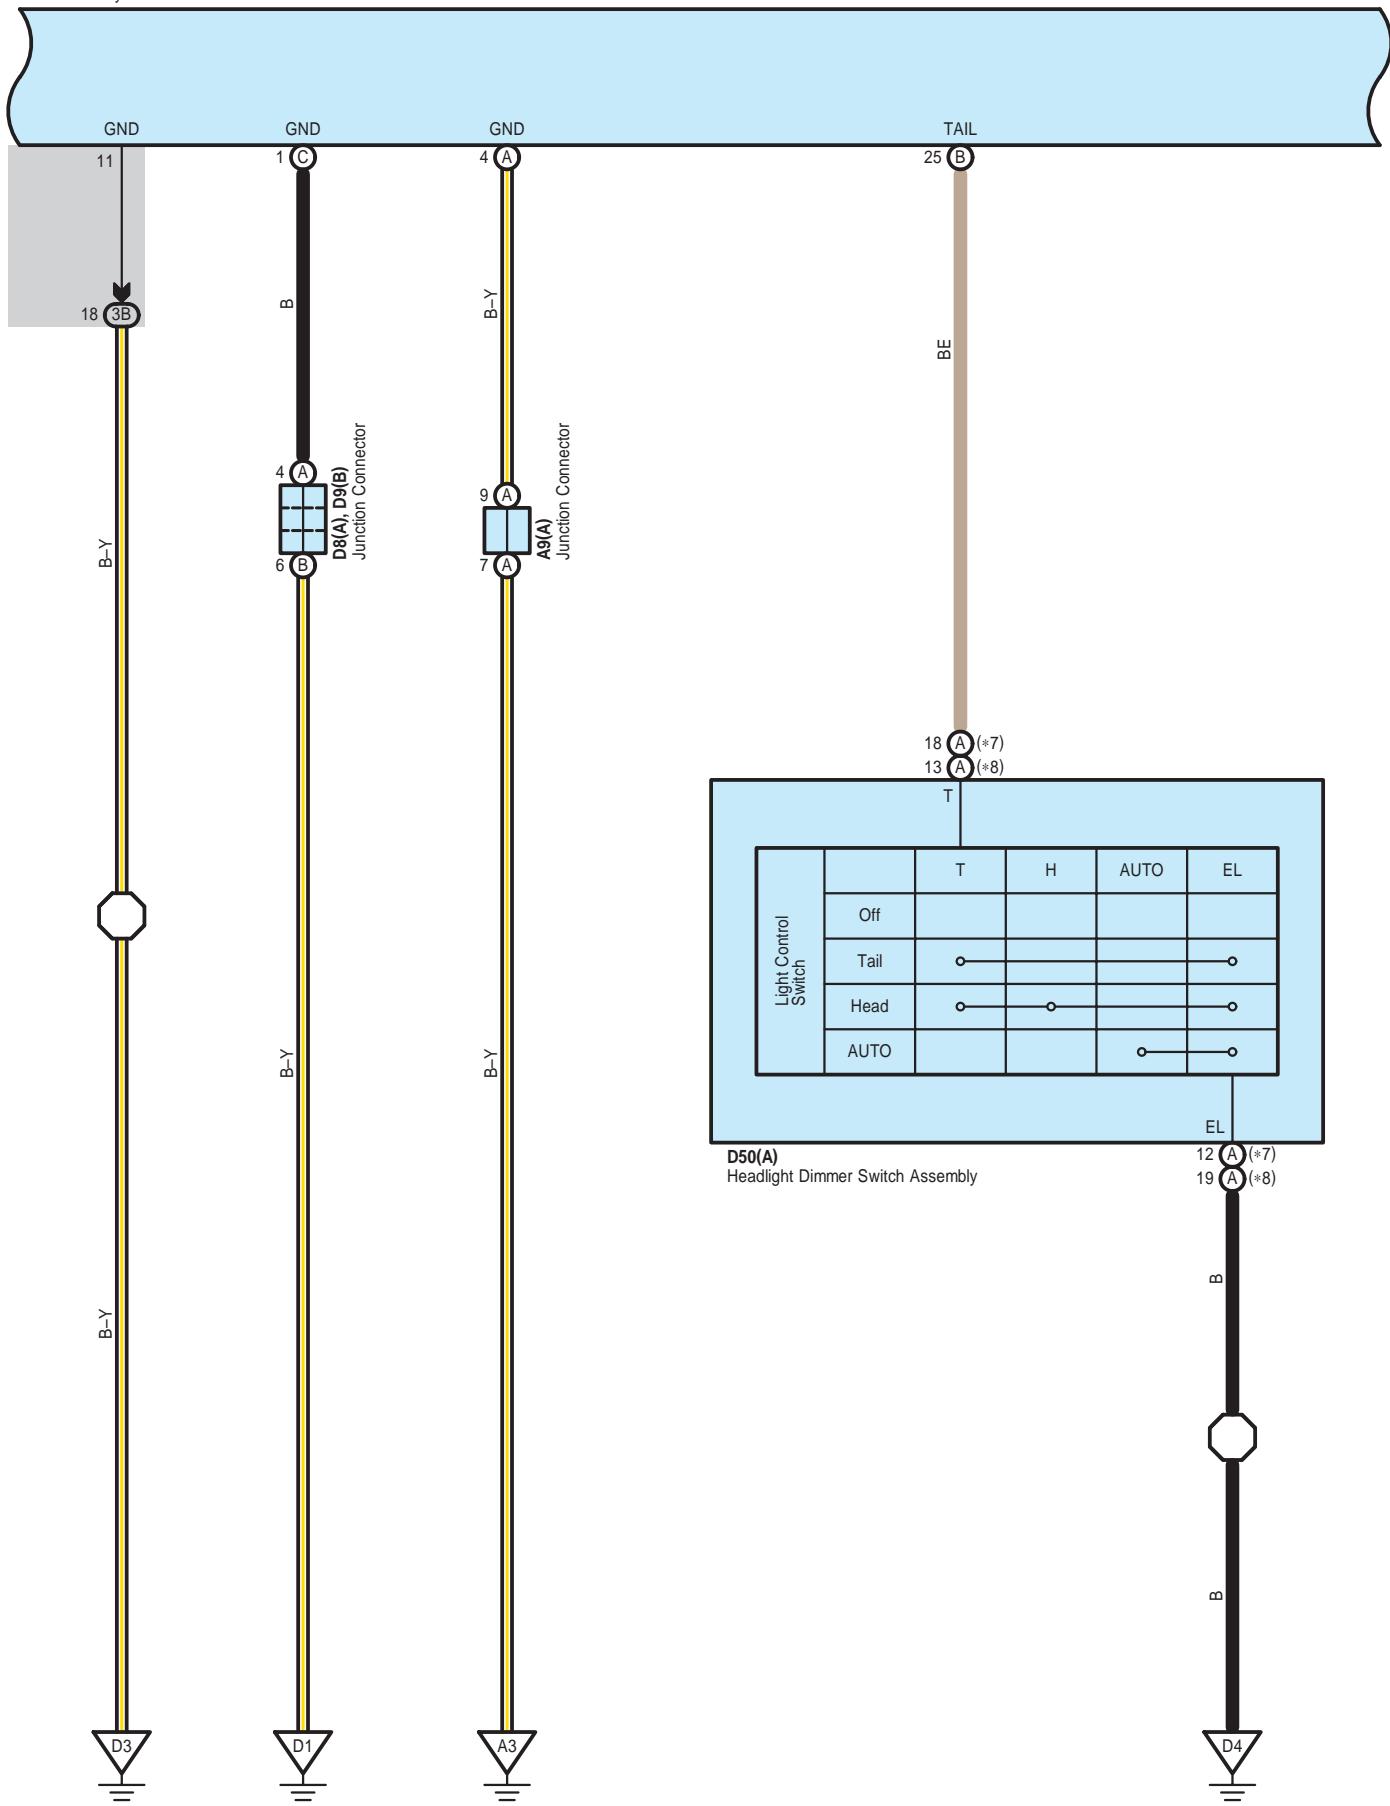

Key Reminder (w/o Entry & Start System) and Light Reminder

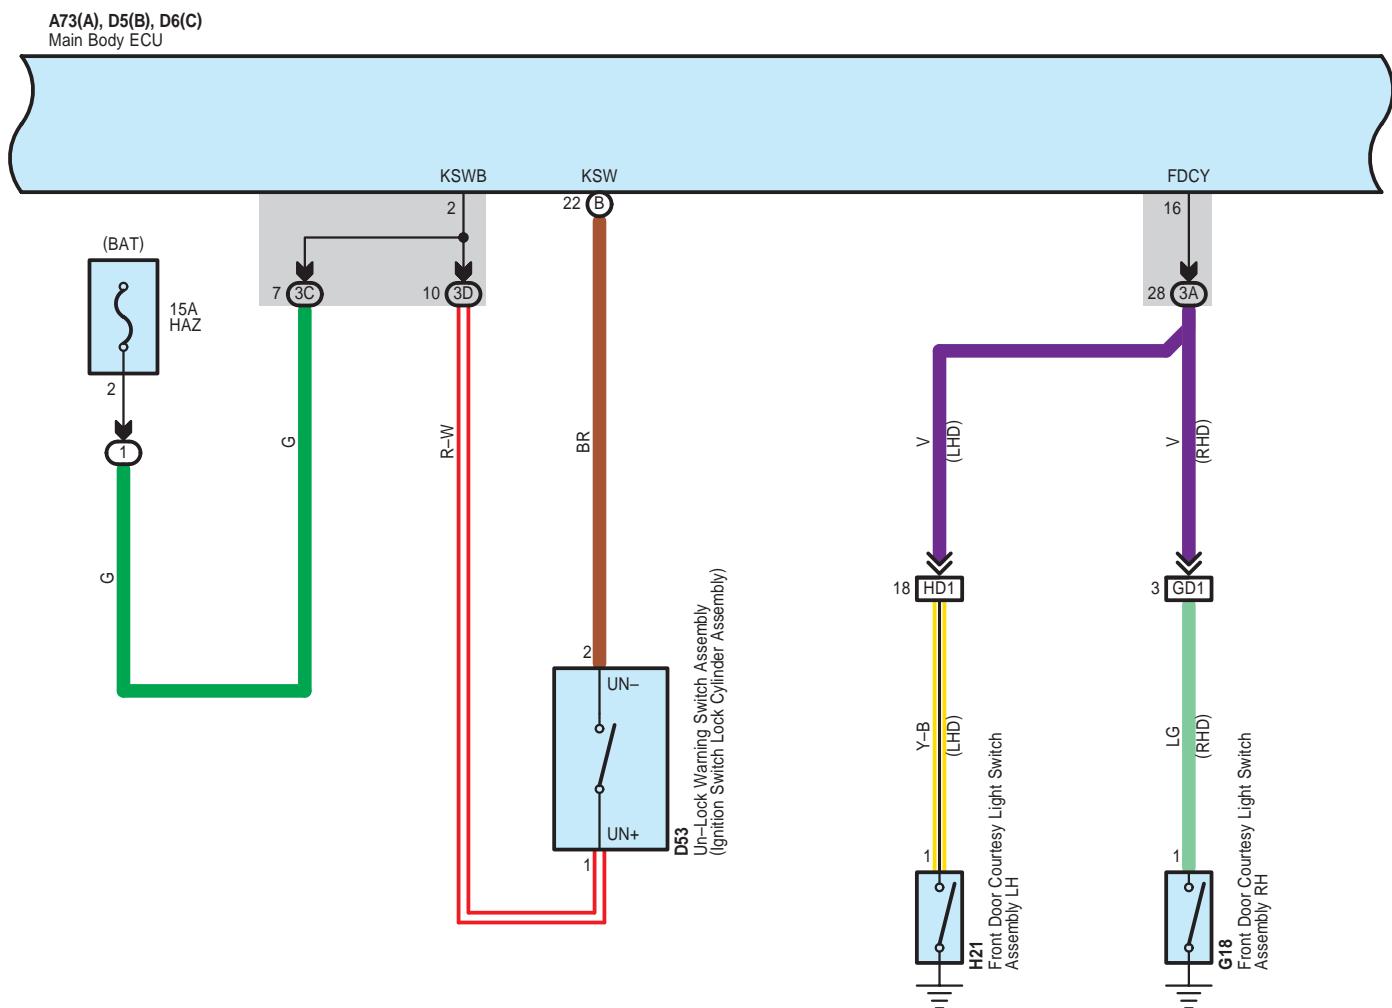

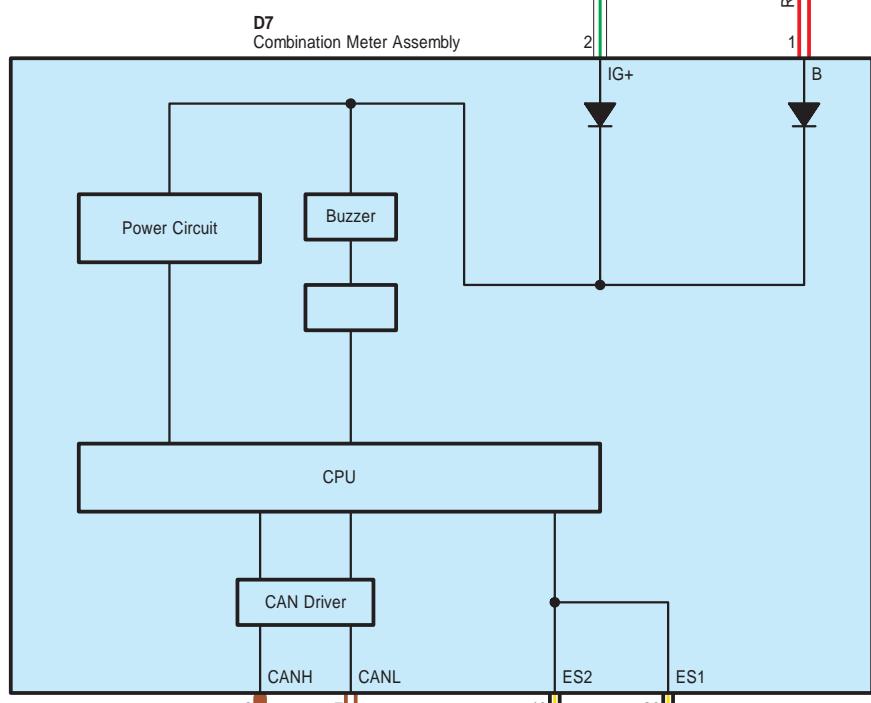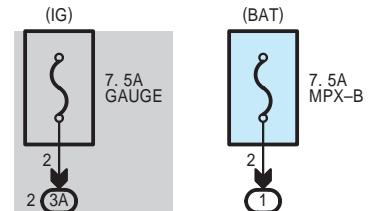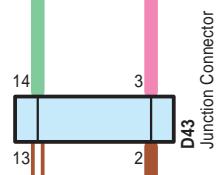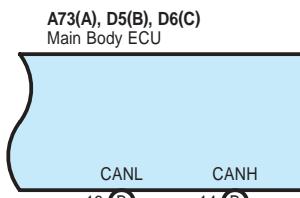

Key Reminder (w/o Entry & Start System) and Light Reminder

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A9	A	42 (LHD)		D7		48 (RHD)		D43	A	41 (LHD)	
		50 (RHD)		D8	A	40 (LHD)				49 (RHD)	
A73	A	42 (LHD)				48 (RHD)		D50	A	41 (LHD)	
		50 (RHD)		D9	B	40 (LHD)				49 (RHD)	
D5	B	40 (LHD)				48 (RHD)		D53	A	41 (LHD)	
		48 (RHD)		D16	A	40 (LHD)				49 (RHD)	
D6	C	40 (LHD)				48 (RHD)		G18	H21	52 (RHD)	
		48 (RHD)		D17	B	40 (LHD)				45 (LHD)	
D7		40 (LHD)				48 (RHD)					

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A		Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
GD1	59 (RHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)

: Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
D1	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH


ABS, TRC and VSC

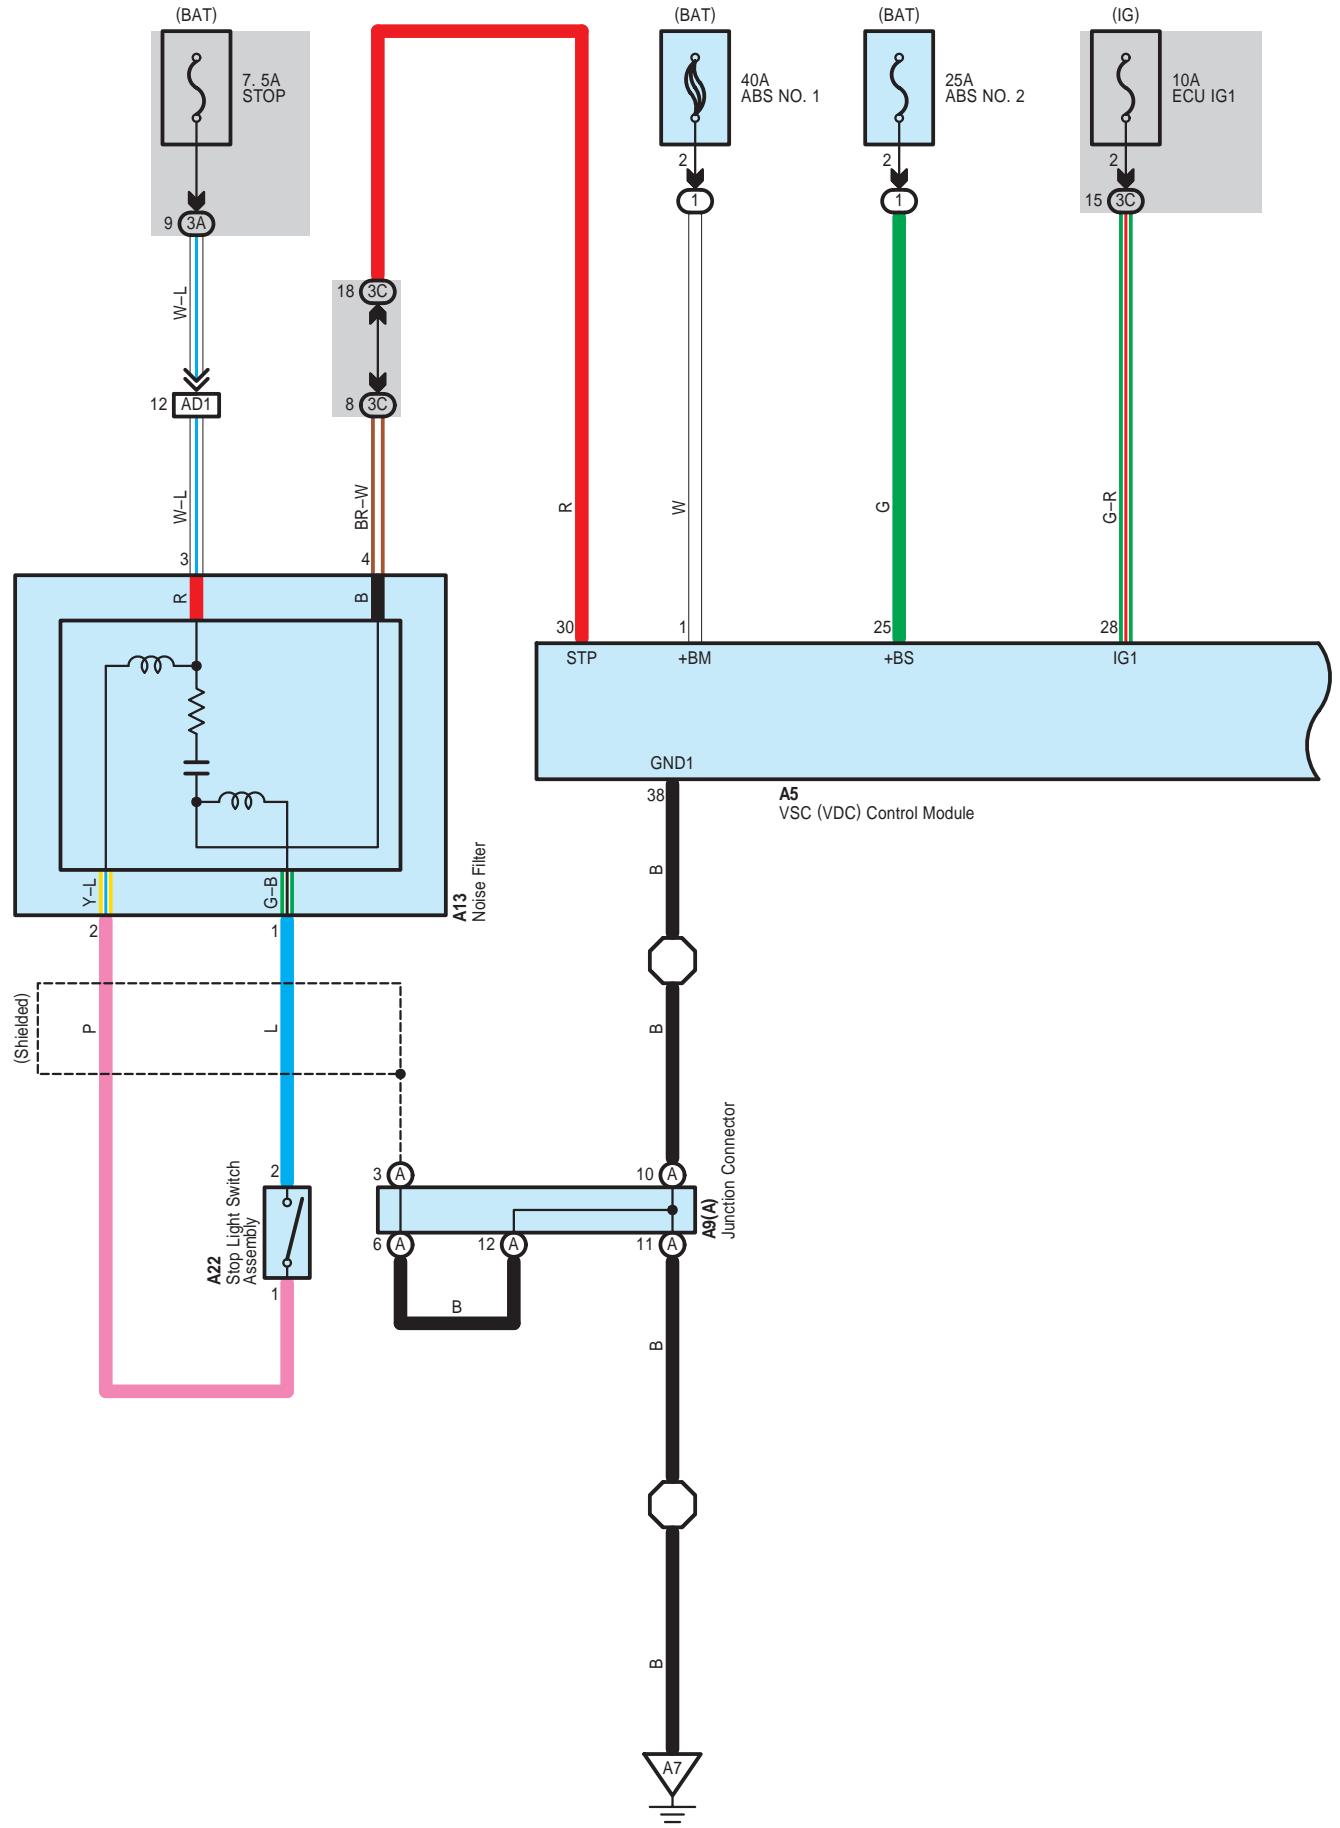


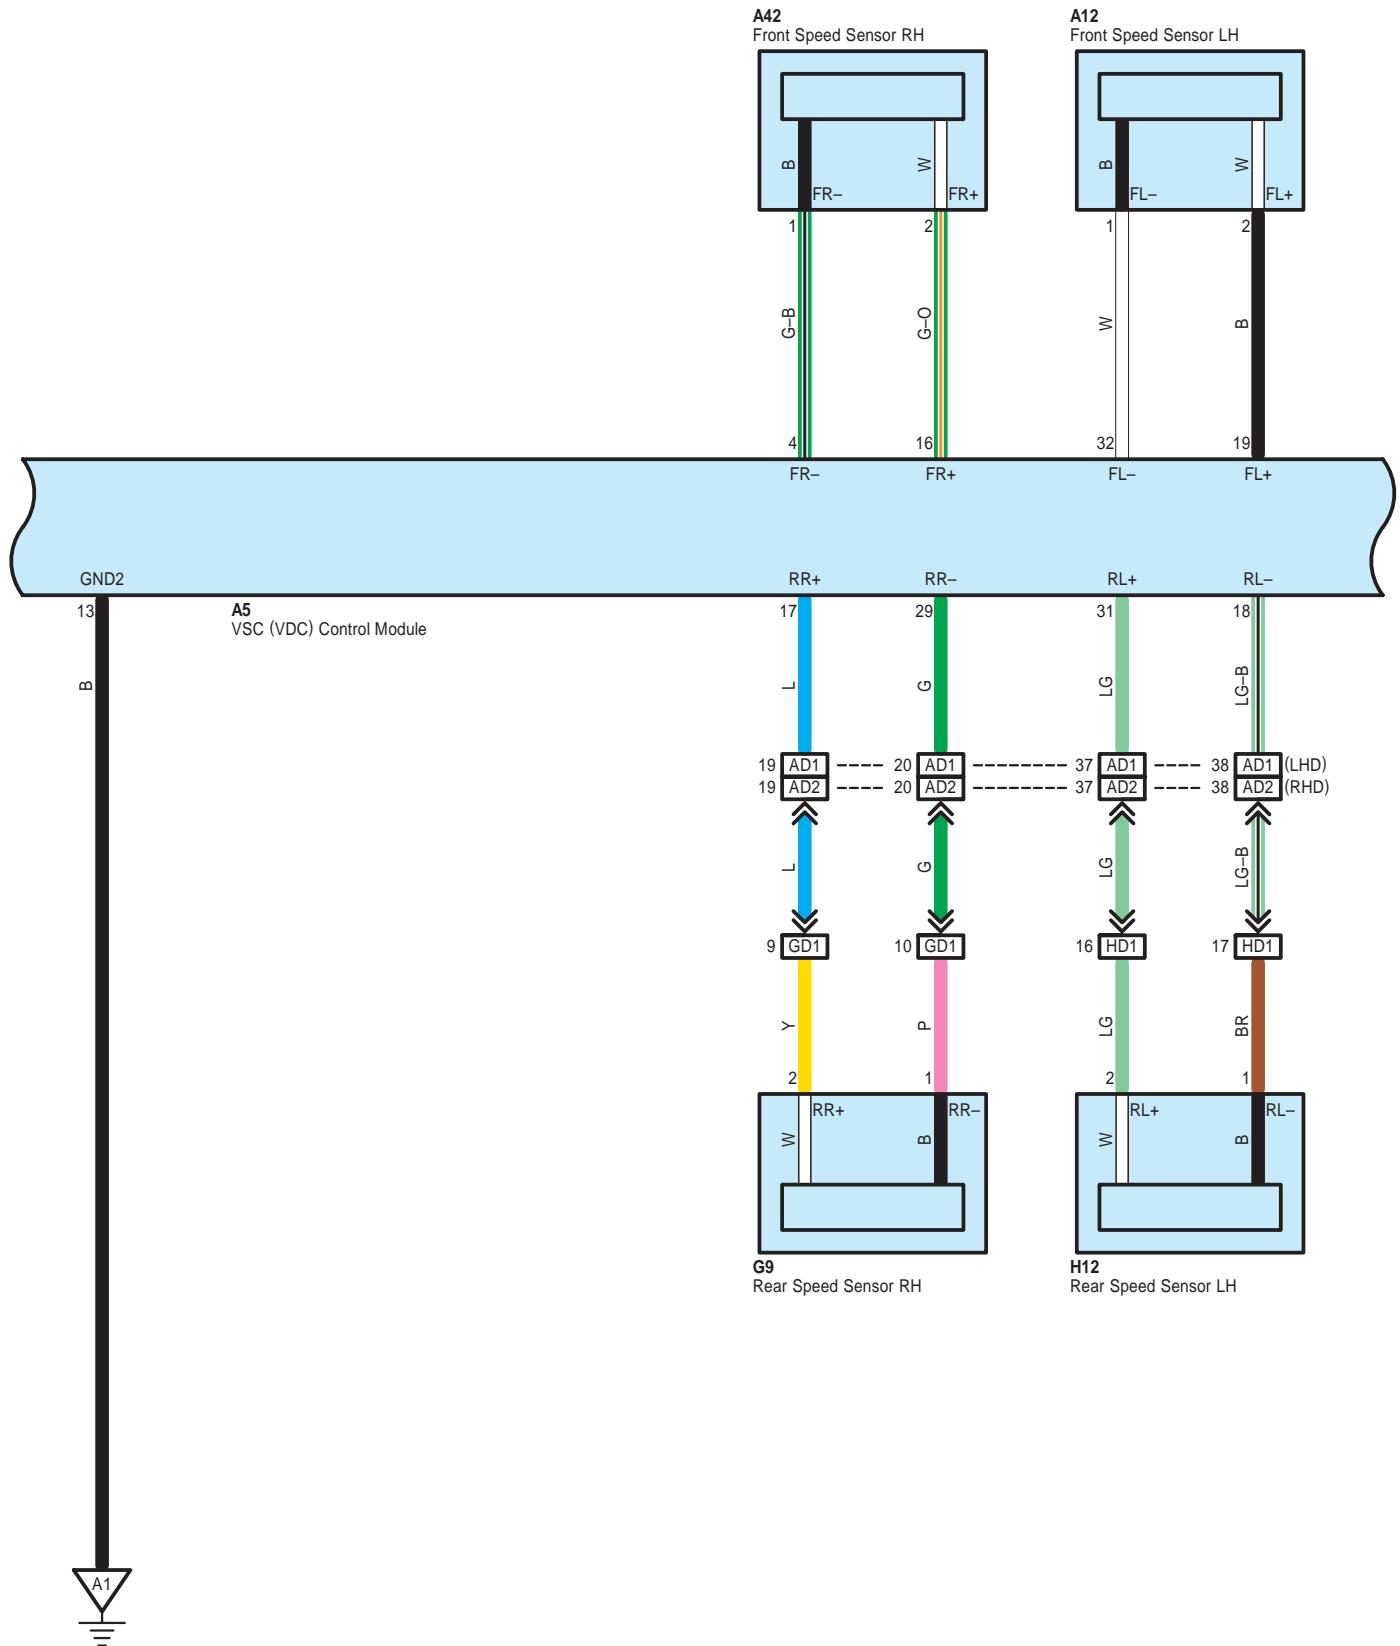


ABS, TRC and VSC

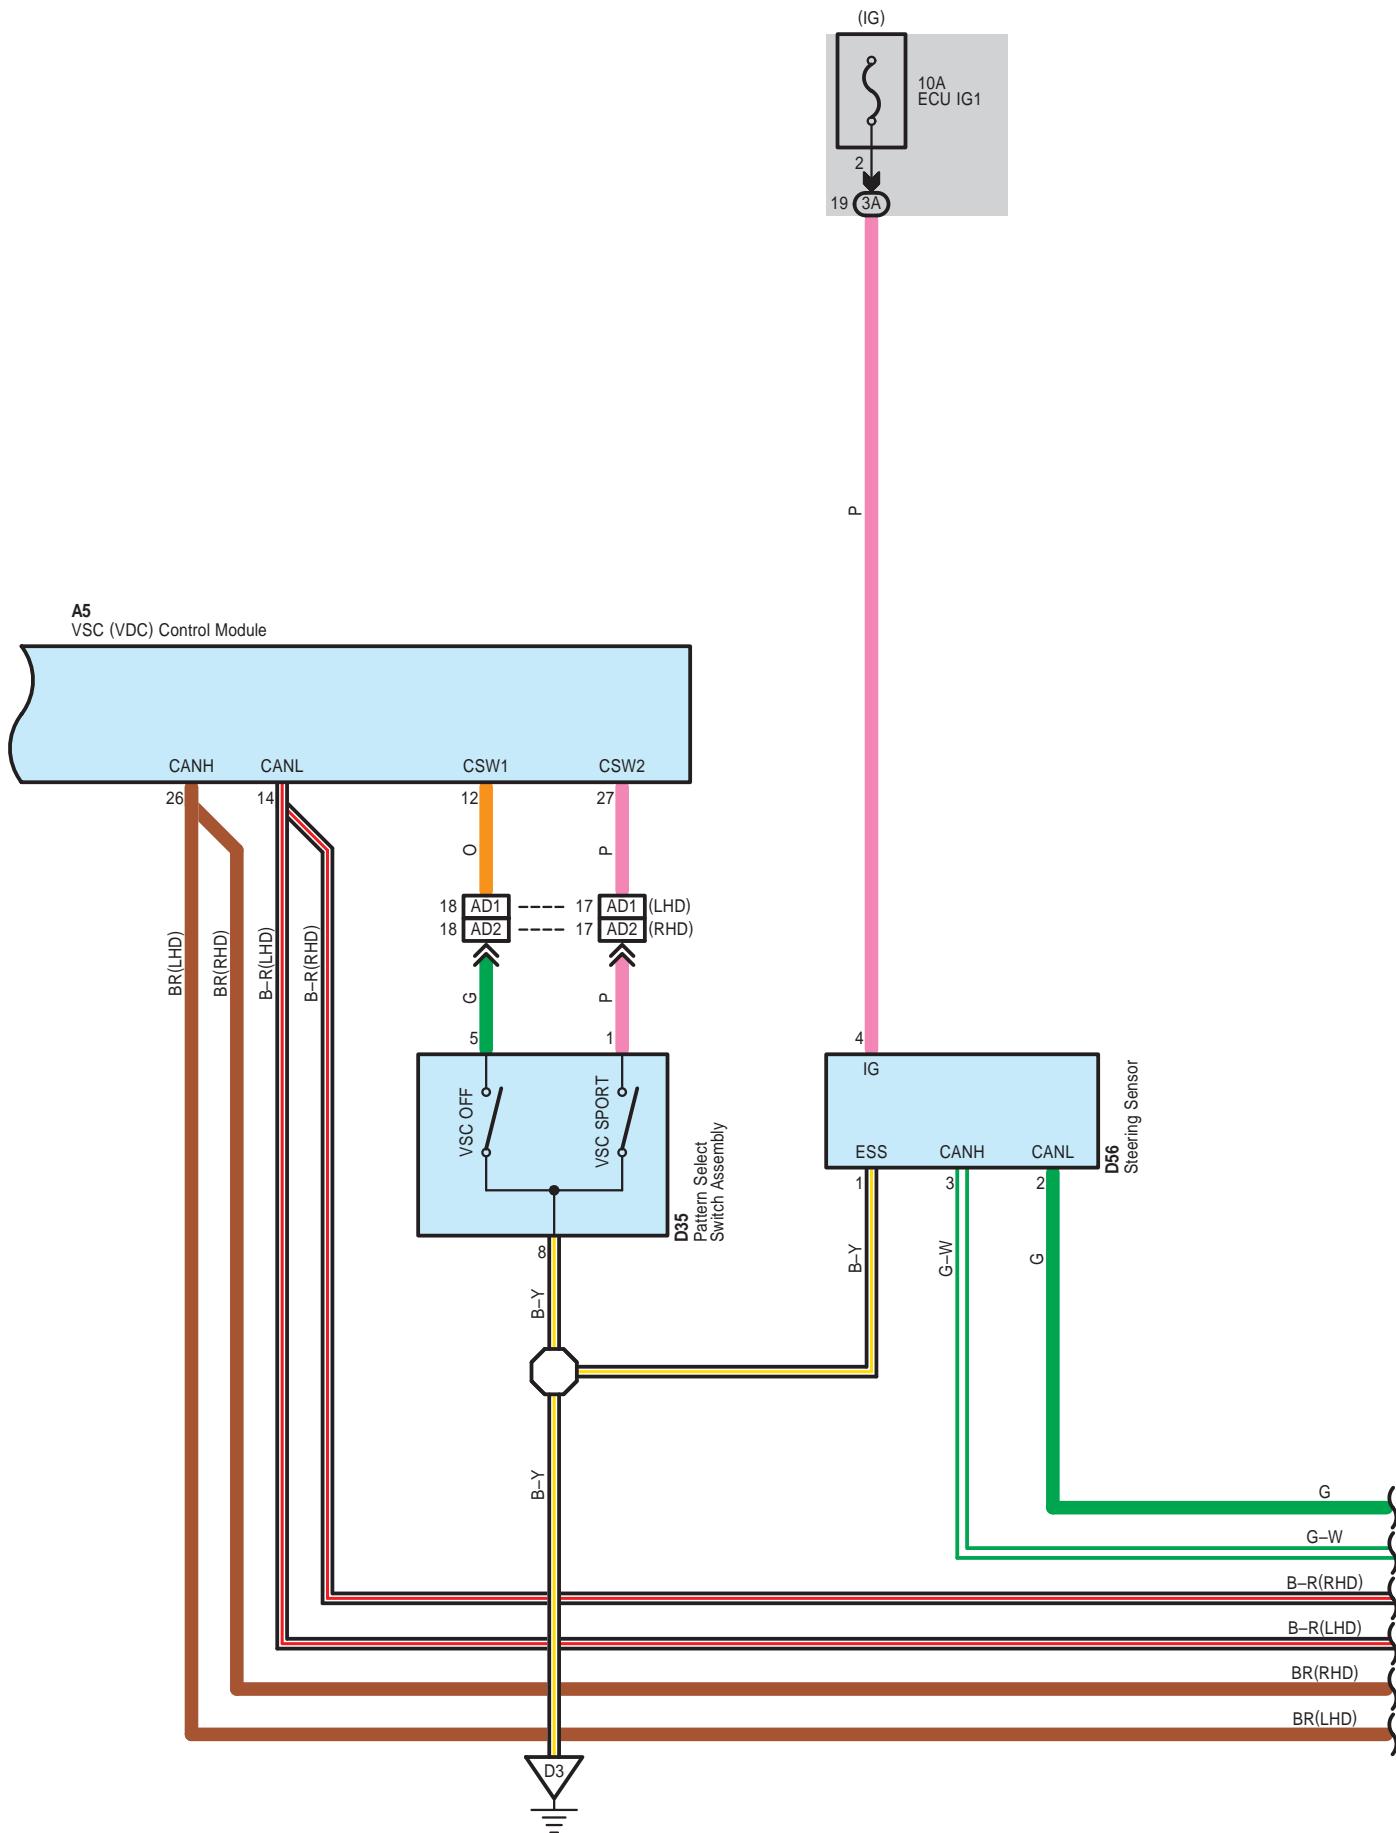


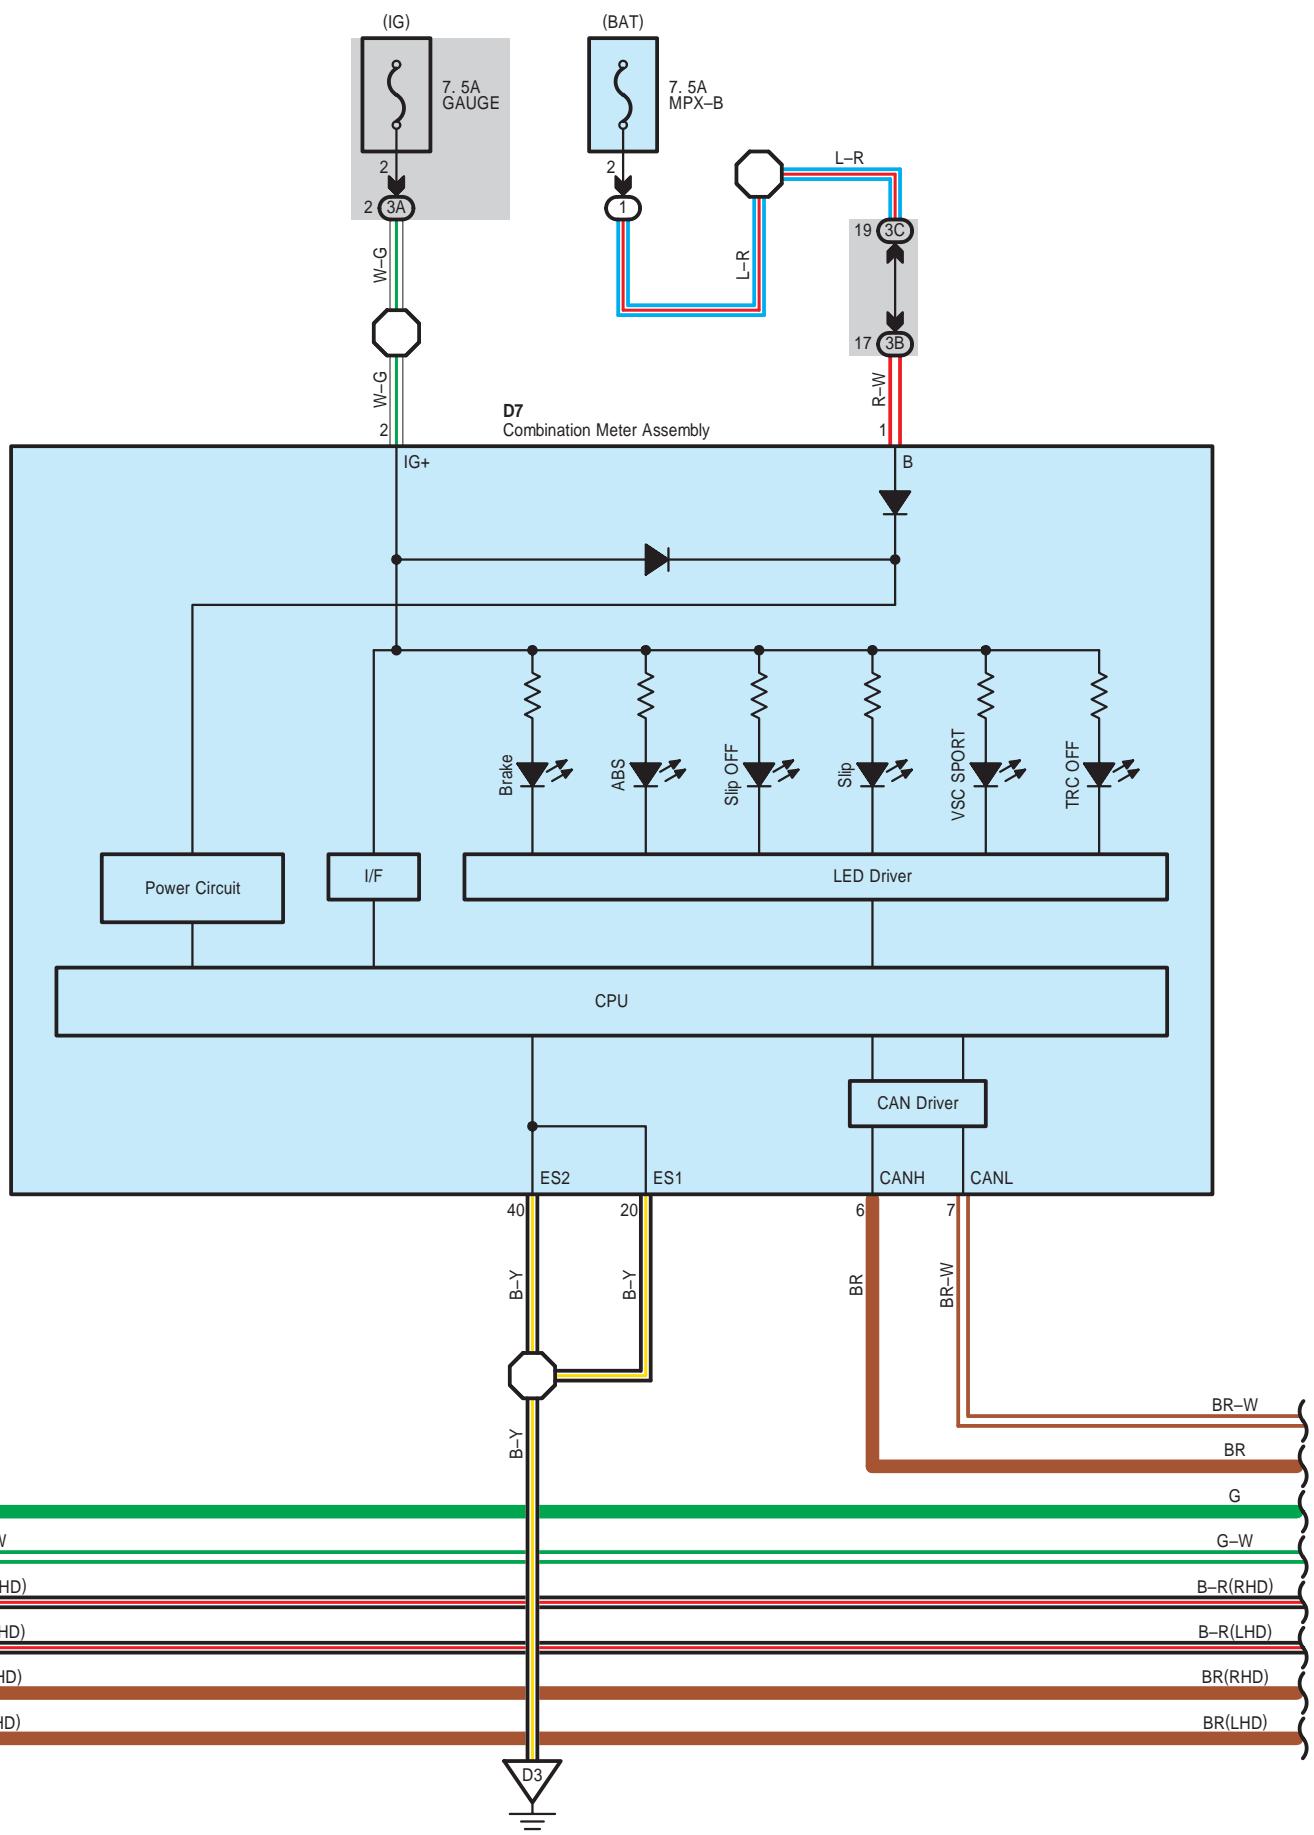

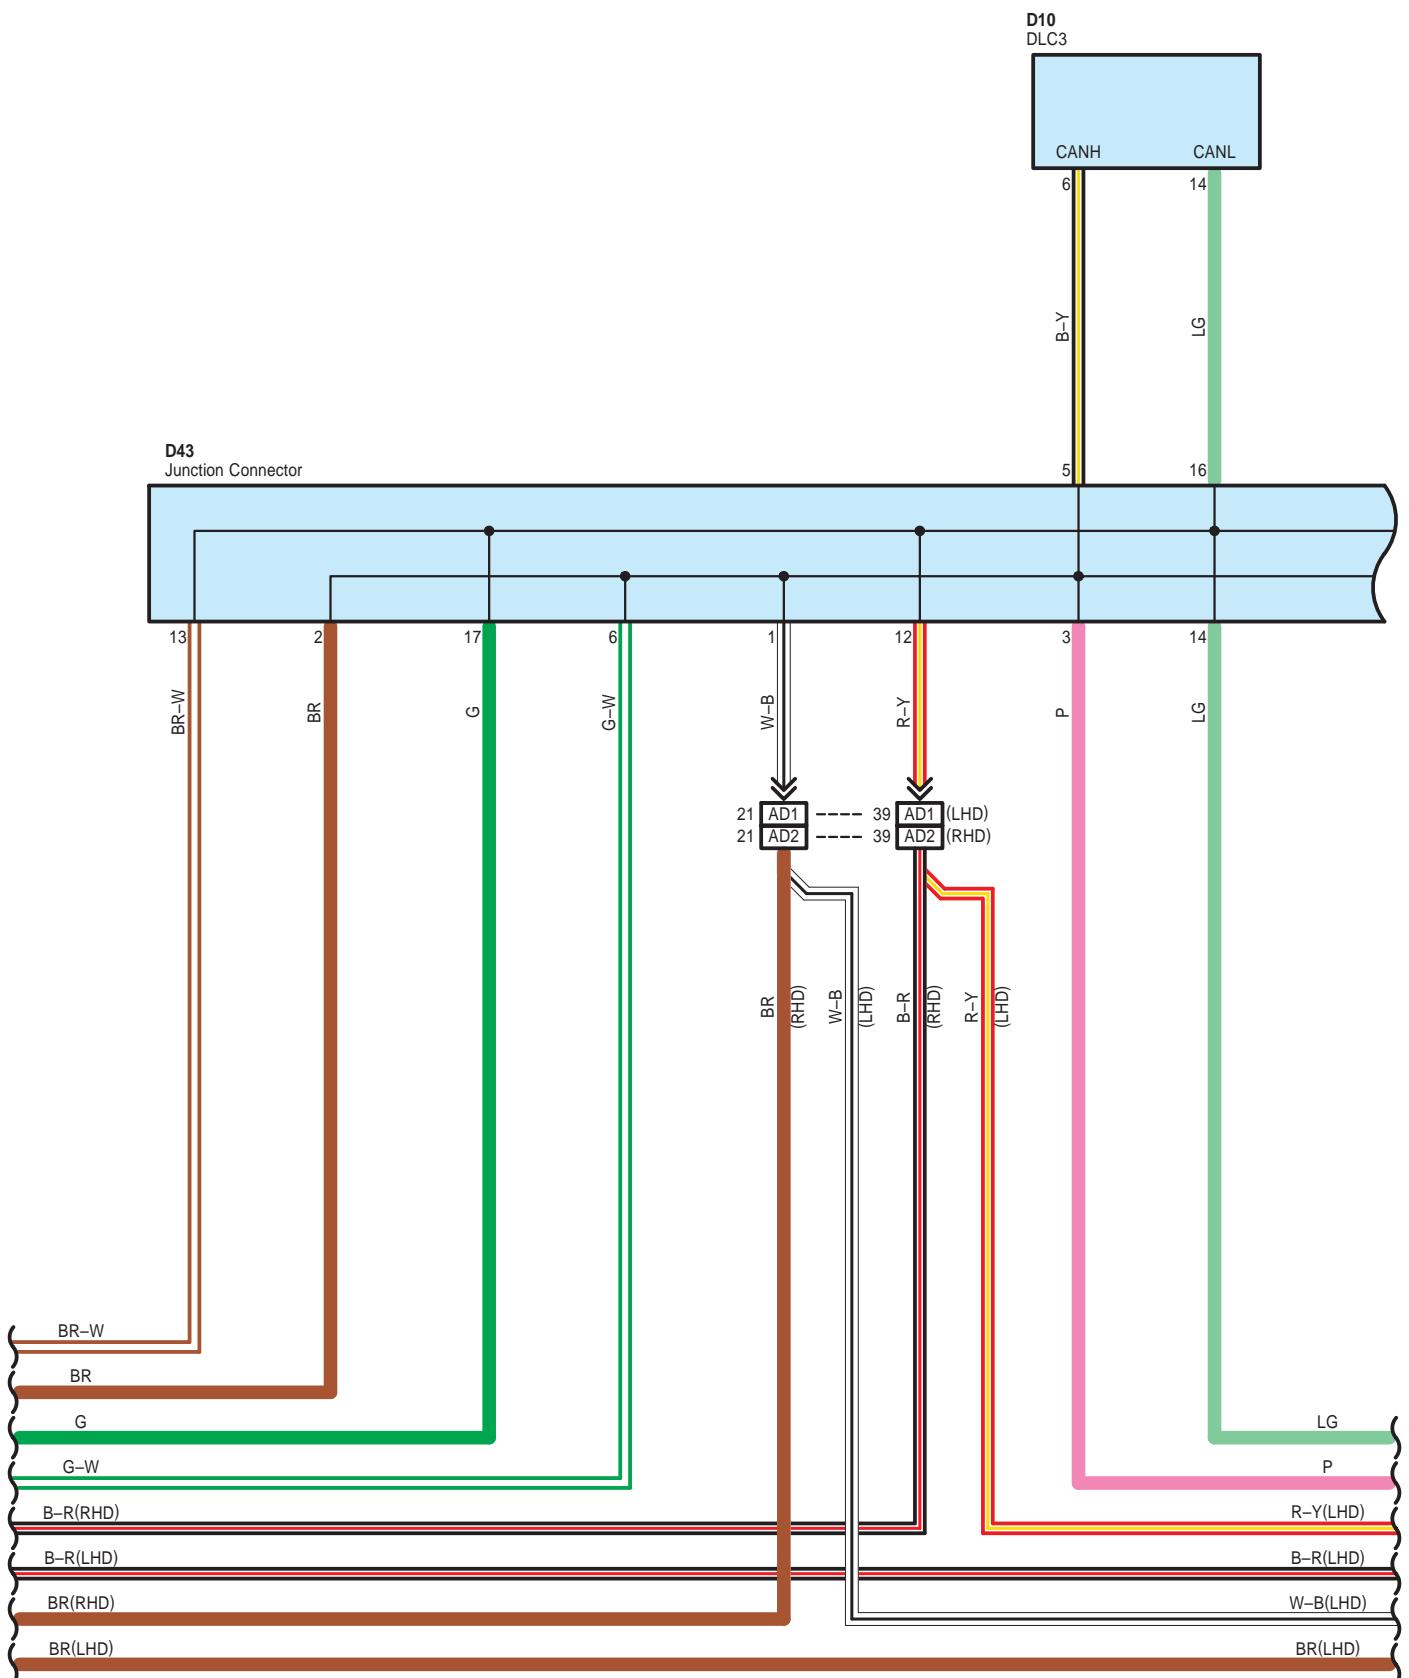


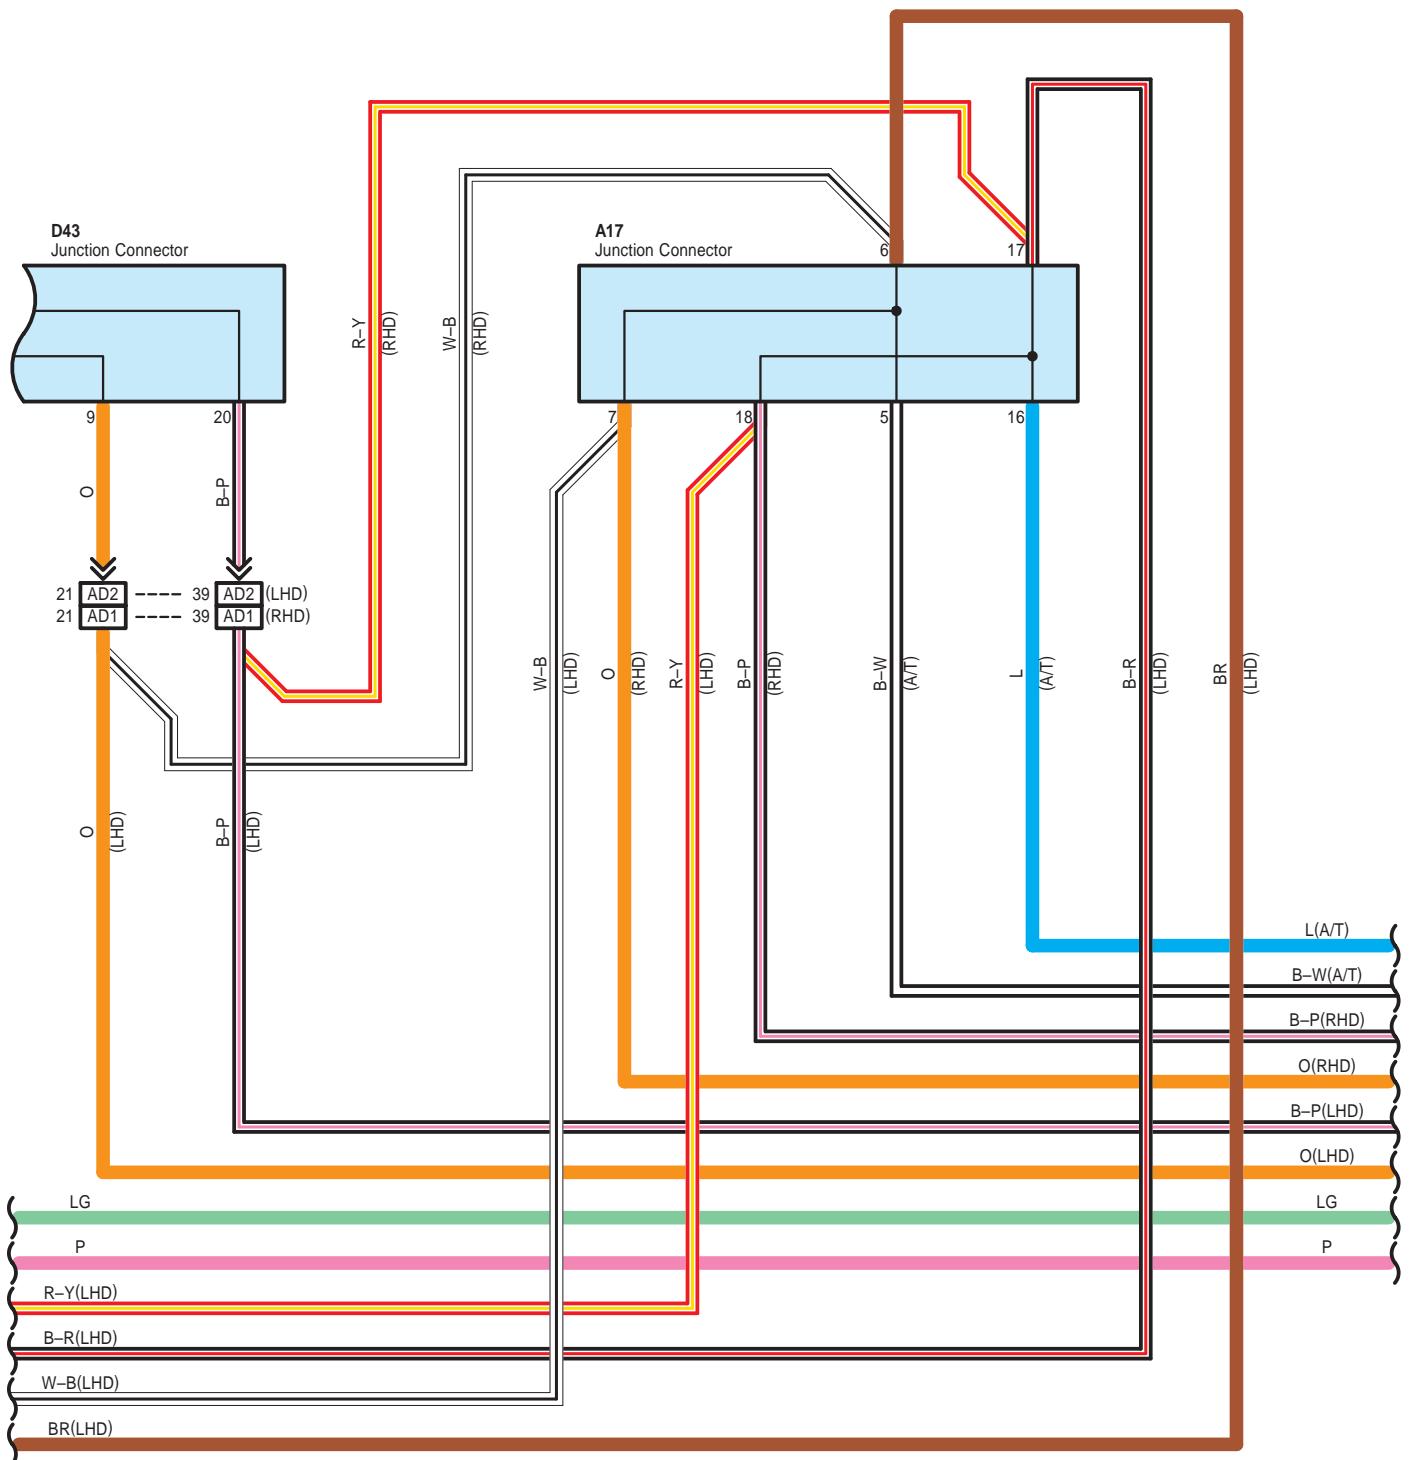



ABS, TRC and VSC

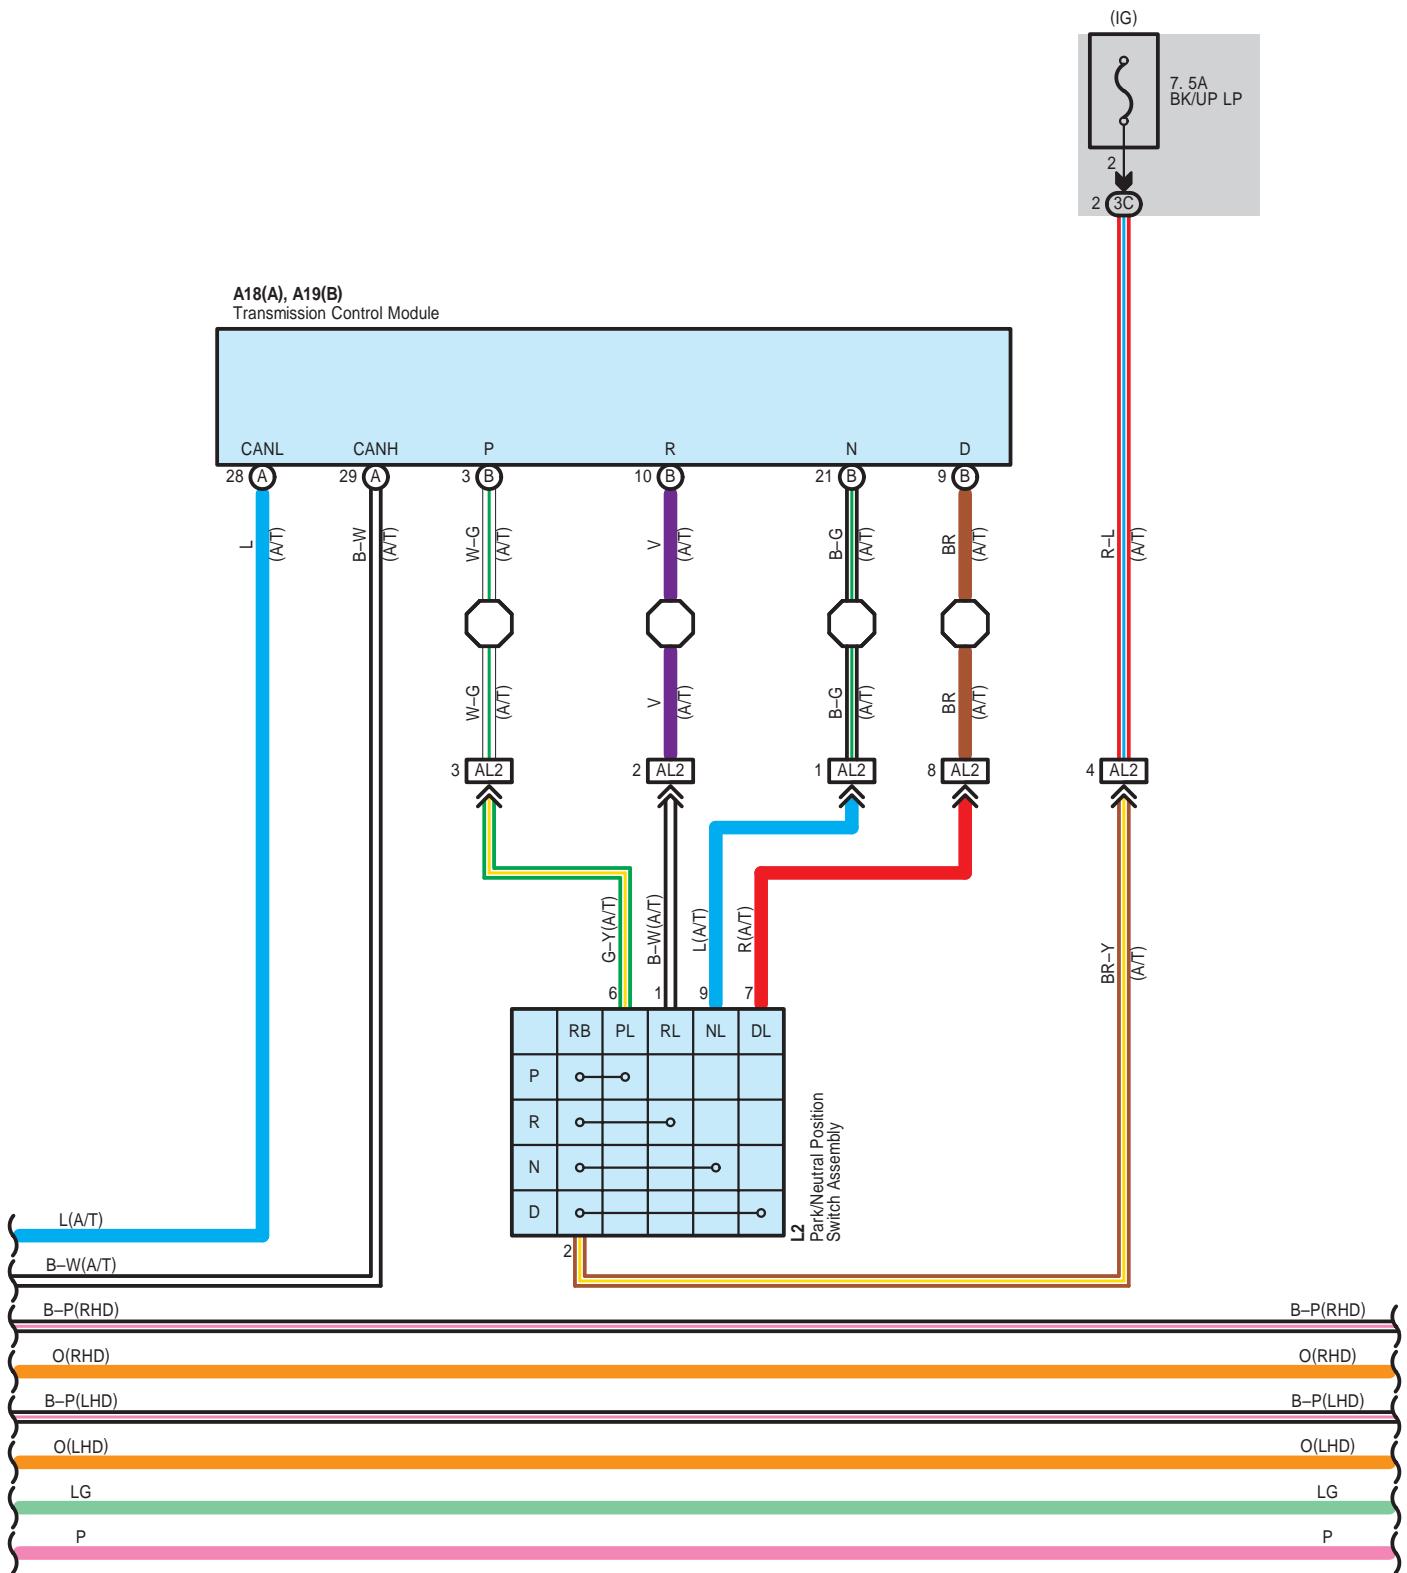

A33(A), A34(B), A36(D)
ECM

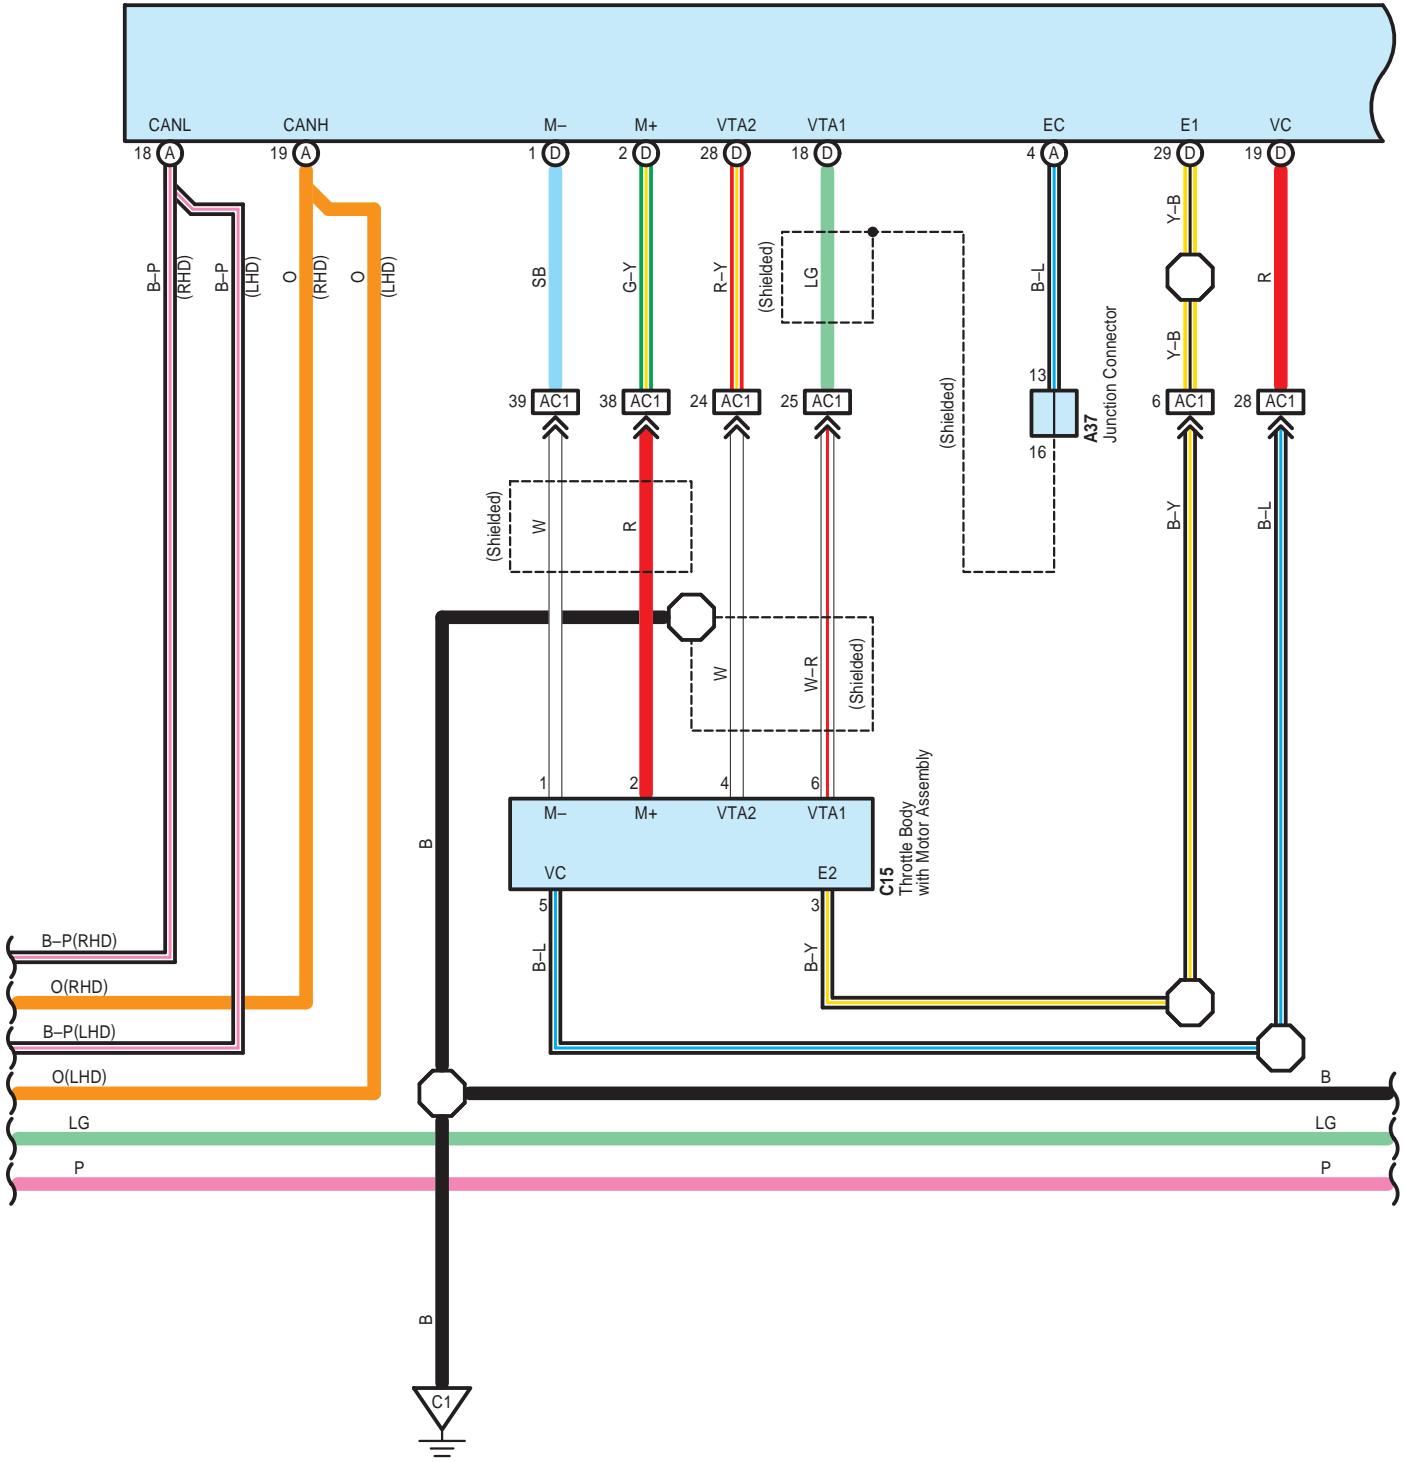

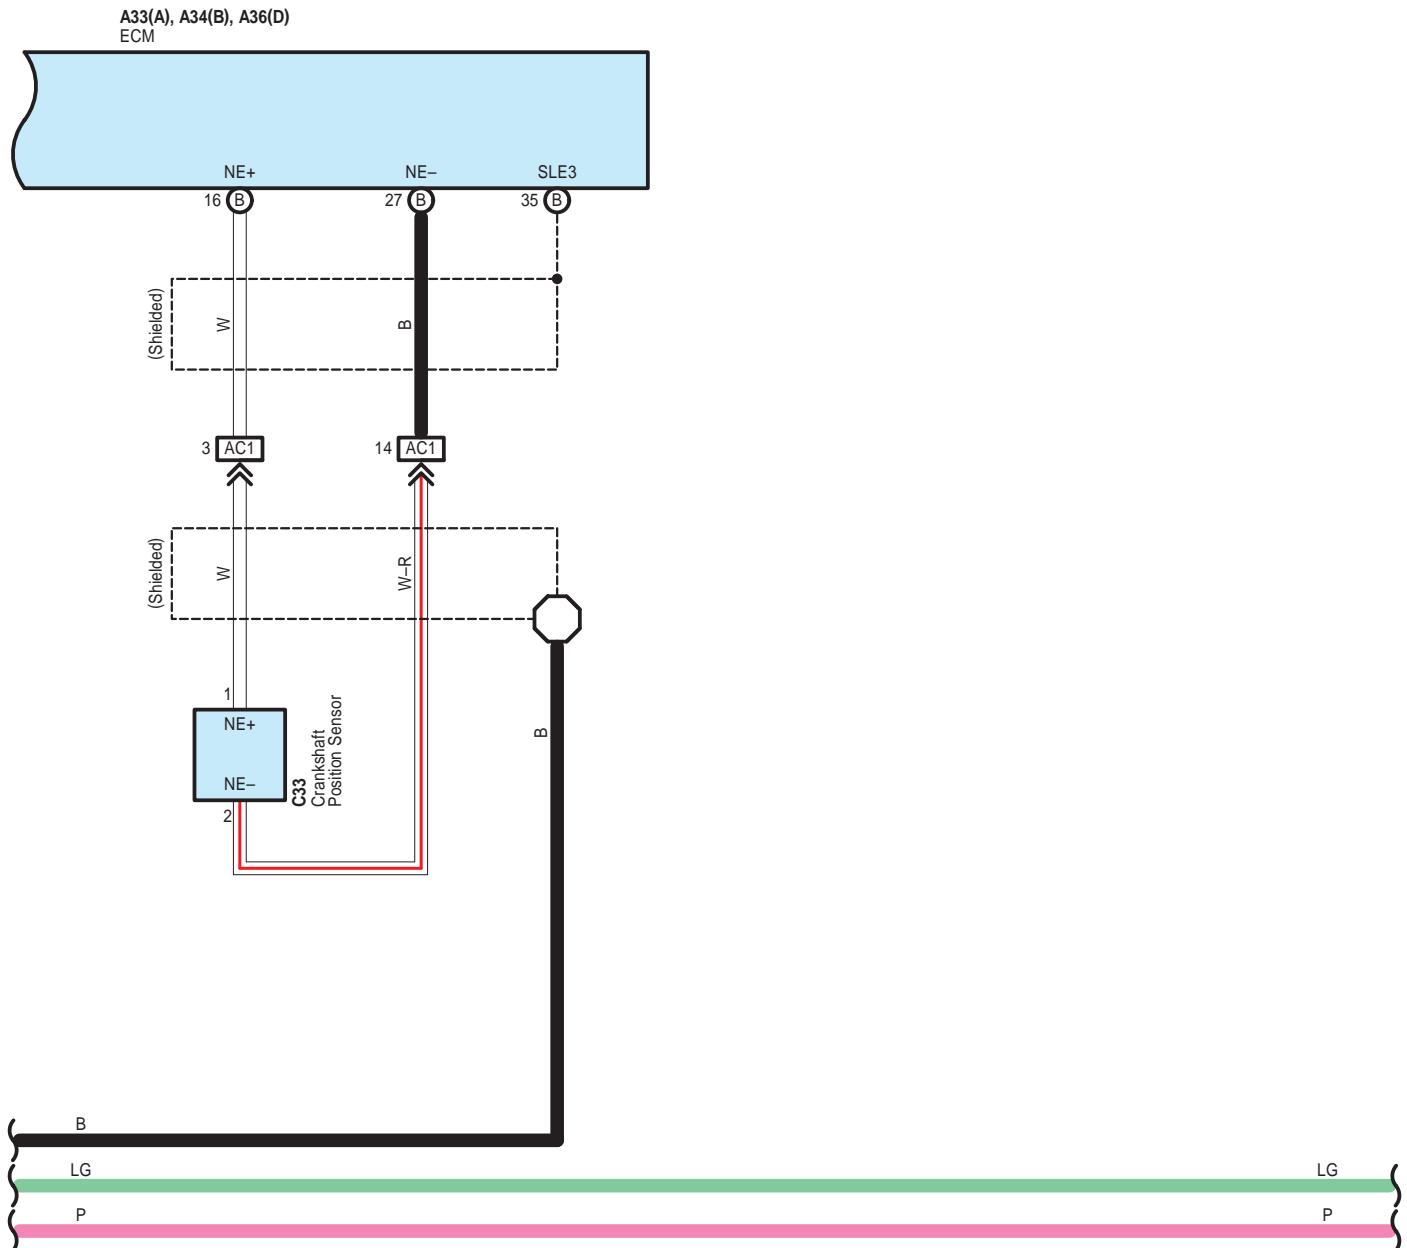


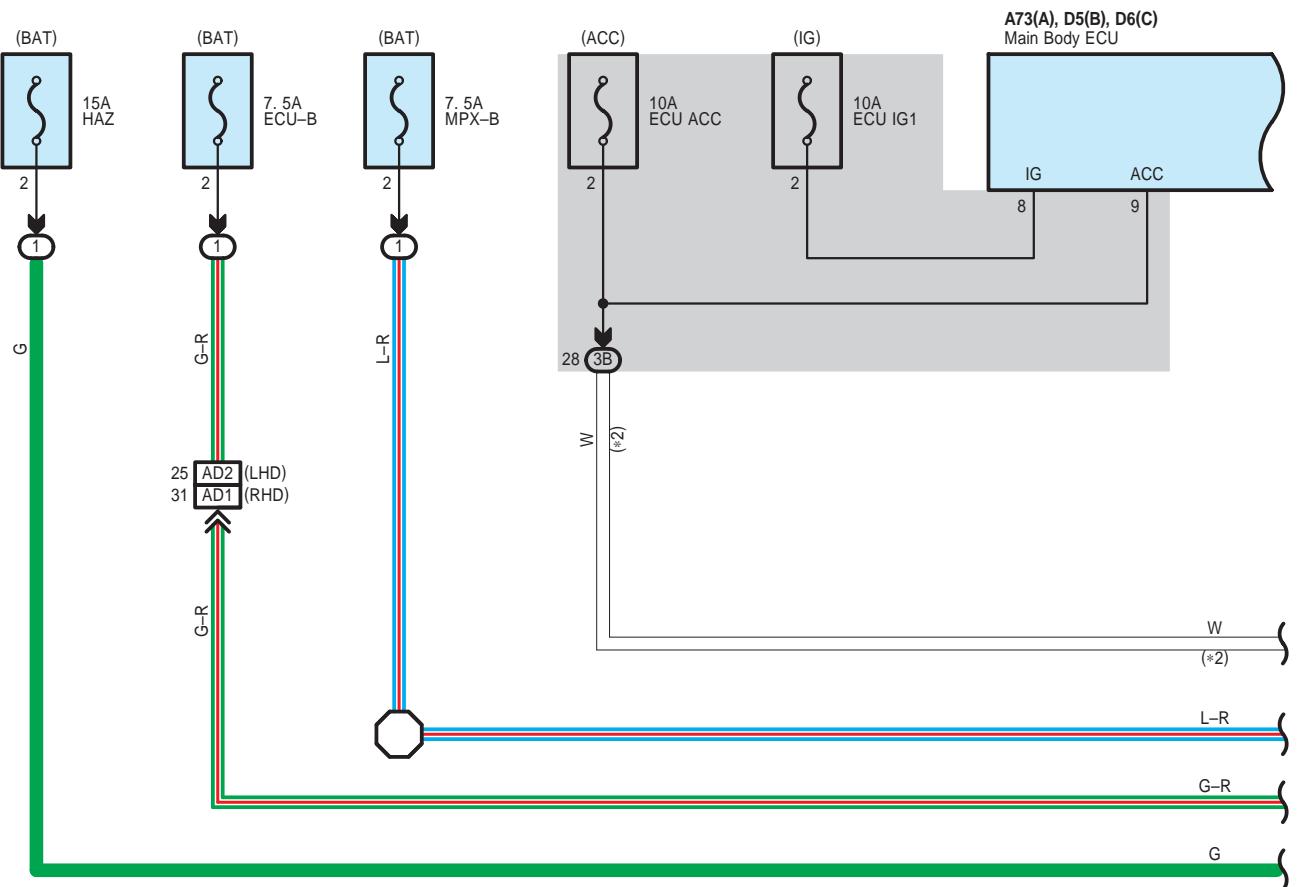


* 2 : w/ Entry & Start System



ABS, TRC and VSC

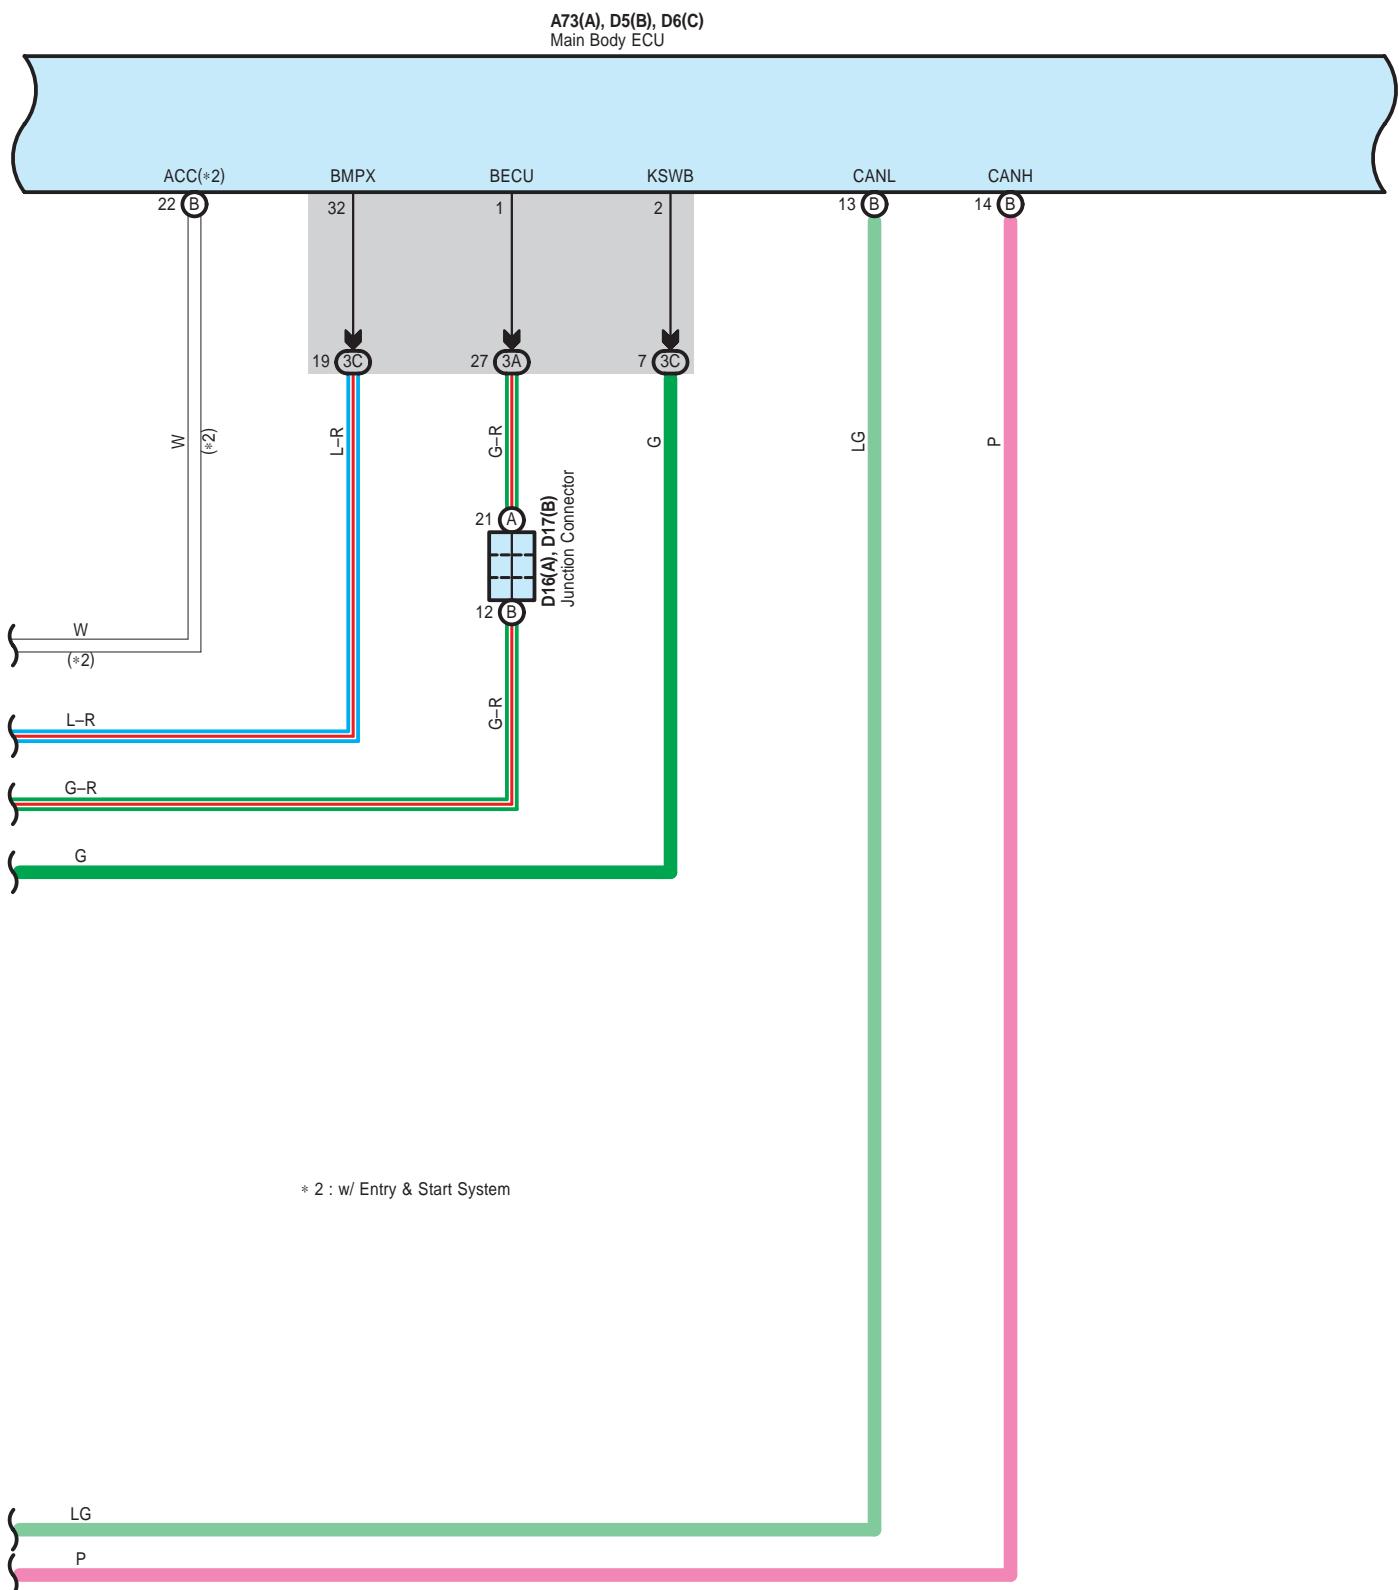

A73(A), D5(B), D6(C)
Main Body ECU

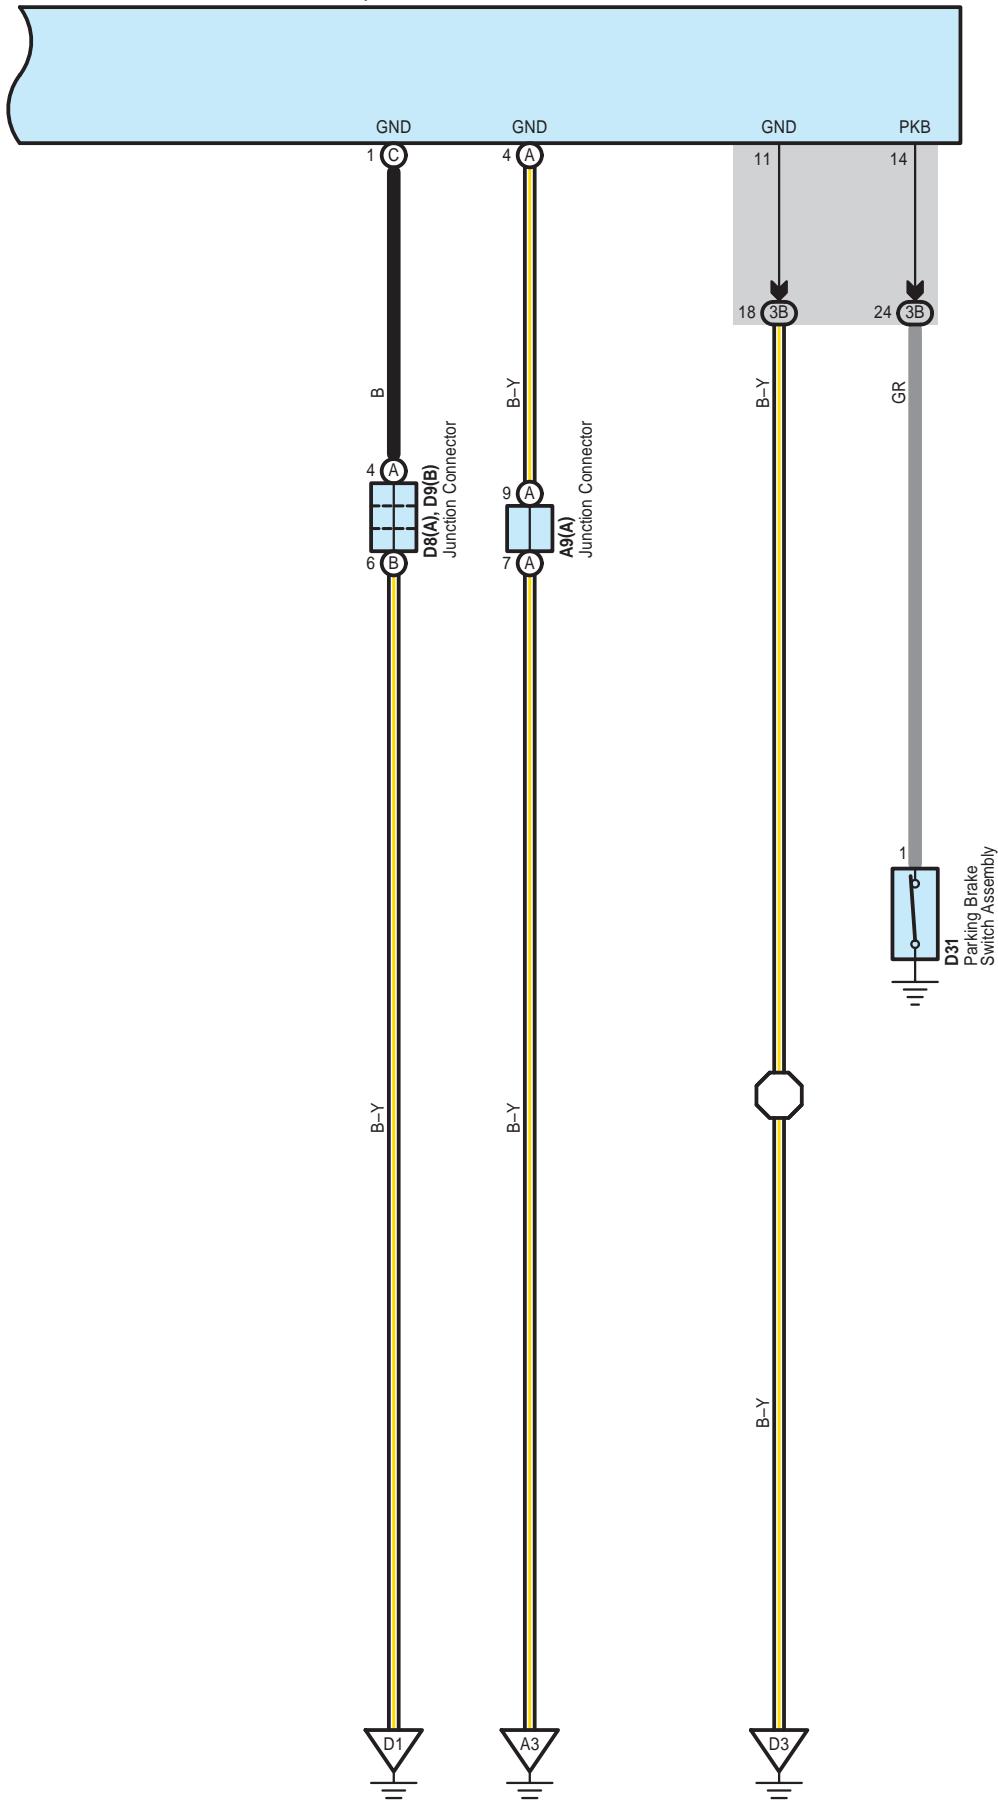

ABS, TRC and VSC

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page				
A5		39 (LHD)		A36		D		50 (RHD)		D10				
		47 (RHD)				A37		42 (LHD)						
A9	A	42 (LHD)		A42		50 (RHD)		D16	A	40 (LHD)				
		50 (RHD)				39 (LHD)				48 (RHD)				
A12		39 (LHD)		A73		47 (RHD)		D17	B	40 (LHD)				
		47 (RHD)				42 (LHD)				48 (RHD)				
A13		42 (LHD)		C15		50 (RHD)		D31		40 (LHD)				
		50 (RHD)				38 (LHD)				48 (RHD)				
A17		42 (LHD)		C33		46 (RHD)		D35		40 (LHD)				
		50 (RHD)				38 (LHD)				48 (RHD)				
A18	A	42 (LHD)		D5	B	46 (RHD)		D43		41 (LHD)				
		50 (RHD)				40 (LHD)				49 (RHD)				
A19	B	42 (LHD)		D6	C	48 (RHD)		D56		41 (LHD)				
		50 (RHD)				40 (LHD)				49 (RHD)				
A22		42 (LHD)		D7		48 (RHD)		G9		44 (LHD)				
		50 (RHD)				40 (LHD)				52 (RHD)				
A33	A	42 (LHD)		D8	A	48 (RHD)		H12		45 (LHD)				
		50 (RHD)				40 (LHD)				53 (RHD)				
A34	B	42 (LHD)		D9	B	48 (RHD)		L2		39 (LHD)				
		50 (RHD)				40 (LHD)				47 (RHD)				
A36	D	42 (LHD)		D9		48 (RHD)								

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD) 58 (RHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
AL2	54 (LHD) 58 (RHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)
GD1	55 (LHD) 59 (RHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
HD1	55 (LHD) 59 (RHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)

▽ : Ground Points

Code	See Page	Ground Points Location
A1	54 (LHD) 58 (RHD)	Front Fender Apron LH
A3	55 (LHD) 59 (RHD)	Cowl Side Panel RH Cowl Side Panel LH
A7	54 (LHD) 58 (RHD)	Front Fender Apron RH
C1	54 (LHD)	Engine Unit



: Ground Points


Code	See Page	Ground Points Location
C1	58 (RHD)	Engine Unit
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH

Memo


NOTICE : When inspecting or repairing the SRS, perform service in accordance with the following precautionary instructions and the procedure, and precautions in the Repair Manual applicable for the model year.

- Malfunction symptoms of the SRS are difficult to confirm, so the DTCs become the most important source of information when troubleshooting. When troubleshooting the SRS, always inspect the DTCs before disconnecting the battery.
- **Work must be started more than 90 seconds after the ignition or starter switch assembly is turned to the "LOCK" position (Ignition switch type) or the engine switch is pushed to the "OFF" position (Engine switch type) and the negative (-) terminal cable is disconnected from the battery.**
(The SRS is equipped with a back-up power source so that if work is started within 90 seconds from disconnecting the negative (-) terminal cable of the battery, the SRS may deploy.)
- When the negative (-) terminal cable is disconnected from the battery, the memory of the clock and audio system will be cleared. So before starting work, make a record of the contents in the audio memory system. When work is finished, reset the audio systems as they were before and adjust the clock. Some vehicles have power tilt steering, power telescopic steering, power seat and power outside rear view mirror which are all equipped with memory function. However, it is not possible to make a record of these memory contents. So when the work is finished, it will be necessary to explain it to your customer, and ask the customer to adjust the features and reset the memory. To avoid erasing the memory in each system, never use a back-up power supply from outside the vehicle.
- Before repair, remove the airbag sensor if shocks are likely to be applied to the sensor during repair.
- Do not expose the following parts directly to hot air or flame;
- Even in cases of a minor collision where the SRS does not deploy, the following parts should be inspected;
- Never use SRS parts from another vehicle. When replacing parts, replace with new parts.
- For the purpose of reuse, never disassemble and repair the following parts.
- If the following parts have been dropped, or have cracks, dents and other defects in their case, bracket, and connector, replace with new one.
- Use a volt/ohmmeter with high impedance (10 kΩ/V minimum) for troubleshooting electrical circuits of the system.
- Information labels are attached to the periphery of the SRS components. Follow the instructions of the notice.
- After work on the SRS is completed, check the SRS warning light.
- If the vehicle is equipped with a mobile communication system, refer to the precaution in the IN section of the Repair Manual.


* Driver's Airbag Module
* Passenger's Airbag Module
* Side Airbag Module
* Curtain Airbag Module
* Pretensioner
* Airbag Control Module
* Front Sub Sensor
* Side Airbag Sensor
* Curtain Airbag Sensor
* Front Door Impact Sensor
* Driver's Knee Airbag Module
* Satellite Safing Sensor

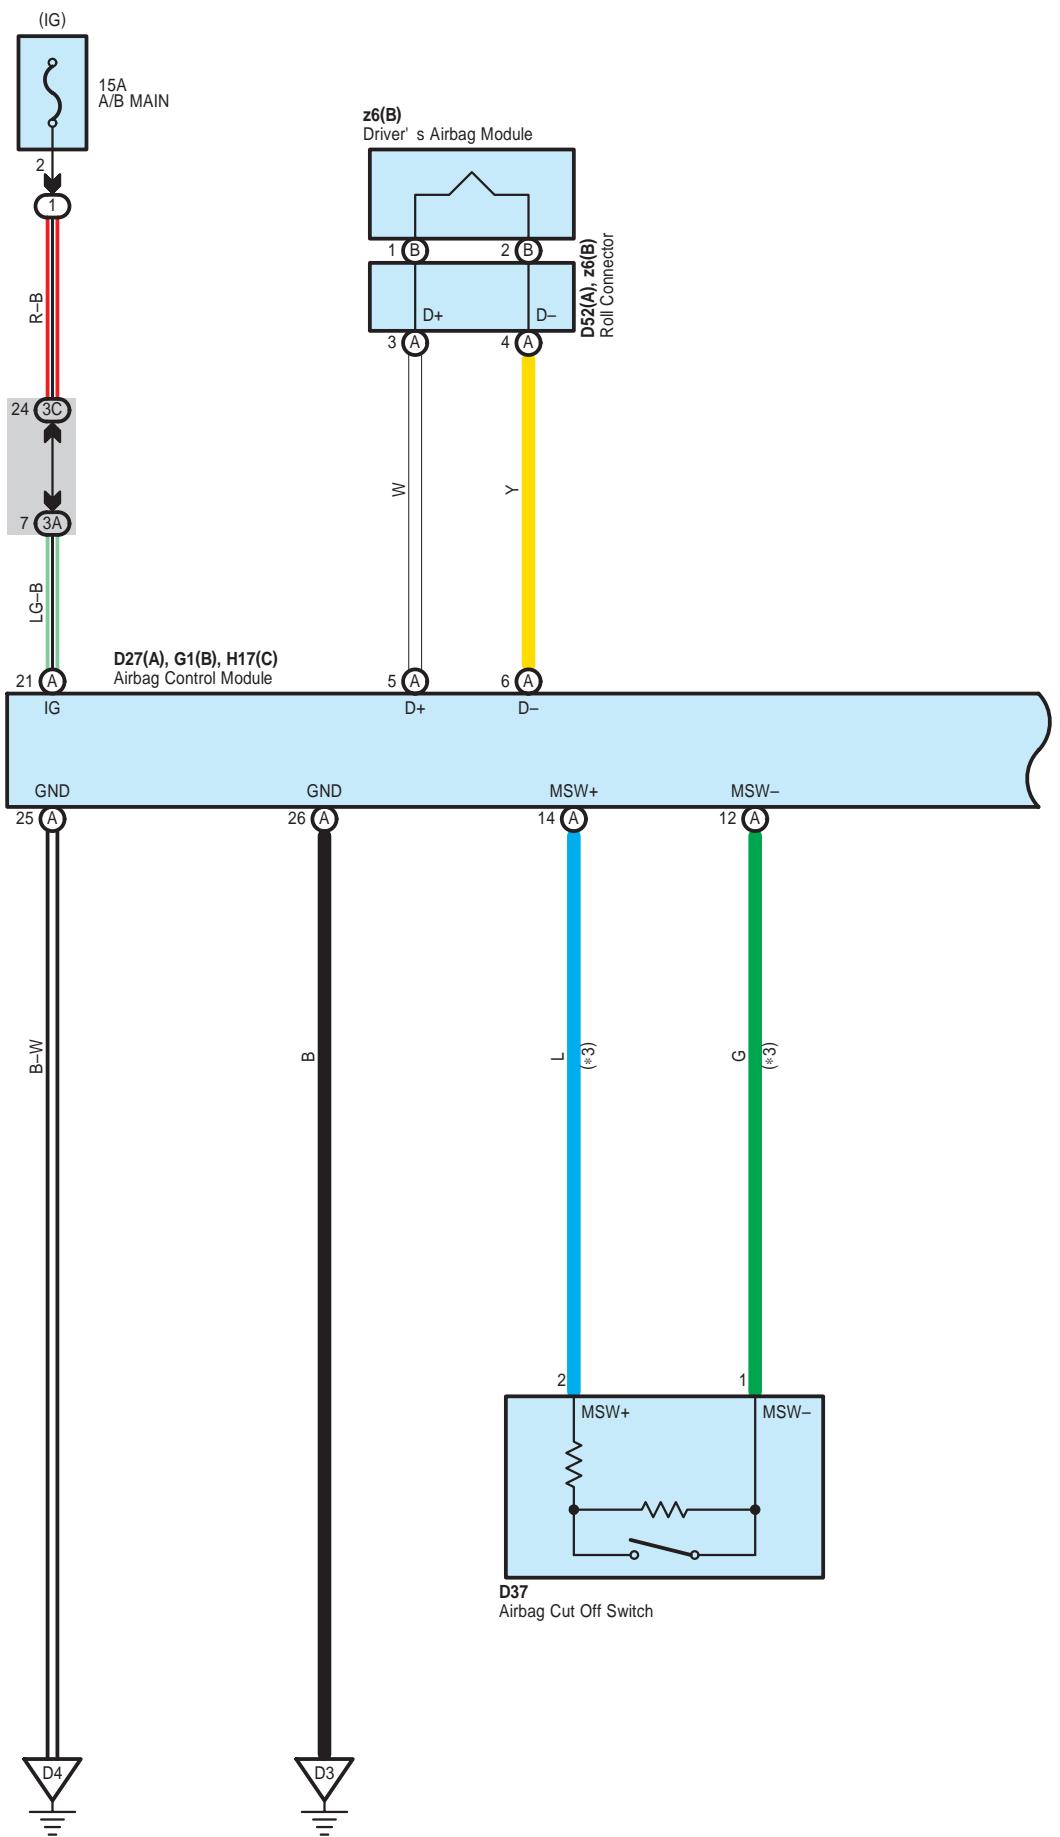

D30(A)
Passenger' s Airbag Module

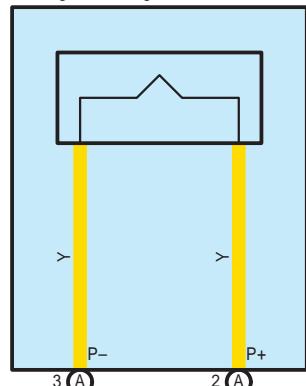

D62
Driver' s Knee Airbag Module

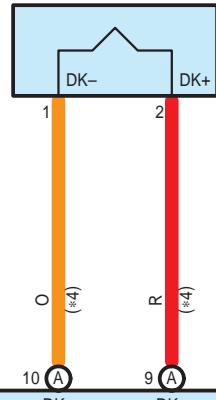

D27(A), G1(B), H17(C)
Airbag Control Module

30(A) SL+ 28(A) SL- 27(A) SR- 29(A) SR+ 2(C) PL+ 1(C) PL-

L-W L-Y R-Y W-B Y-R Y-G

4 DA3 3 DA3 1 DA3 2 DA3 2 1


2 1 RTNIN BUSIN 1 RTNIN BUSIN 2 1

A58
Front Sub Sensor LH


A51
Front Sub Sensor RH


H22
Pretensioner LH


* 3 : w/ Airbag Cut Off Switch
* 4 : w/ Driver' s Knee Airbag Module

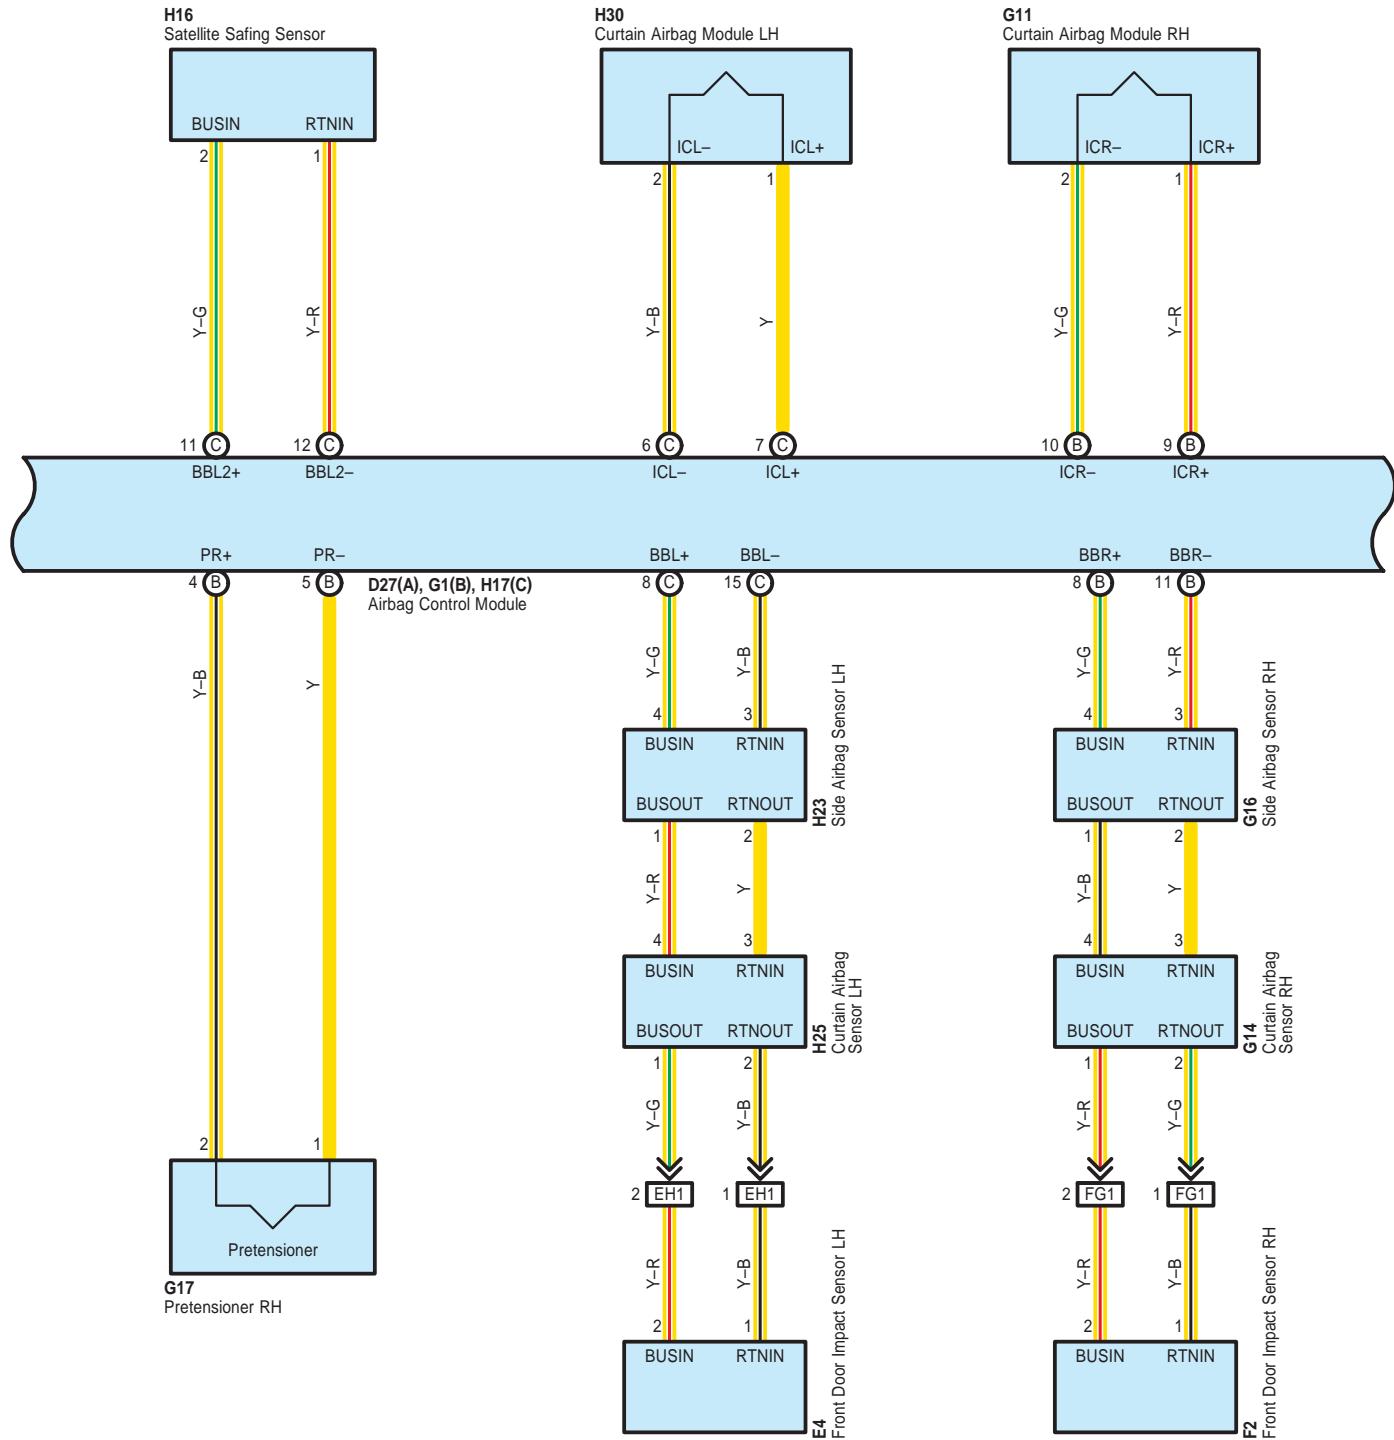

* 5 : w/ Passenger Airbag Cut-Off Indicator

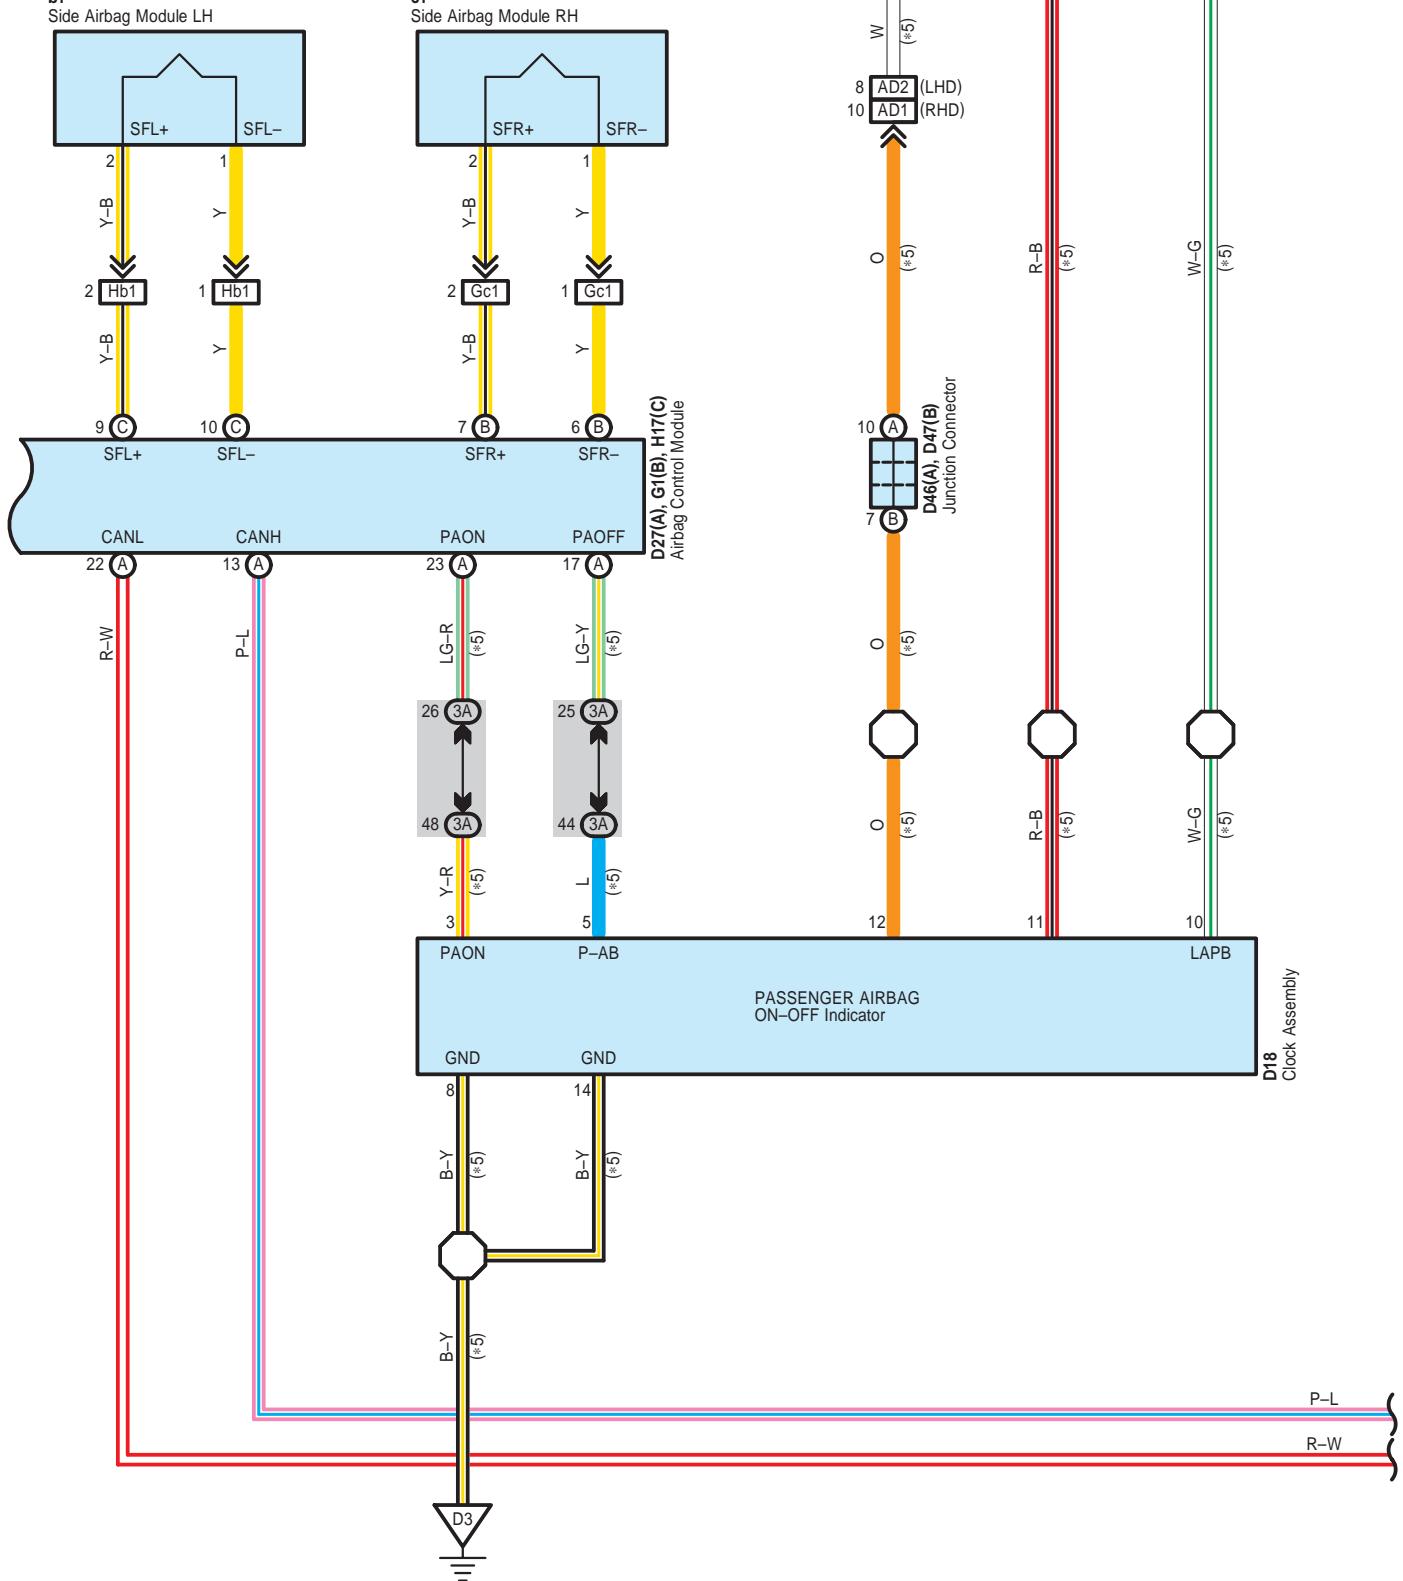

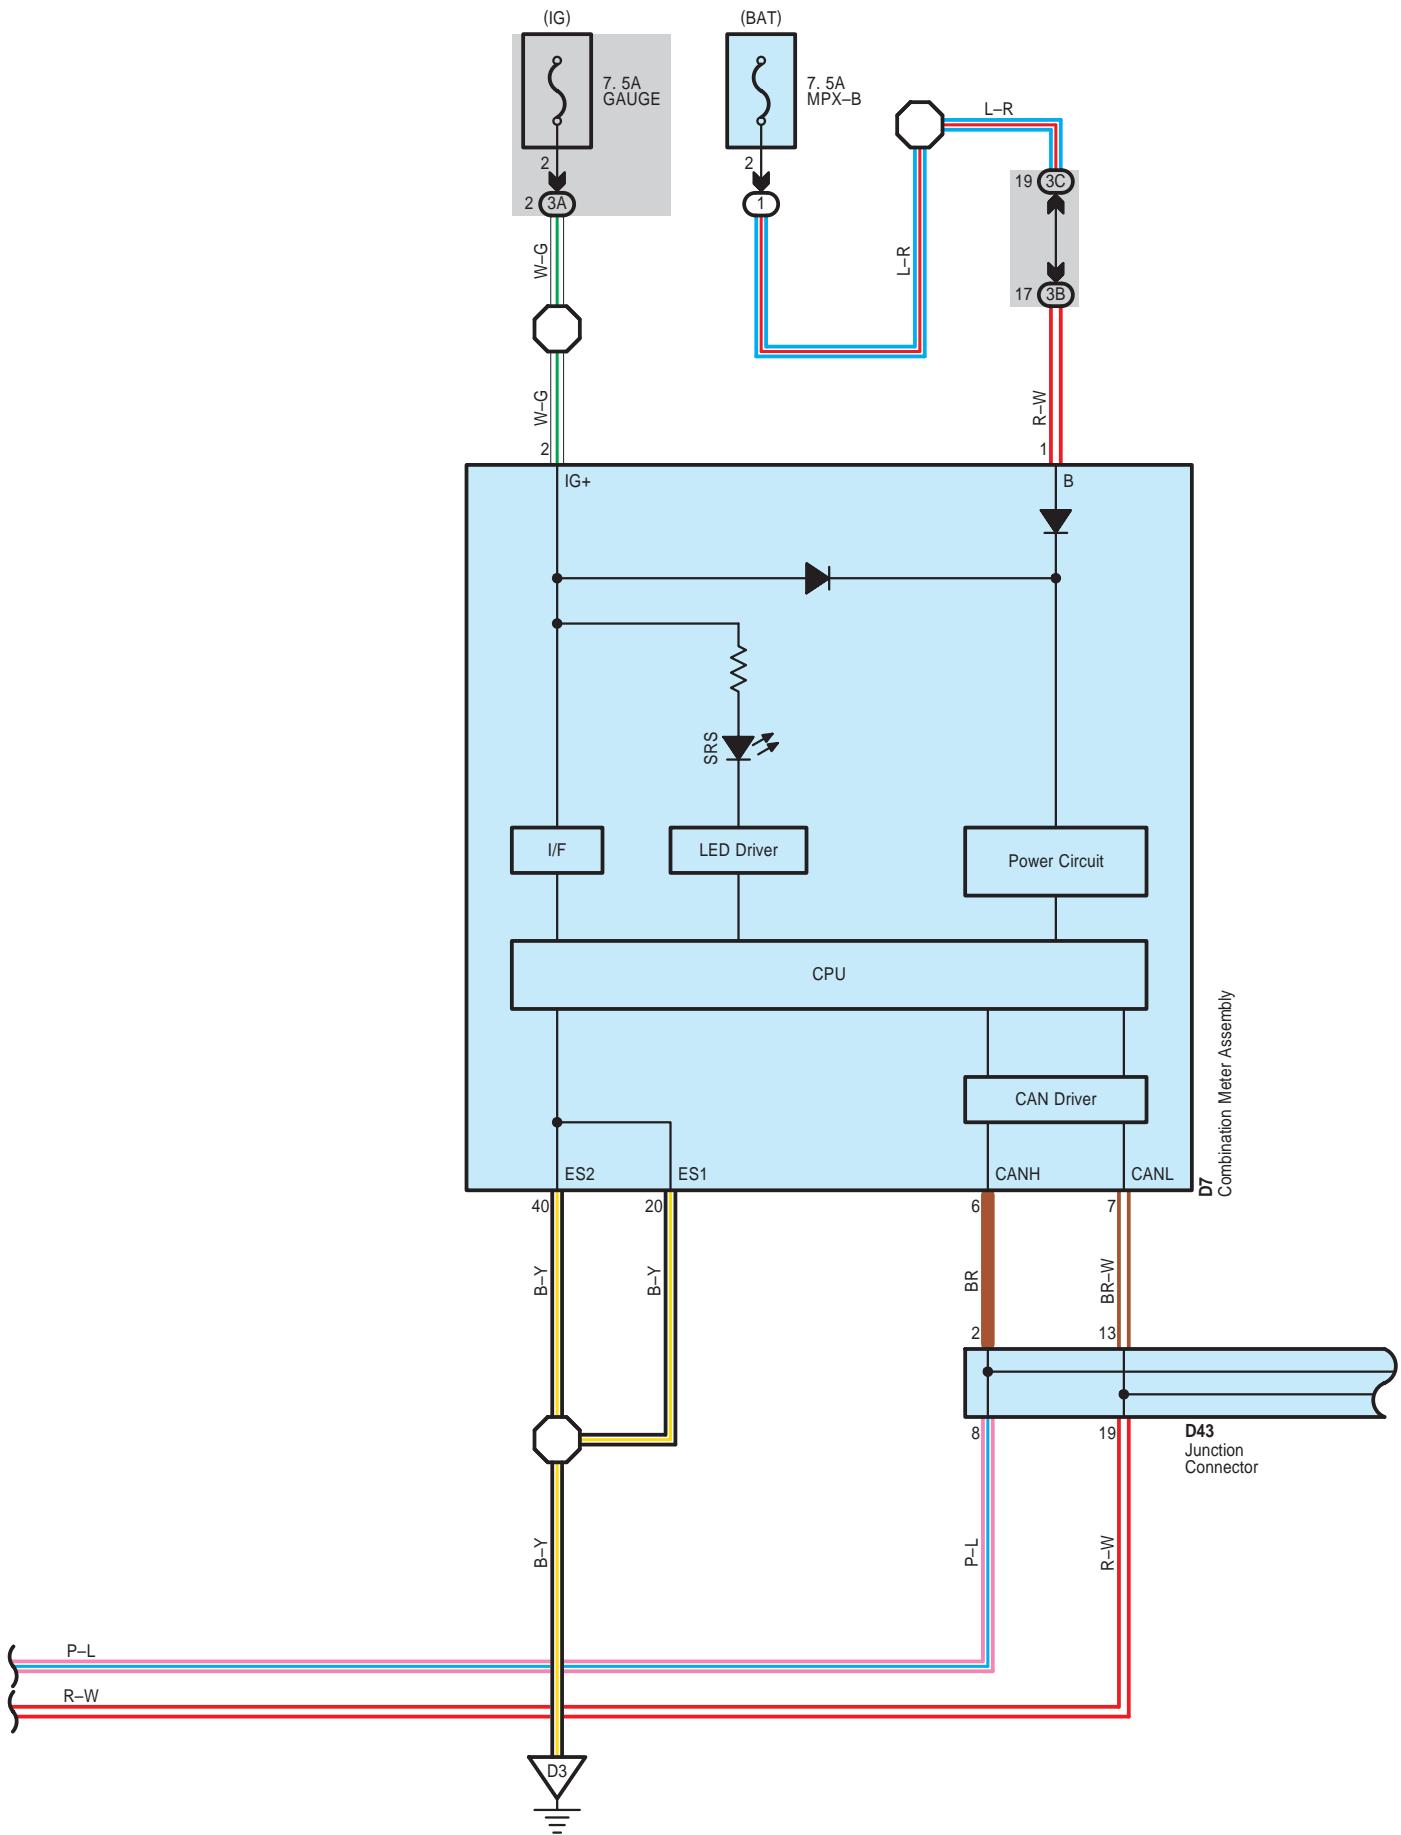

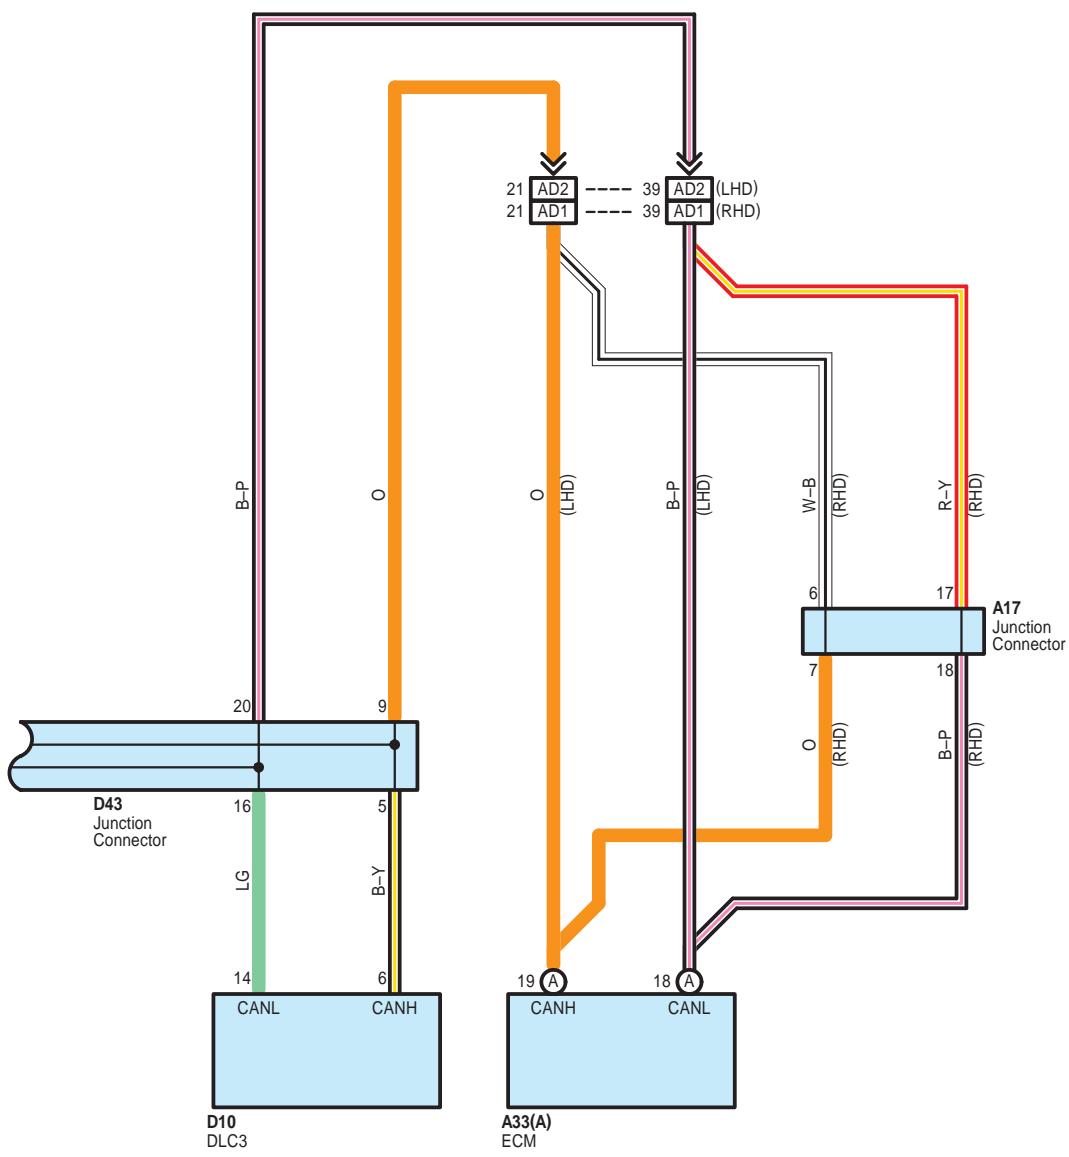

SRS

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A17	50 (RHD)	D46	A	G17	52 (RHD)
A33	A	42 (LHD)	49 (RHD)	H16	45 (LHD)
		50 (RHD)	41 (LHD)		53 (RHD)
A51		39 (LHD)	49 (RHD)	H17	42 (LHD)
		47 (RHD)	41 (LHD)		50 (RHD)
A58		39 (LHD)	49 (RHD)	H22	45 (LHD)
		47 (RHD)	41 (LHD)		53 (RHD)
D7		40 (LHD)	49 (RHD)	H23	45 (LHD)
		48 (RHD)	44 (LHD)		53 (RHD)
D10		40 (LHD)	52 (RHD)	H25	45 (LHD)
		48 (RHD)	44 (LHD)		53 (RHD)
D18		40 (LHD)	52 (RHD)	H30	45 (LHD)
		48 (RHD)	42 (LHD)		53 (RHD)
D27	A	40 (LHD)	50 (RHD)	b1	45 (LHD)
		48 (RHD)	44 (LHD)		53 (RHD)
D30	A	40 (LHD)	52 (RHD)	c1	45 (LHD)
		48 (RHD)	44 (LHD)		53 (RHD)
D37		40 (LHD)	52 (RHD)	z6	42 (LHD)
		48 (RHD)	44 (LHD)		50 (RHD)
D43		41 (LHD)	52 (RHD)		
		49 (RHD)	G17		
			44 (LHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

○ : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	


□ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
DA3	55 (LHD) 59 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Behind Glove Box)
EH1	55 (LHD) 59 (RHD)	Front Door Wire LH and No. 2 Floor Wire (Cowl Side Panel LH)
FG1	55 (LHD) 59 (RHD)	Front Door Wire RH and No. 1 Floor Wire (Cowl Side Panel RH)
Gc1	56 (LHD) 60 (RHD)	No. 1 Floor Wire and Seat Wire RH (Under Front Seat Cushion RH)
Hb1	56 (LHD) 60 (RHD)	No. 2 Floor Wire and Seat Wire LH (Under Front Seat Cushion LH)


▽ : Ground Points


Code	See Page	Ground Points Location
D3	55 (LHD) 59 (RHD)	Instrument Panel Brace RH Instrument Panel Brace LH
D4	55 (LHD) 59 (RHD)	Cowl Side Panel RH Cowl Side Panel LH

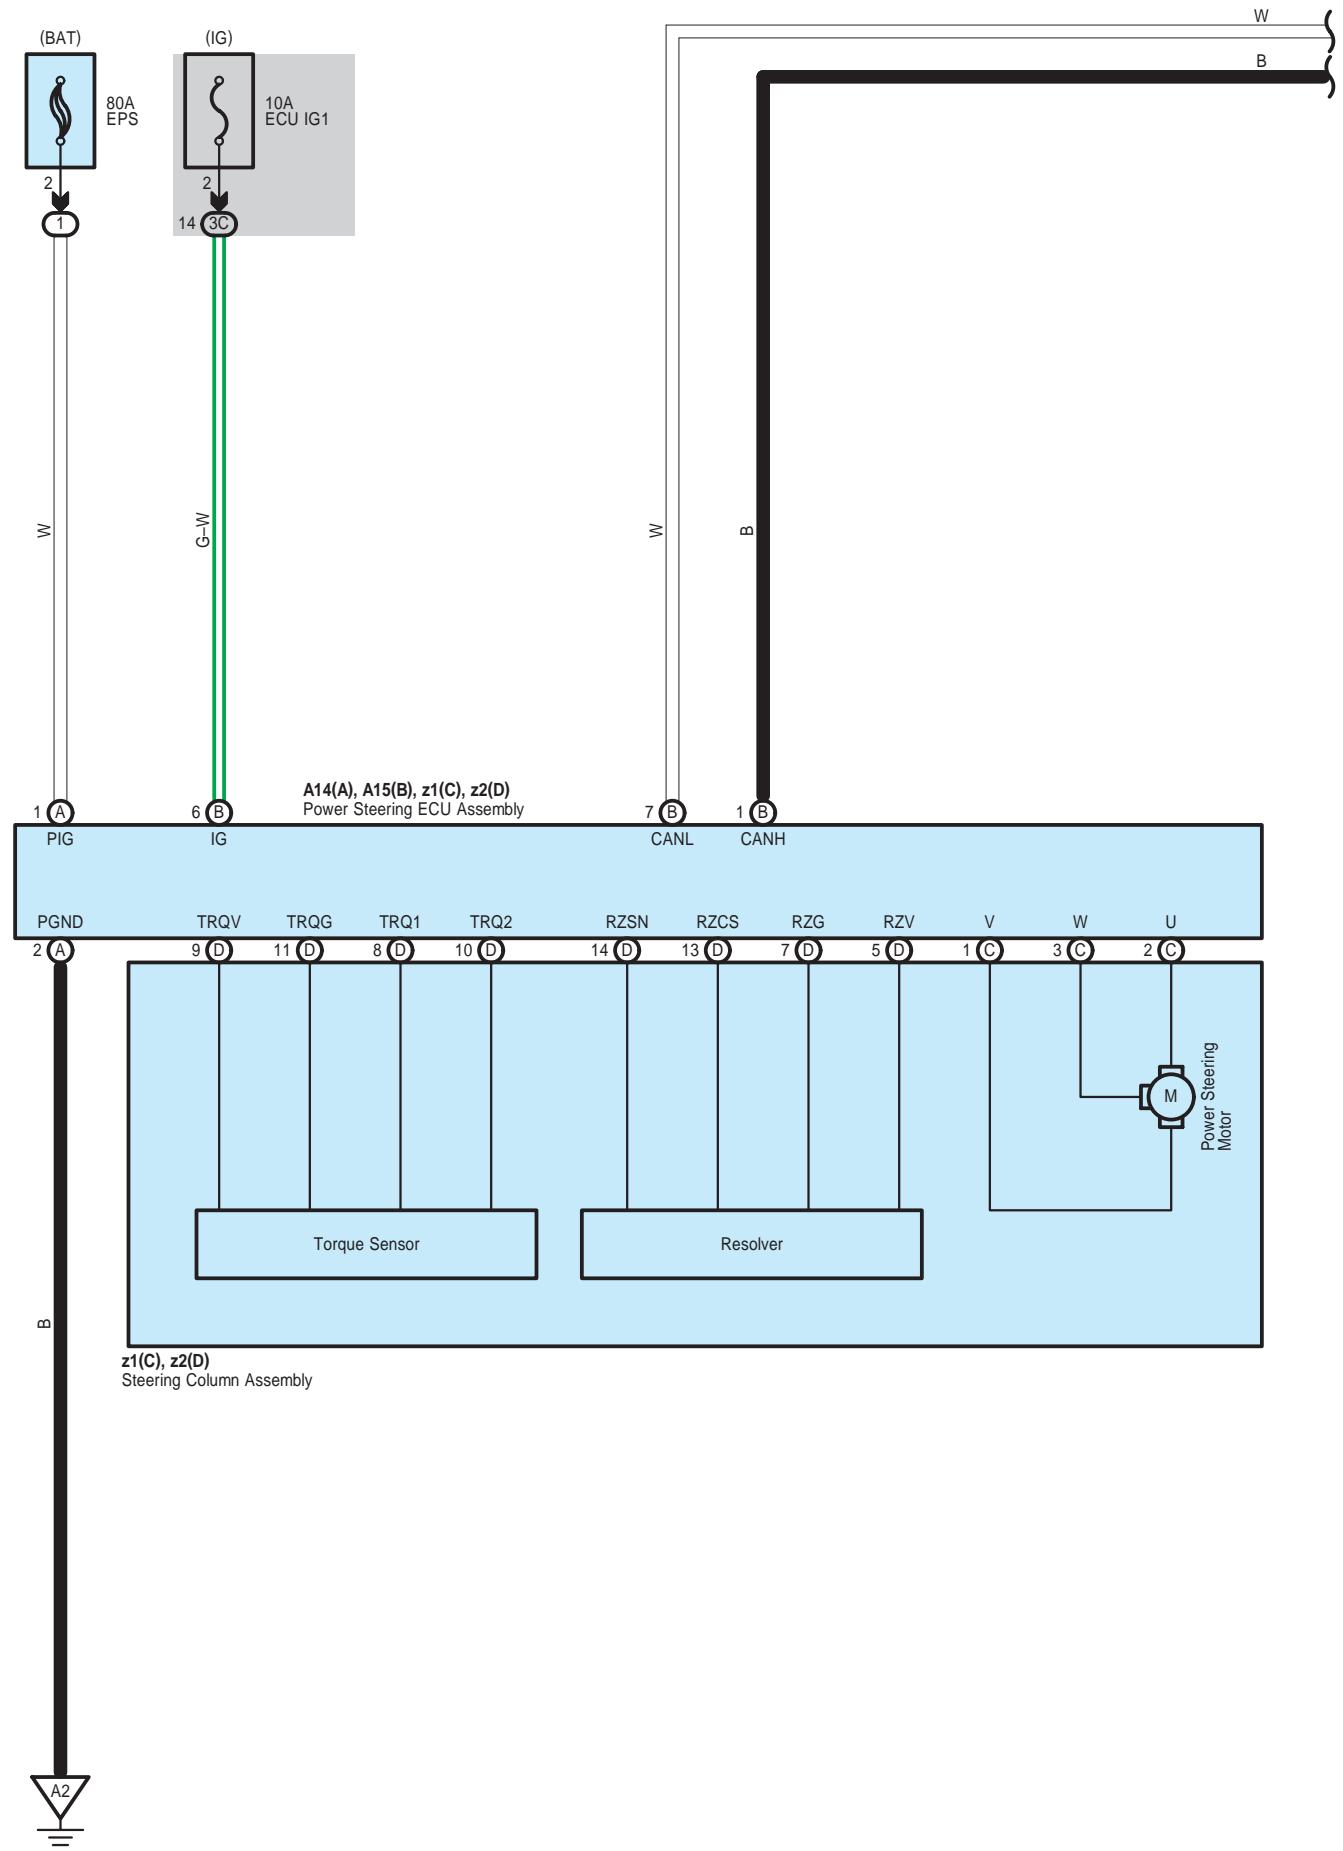


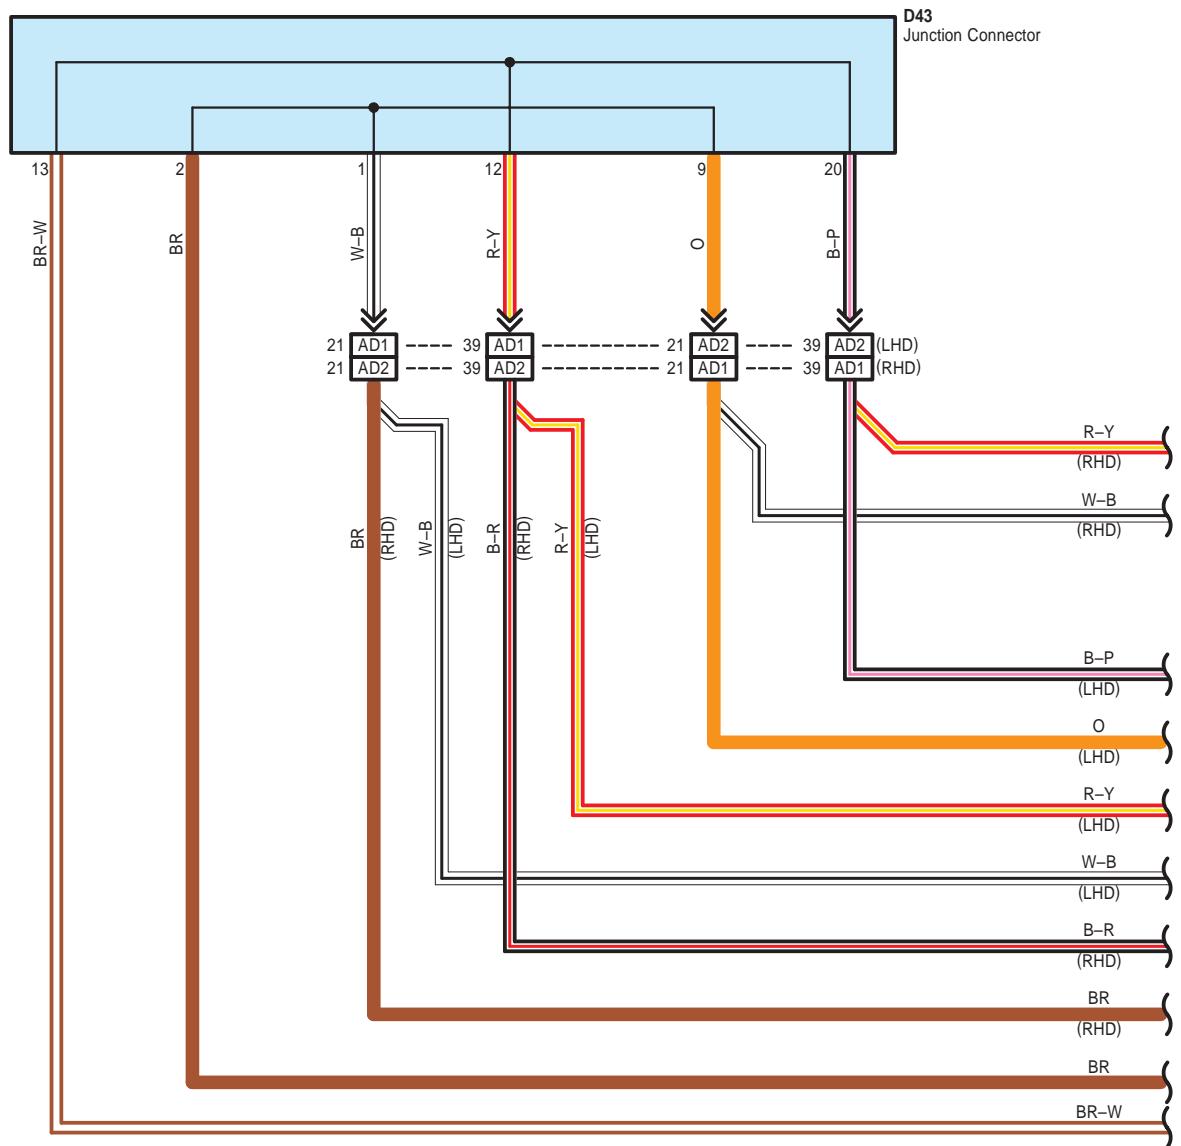

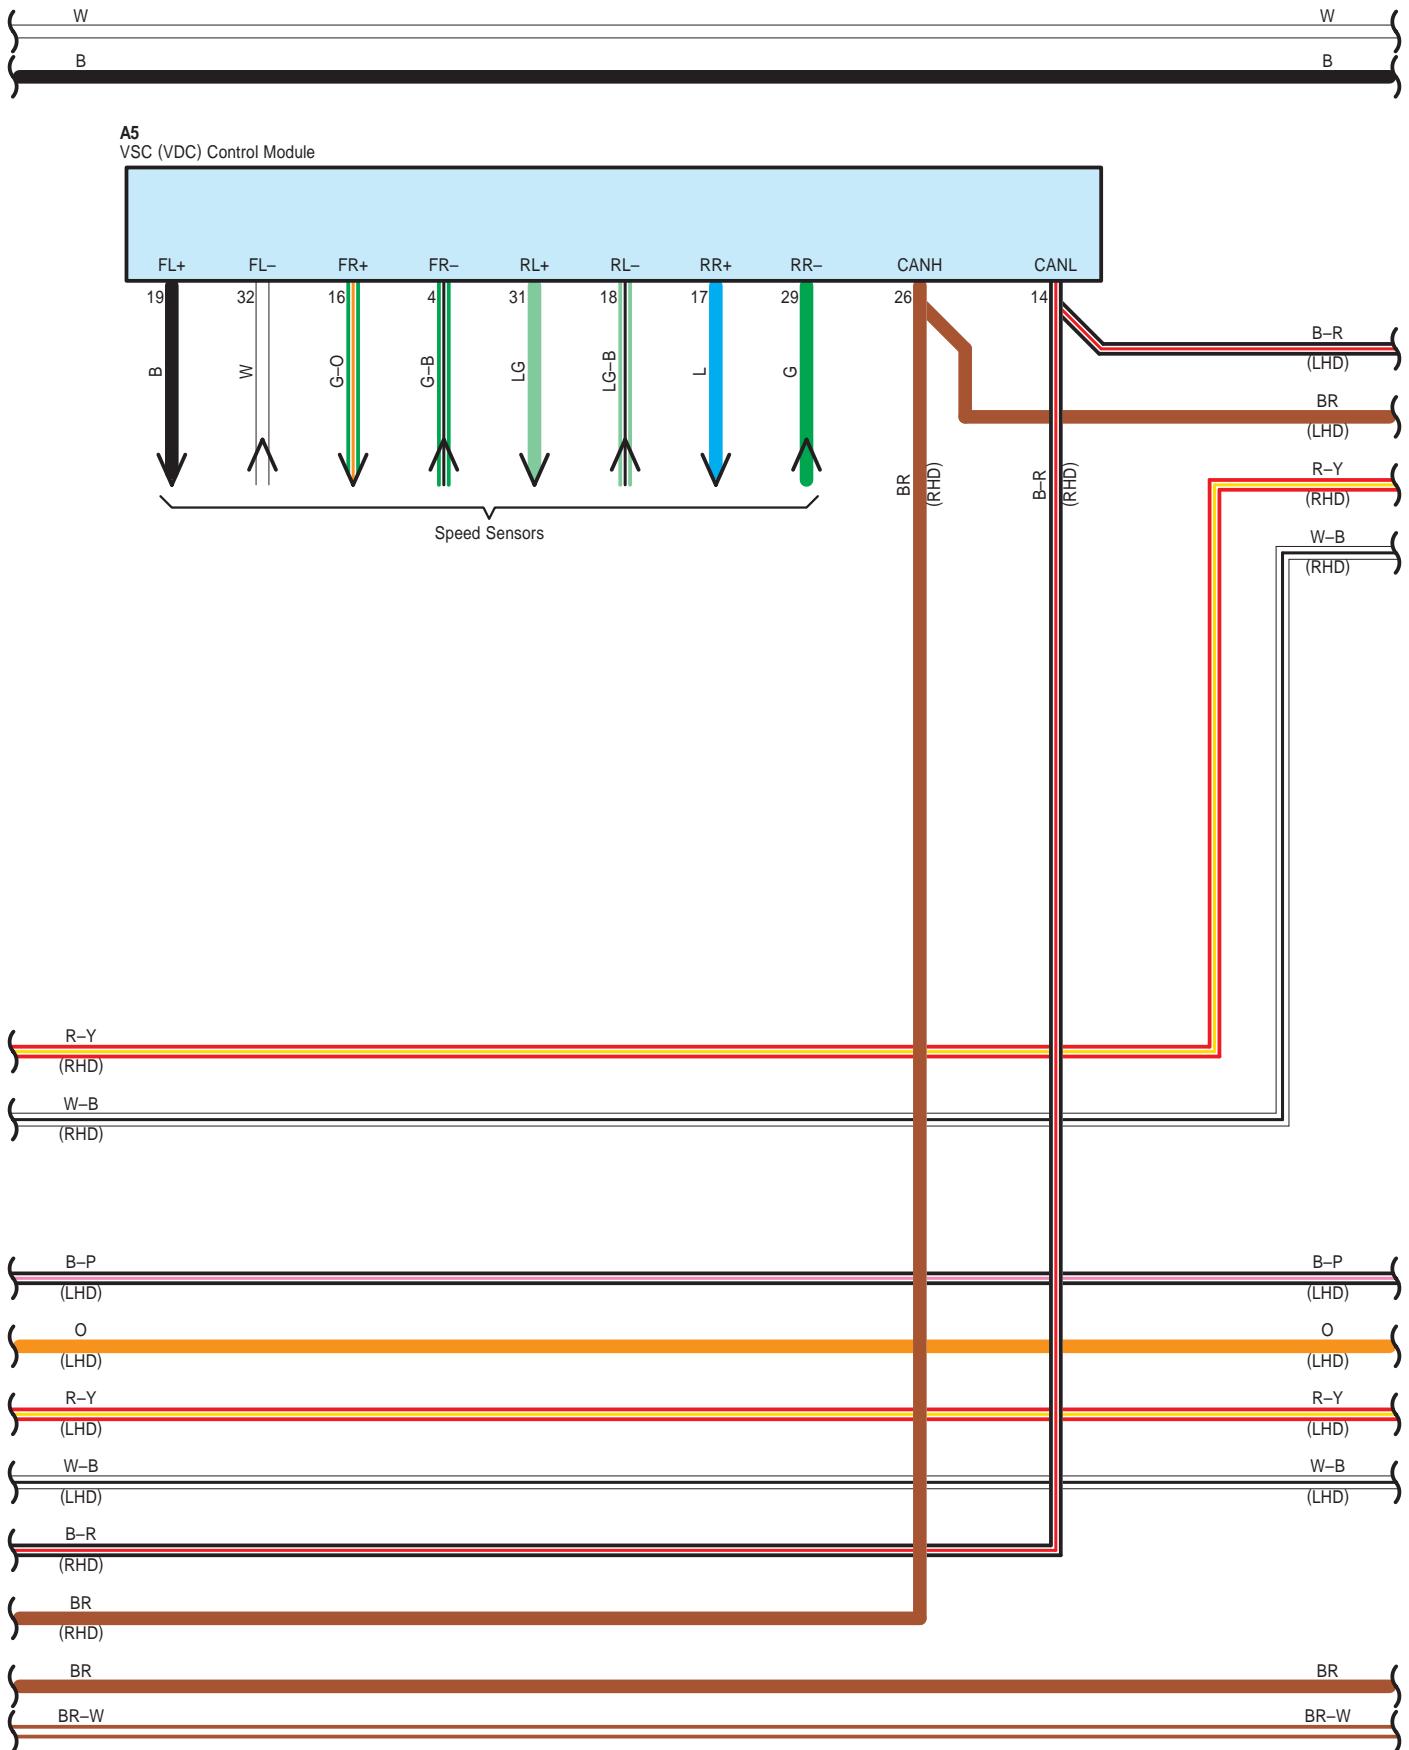

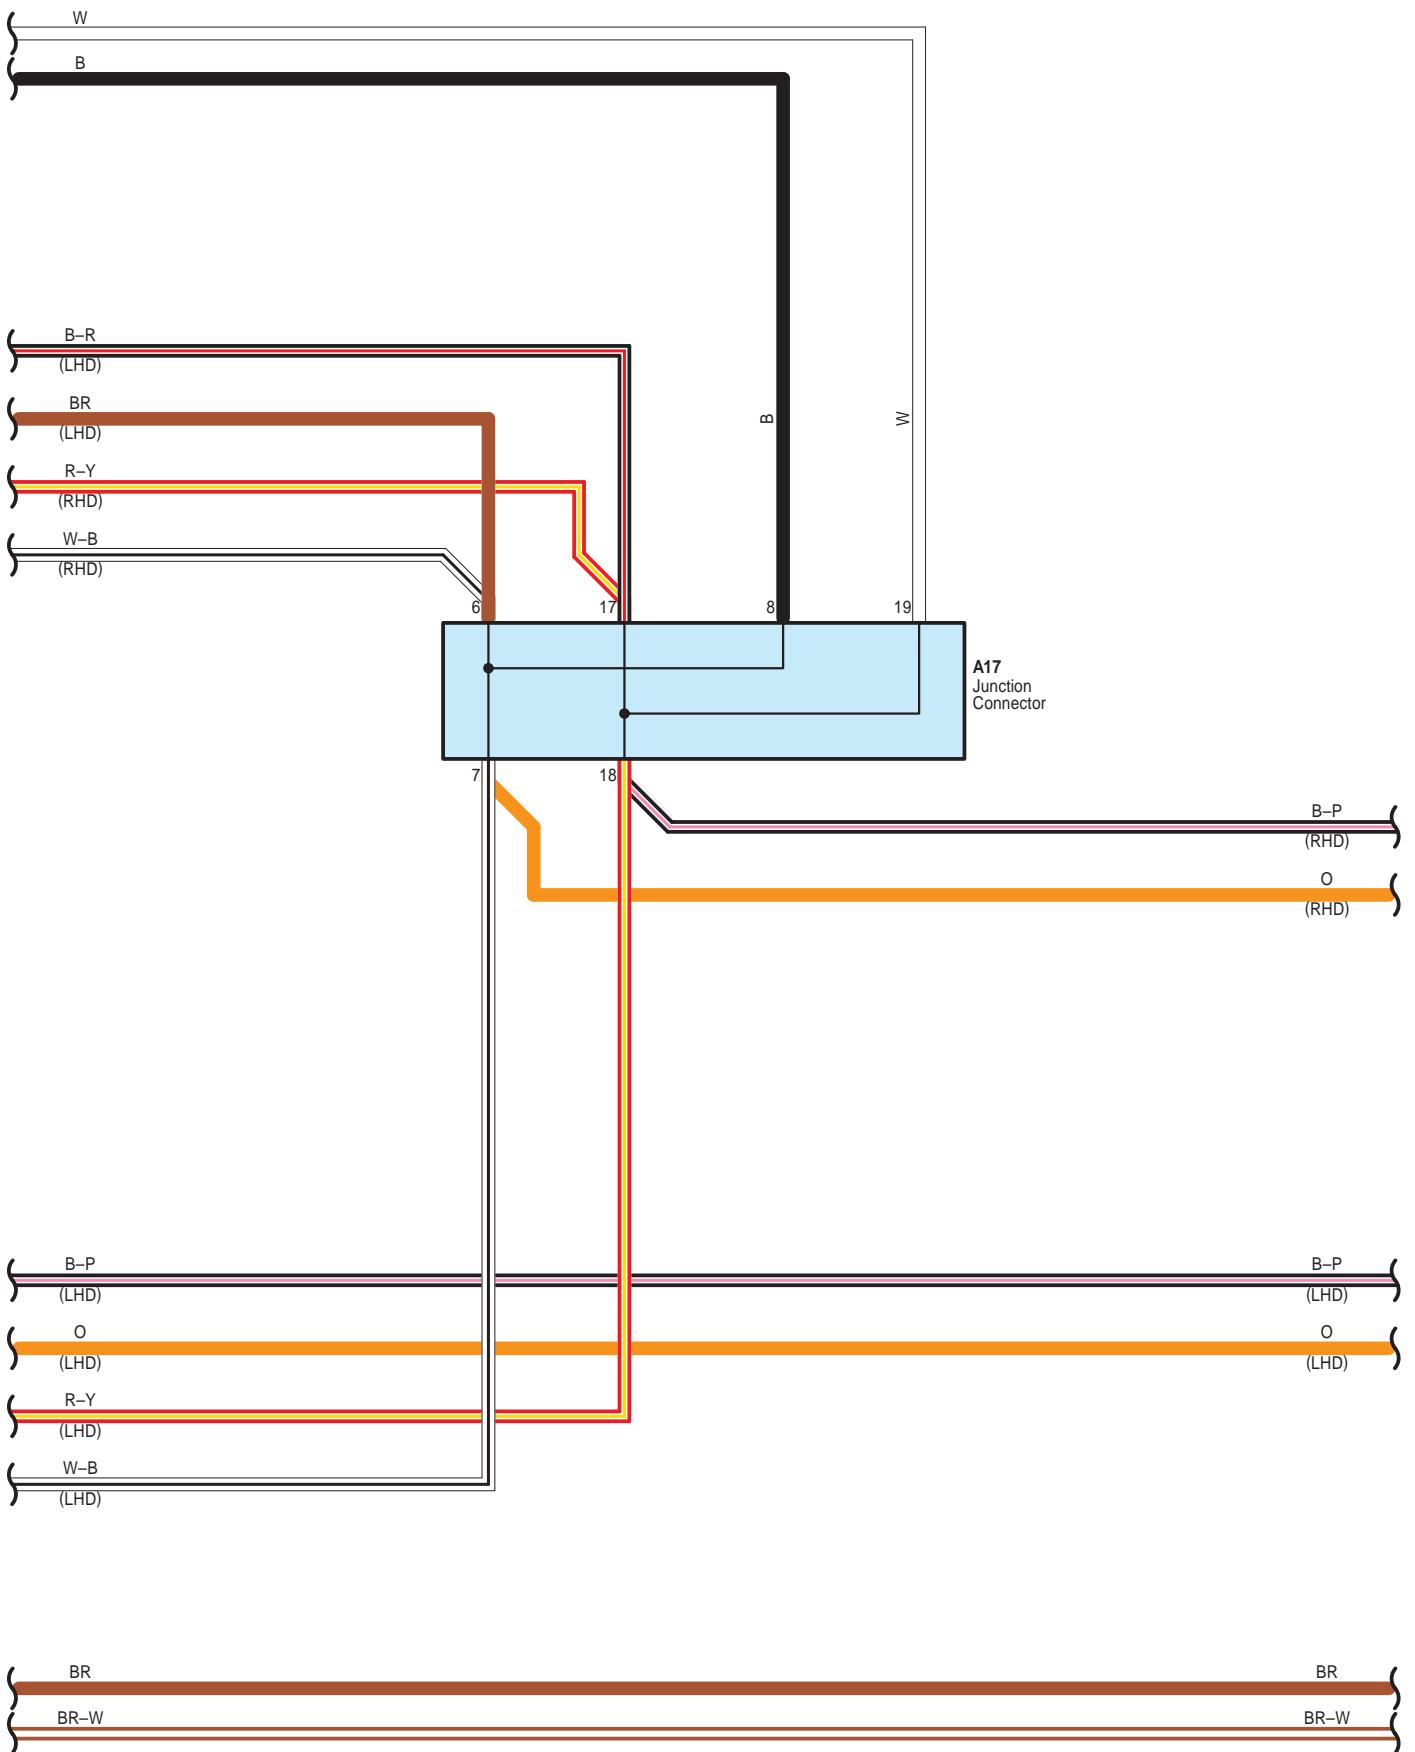

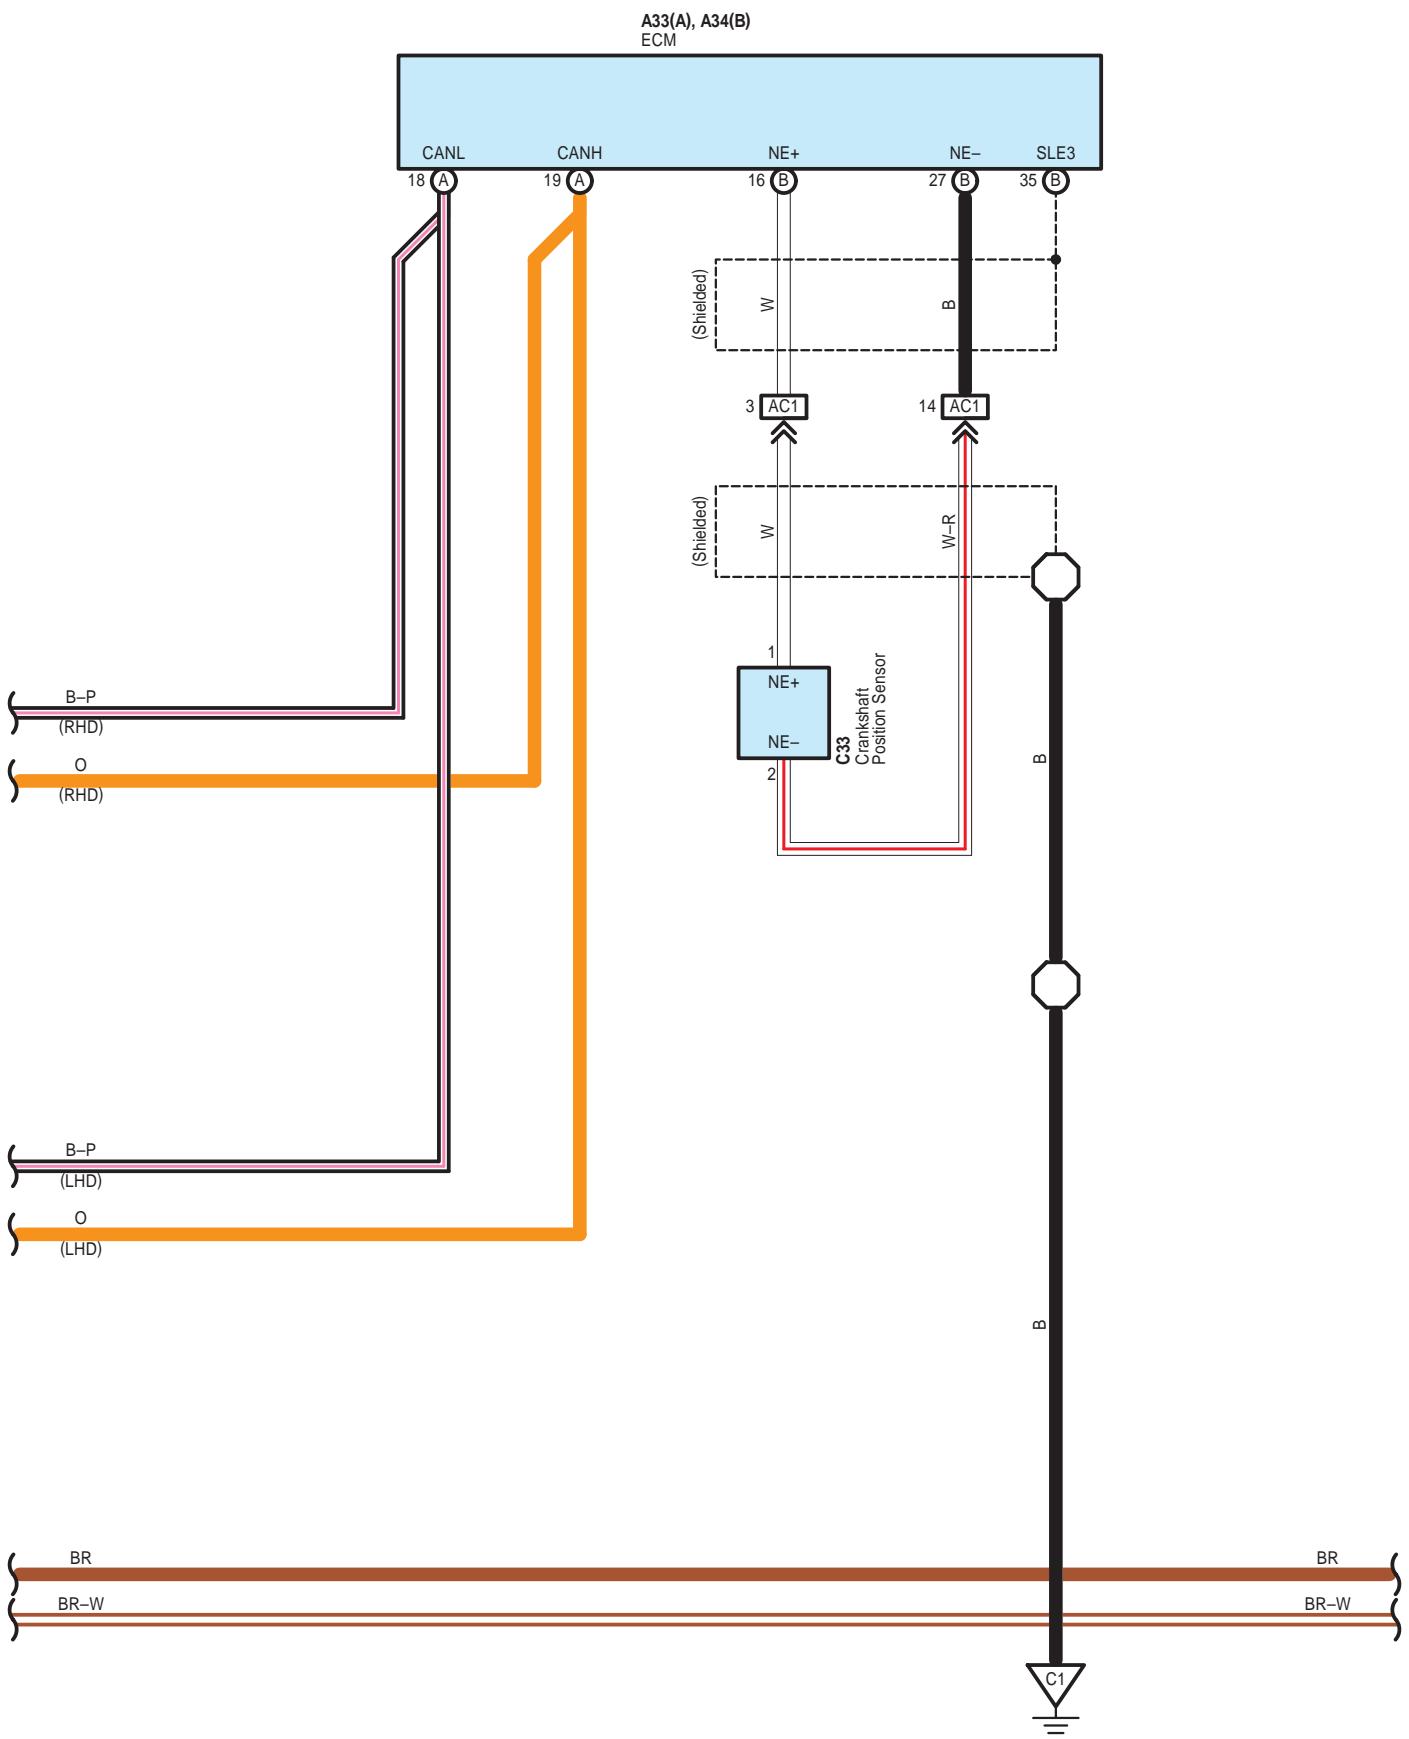

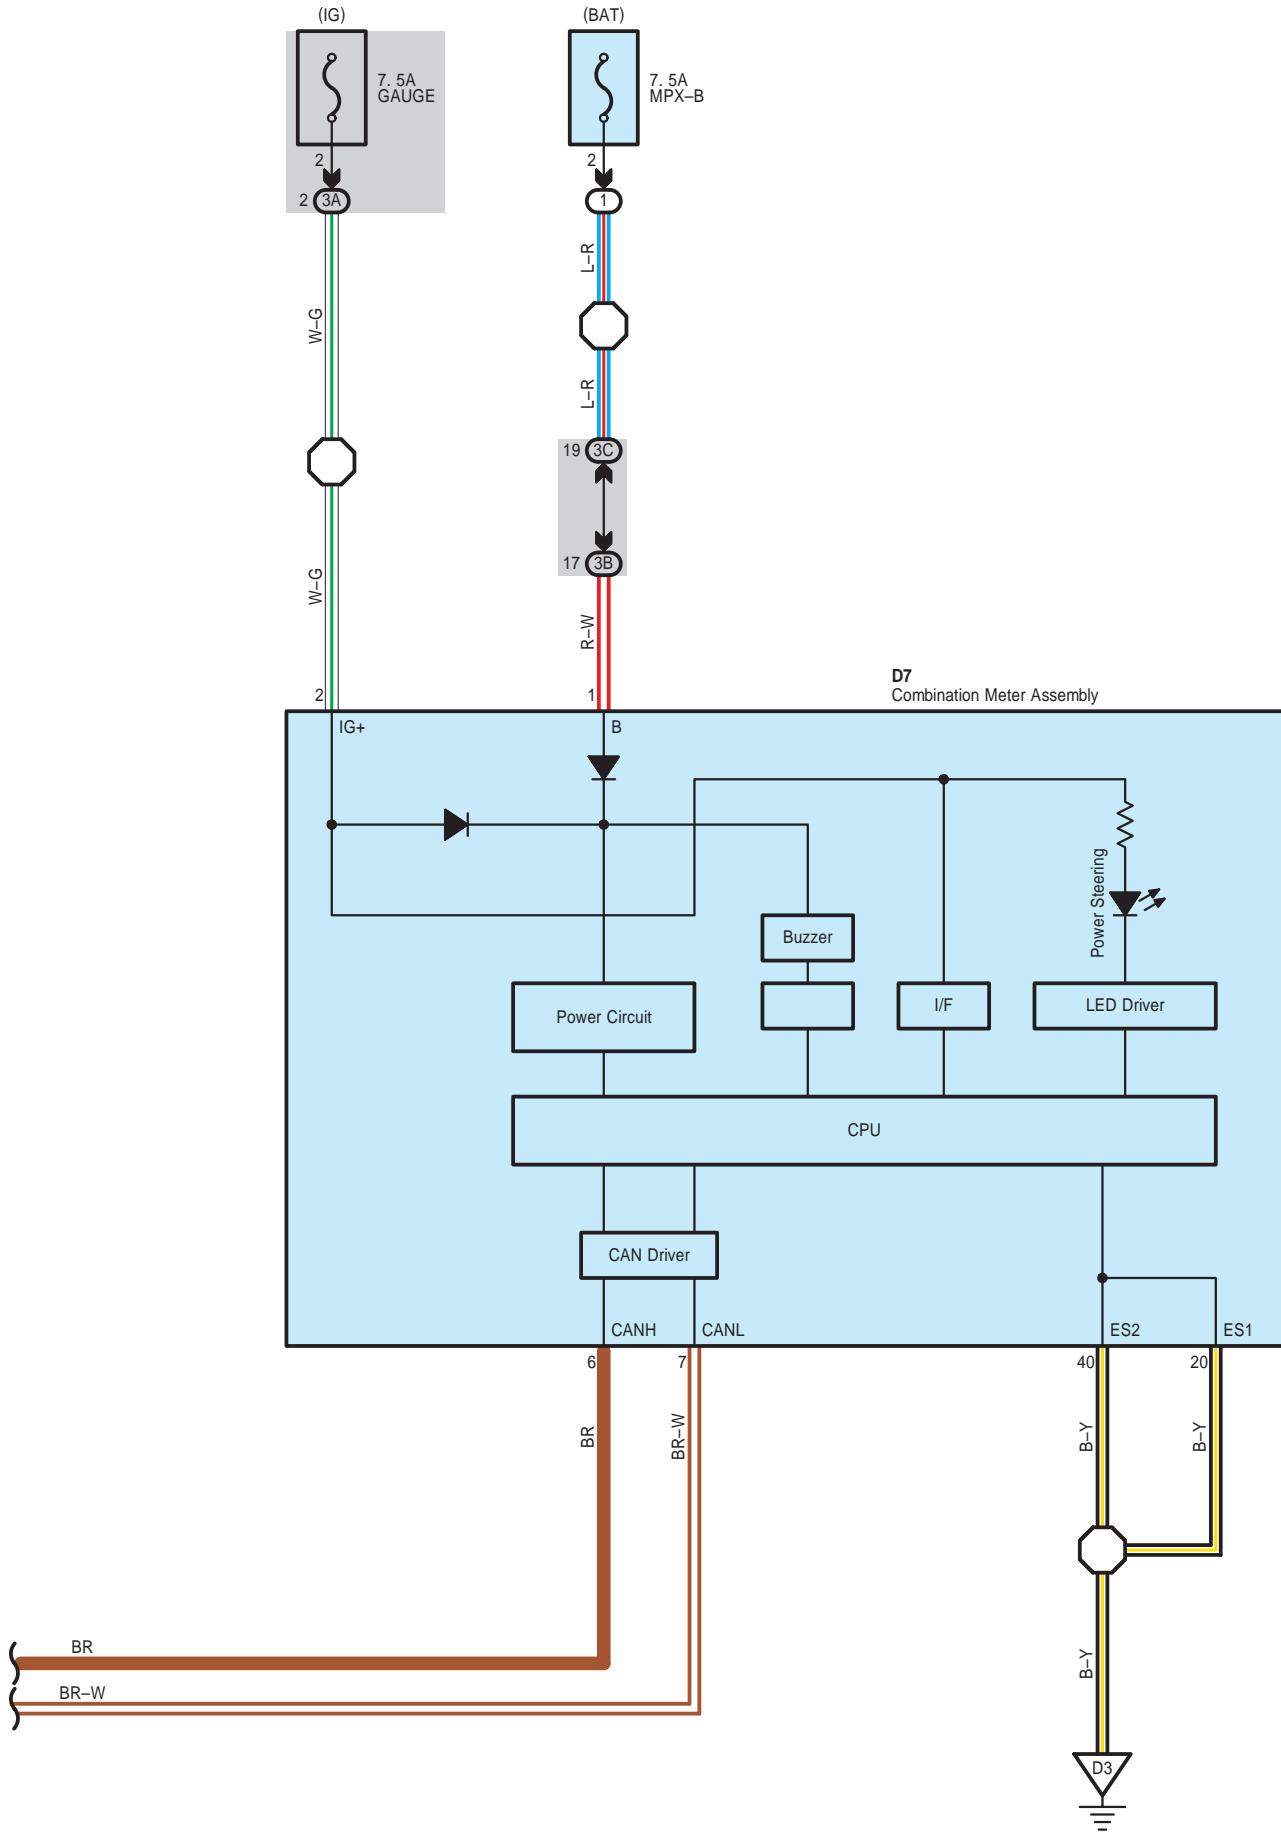

 : Parts Location

Code		See Page		Code		See Page		Code		See Page				
A5		39 (LHD)		A33	A	42 (LHD)		D43		41 (LHD)				
		47 (RHD)				50 (RHD)				49 (RHD)				
A14	A	42 (LHD)		A34	B	42 (LHD)		z1	C	42 (LHD)				
		50 (RHD)				50 (RHD)				50 (RHD)				
A15	B	42 (LHD)		C33		38 (LHD)		z2	D	42 (LHD)				
		50 (RHD)				46 (RHD)				50 (RHD)				
A17		42 (LHD)		D7		40 (LHD)								
		50 (RHD)				48 (RHD)								

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
	58 (RHD)	
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	

 : Ground Points


Code	See Page	Ground Points Location
A2	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
C1	54 (LHD)	Engine Unit
	58 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	

Seat Belt Warning

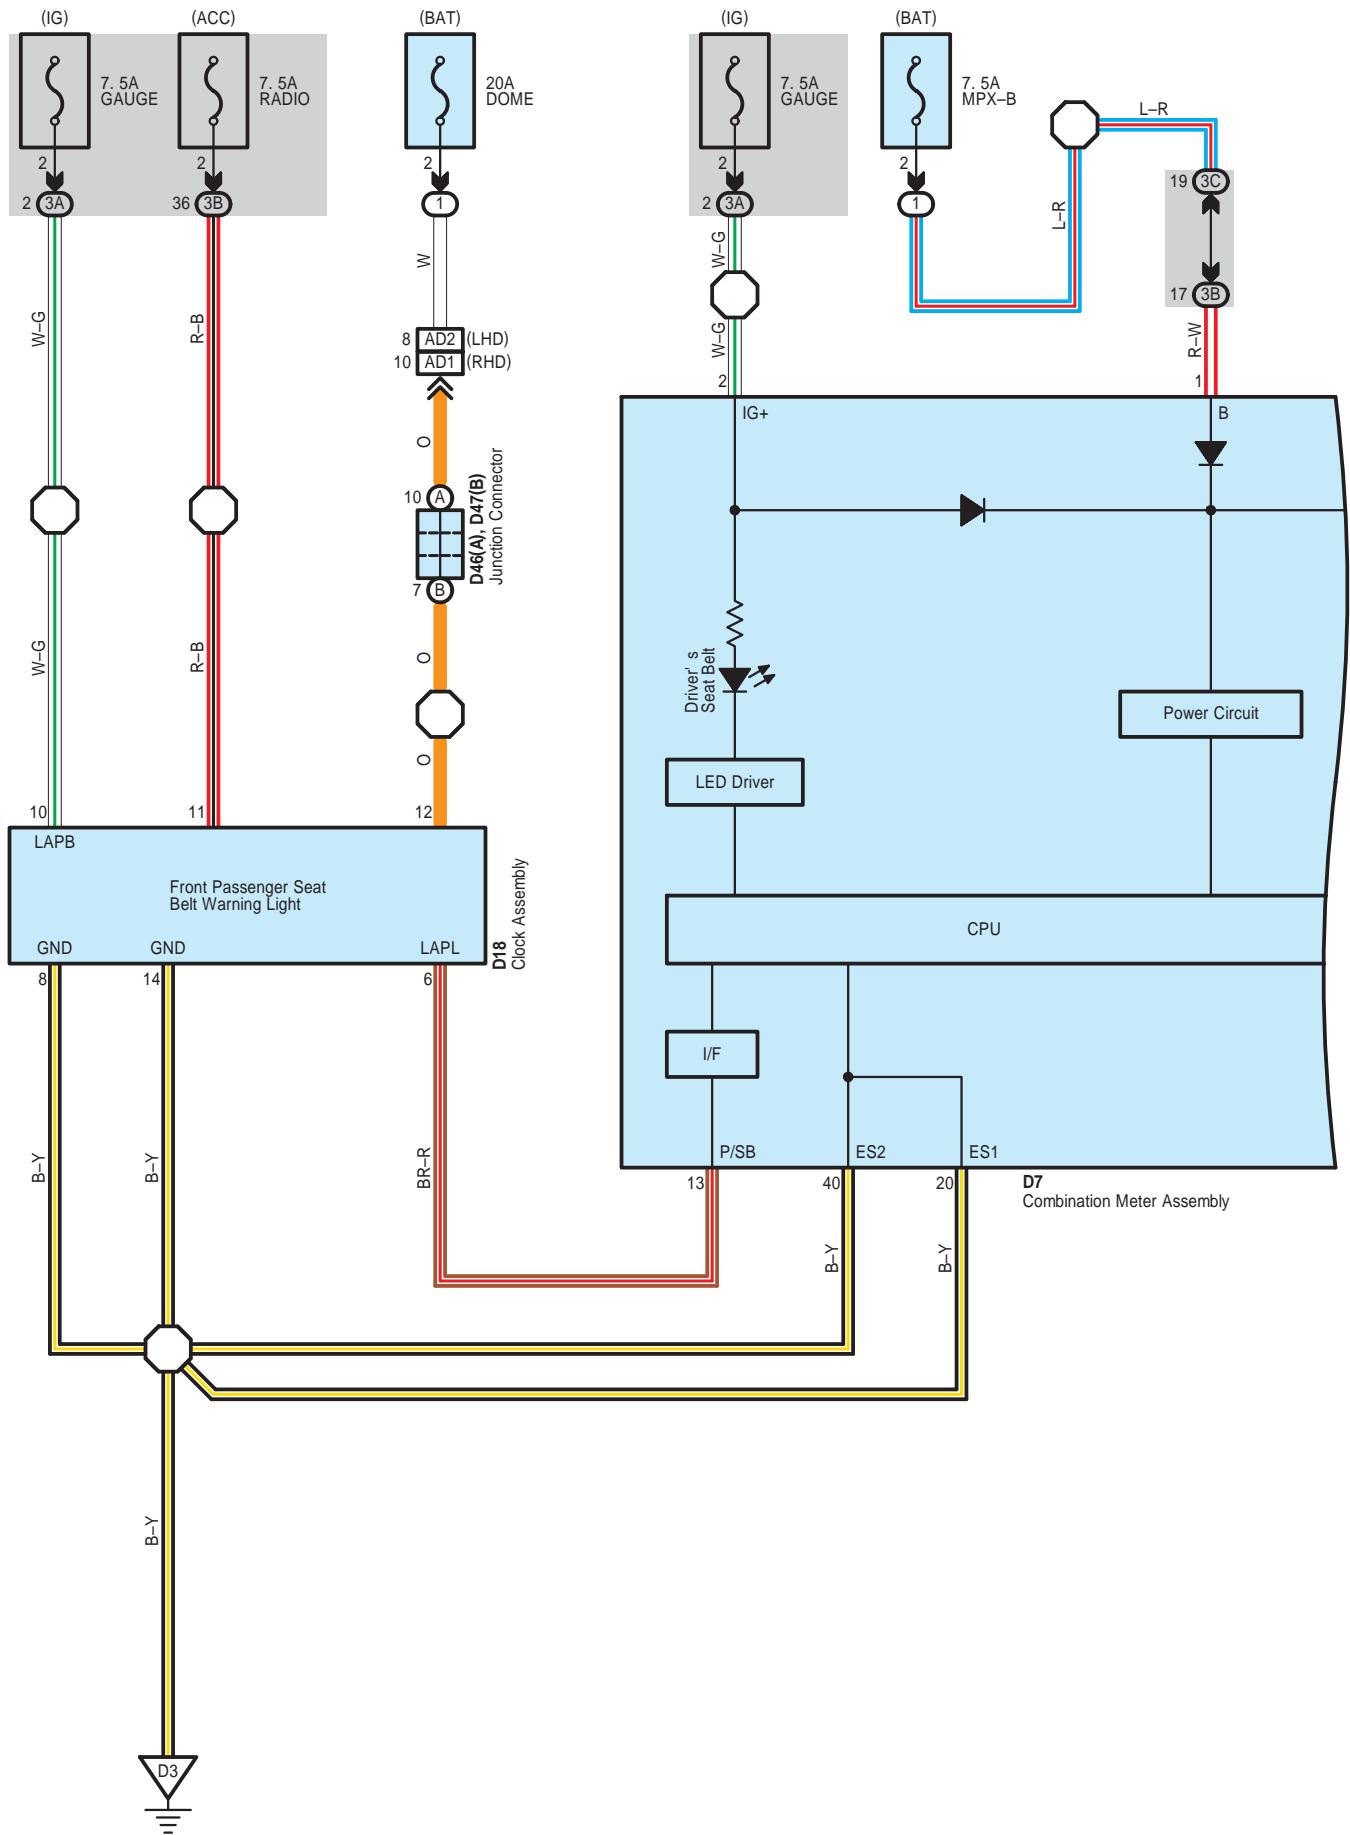

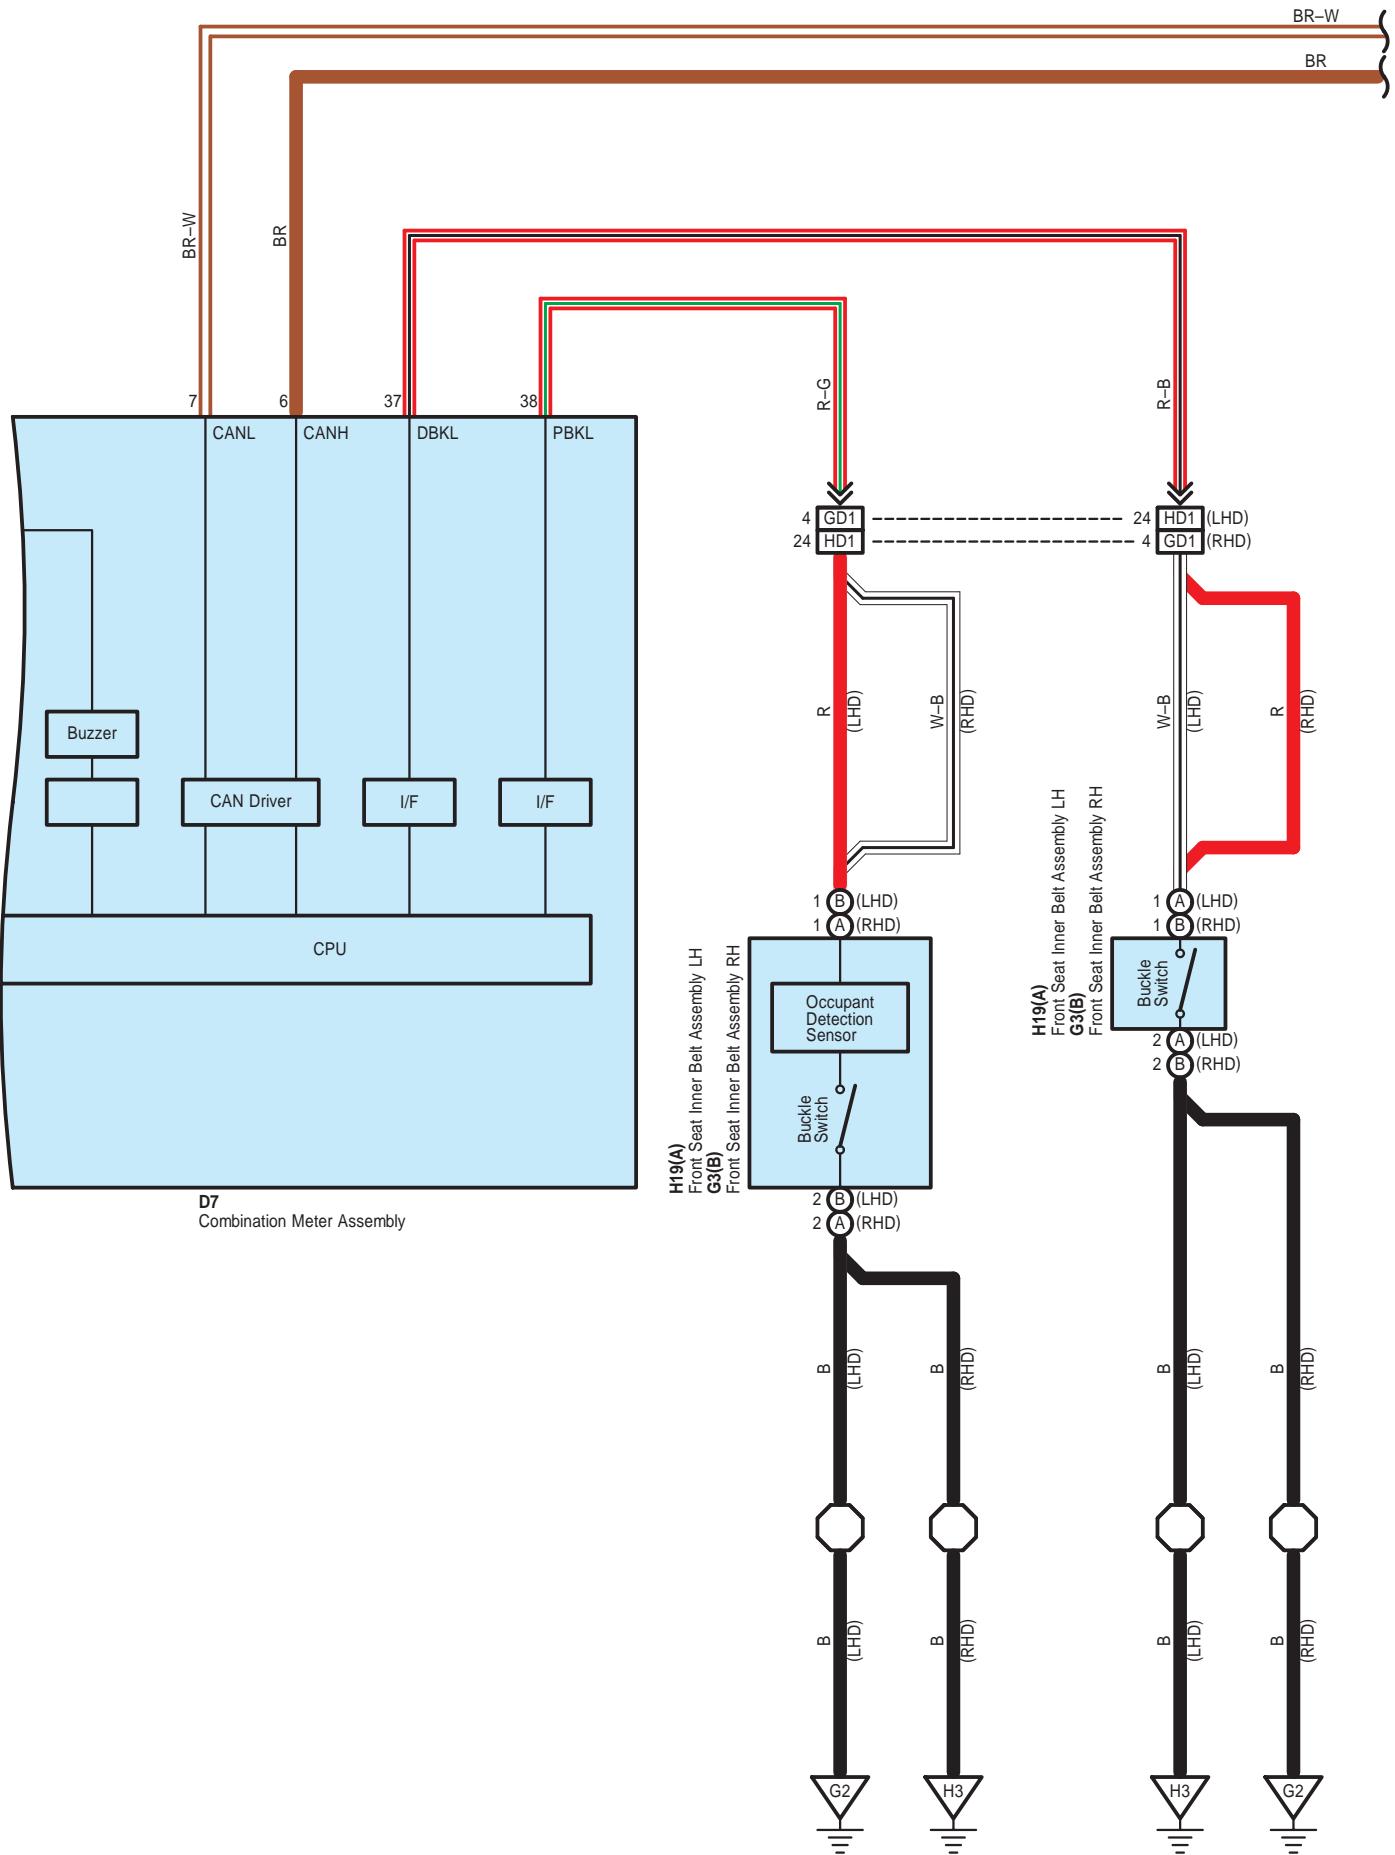

Seat Belt Warning

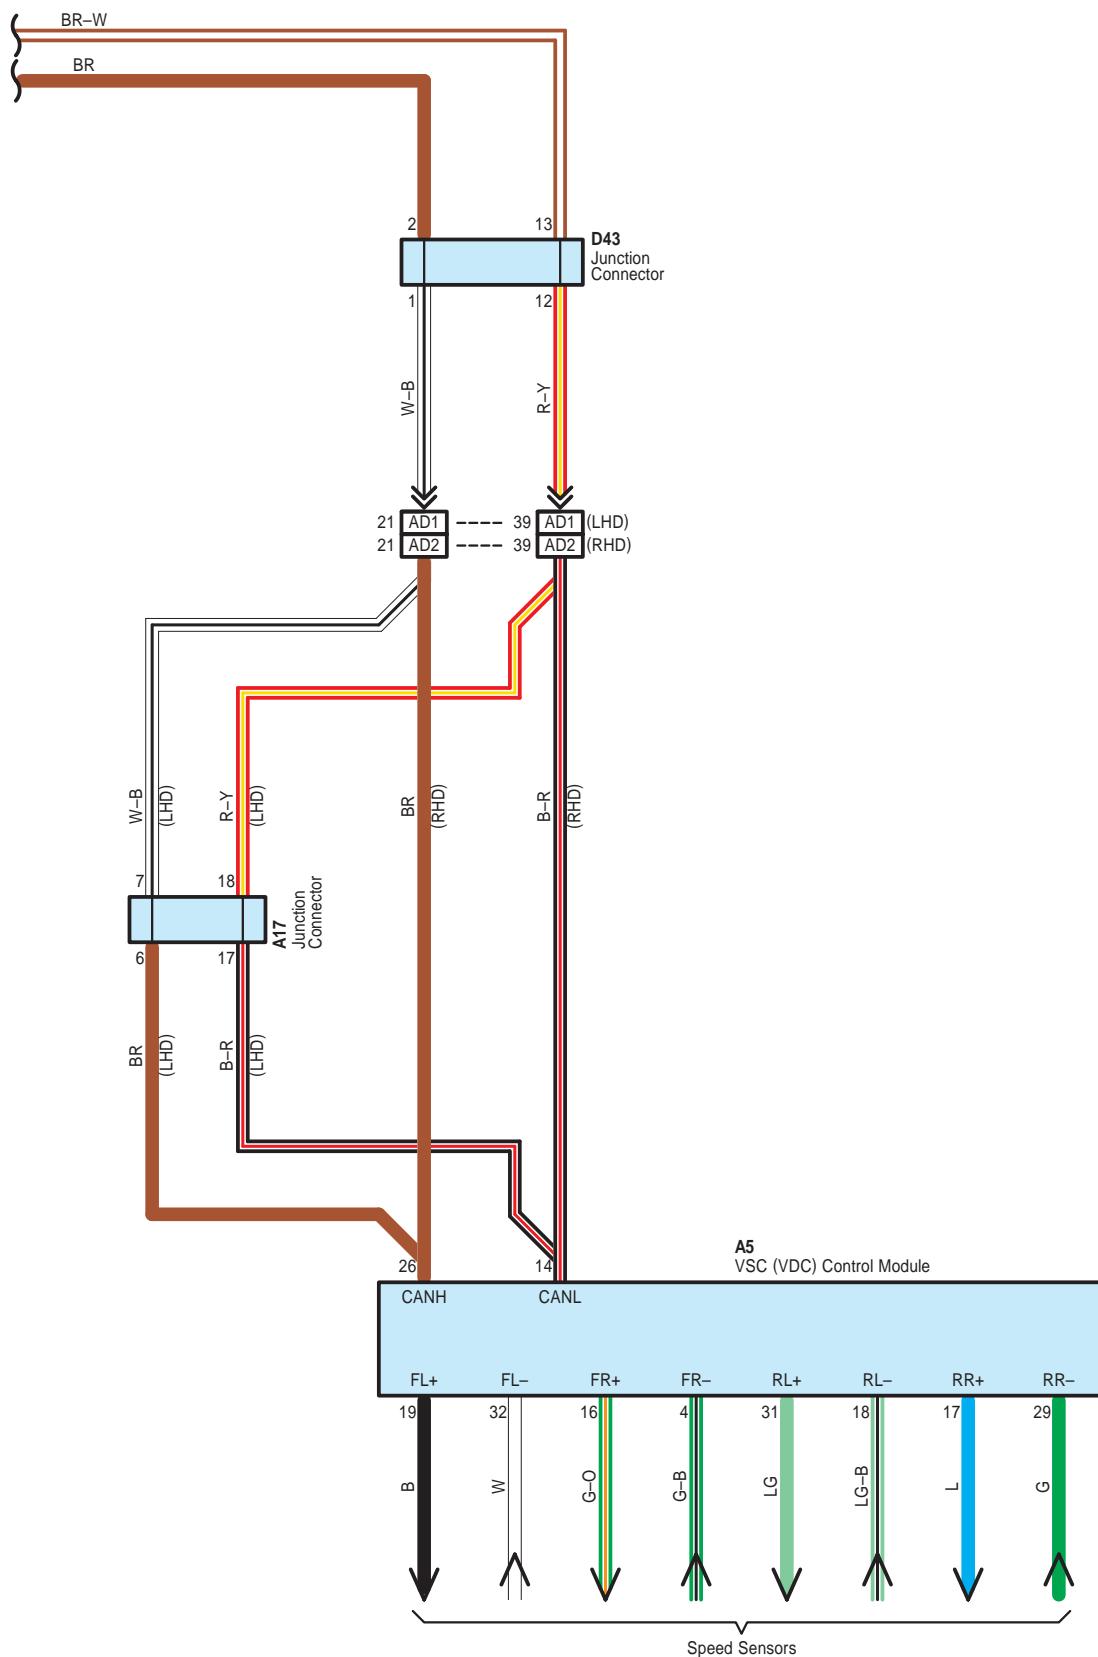

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A5	39 (LHD)	D18	48 (RHD)	D47	B 49 (RHD)
	47 (RHD)		41 (LHD)	G3	B 44 (LHD)
A17	42 (LHD)	D43	49 (RHD)		52 (RHD)
D7	40 (LHD)		41 (LHD)	H19	A 45 (LHD)
	48 (RHD)	D46	49 (RHD)		53 (RHD)
D18	40 (LHD)	D47	B 41 (LHD)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
GD1	55 (LHD) 59 (RHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
HD1	55 (LHD) 59 (RHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)

 : Ground Points

Code	See Page	Ground Points Location
D3	55 (LHD) 59 (RHD)	Instrument Panel Brace RH Instrument Panel Brace LH
G2	56 (LHD) 60 (RHD)	Quarter Wheel House Panel RH
H3	56 (LHD) 60 (RHD)	Quarter Wheel House Panel LH

Clock

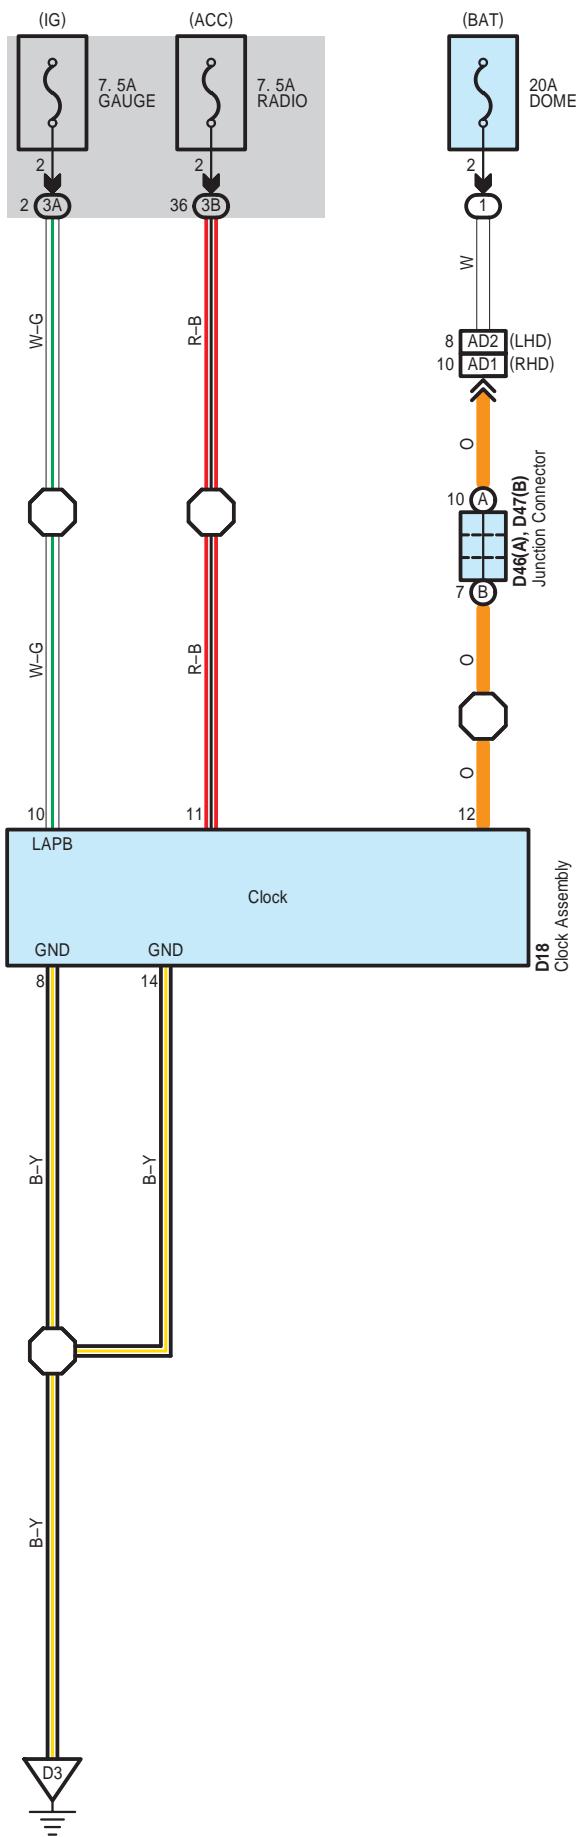

 : Parts Location

Code	See Page	Code		See Page	Code		See Page
D18	40 (LHD) 48 (RHD)	D46	A	41 (LHD) 49 (RHD)	D47	B	41 (LHD) 49 (RHD)

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B		


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

 : Ground Points


Code	See Page	Ground Points Location
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH

Power Window (LHD)

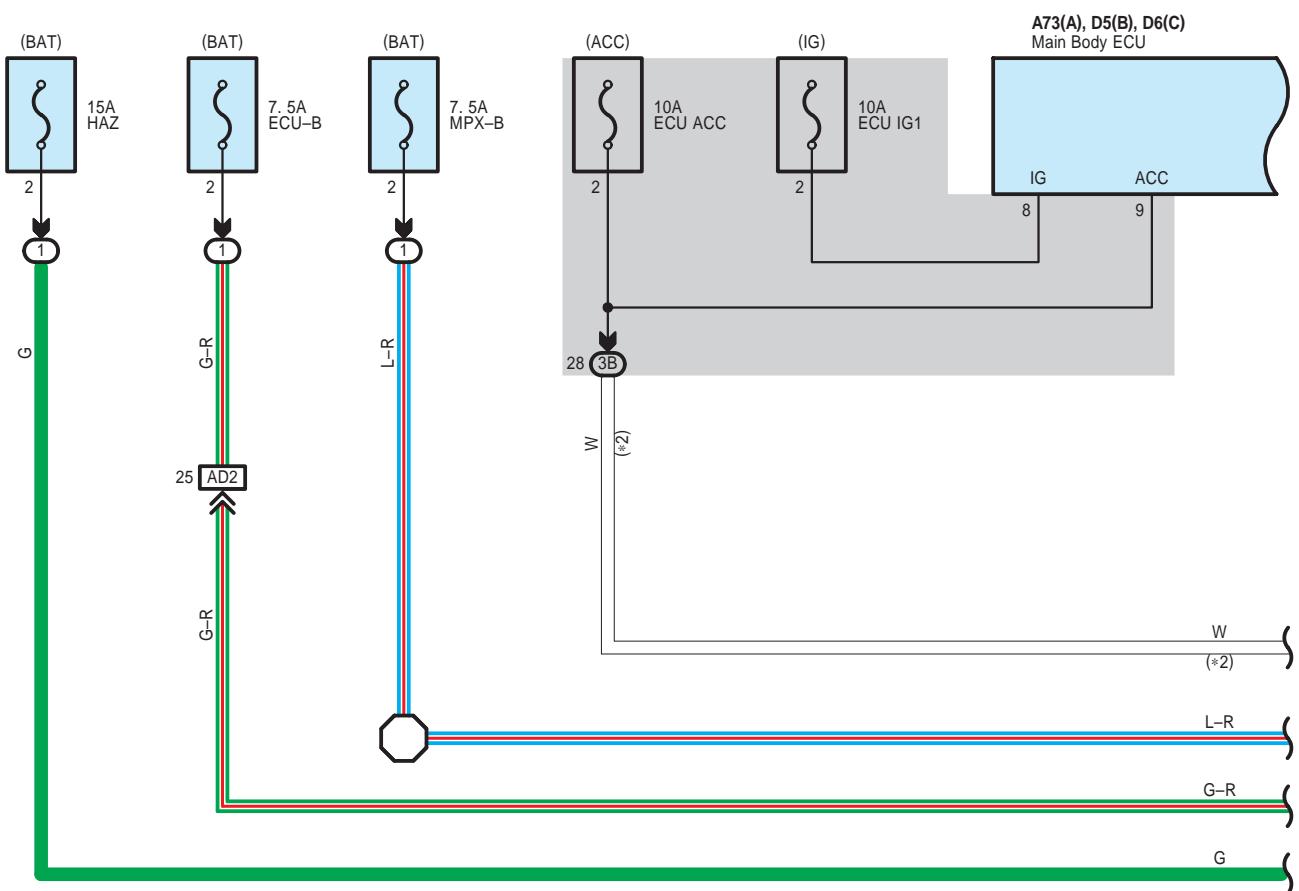


* 2 : w/ Entry & Start System

A73(A), D5(B), D6(C)
Main Body ECU



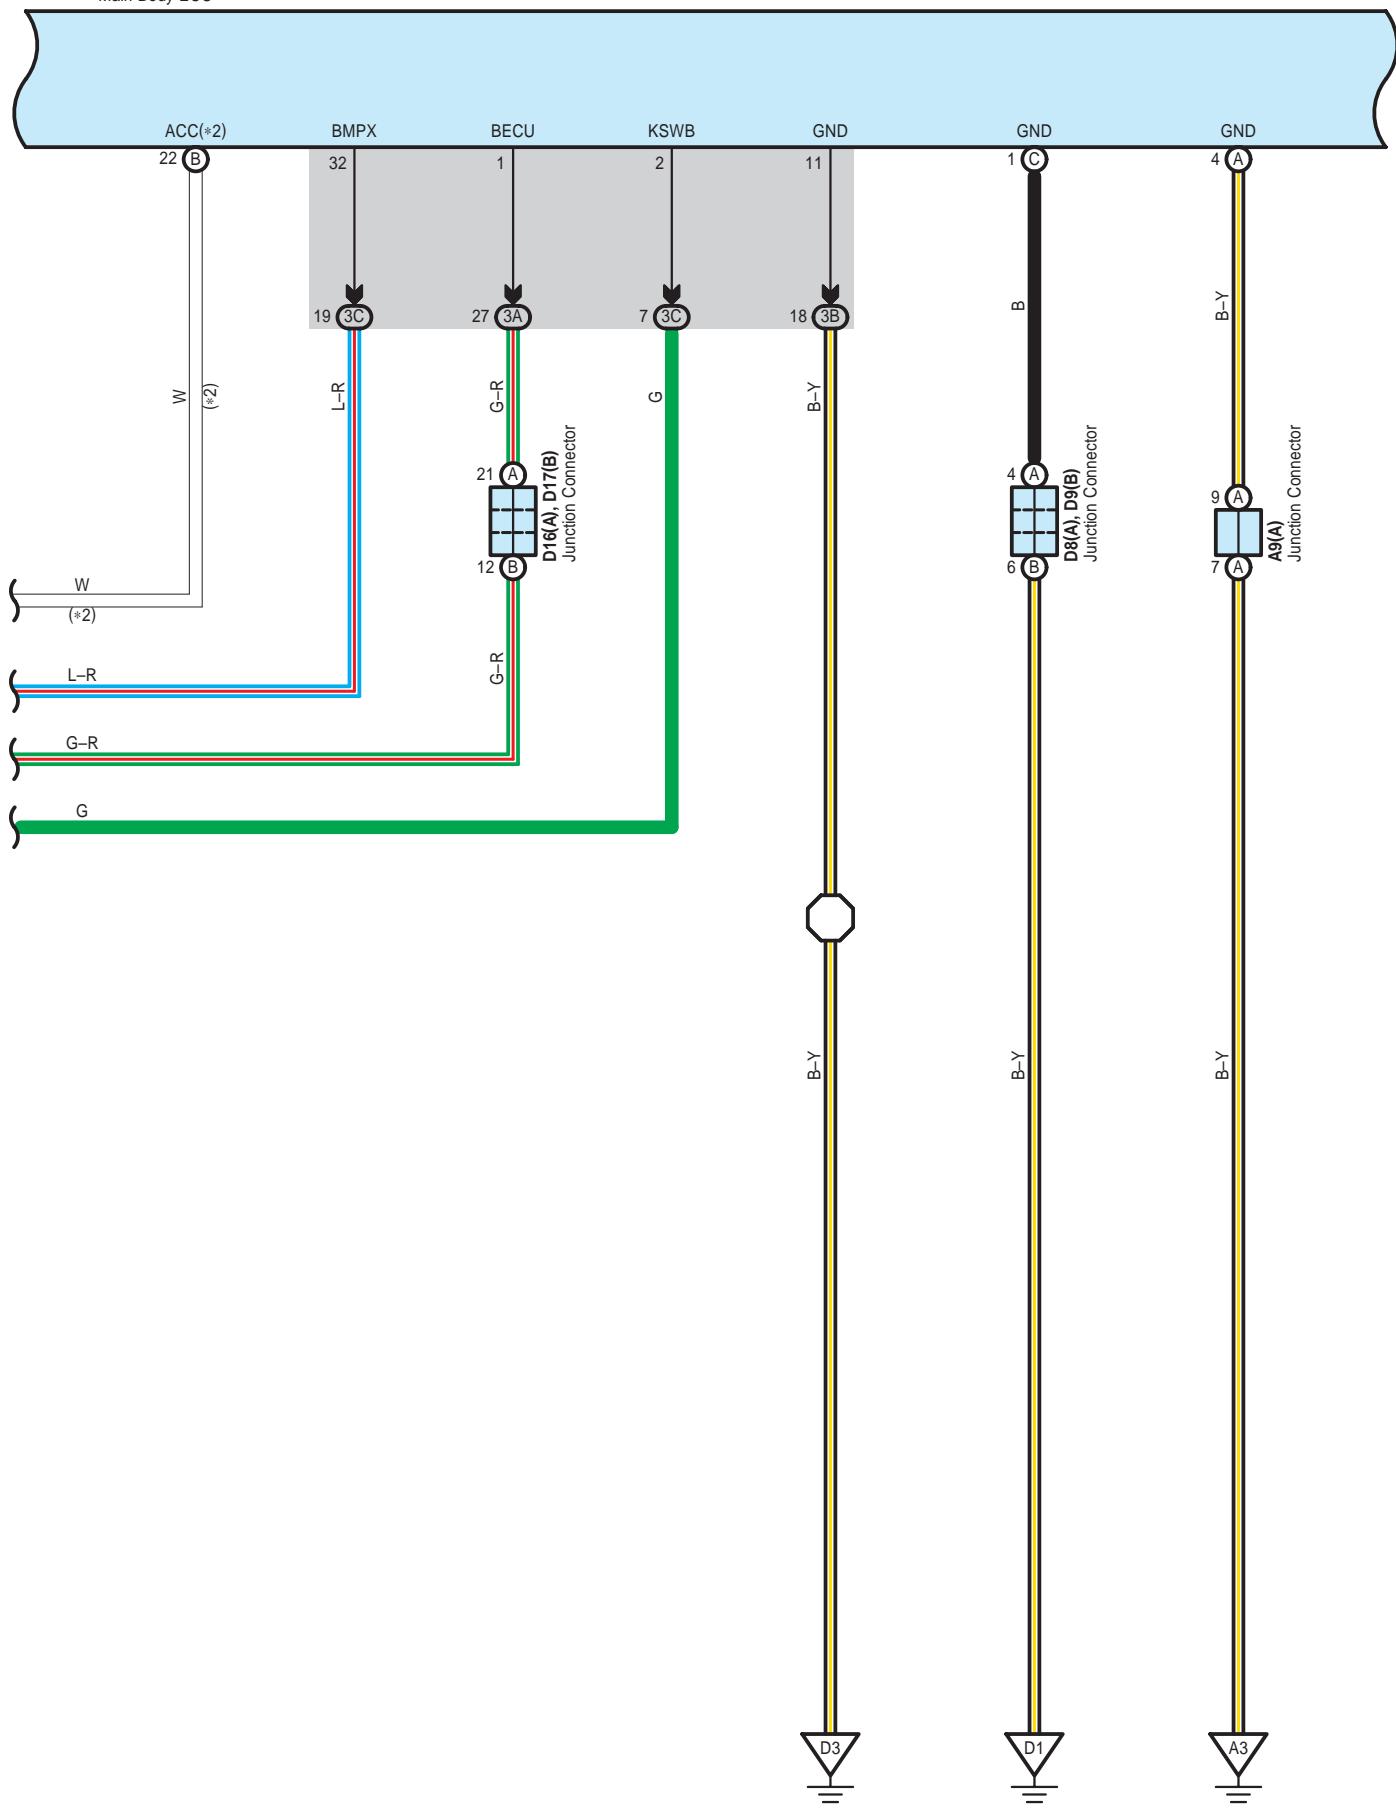


Power Window (LHD)

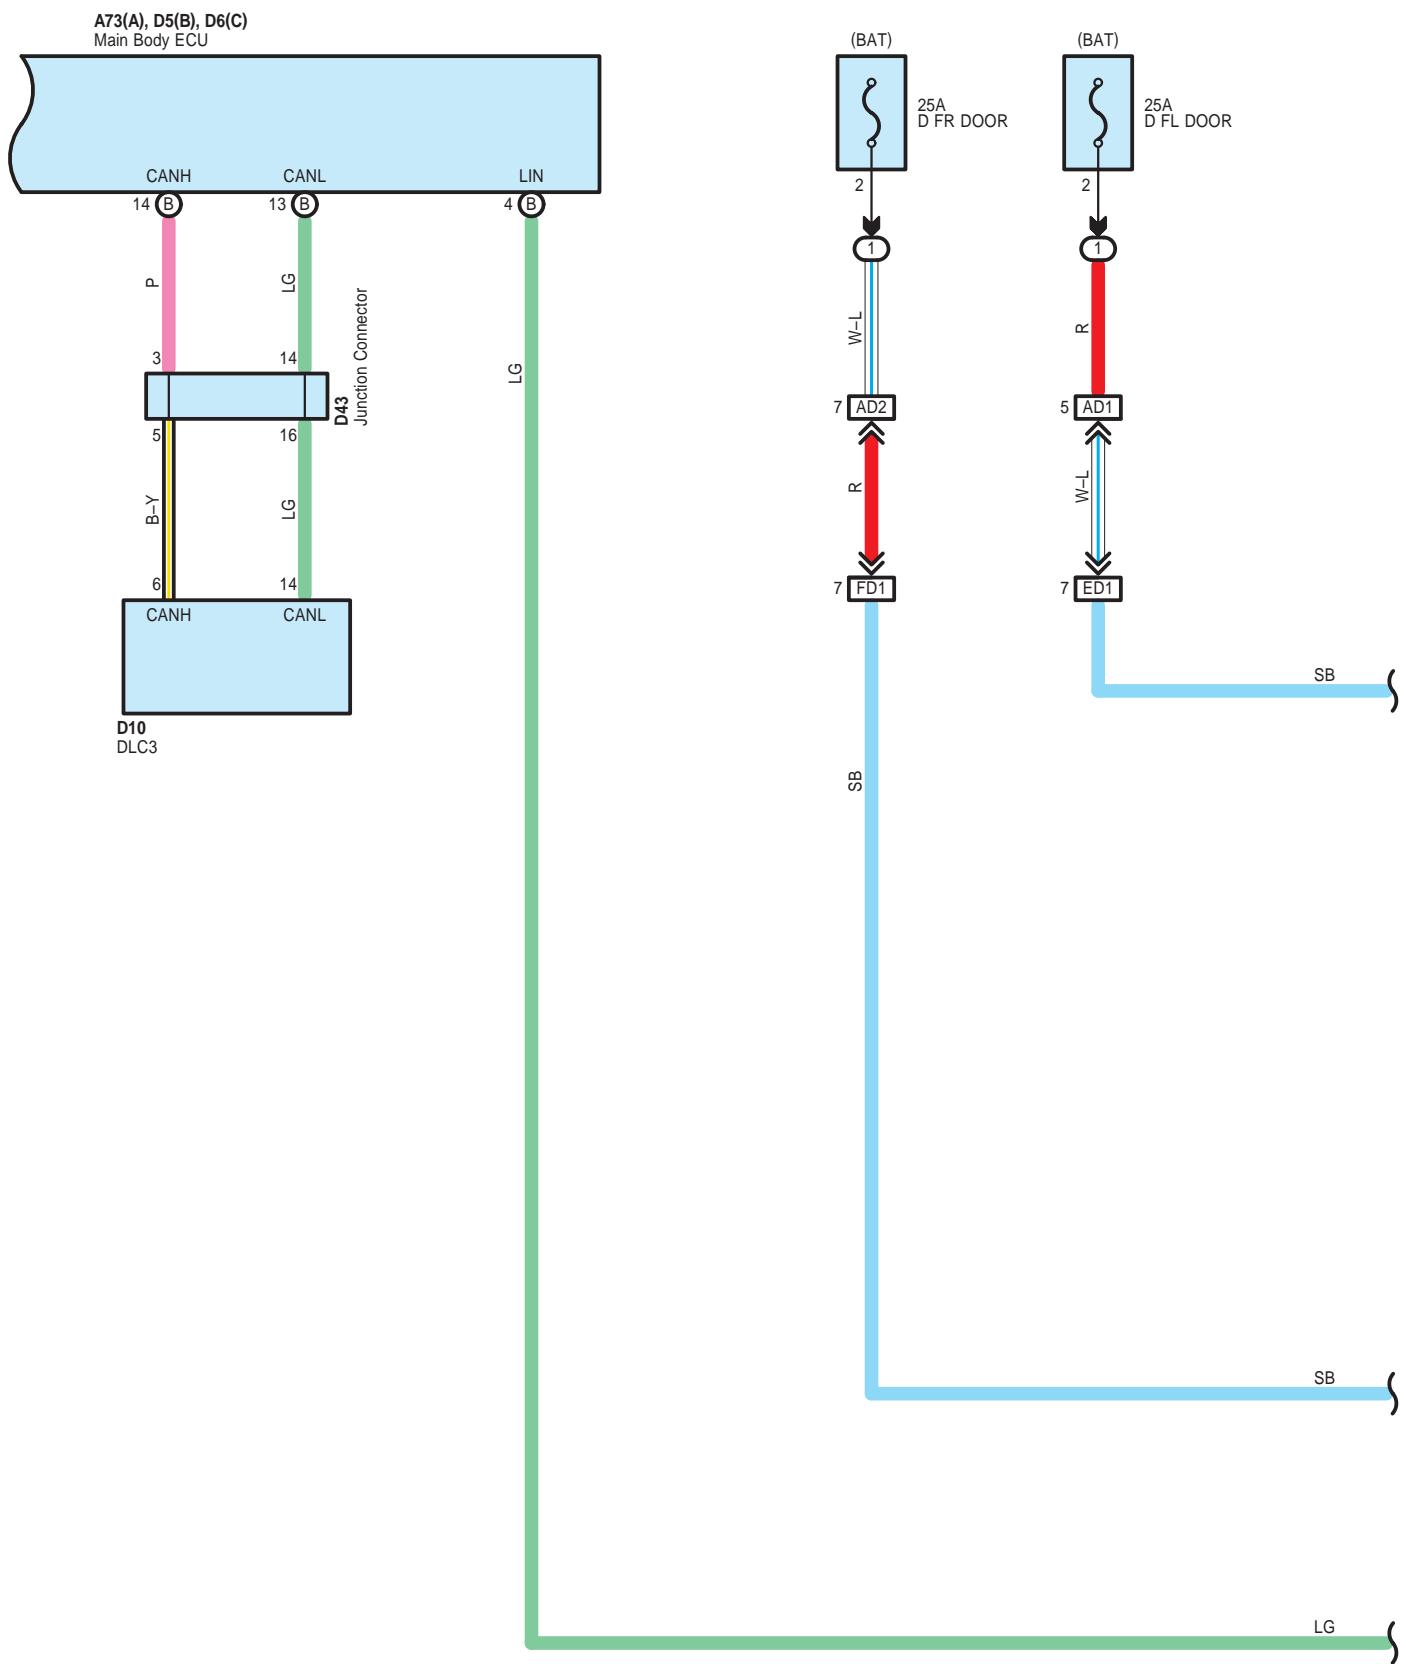

E8

Power Window Regulator Master Switch Assembly

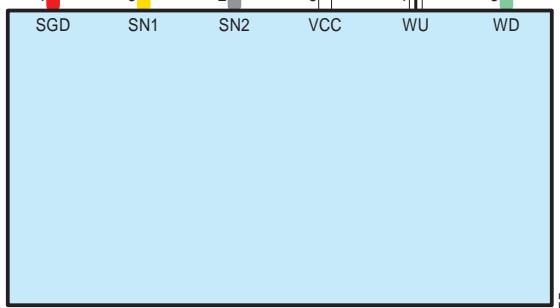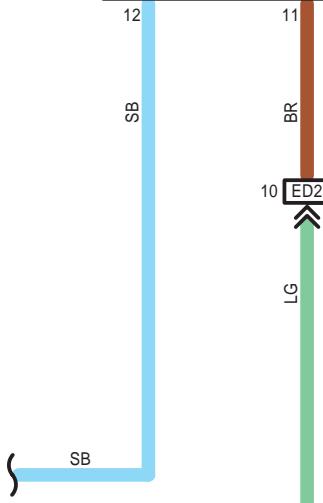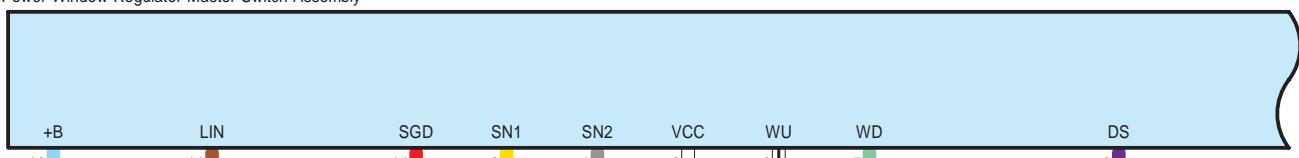


E5 Power Window Regulator Motor Assembly LH



H21 Front Door Courtesy Light Switch Assembly LH



Power Window (LHD)

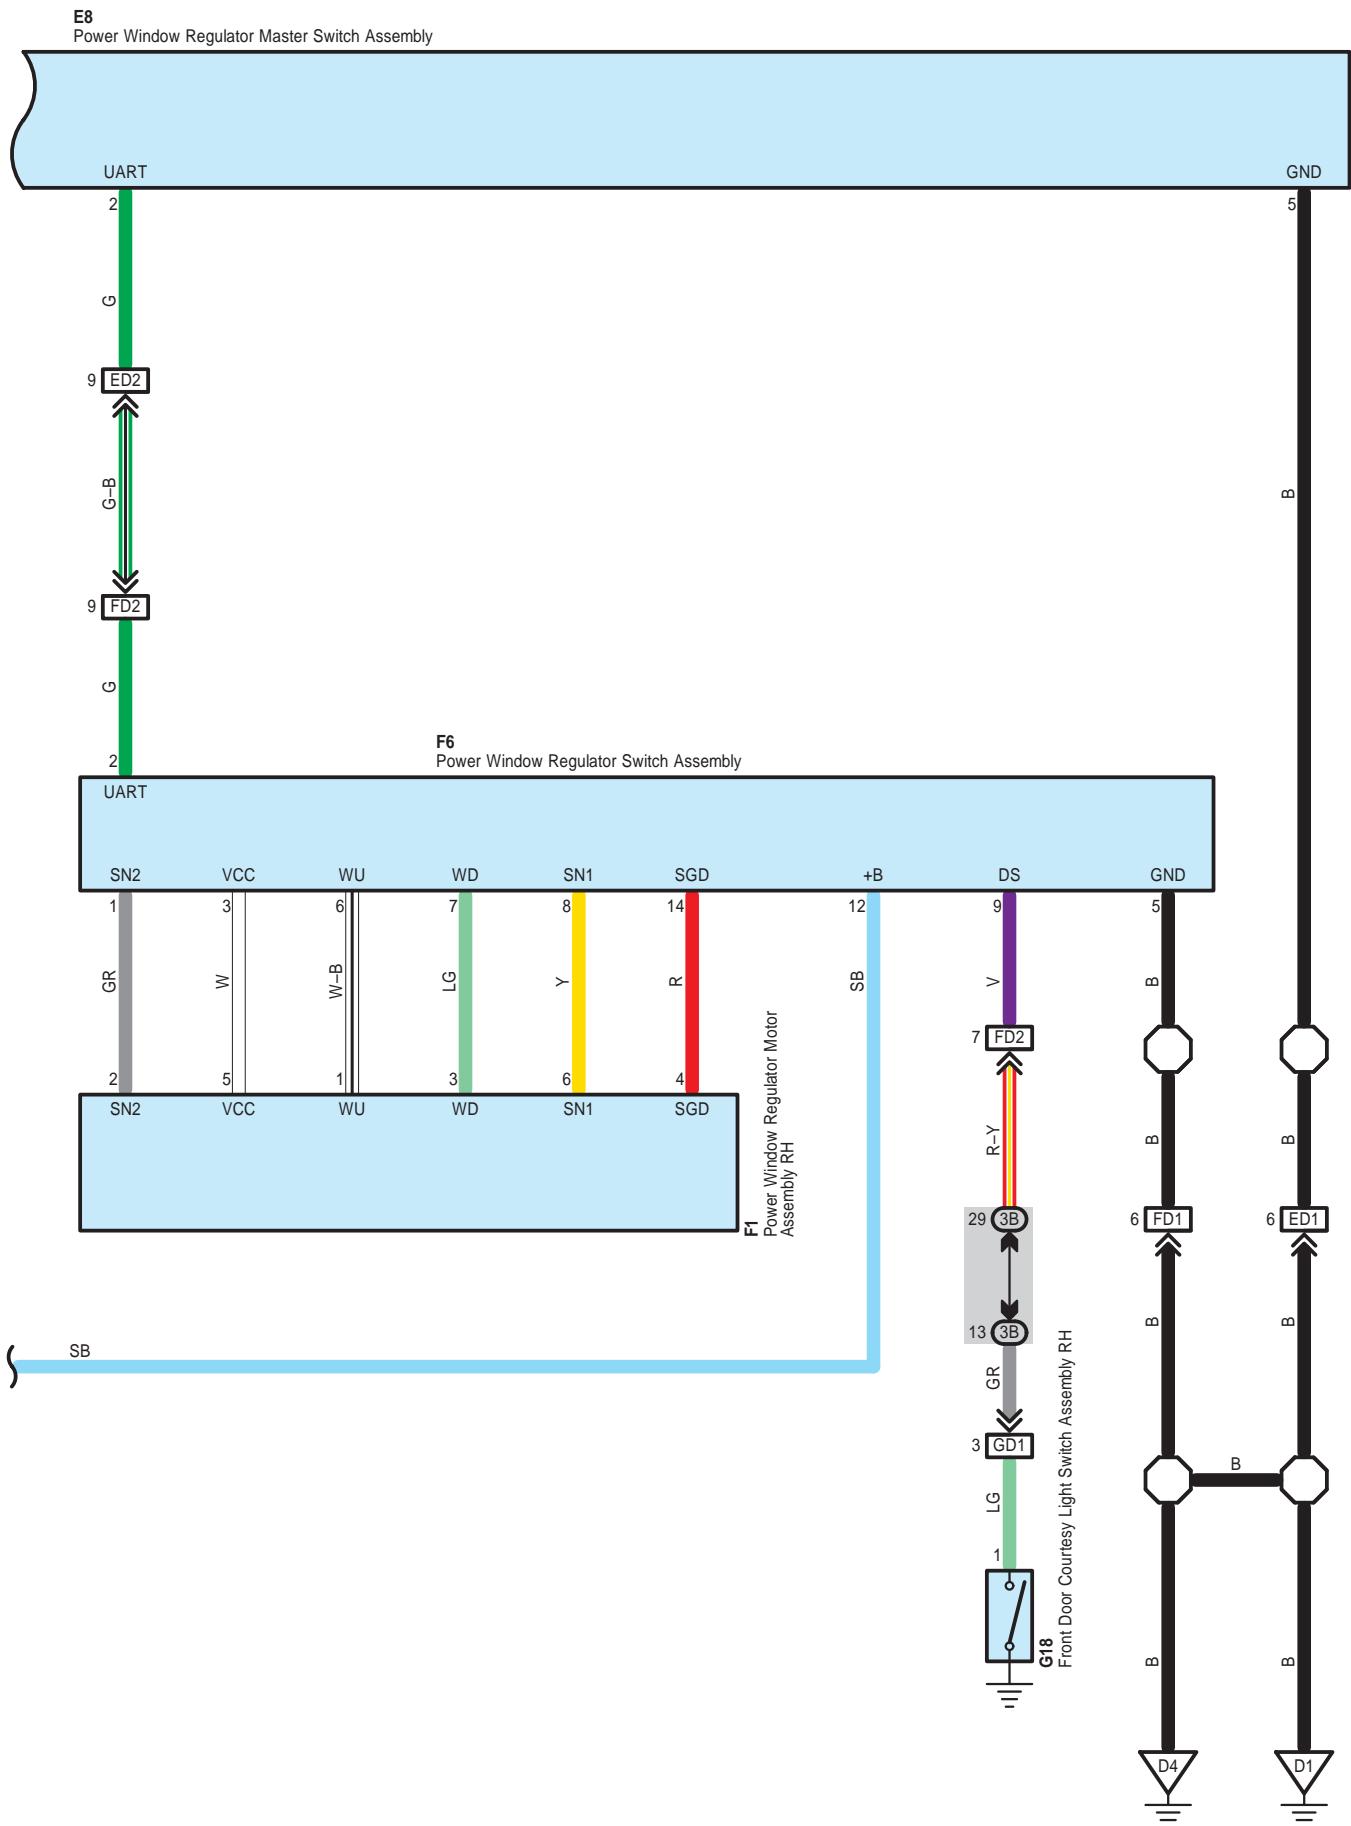

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	A 42 (LHD)	D10	40 (LHD)	F1	44 (LHD)
A73	A 42 (LHD)	D16	A 40 (LHD)	F6	44 (LHD)
D5	B 40 (LHD)	D17	B 40 (LHD)	G18	44 (LHD)
D6	C 40 (LHD)	D43	41 (LHD)	H21	45 (LHD)
D8	A 40 (LHD)	E5	44 (LHD)		
D9	B 40 (LHD)	E8	44 (LHD)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
ED2	55 (LHD)	
FD1	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
FD2	55 (LHD)	
GD1	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)

 : Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
D1	55 (LHD)	Cowl Side Panel LH
D3	55 (LHD)	Instrument Panel Brace RH
D4	55 (LHD)	Cowl Side Panel RH

Power Window (RHD)

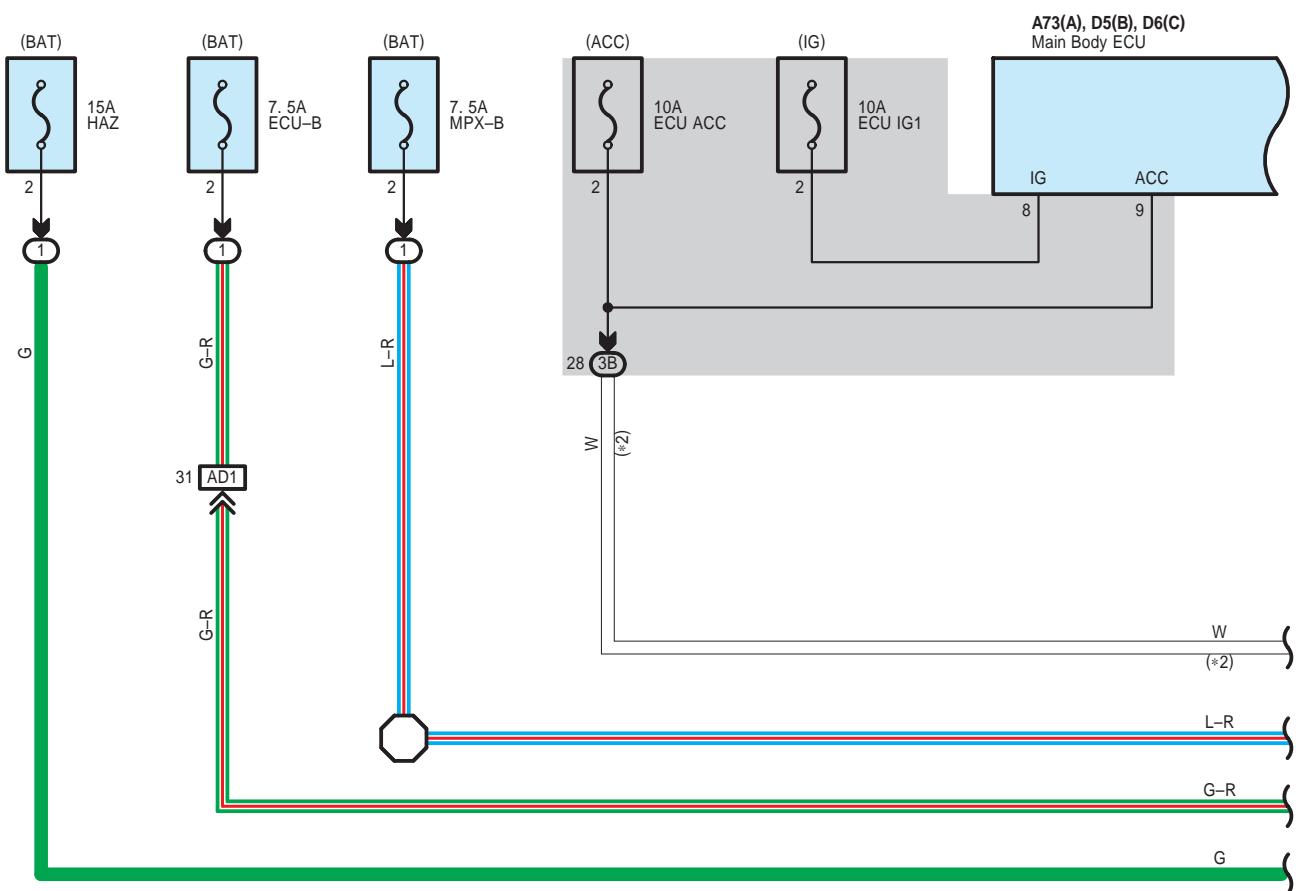


* 2 : w/ Entry & Start System


A73(A), D5(B), D6(C)
Main Body ECU

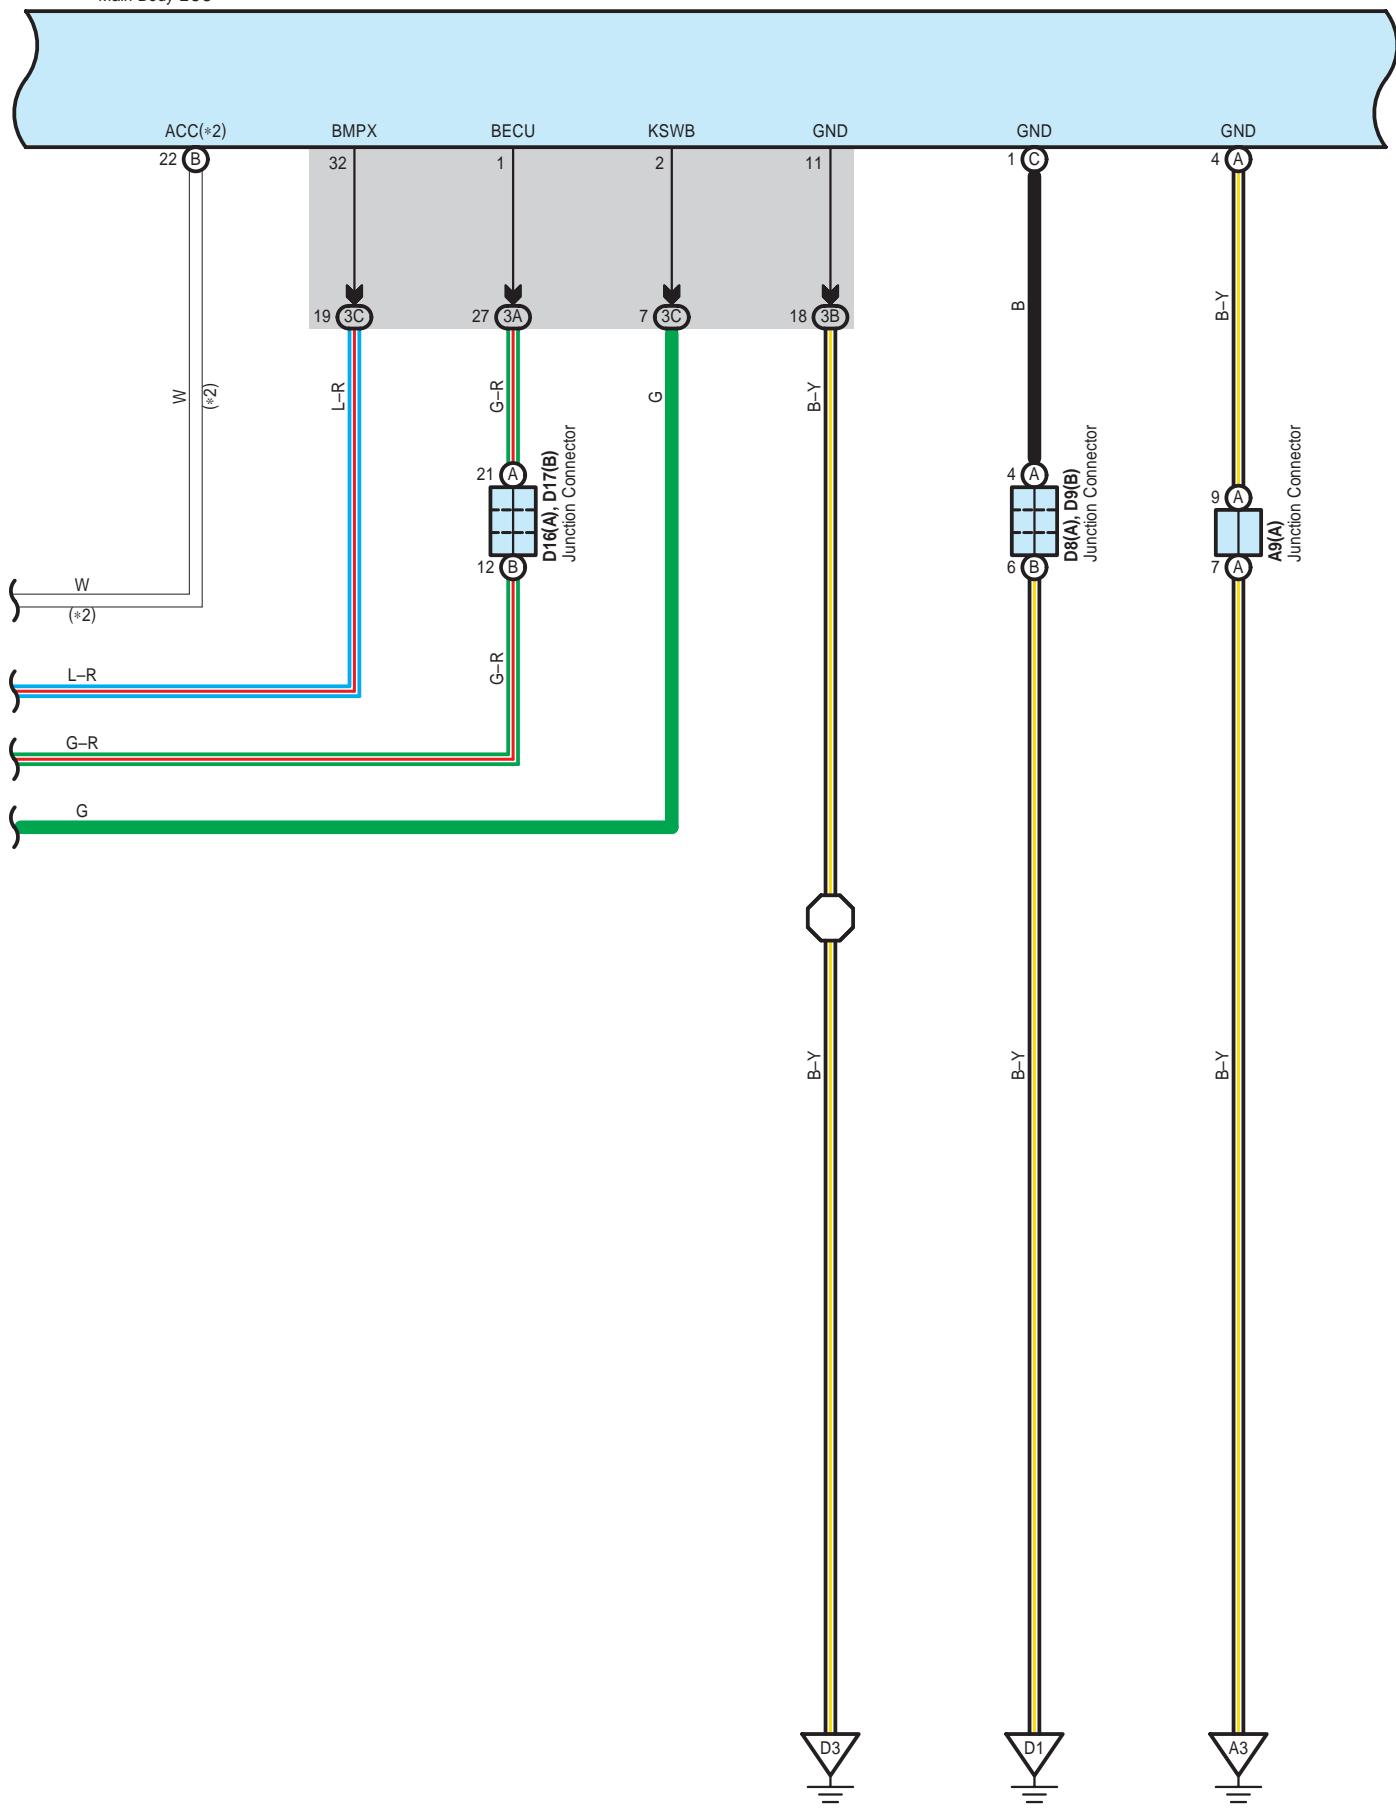


Power Window (RHD)

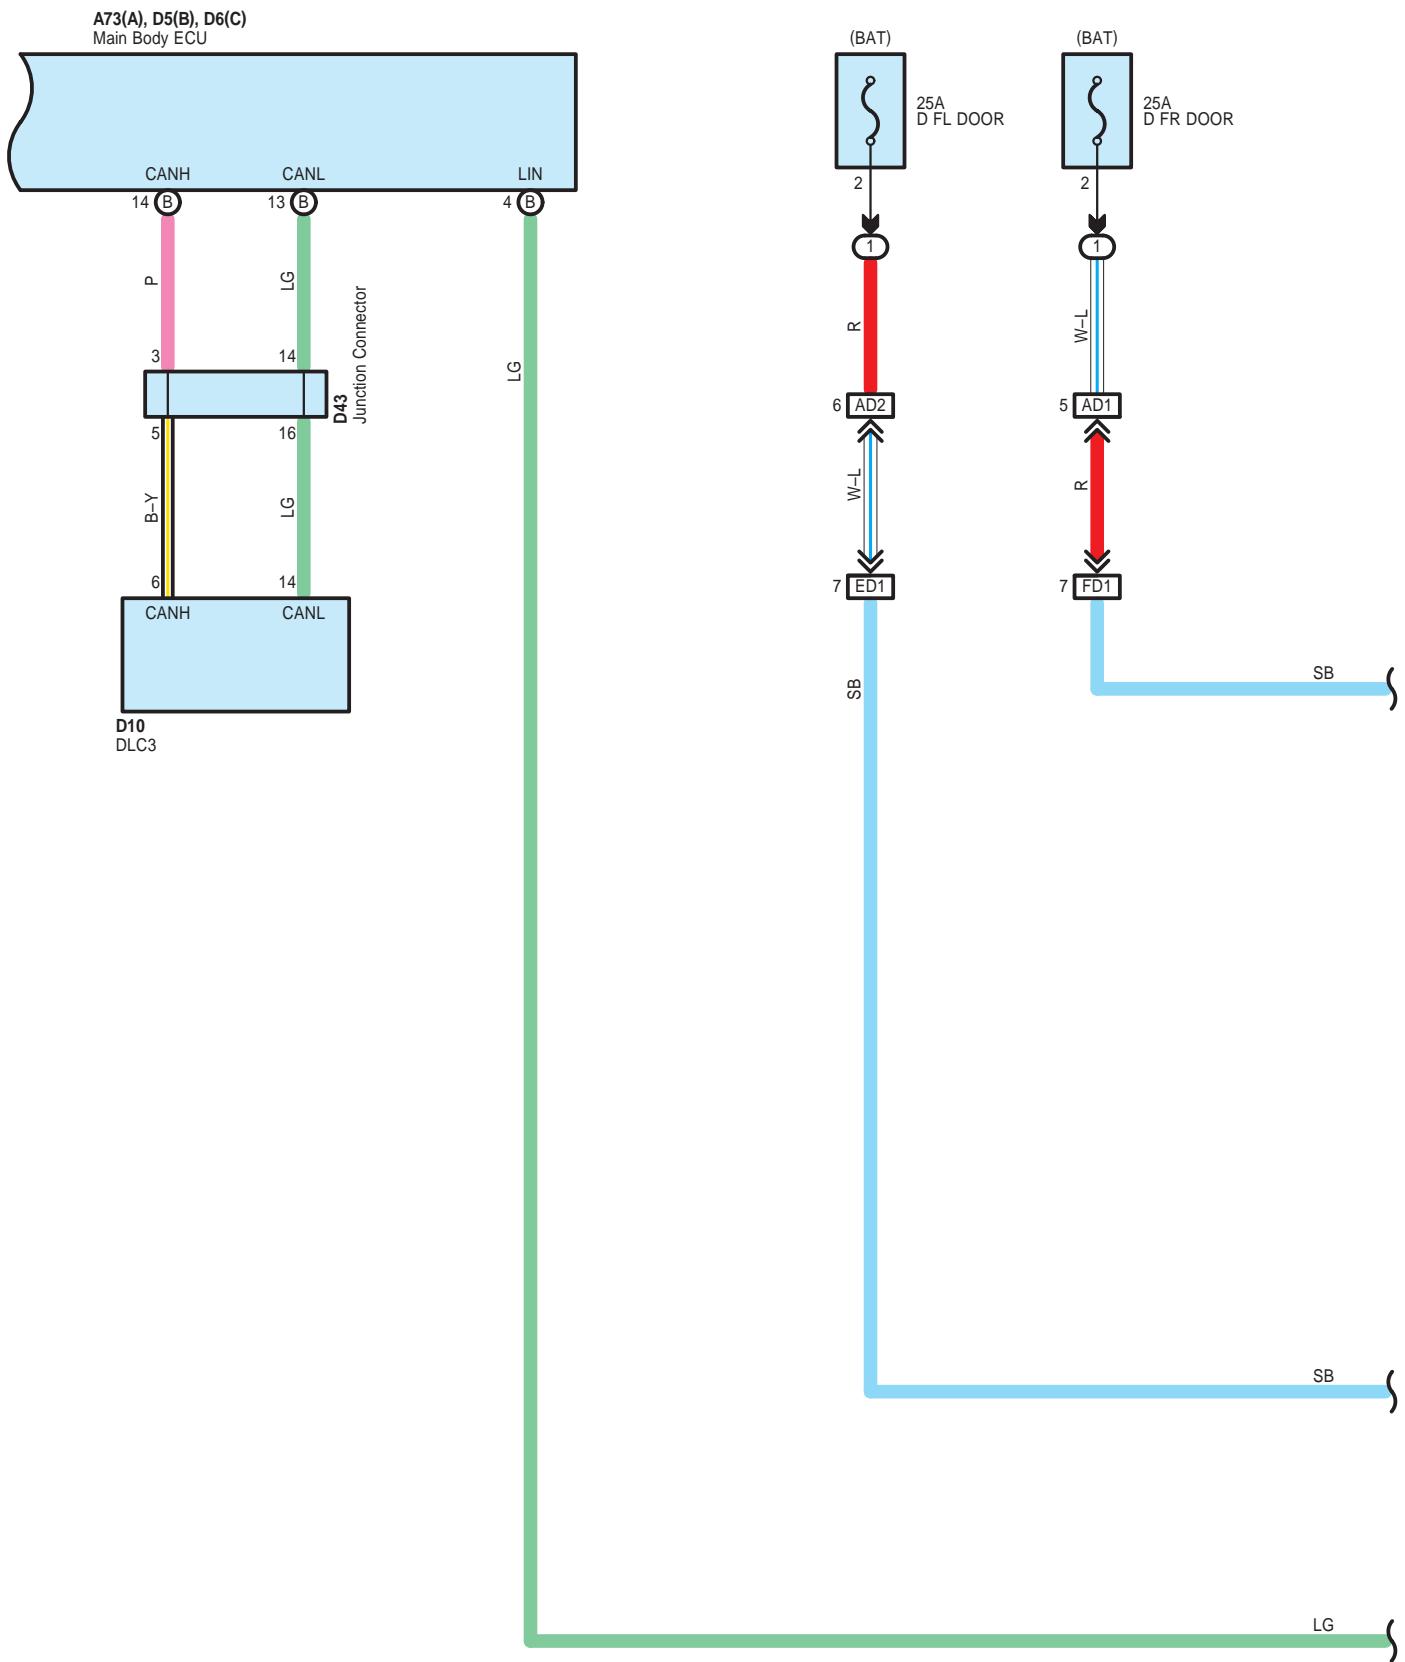

F10
Power Window Regulator Master Switch Assembly

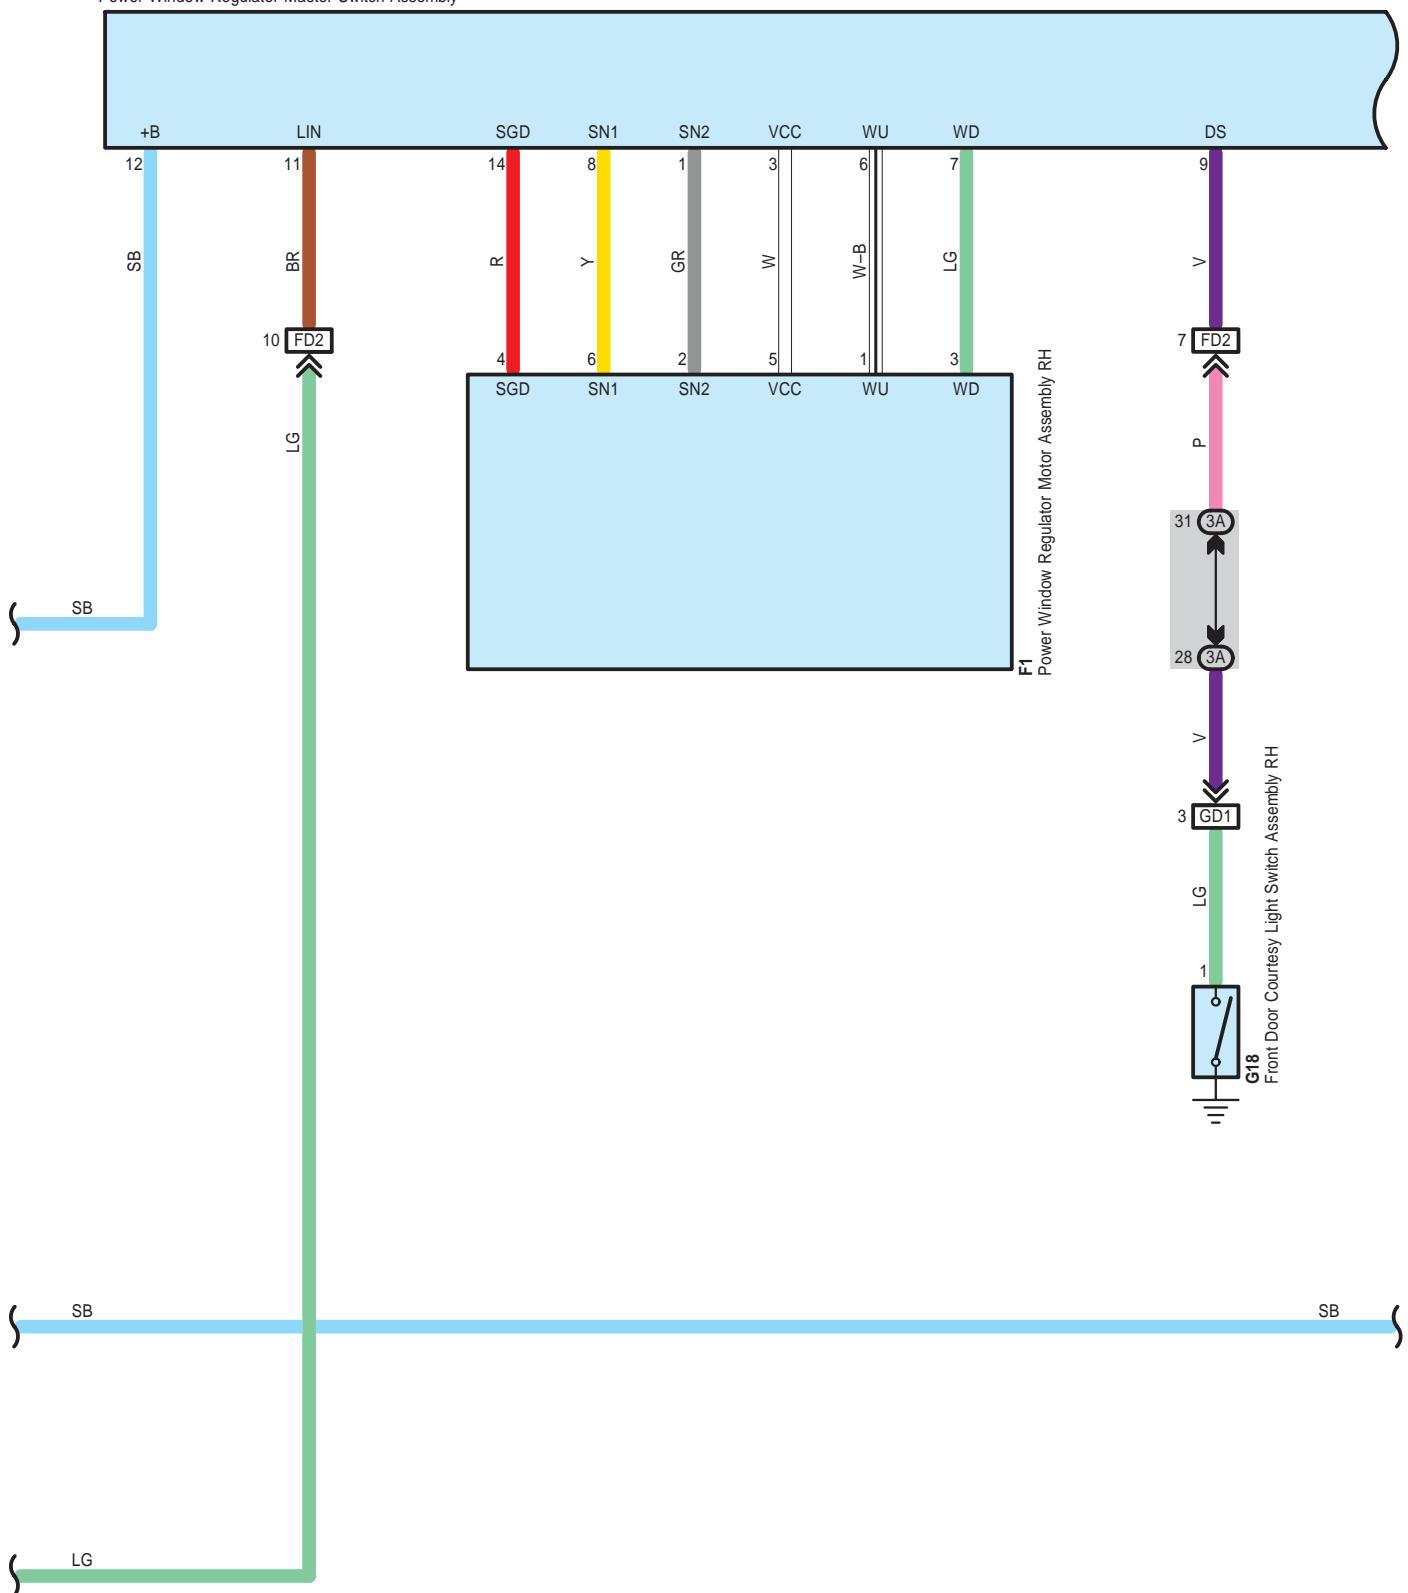

Power Window (RHD)

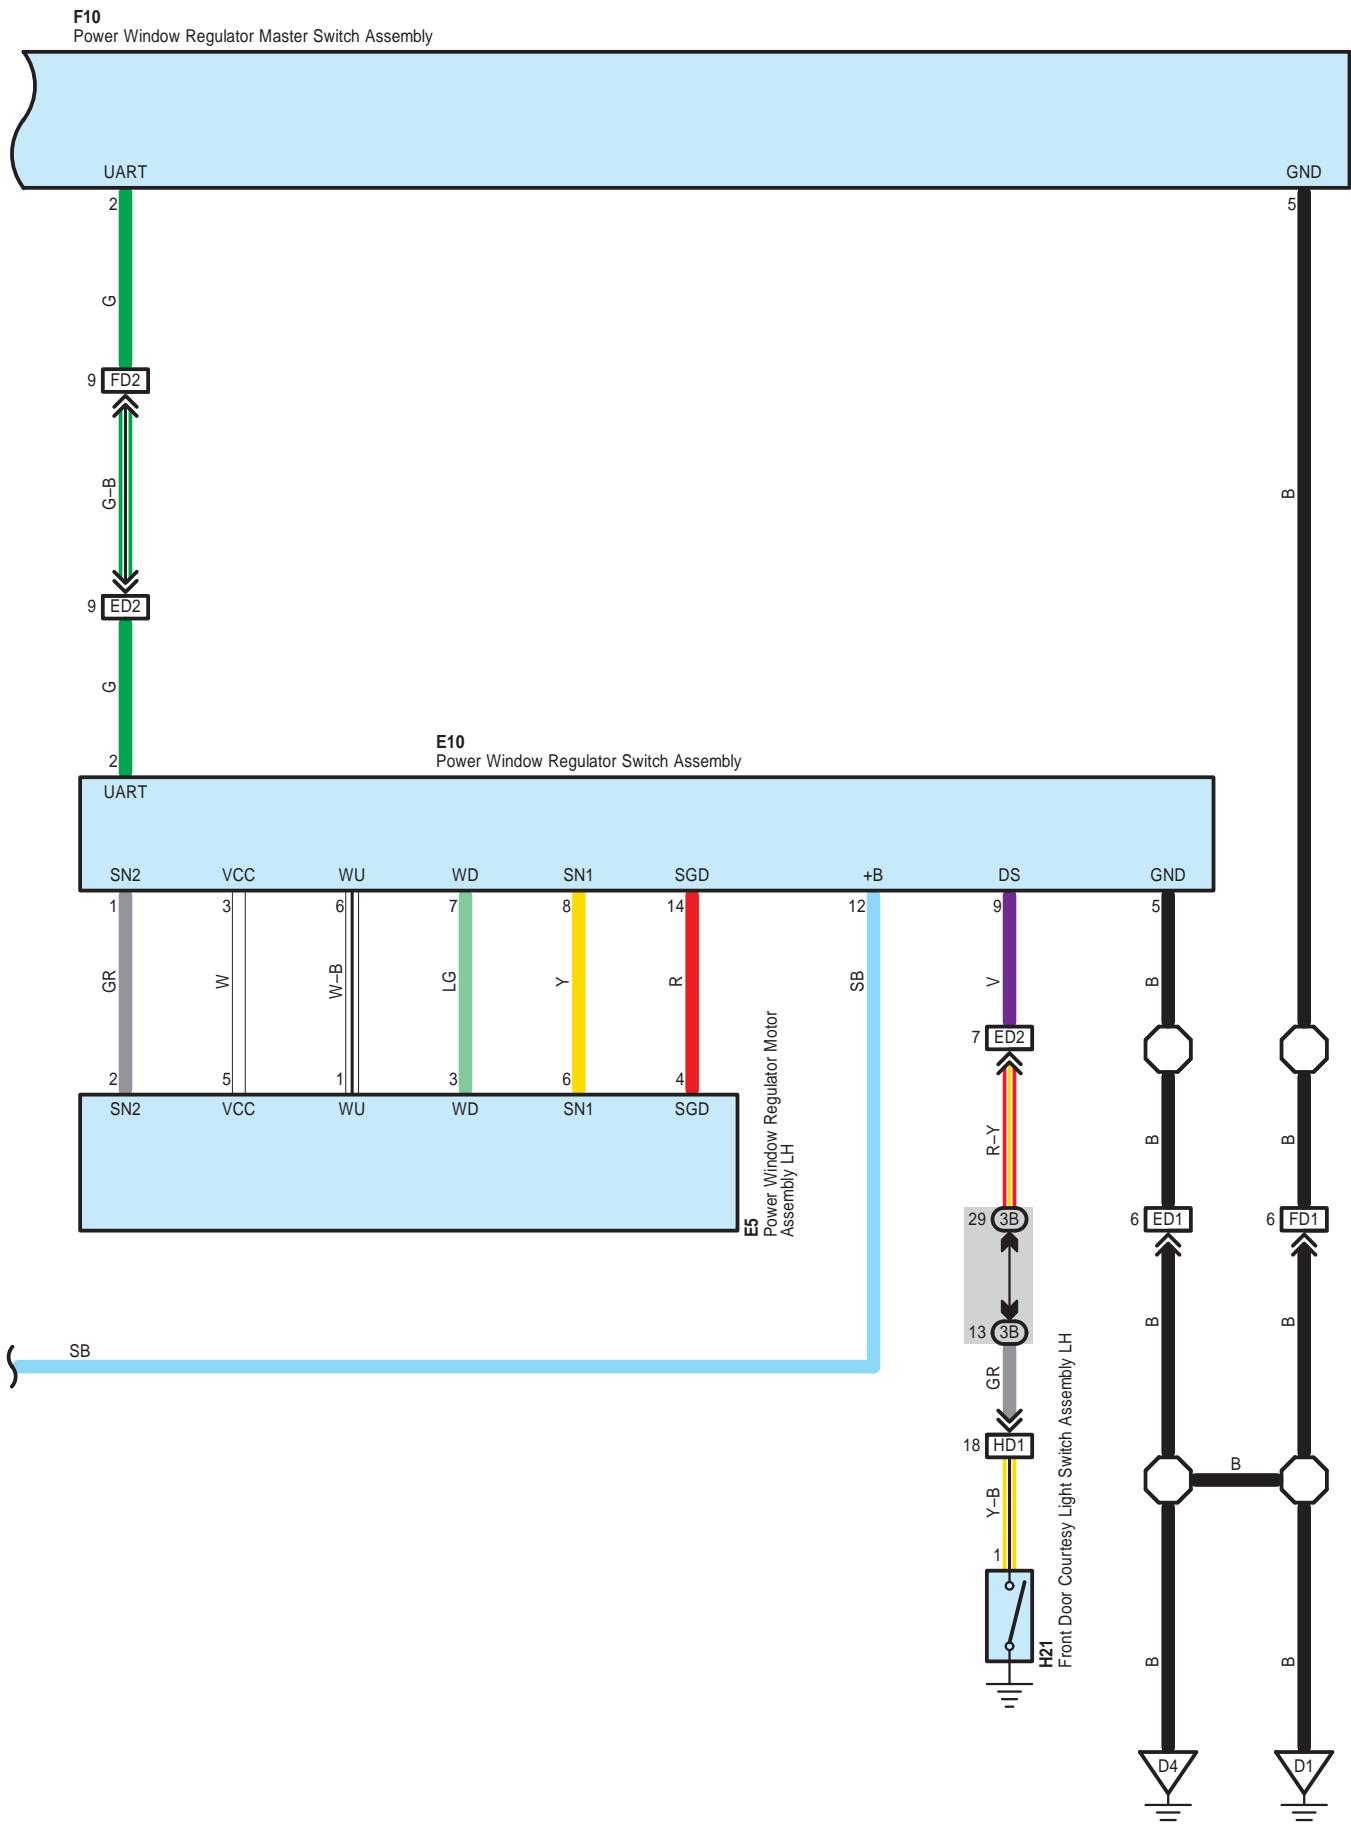

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	A 50 (RHD)	D10	48 (RHD)	F1	52 (RHD)
A73	A 50 (RHD)	D16	A 48 (RHD)	F10	52 (RHD)
D5	B 48 (RHD)	D17	B 48 (RHD)	G18	52 (RHD)
D6	C 48 (RHD)	D43	49 (RHD)	H21	53 (RHD)
D8	A 48 (RHD)	E5	52 (RHD)		
D9	B 48 (RHD)	E10	52 (RHD)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
ED1	59 (RHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
ED2		
FD1	59 (RHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
FD2		
GD1	59 (RHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
HD1	59 (RHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)

 : Ground Points


Code	See Page	Ground Points Location
A3	59 (RHD)	Cowl Side Panel LH
D1	59 (RHD)	Cowl Side Panel RH
D3	59 (RHD)	Instrument Panel Brace LH
D4	59 (RHD)	Cowl Side Panel LH

Door Lock Control

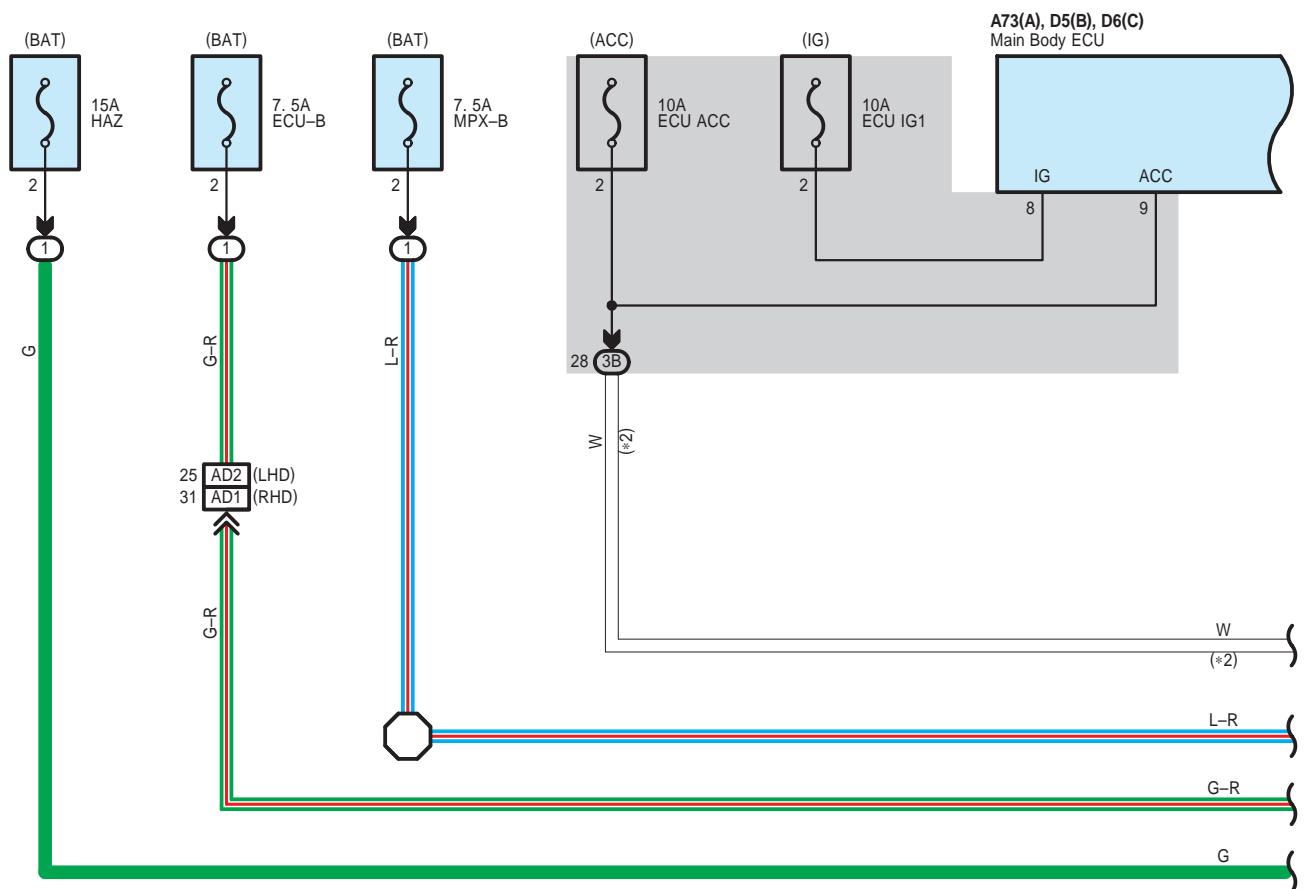


* 2 : w/ Entry & Start System
 * 3 : w/o Entry & Start System

A73(A), D5(B), D6(C)
Main Body ECU

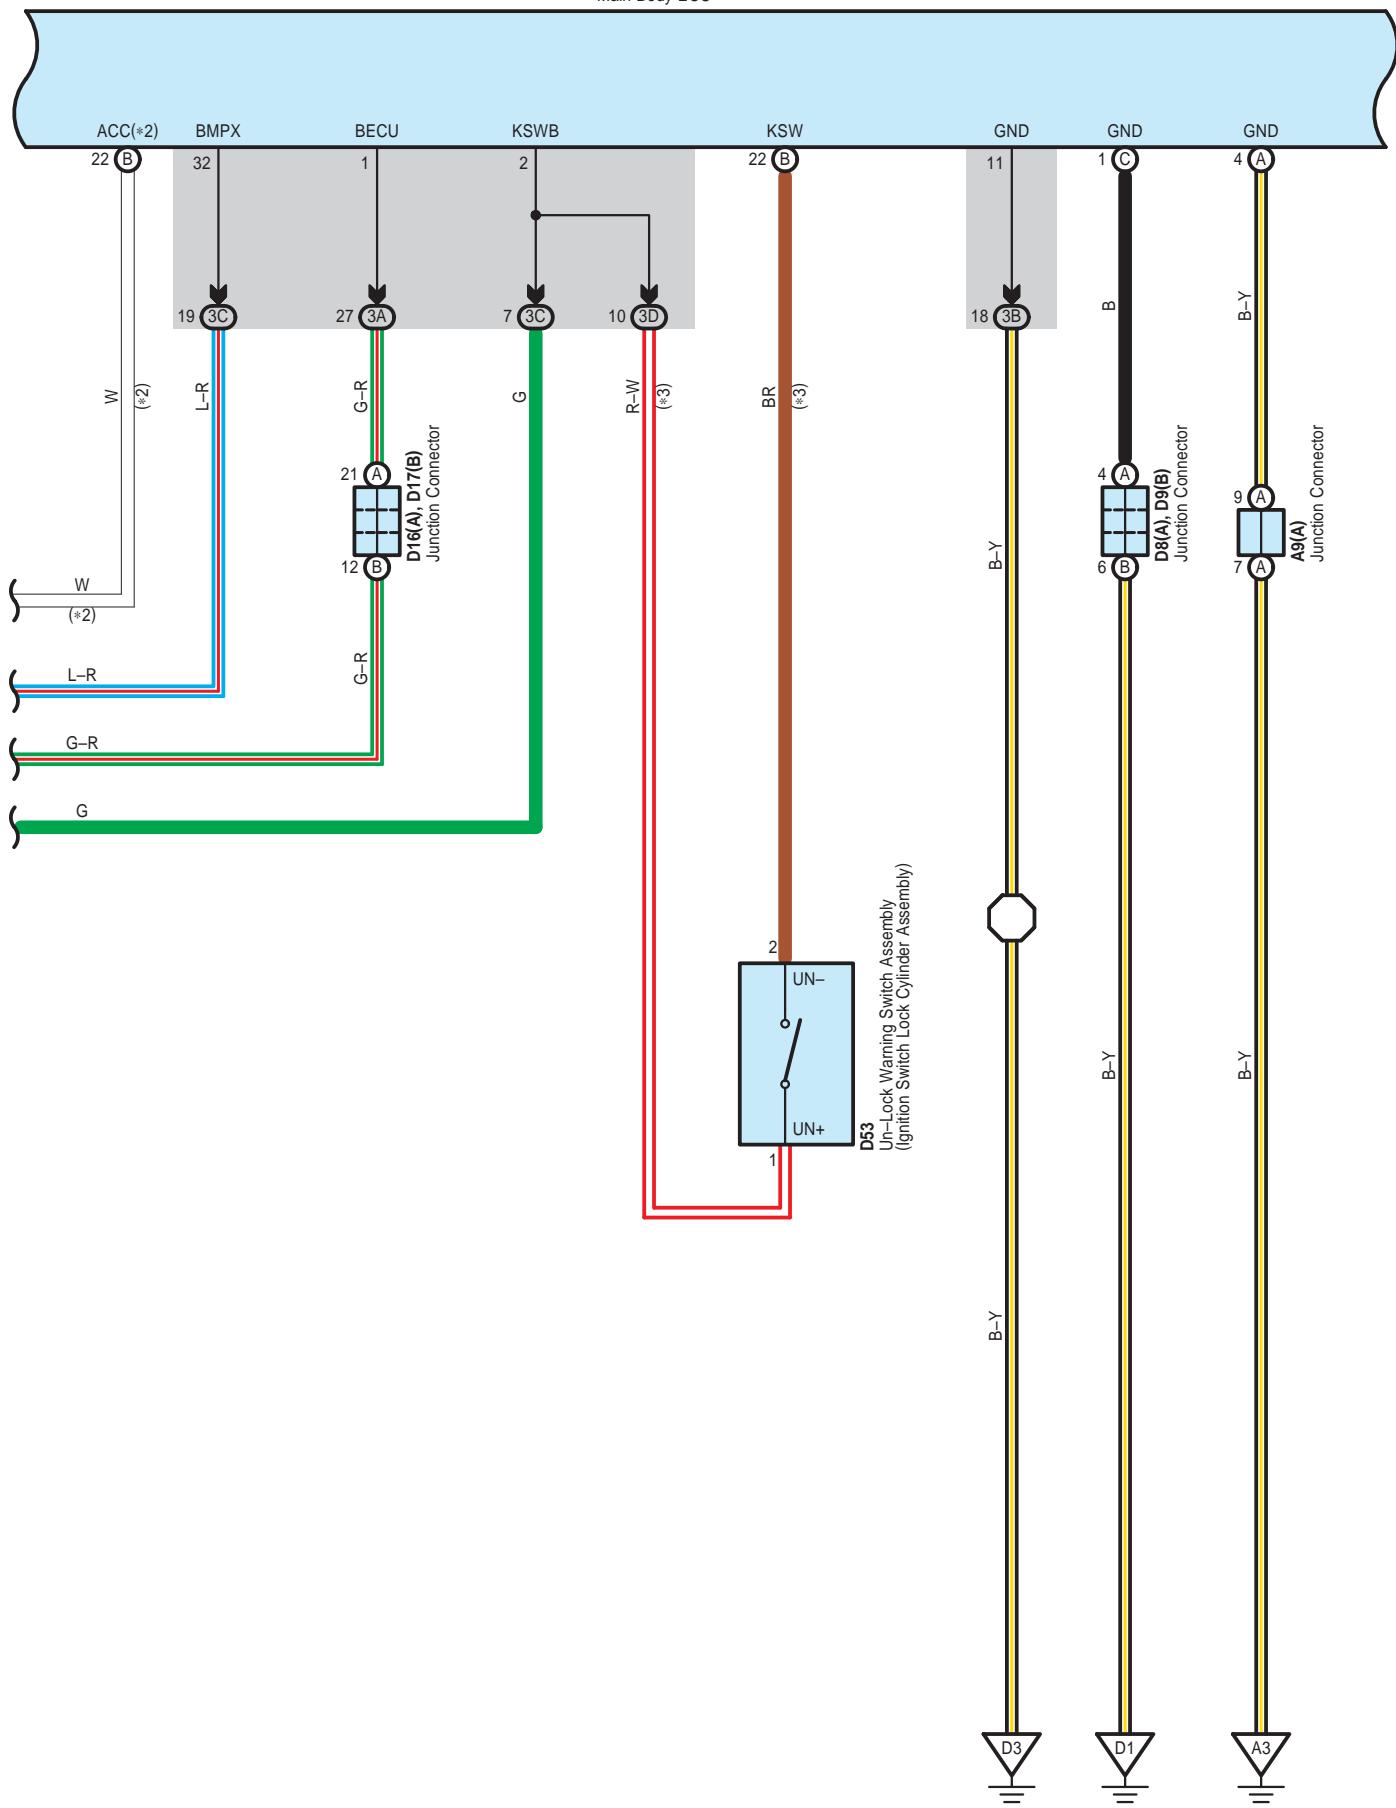


Door Lock Control


A73(A), D5(B), D6(C)
Main Body ECU

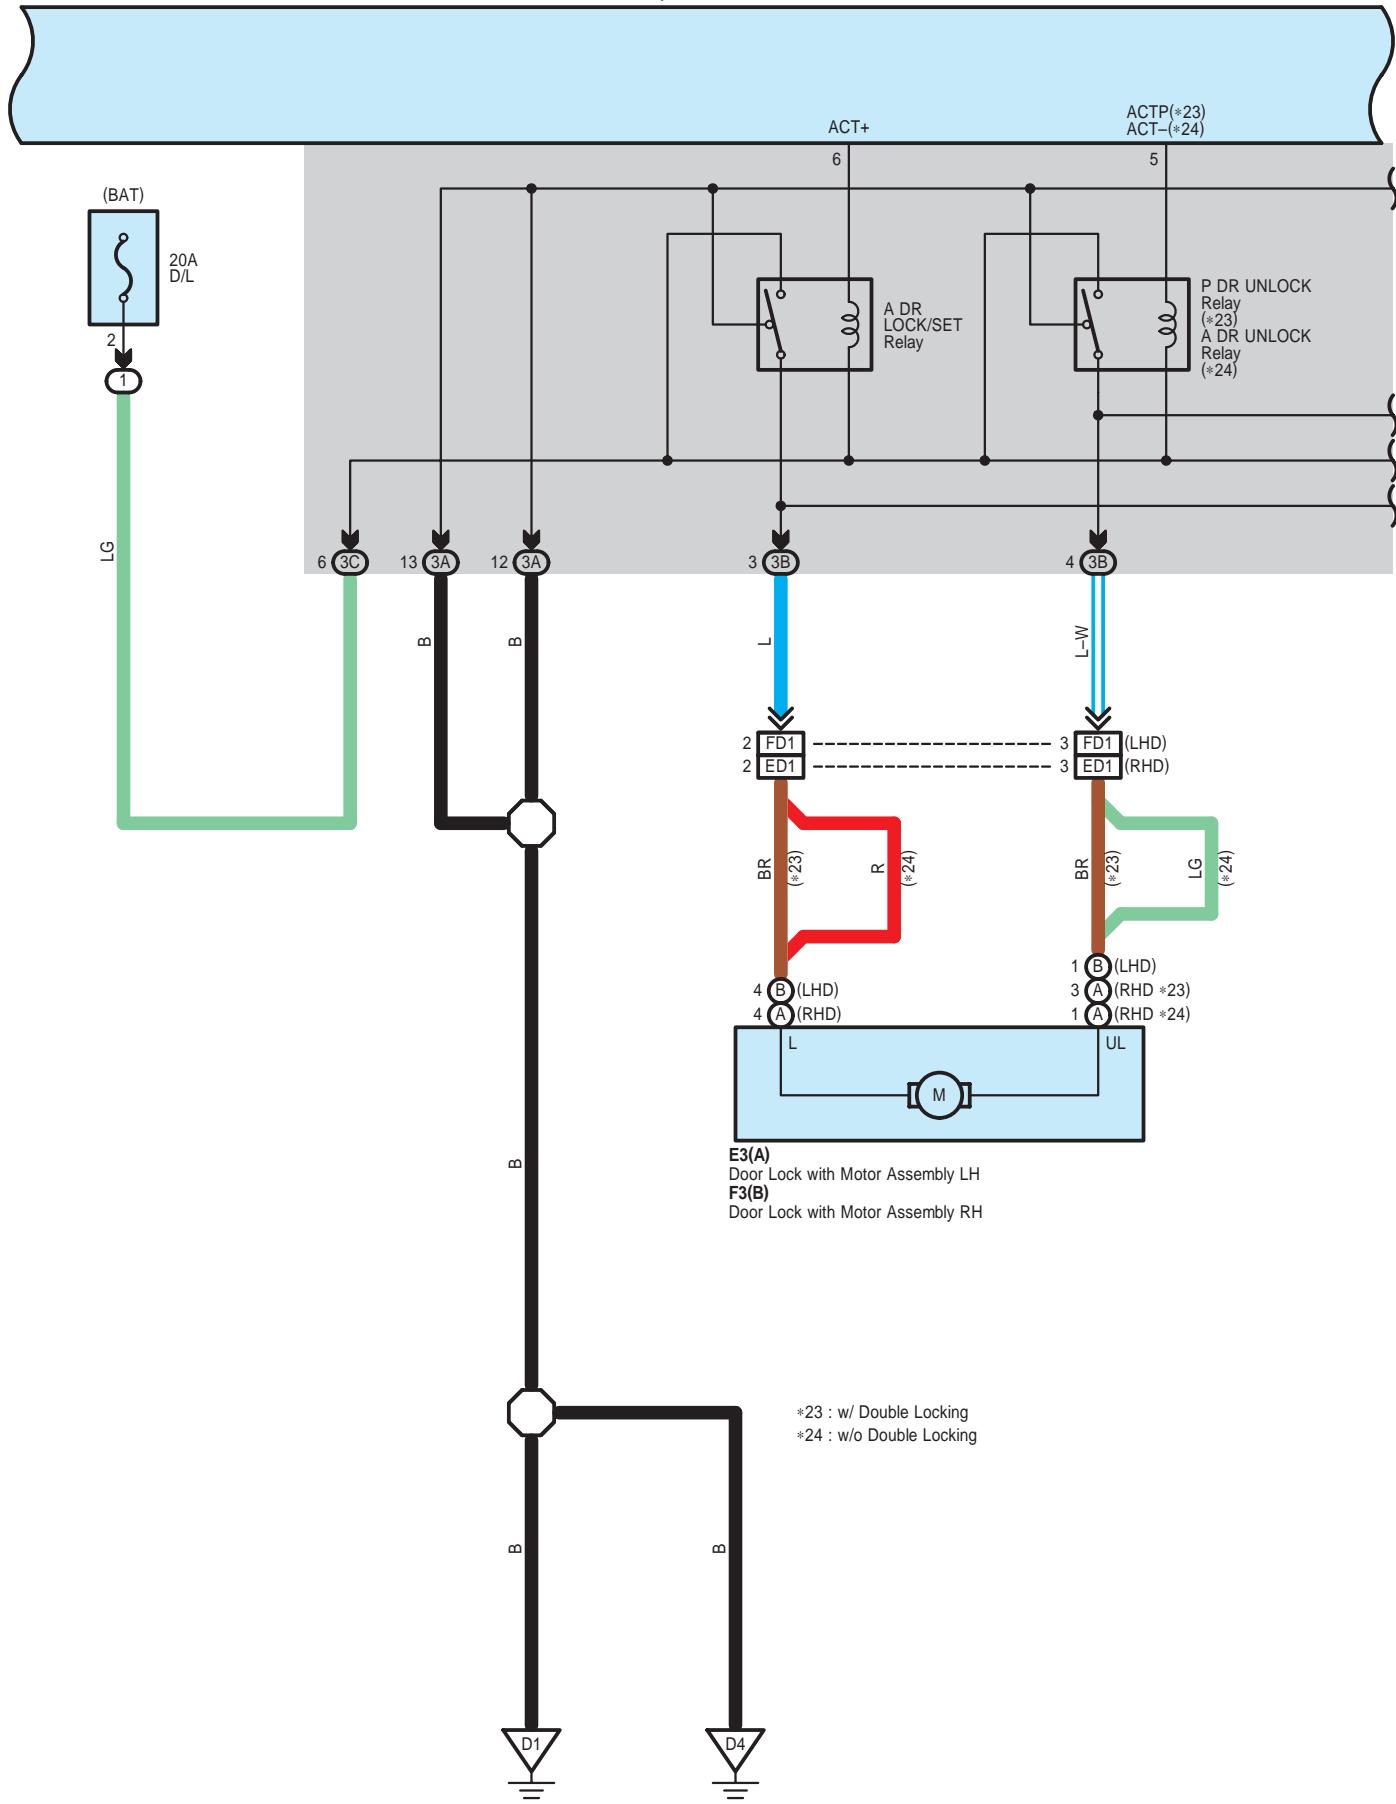

A73(A), D5(B), D6(C)
Main Body ECU

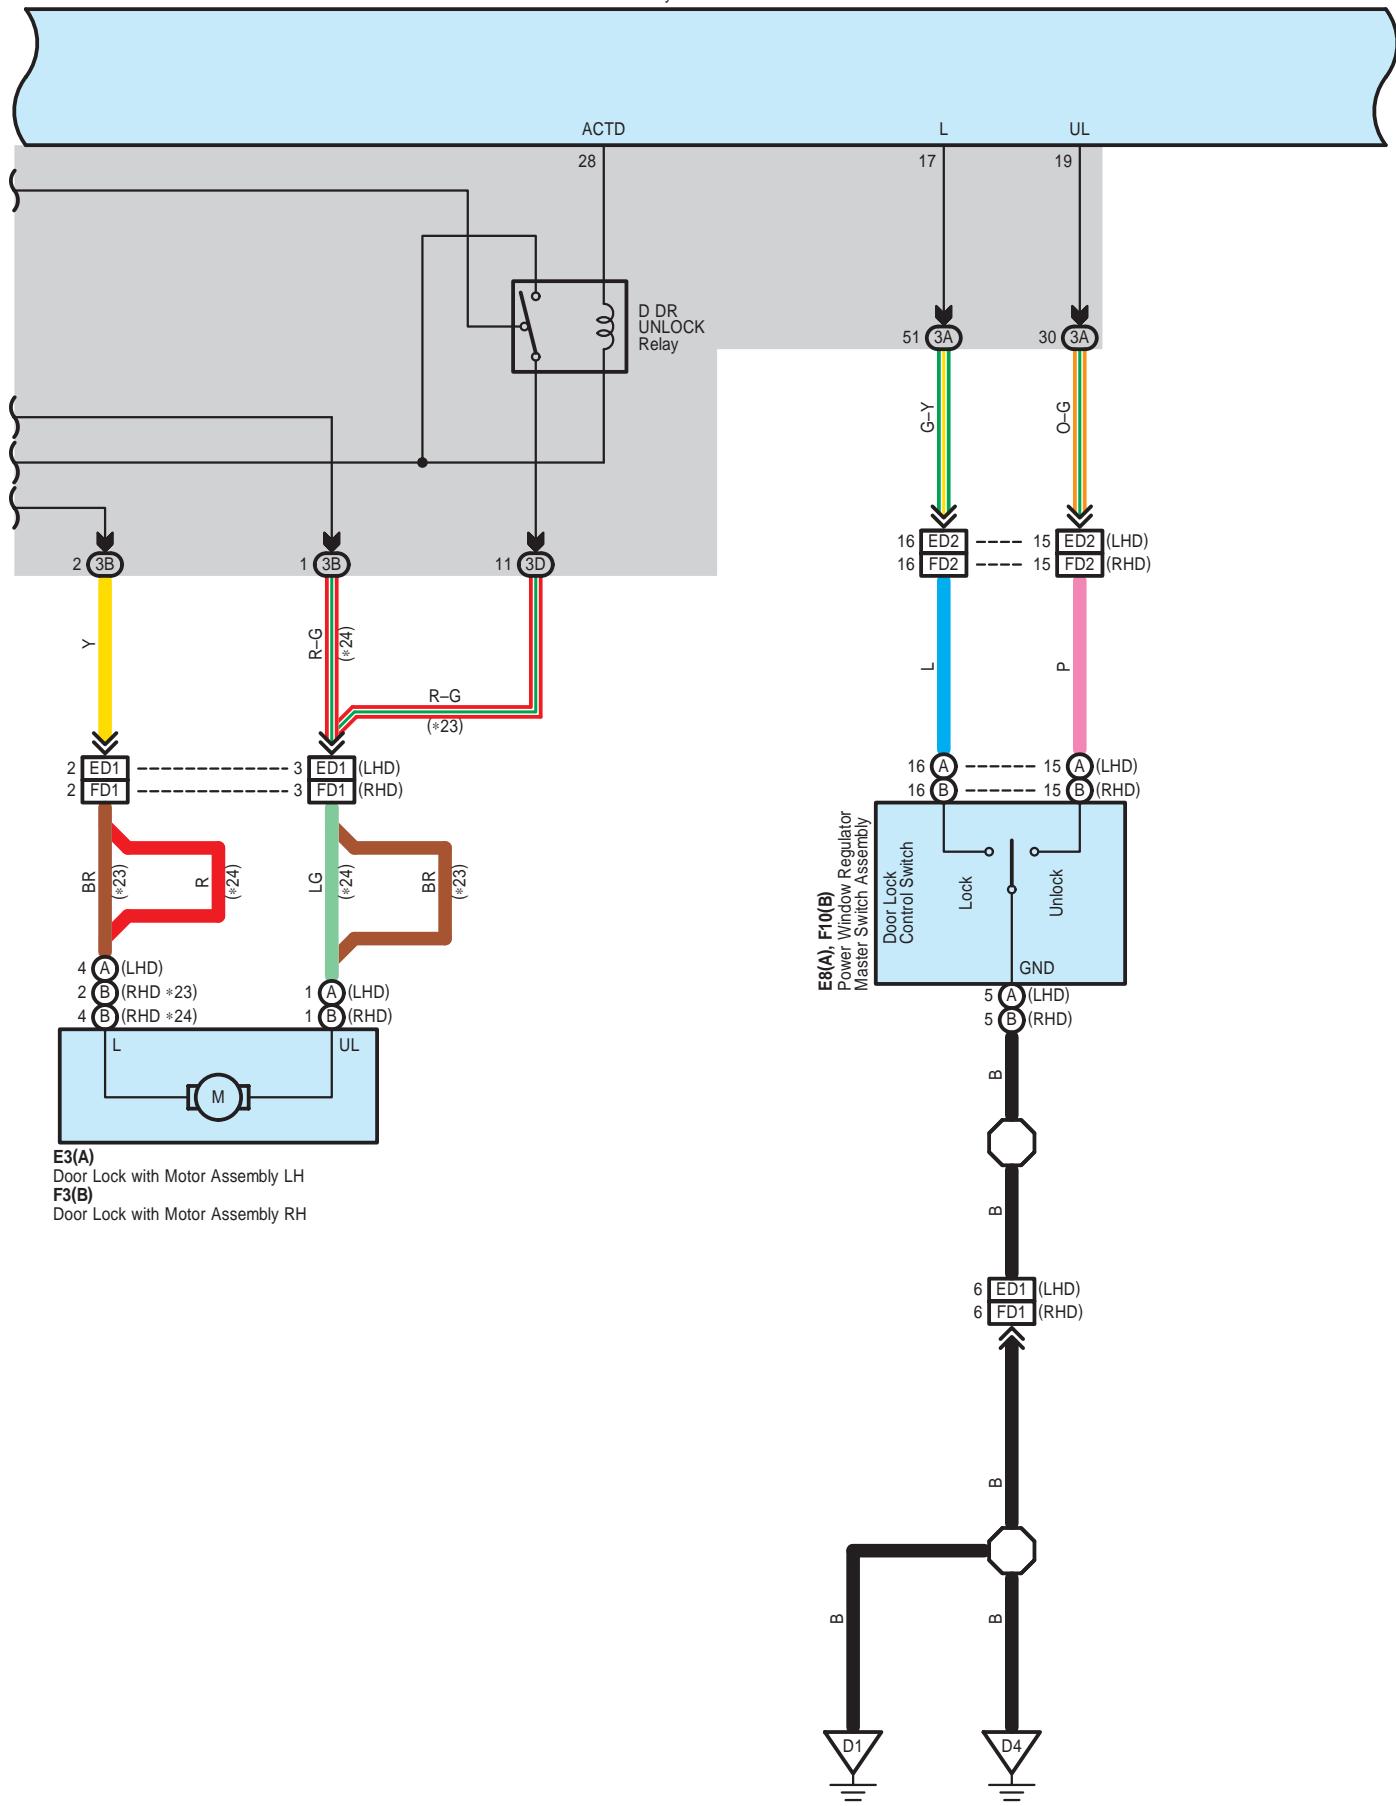

Door Lock Control

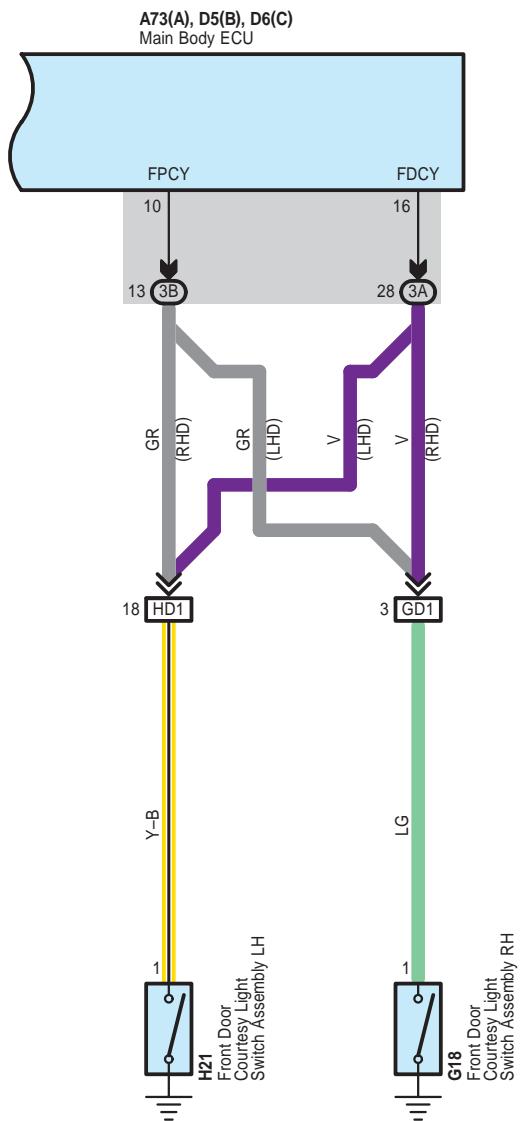

 : Parts Location

Code		See Page		Code		See Page		Code		See Page		
A9	A	42 (LHD)		D9	B	40 (LHD)		E8	A	44 (LHD)		
		50 (RHD)				48 (RHD)				44 (LHD)		
A73	A	42 (LHD)		D16	A	40 (LHD)		F3	B	52 (RHD)		
		50 (RHD)				48 (RHD)				52 (RHD)		
D5	B	40 (LHD)		D17	B	40 (LHD)		G18		44 (LHD)		
		48 (RHD)				48 (RHD)				52 (RHD)		
D6	C	40 (LHD)		D53		41 (LHD)		H21		45 (LHD)		
		48 (RHD)				49 (RHD)				53 (RHD)		
D8	A	40 (LHD)		E3	A	44 (LHD)						
		48 (RHD)				52 (RHD)						

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A		
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
ED2	55 (LHD)	
FD1	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
FD2	59 (RHD)	
GD1	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	


 : Ground Points

Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH


Wireless Door Lock Control (w/o Entry & Start System)

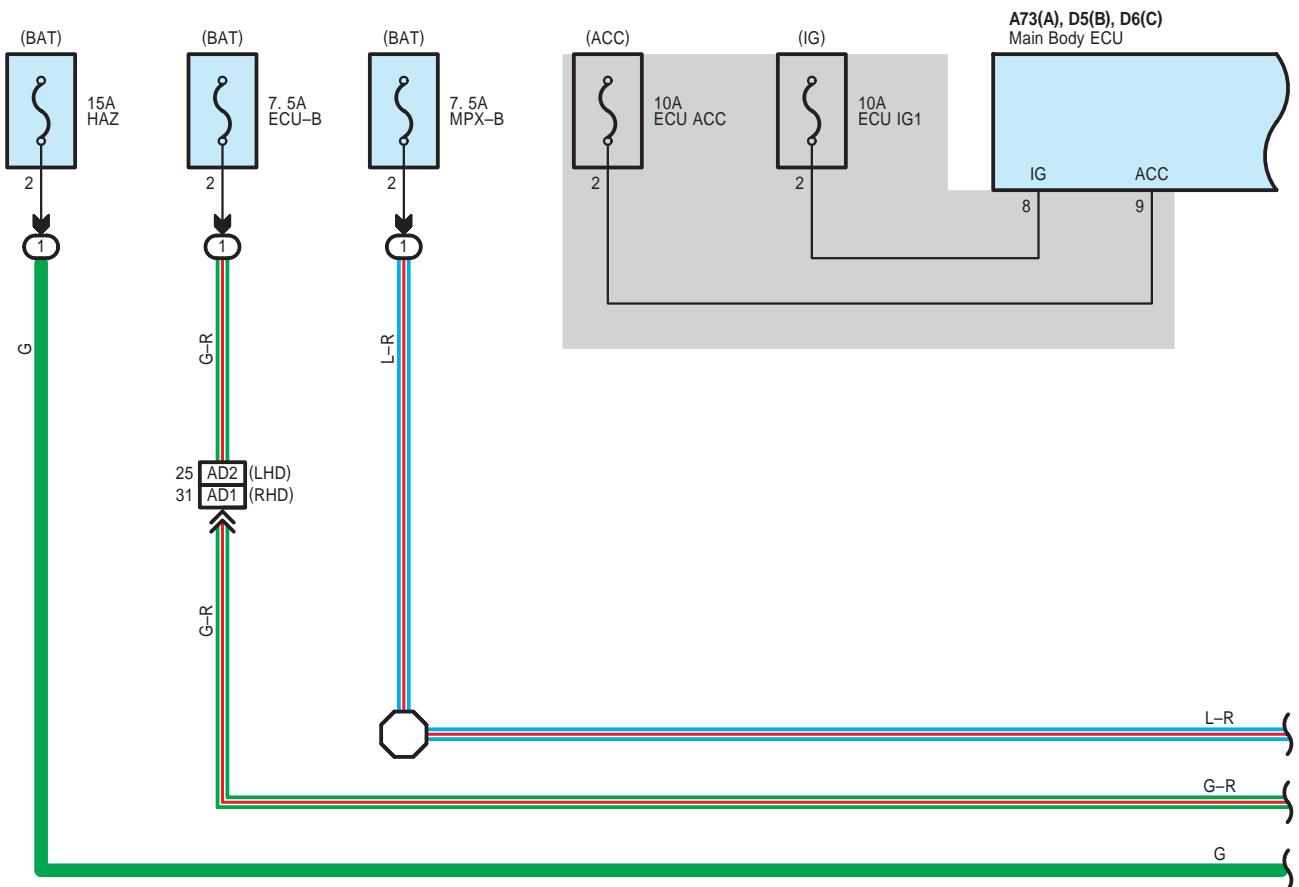

A73(A), D5(B), D6(C)
Main Body ECU

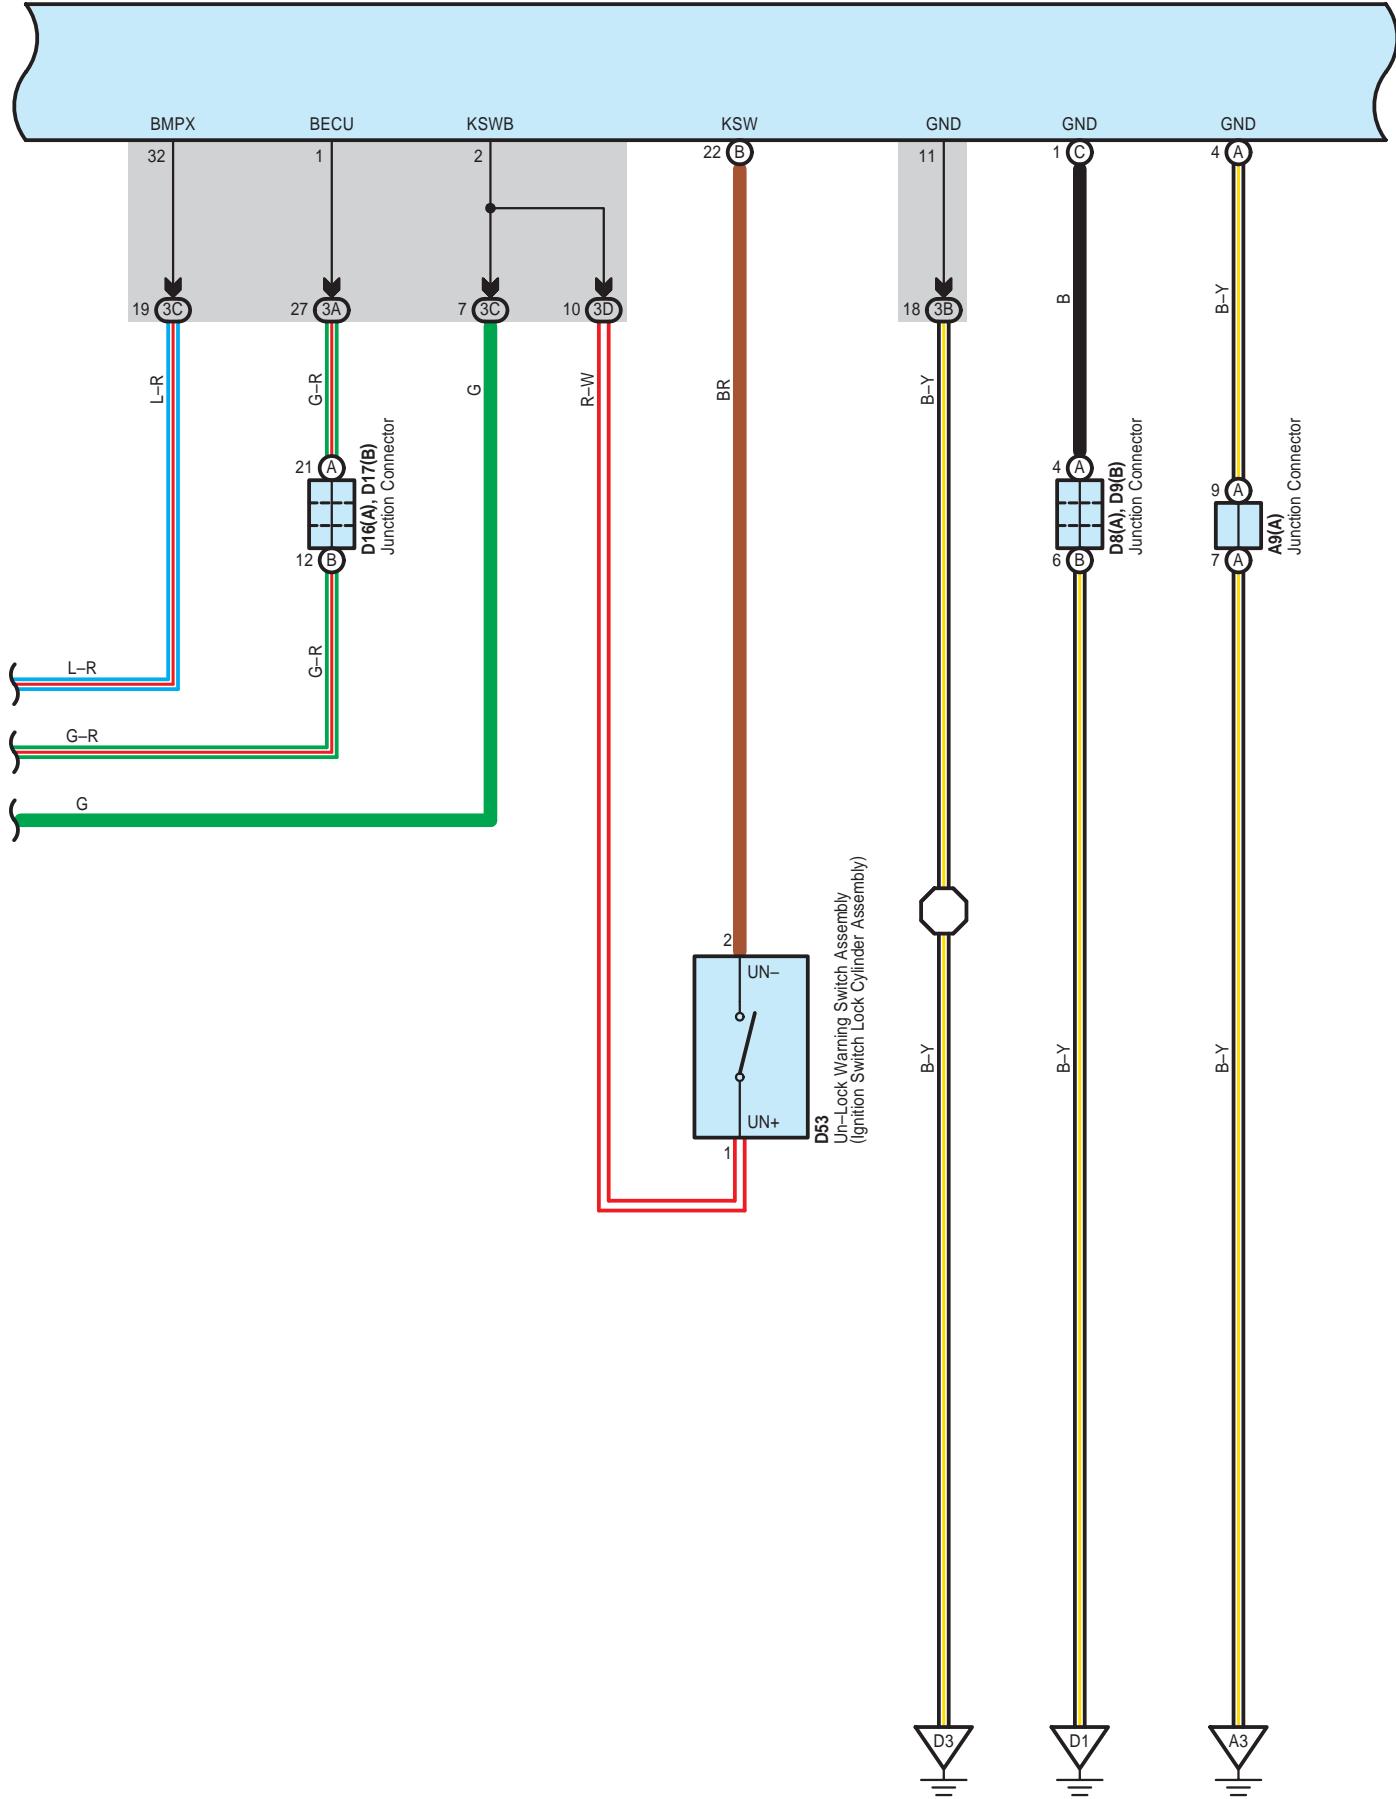


Wireless Door Lock Control (w/o Entry & Start System)

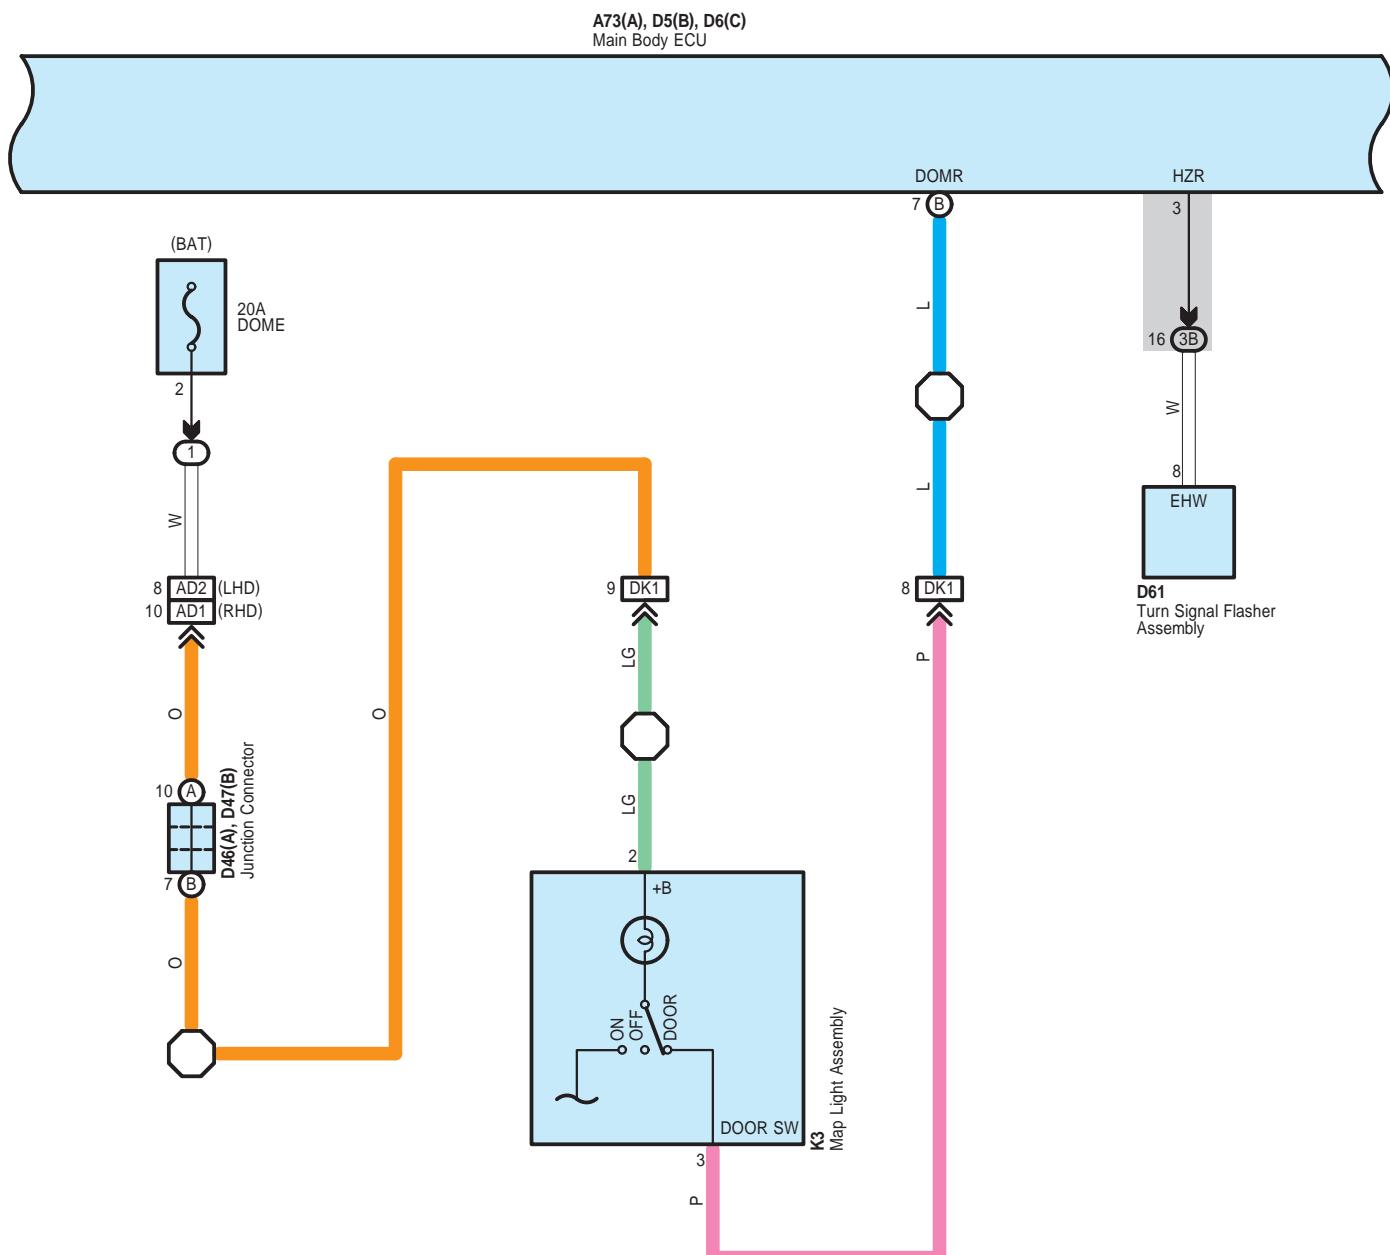


* 9 : w/ Wireless Door Lock Buzzer

A73(A), D5(B), D6(C)
Main Body ECU

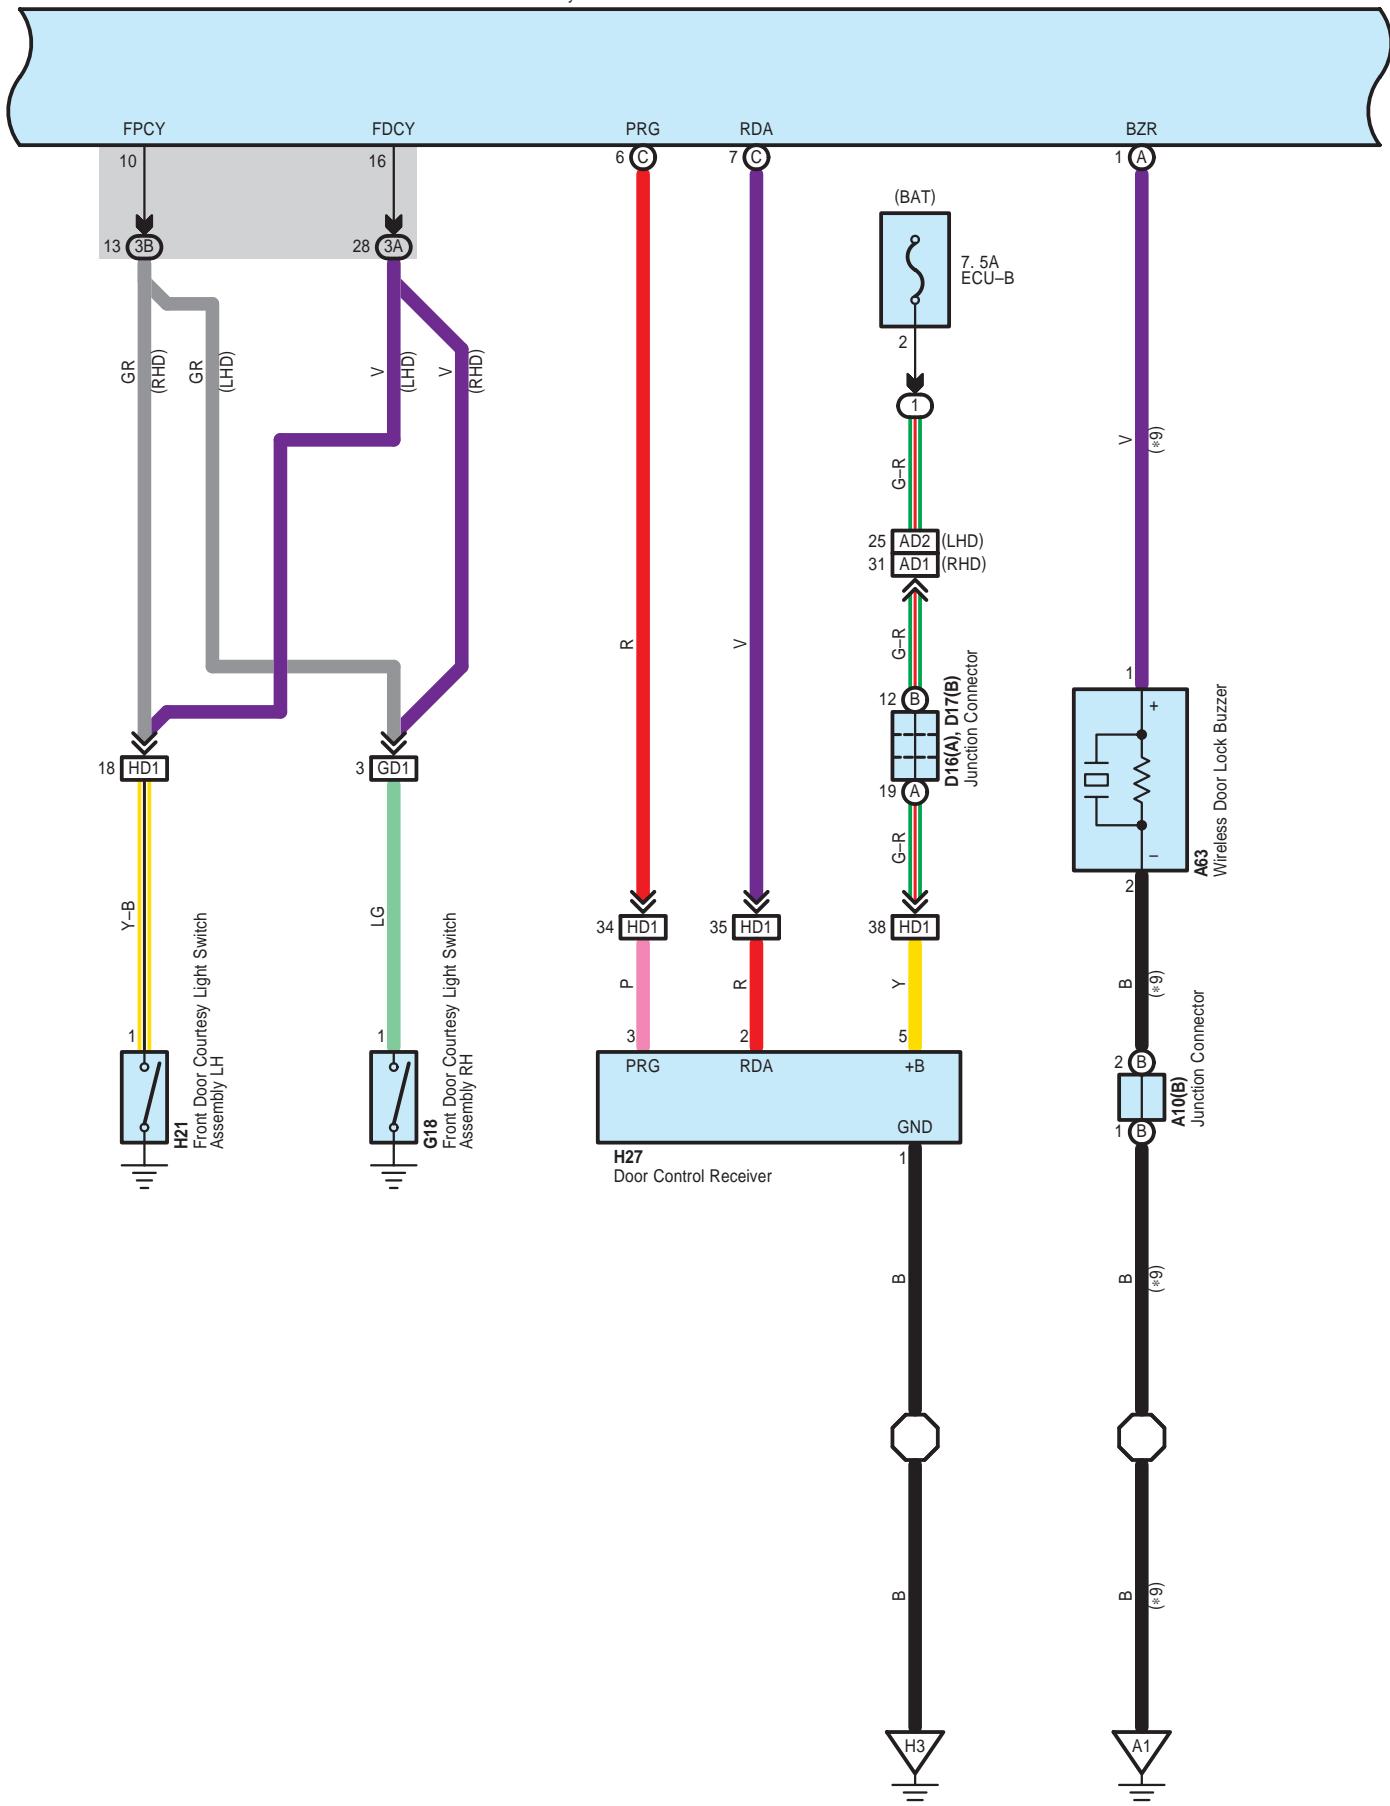


Wireless Door Lock Control (w/o Entry & Start System)

A73(A), D5(B), D6(C)
Main Body ECU

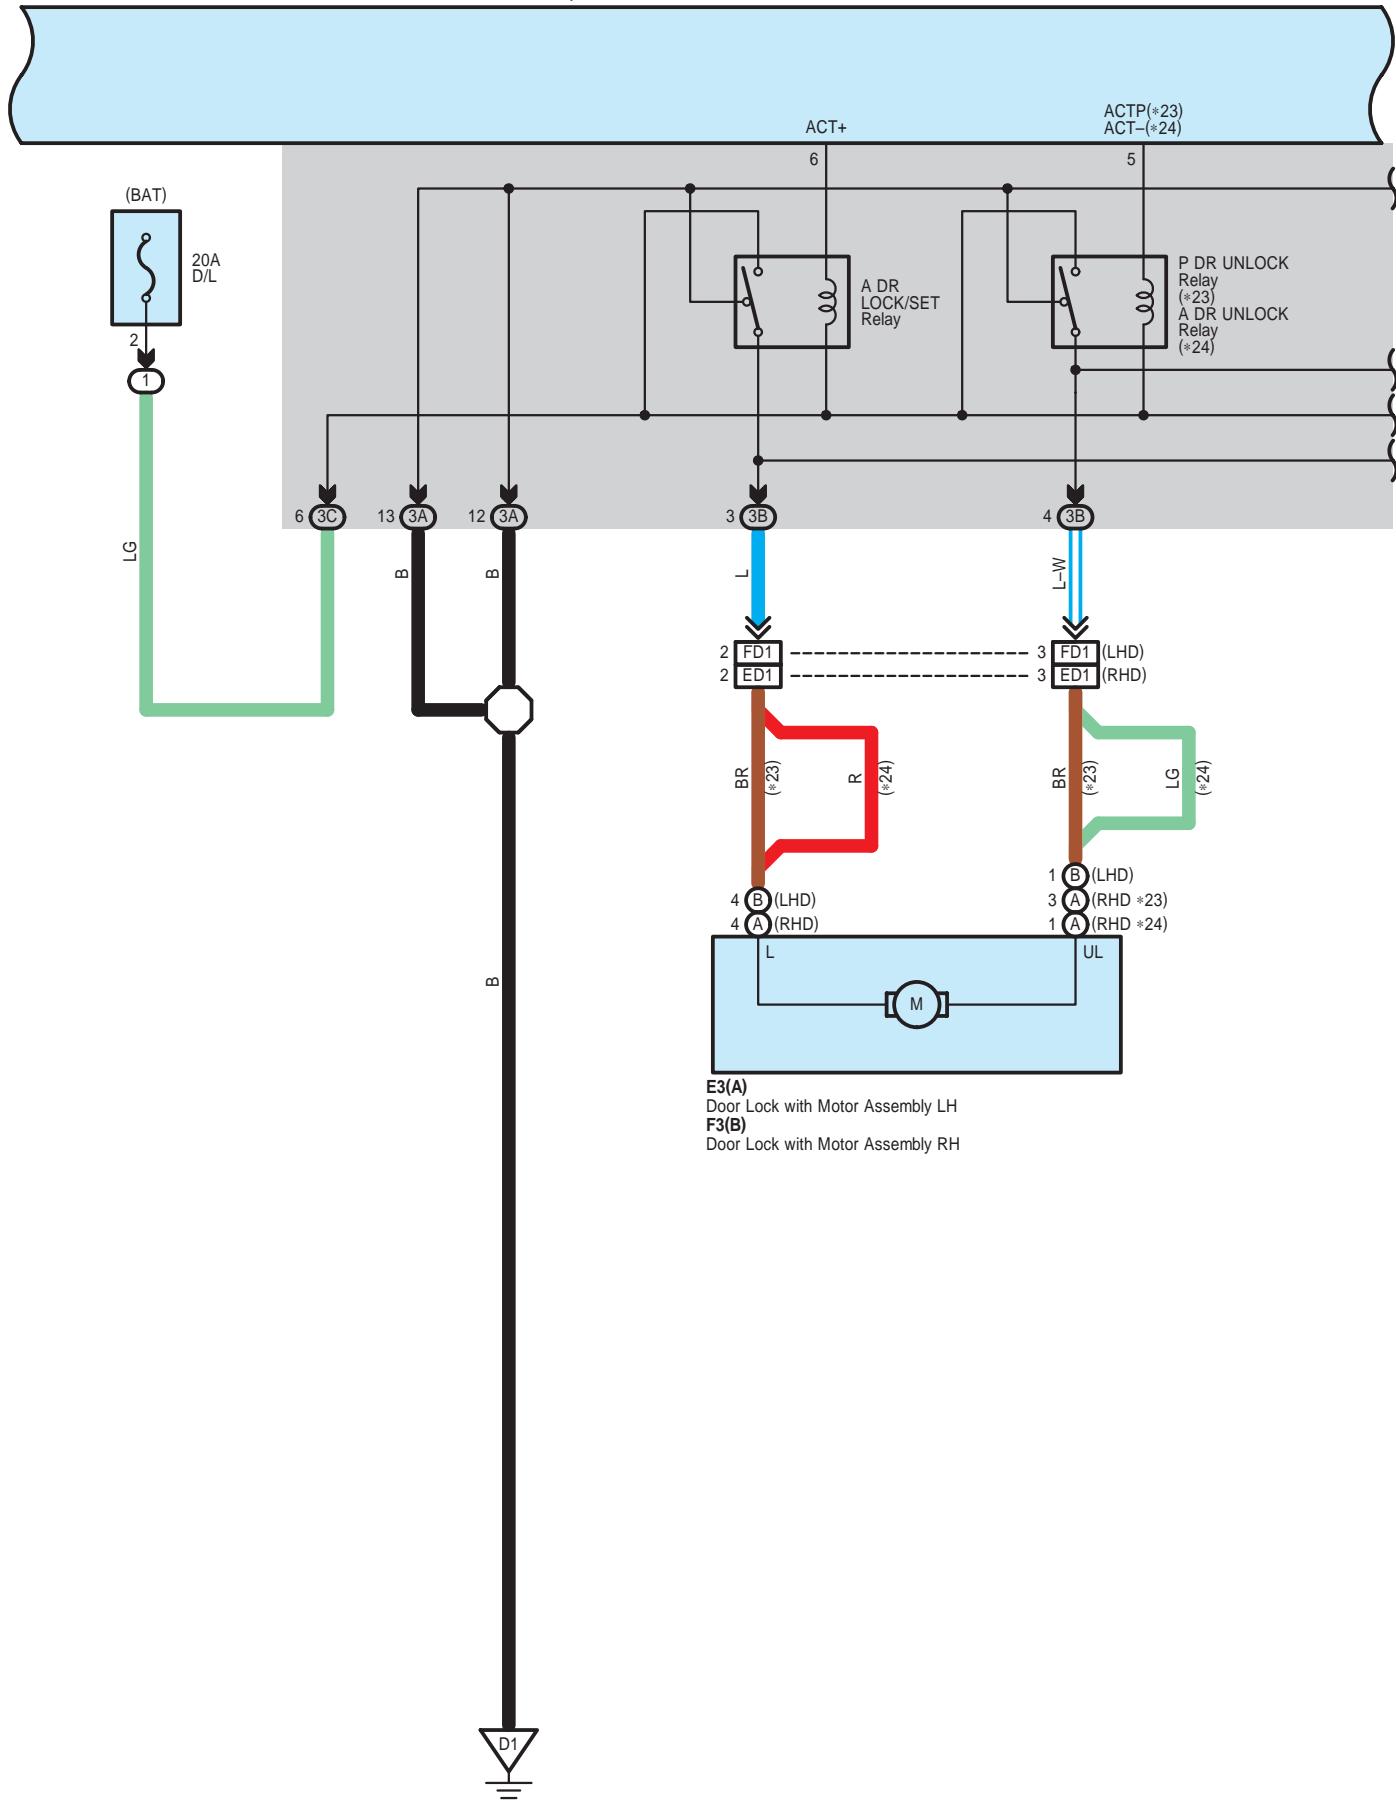

A73(A), D5(B), D6(C)
Main Body ECU

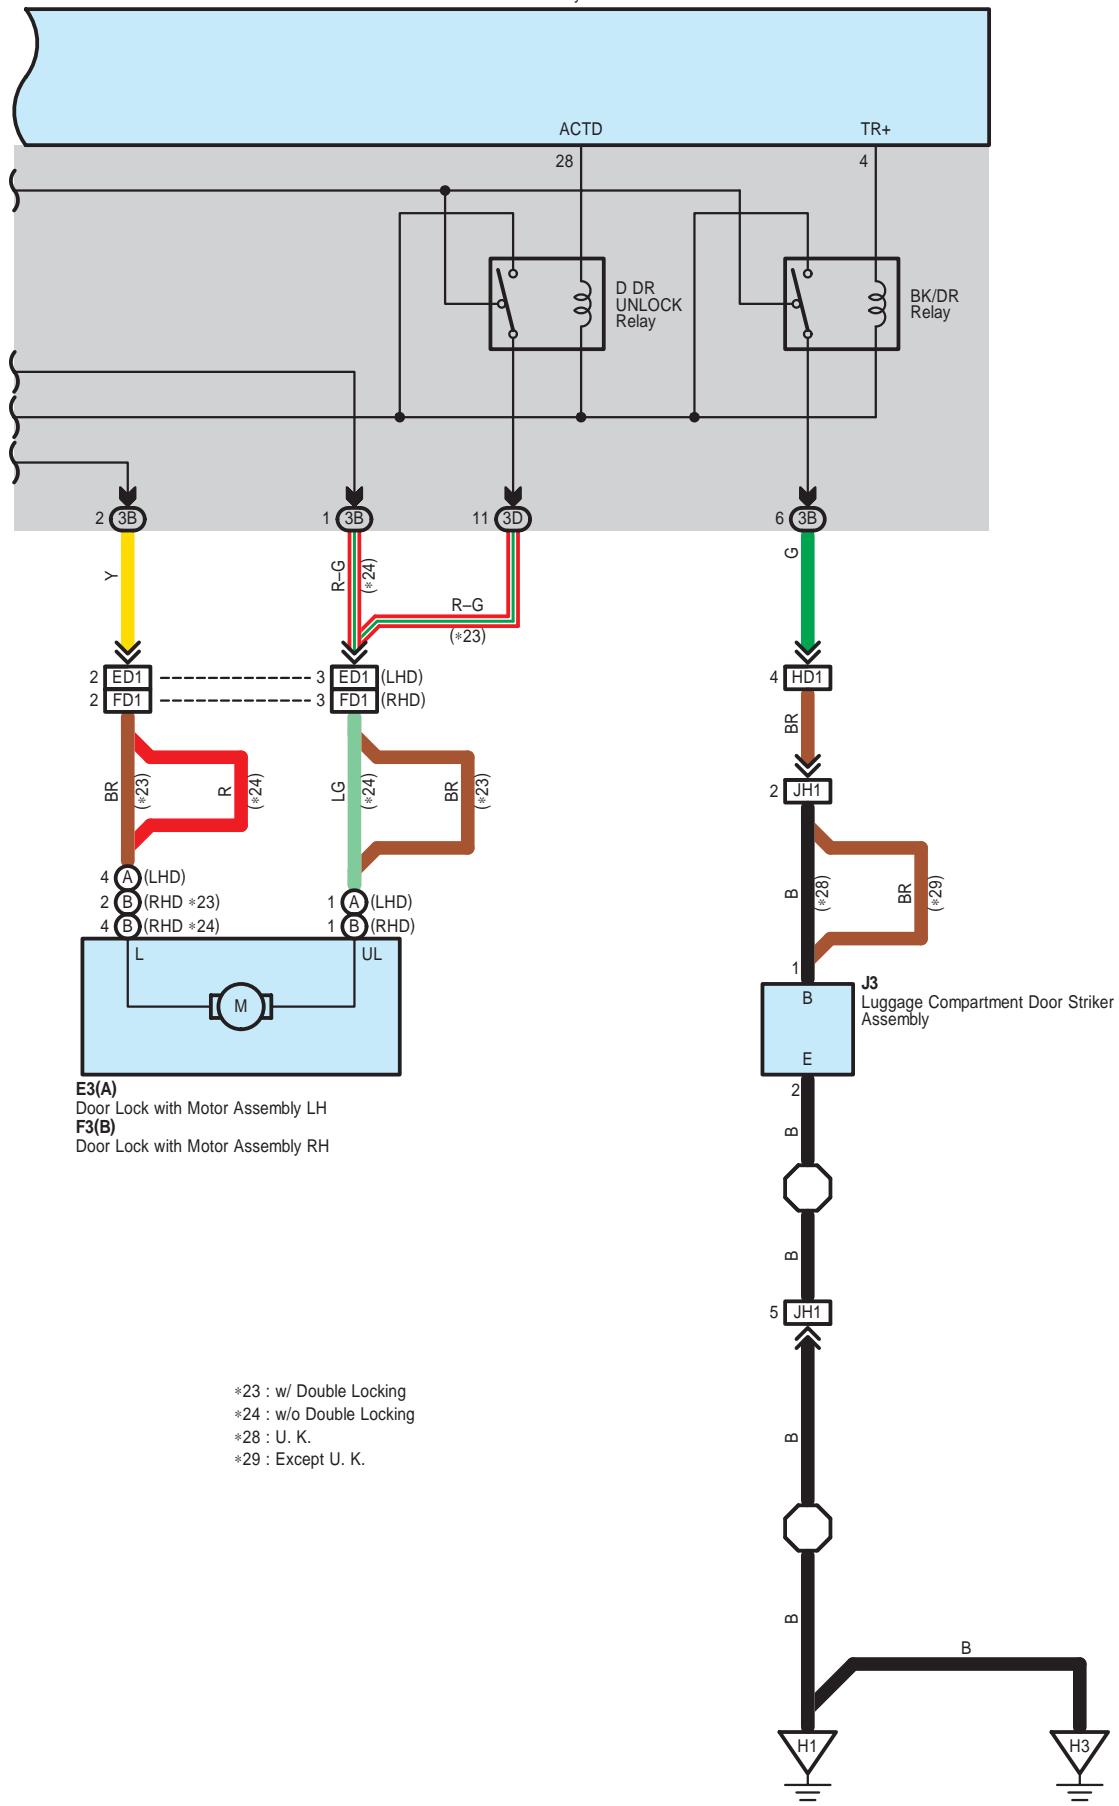

Wireless Door Lock Control (w/o Entry & Start System)

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page			
A9	A	42 (LHD)		D9	B	40 (LHD)		E3	A	44 (LHD)			
		50 (RHD)				48 (RHD)				52 (RHD)			
A10	B	42 (LHD)		D16	A	40 (LHD)		F3	B	44 (LHD)			
		50 (RHD)				48 (RHD)				52 (RHD)			
A63		39 (LHD)		D17	B	40 (LHD)		G18		44 (LHD)			
		47 (RHD)				48 (RHD)				52 (RHD)			
A73	A	42 (LHD)		D46	A	41 (LHD)		H21		45 (LHD)			
		50 (RHD)				49 (RHD)				53 (RHD)			
D5	B	40 (LHD)		D47	B	41 (LHD)		H27		45 (LHD)			
		48 (RHD)				49 (RHD)				53 (RHD)			
D6	C	40 (LHD)		D53		41 (LHD)		J3		45 (LHD)			
		48 (RHD)				49 (RHD)				53 (RHD)			
D8	A	40 (LHD)		D61		41 (LHD)		K3		45 (LHD)			
		48 (RHD)				49 (RHD)				53 (RHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A		
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	
DK1	55 (LHD)	Instrument Panel Wire and Roof Wire (Front Body Inner Pillar RH)
	59 (RHD)	
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
FD1	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
GD1	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
JH1	56 (LHD)	Luggage Room Wire and No. 2 Floor Wire (Quarter Panel LH)
	60 (RHD)	

▽ : Ground Points


Code	See Page	Ground Points Location
A1	54 (LHD)	Front Fender Apron LH
	58 (RHD)	
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	
H1	56 (LHD)	Lower Back Panel



: Ground Points


Code	See Page	Ground Points Location
H1	60 (RHD)	Lower Back Panel
H3	56 (LHD) 60 (RHD)	Quarter Wheel House Panel LH

Luggage Compartment Door Opener

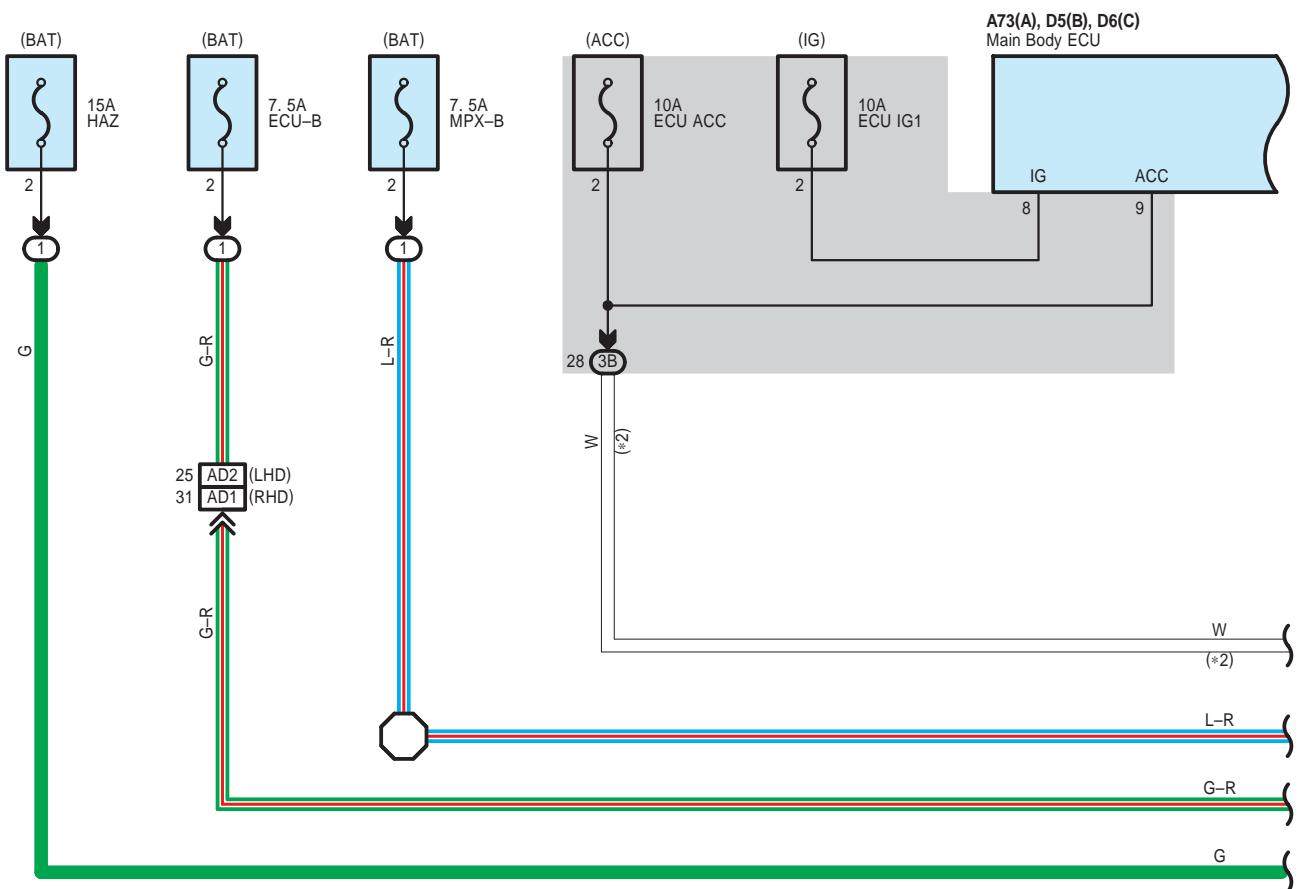


* 2 : w/ Entry & Start System

A73(A), D5(B), D6(C)
Main Body ECU

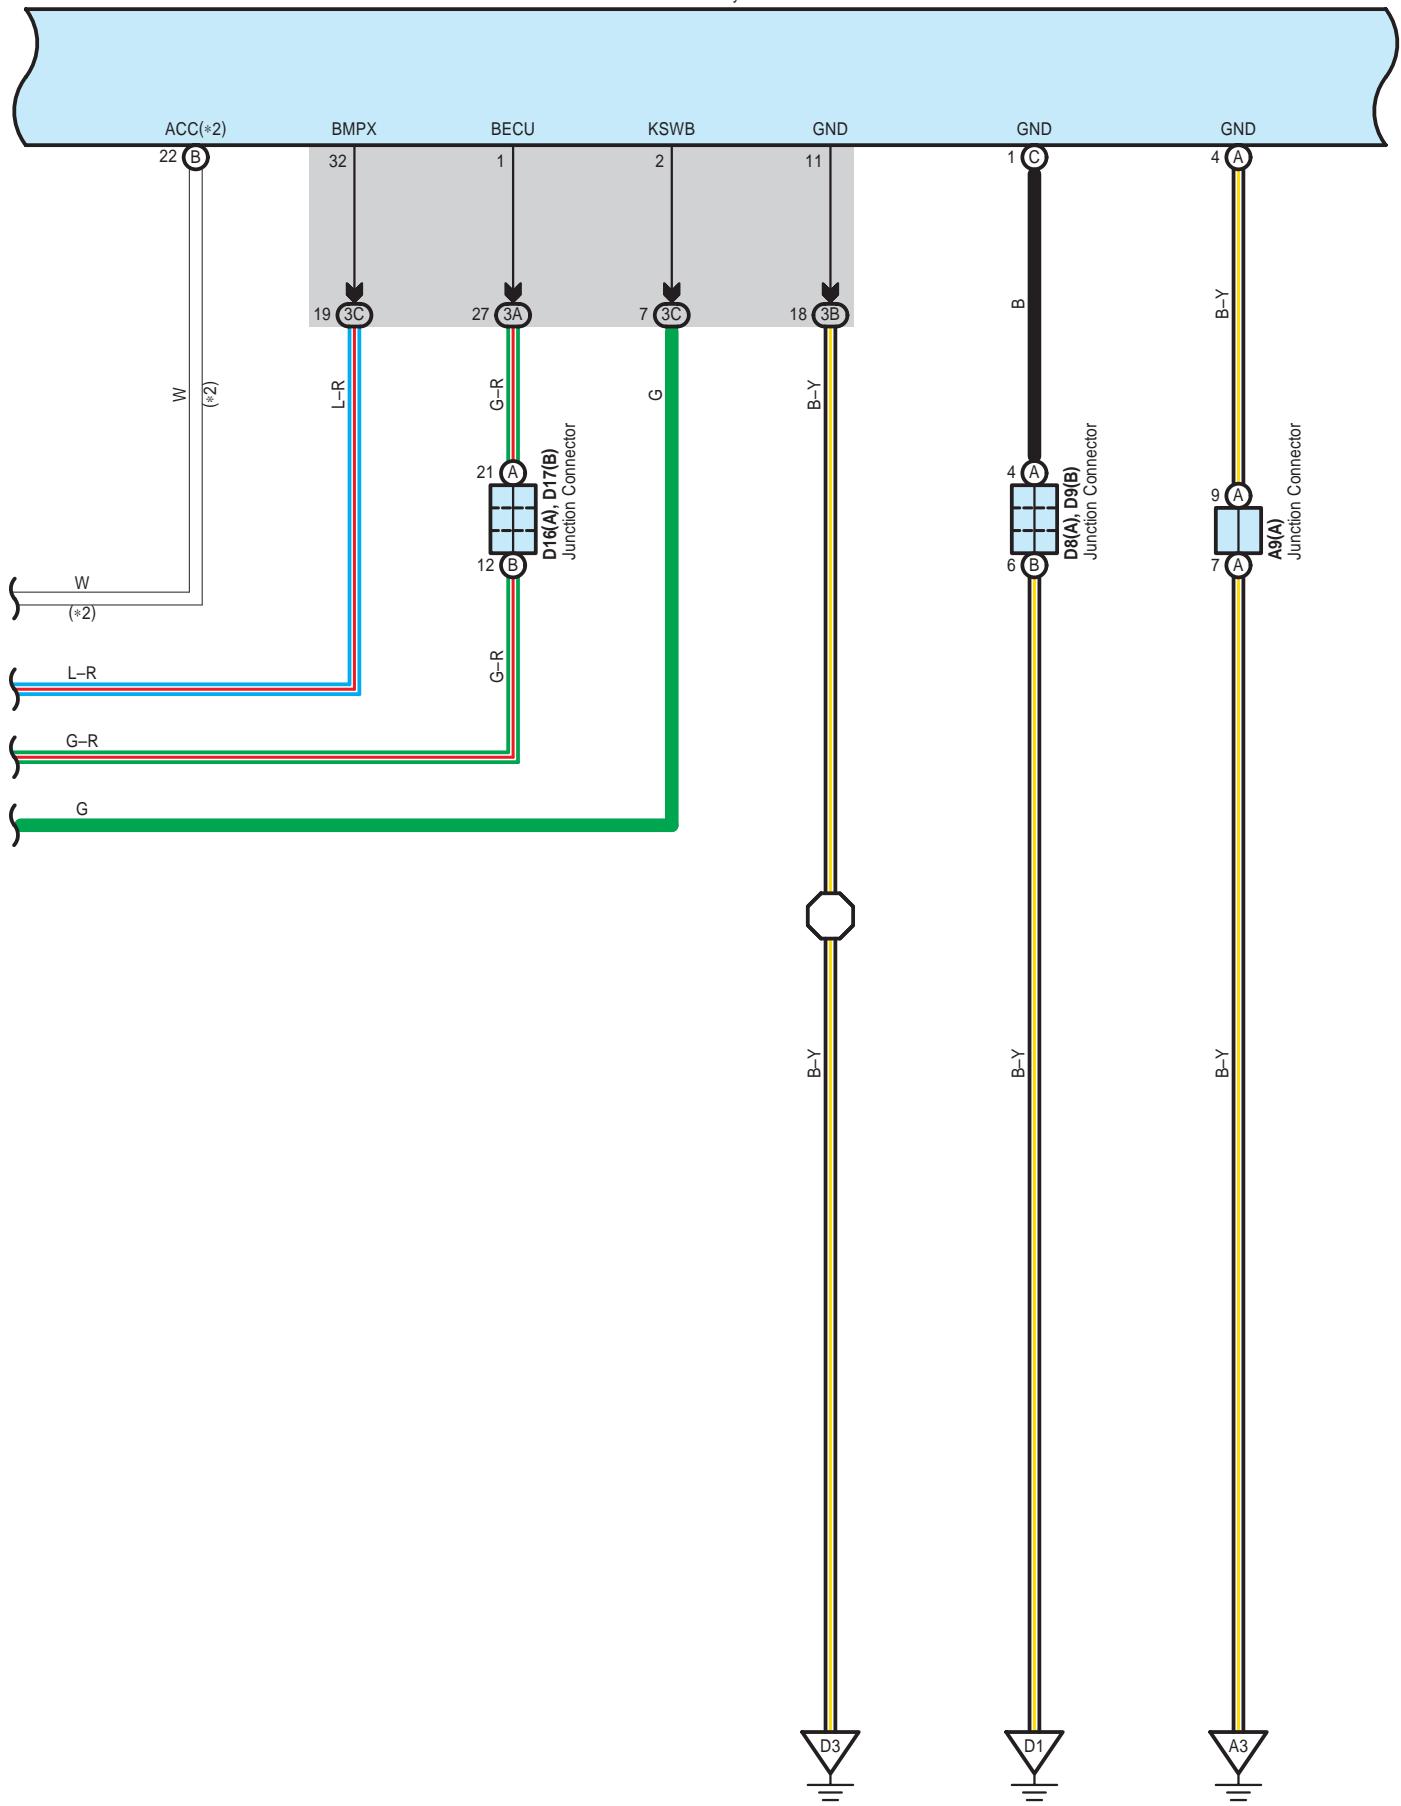


Luggage Compartment Door Opener

A73(A), D5(B), D6(C)
Main Body ECU

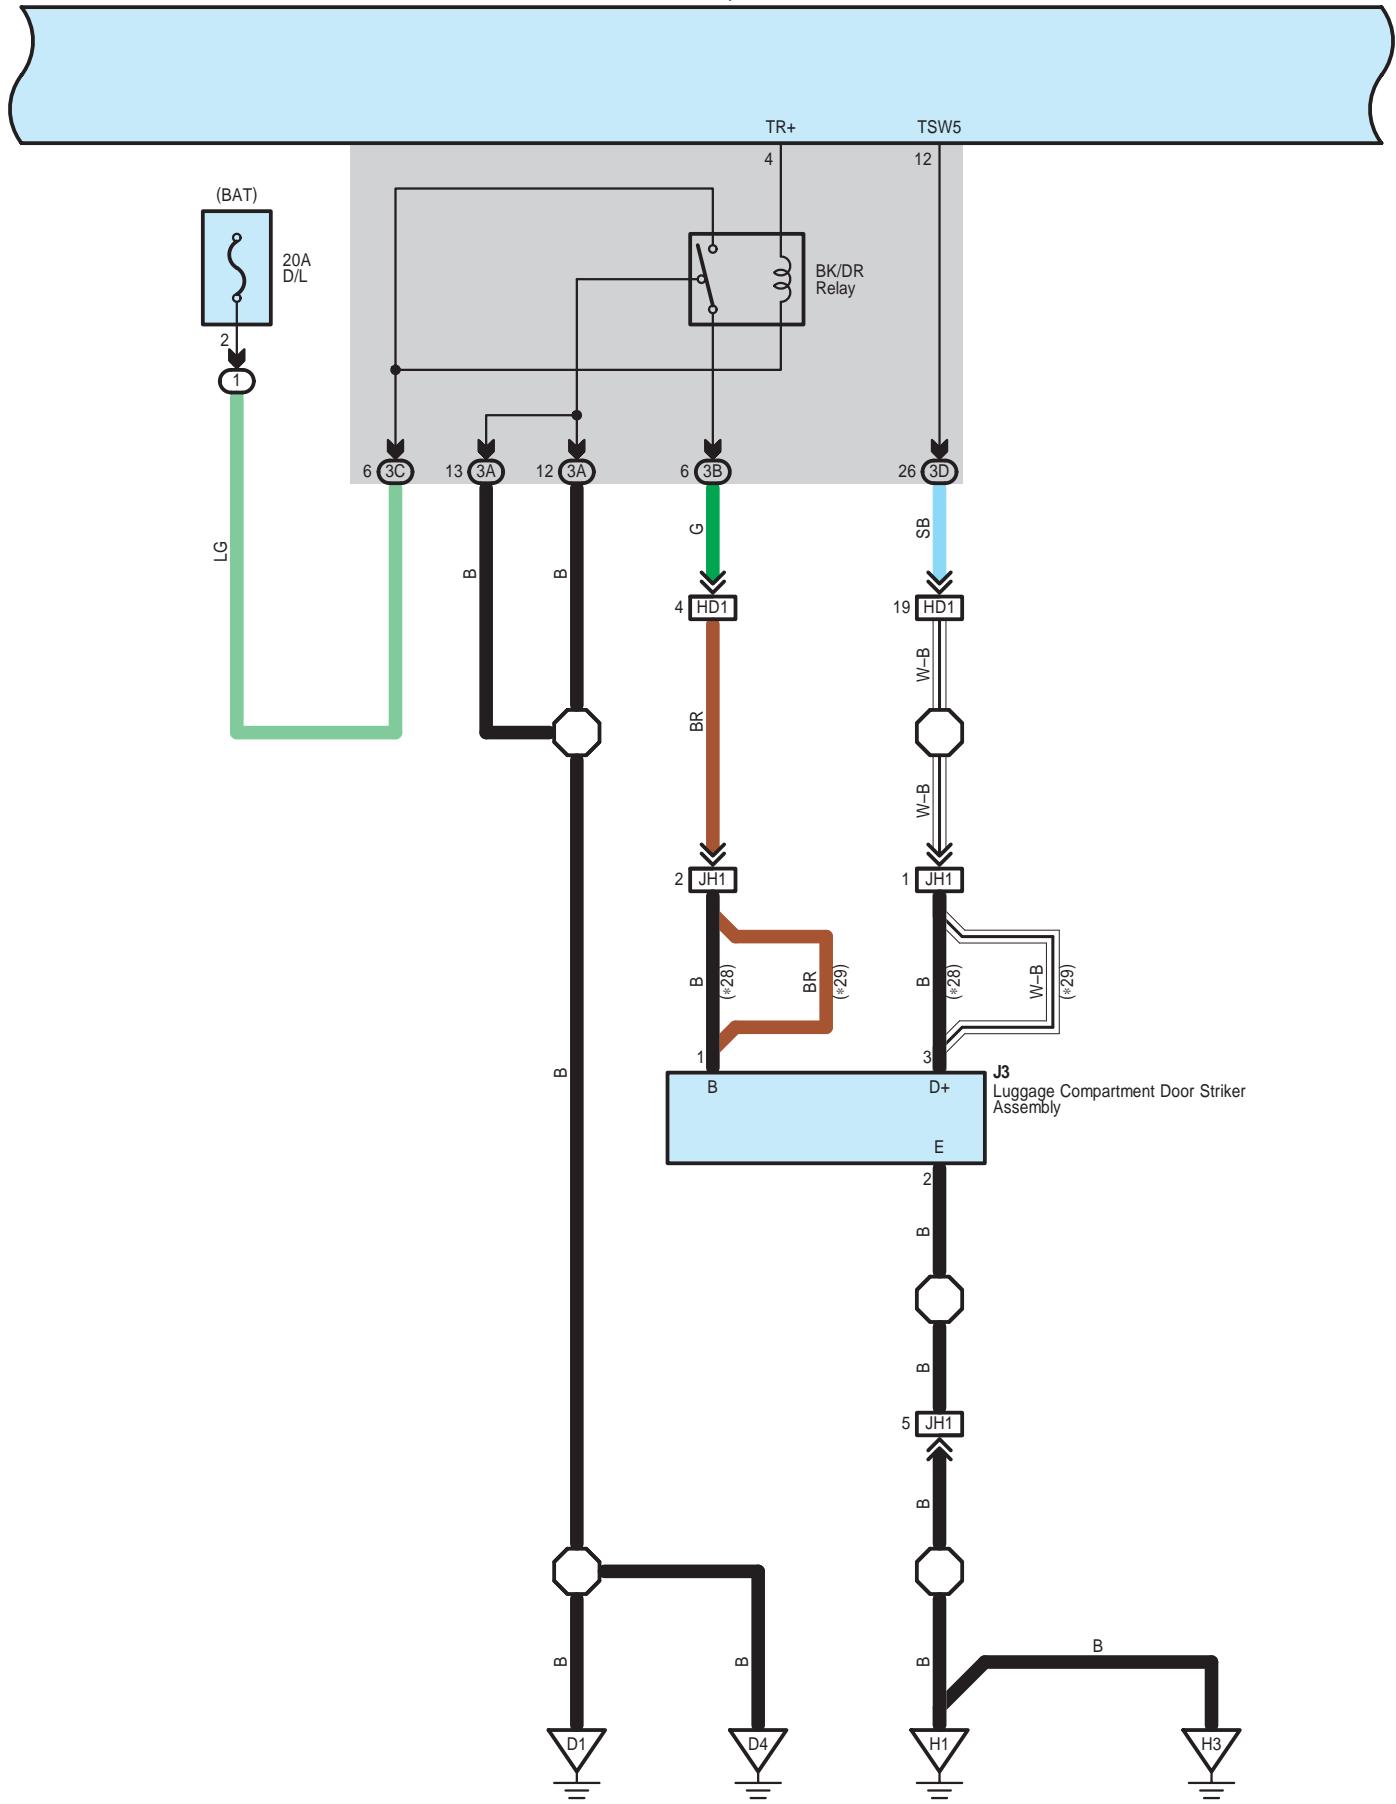



A73(A), D5(B), D6(C)
Main Body ECU

*28 : U. K.
*29 : Except U. K.

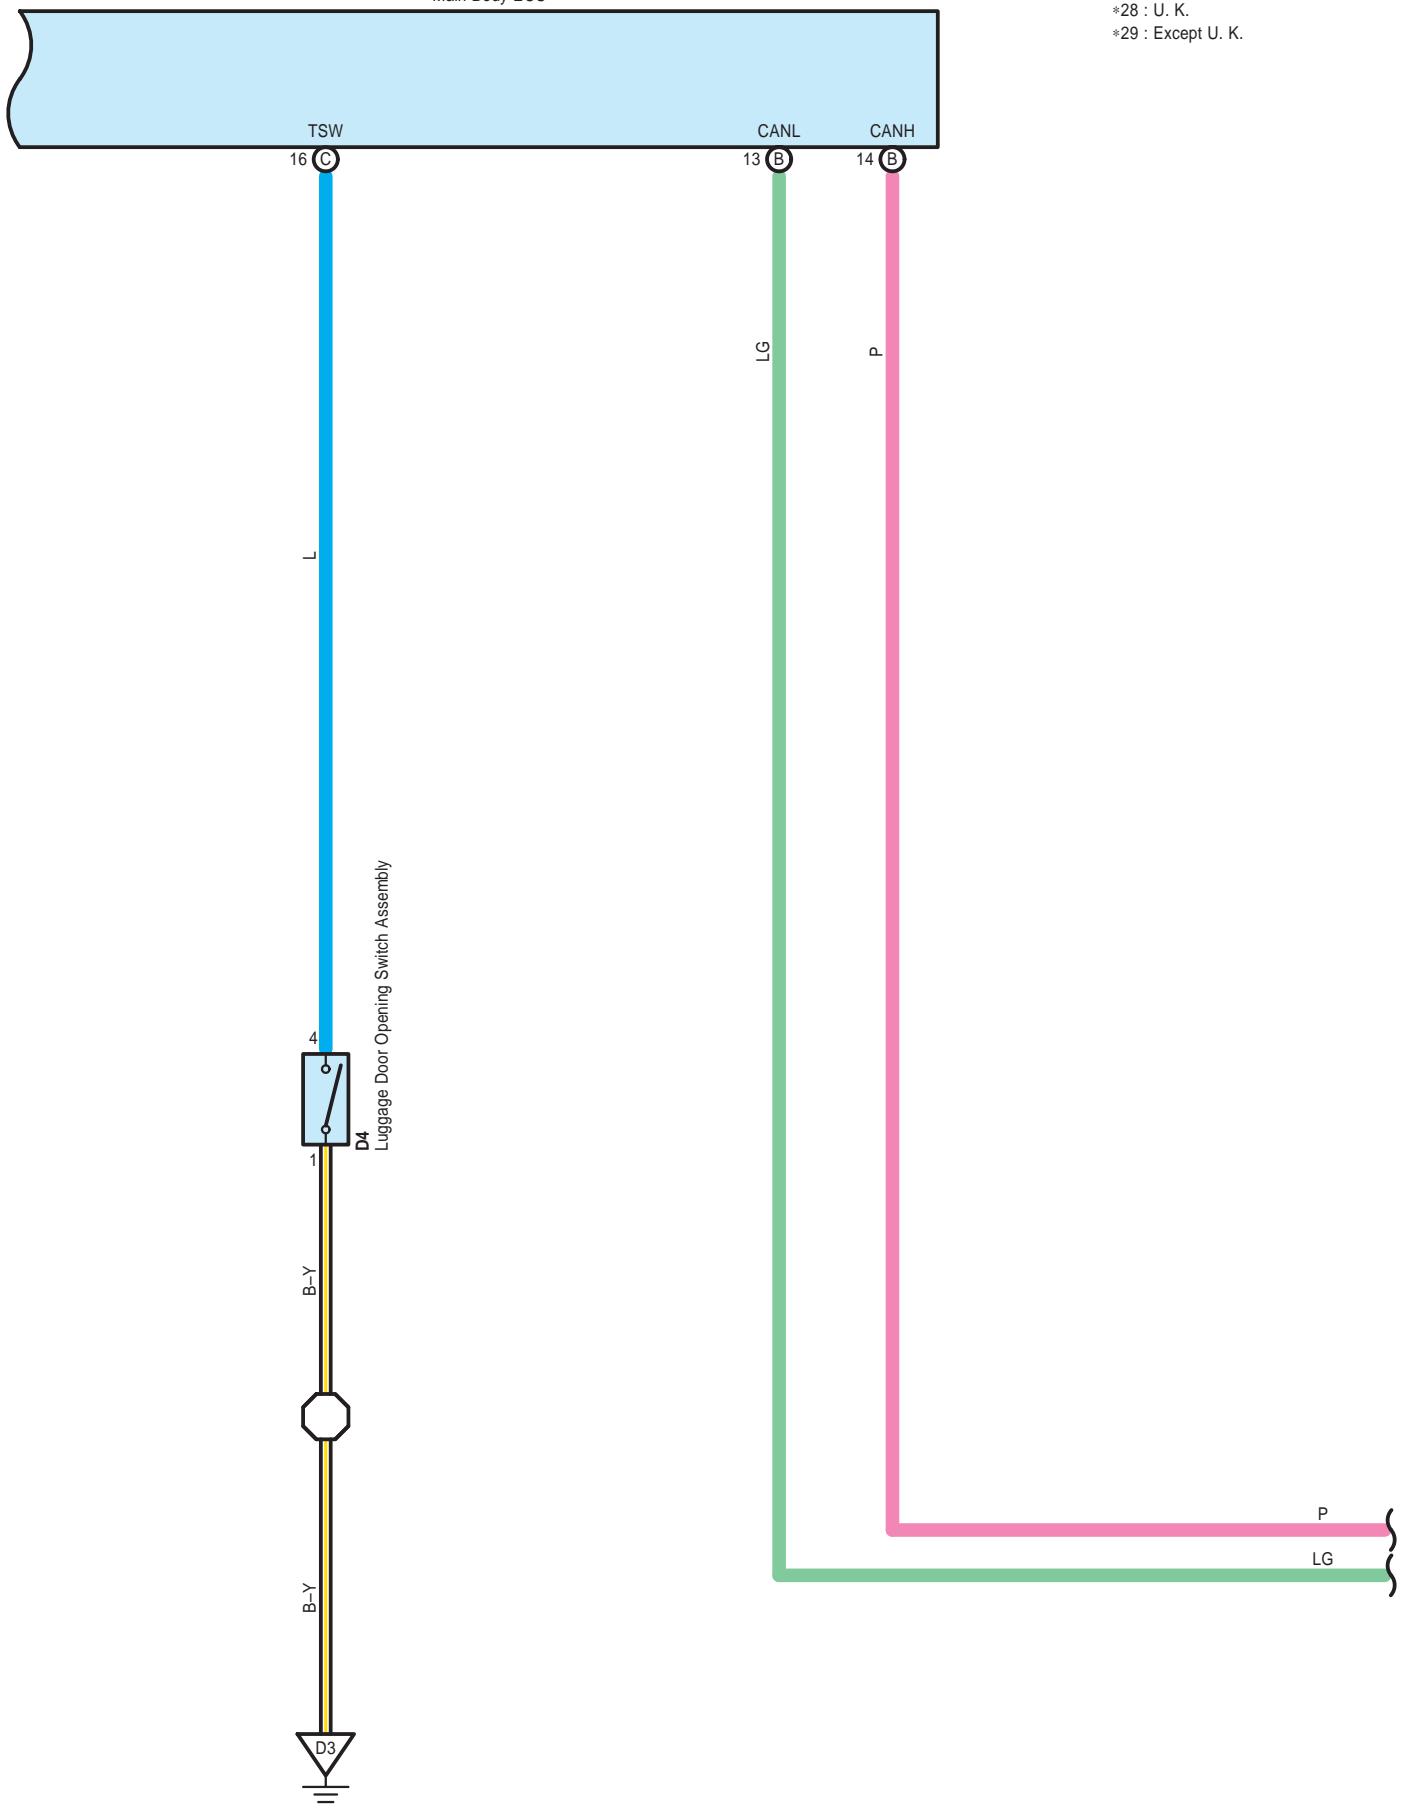


Luggage Compartment Door Opener

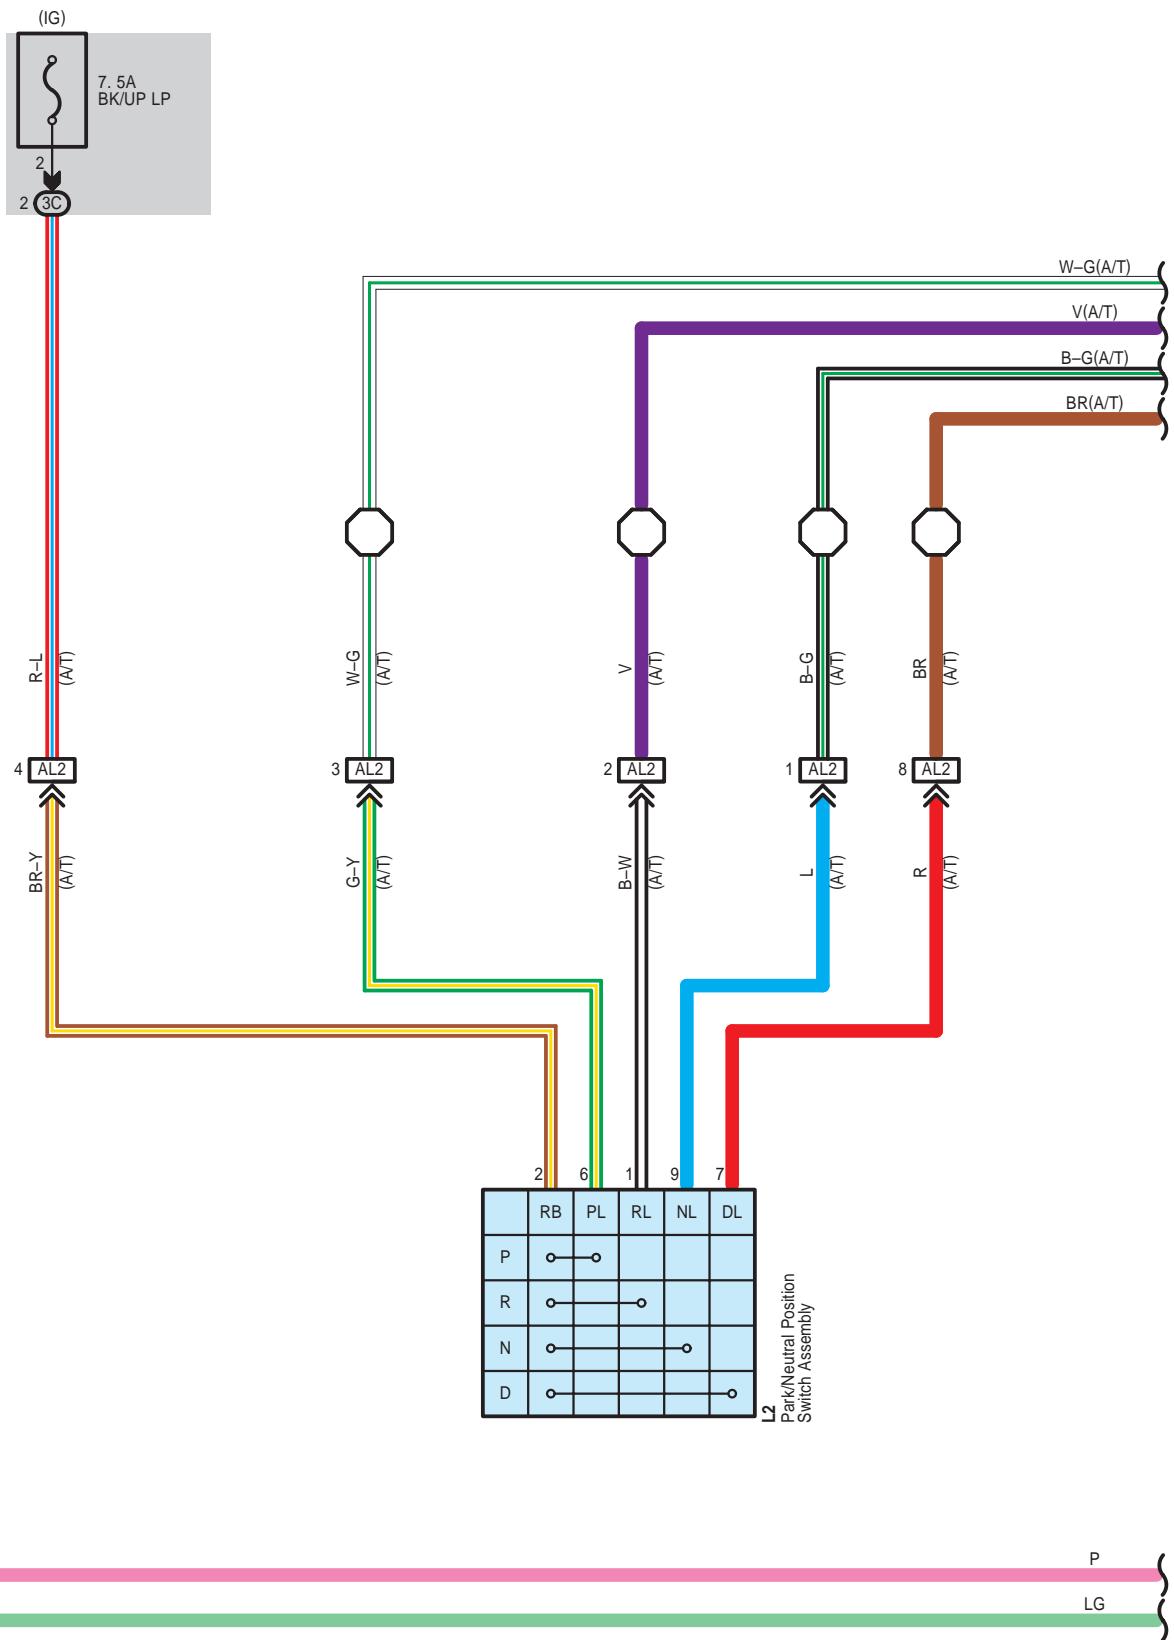

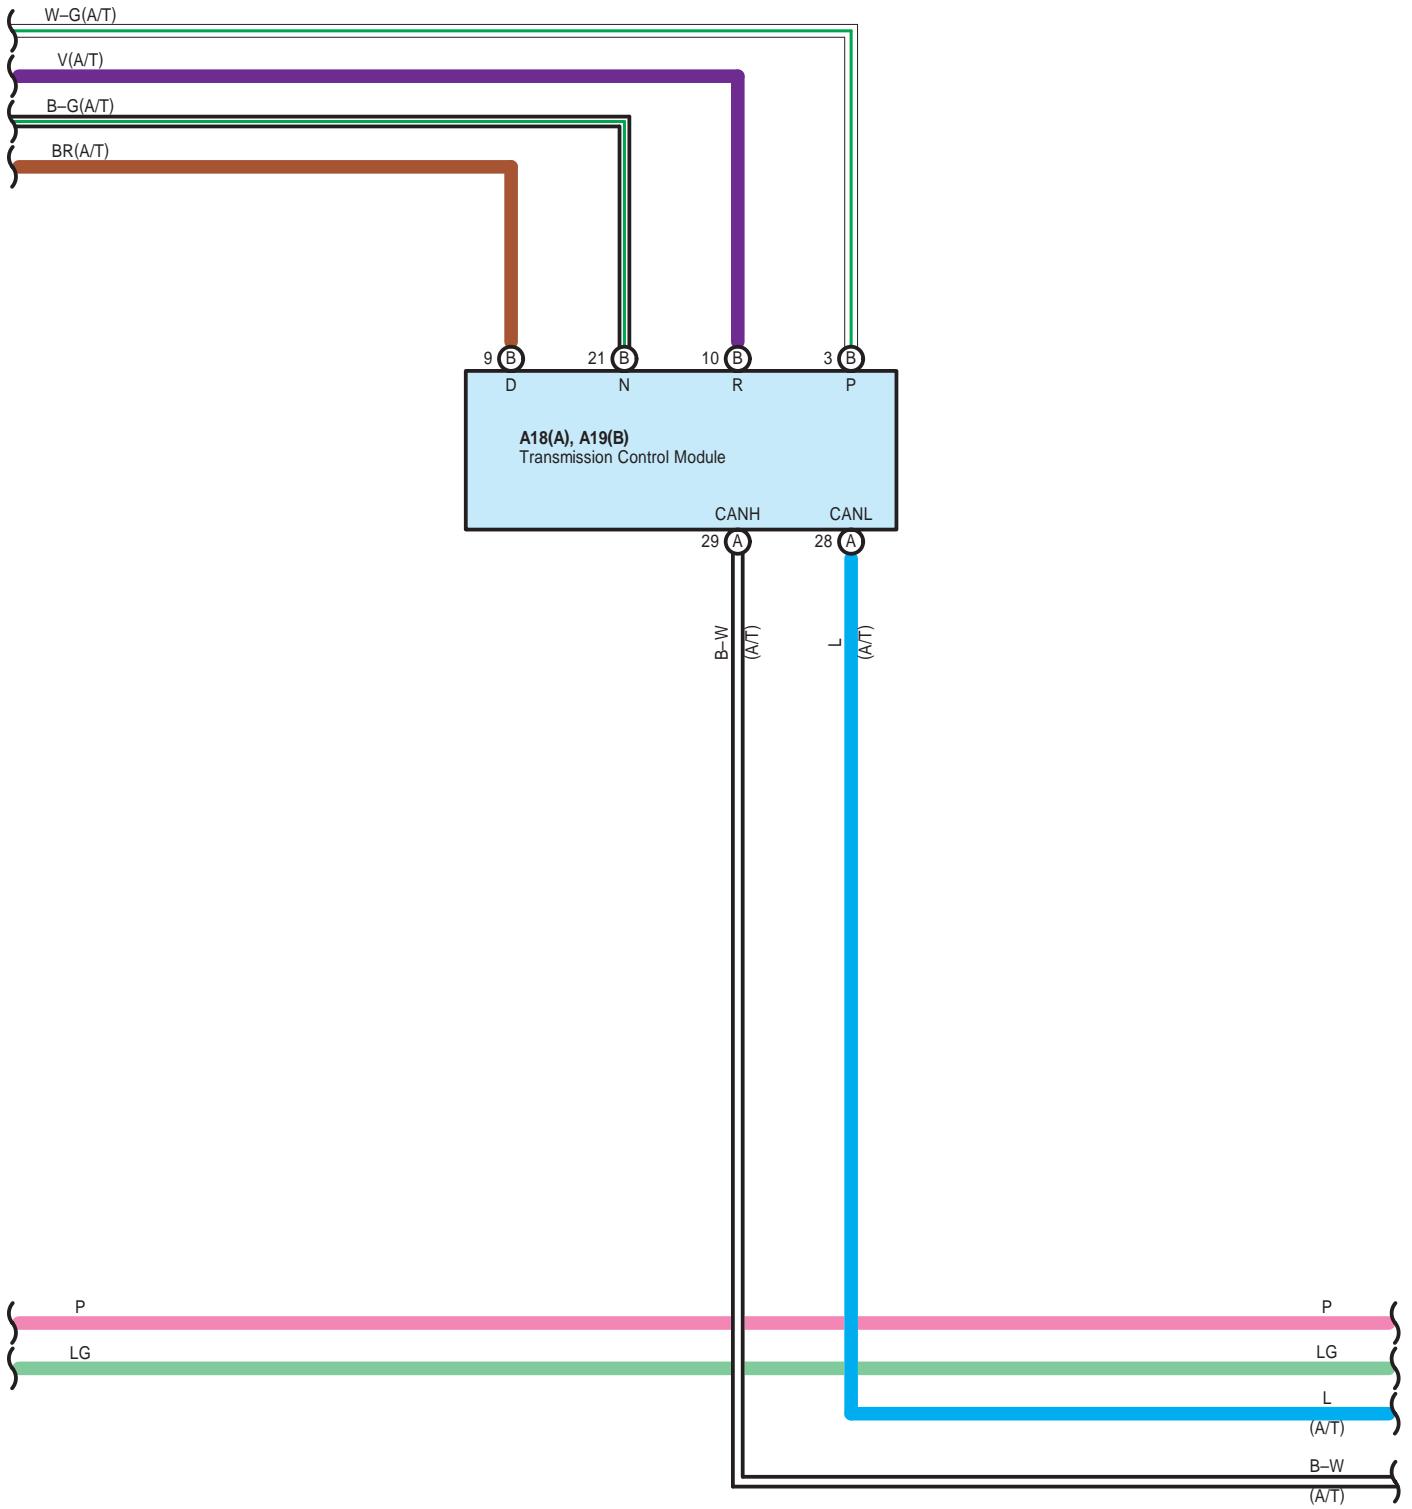


Luggage Compartment Door Opener

* 2 : w/ Entry & Start System

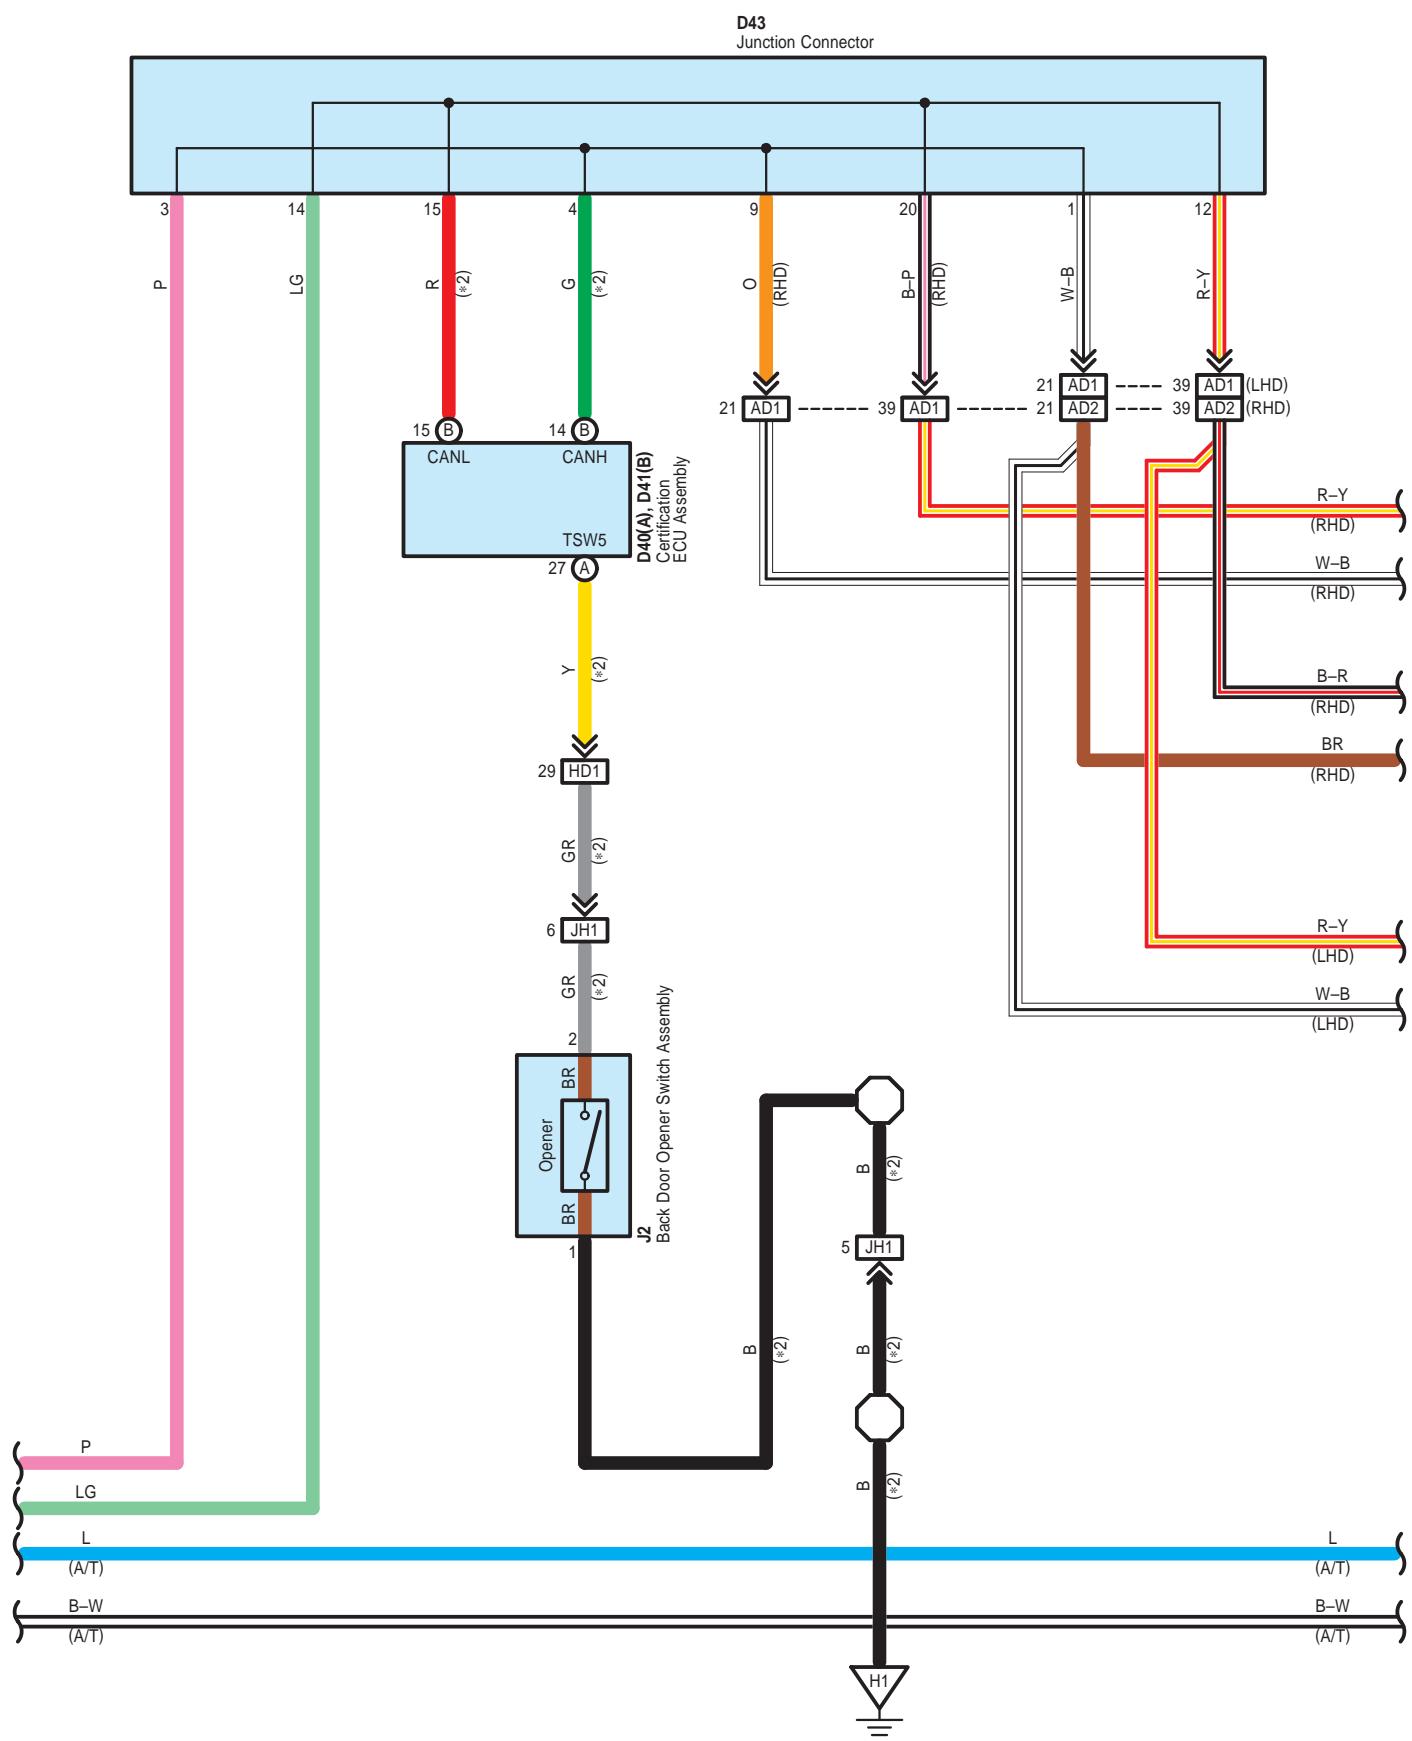

A5
VSC (VDC) Control Module

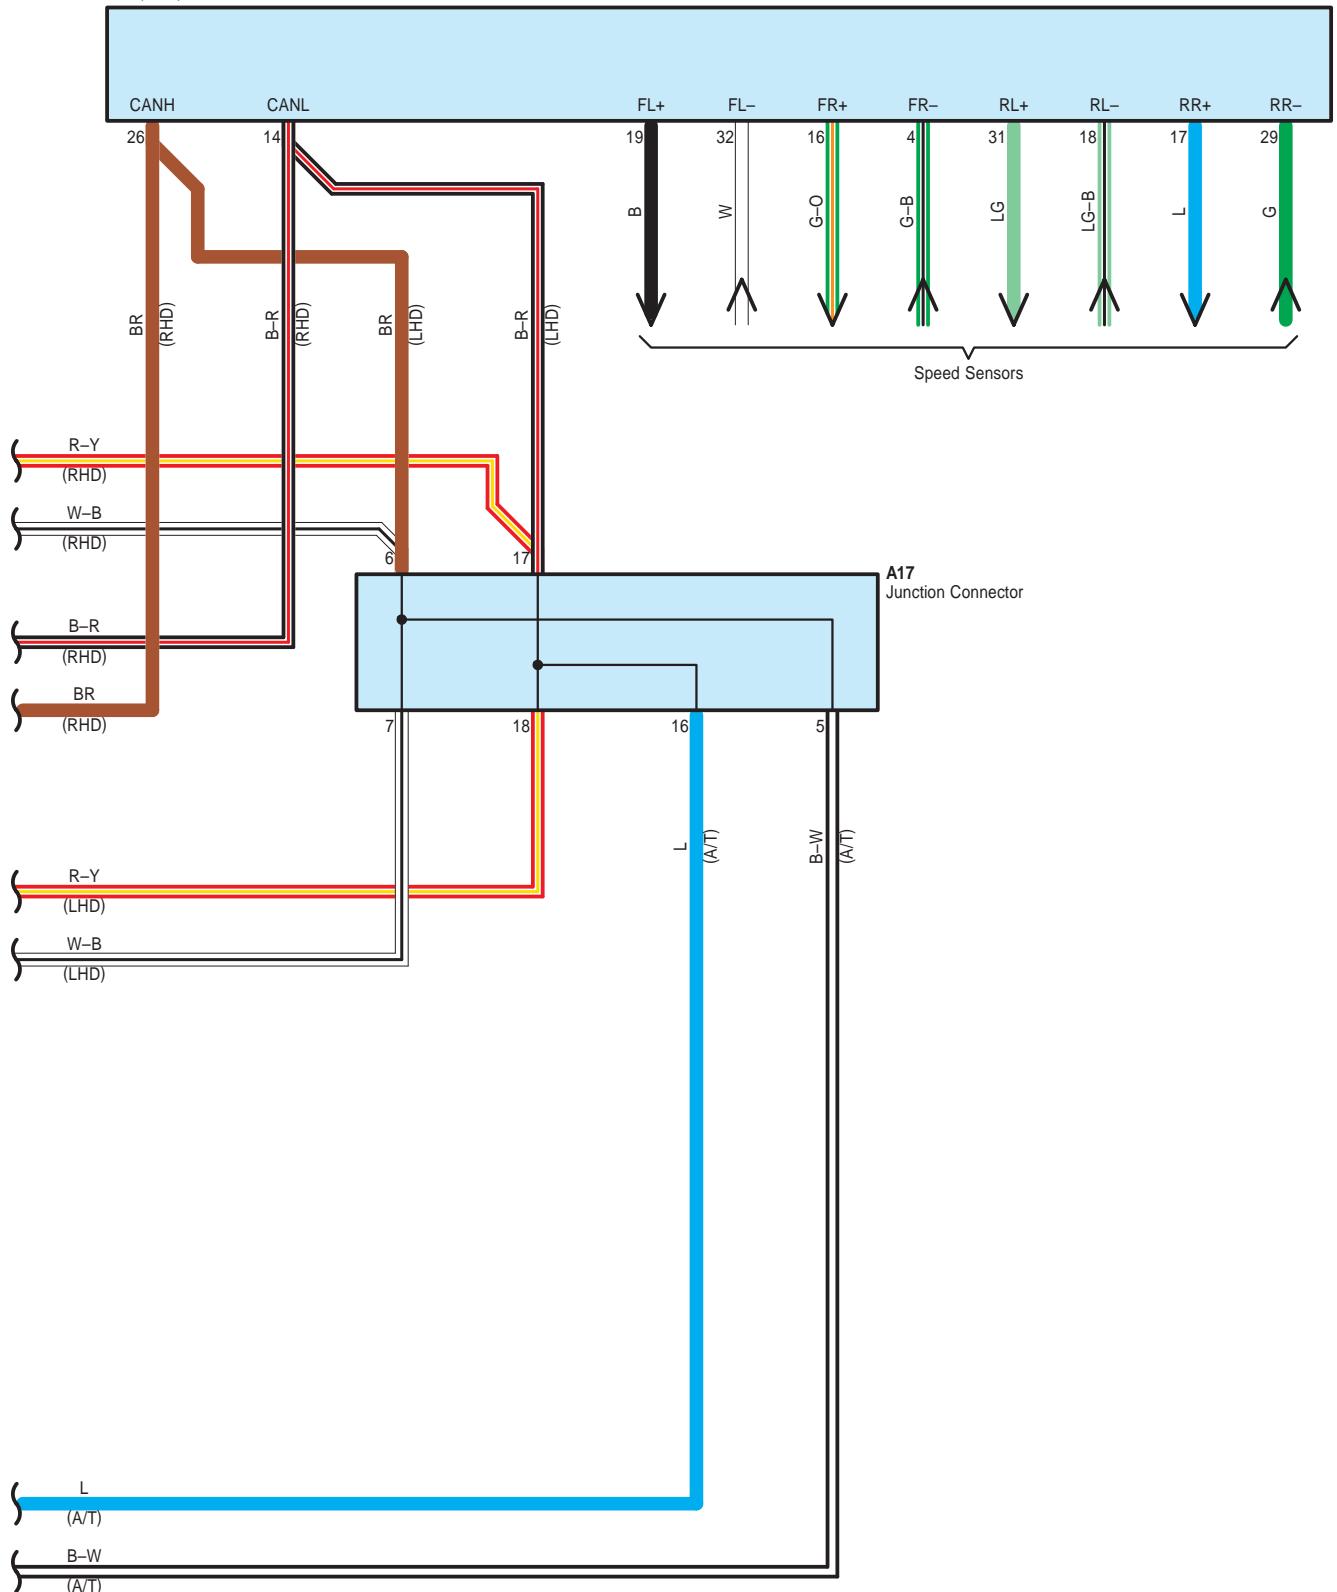

Luggage Compartment Door Opener

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page			
A5		39 (LHD)		D4		48 (RHD)		D40	A	41 (LHD)			
		47 (RHD)				40 (LHD)				49 (RHD)			
A9	A	42 (LHD)		D5	B	48 (RHD)		D41	B	41 (LHD)			
		50 (RHD)				40 (LHD)				49 (RHD)			
A17		42 (LHD)		D6	C	48 (RHD)		D43		41 (LHD)			
		50 (RHD)				40 (LHD)				49 (RHD)			
A18	A	42 (LHD)		D8	A	48 (RHD)		J2		45 (LHD)			
		50 (RHD)				40 (LHD)				53 (RHD)			
A19	B	42 (LHD)		D9	B	48 (RHD)		J3		45 (LHD)			
		50 (RHD)				40 (LHD)				53 (RHD)			
A73	A	42 (LHD)		D16	A	48 (RHD)		L2		39 (LHD)			
		50 (RHD)				40 (LHD)				47 (RHD)			
D4		40 (LHD)		D17	B	48 (RHD)							

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	
AL2	54 (LHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)
	58 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
JH1	56 (LHD)	Luggage Room Wire and No. 2 Floor Wire (Quarter Panel LH)
	60 (RHD)	

▽ : Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
H1	56 (LHD)	Lower Back Panel
	60 (RHD)	
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	

Double Locking

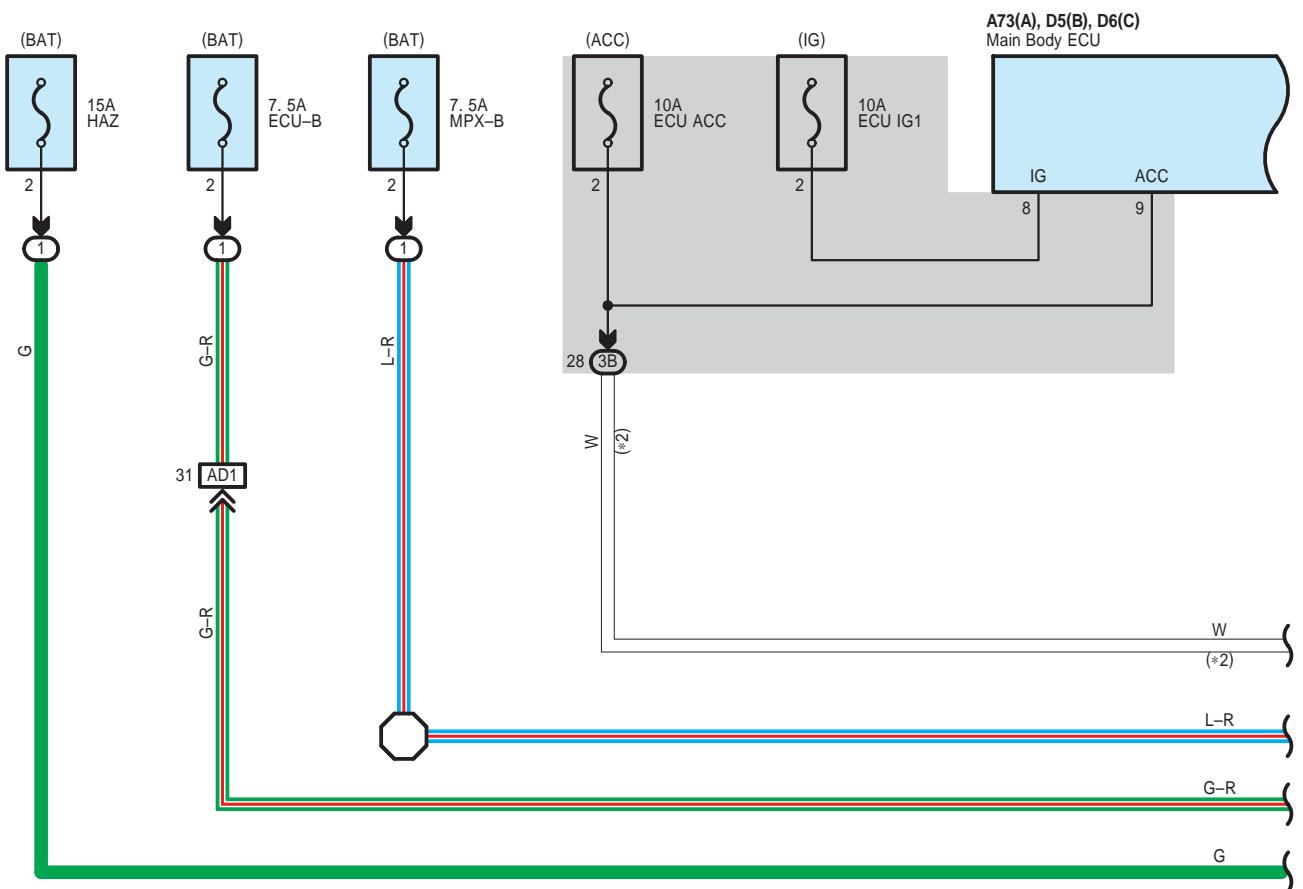


* 2 : w/ Entry & Start System


A73(A), D5(B), D6(C)
Main Body ECU

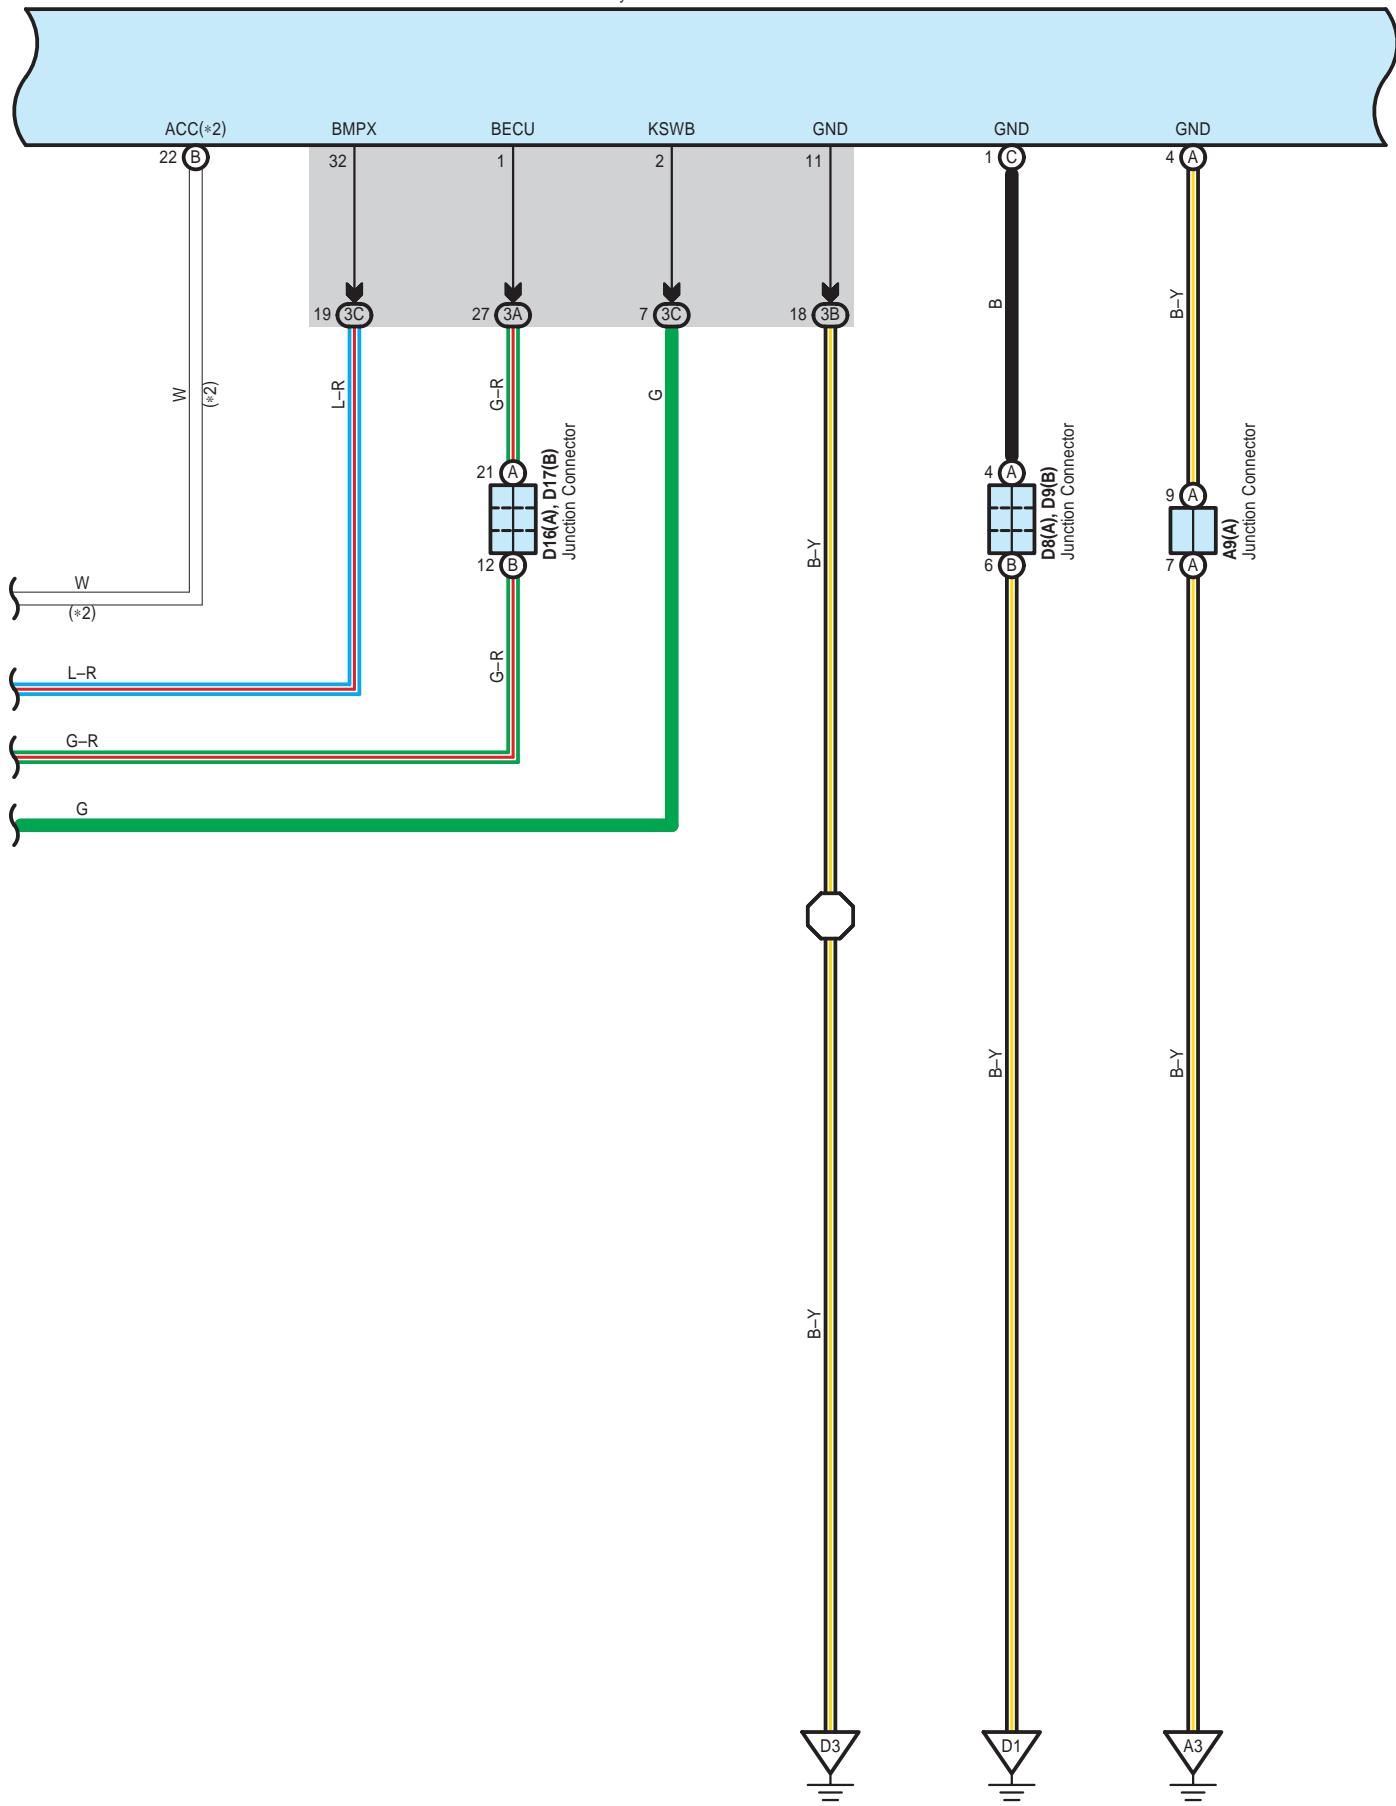


Double Locking

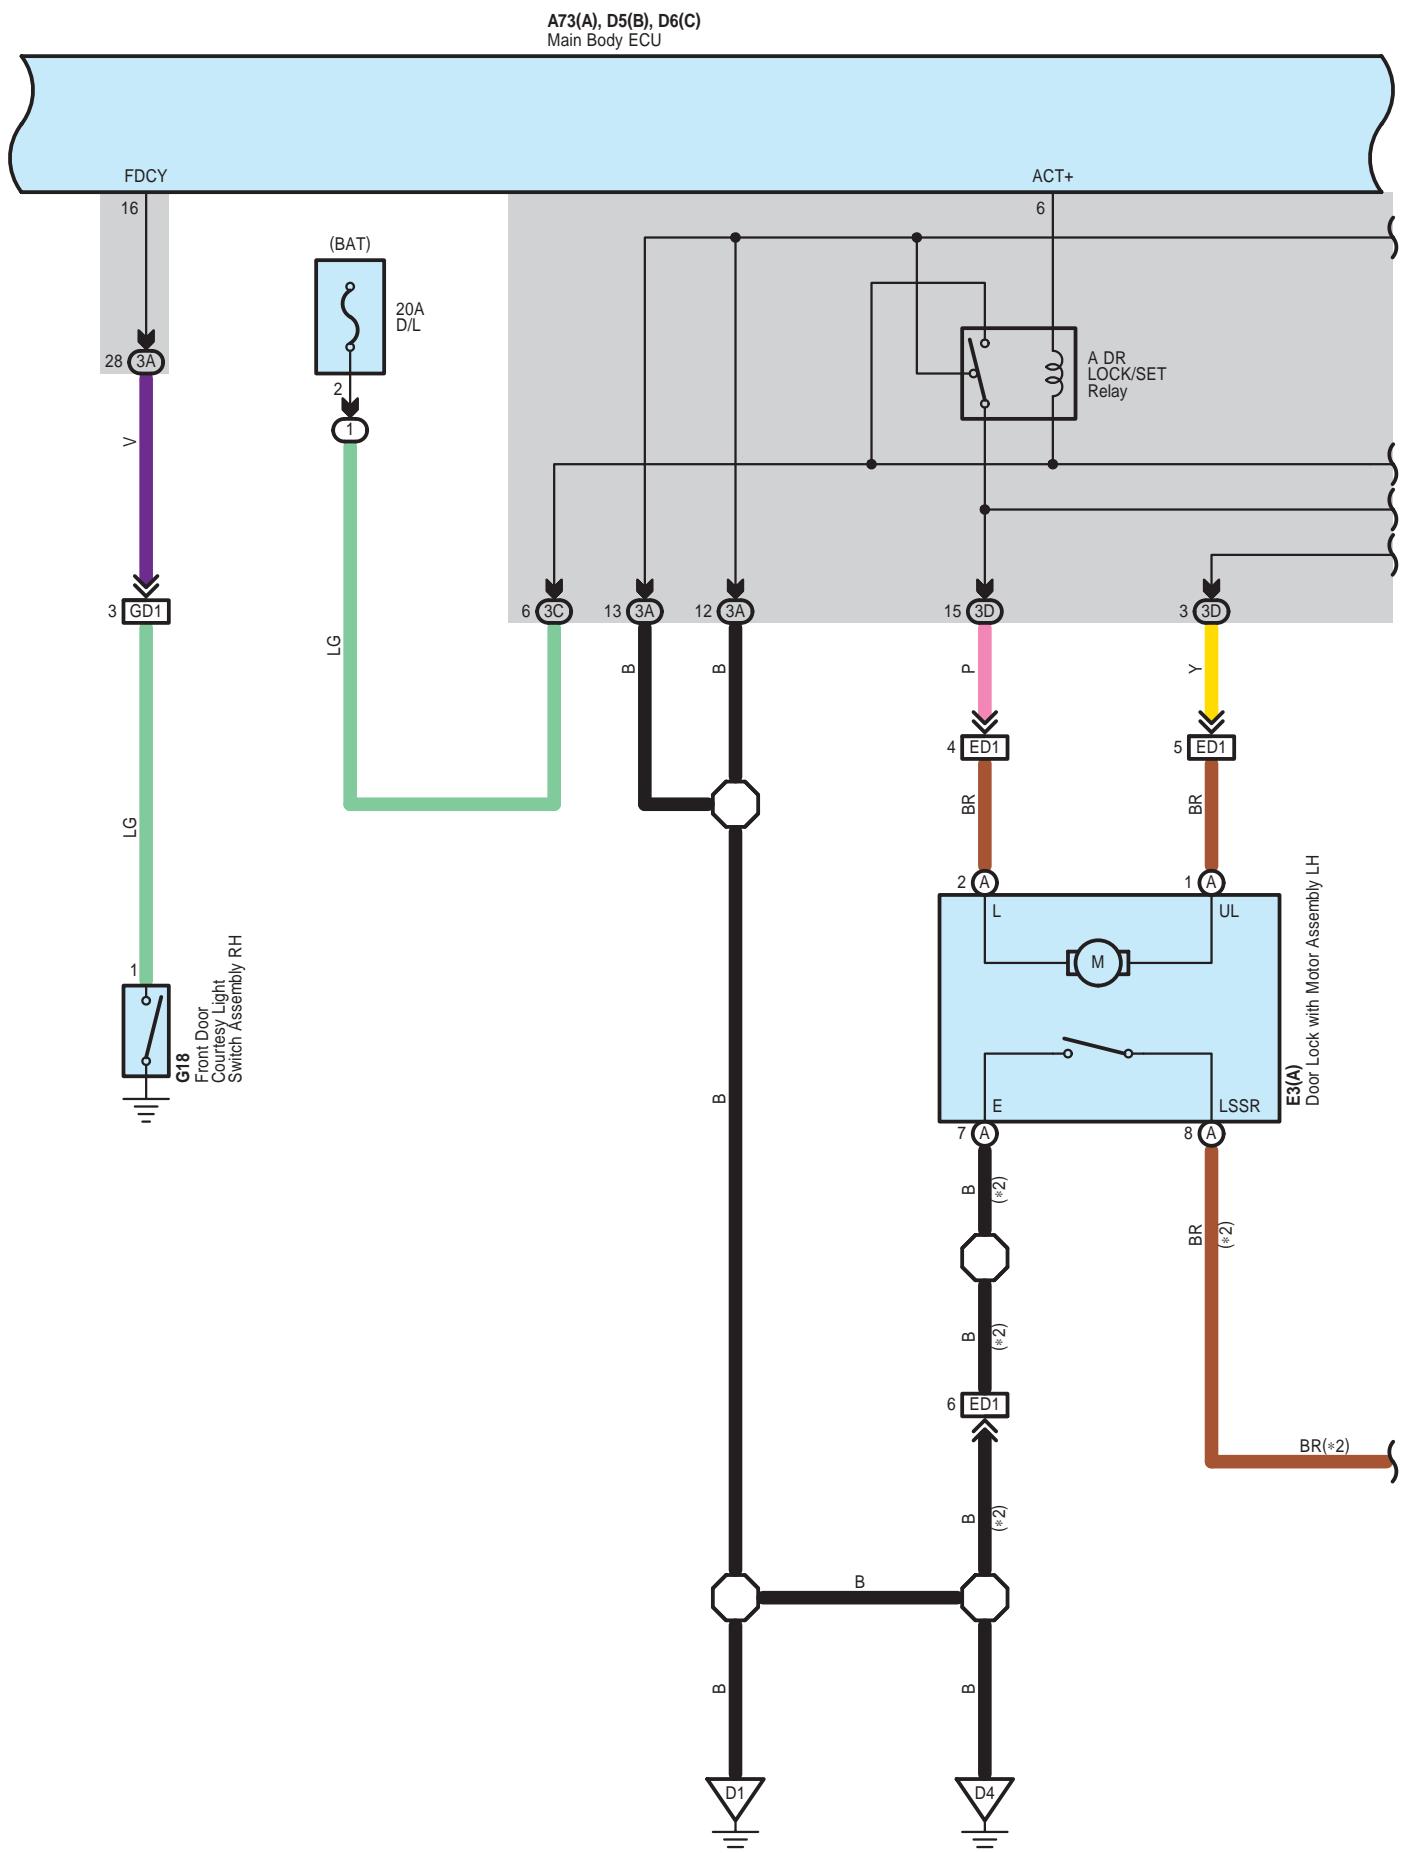


A73(A), D5(B), D6(C)
Main Body ECU

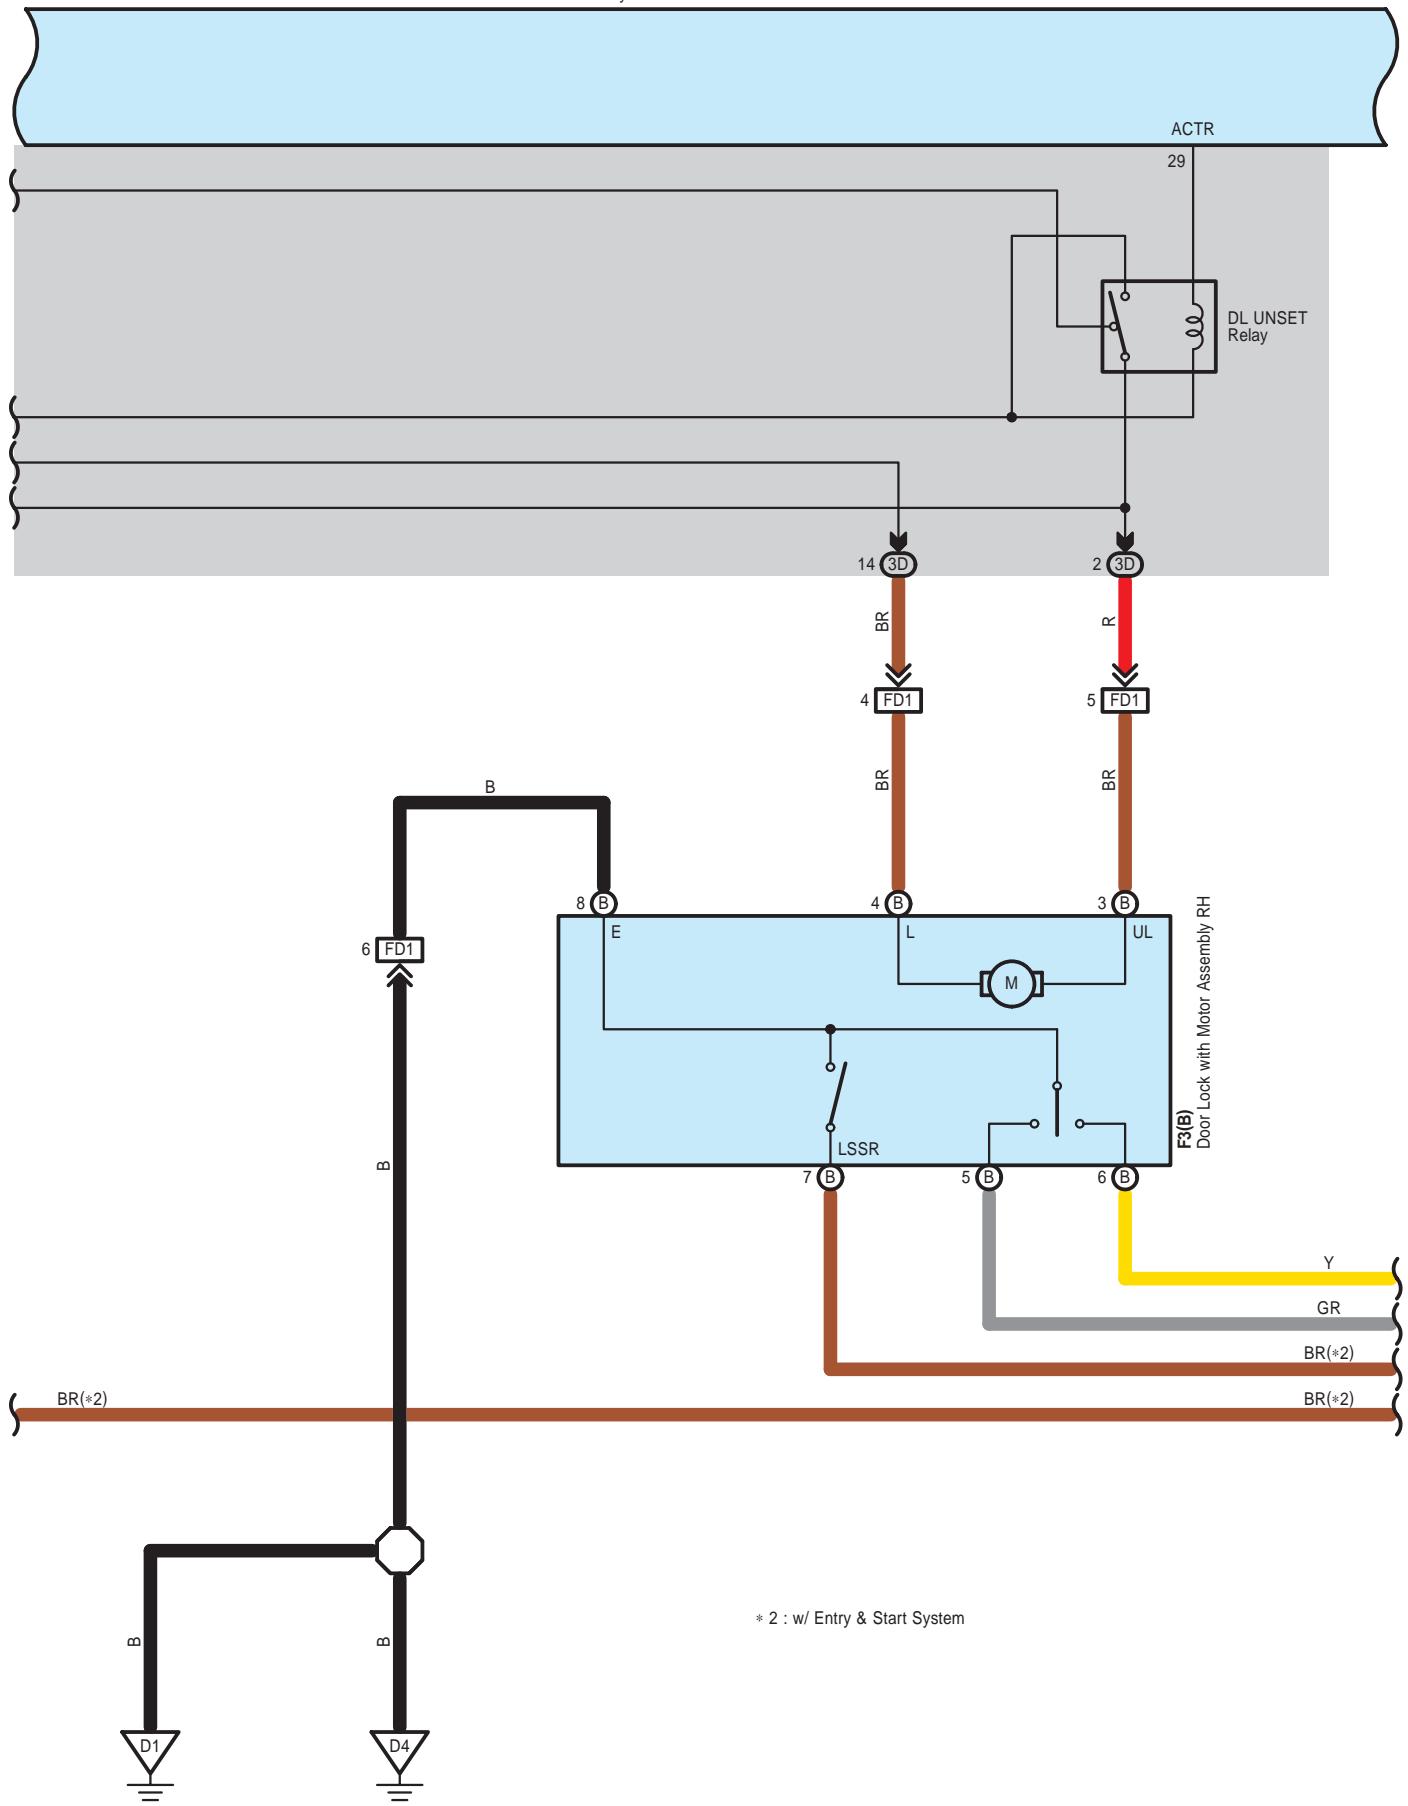

Double Locking

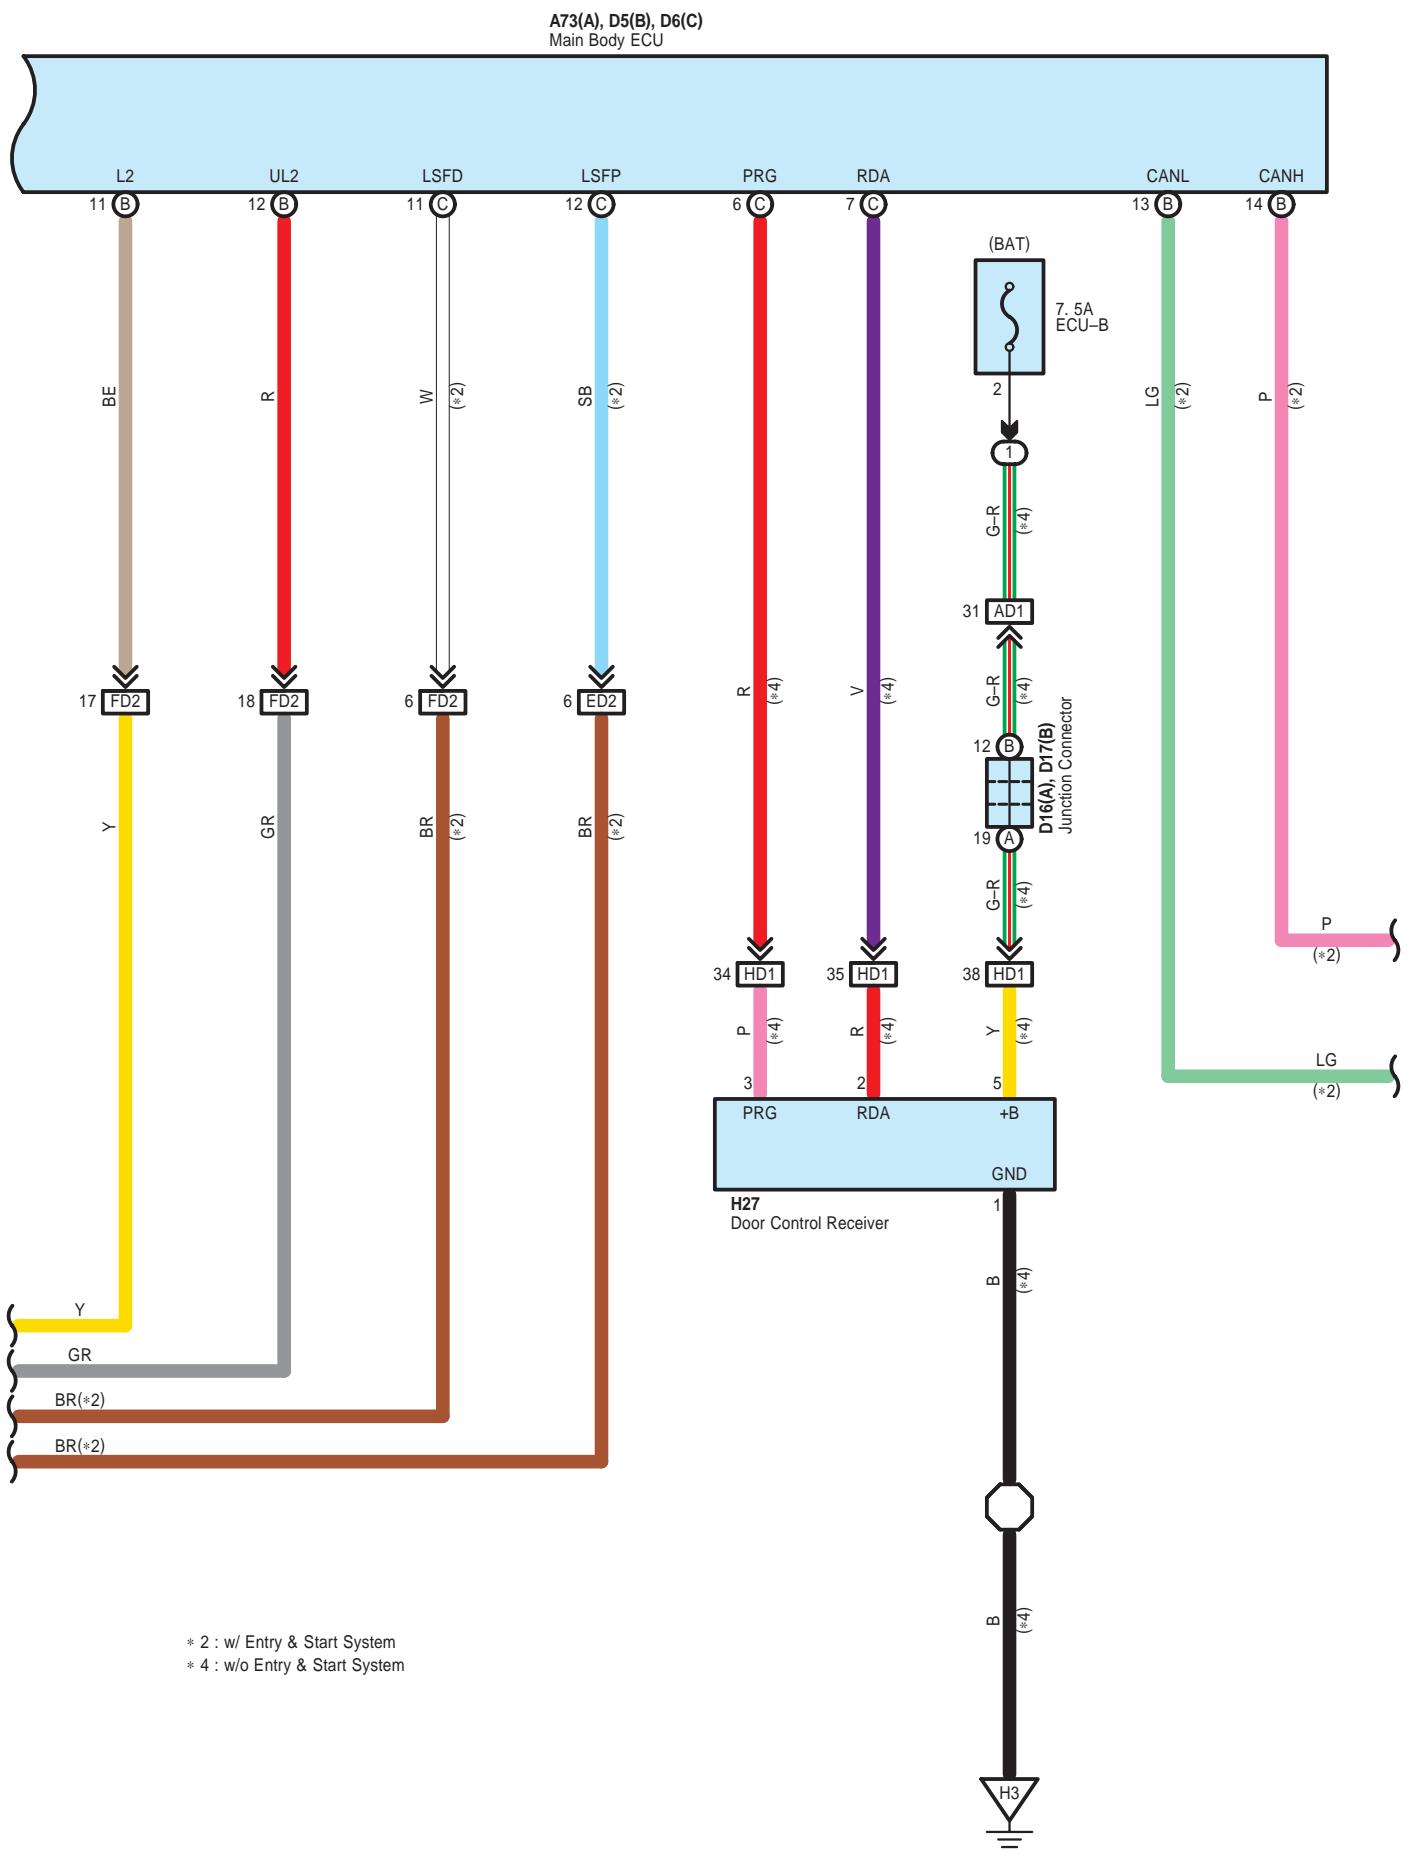

D40(A), D41(B)
Certification ECU Assembly

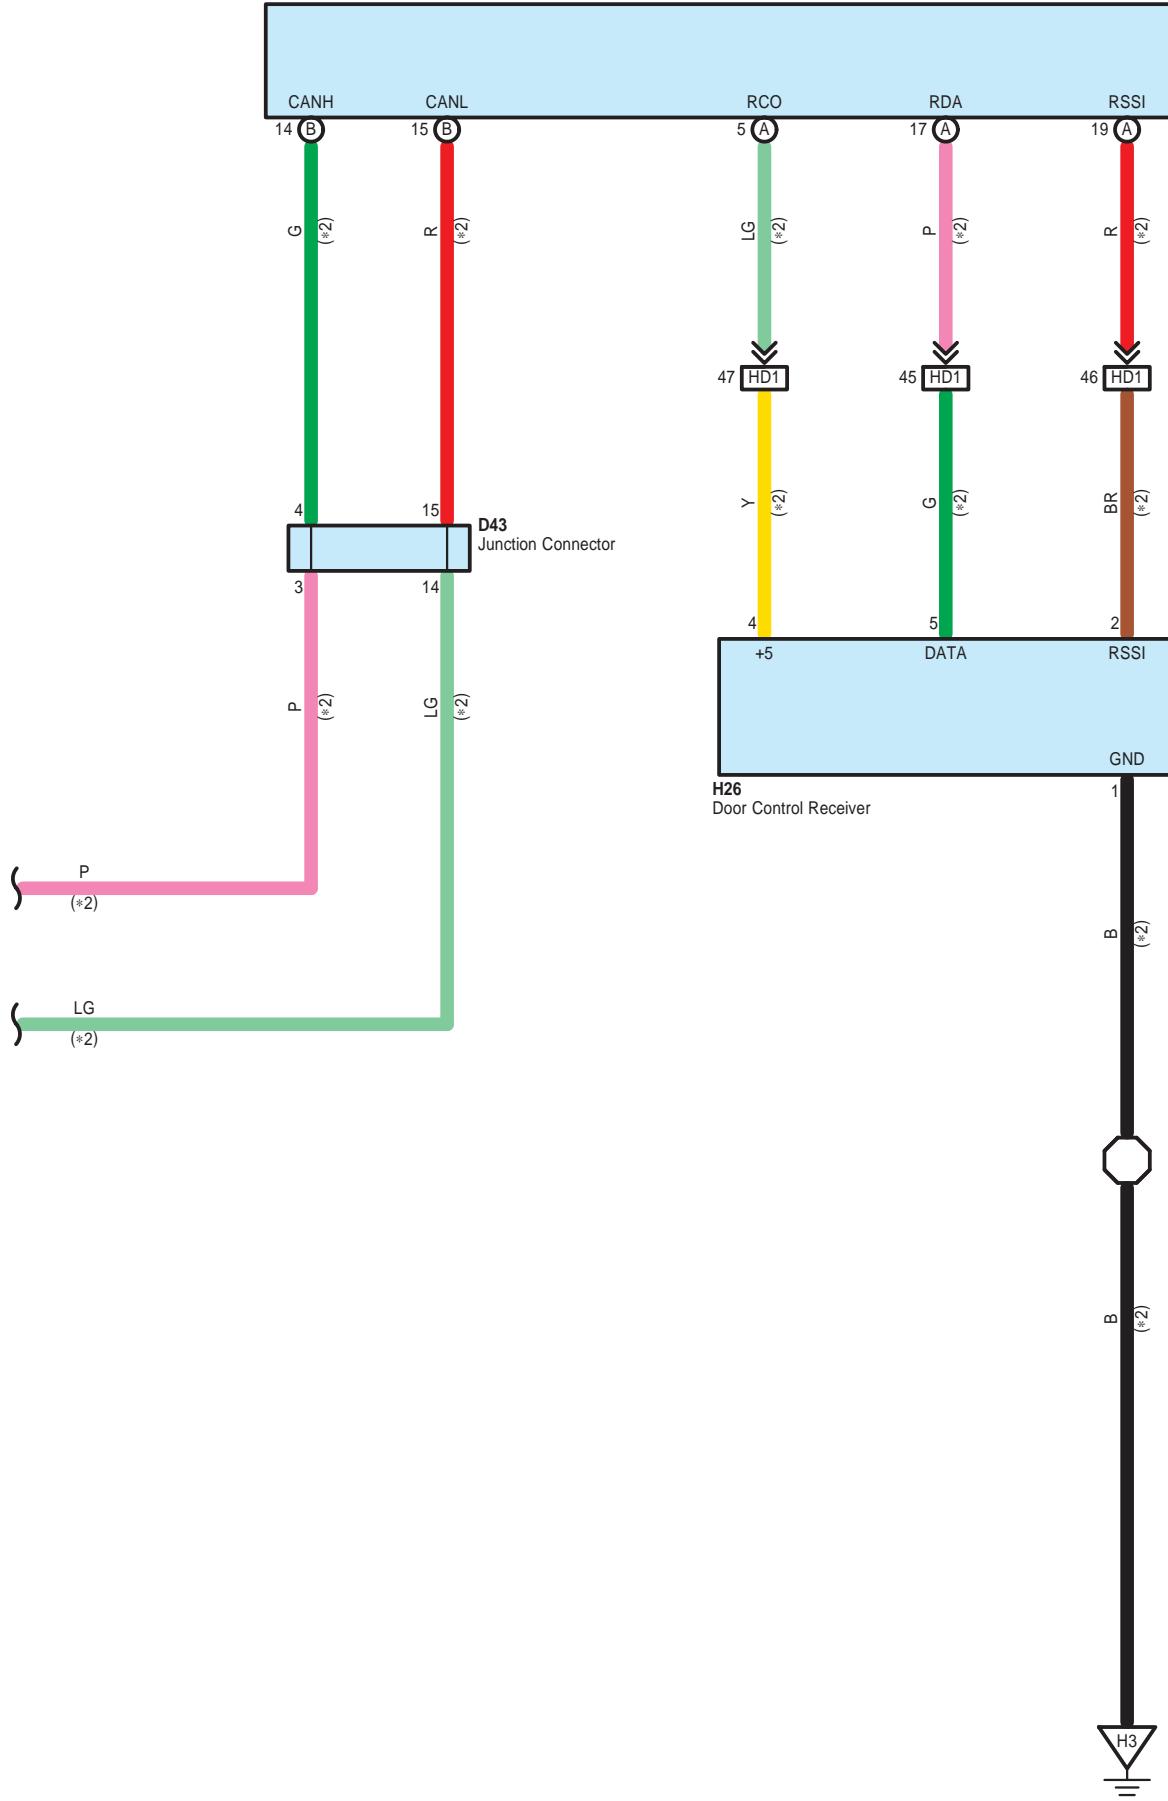

Double Locking

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A9	A	42 (LHD)		D9	B	48 (RHD)		E3	A	44 (LHD)	
		50 (RHD)				40 (LHD)				52 (RHD)	
A73	A	42 (LHD)		D16	A	48 (RHD)		F3	B	44 (LHD)	
		50 (RHD)				40 (LHD)				52 (RHD)	
D5	B	40 (LHD)		D17	B	48 (RHD)		G18		44 (LHD)	
		48 (RHD)				41 (LHD)				52 (RHD)	
D6	C	40 (LHD)		D40	A	49 (RHD)		H26		45 (LHD)	
		48 (RHD)				41 (LHD)				53 (RHD)	
D8	A	40 (LHD)		D41	B	49 (RHD)		H27		45 (LHD)	
		48 (RHD)				41 (LHD)				53 (RHD)	
D9	B	40 (LHD)		D43		49 (RHD)					

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
ED2	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
FD1	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
FD2	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
GD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	

: Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
D1	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	

Front Wiper and Washer

D57(A), (B), D58(C), (D)
Windshield Wiper Switch Assembly

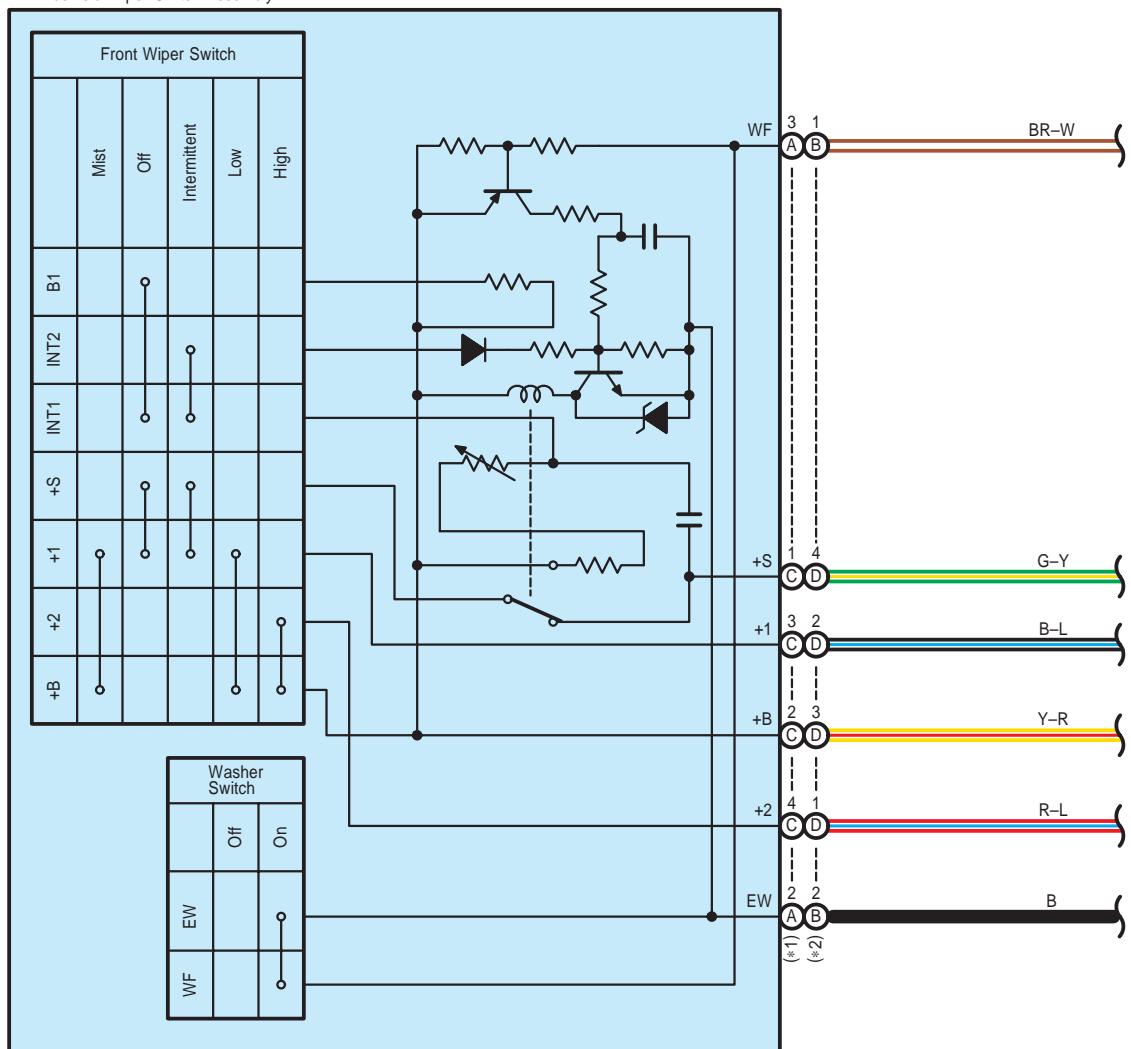

* 1 : Headlight Dimmer Switch Assembly LH Side Type
 * 2 : Headlight Dimmer Switch Assembly RH Side Type

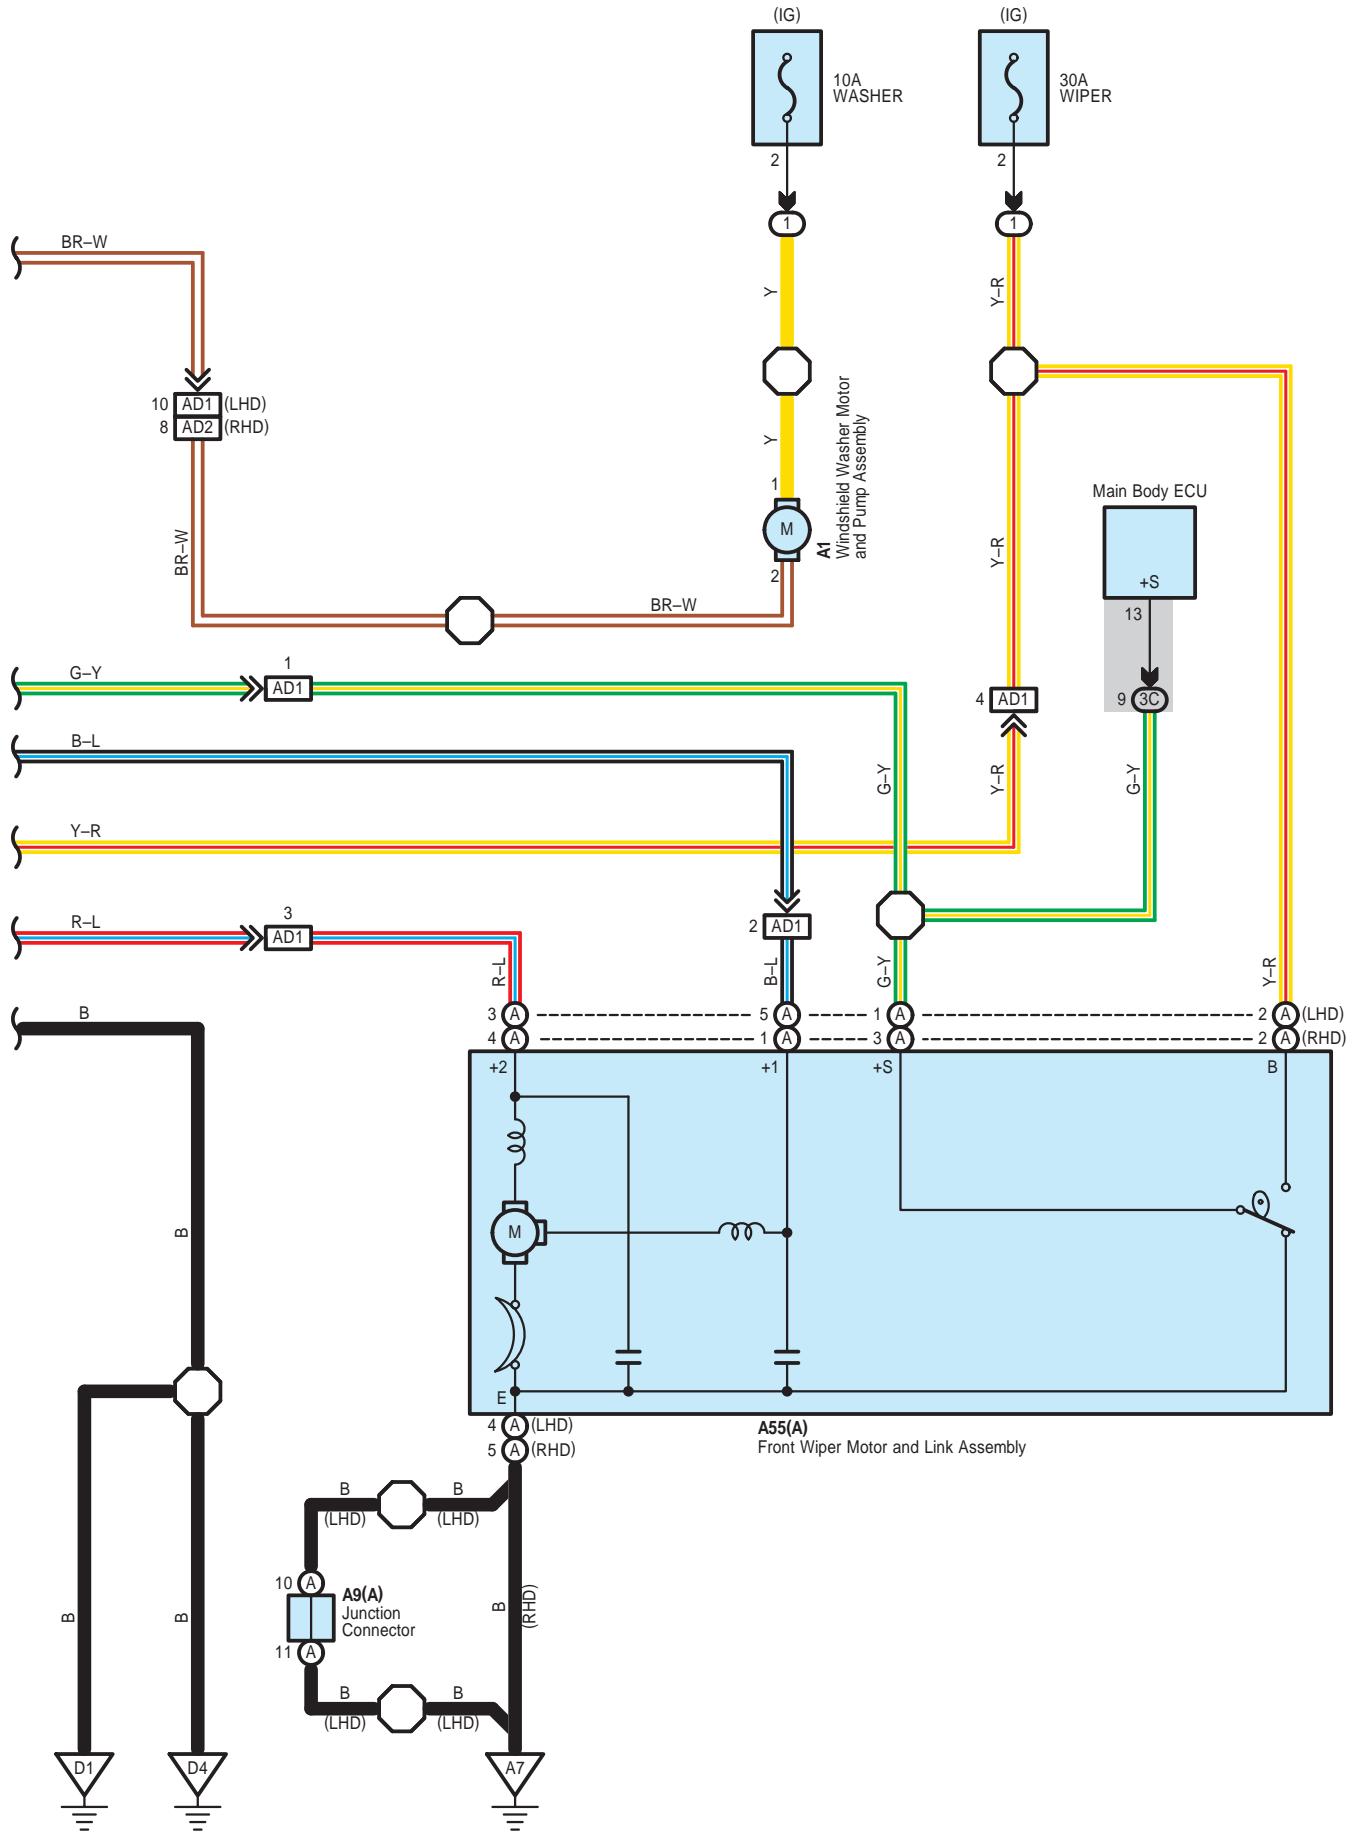

Front Wiper and Washer

 : Parts Location

Code		See Page		Code		See Page		Code		See Page			
A1		39 (LHD)		A55	A	47 (RHD)		D58	C	41 (LHD)			
		47 (RHD)		D57	A	41 (LHD)				49 (RHD)			
A9	A	42 (LHD)				49 (RHD)			D	49 (RHD)			
A55		39 (LHD)			B	49 (RHD)							

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

 : Ground Points


Code	See Page	Ground Points Location
A7	54 (LHD) 58 (RHD)	Front Fender Apron RH
D1	55 (LHD) 59 (RHD)	Cowl Side Panel LH
D4	55 (LHD) 59 (RHD)	Cowl Side Panel RH

Remote Control Mirror (LHD)

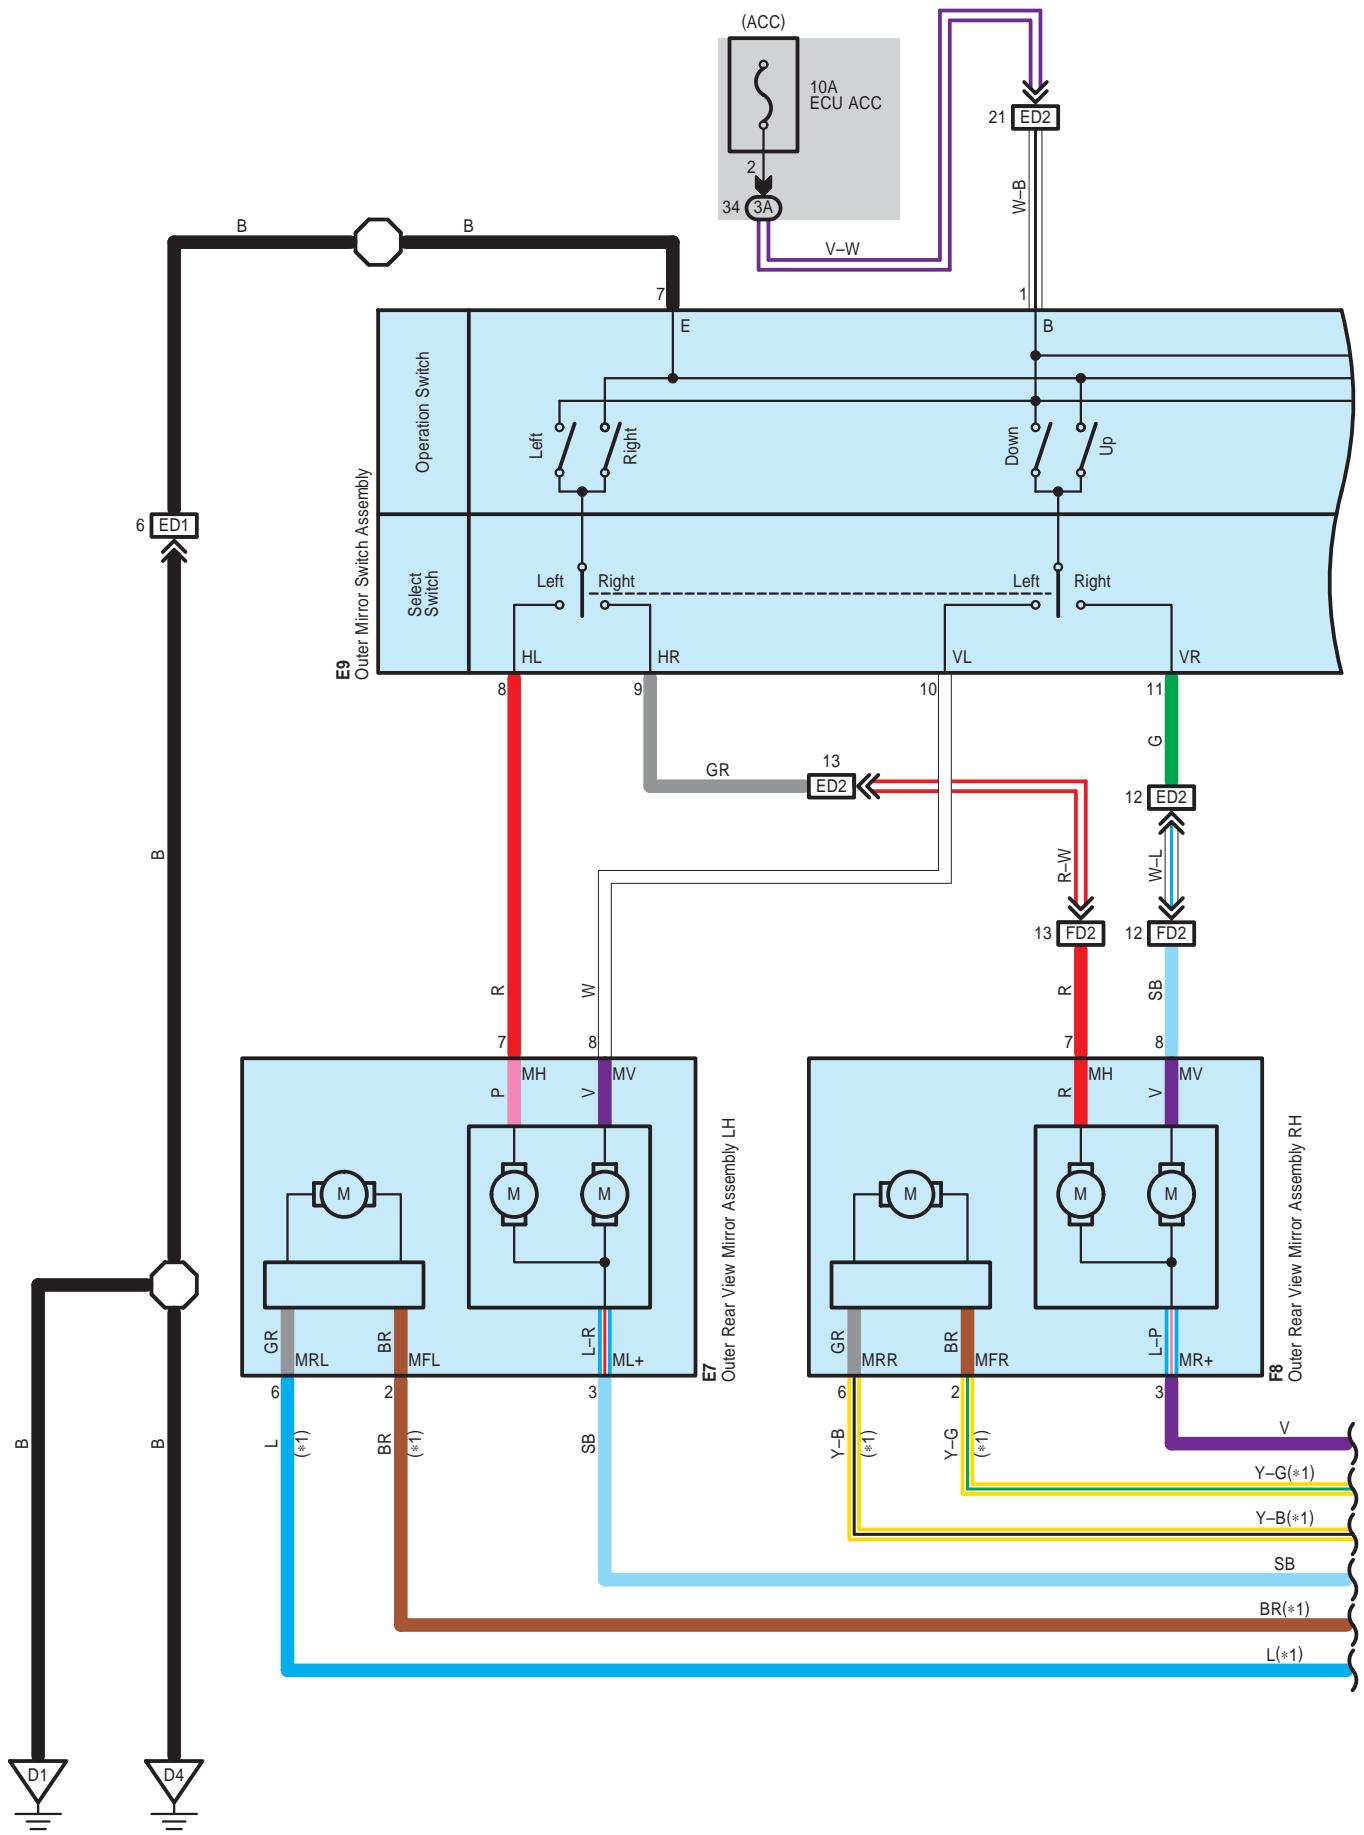

* 1 : w/ Retract Mirror

E9
Outer Mirror Switch Assembly

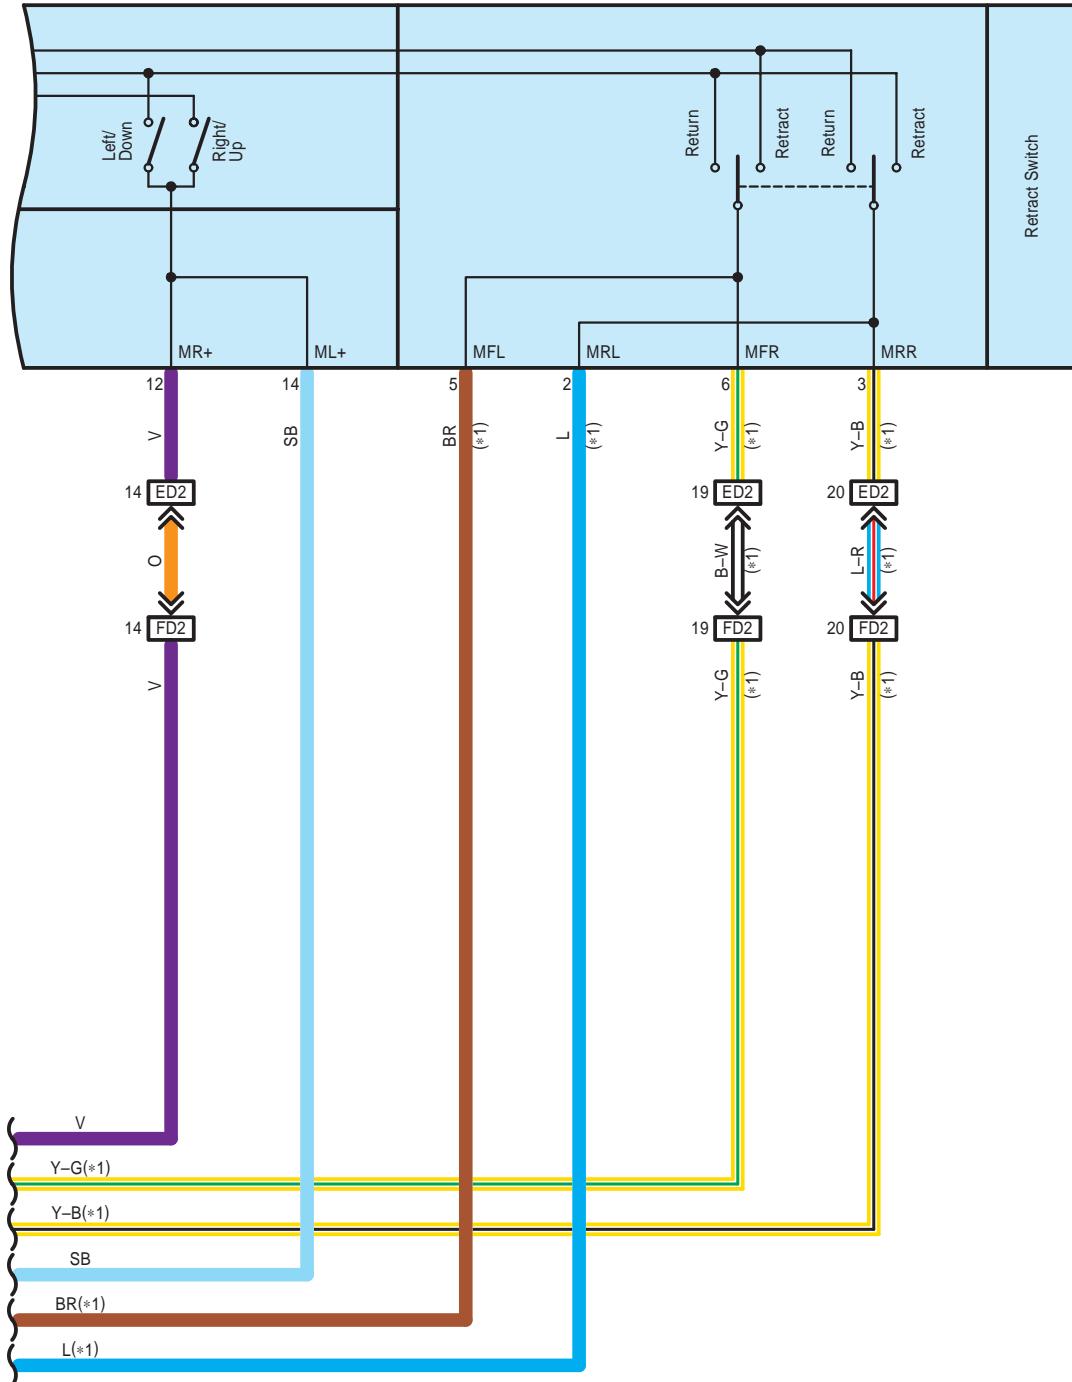

Remote Control Mirror (LHD)

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
E7	44 (LHD)	E9	44 (LHD)	F8	44 (LHD)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
ED2	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
FD2	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)


 : Ground Points

Code	See Page	Ground Points Location
D1	55 (LHD)	Cowl Side Panel LH
D4	55 (LHD)	Cowl Side Panel RH

Remote Control Mirror (RHD)

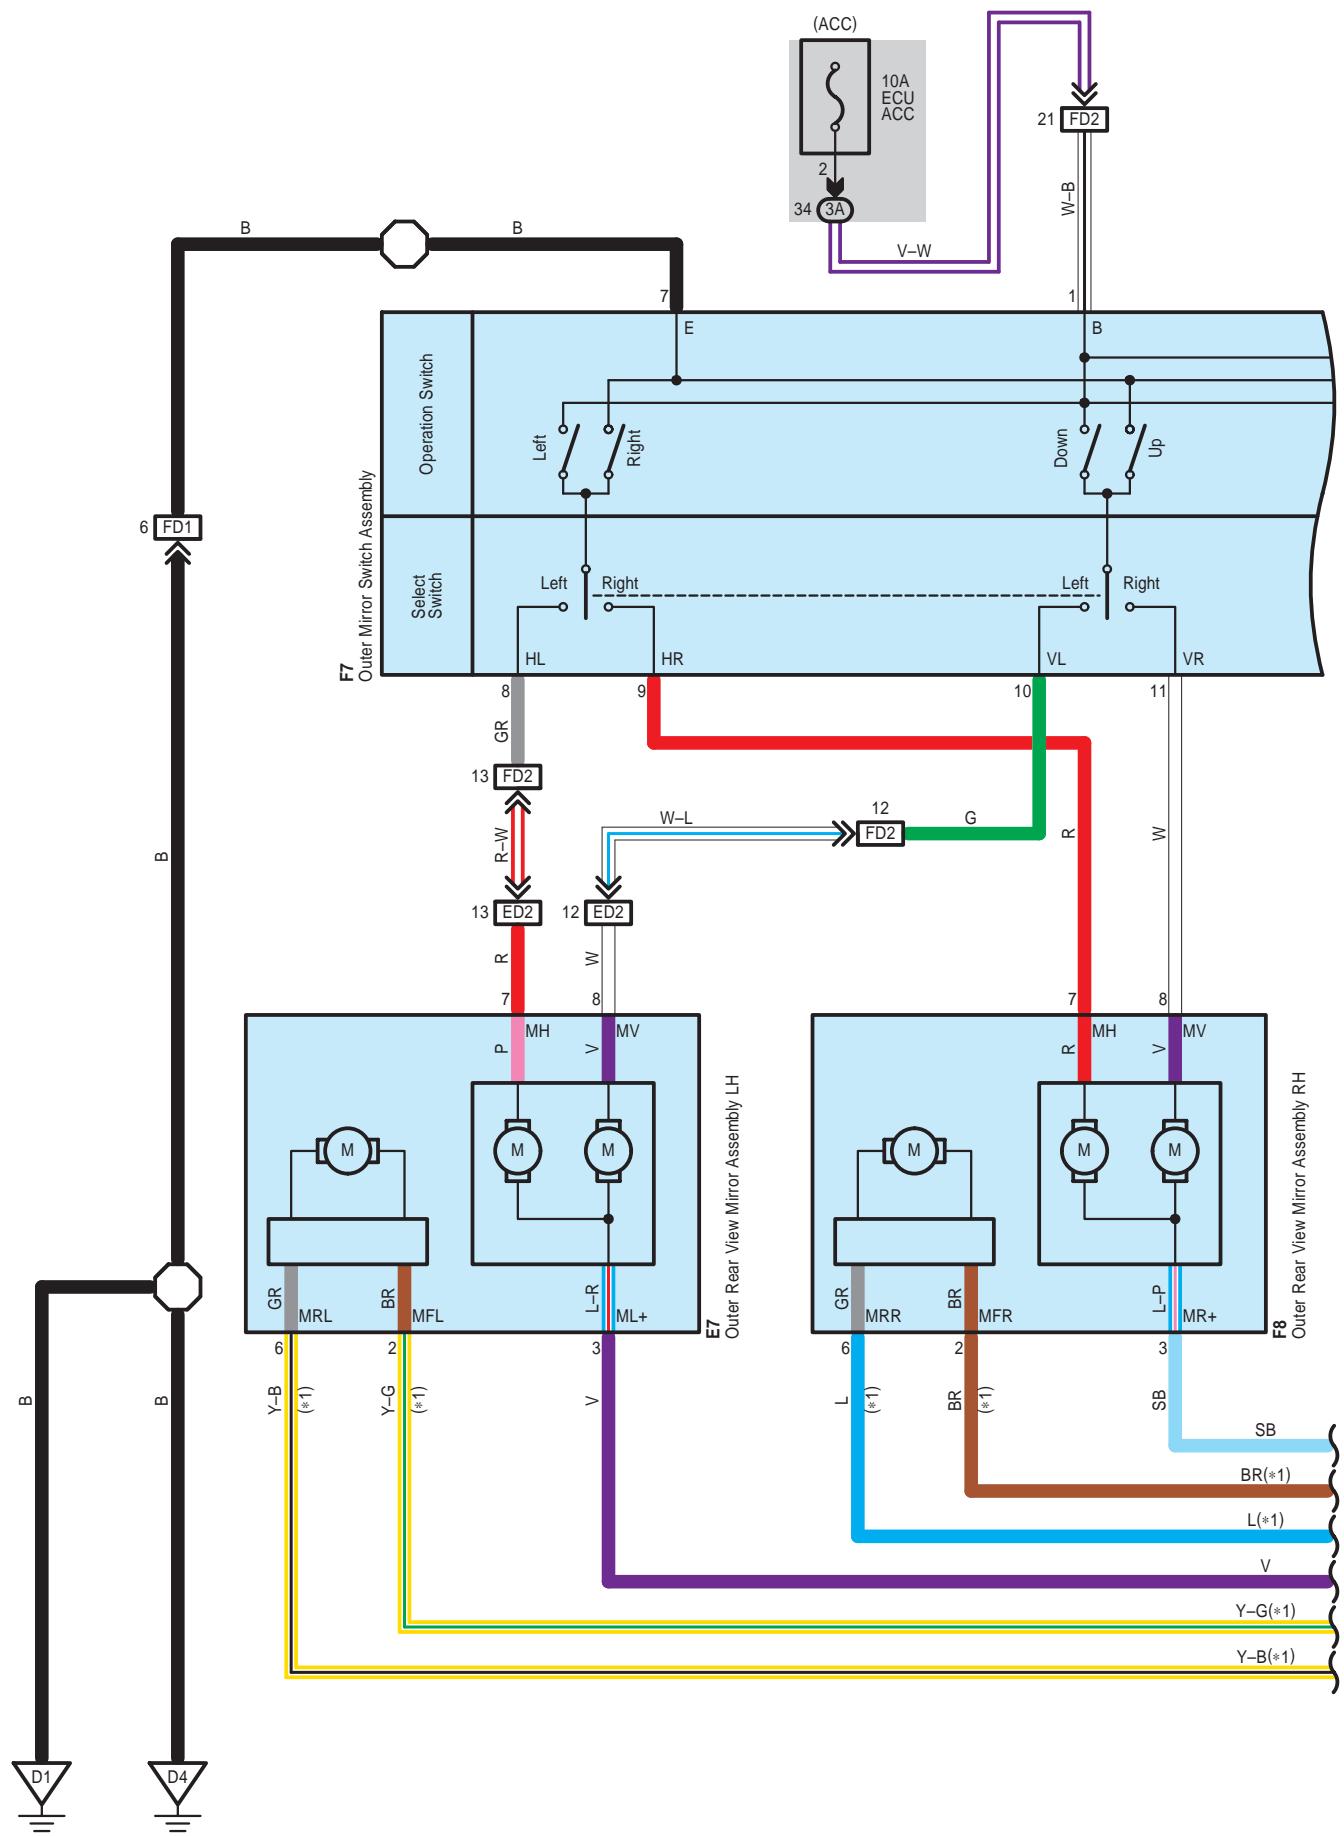

* 1 : w/ Retract Mirror

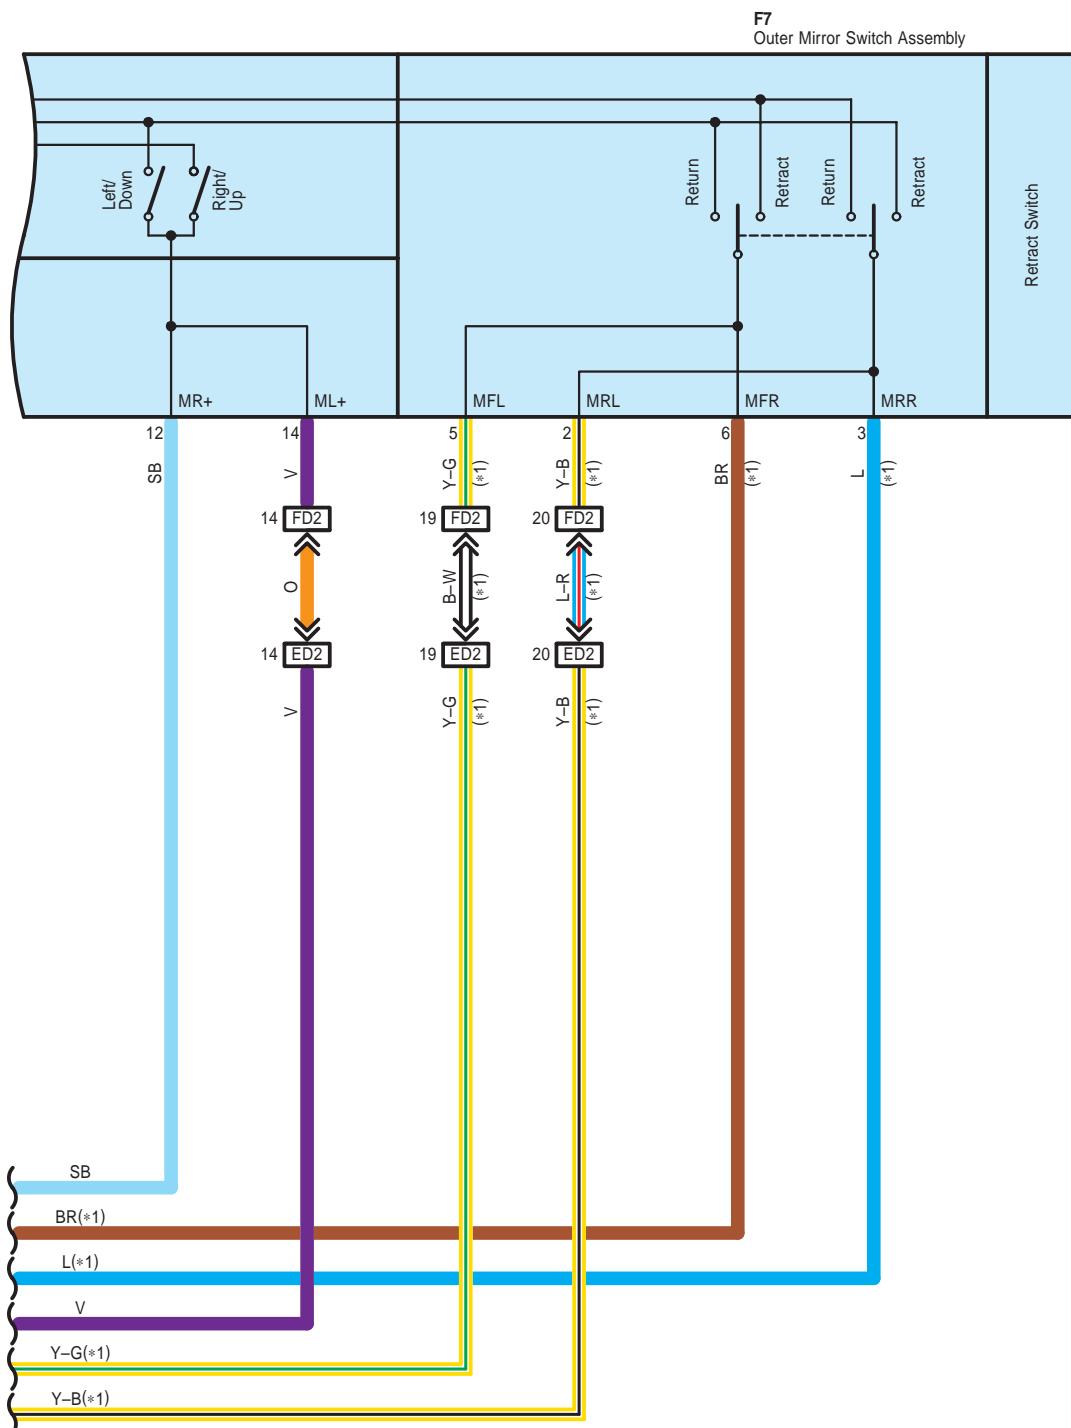

Remote Control Mirror (RHD)

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
E7	52 (RHD)	F7	52 (RHD)	F8	52 (RHD)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED2	59 (RHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
FD1	59 (RHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
FD2		

 : Ground Points


Code	See Page	Ground Points Location
D1	59 (RHD)	Cowl Side Panel RH
D4	59 (RHD)	Cowl Side Panel LH

Mirror Heater and Rear Window Defogger

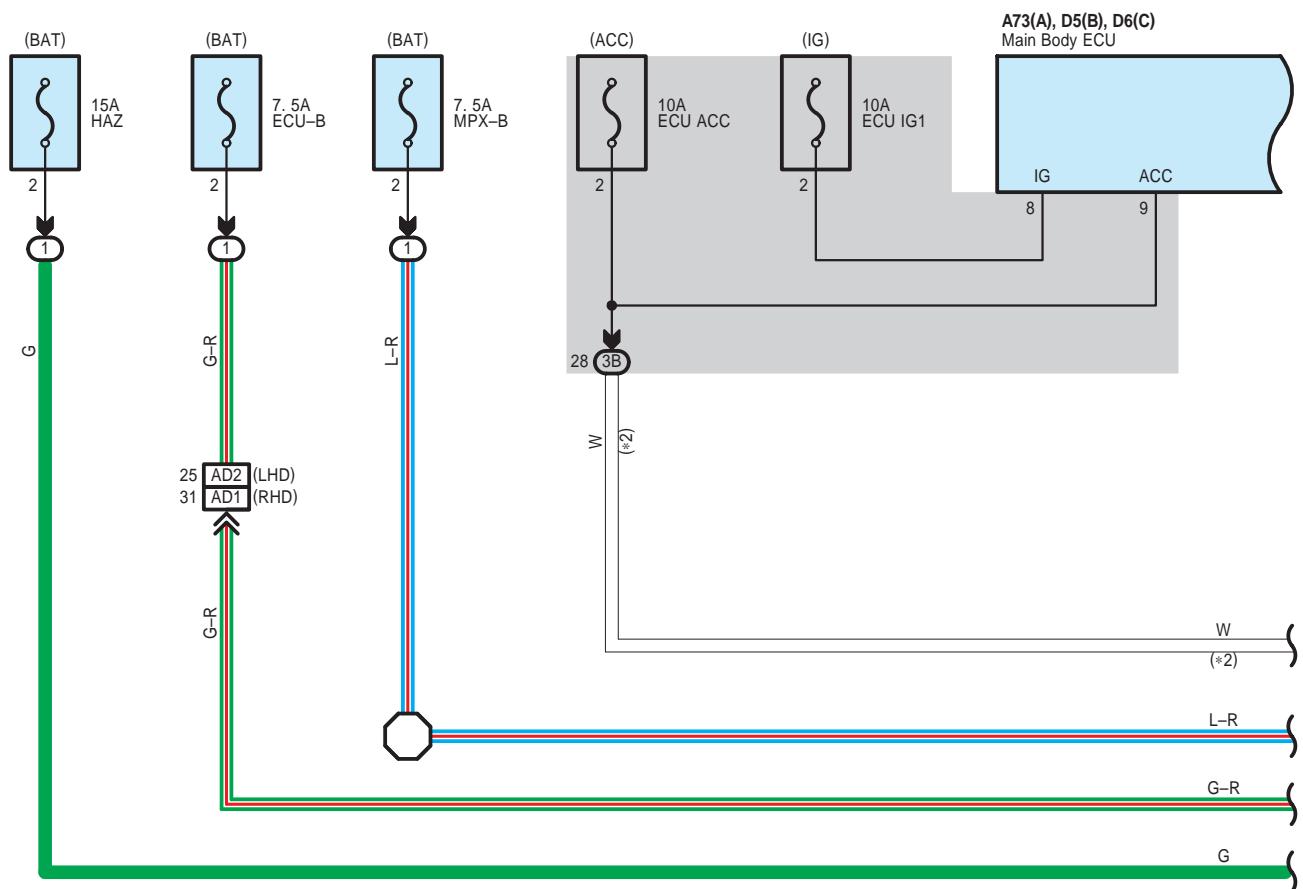



* 2 : w/ Entry & Start System

A73(A), D5(B), D6(C)
Main Body ECU

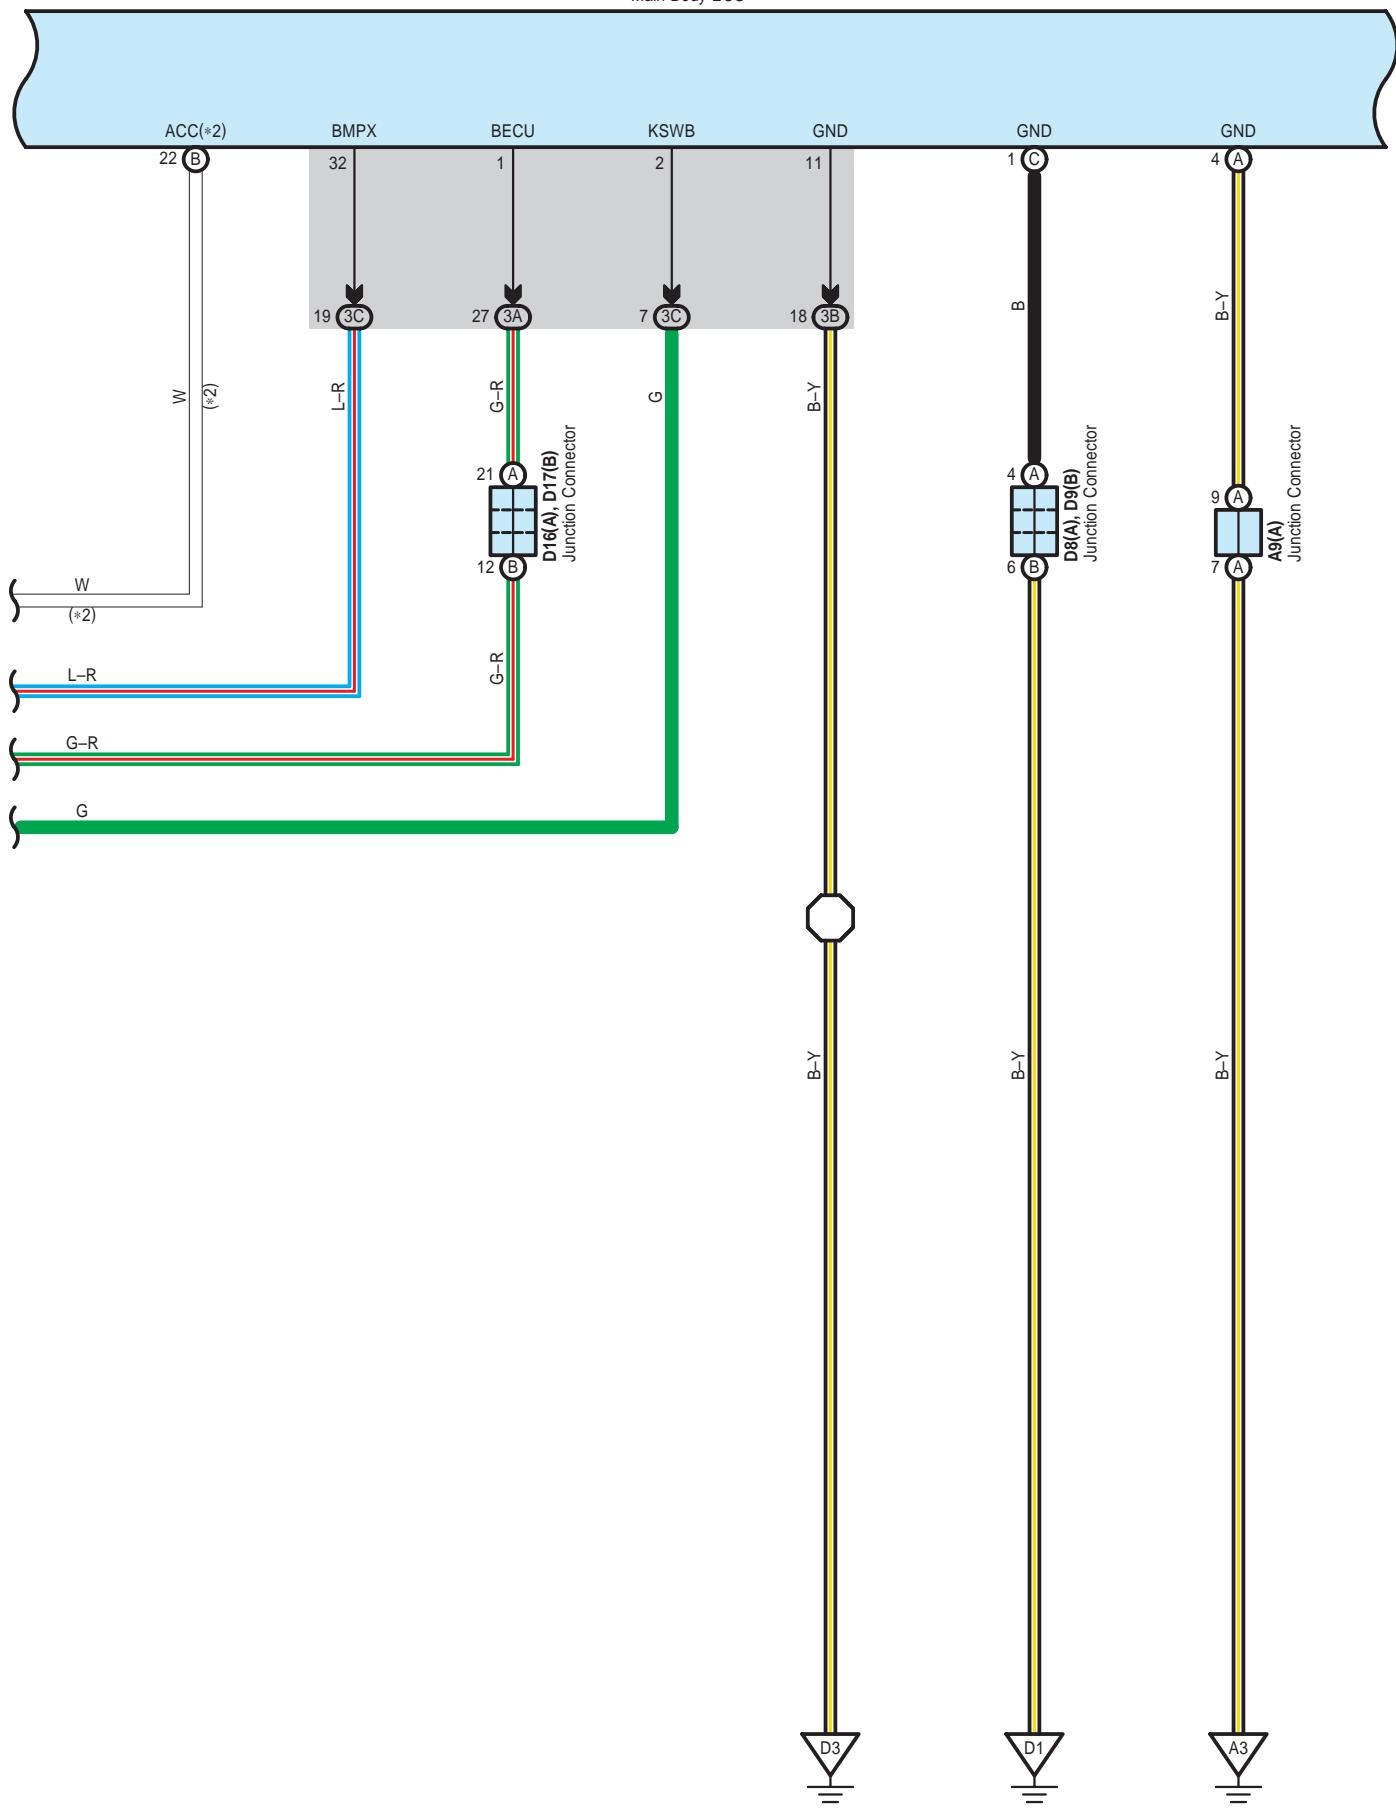

Mirror Heater and Rear Window Defogger

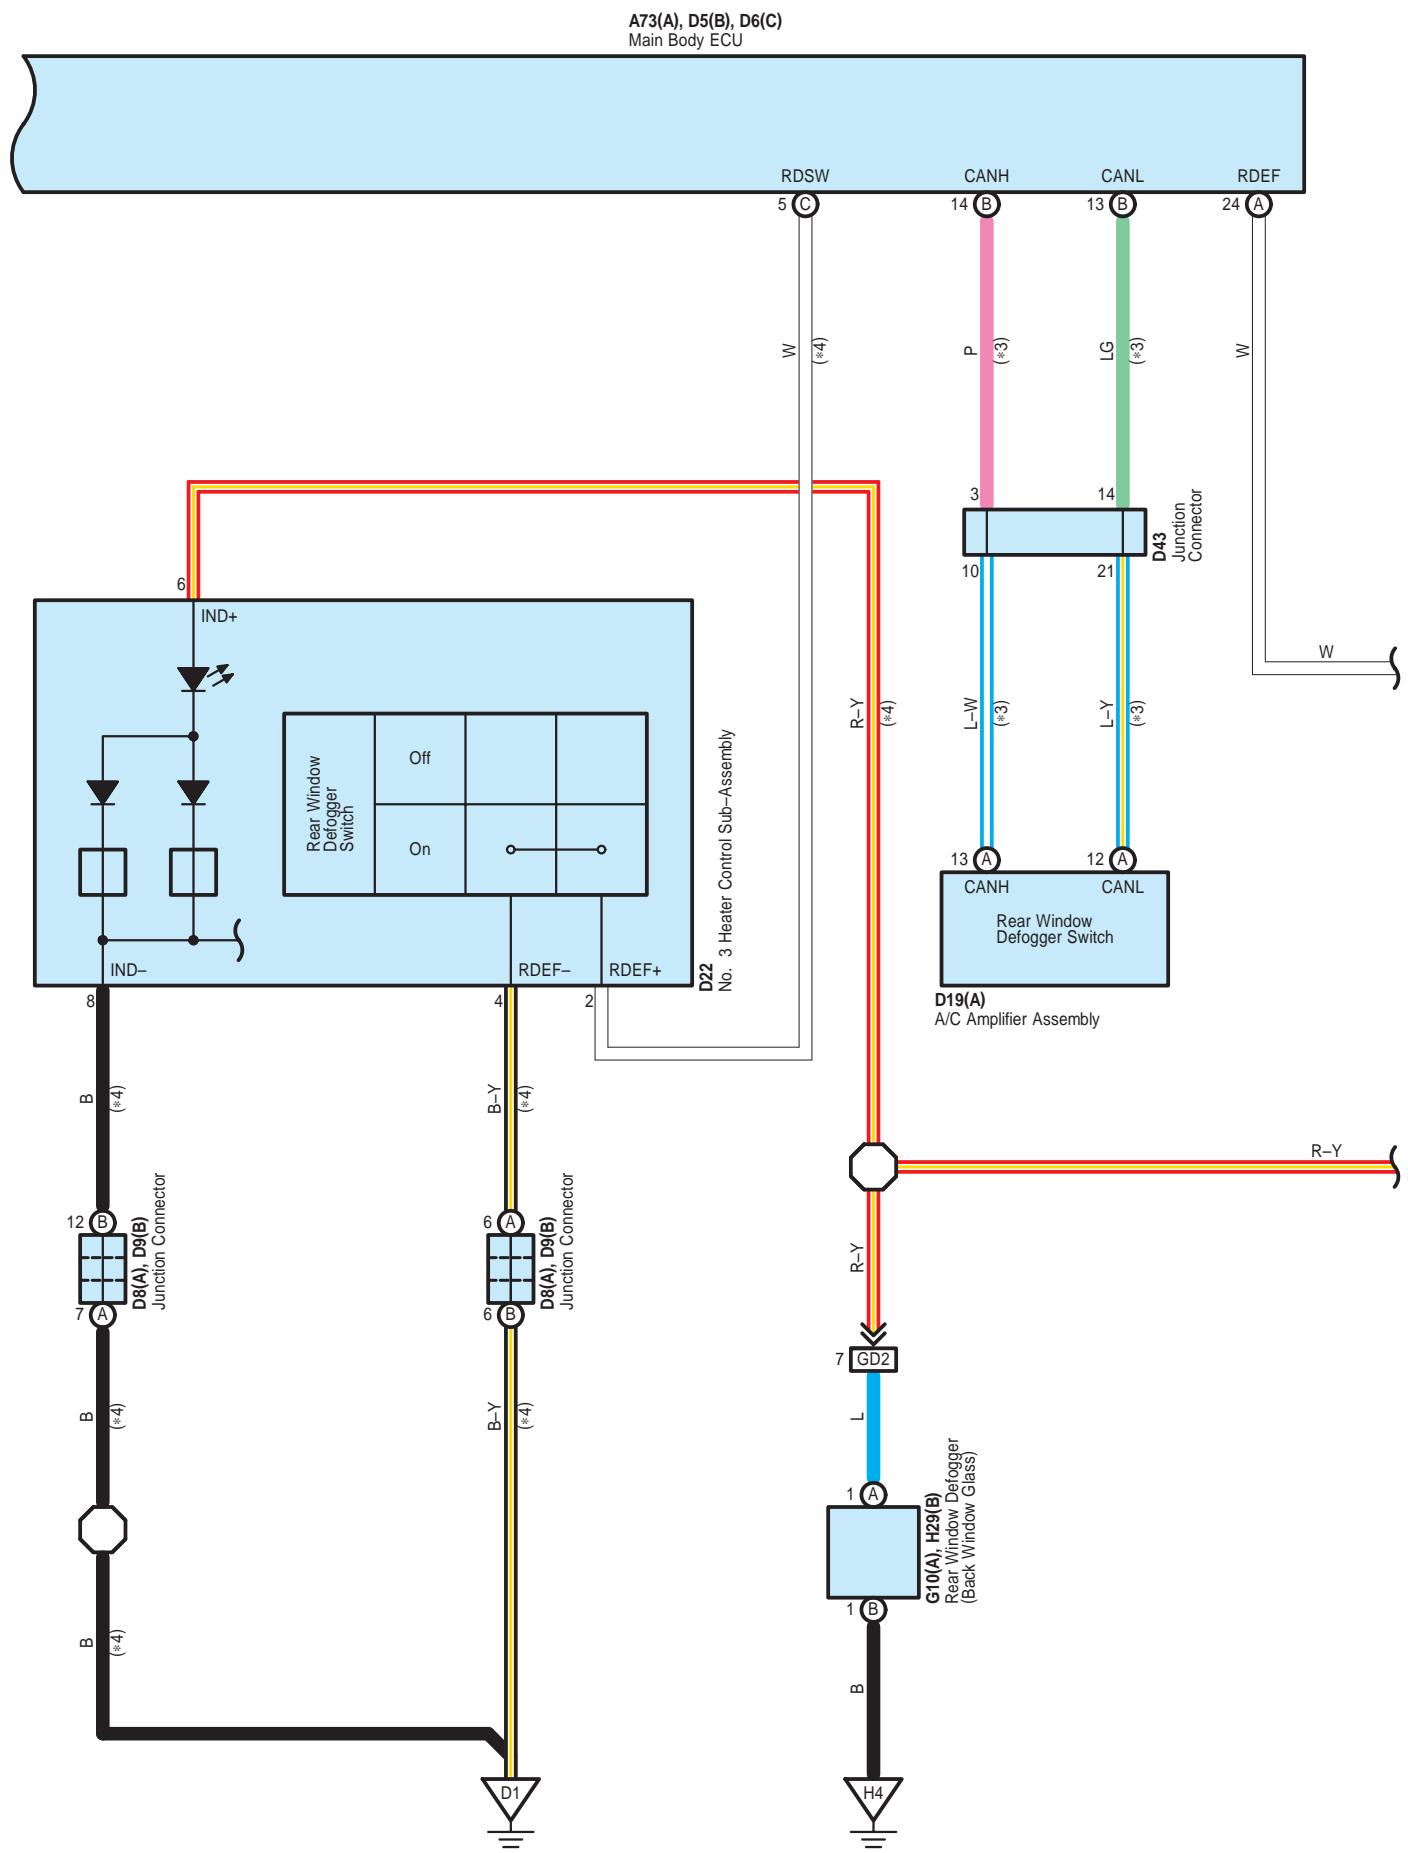

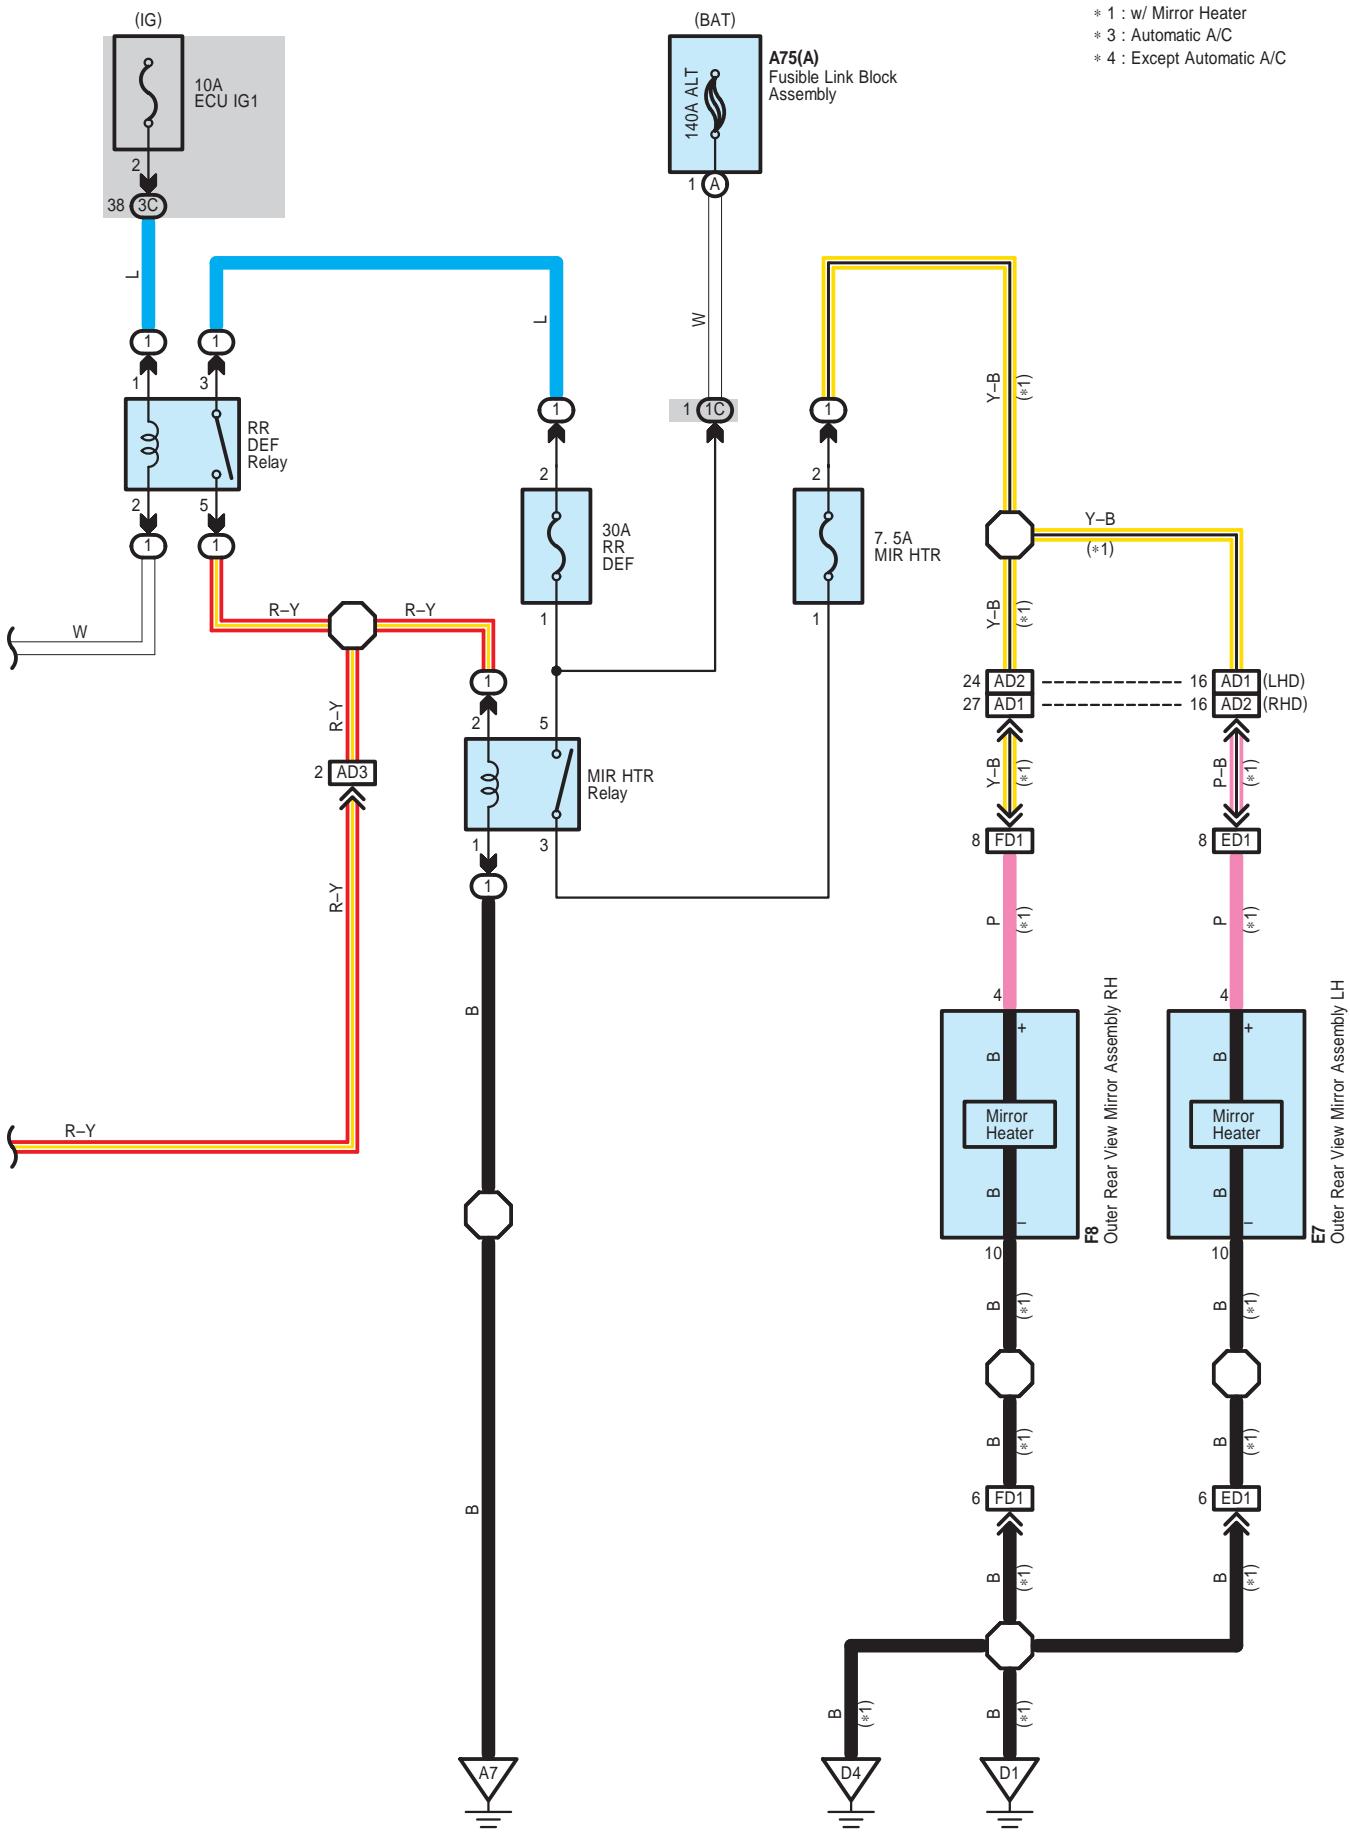

Mirror Heater and Rear Window Defogger

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A9	A	42 (LHD)		D8	A	48 (RHD)		D43		41 (LHD)	
		50 (RHD)				40 (LHD)				49 (RHD)	
A73	A	42 (LHD)		D9	B	48 (RHD)		E7		44 (LHD)	
		50 (RHD)				40 (LHD)				52 (RHD)	
A75	A	39 (LHD)		D16	A	48 (RHD)		F8		44 (LHD)	
		47 (RHD)				40 (LHD)				52 (RHD)	
D5	B	40 (LHD)		D17	B	48 (RHD)		G10	A	44 (LHD)	
		48 (RHD)				40 (LHD)				52 (RHD)	
D6	C	40 (LHD)		D19	A	48 (RHD)		H29	B	45 (LHD)	
		48 (RHD)				40 (LHD)				53 (RHD)	
D8	A	40 (LHD)		D22		48 (RHD)					

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	
AD3	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
FD1	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
GD2	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	

: Ground Points

Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
H4	56 (LHD)	Cowl Side Panel LH
	60 (RHD)	
		Upper Back Panel

Seat Heater

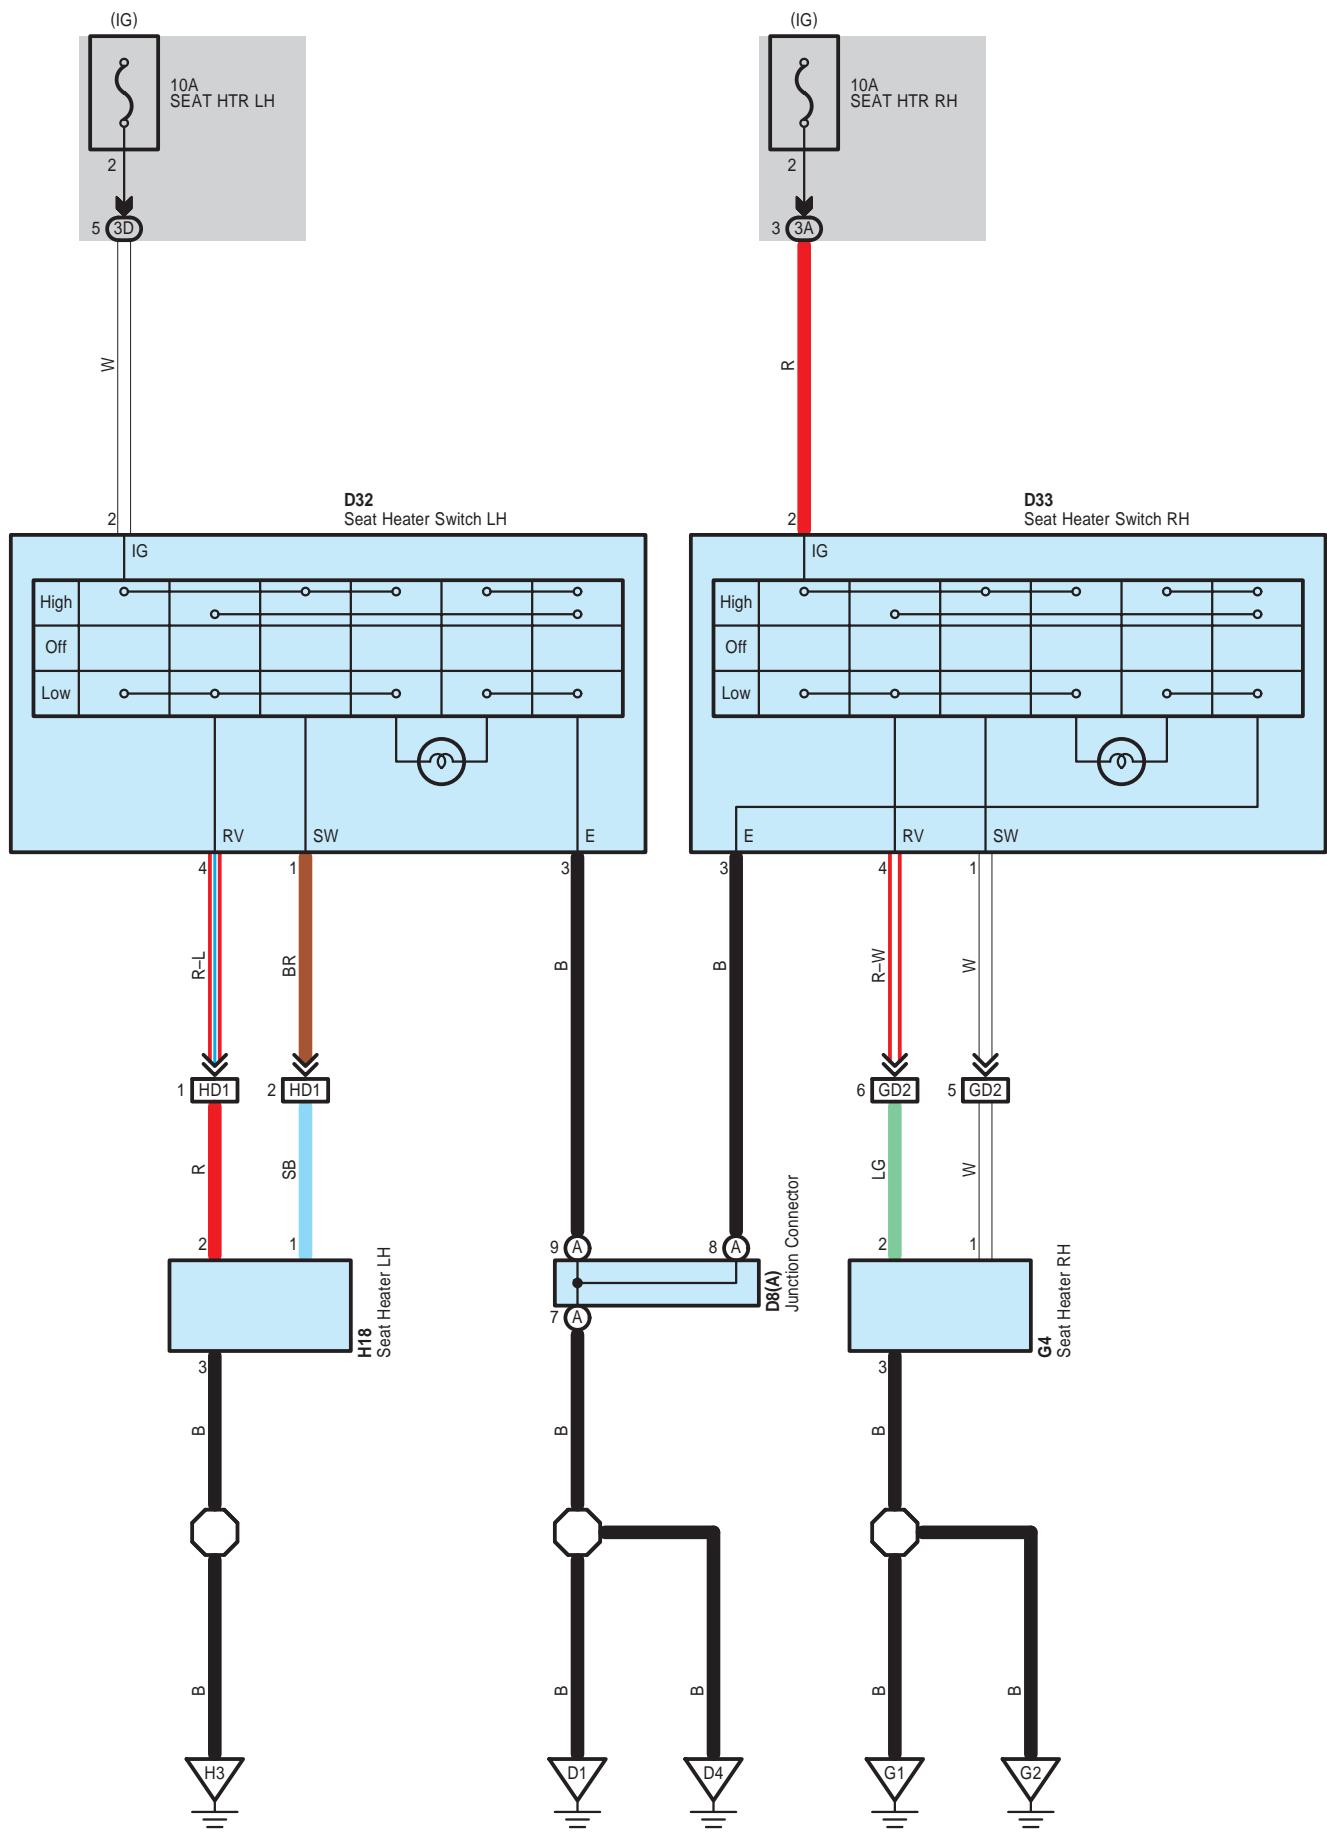

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
D8	A	40 (LHD) 48 (RHD)	D33	40 (LHD) 48 (RHD)	H18
D32		40 (LHD) 48 (RHD)	G4	44 (LHD) 52 (RHD)	

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D		


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
GD2	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	Cowl Side Panel RH
D4	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
G1	56 (LHD)	Quarter Wheel House Panel RH
	60 (RHD)	
G2	56 (LHD)	
	60 (RHD)	
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	

Horn

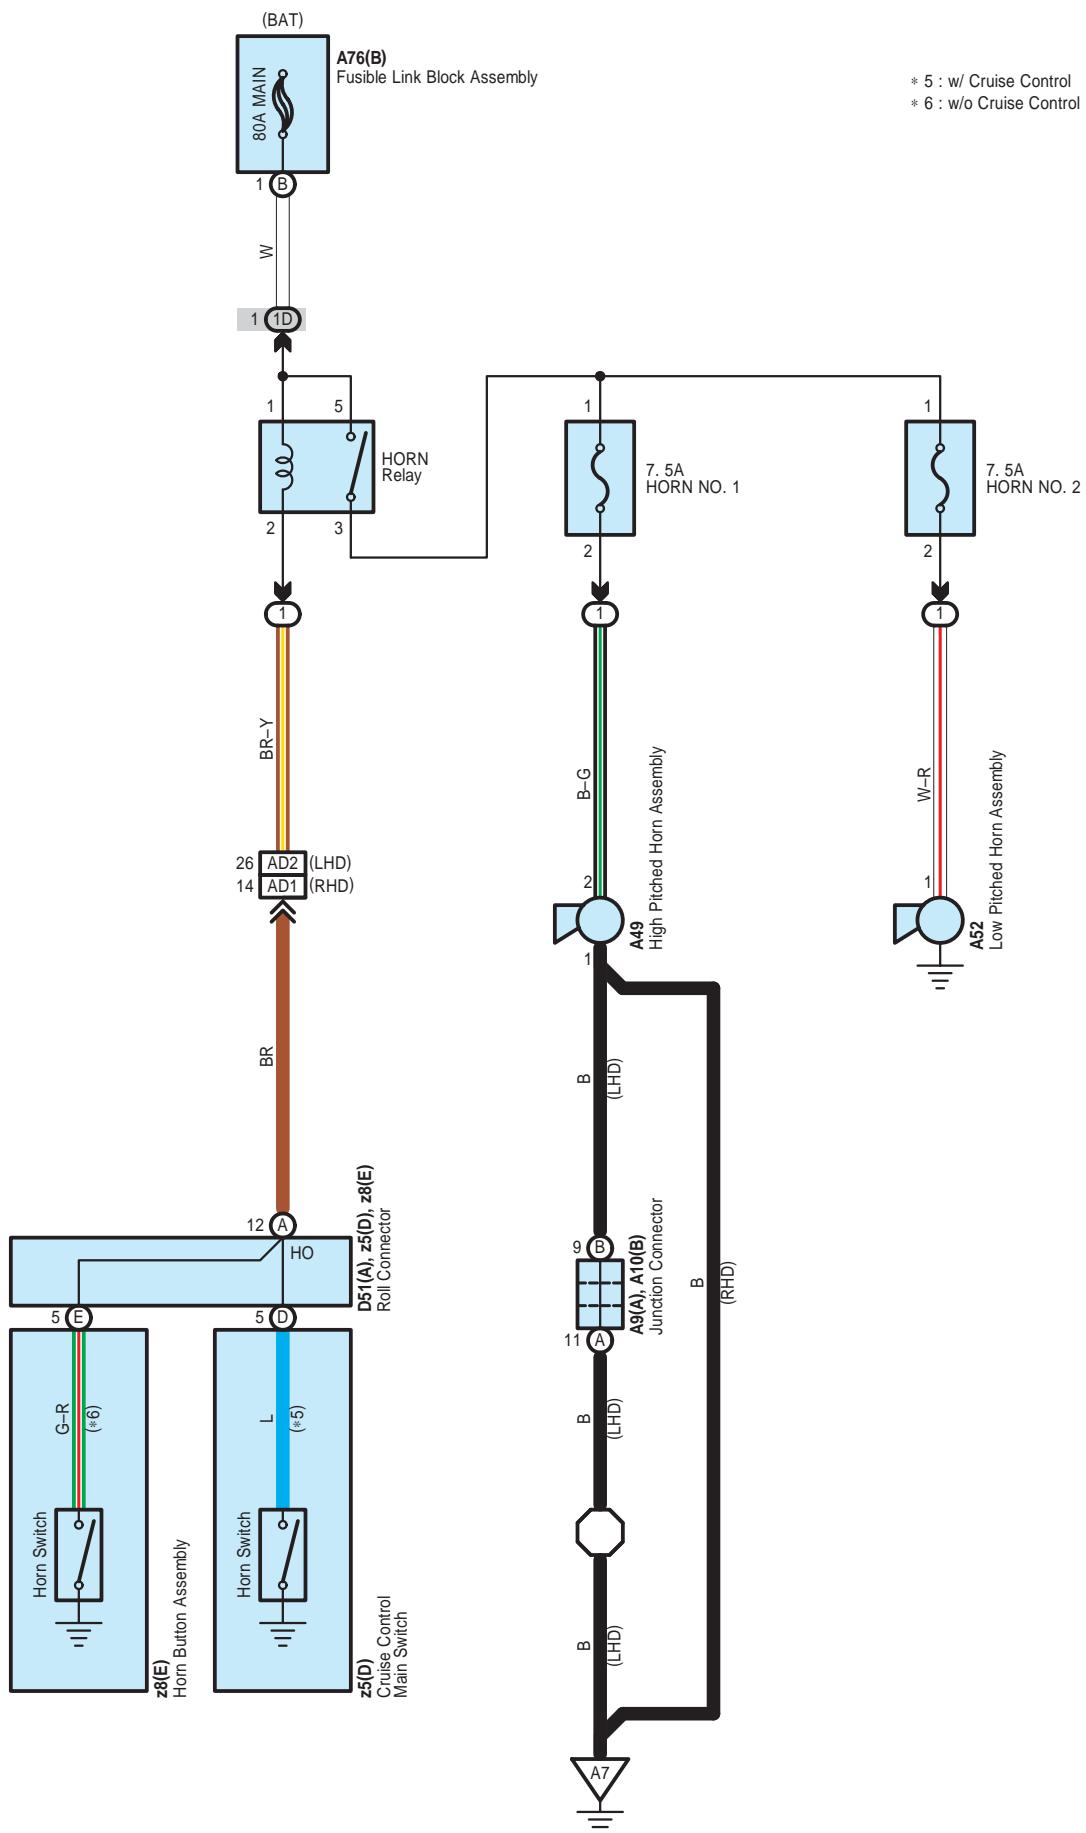

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	42 (LHD)	A52		47 (RHD)	z5	D	42 (LHD)
A10	B	42 (LHD)			39 (LHD)			50 (RHD)
A49		39 (LHD)			47 (RHD)	z8	E	42 (LHD)
		47 (RHD)			41 (LHD)			50 (RHD)
A52		39 (LHD)	D51	A	49 (RHD)			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

 : Ground Points

Code	See Page	Ground Points Location
A7	54 (LHD) 58 (RHD)	Front Fender Apron RH

Power Outlet

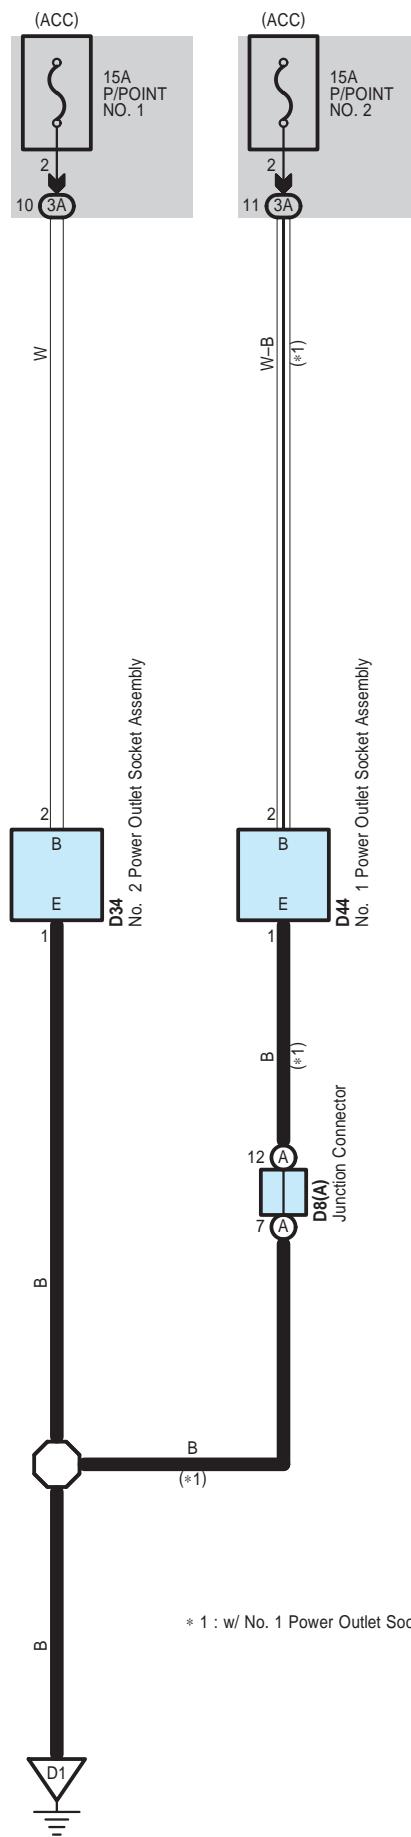

 : Parts Location

Code		See Page	Code	See Page	Code	See Page
D8	A	40 (LHD) 48 (RHD)	D34	40 (LHD) 48 (RHD)	D44	41 (LHD) 49 (RHD)


 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Ground Points

Code	See Page	Ground Points Location
D1	55 (LHD) 59 (RHD)	Cowl Side Panel LH Cowl Side Panel RH


Audio System

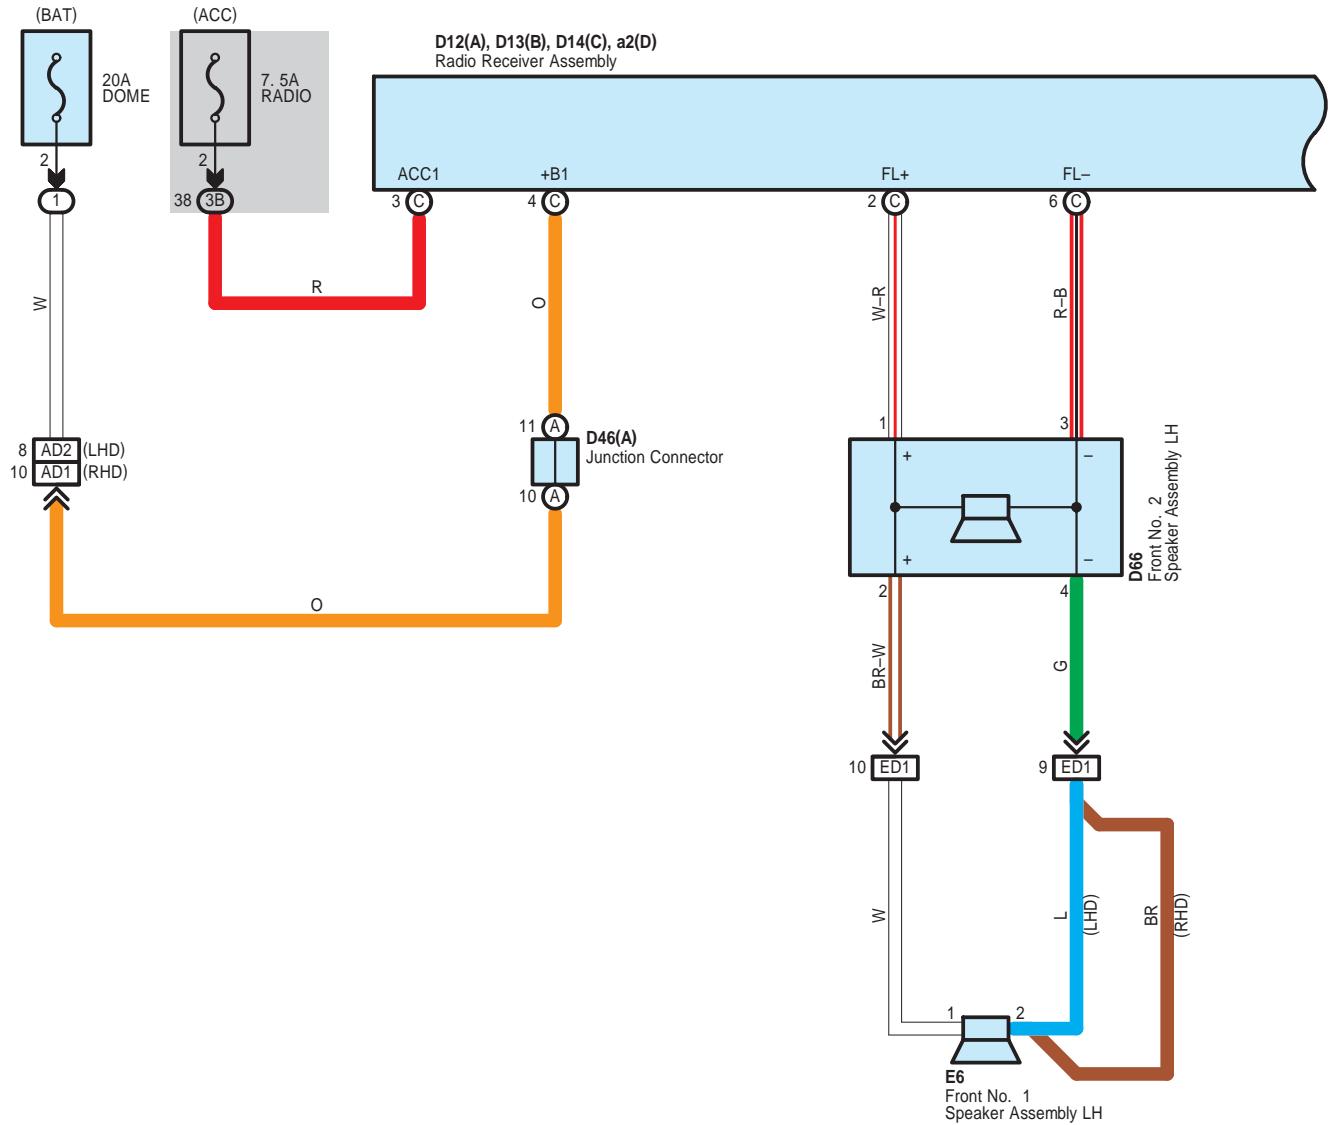

D12(A), D13(B), D14(C), a2(D)
Radio Receiver Assembly

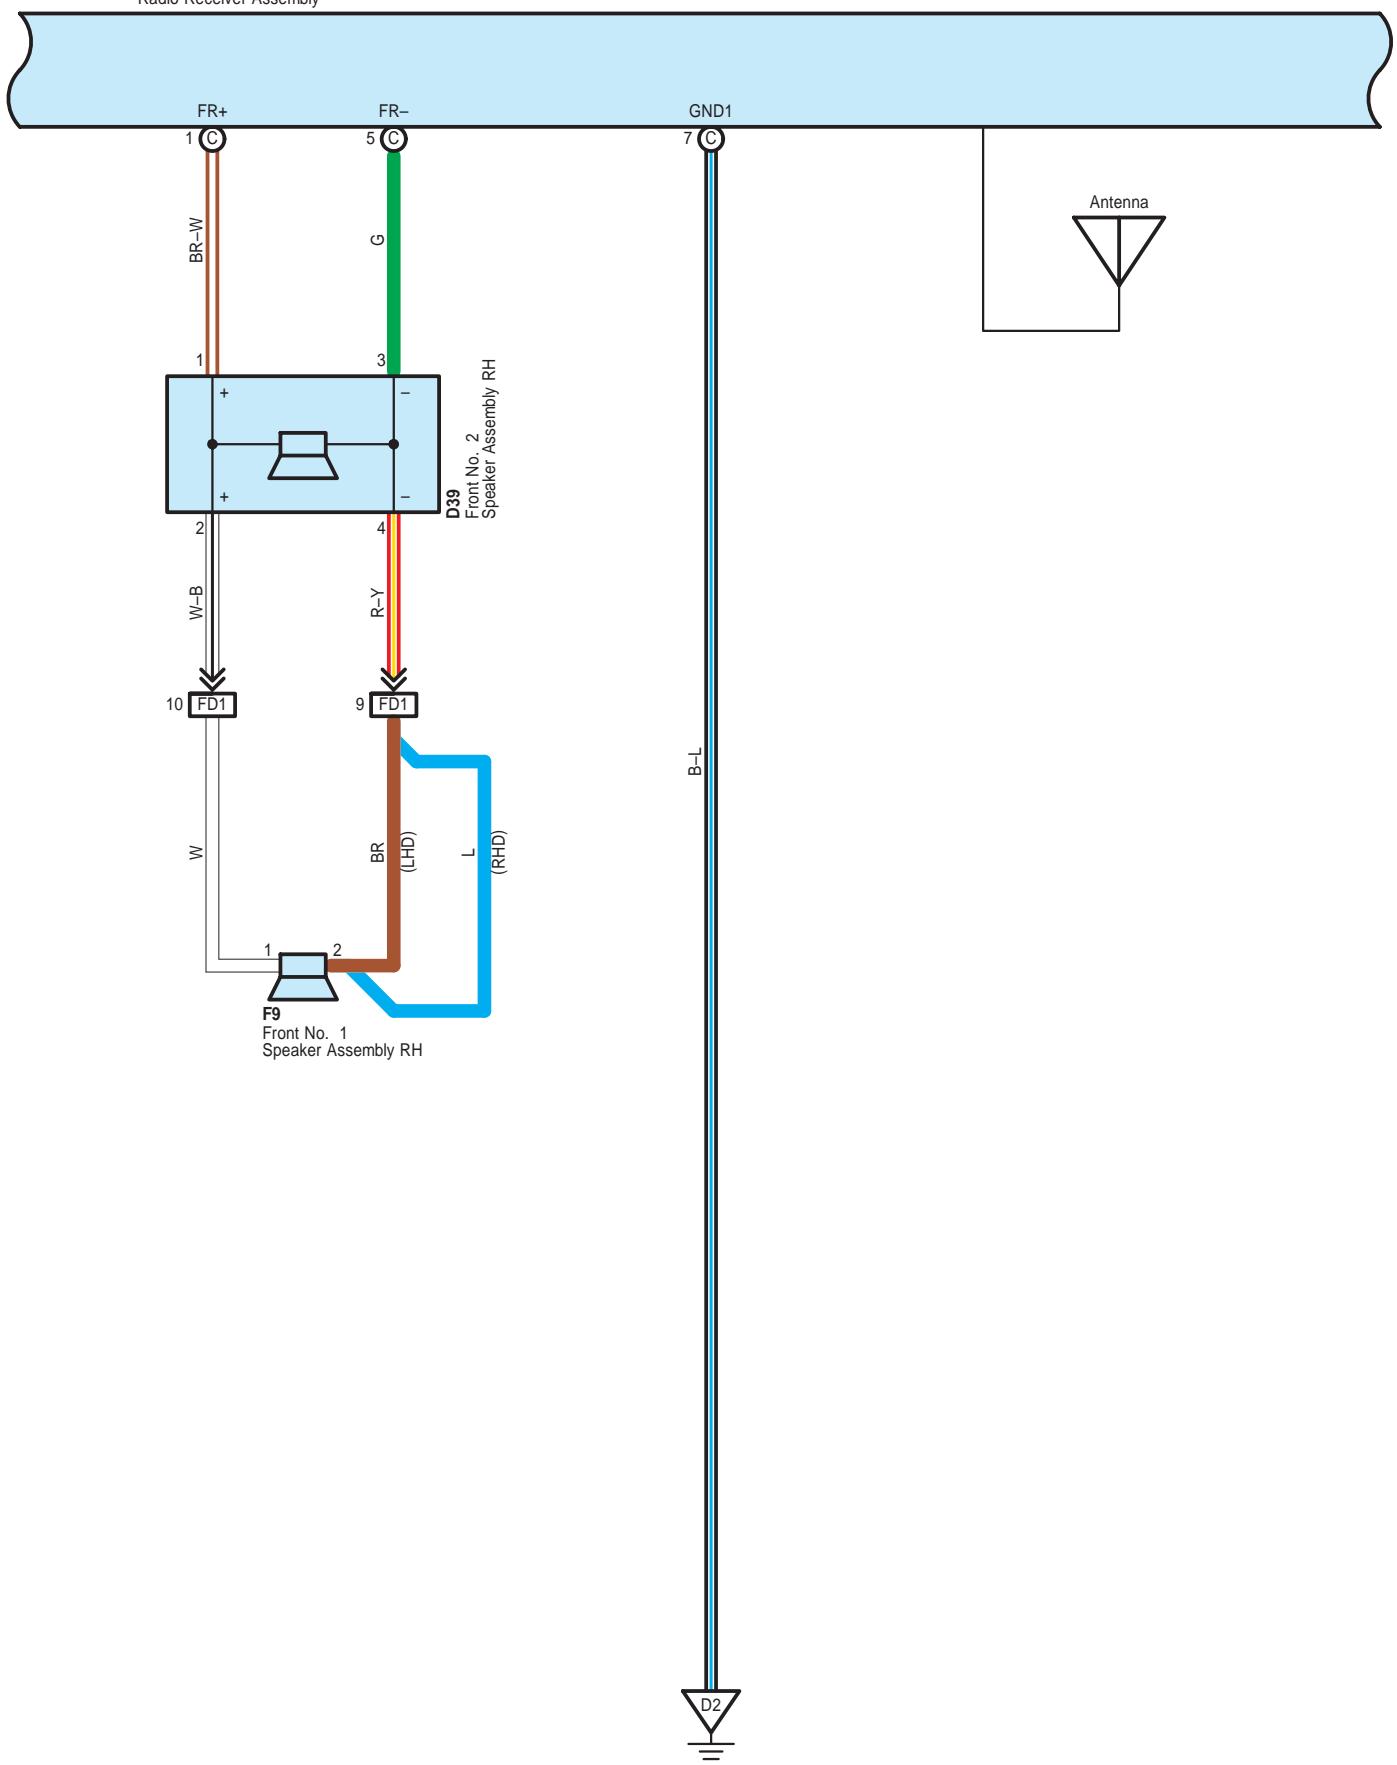

Audio System

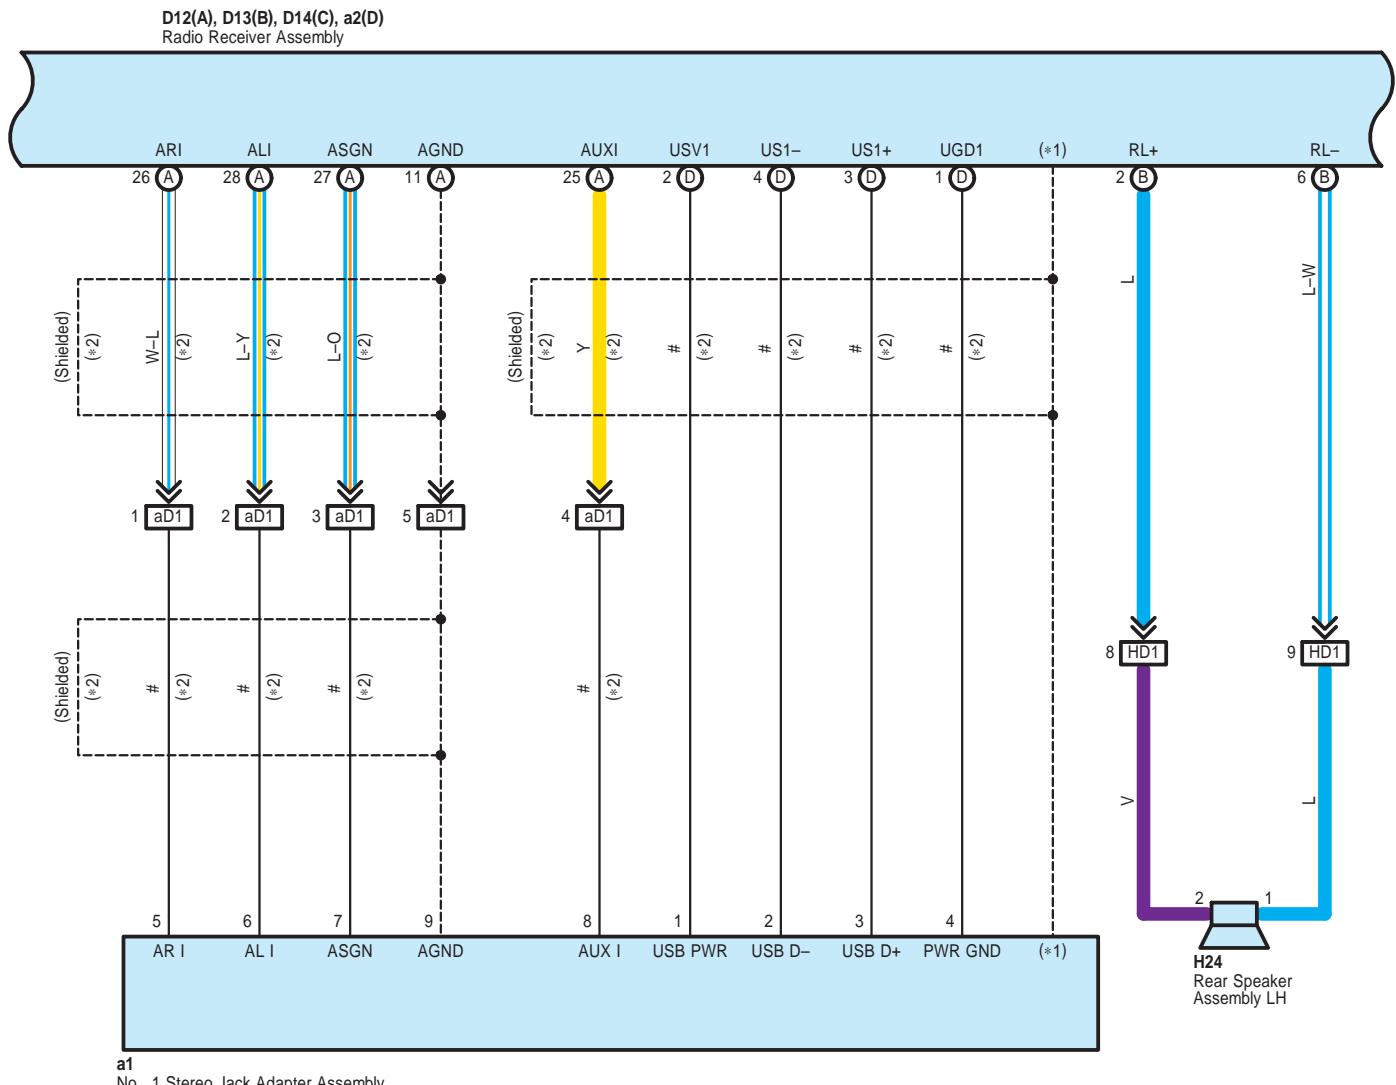


a1
No. 1 Stereo Jack Adapter Assembly

: There is no wire color information.

* 1 : Shield Connector

* 2 : w/ No. 1 Stereo Jack Adapter Assembly

D12(A), D13(B), D14(C), a2(D)
Radio Receiver Assembly

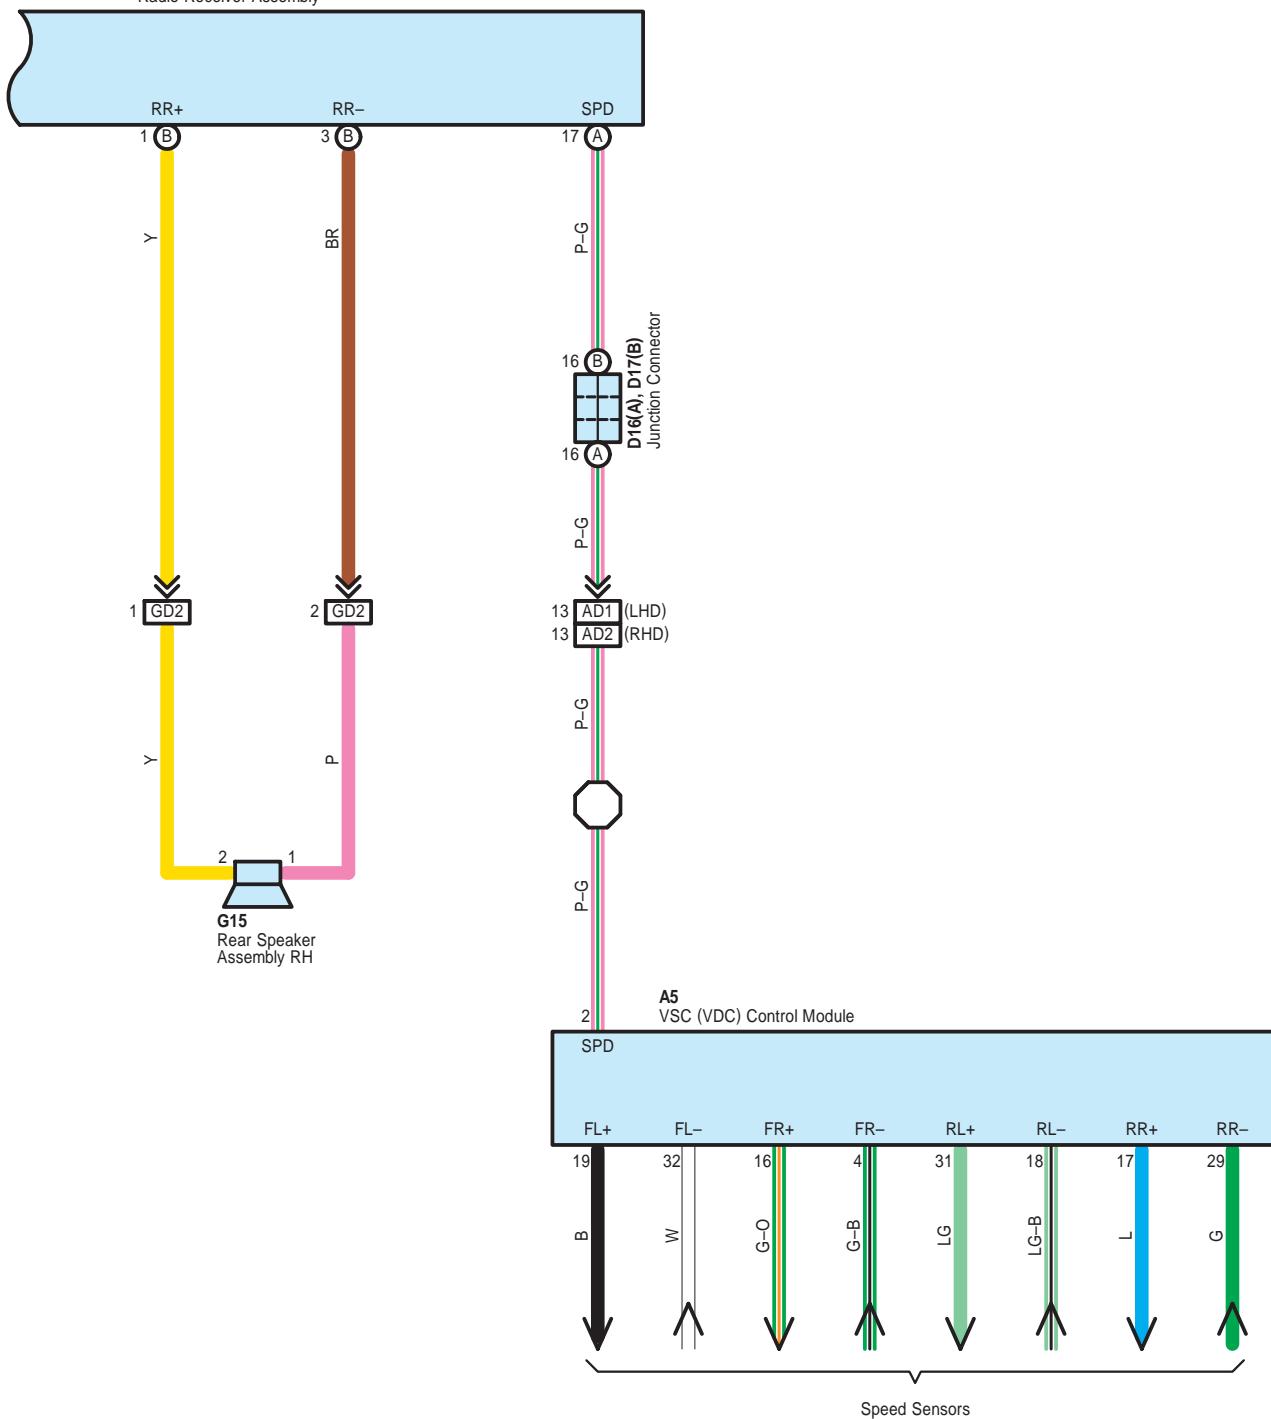

Audio System

: Parts Location

Code		See Page		Code		See Page		Code		See Page		
A5		39 (LHD)		D17	B	40 (LHD)		F9	44 (LHD)	44 (LHD)		
		47 (RHD)				48 (RHD)				52 (RHD)		
D12	A	40 (LHD)		D39		40 (LHD)		G15	44 (LHD)	44 (LHD)		
		48 (RHD)				48 (RHD)				52 (RHD)		
D13	B	40 (LHD)		D46	A	41 (LHD)		H24	45 (LHD)	45 (LHD)		
		48 (RHD)				49 (RHD)				53 (RHD)		
D14	C	40 (LHD)		D66		41 (LHD)		a1	42 (LHD)	42 (LHD)		
		48 (RHD)				49 (RHD)				50 (RHD)		
D16	A	40 (LHD)		E6		44 (LHD)		a2	D	42 (LHD)		
		48 (RHD)				52 (RHD)				50 (RHD)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	
ED1	55 (LHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
FD1	55 (LHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
GD2	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	
aD1	55 (LHD)	Instrument Panel Wire Assembly and Instrument Panel Wire (Around A/C Unit)
	59 (RHD)	


: Ground Points

Code	See Page	Ground Points Location
D2	55 (LHD)	Instrument Panel Brace LH
	59 (RHD)	


Combination Meter

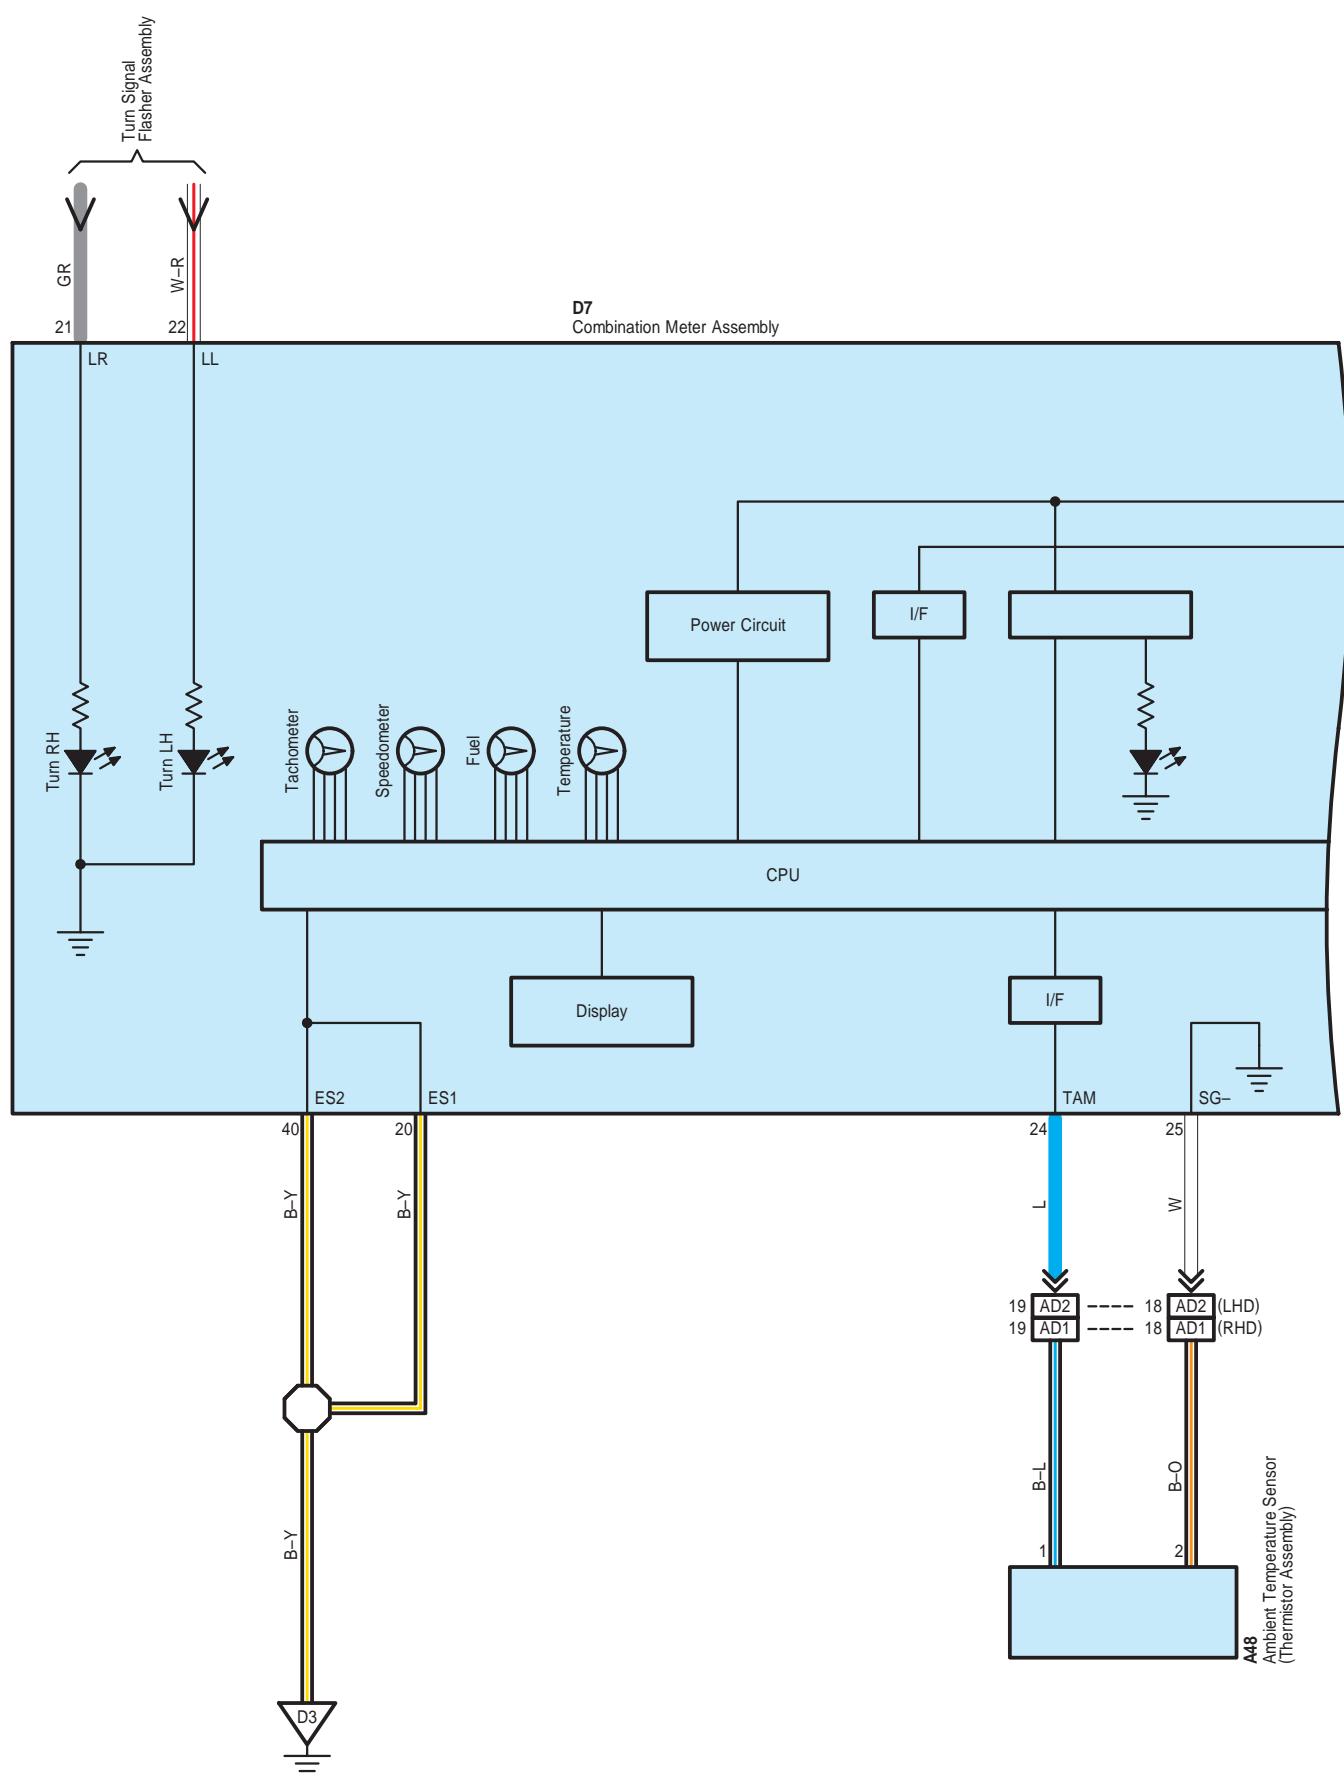


D7
Combination Meter Assembly

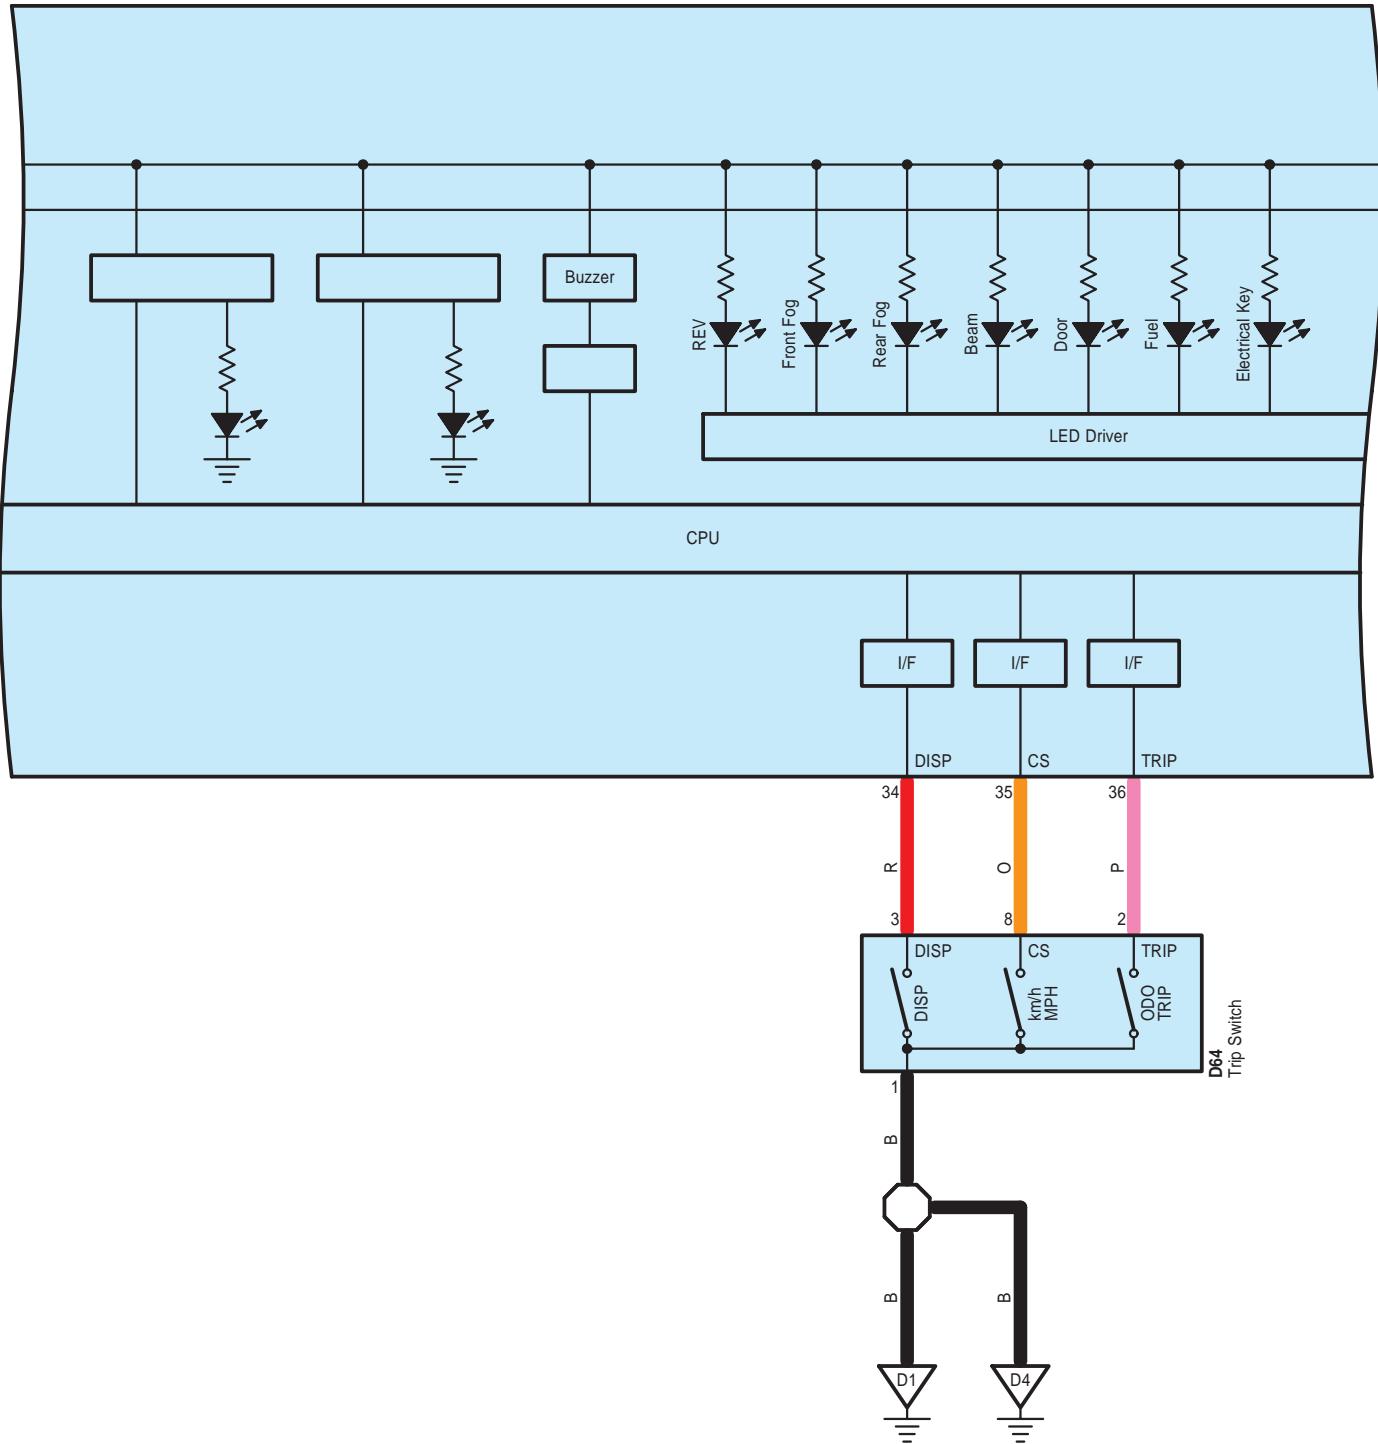


Combination Meter

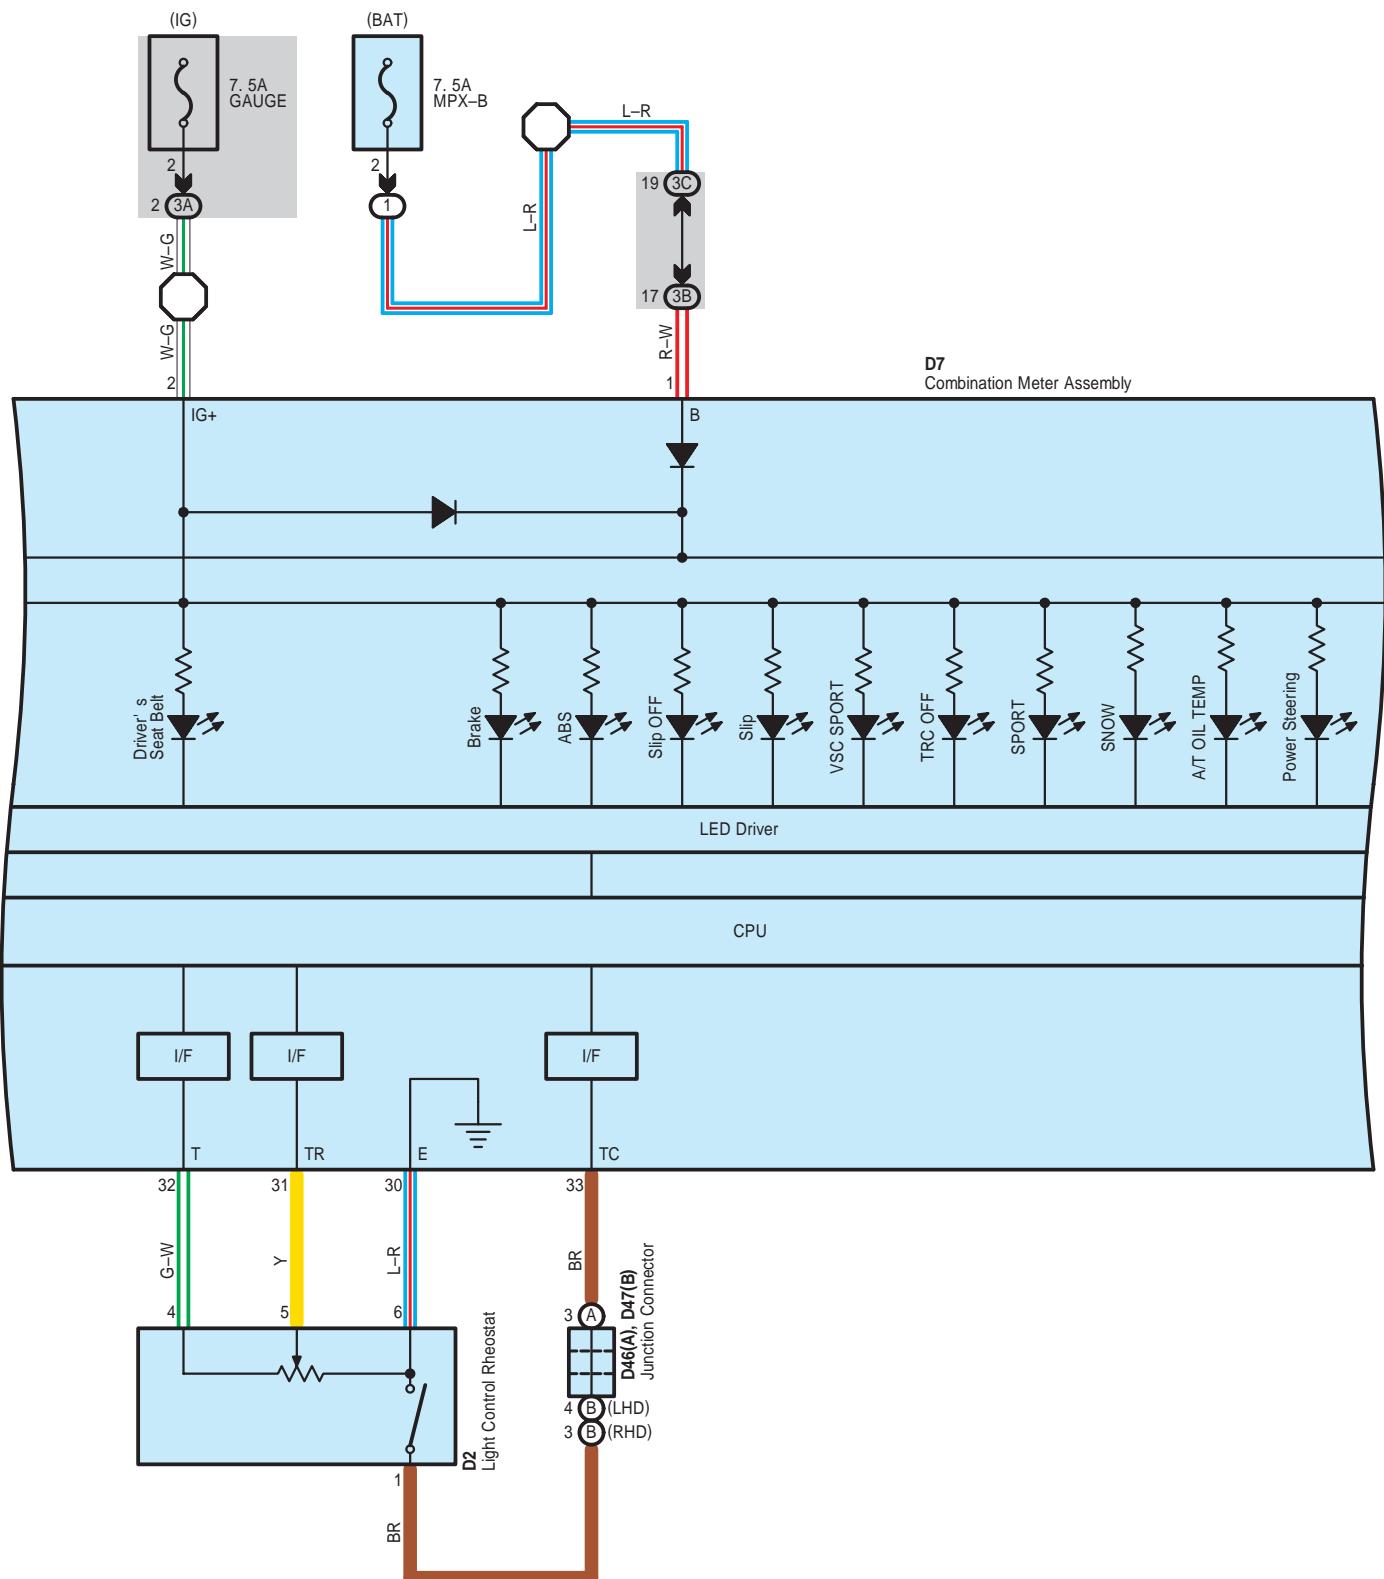


D7
Combination Meter Assembly

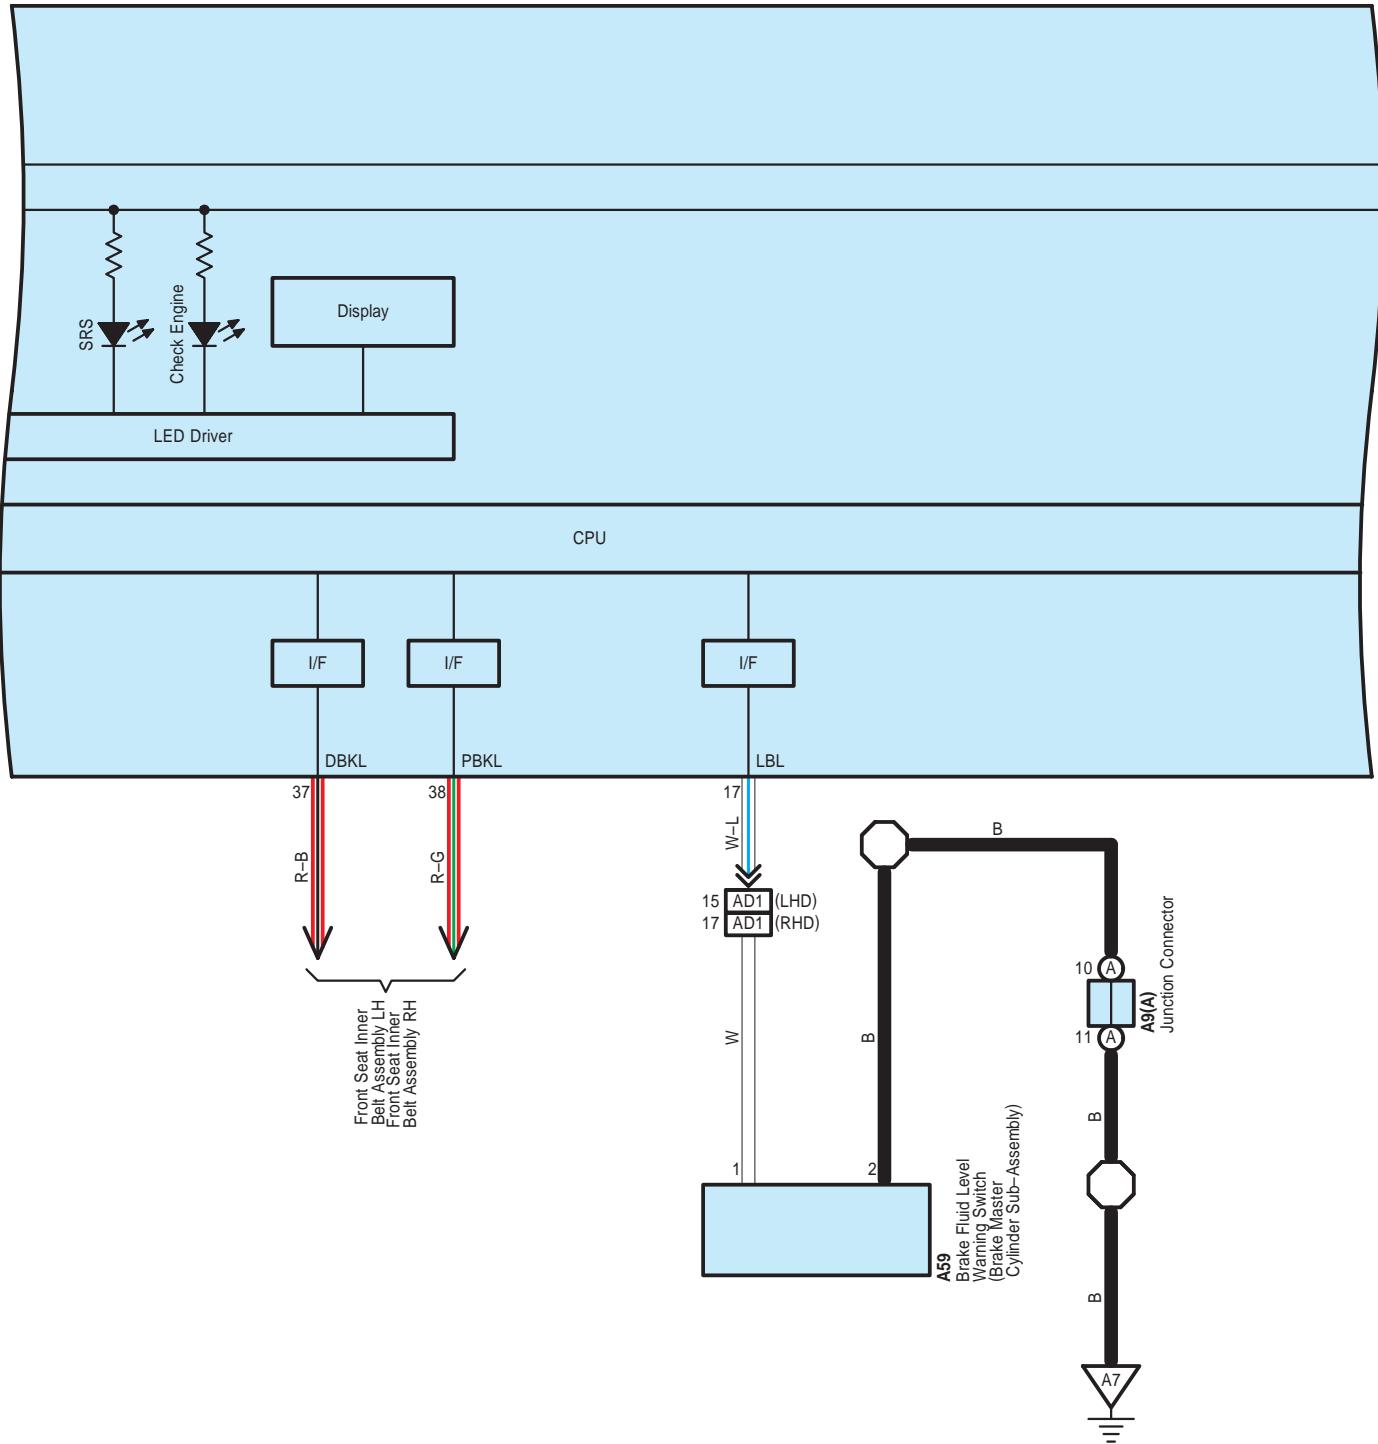


Combination Meter

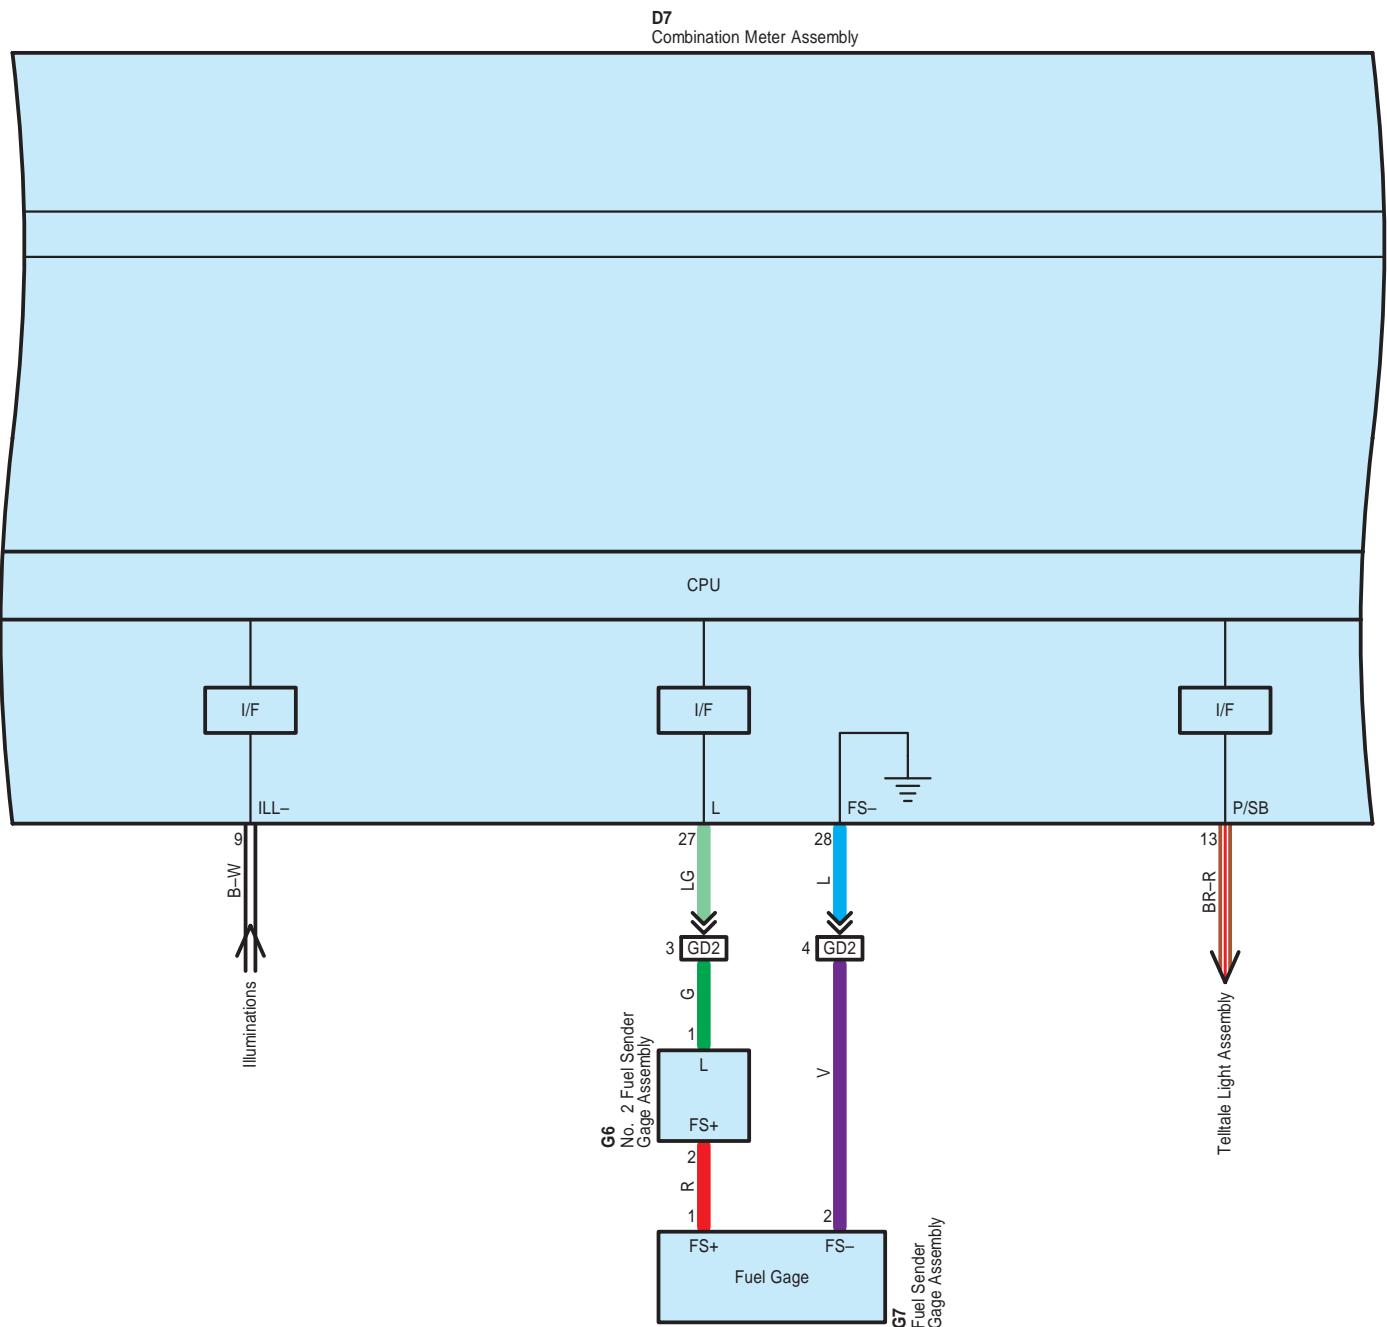


D7
Combination Meter Assembly

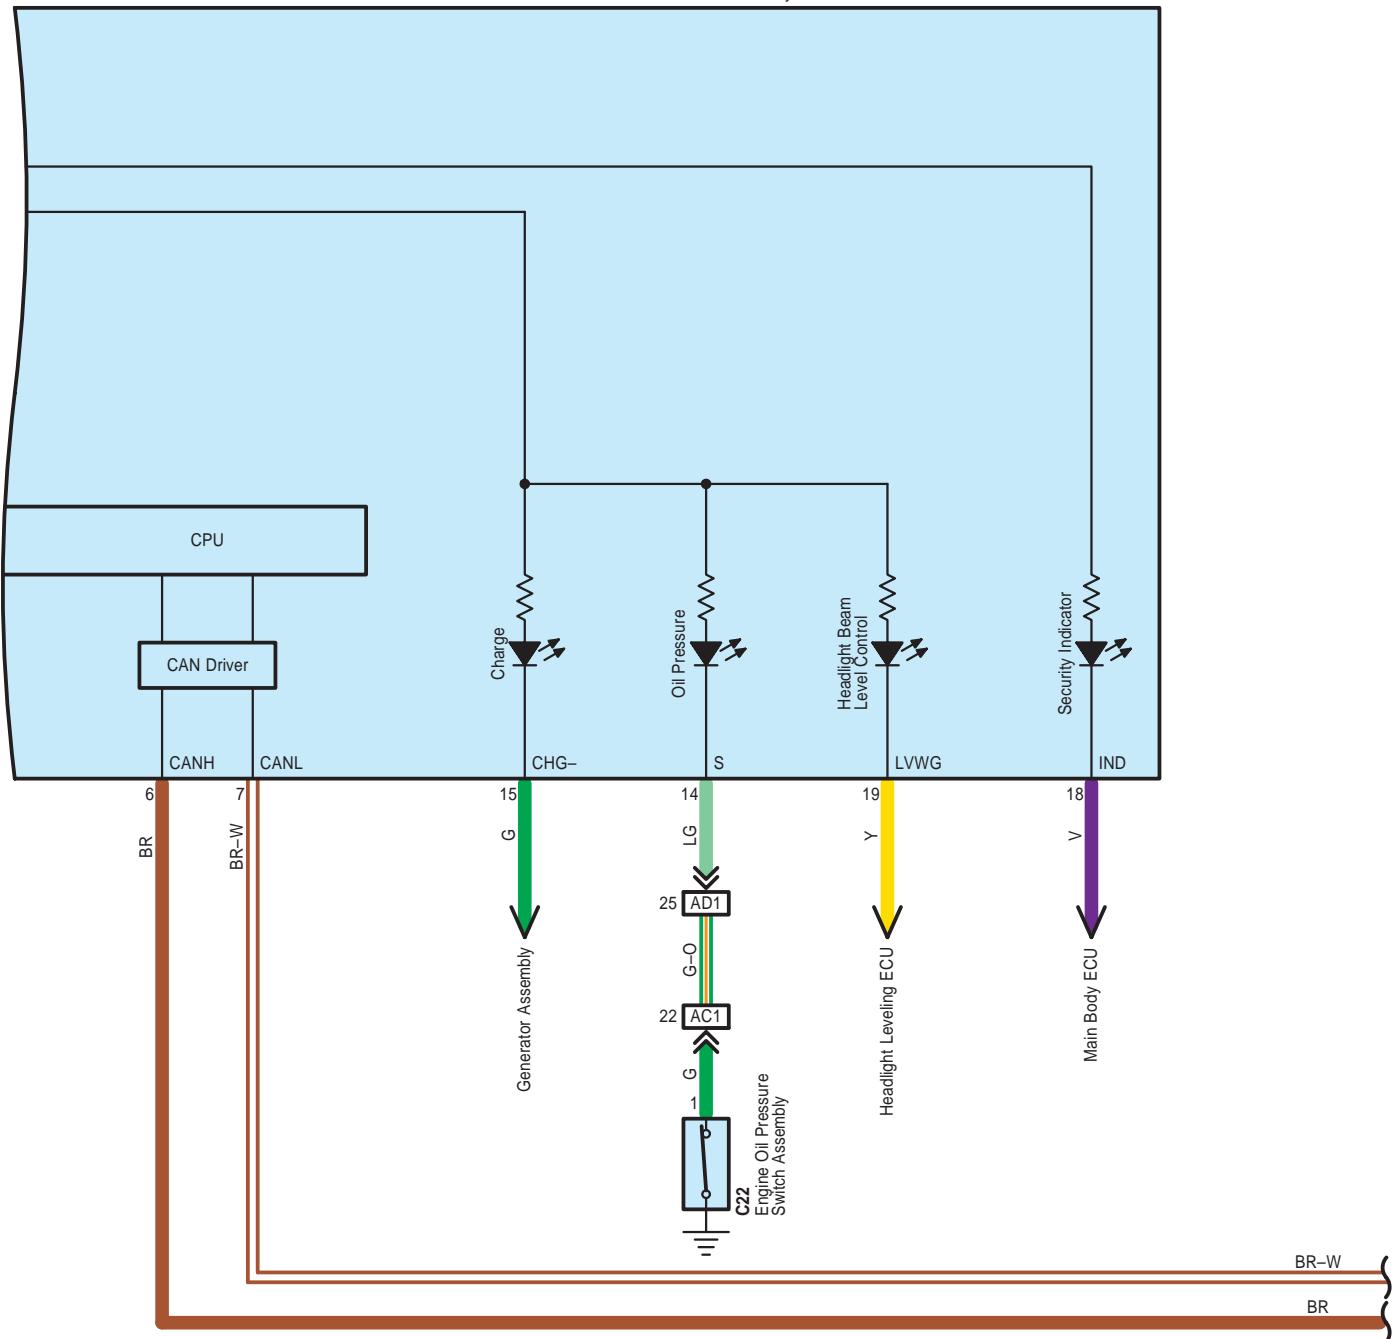


Combination Meter

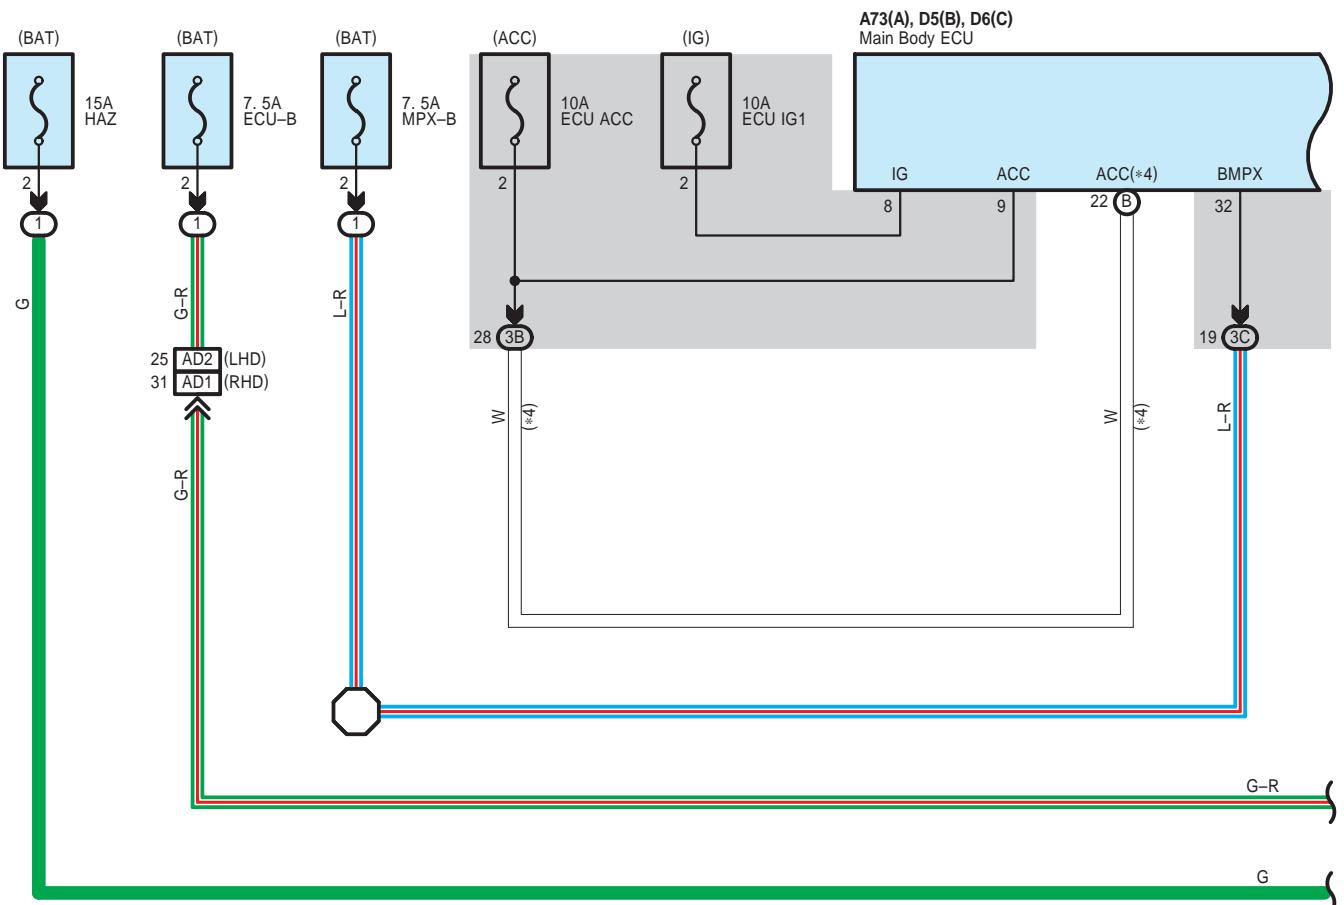


A73(A), D5(B), D6(C)
Main Body ECU

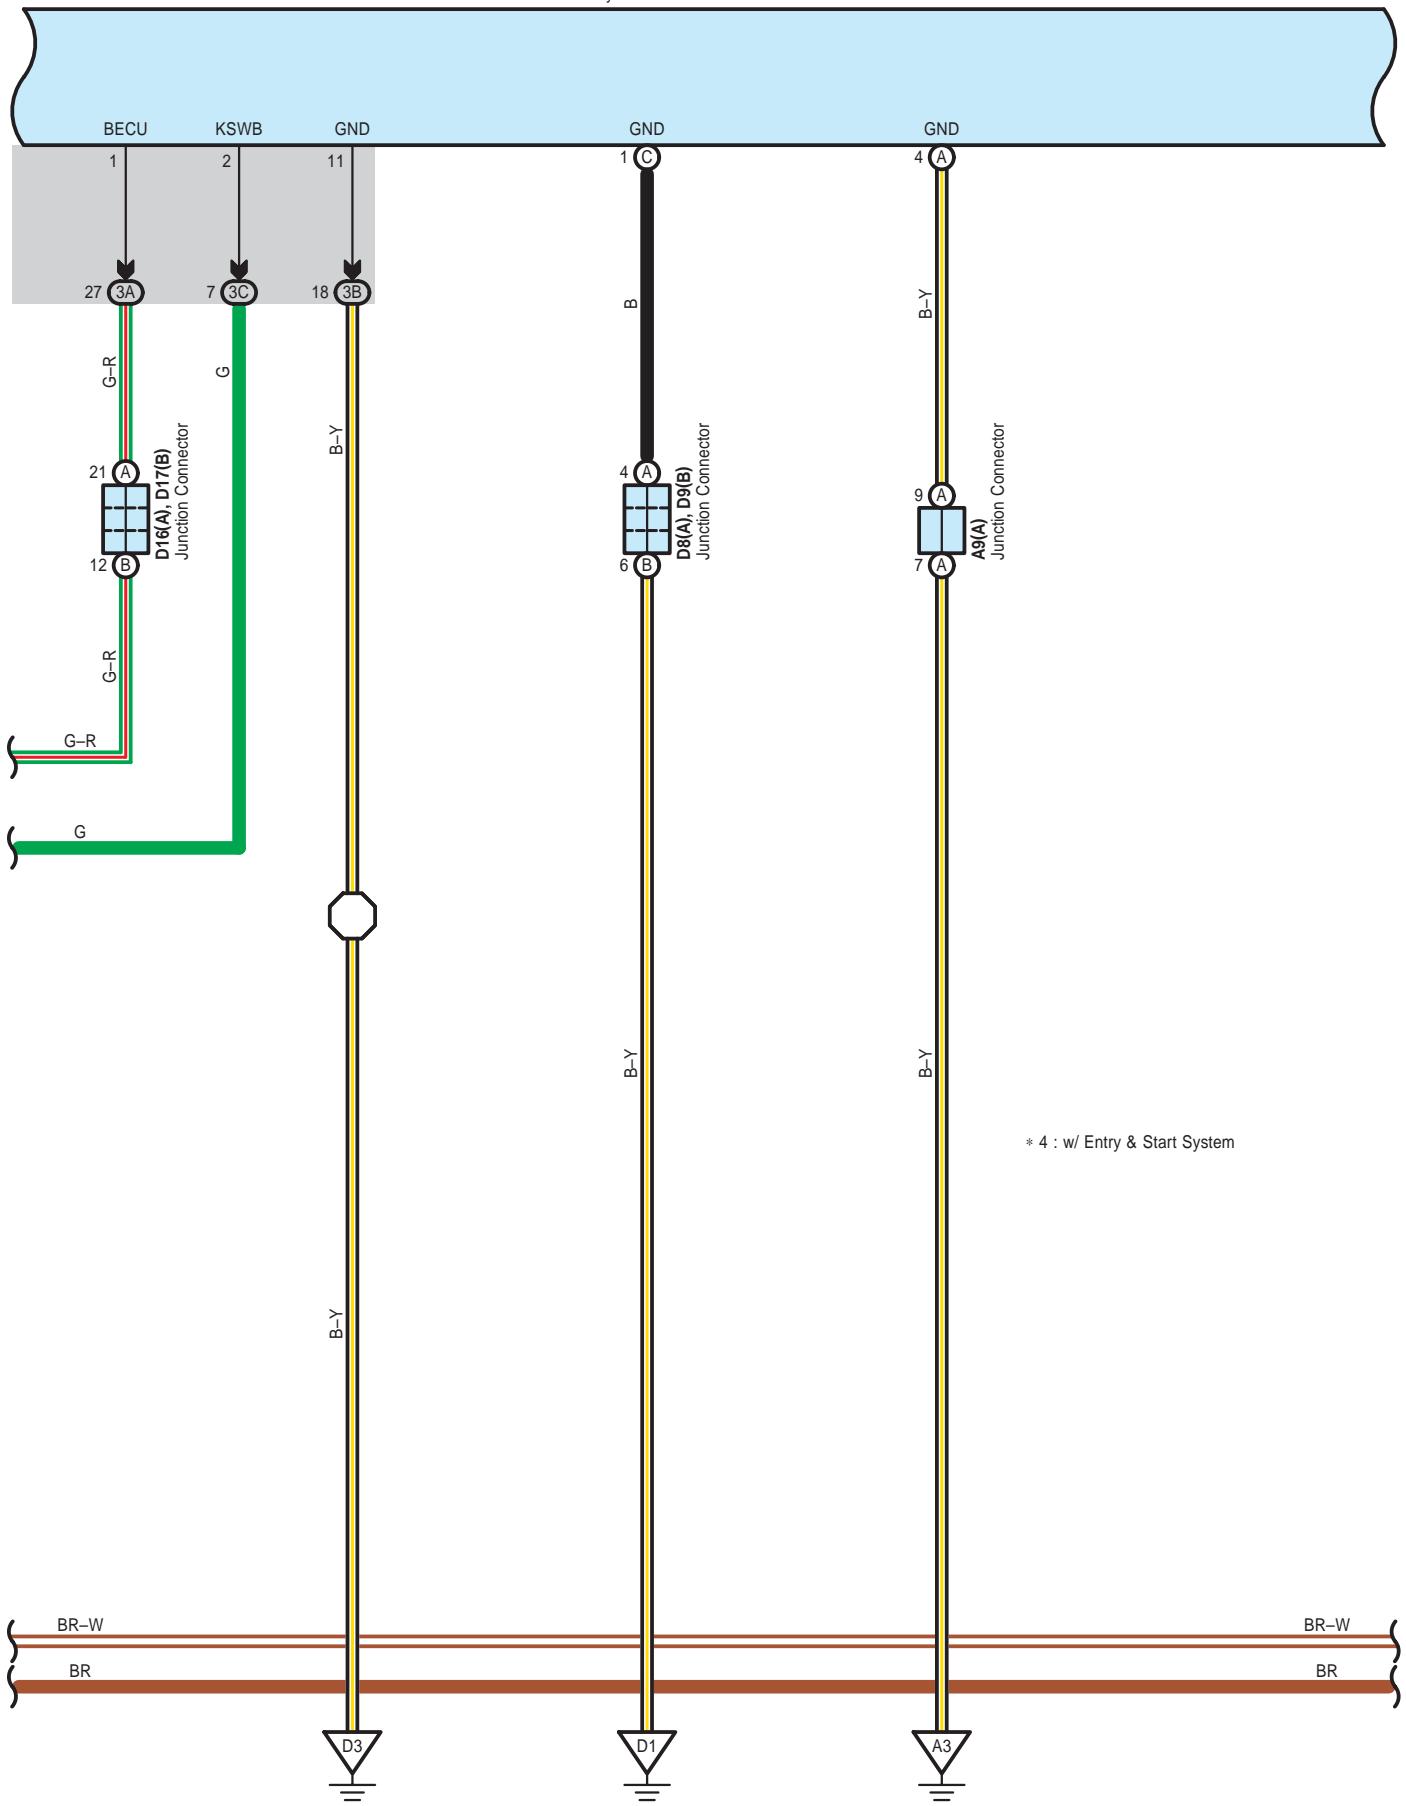


Combination Meter

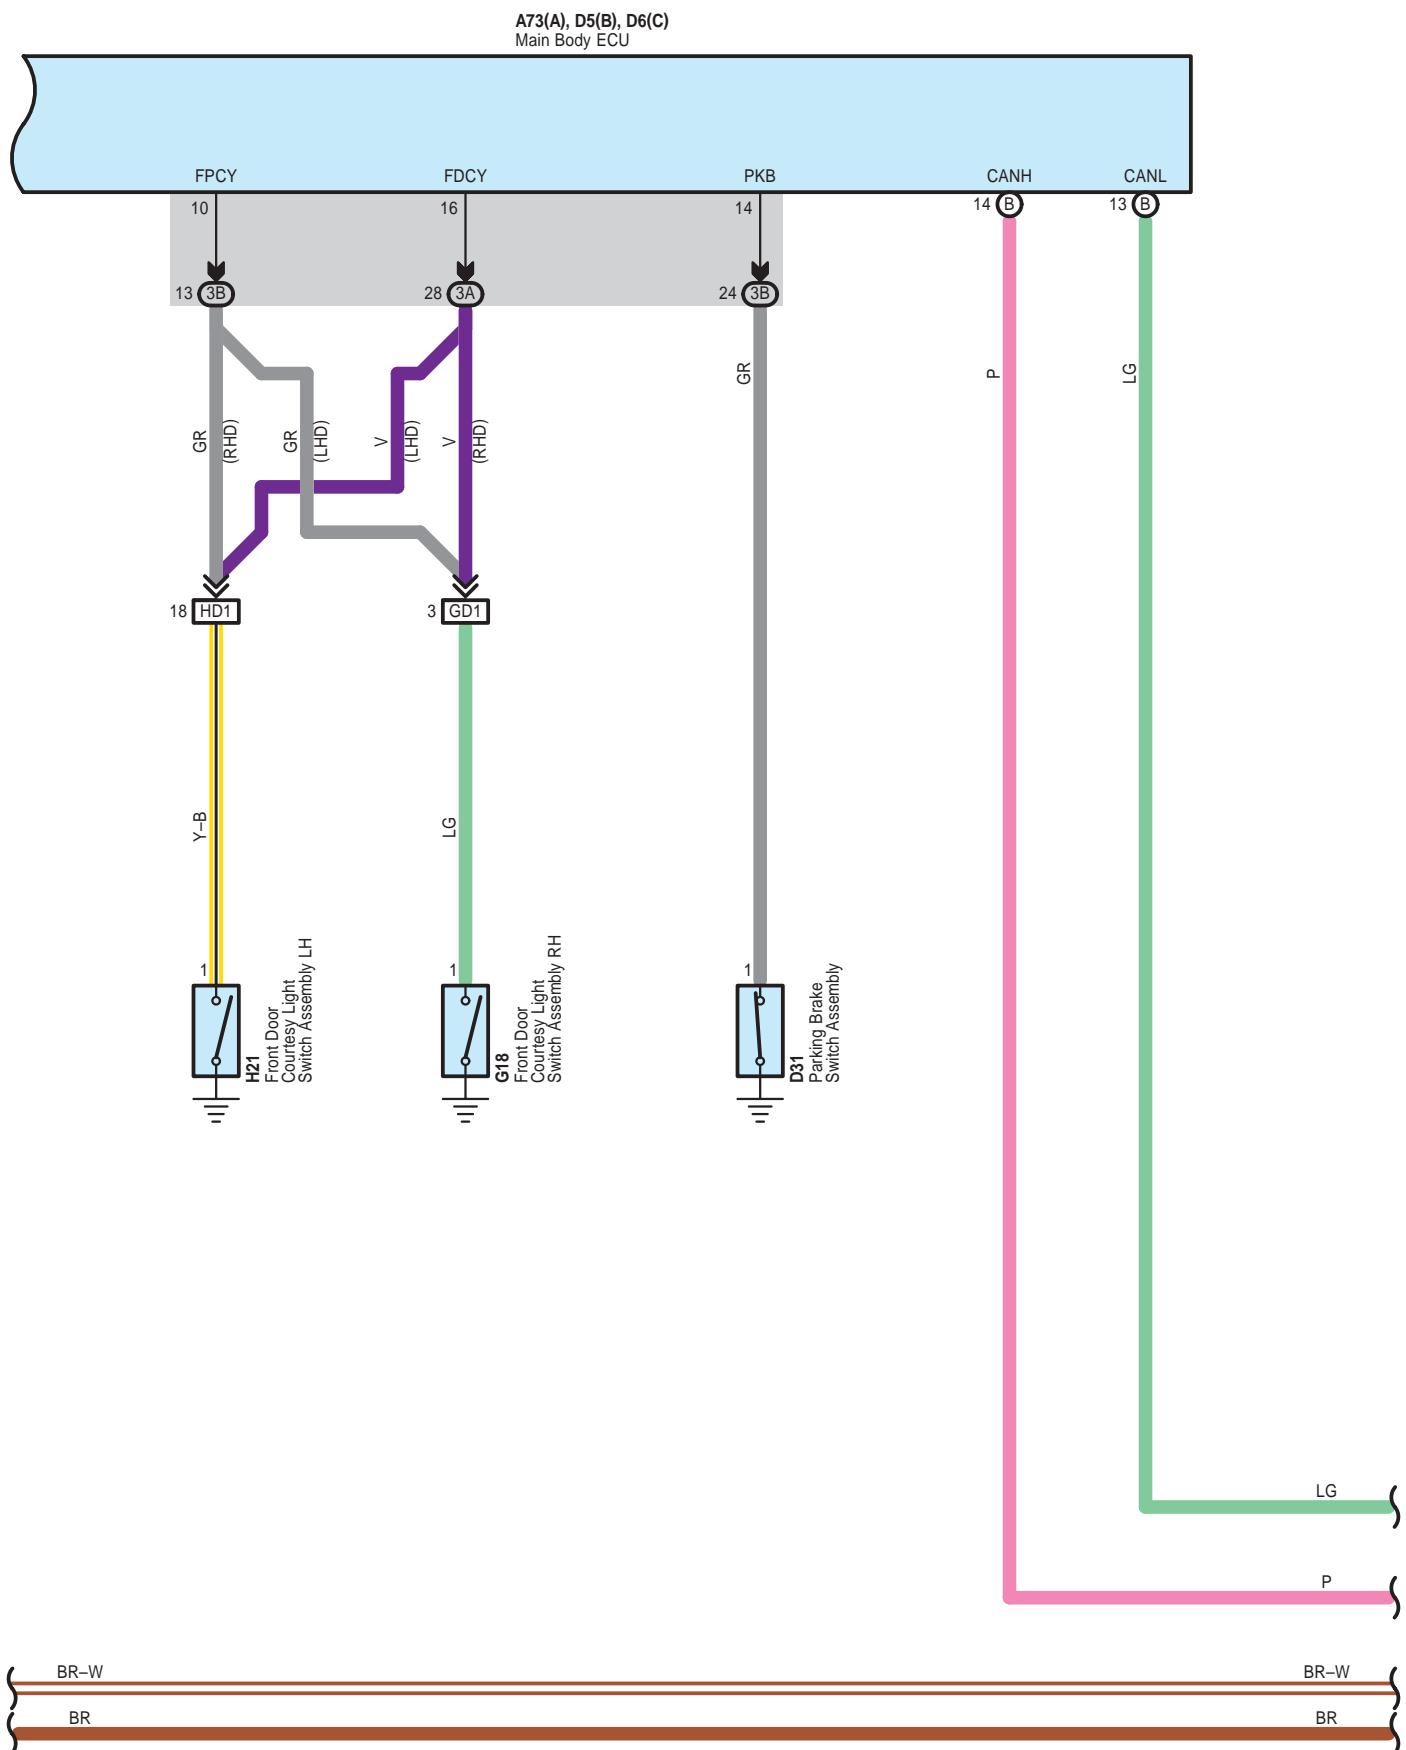


D43
Junction Connector

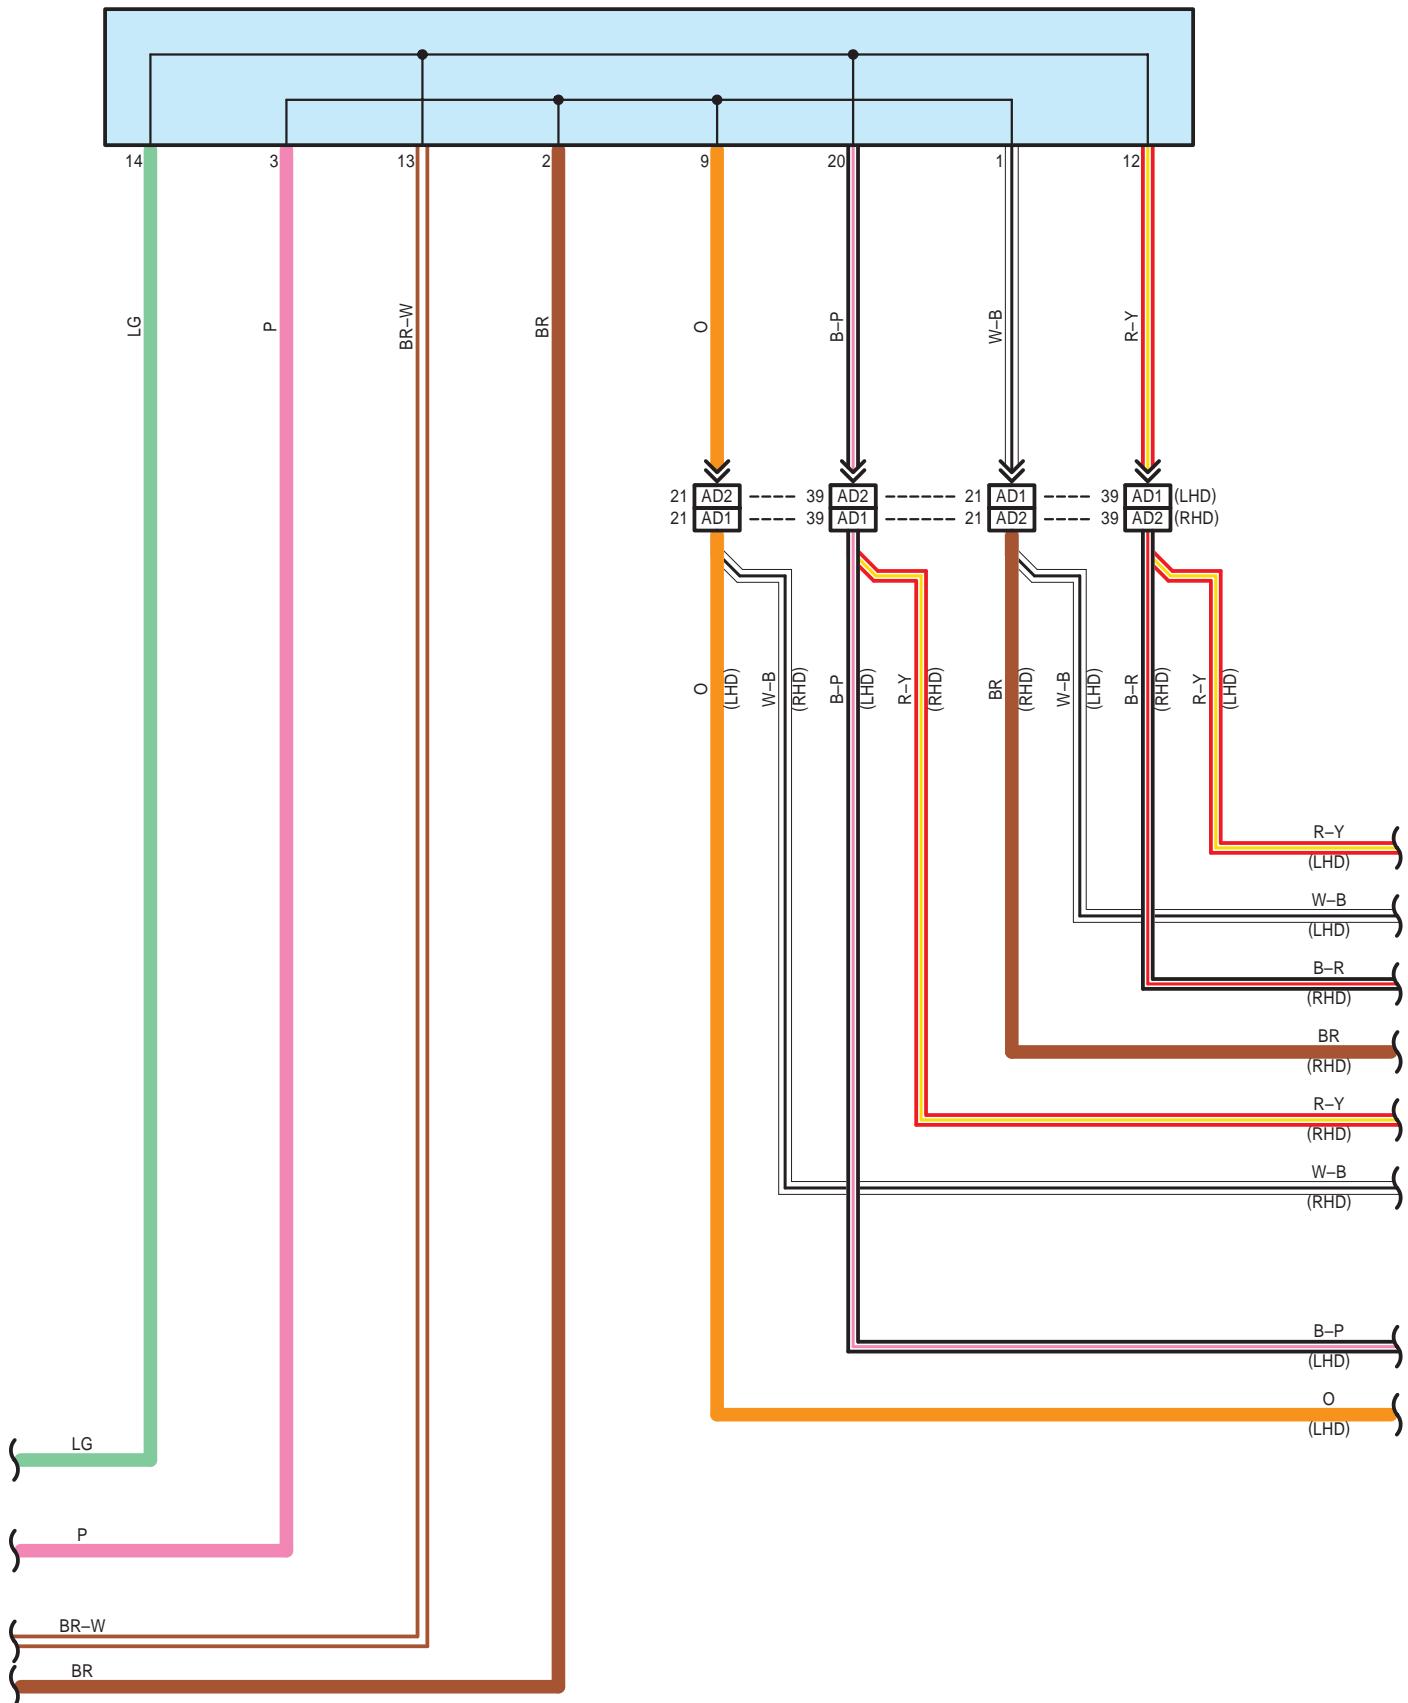

Combination Meter

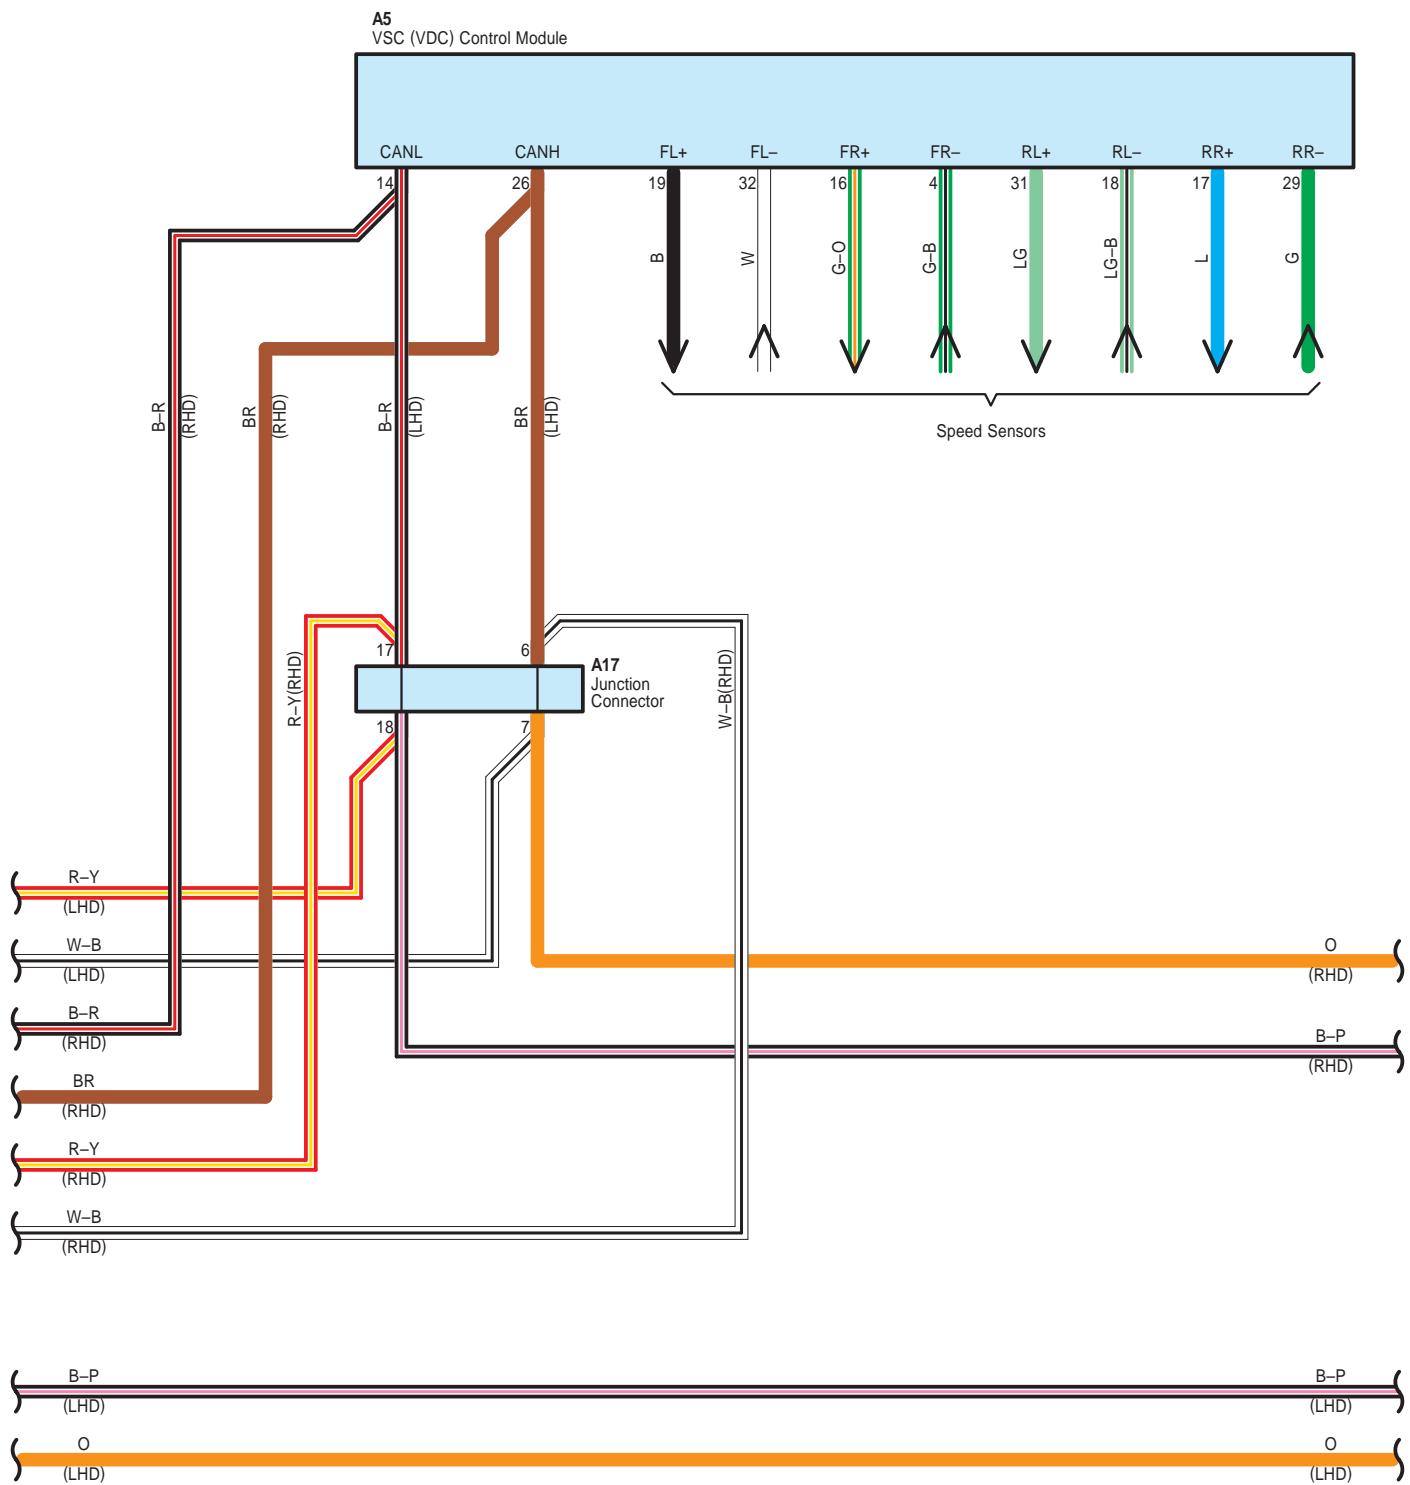

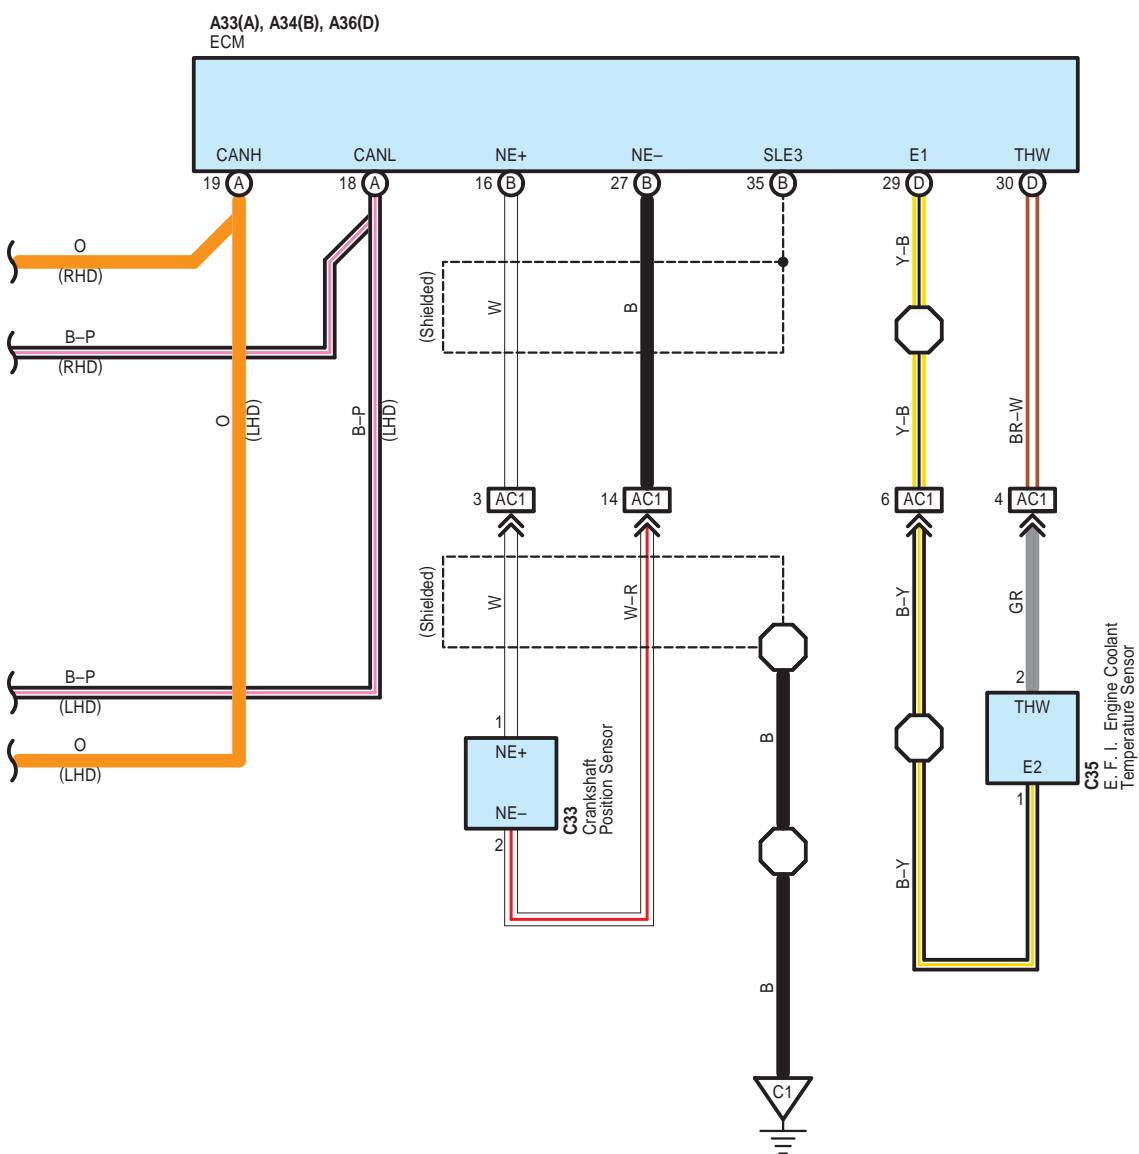

Combination Meter

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page			
A5		39 (LHD)		C33		38 (LHD)		D31		40 (LHD)			
		47 (RHD)				46 (RHD)				48 (RHD)			
A9	A	42 (LHD)		C35		38 (LHD)		D43		41 (LHD)			
		50 (RHD)				46 (RHD)				49 (RHD)			
A17		42 (LHD)		D2		40 (LHD)		D46	A	41 (LHD)			
		50 (RHD)				48 (RHD)				49 (RHD)			
A33	A	42 (LHD)		D5	B	40 (LHD)		D47	B	41 (LHD)			
		50 (RHD)				48 (RHD)				49 (RHD)			
A34	B	42 (LHD)		D6	C	40 (LHD)		D64		41 (LHD)			
		50 (RHD)				48 (RHD)				49 (RHD)			
A36	D	42 (LHD)		D7		40 (LHD)		G6		44 (LHD)			
		50 (RHD)				48 (RHD)				52 (RHD)			
A48		39 (LHD)		D8	A	40 (LHD)		G7		44 (LHD)			
		47 (RHD)				48 (RHD)				52 (RHD)			
A59		39 (LHD)		D9	B	40 (LHD)		G18		44 (LHD)			
		47 (RHD)				48 (RHD)				52 (RHD)			
A73	A	42 (LHD)		D16	A	40 (LHD)		H21		45 (LHD)			
		50 (RHD)				48 (RHD)				53 (RHD)			
C22		38 (LHD)		D17	B	40 (LHD)							
		46 (RHD)				48 (RHD)							

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
	58 (RHD)	
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	
GD1	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
GD2	55 (LHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
HD1	55 (LHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
	59 (RHD)	

▽ : Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
C1	54 (LHD)	Engine Unit
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	




: Ground Points

Code	See Page	Ground Points Location
D3	55 (LHD)	Instrument Panel Brace RH
	59 (RHD)	Instrument Panel Brace LH
D4	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	Cowl Side Panel LH


Cooling Fan

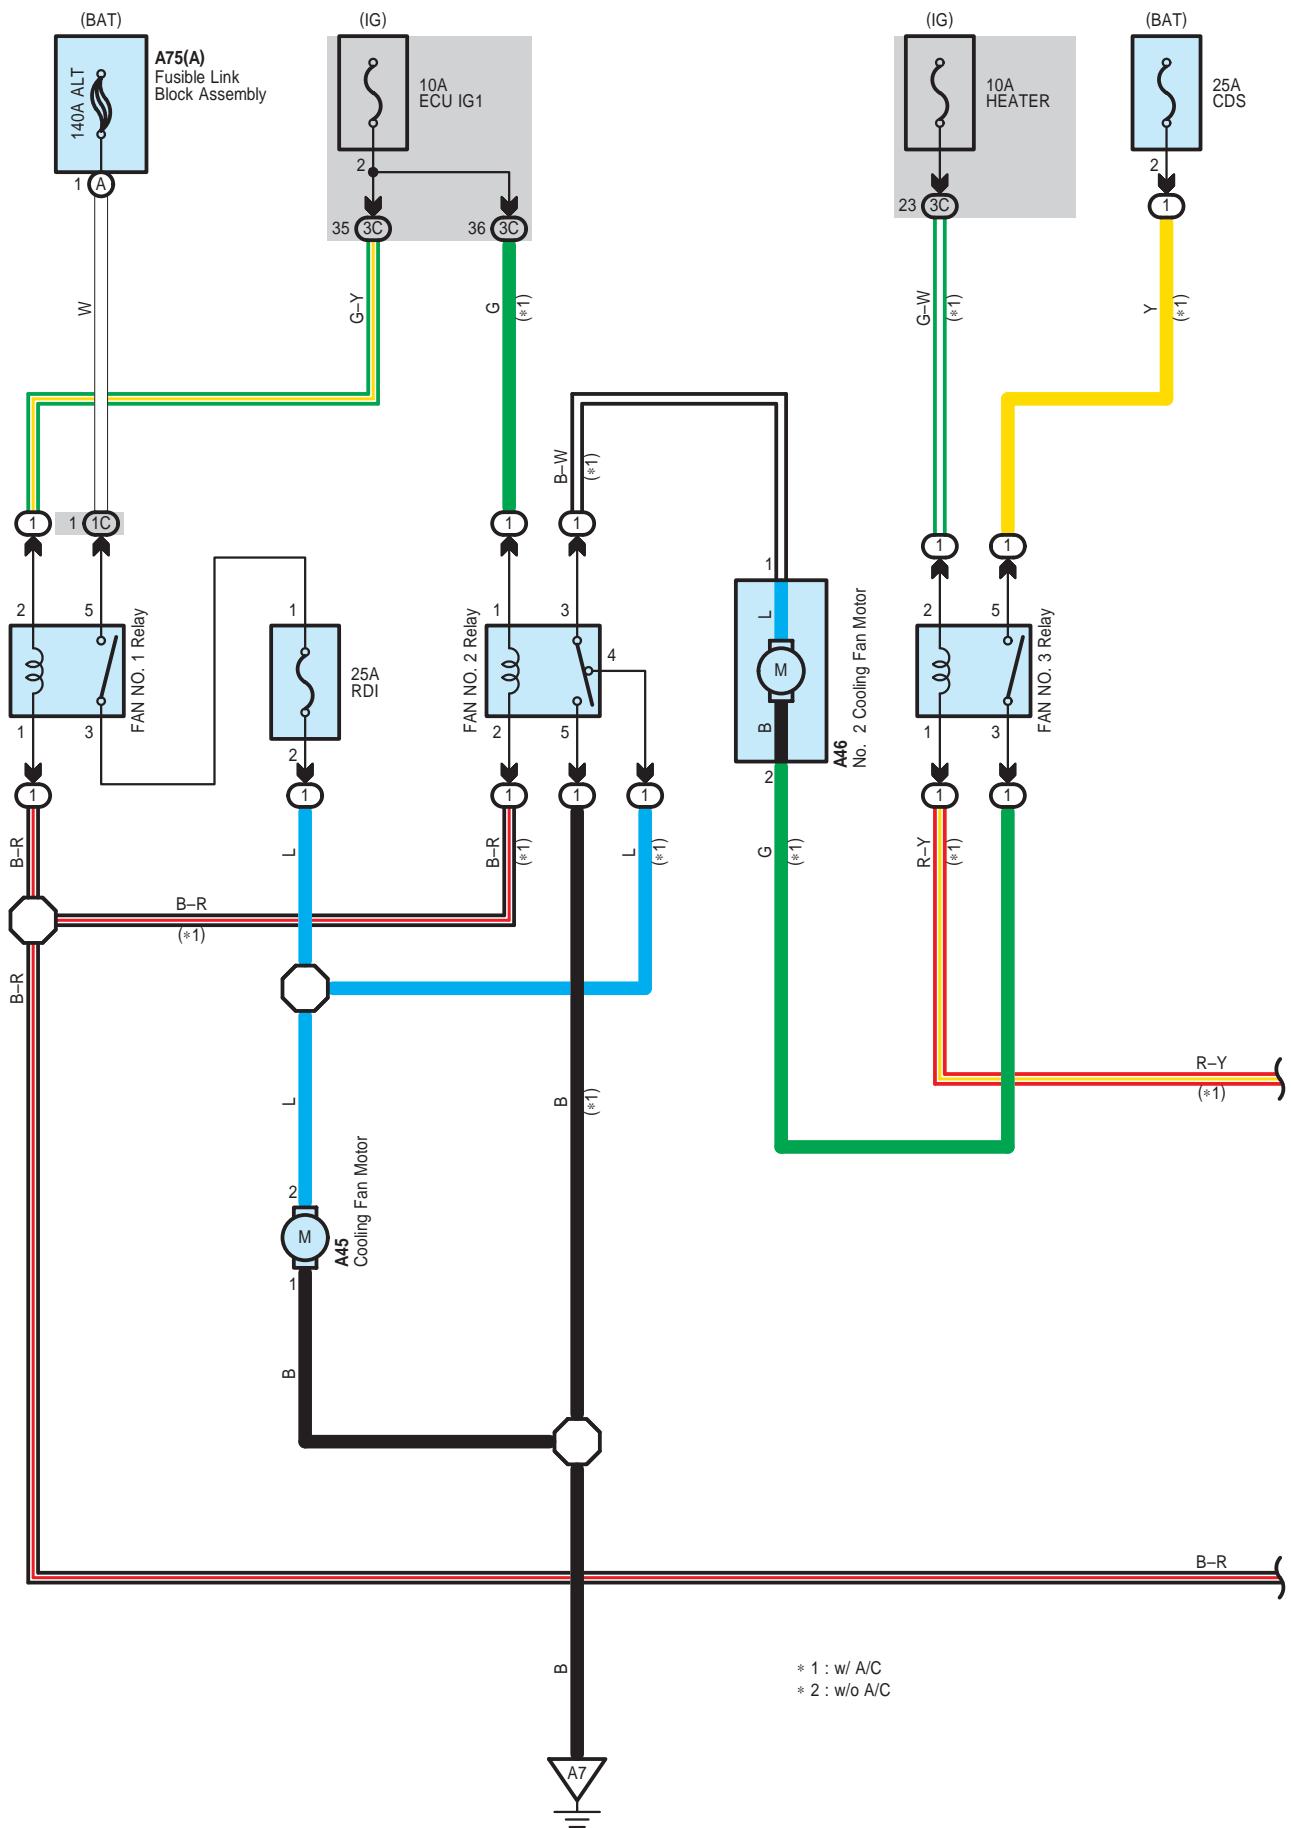

A33(A), A34(B), A35(C), A36(D)
ECM

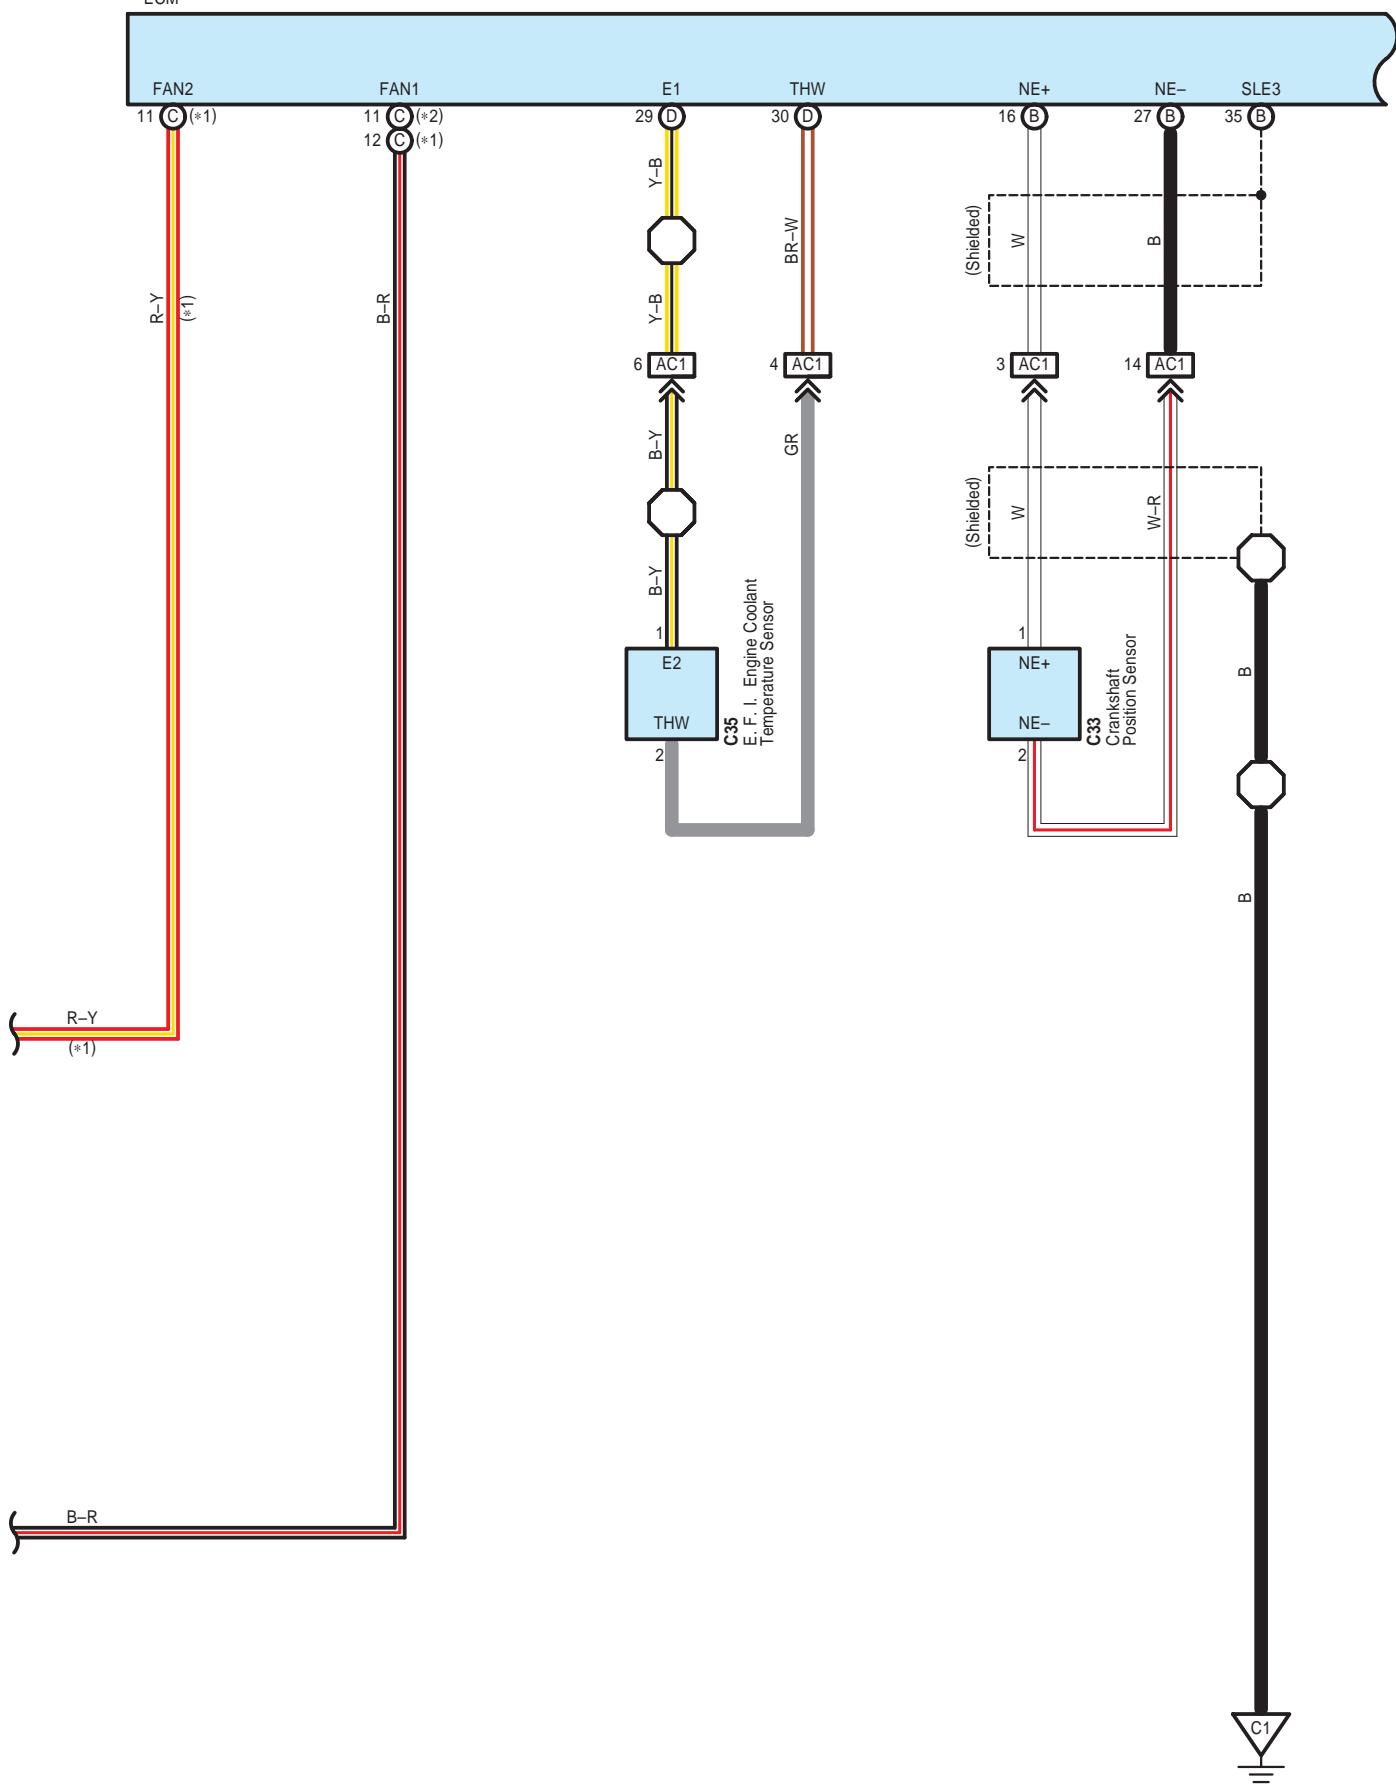

Cooling Fan

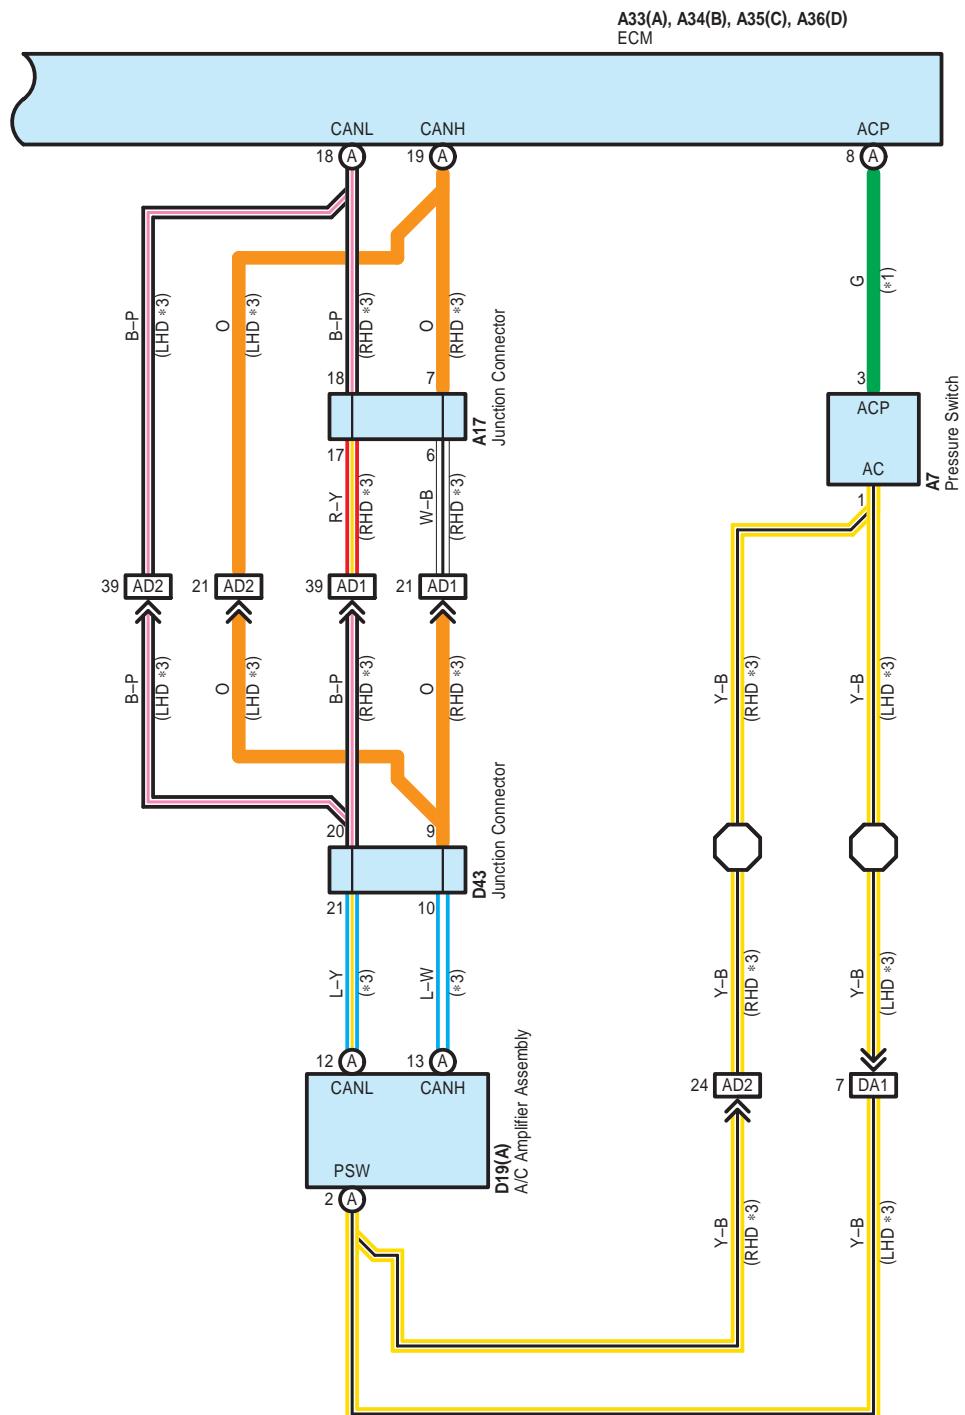

* 1 : w/ A/C
* 3 : Automatic A/C

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A7	39 (LHD)	A36	D	42 (LHD)	C33
	47 (RHD)			50 (RHD)	46 (RHD)
A17	50 (RHD)	A45		39 (LHD)	C35
	42 (LHD)			47 (RHD)	38 (LHD)
A33	50 (RHD)	A46		39 (LHD)	46 (RHD)
	42 (LHD)			47 (RHD)	40 (LHD)
A34	50 (RHD)	A75	A	39 (LHD)	48 (RHD)
	42 (LHD)			47 (RHD)	41 (LHD)
A35	50 (RHD)	C33		38 (LHD)	49 (RHD)
	42 (LHD)				

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Right)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
	58 (RHD)	
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	55 (LHD)	
AD2	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	55 (LHD)	
DA1	55 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Behind Glove Box)


 : Ground Points

Code	See Page	Ground Points Location
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
C1	54 (LHD)	Engine Unit
	58 (RHD)	


Air Conditioner (LHD Automatic A/C)

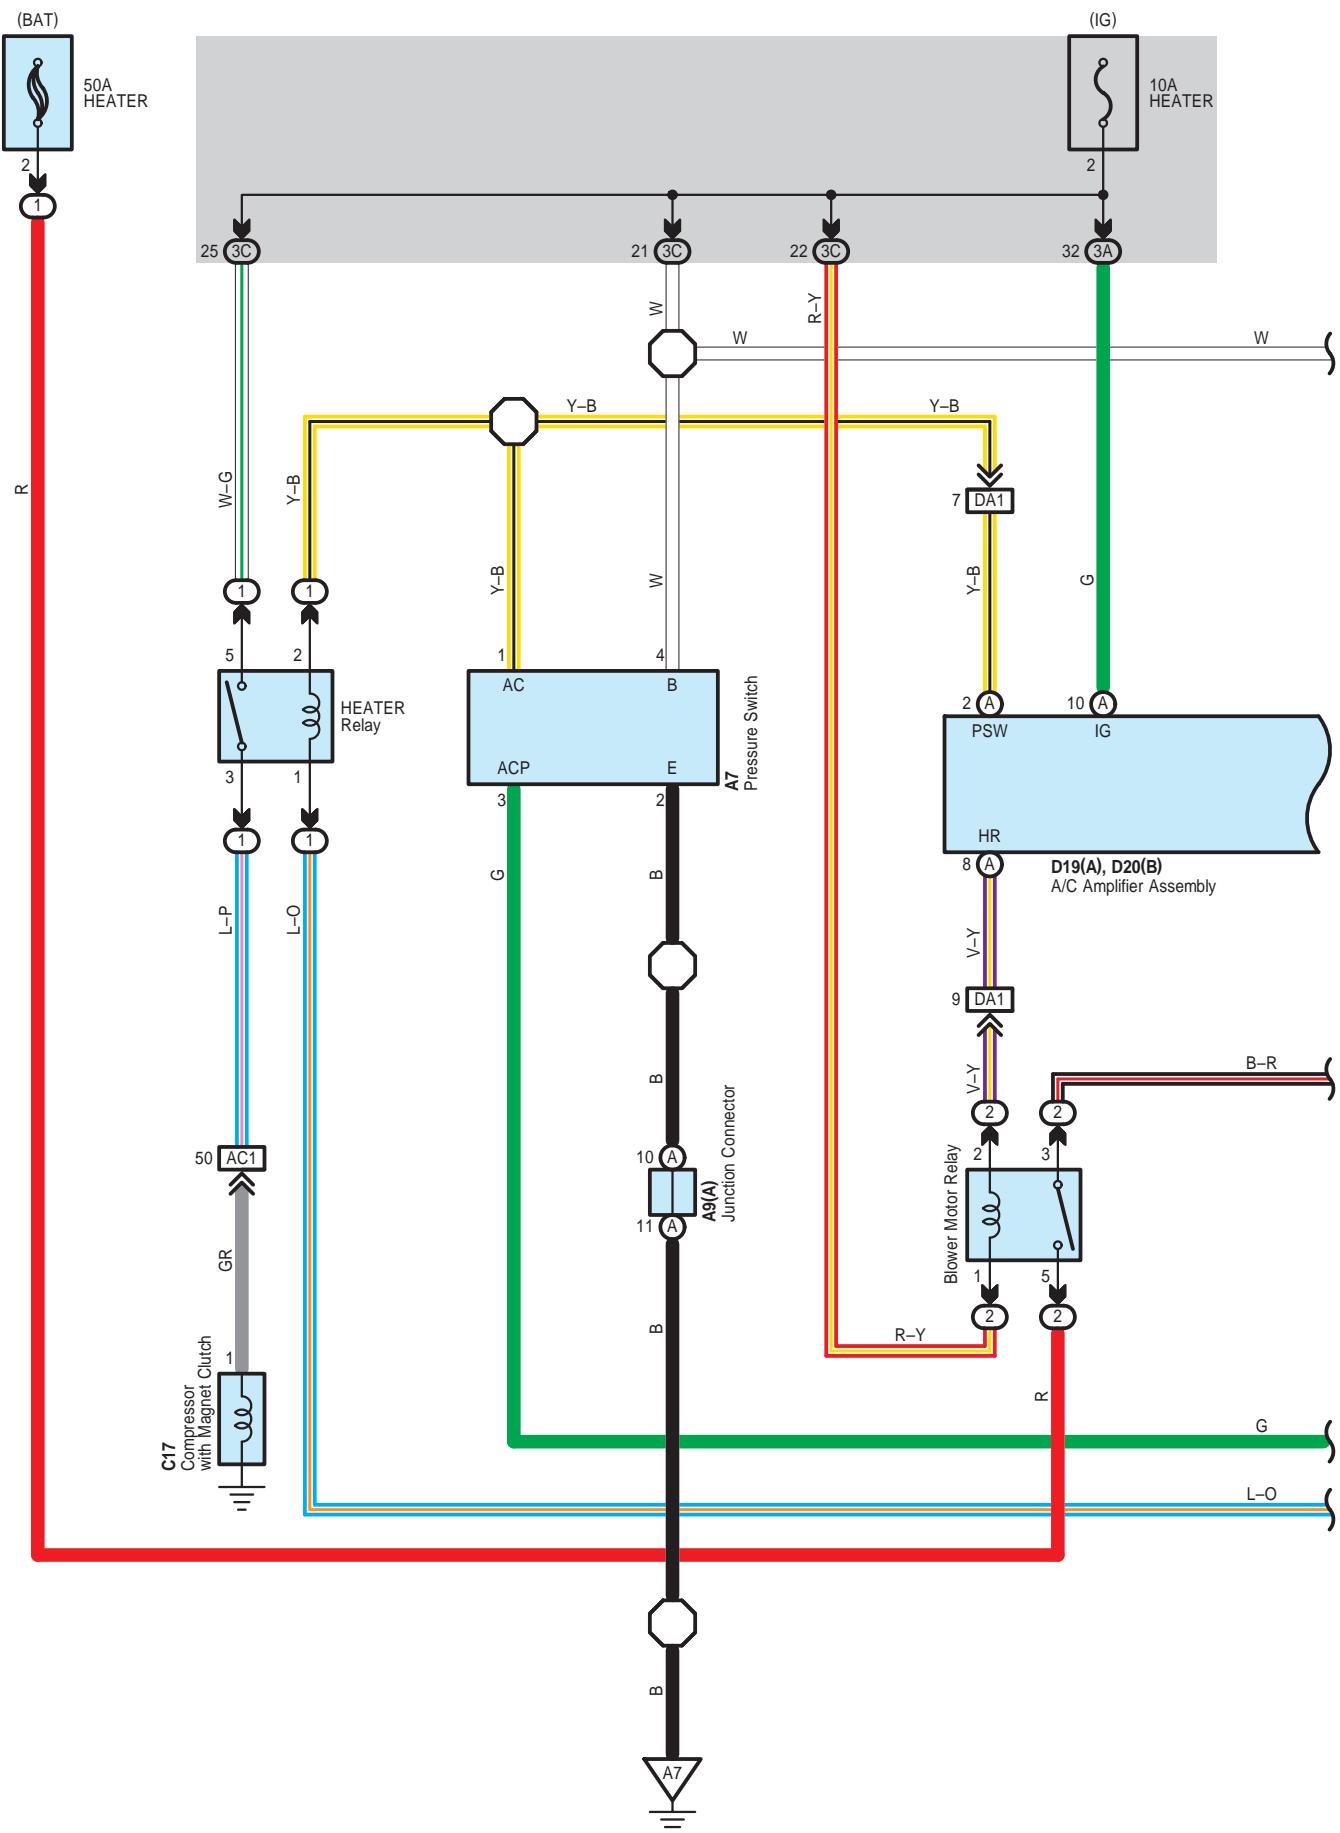


A32
No. 5 A/C Radiator Damper Servo Sub-Assembly

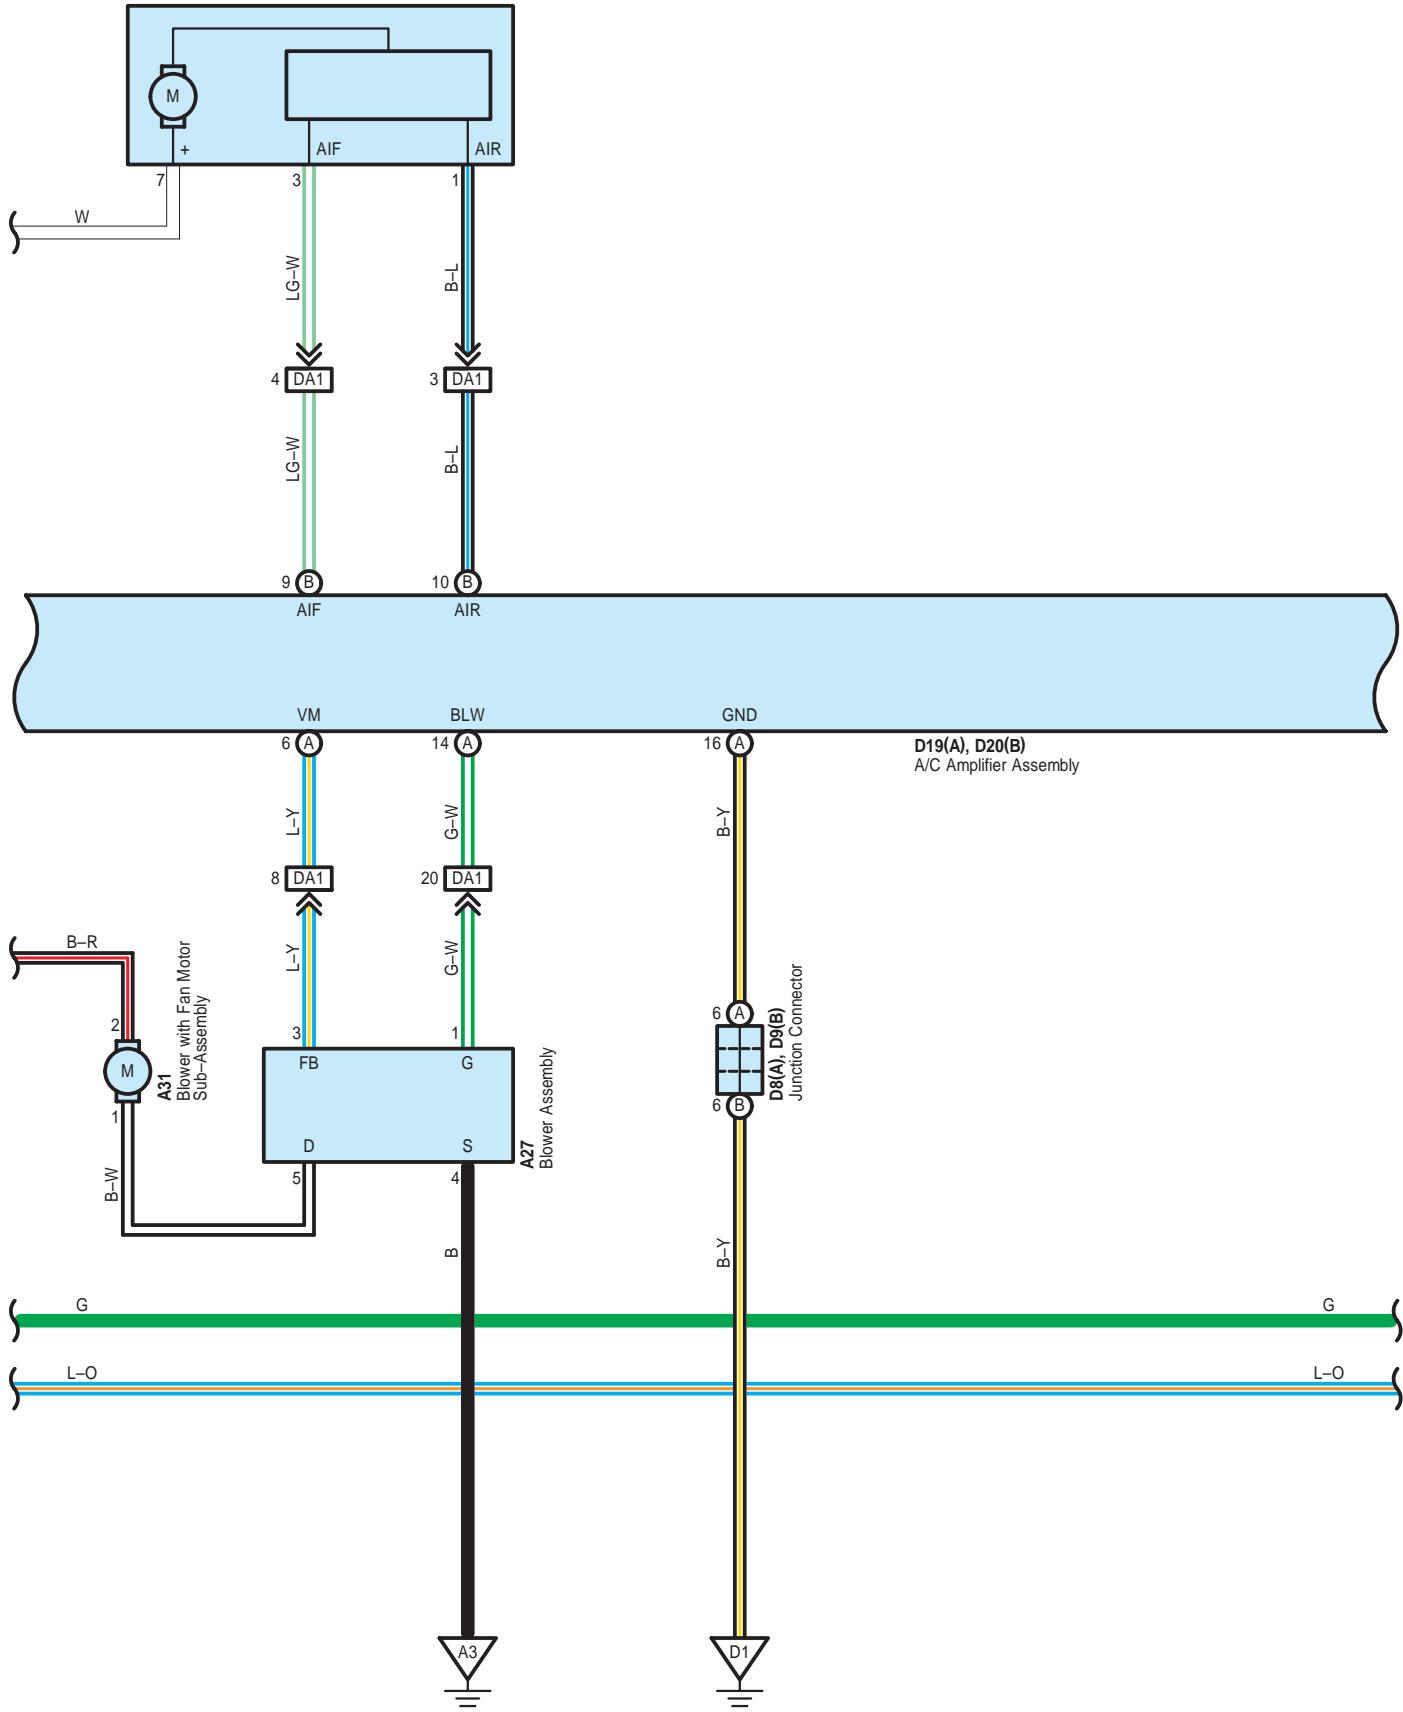



Air Conditioner (LHD Automatic A/C)

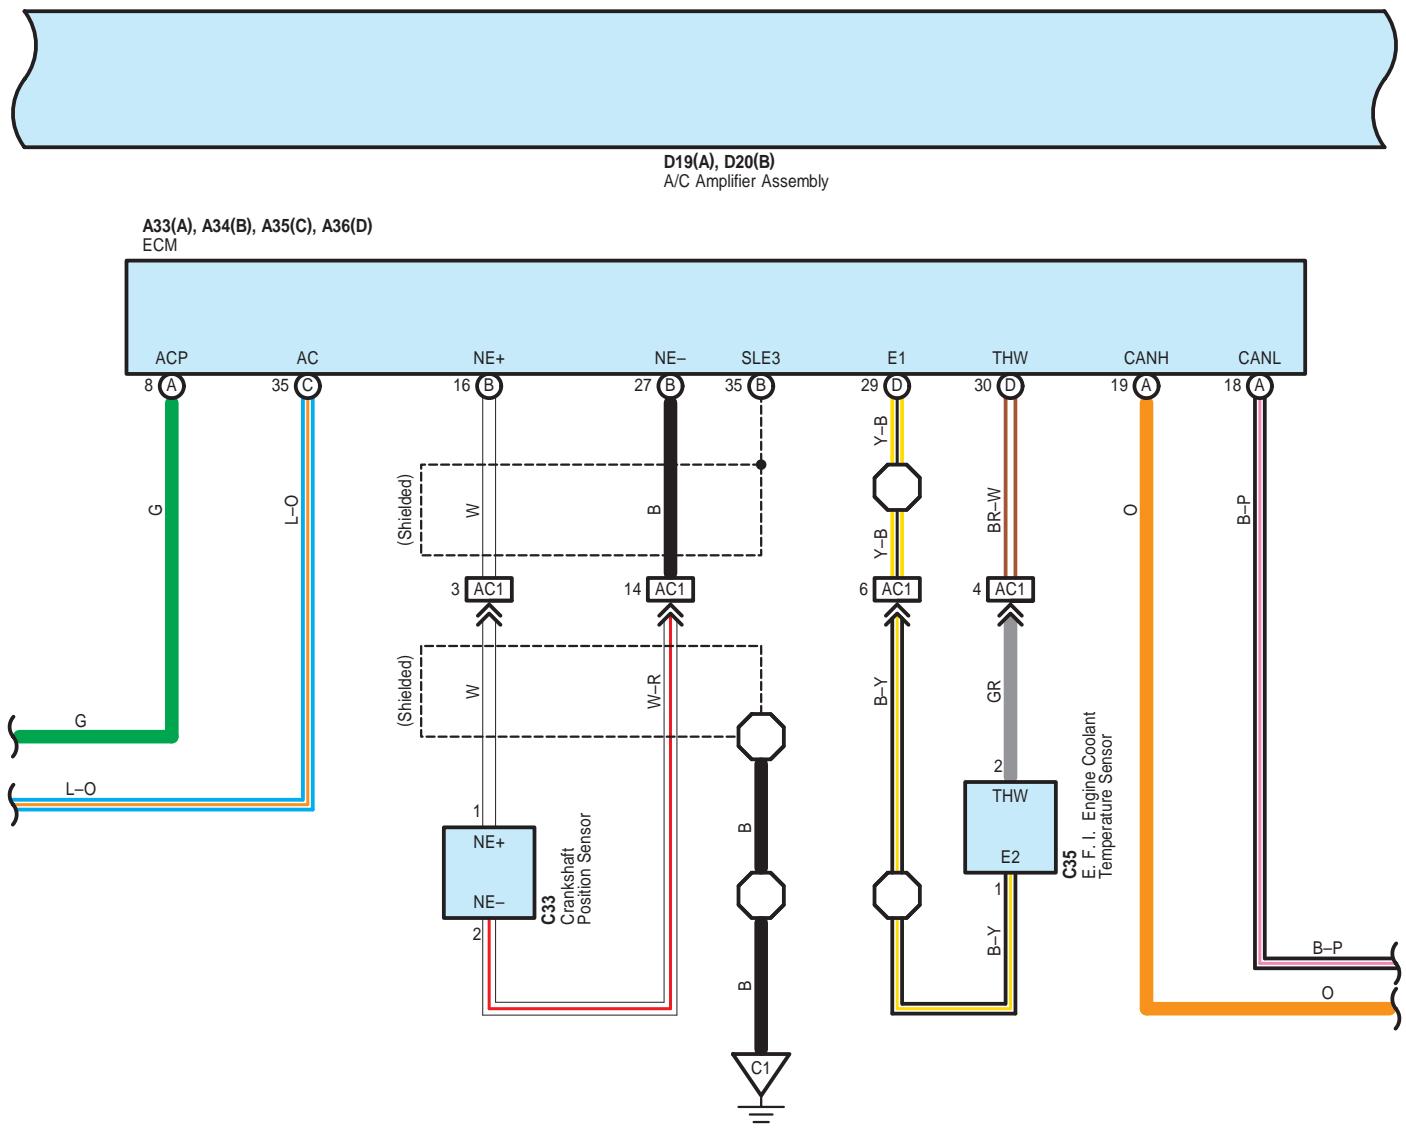

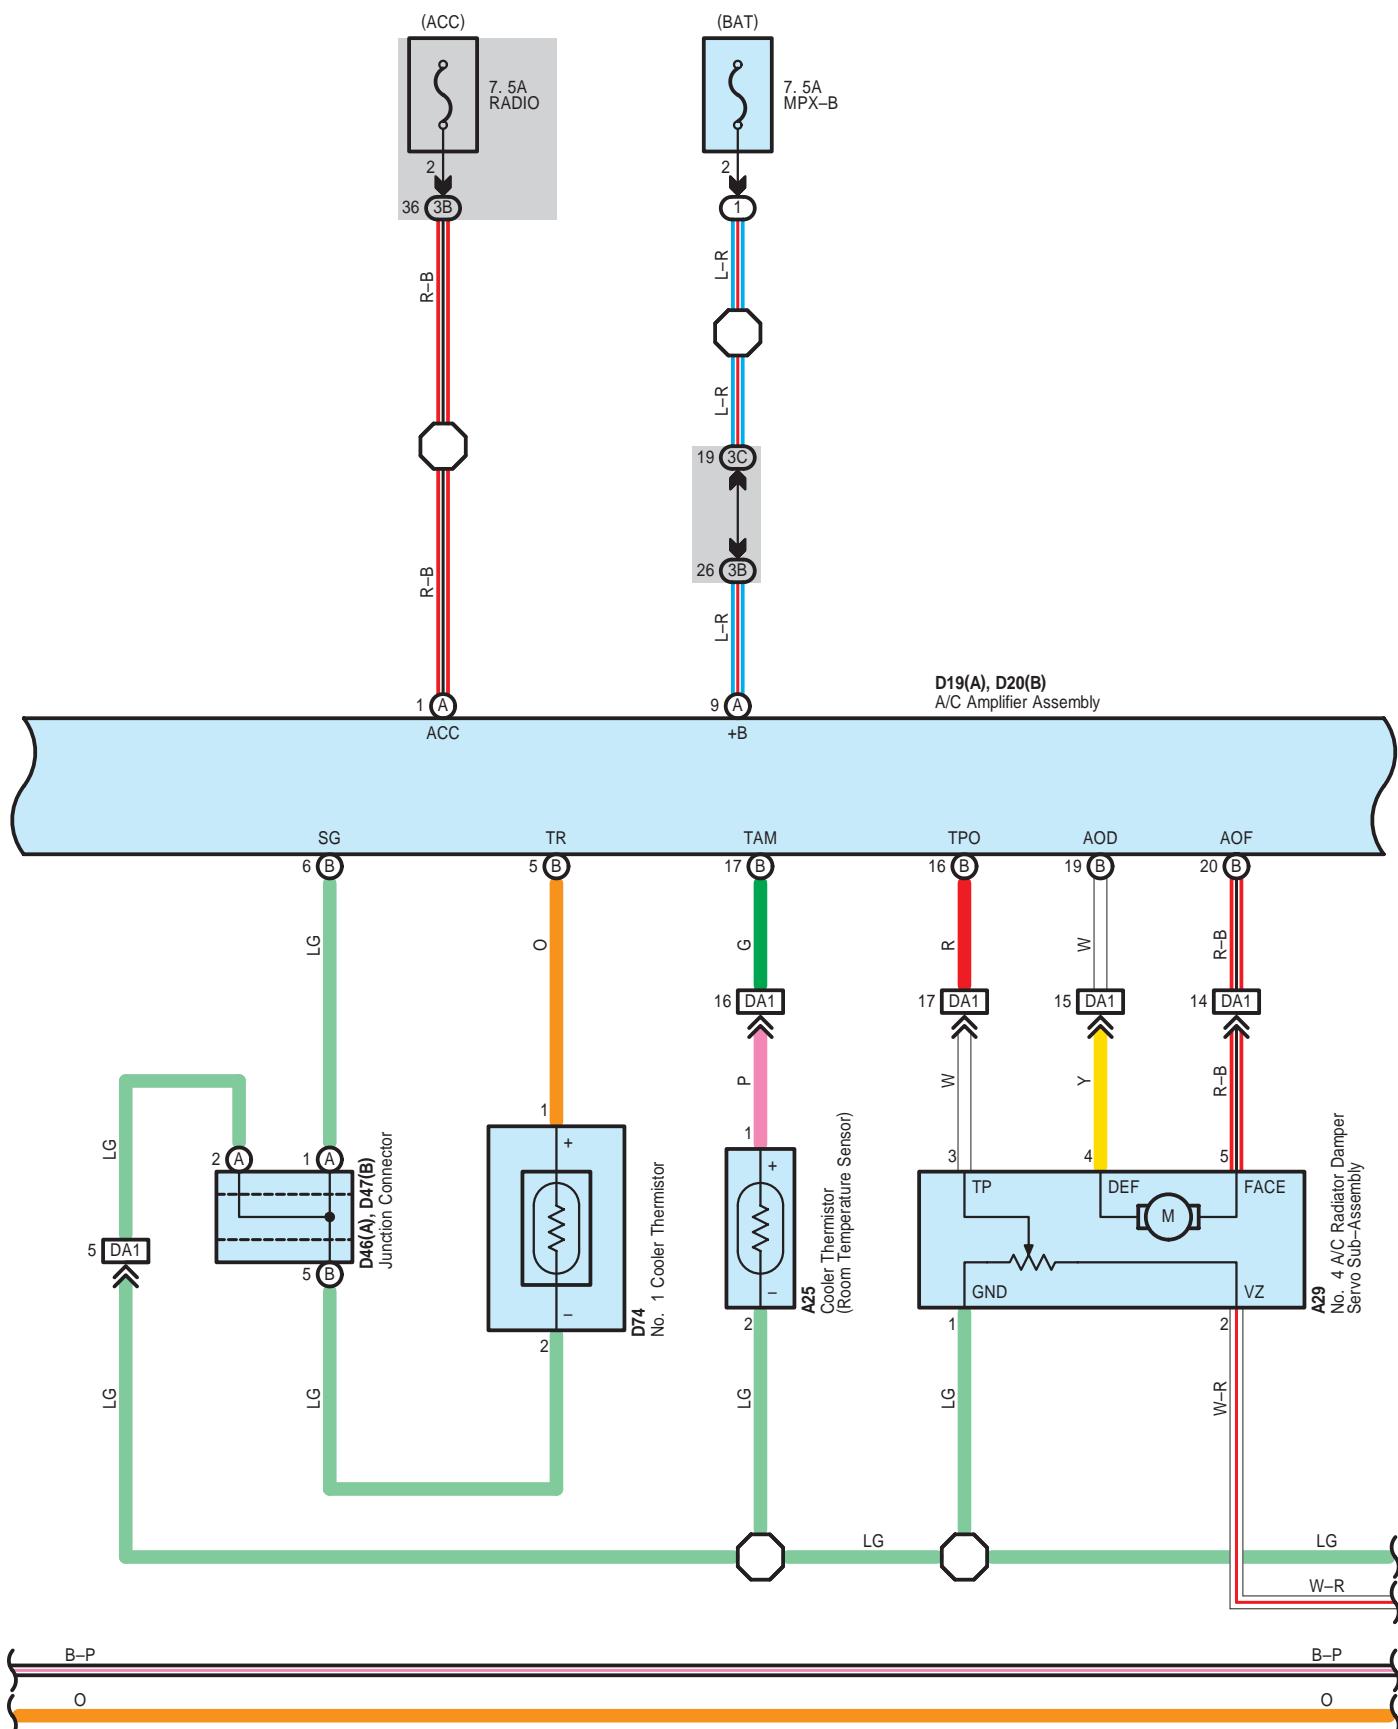



Air Conditioner (LHD Automatic A/C)

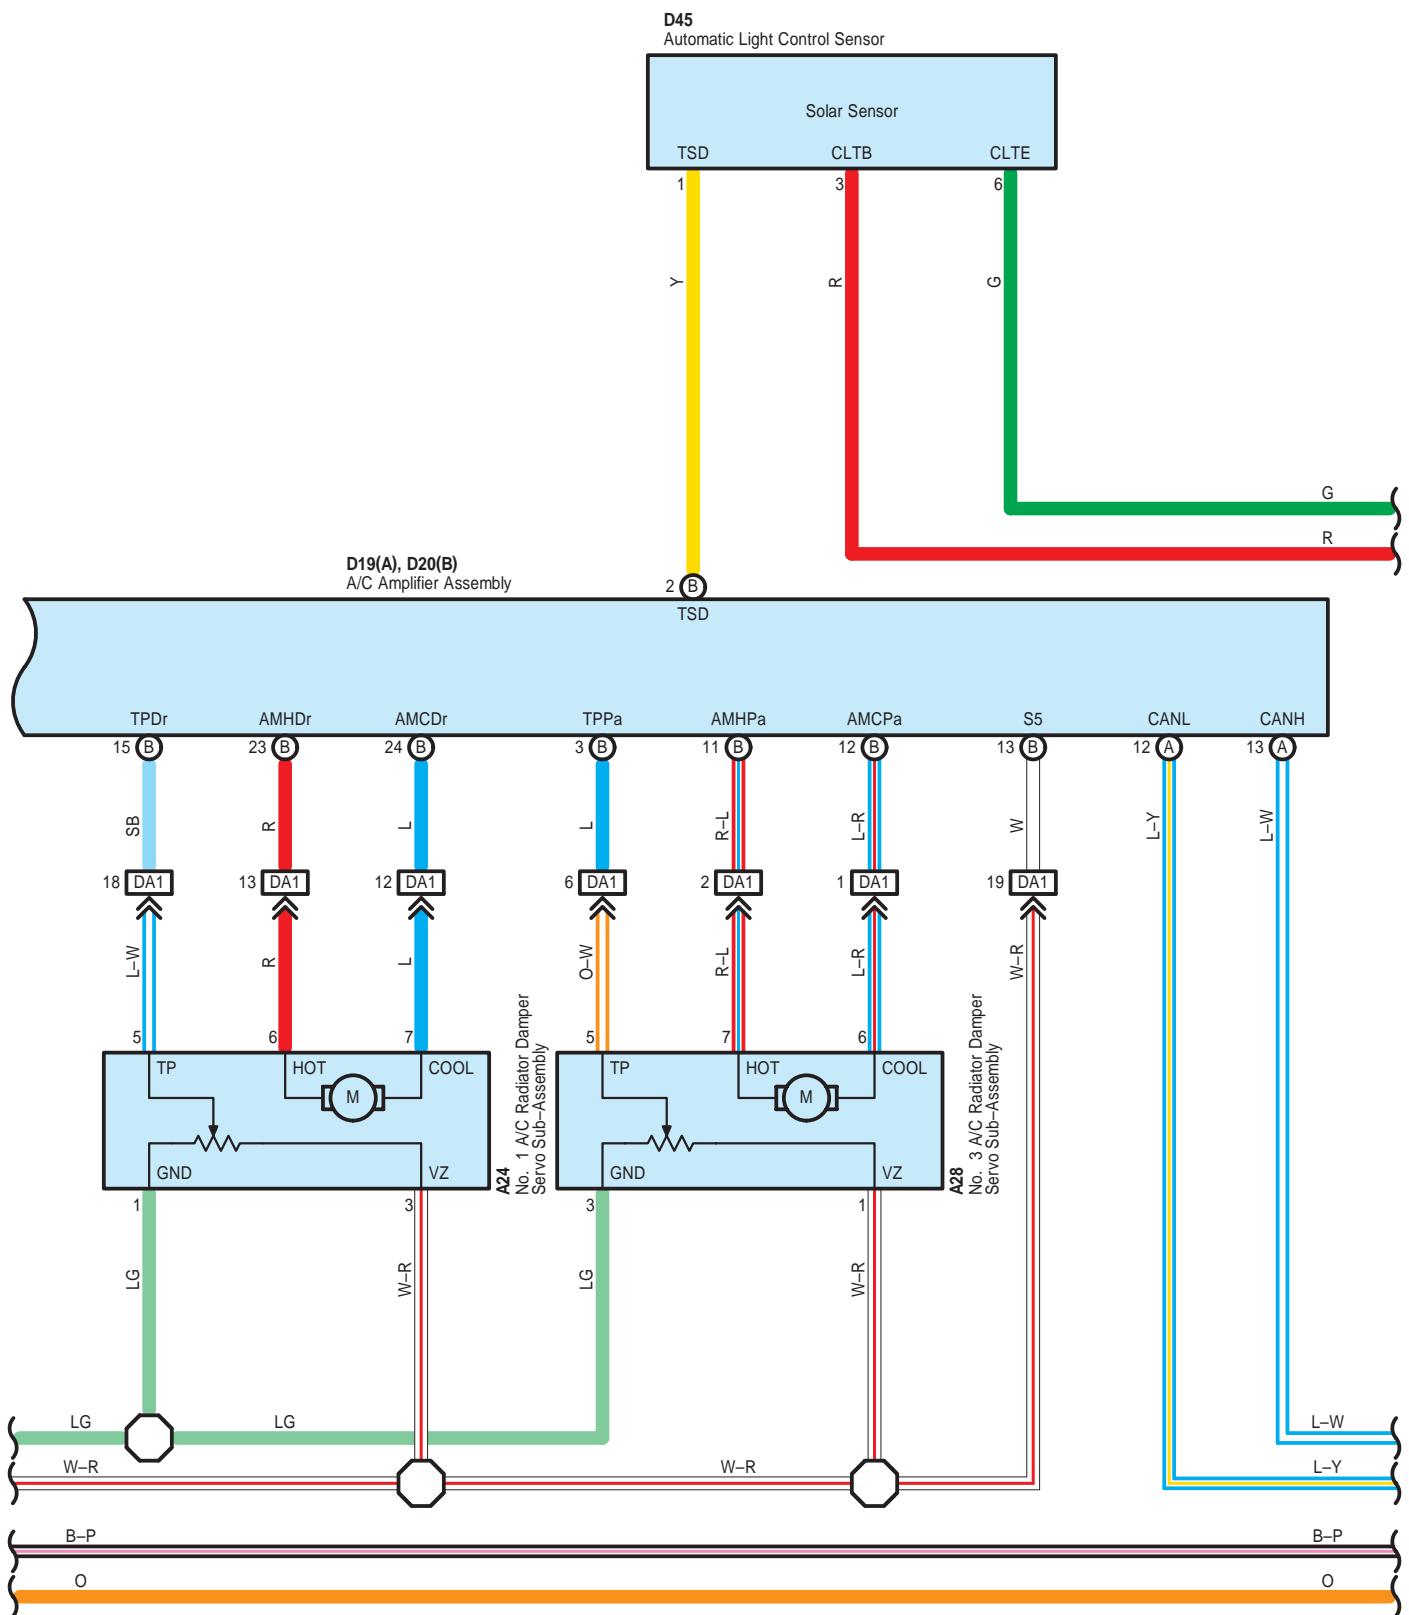

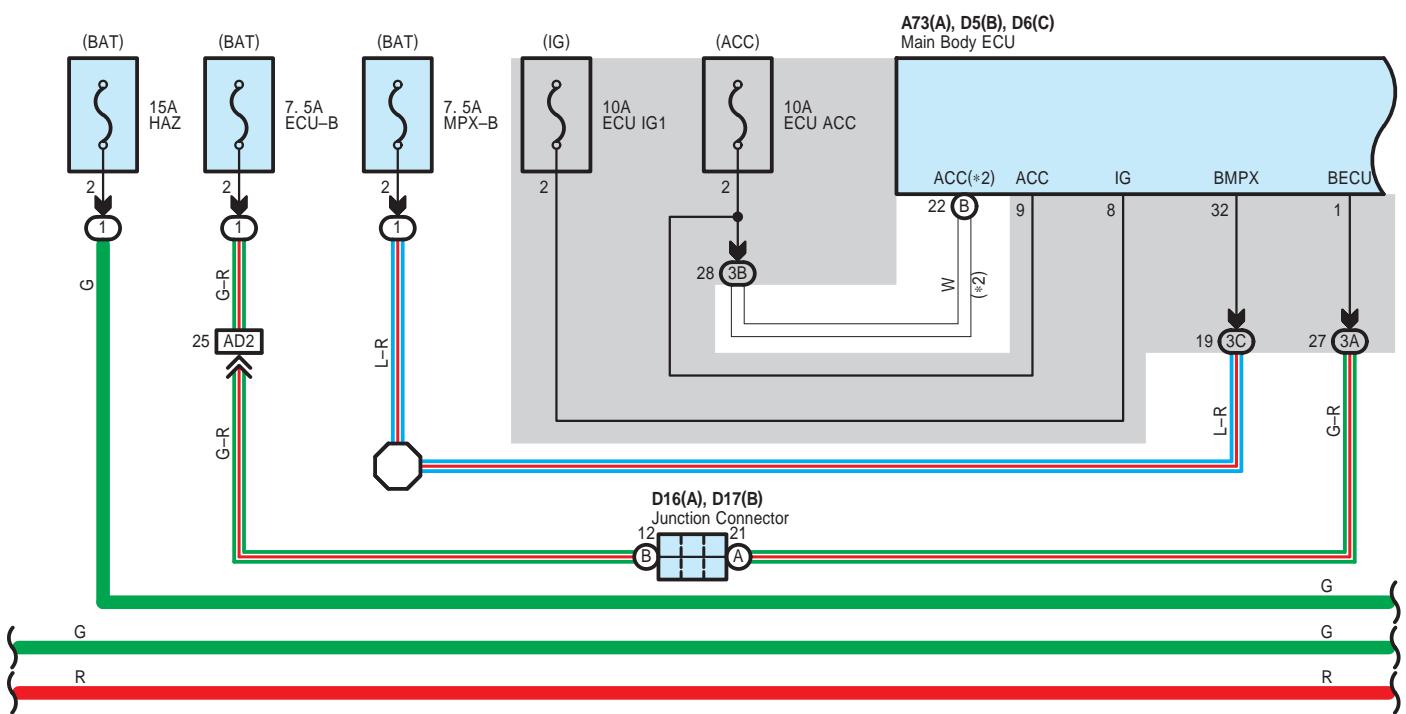


Air Conditioner (LHD Automatic A/C)

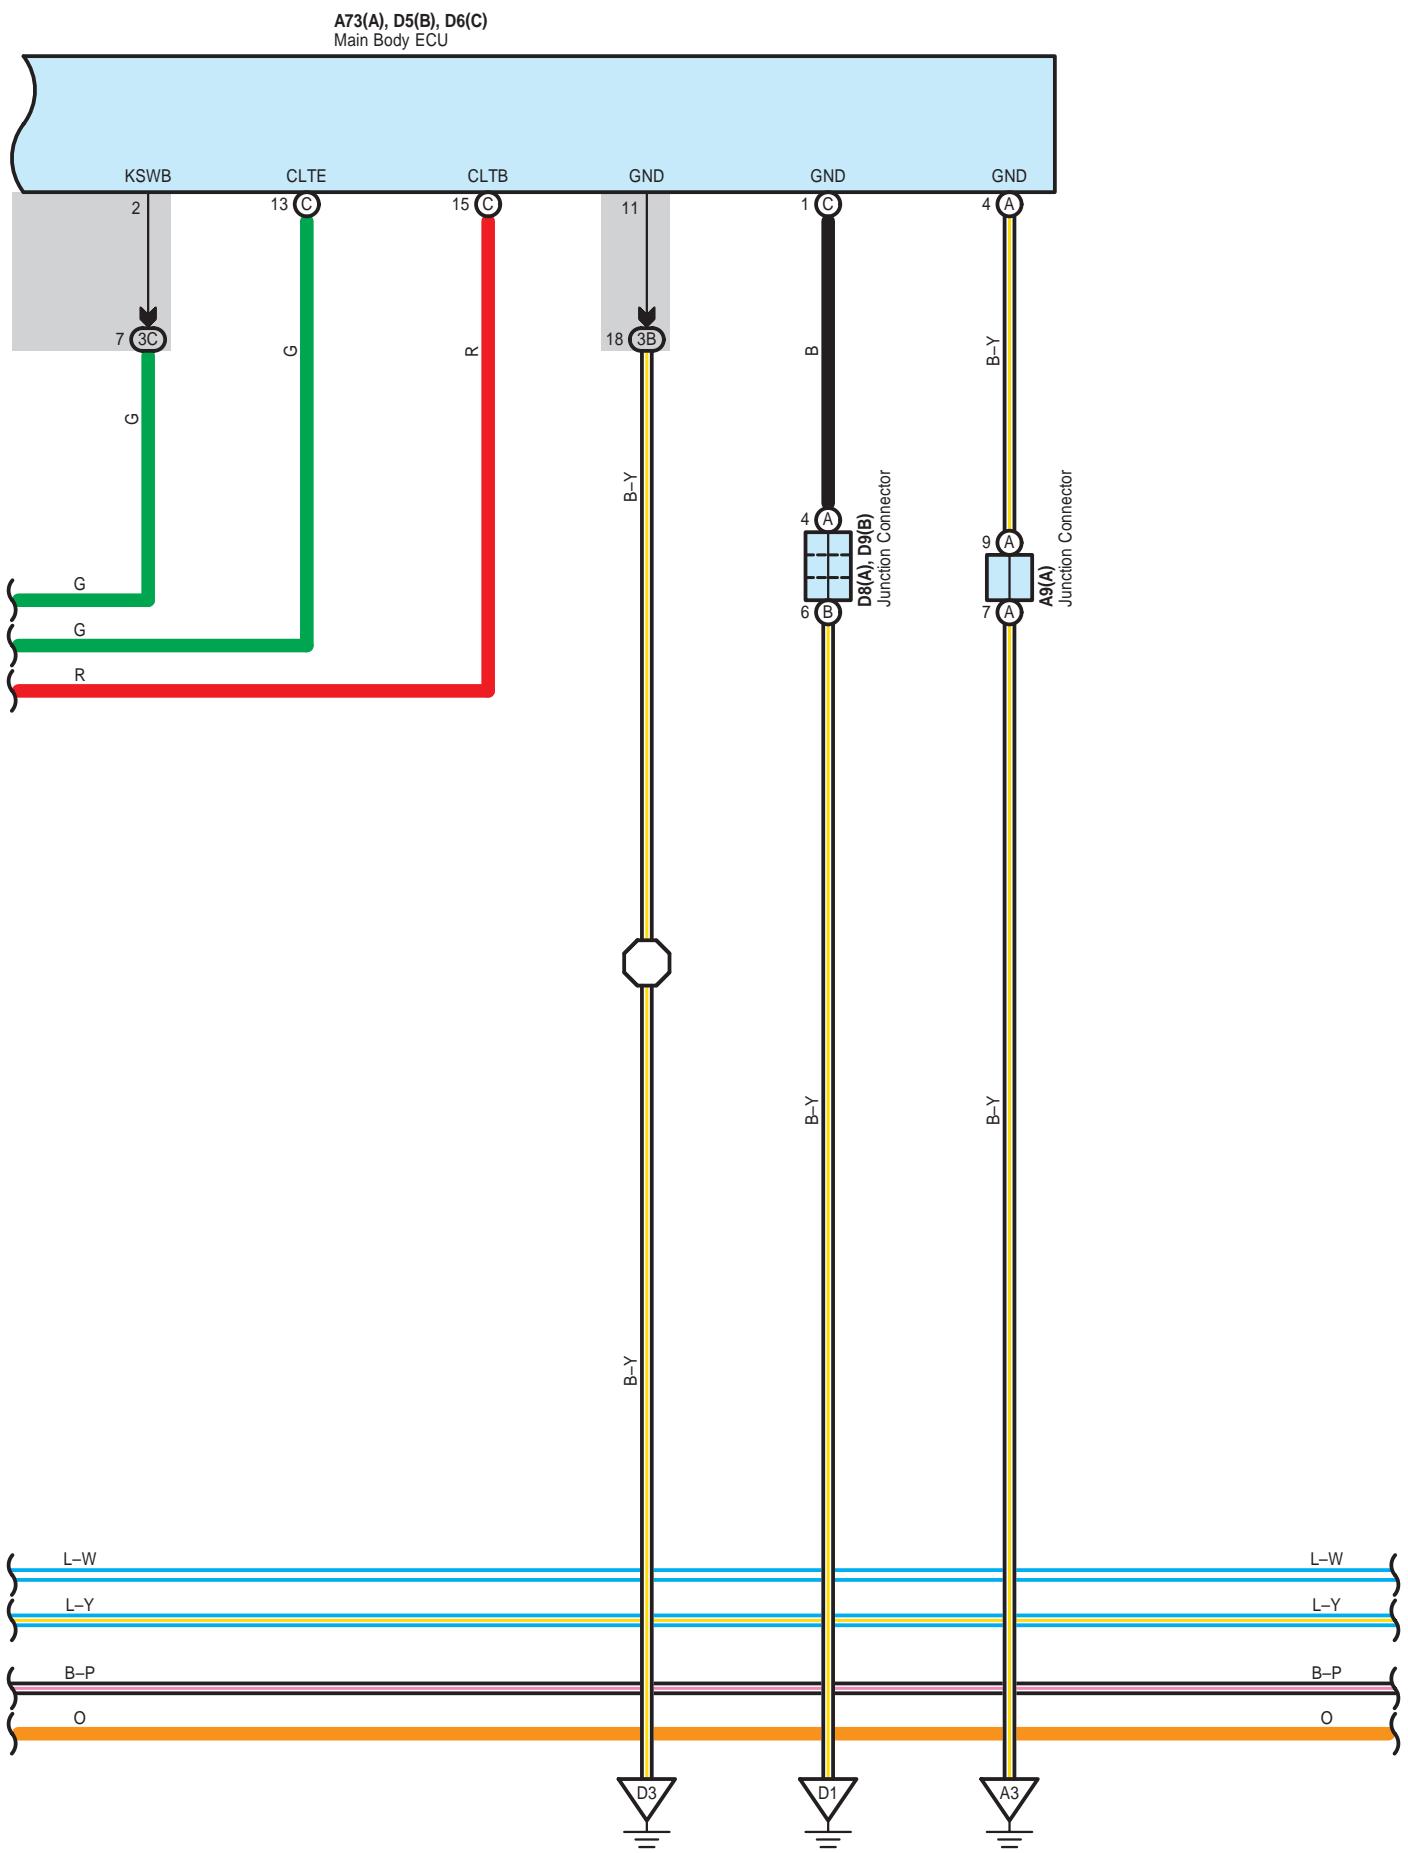


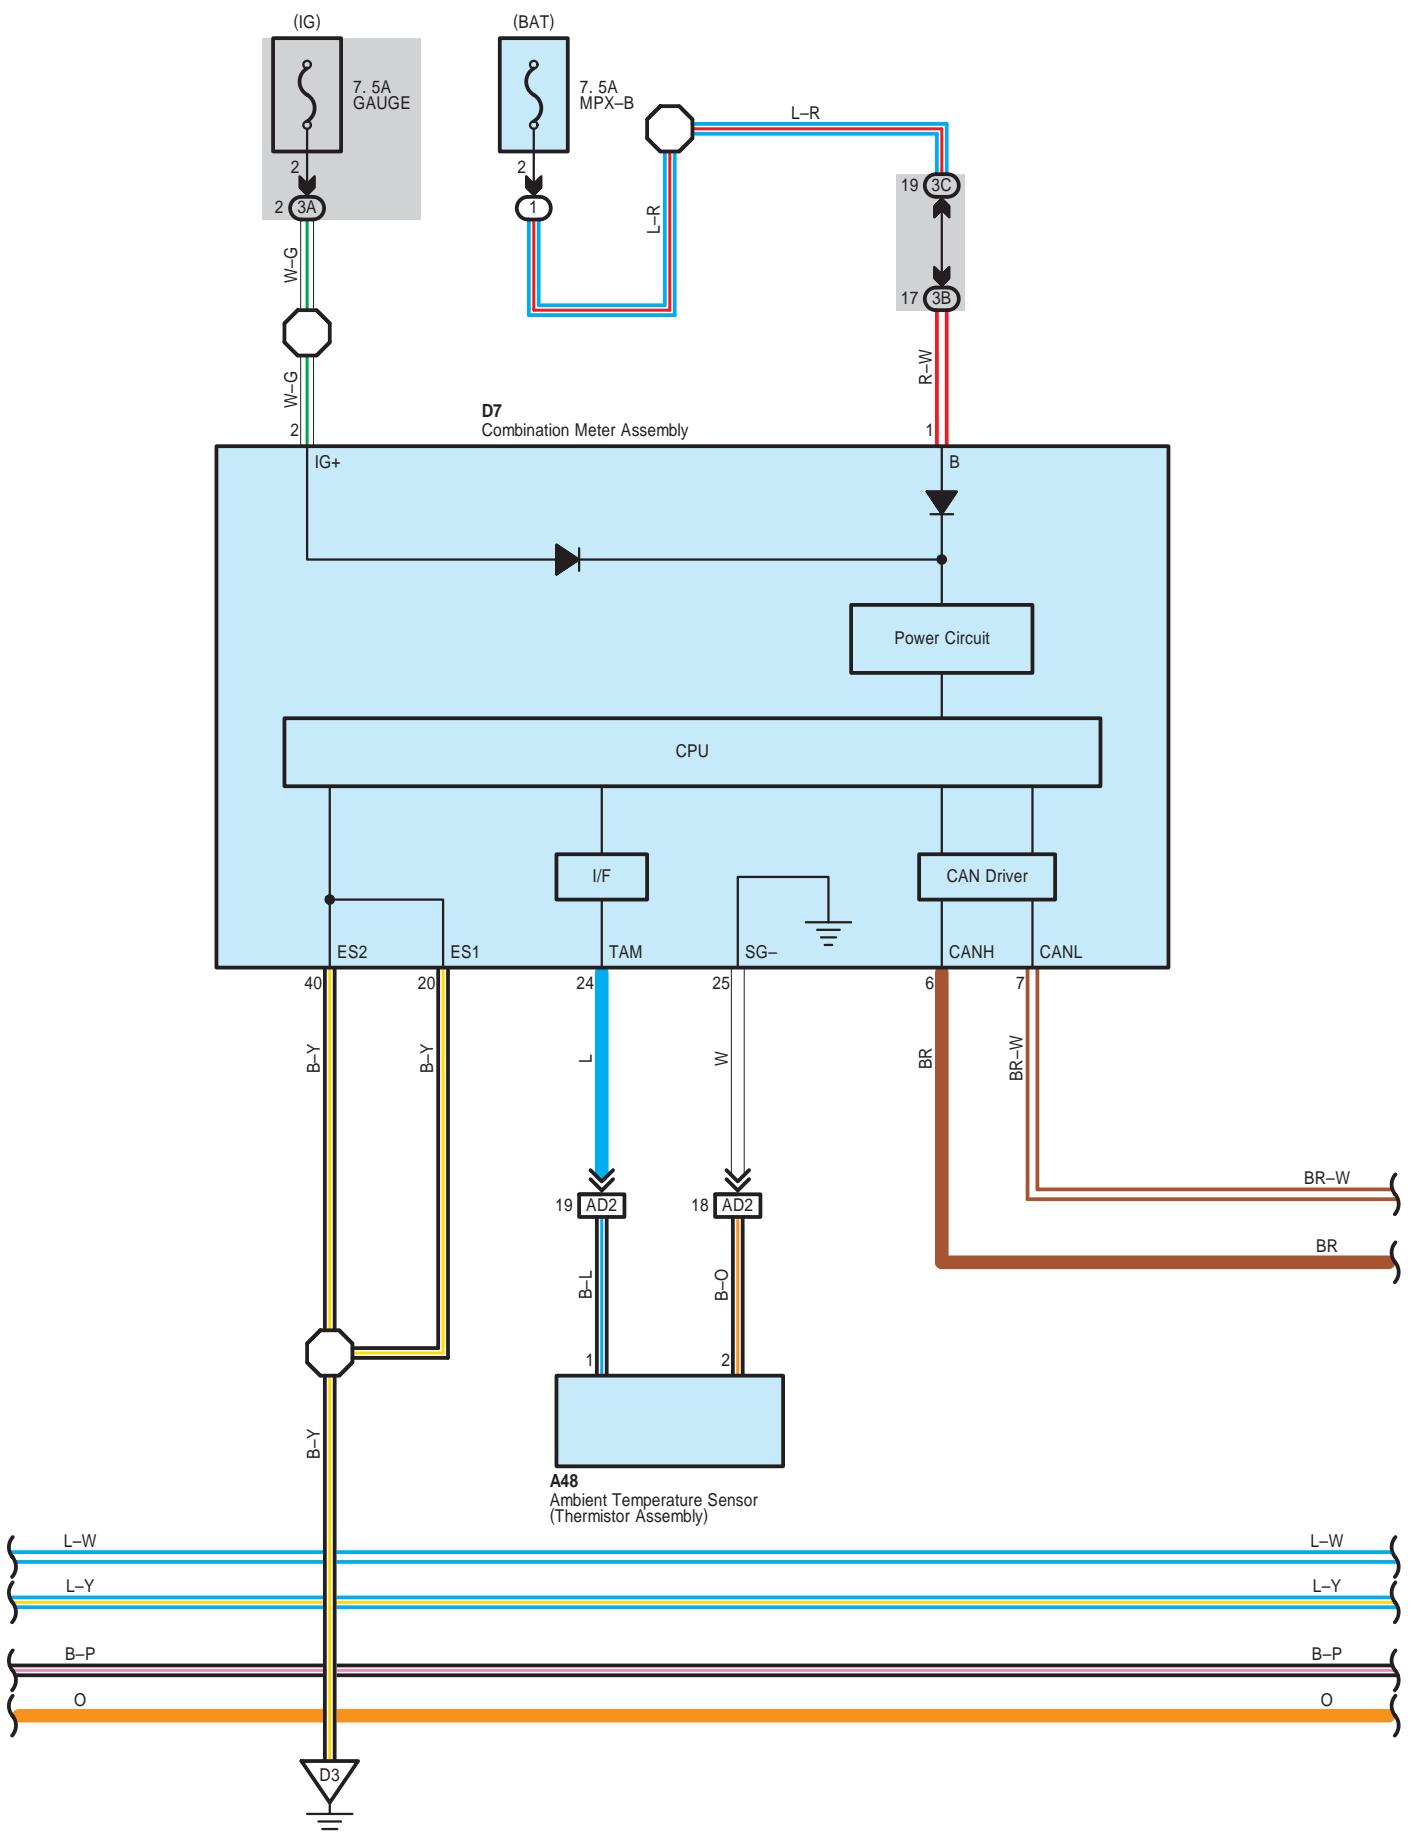

Air Conditioner (LHD Automatic A/C)

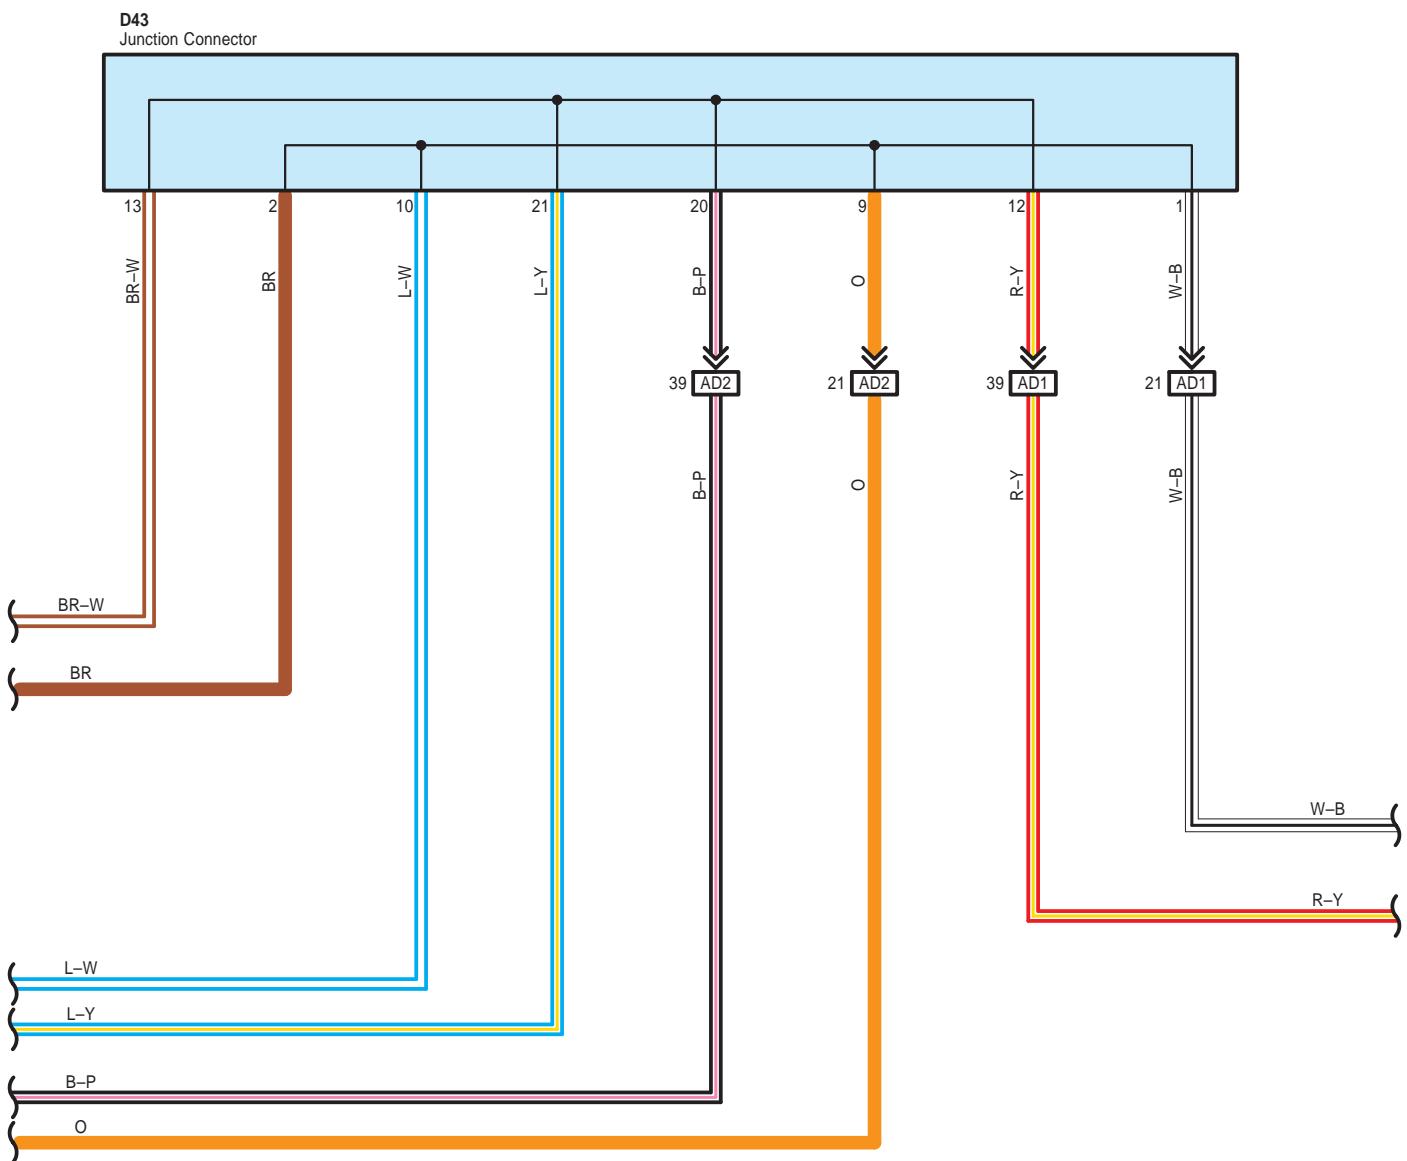

A5
VSC (VDC) Control Module

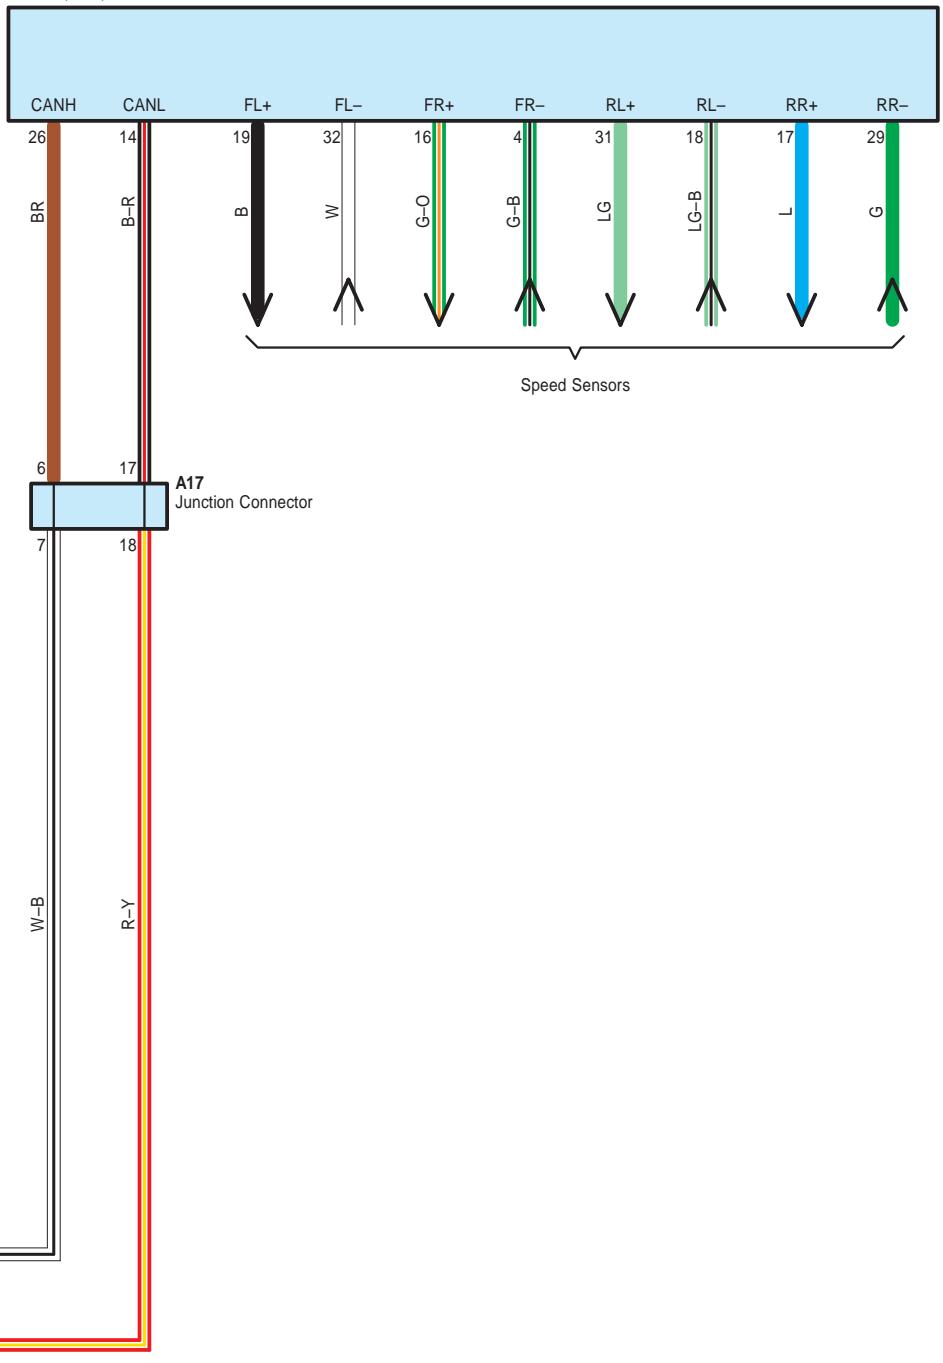

Air Conditioner (LHD Automatic A/C)

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A5	39 (LHD)	A34	B	42 (LHD)	D9 B 40 (LHD)
A7	39 (LHD)	A35	C	42 (LHD)	D16 A 40 (LHD)
A9 A	42 (LHD)	A36	D	42 (LHD)	D17 B 40 (LHD)
A17	42 (LHD)	A48		39 (LHD)	D19 A 40 (LHD)
A24	42 (LHD)	A73 A		42 (LHD)	D20 B 40 (LHD)
A25	42 (LHD)	C17		38 (LHD)	D43 41 (LHD)
A27	42 (LHD)	C33		38 (LHD)	D45 41 (LHD)
A28	42 (LHD)	C35		38 (LHD)	D46 A 41 (LHD)
A29	42 (LHD)	D5 B		40 (LHD)	D47 B 41 (LHD)
A31	42 (LHD)	D6 C		40 (LHD)	D74 41 (LHD)
A32	42 (LHD)	D7		40 (LHD)	
A33 A	42 (LHD)	D8 A		40 (LHD)	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)
2	25	R/B No. 2 (Behind Glove Box)

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


□ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
DA1	55 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Behind Glove Box)

▽ : Ground Points


Code	See Page	Ground Points Location
A3	55 (LHD)	Cowl Side Panel RH
A7	54 (LHD)	Front Fender Apron RH
C1	54 (LHD)	Engine Unit
D1	55 (LHD)	Cowl Side Panel LH
D3	55 (LHD)	Instrument Panel Brace RH


Air Conditioner (RHD Automatic A/C)

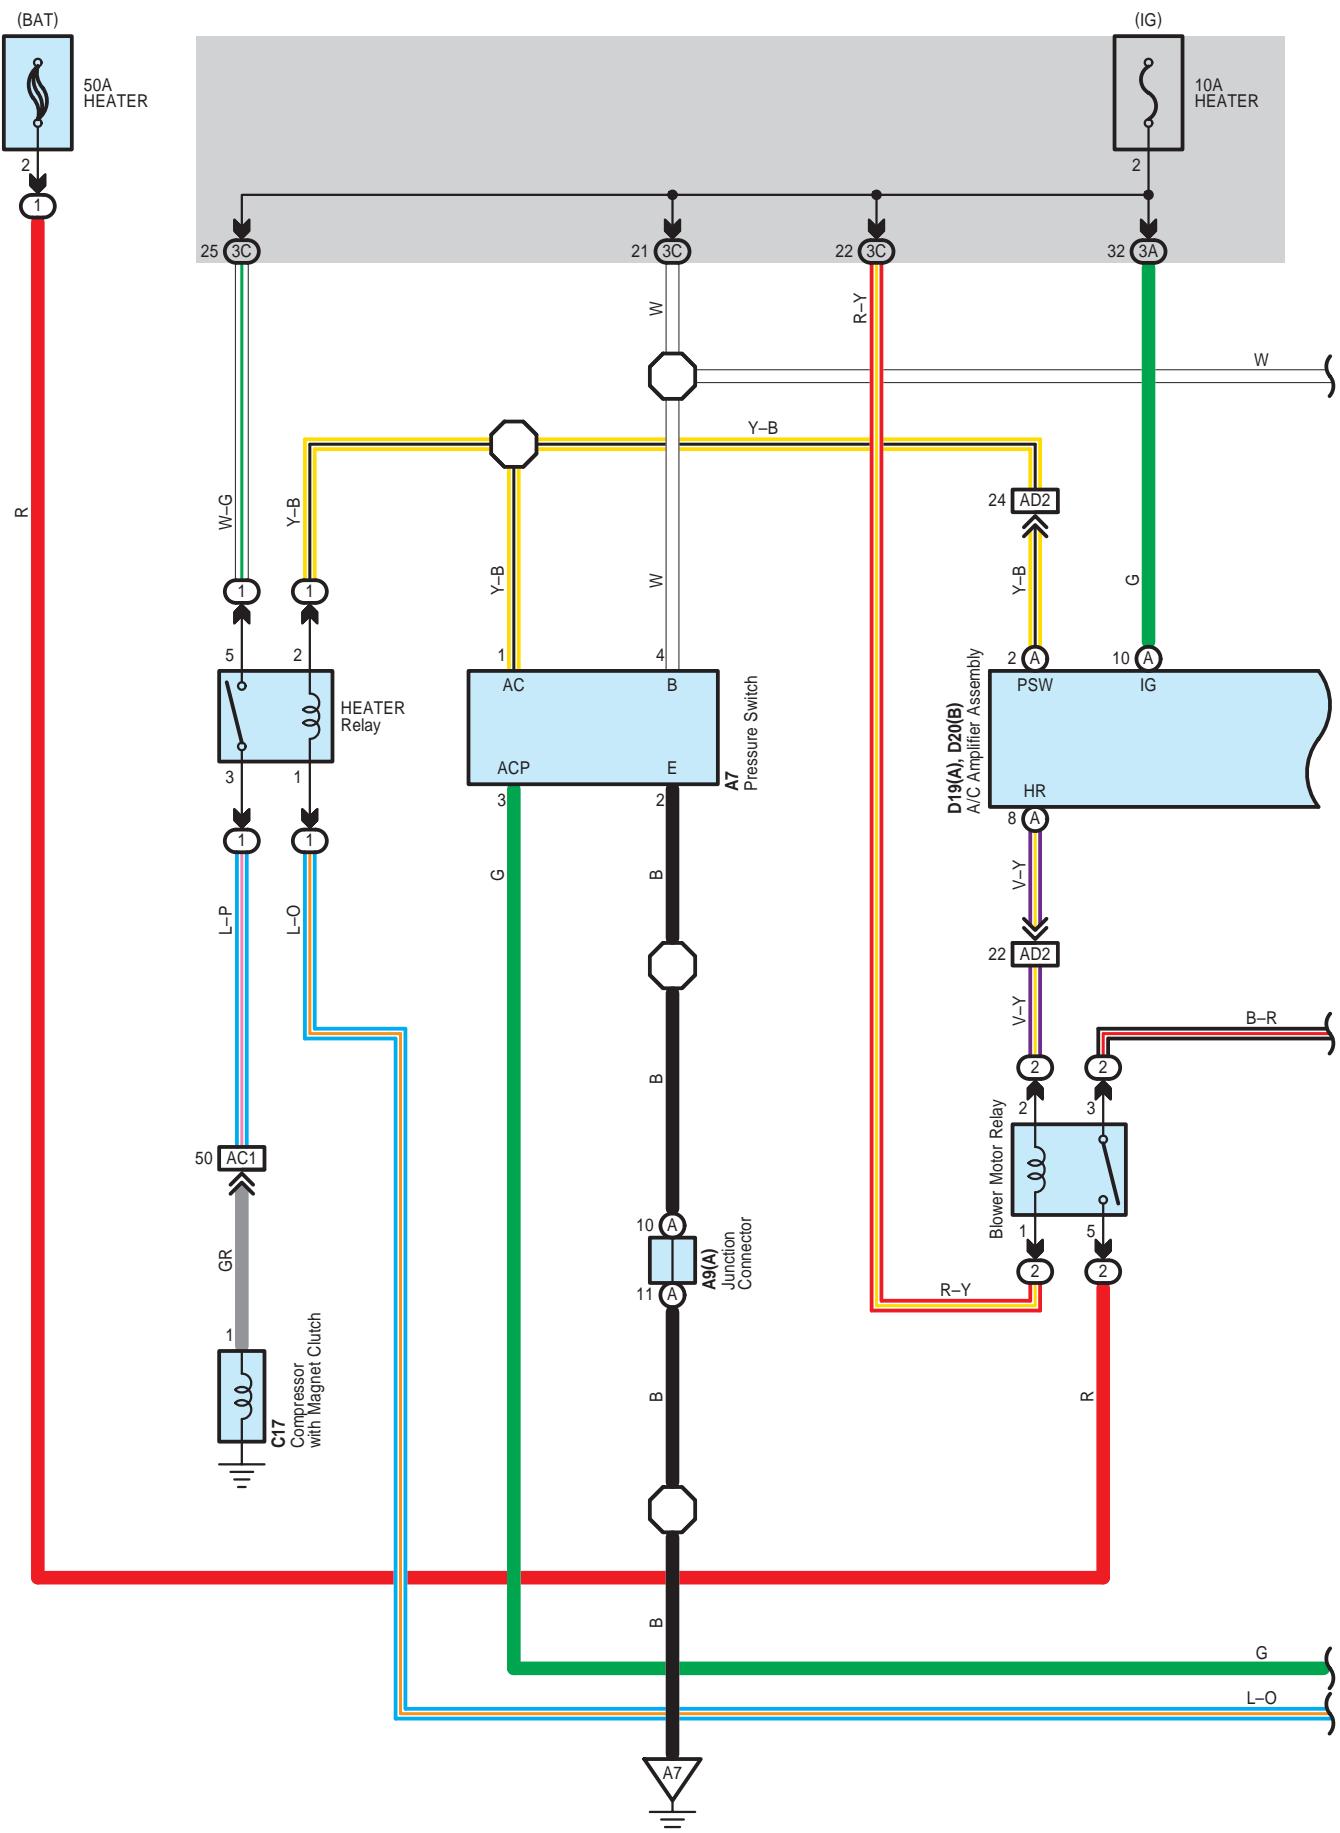

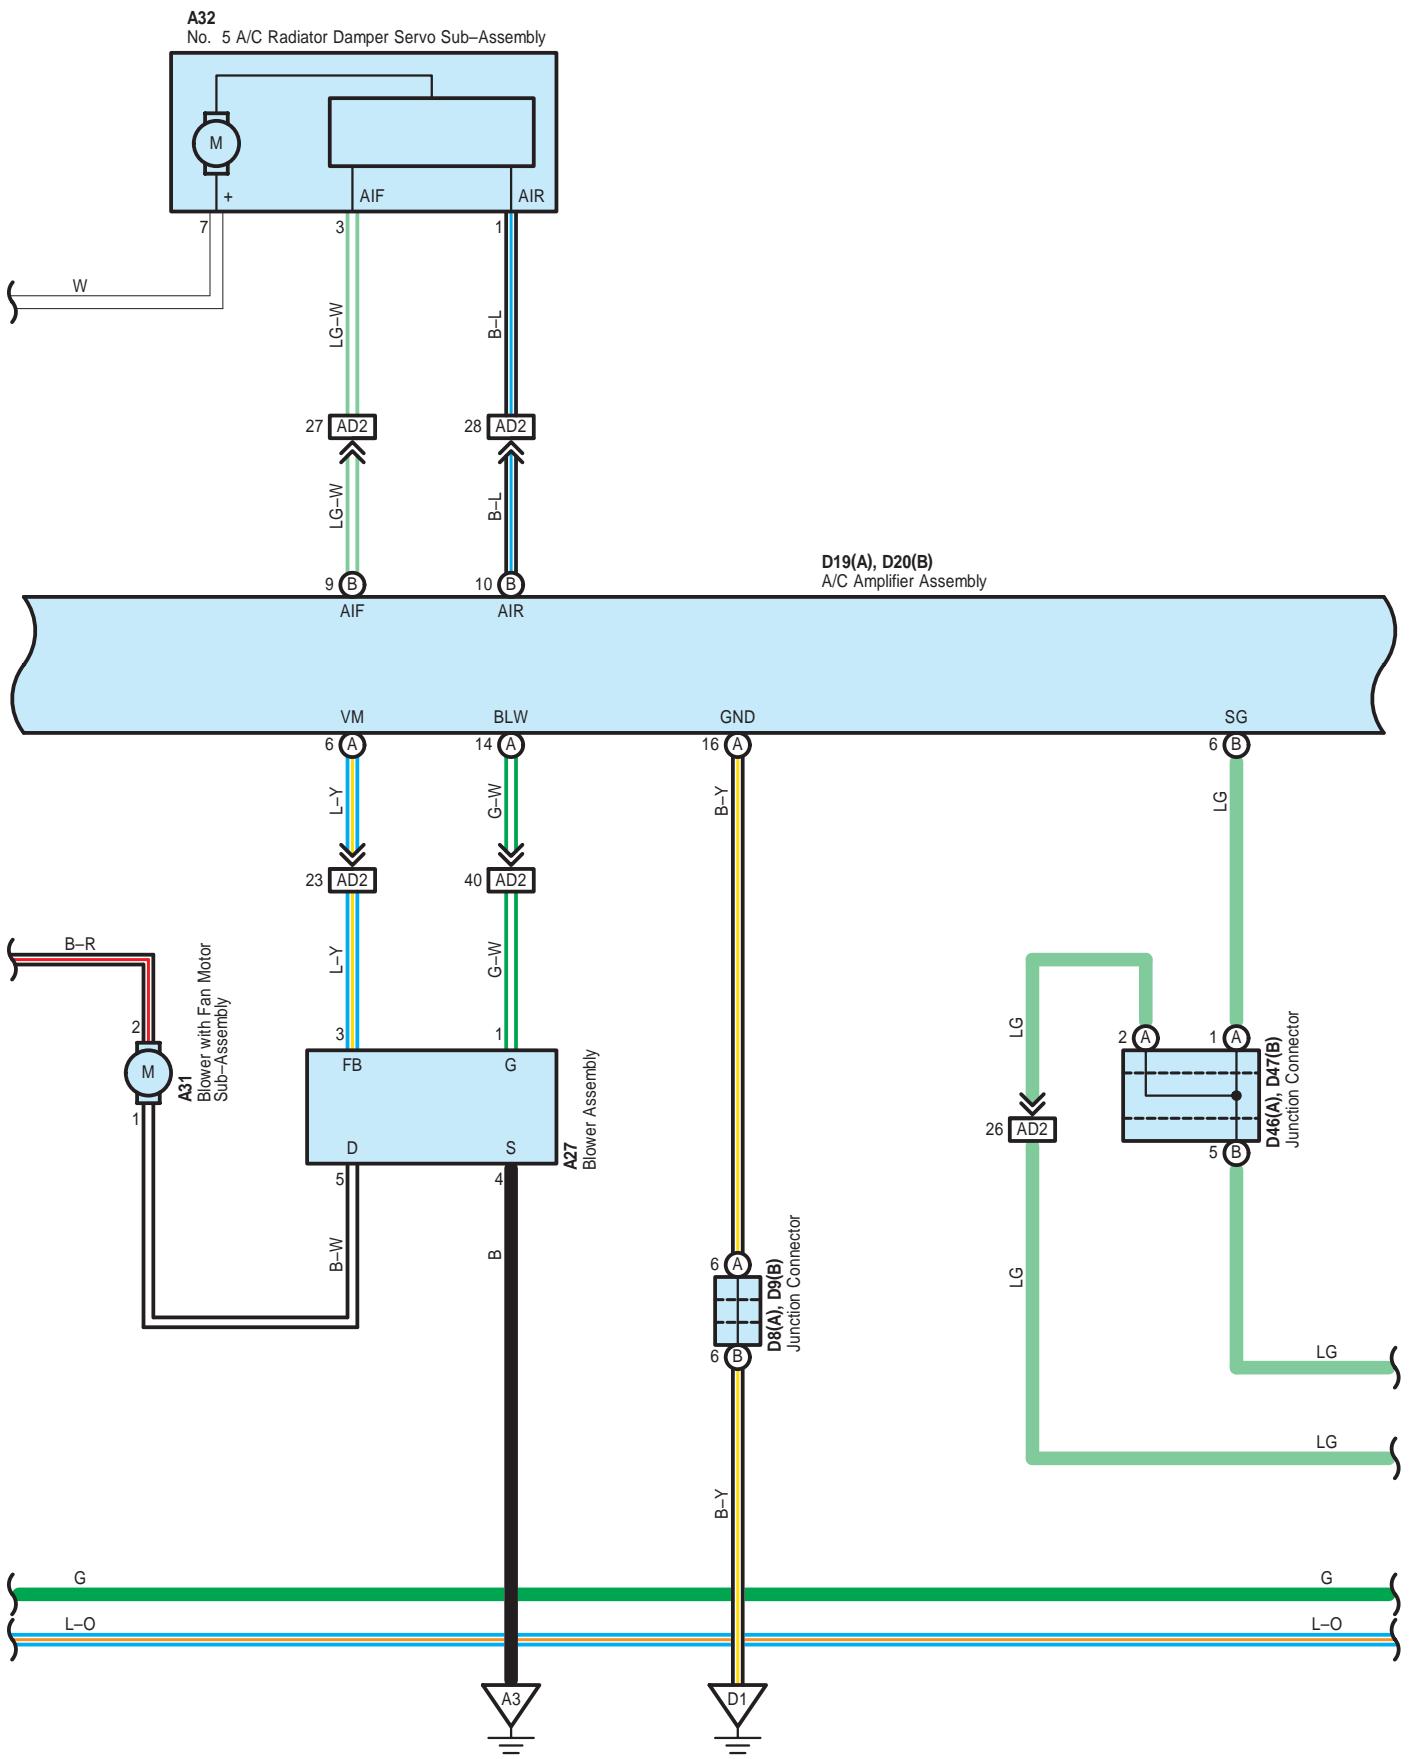


Air Conditioner (RHD Automatic A/C)

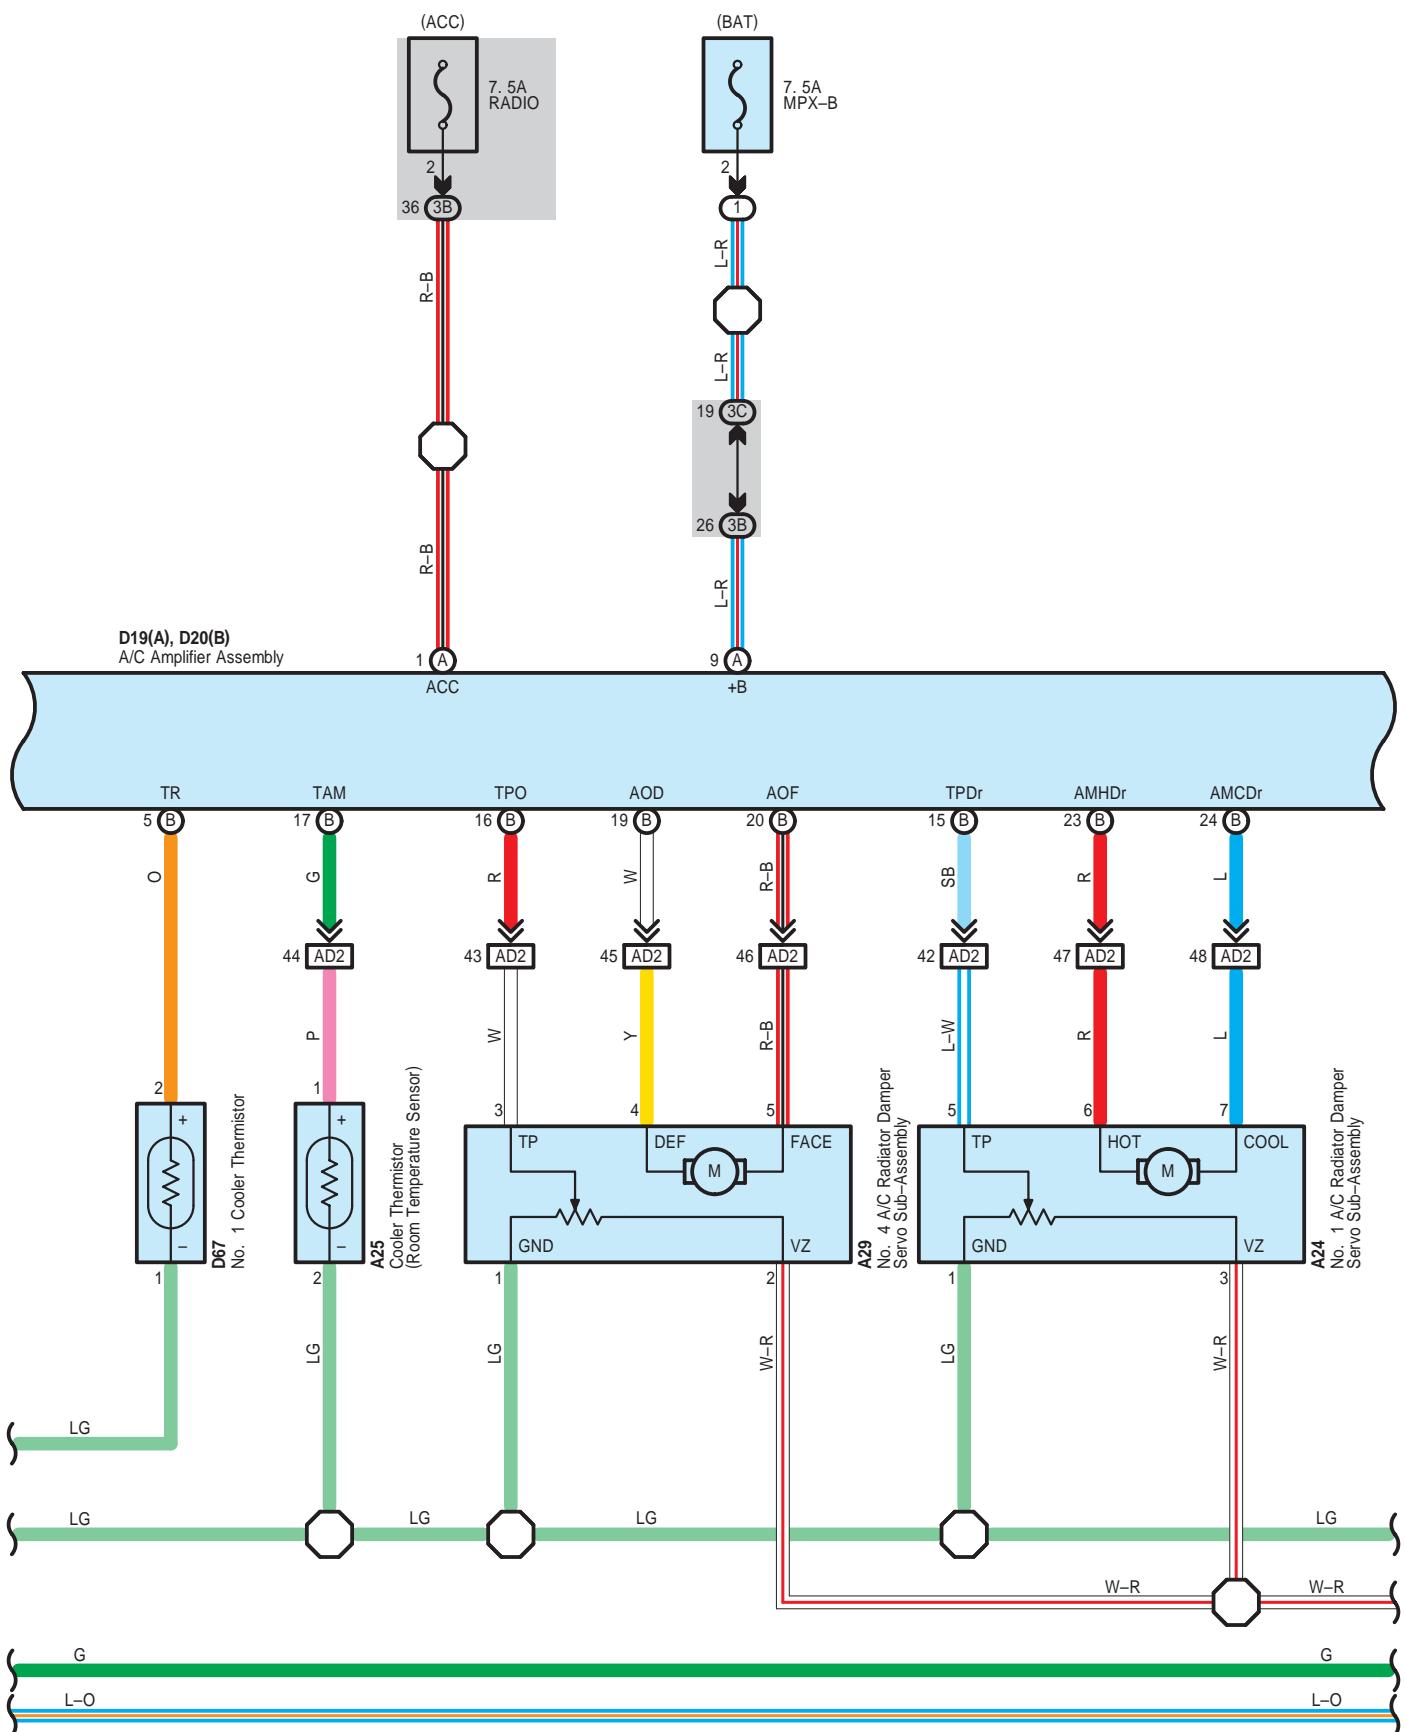

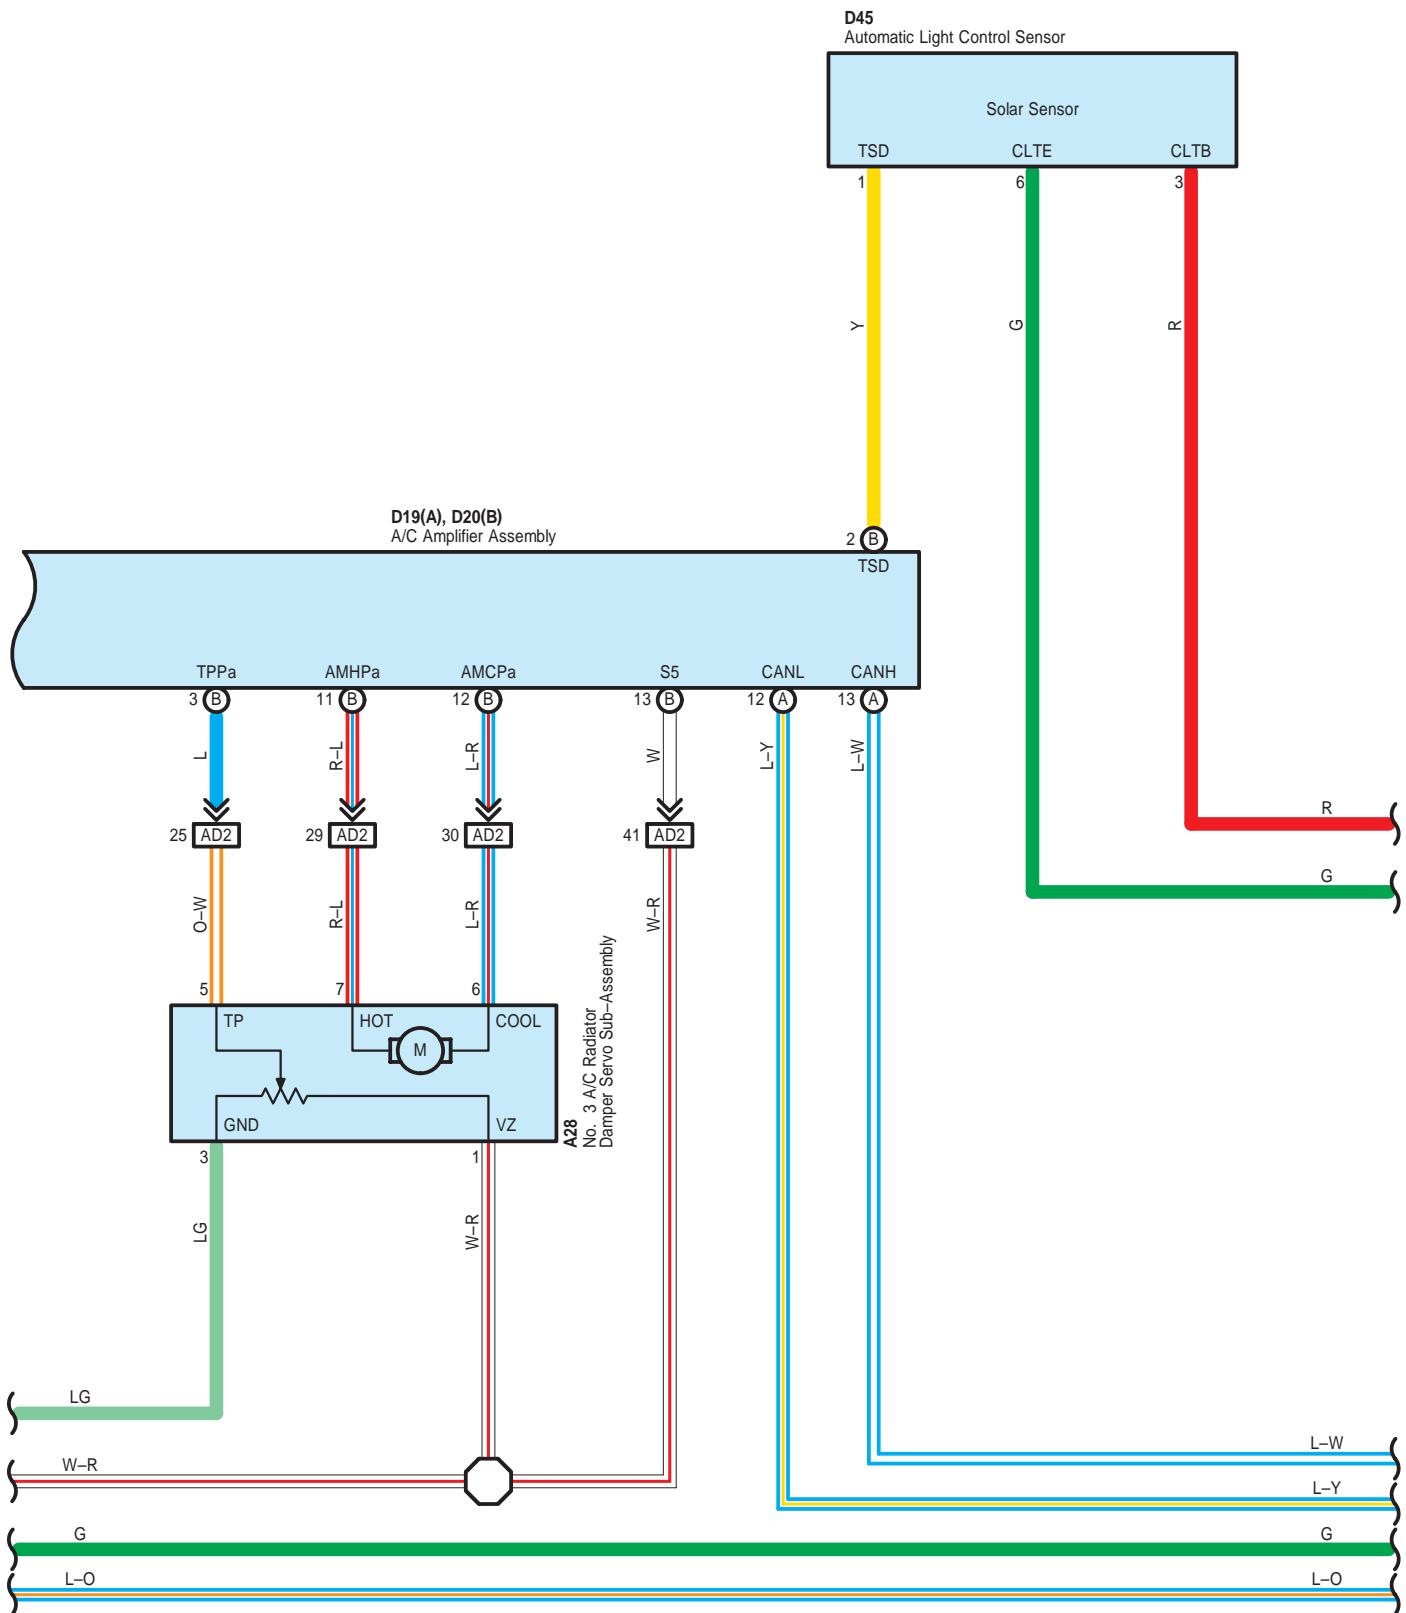


Air Conditioner (RHD Automatic A/C)

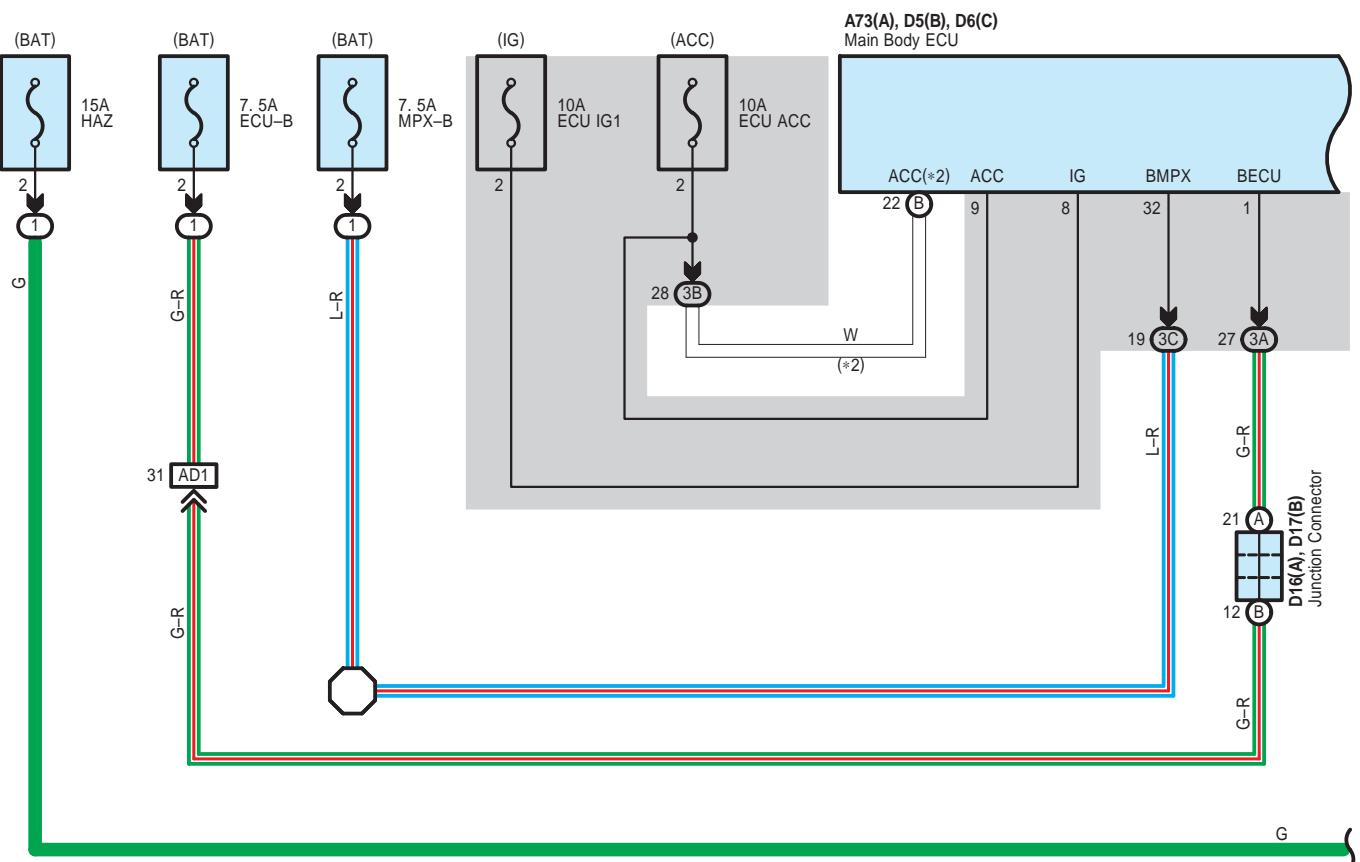


* 2 : w/ Entry & Start System




A73(A), D5(B), D6(C)
Main Body ECU

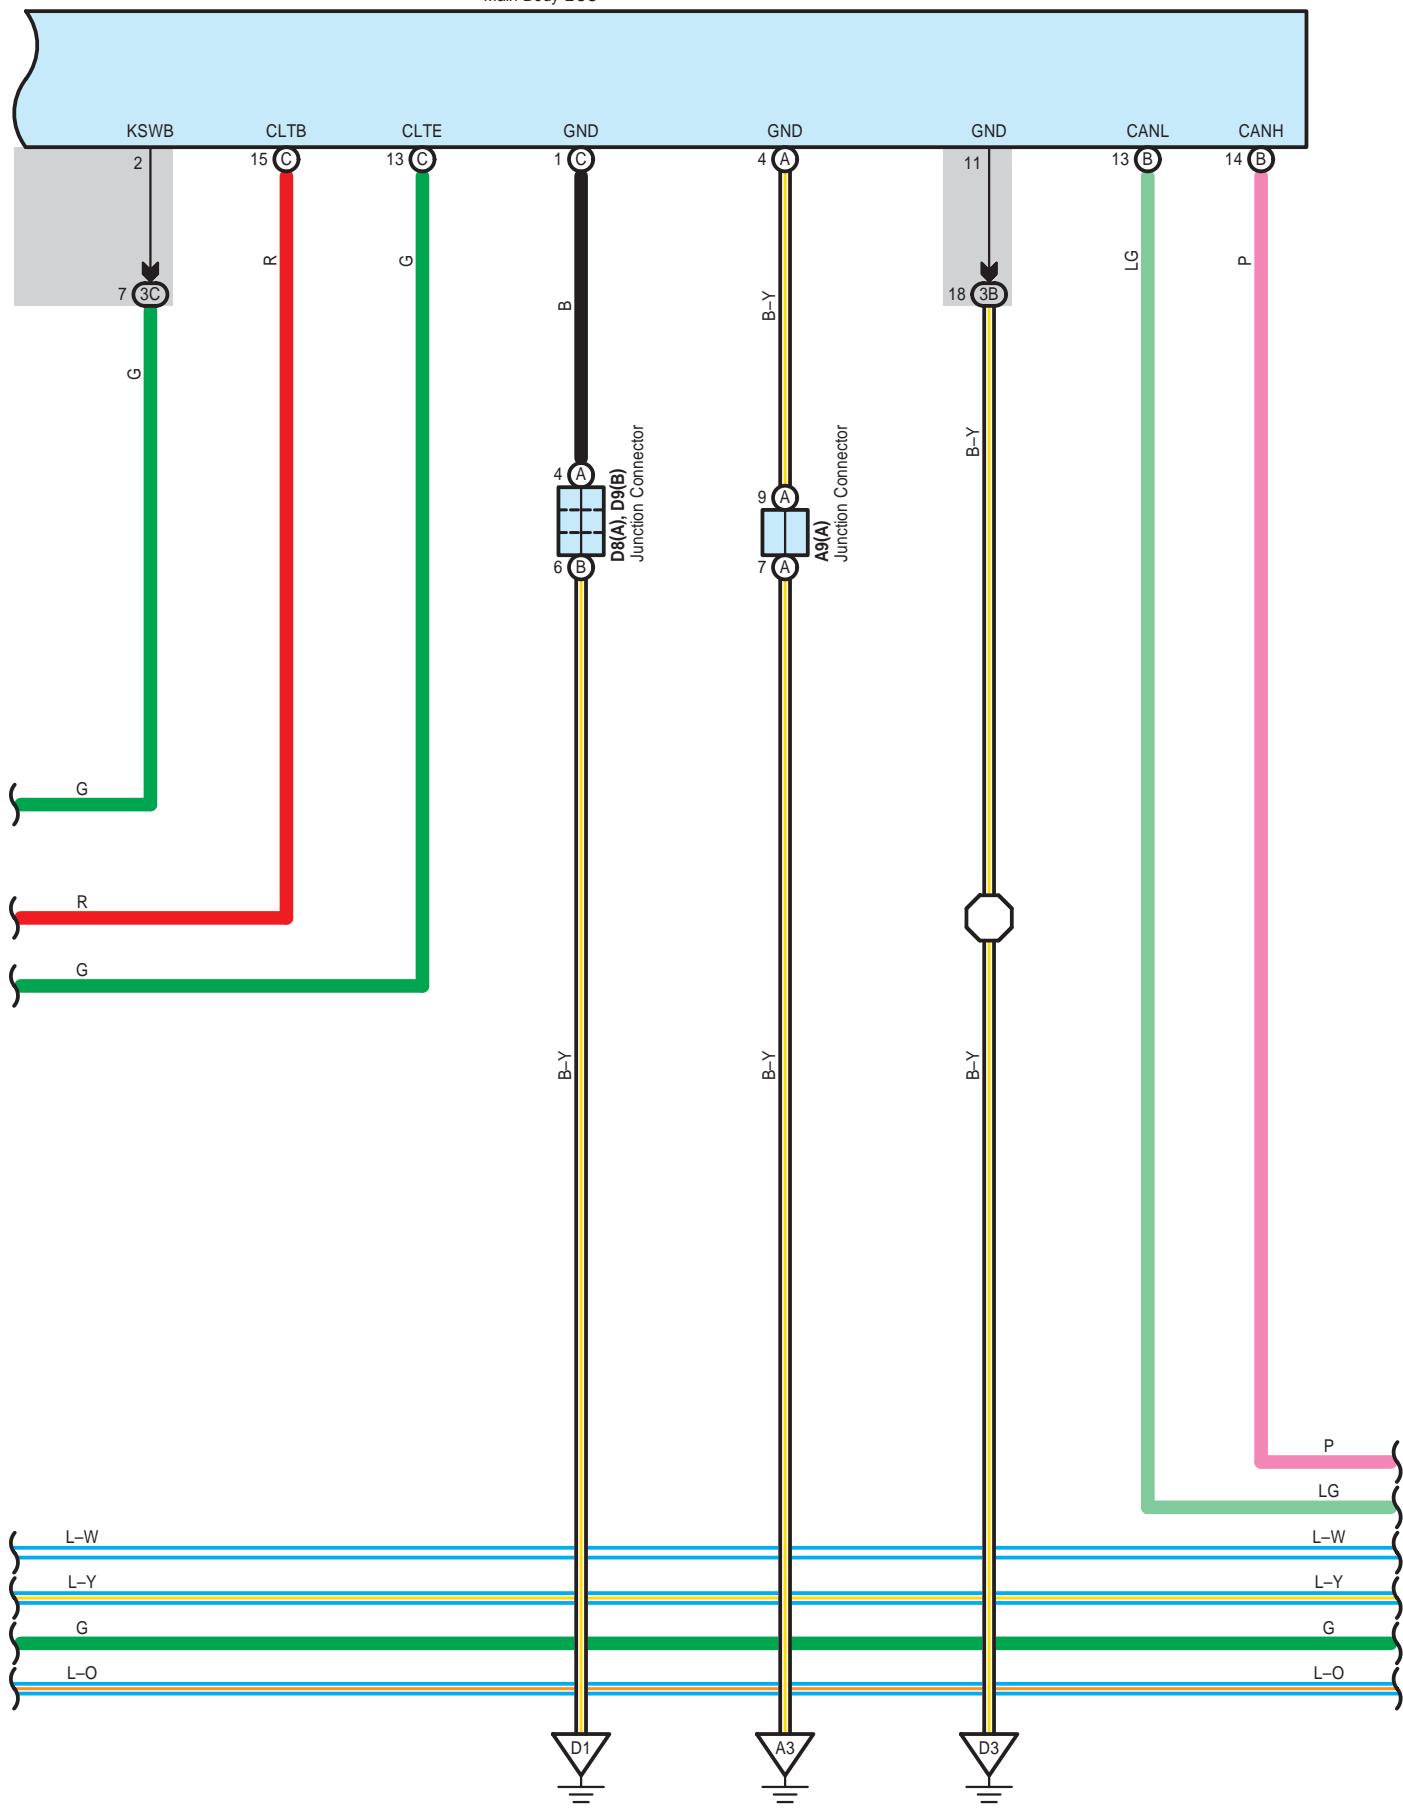

Air Conditioner (RHD Automatic A/C)

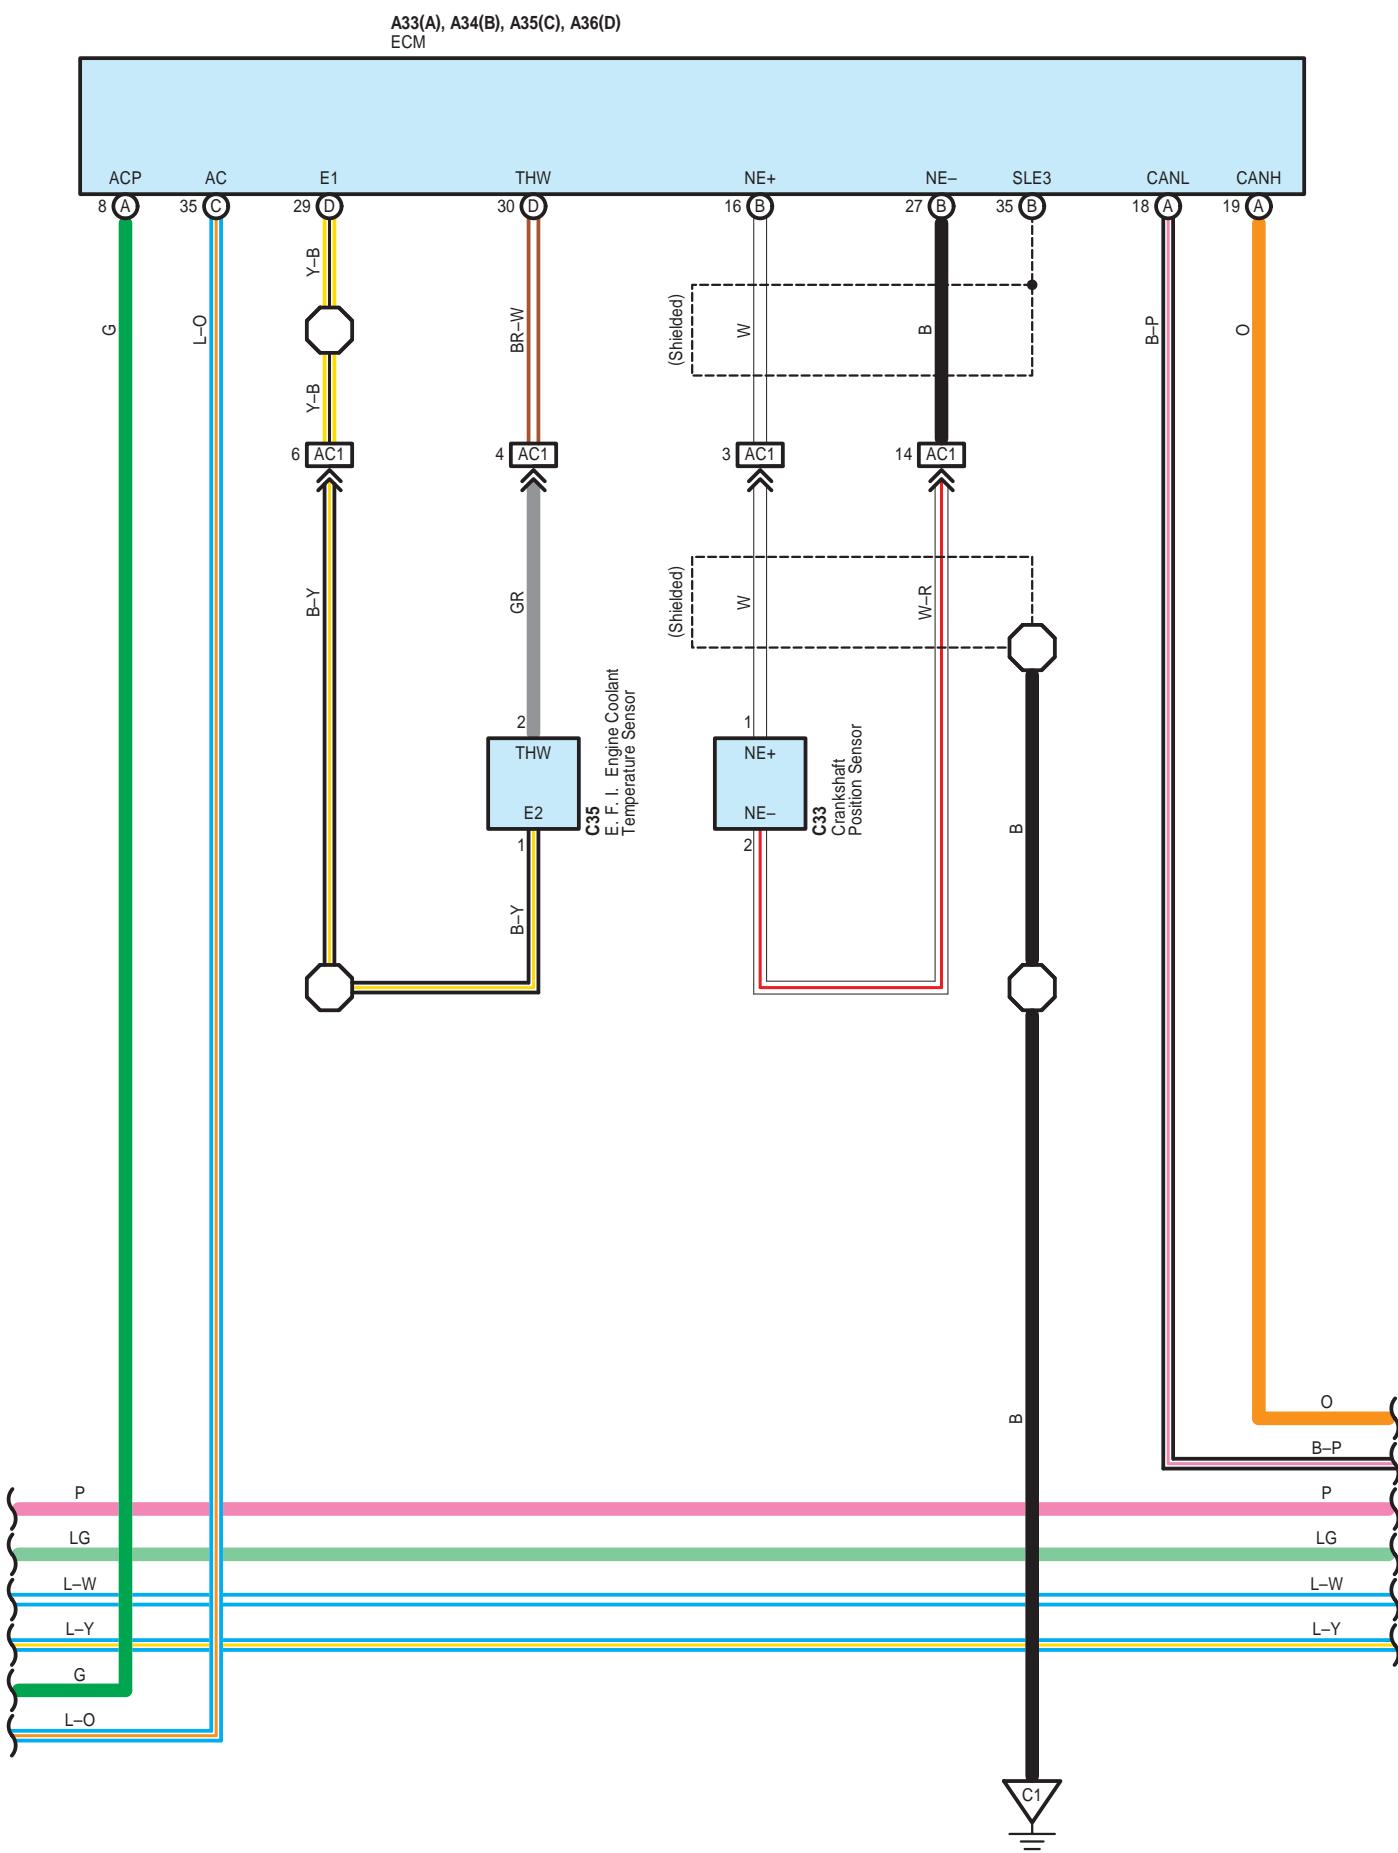


D43
Junction Connector

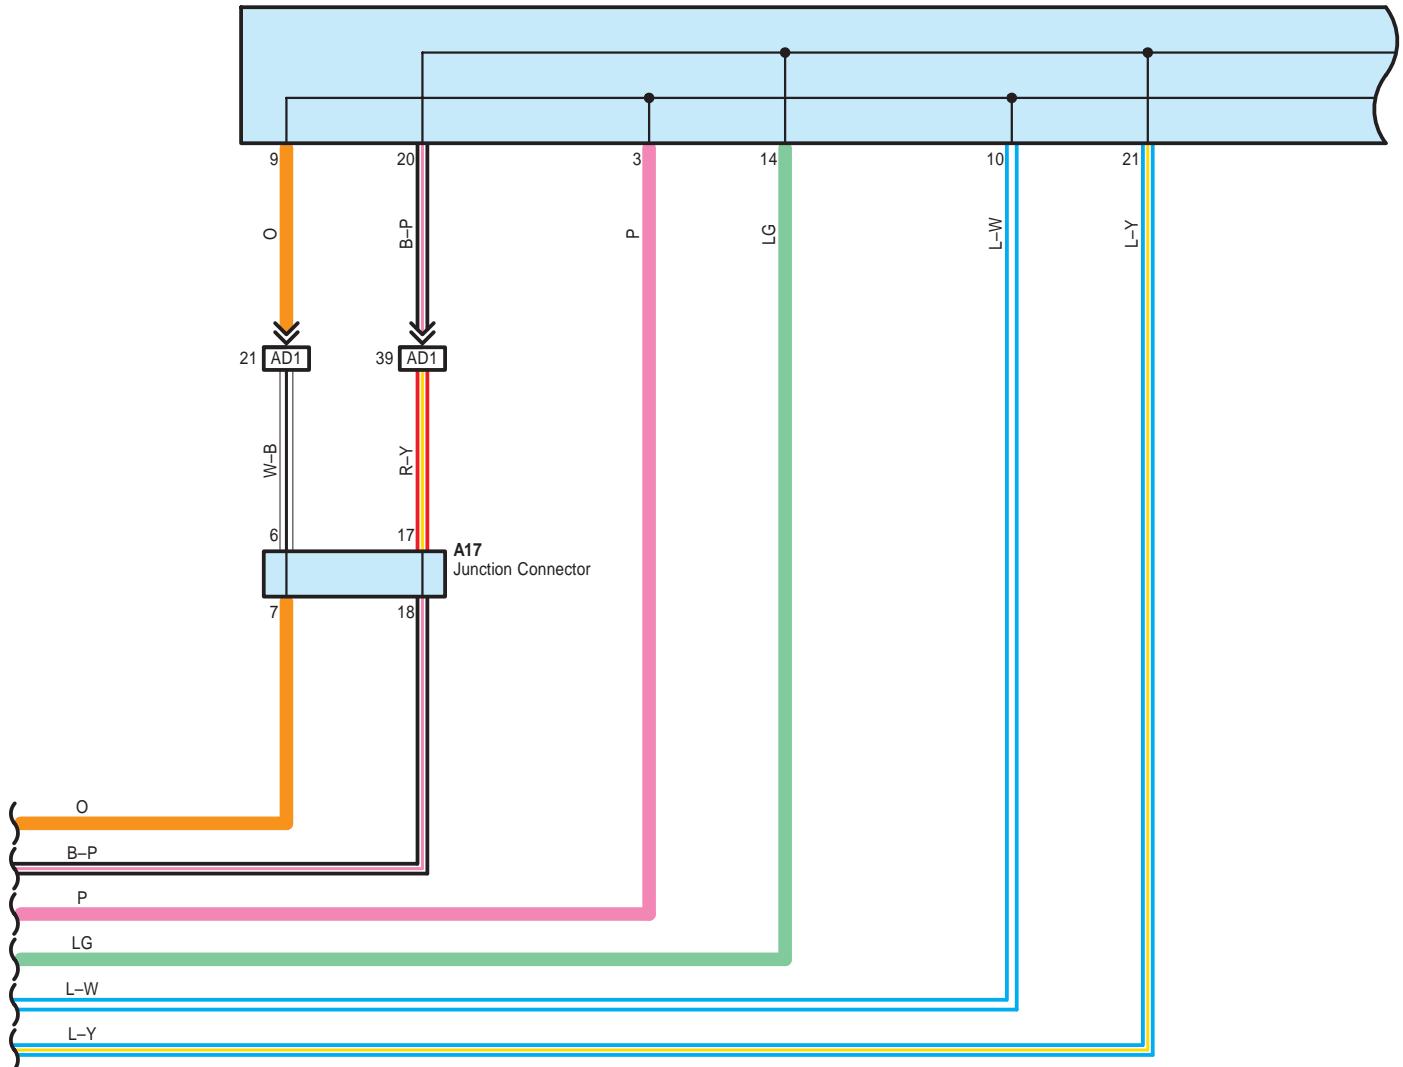



Air Conditioner (RHD Automatic A/C)

A5
VSC (VDC) Control Module

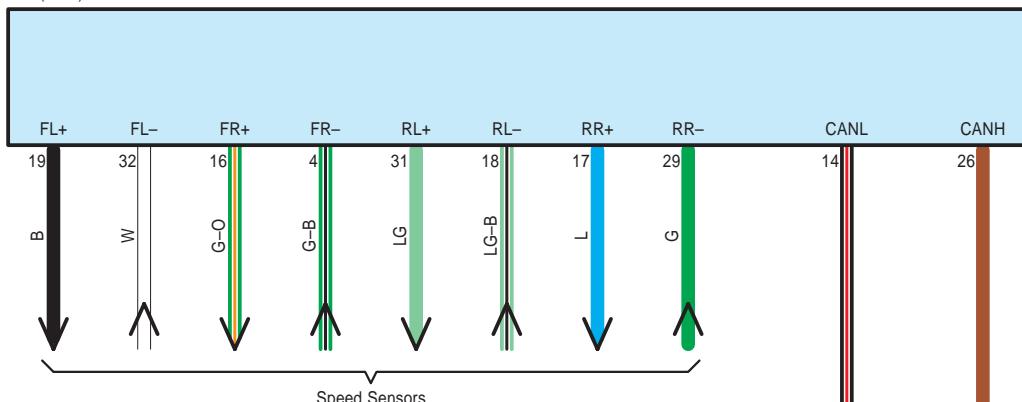

D43
Junction Connector

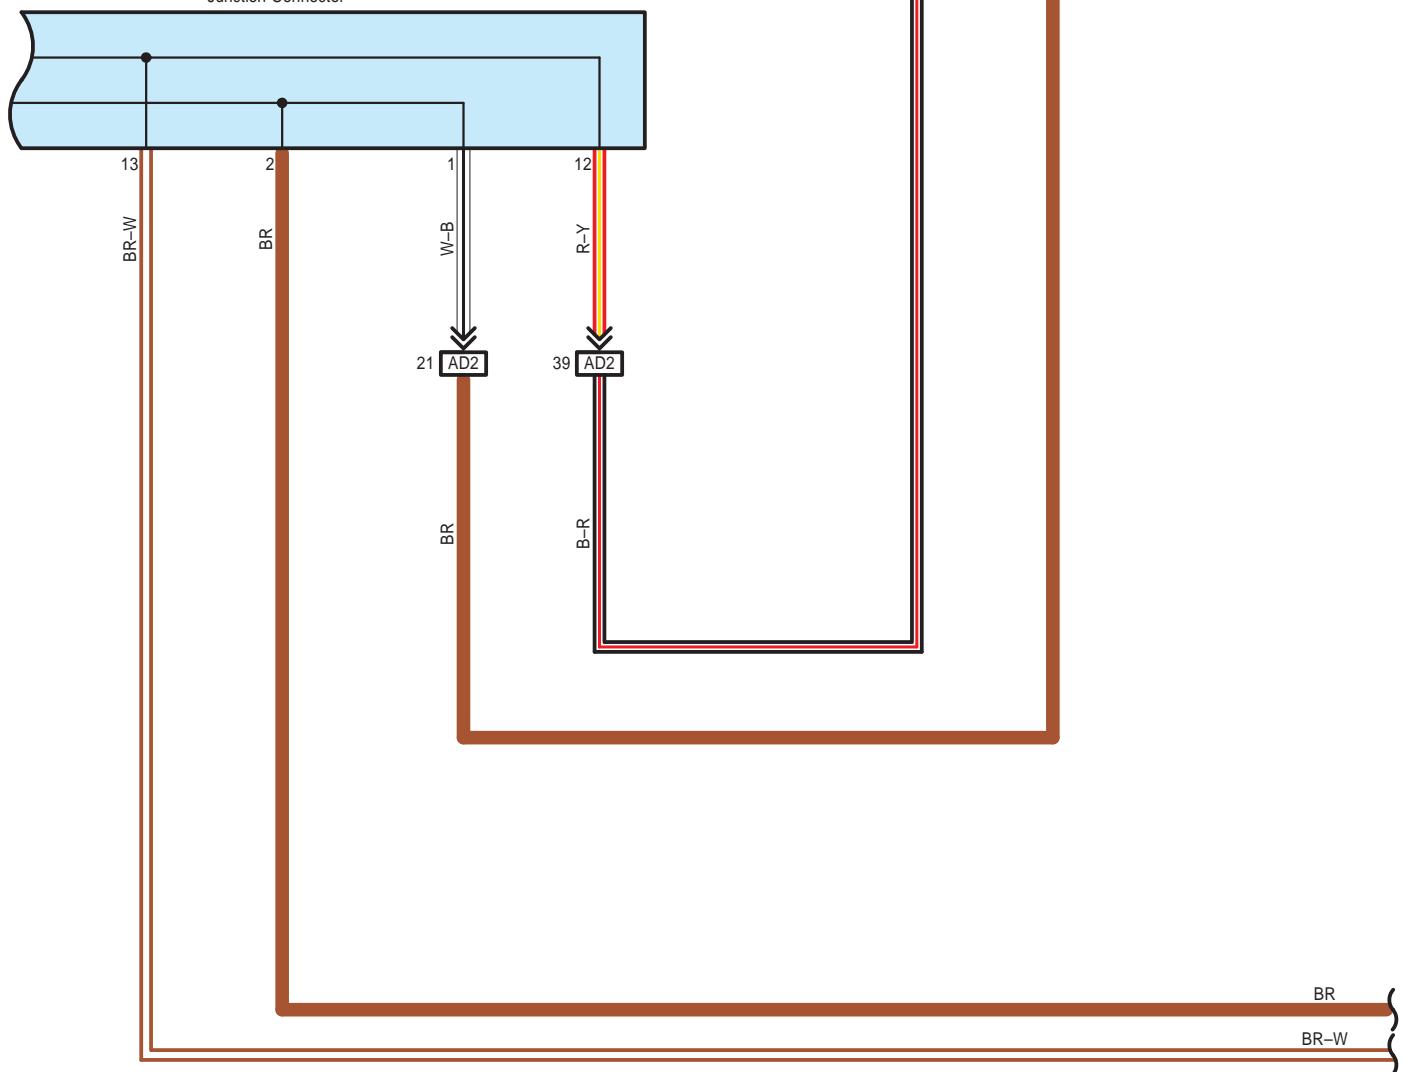

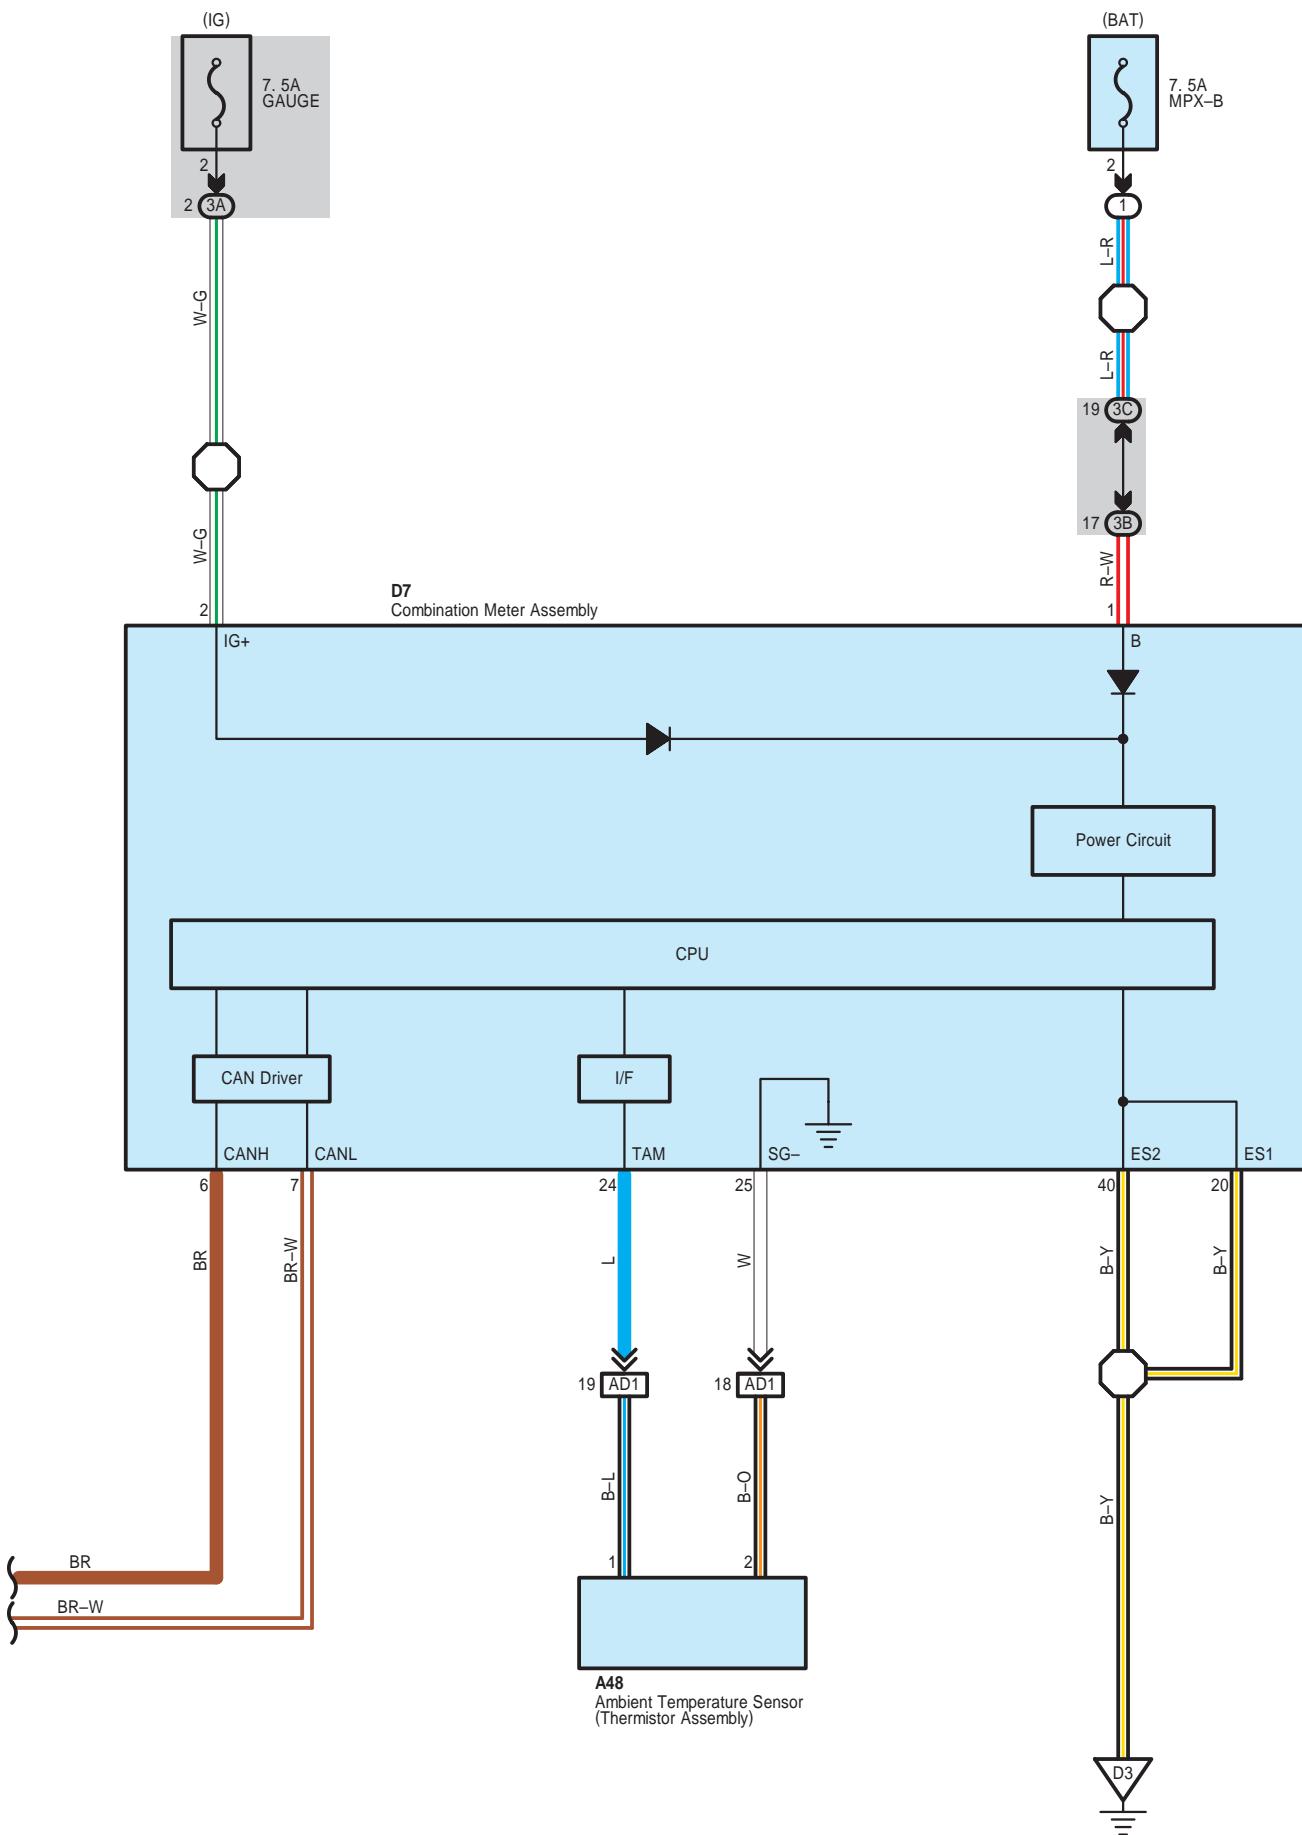

Air Conditioner (RHD Automatic A/C)

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A5	47 (RHD)	A34	B	50 (RHD)	D9 B 48 (RHD)
A7	47 (RHD)	A35	C	50 (RHD)	D16 A 48 (RHD)
A9	A 50 (RHD)	A36	D	50 (RHD)	D17 B 48 (RHD)
A17	50 (RHD)	A48		47 (RHD)	D19 A 48 (RHD)
A24	50 (RHD)	A73	A	50 (RHD)	D20 B 48 (RHD)
A25	50 (RHD)	C17		46 (RHD)	D43 49 (RHD)
A27	50 (RHD)	C33		46 (RHD)	D45 49 (RHD)
A28	50 (RHD)	C35		46 (RHD)	D46 A 49 (RHD)
A29	50 (RHD)	D5	B	48 (RHD)	D47 B 49 (RHD)
A31	50 (RHD)	D6	C	48 (RHD)	D67 49 (RHD)
A32	50 (RHD)	D7		48 (RHD)	
A33	A 50 (RHD)	D8	A	48 (RHD)	

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)
2	25	R/B No. 2 (Behind Glove Box)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


: Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	58 (RHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)

: Ground Points


Code	See Page	Ground Points Location
A3	59 (RHD)	Cowl Side Panel LH
A7	58 (RHD)	Front Fender Apron RH
C1	58 (RHD)	Engine Unit
D1	59 (RHD)	Cowl Side Panel RH
D3	59 (RHD)	Instrument Panel Brace LH


Air Conditioner (Manual A/C)

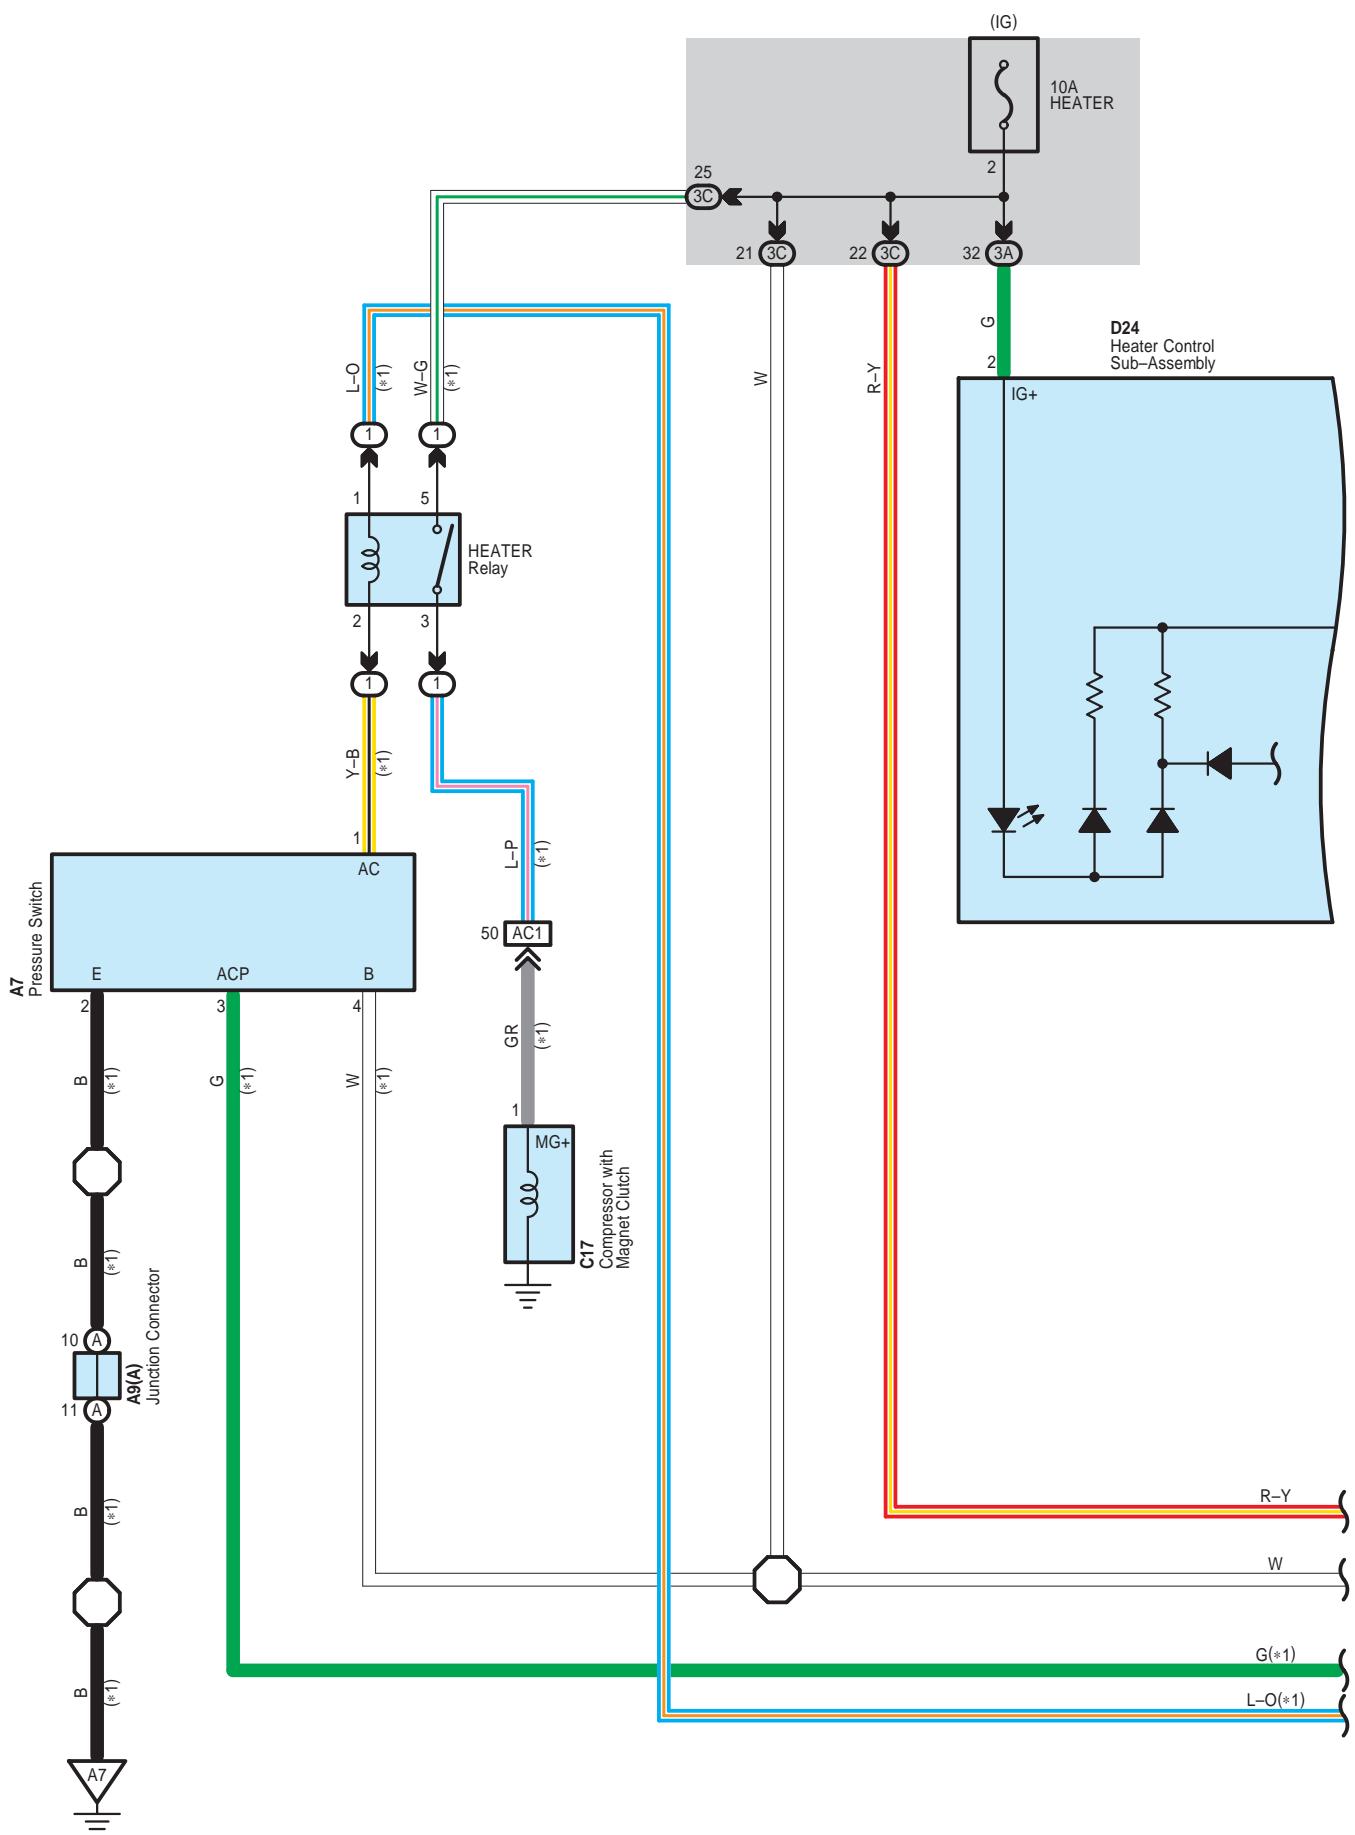

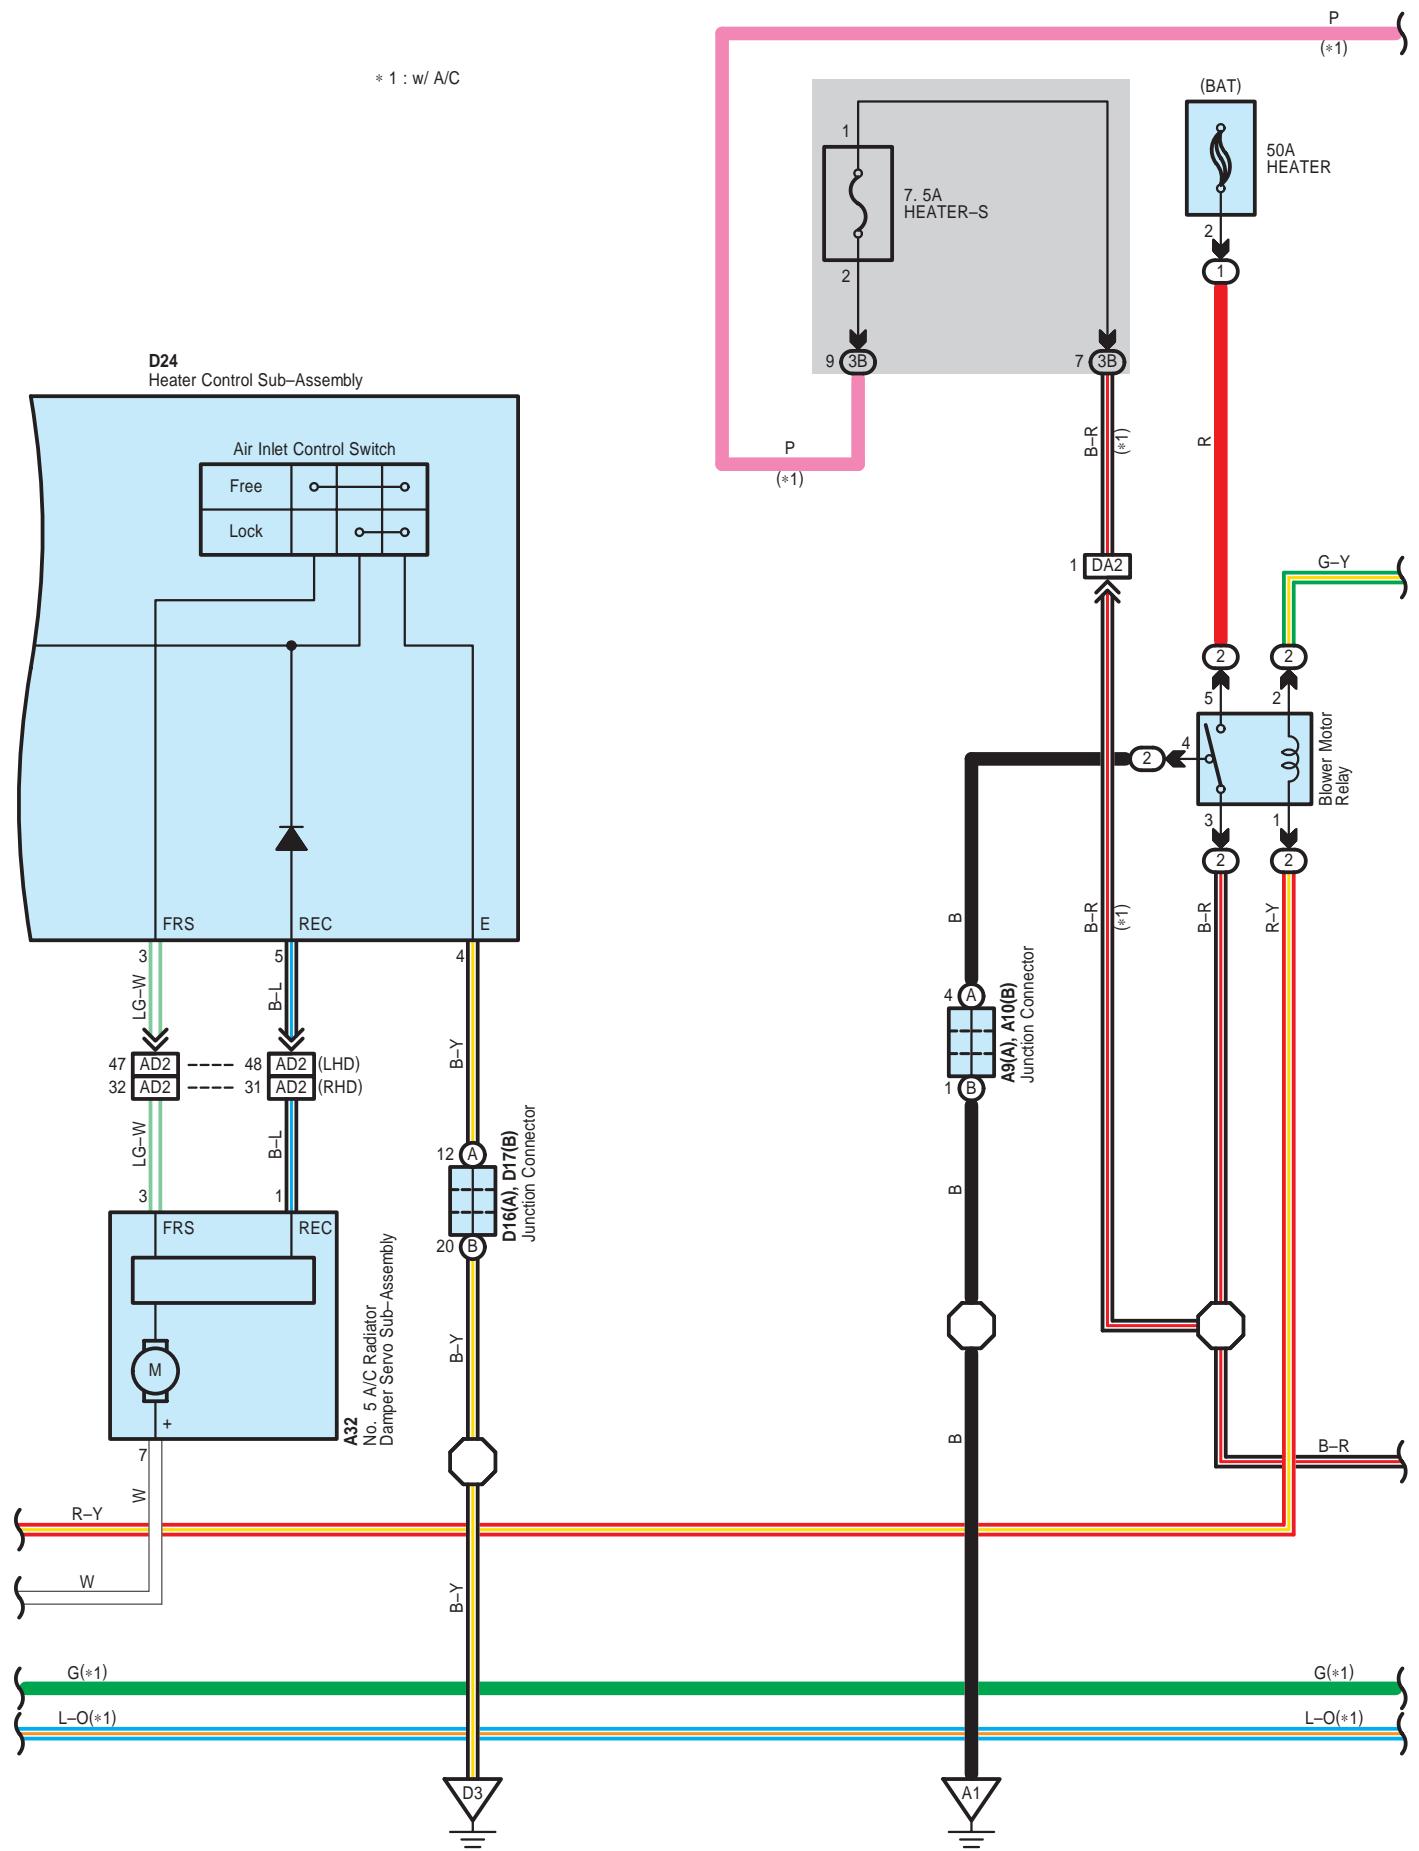


Air Conditioner (Manual A/C)

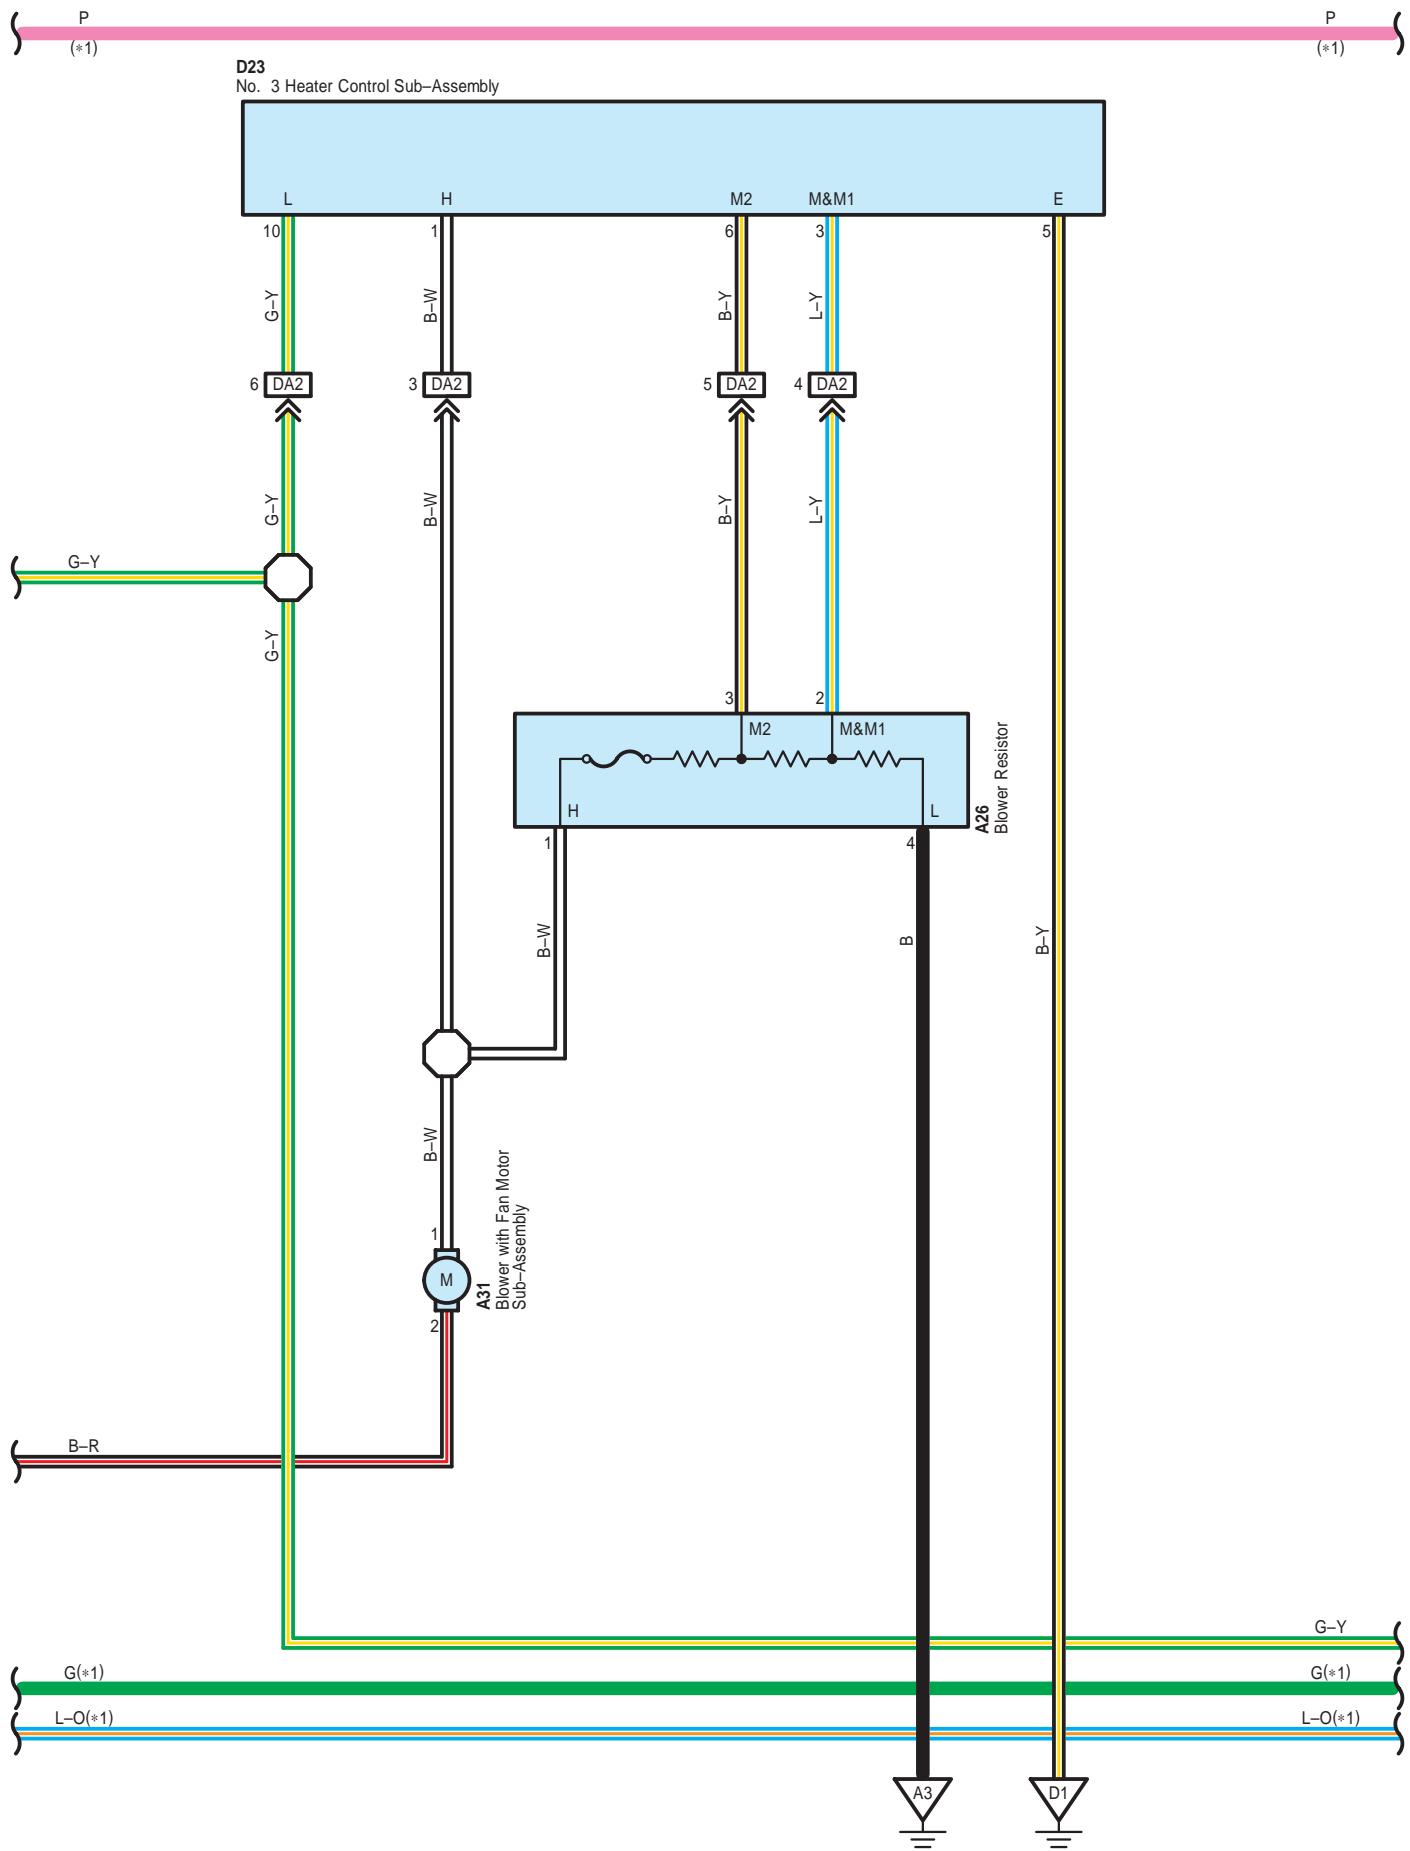

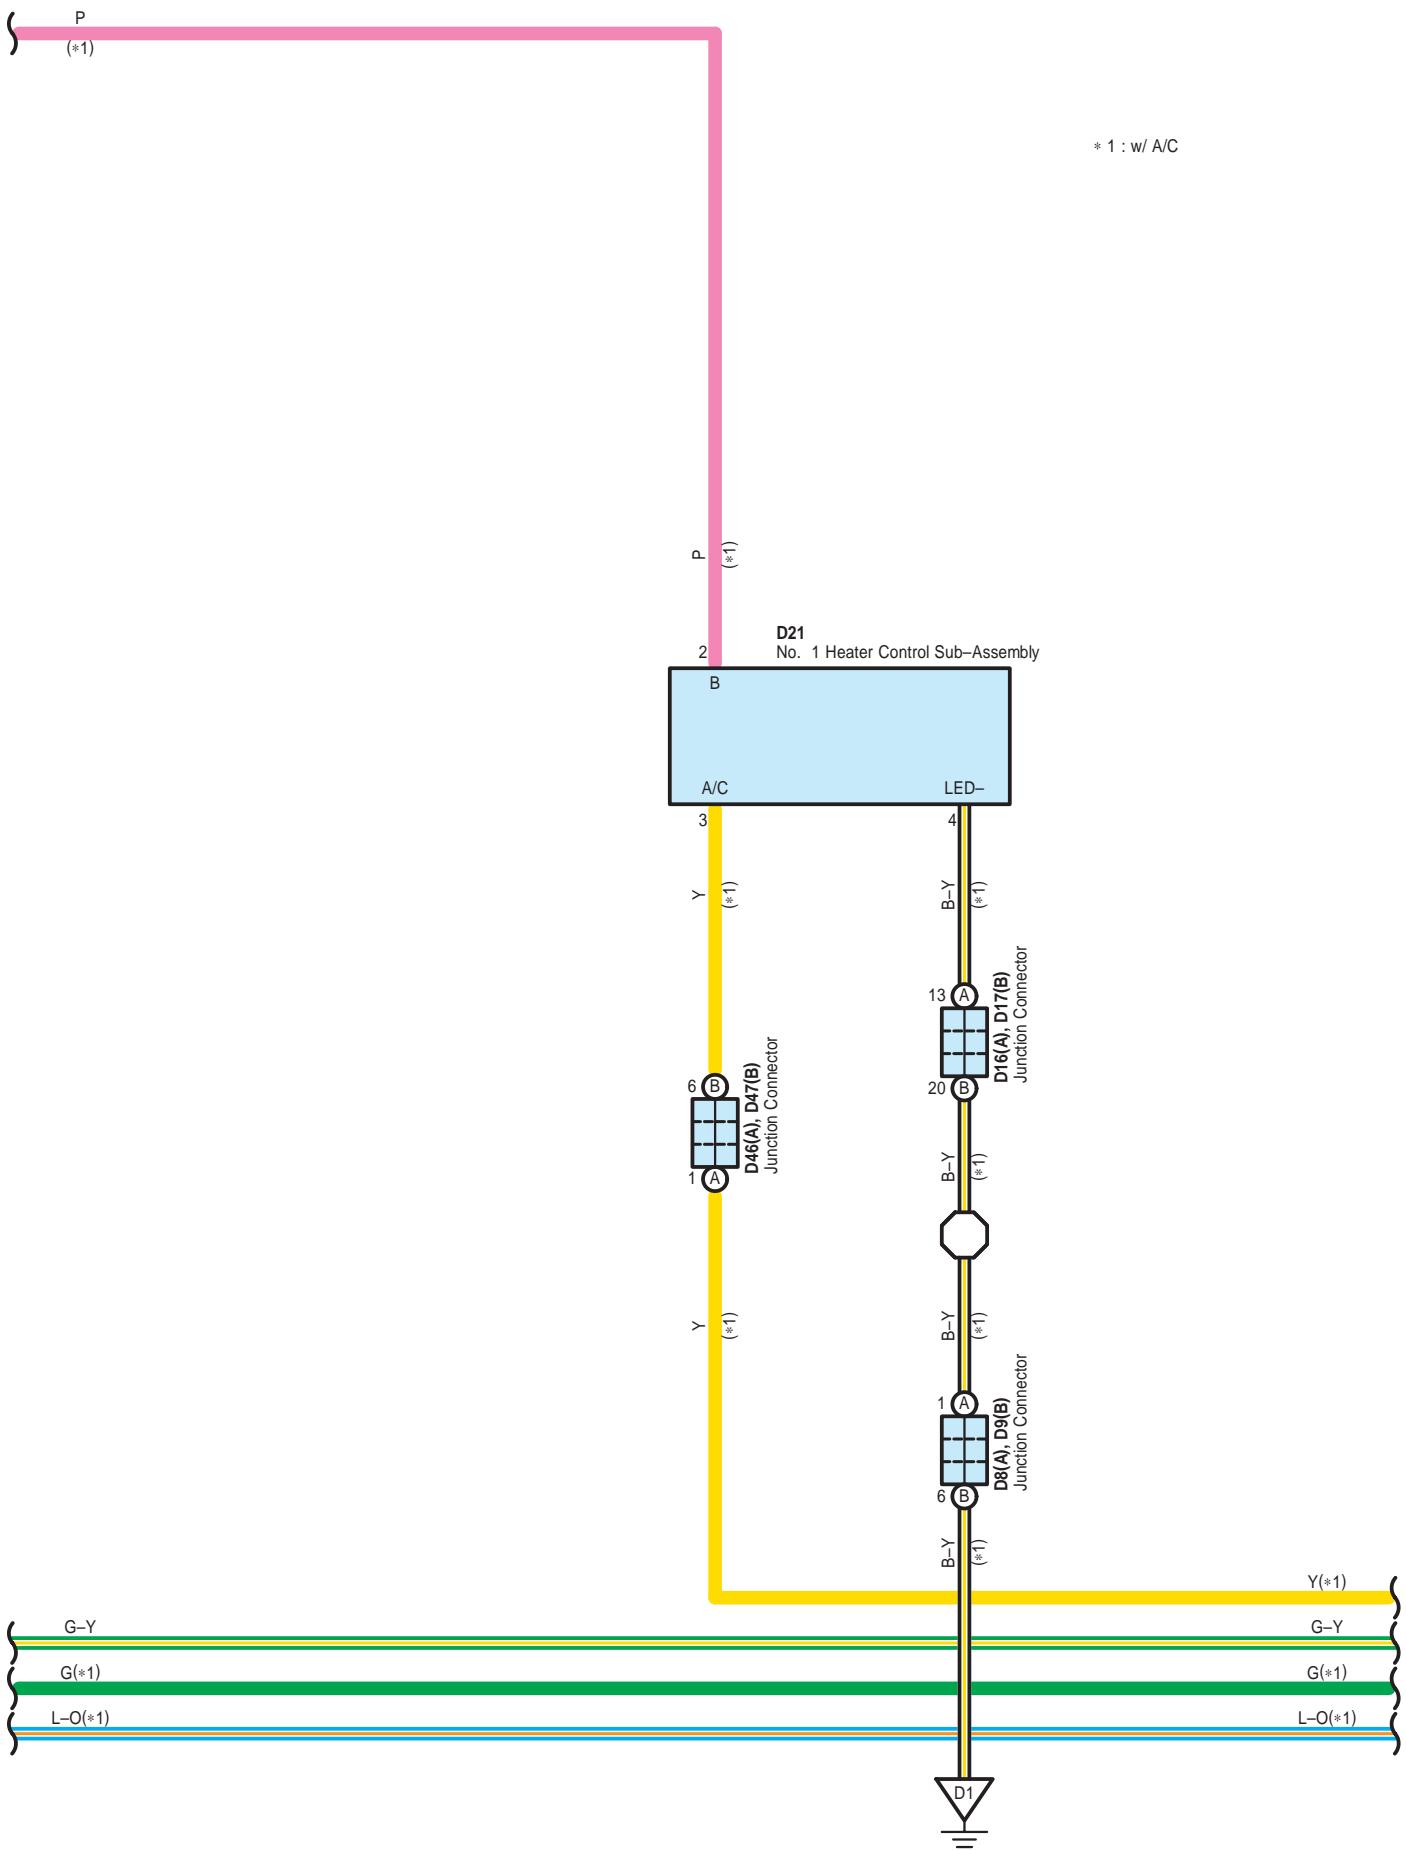


Air Conditioner (Manual A/C)

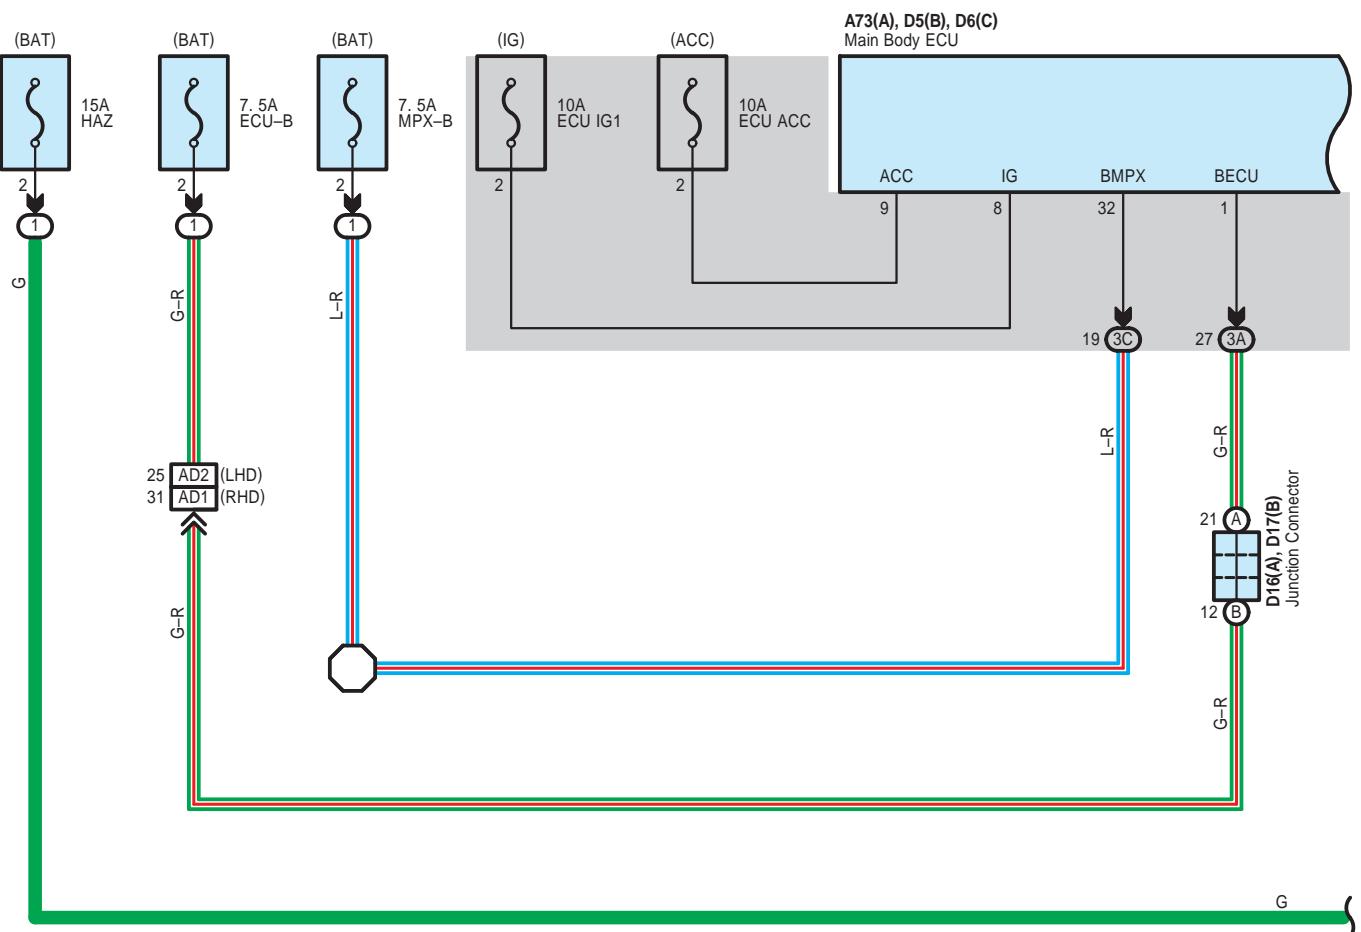

* 1 : w/ A/C




A73(A), D5(B), D6(C)
Main Body ECU

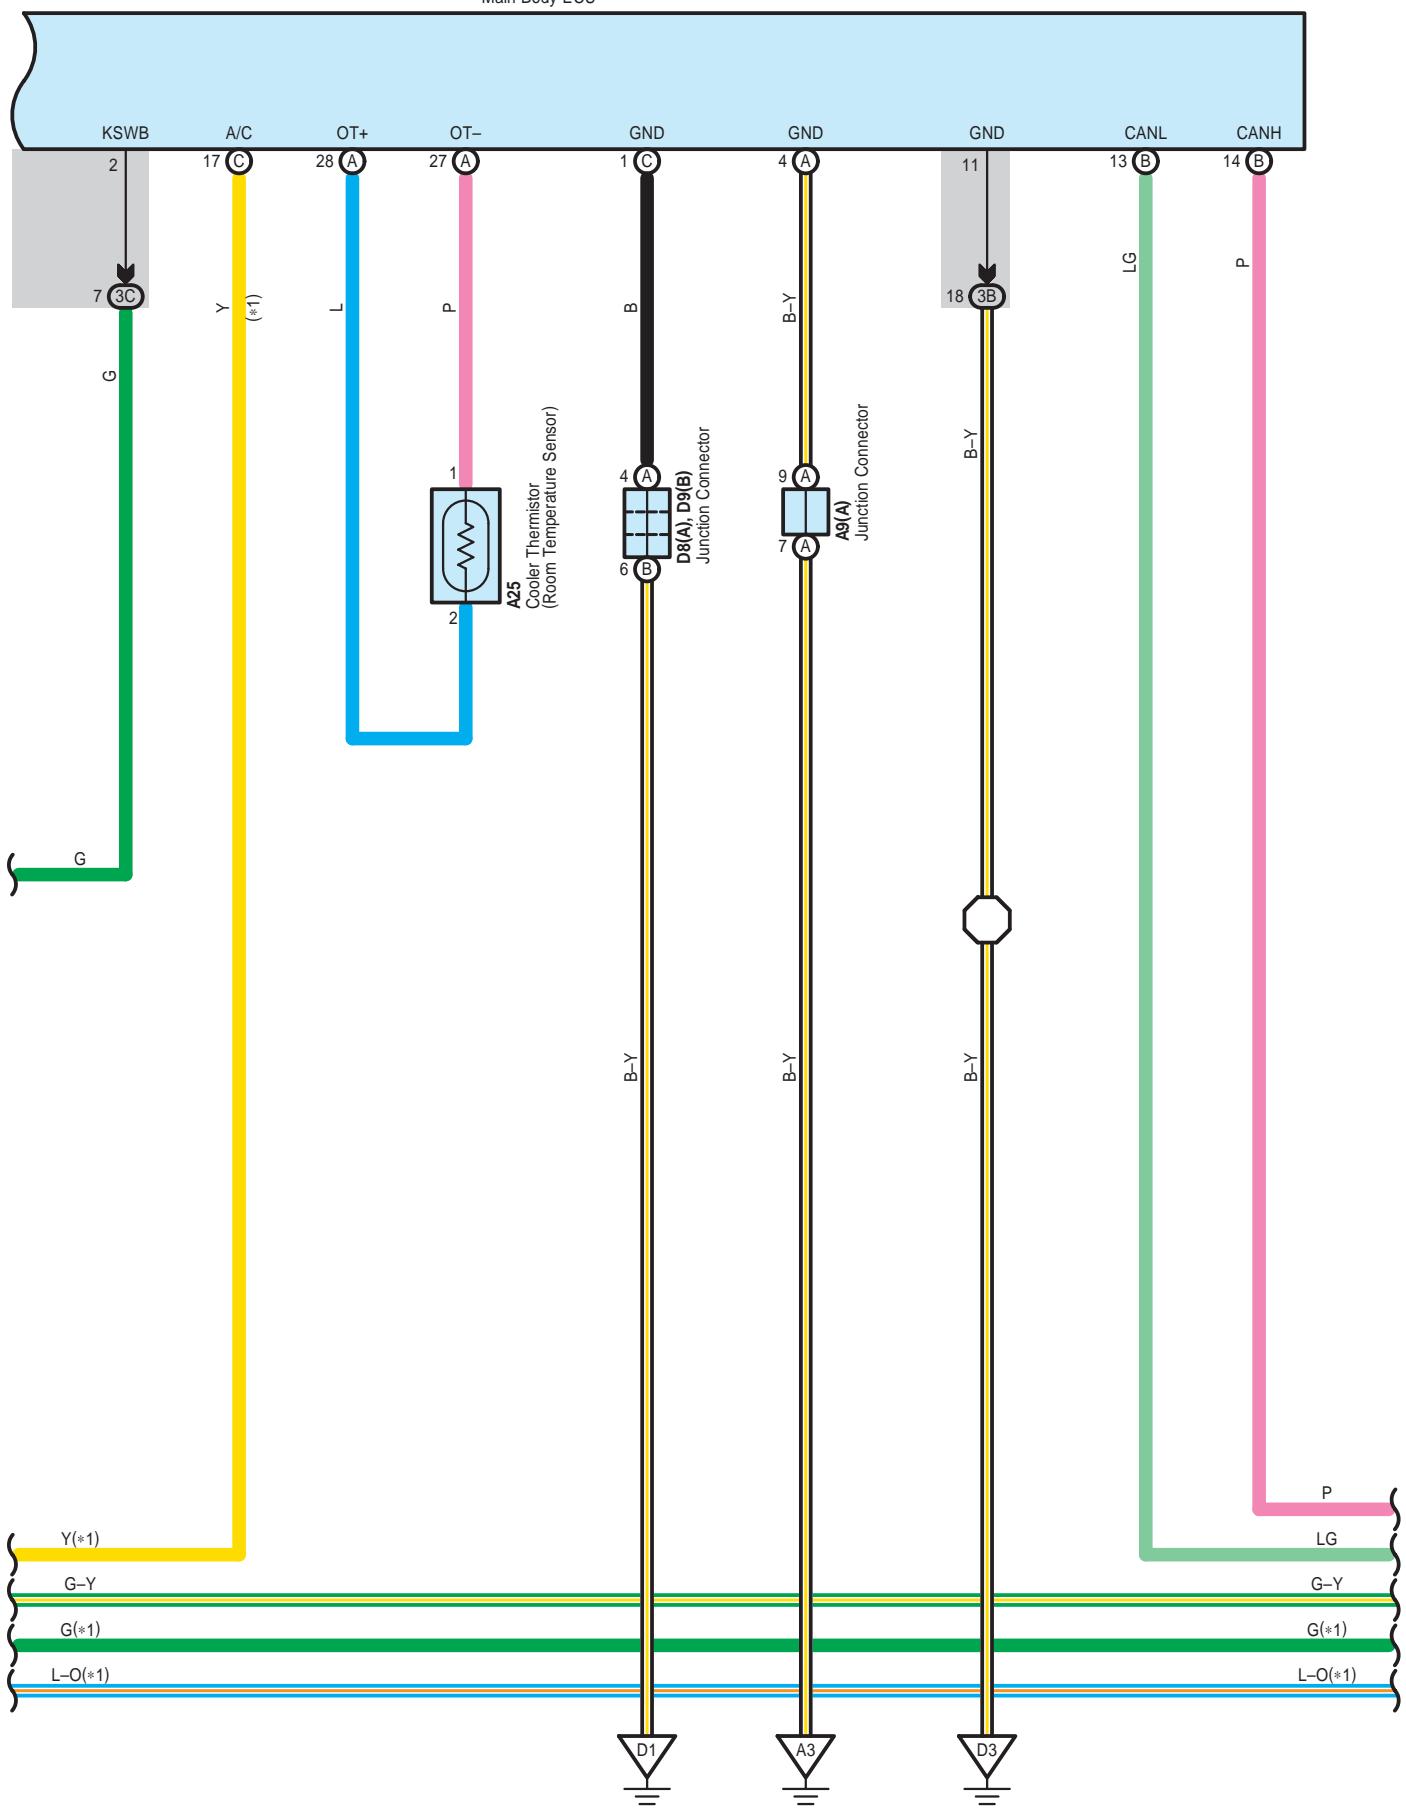


Air Conditioner (Manual A/C)

A33(A), A34(B), A35(C), A36(D)
ECM

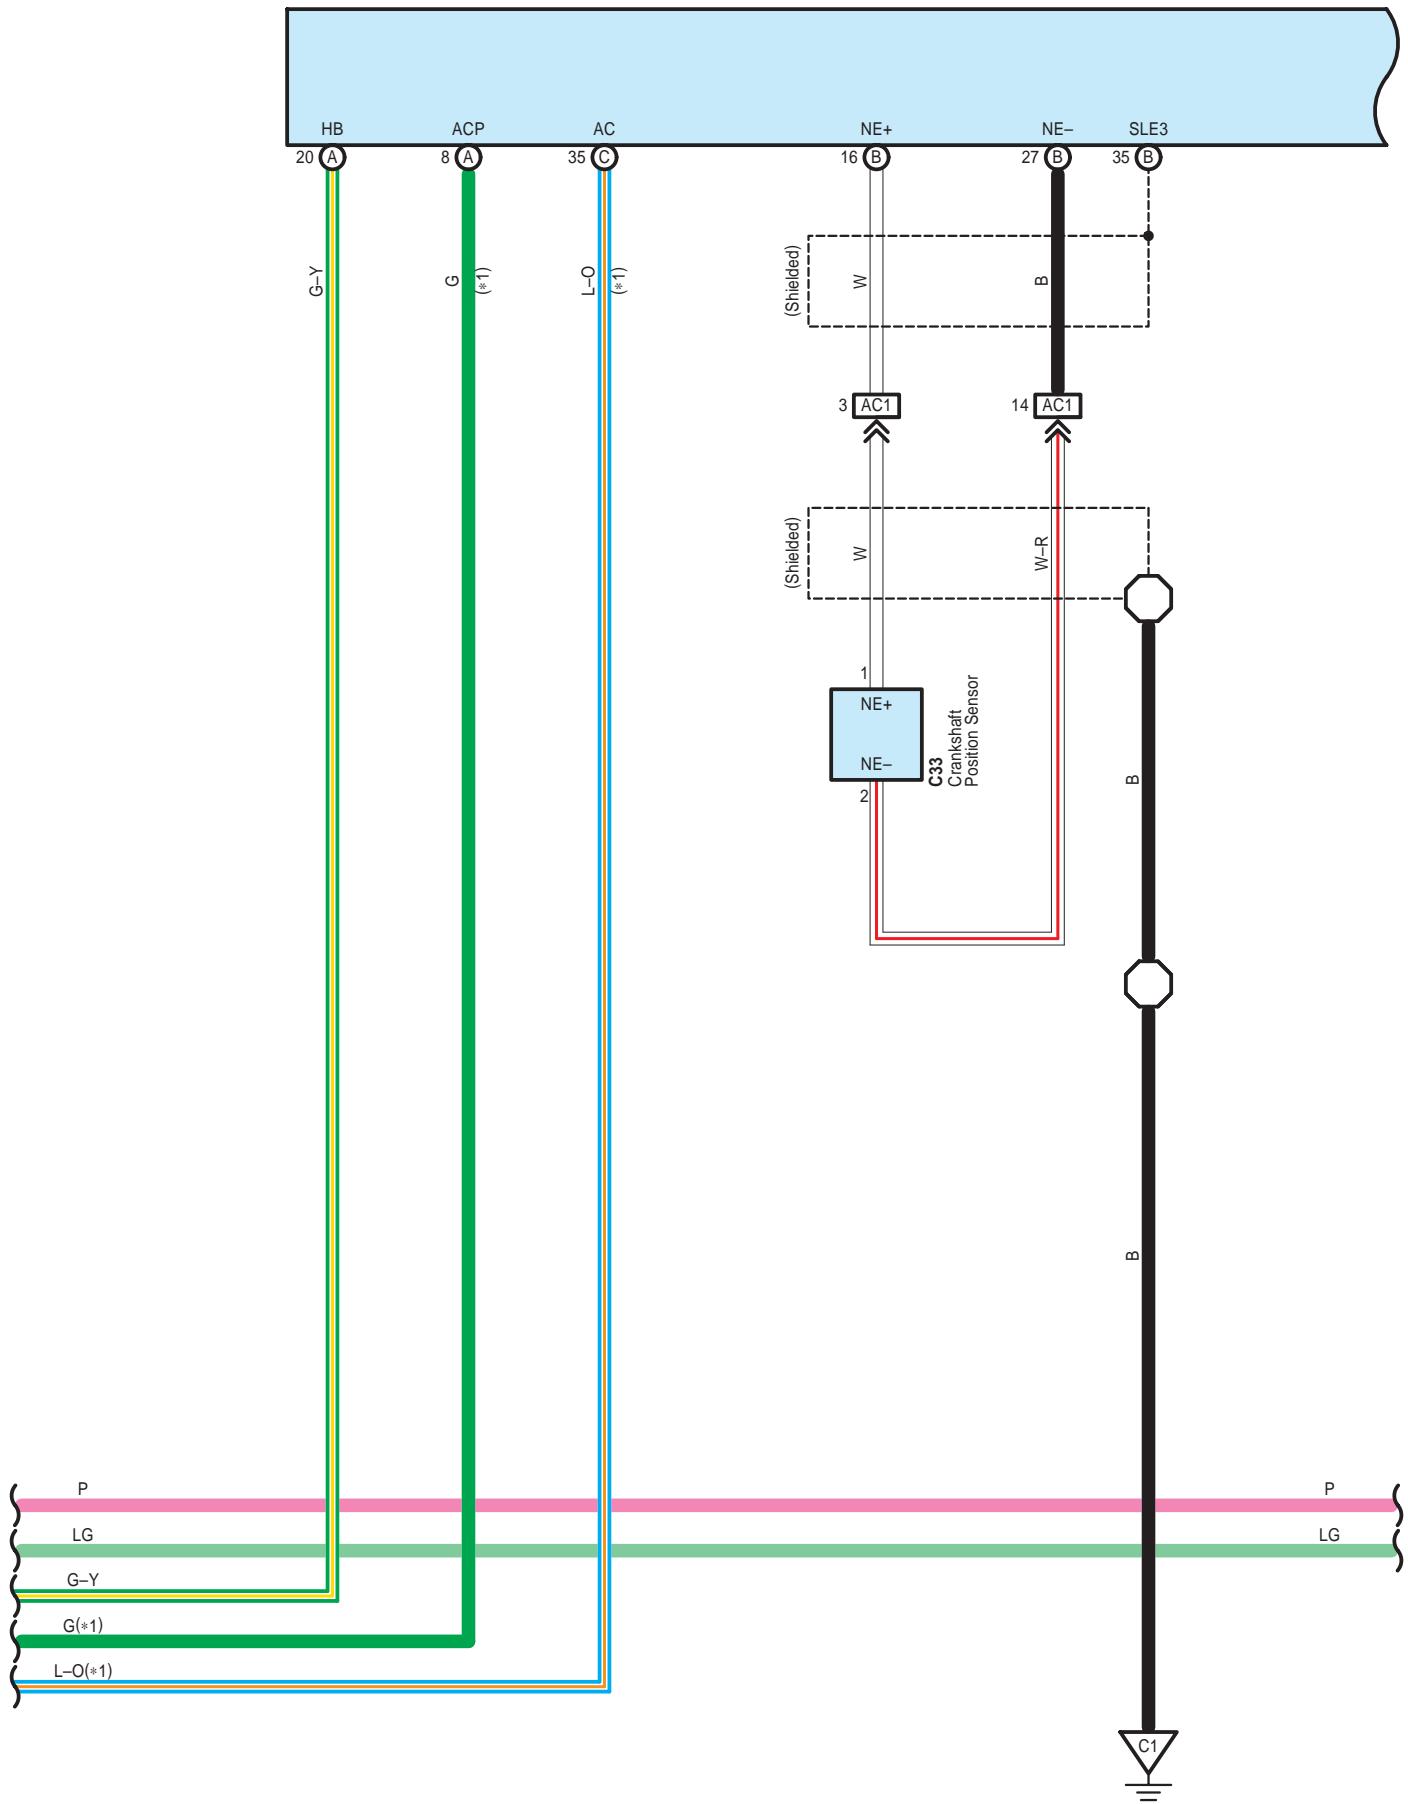


A33(A), A34(B), A35(C), A36(D)
ECM

* 1 : w/ A/C

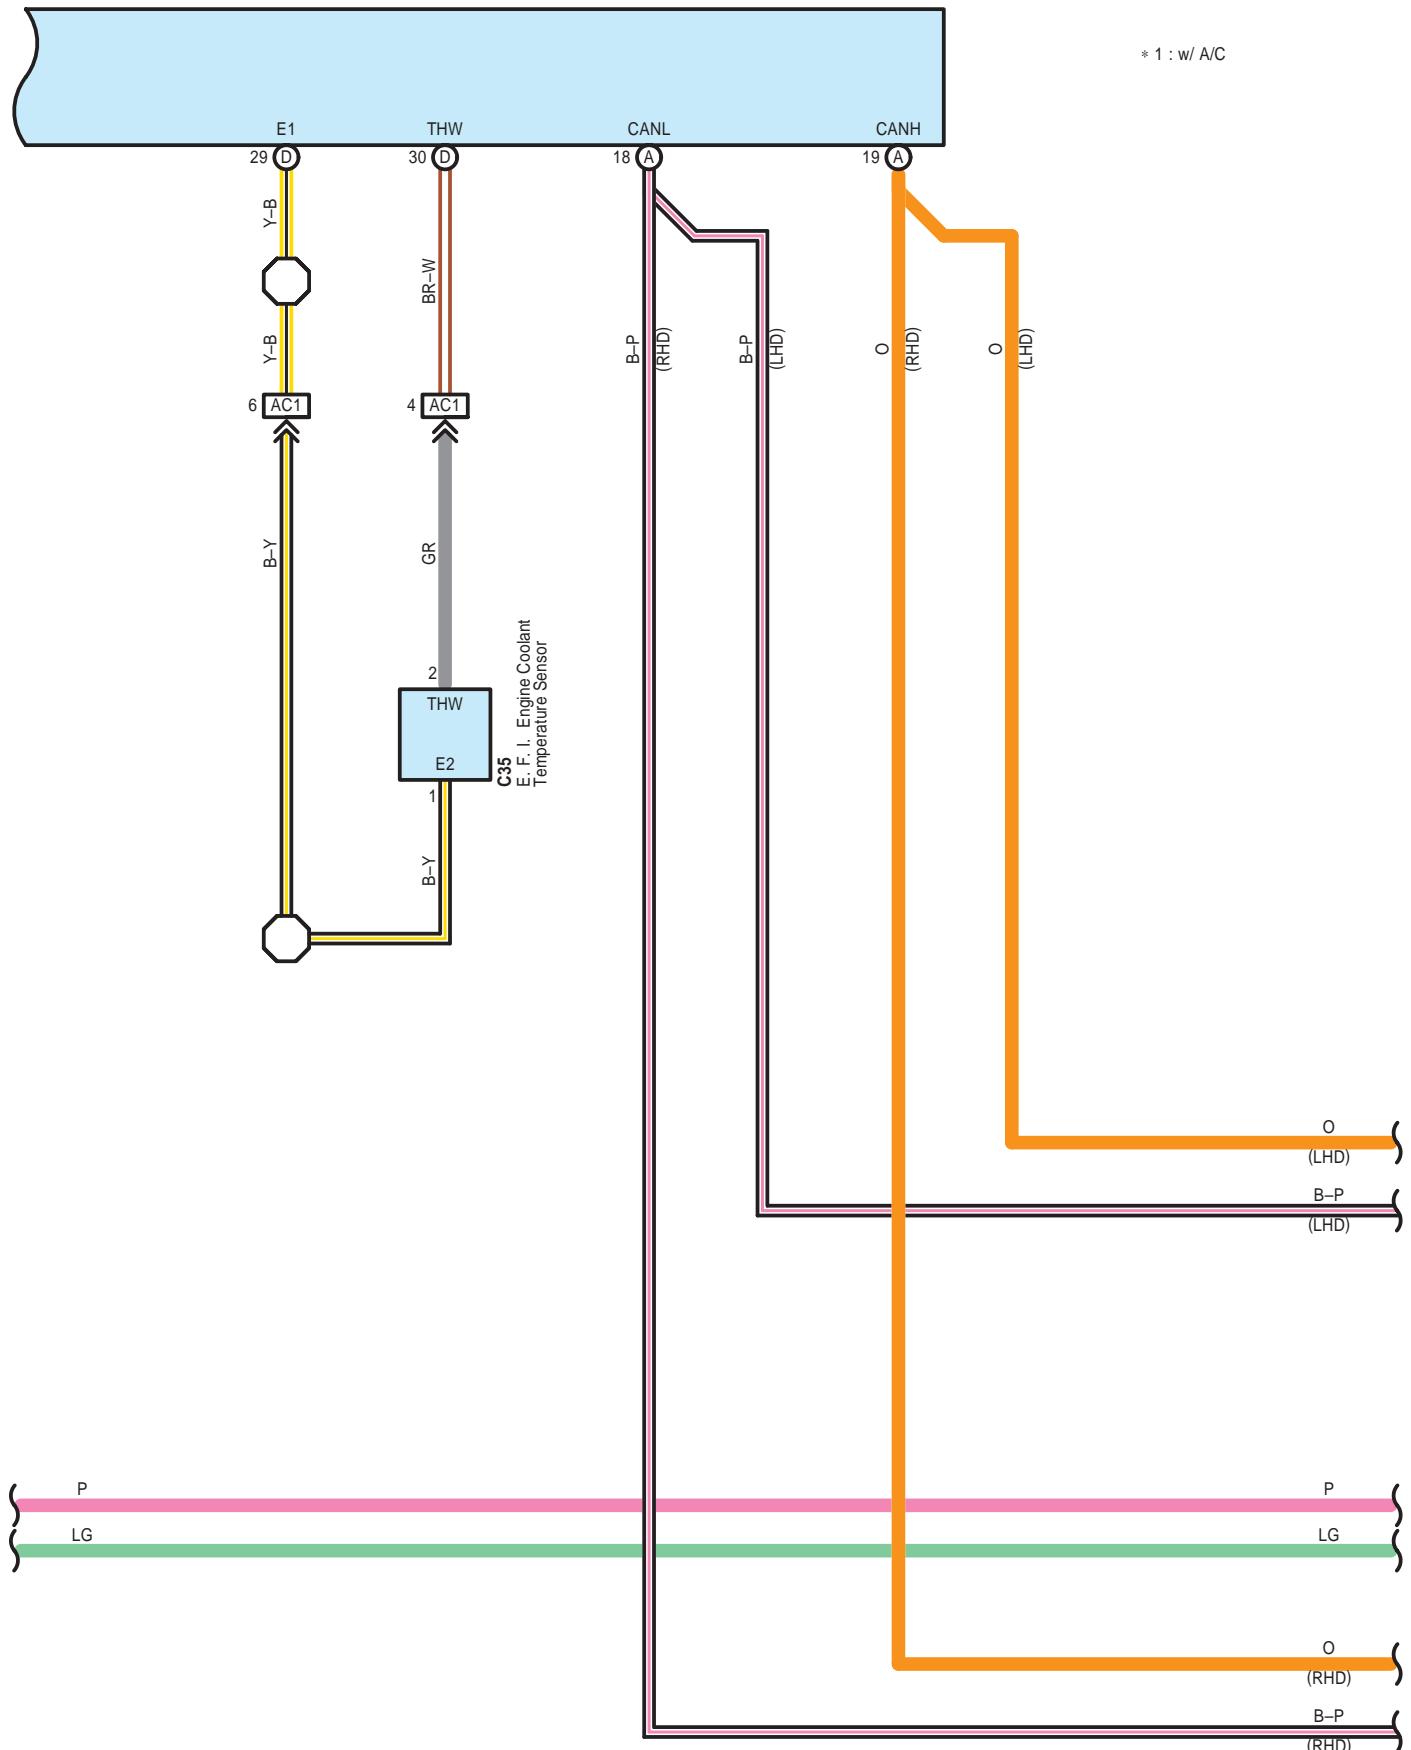


Air Conditioner (Manual A/C)


A5
VSC (VDC) Control Module

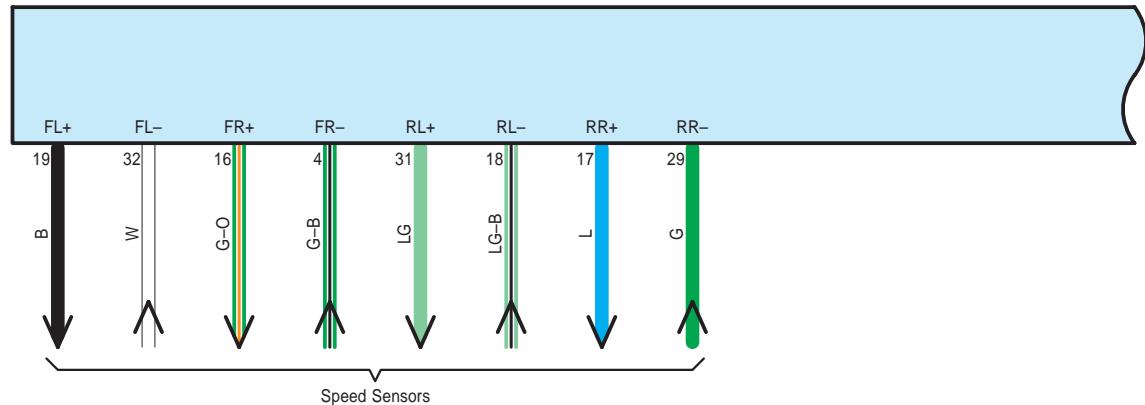

D43
Junction Connector

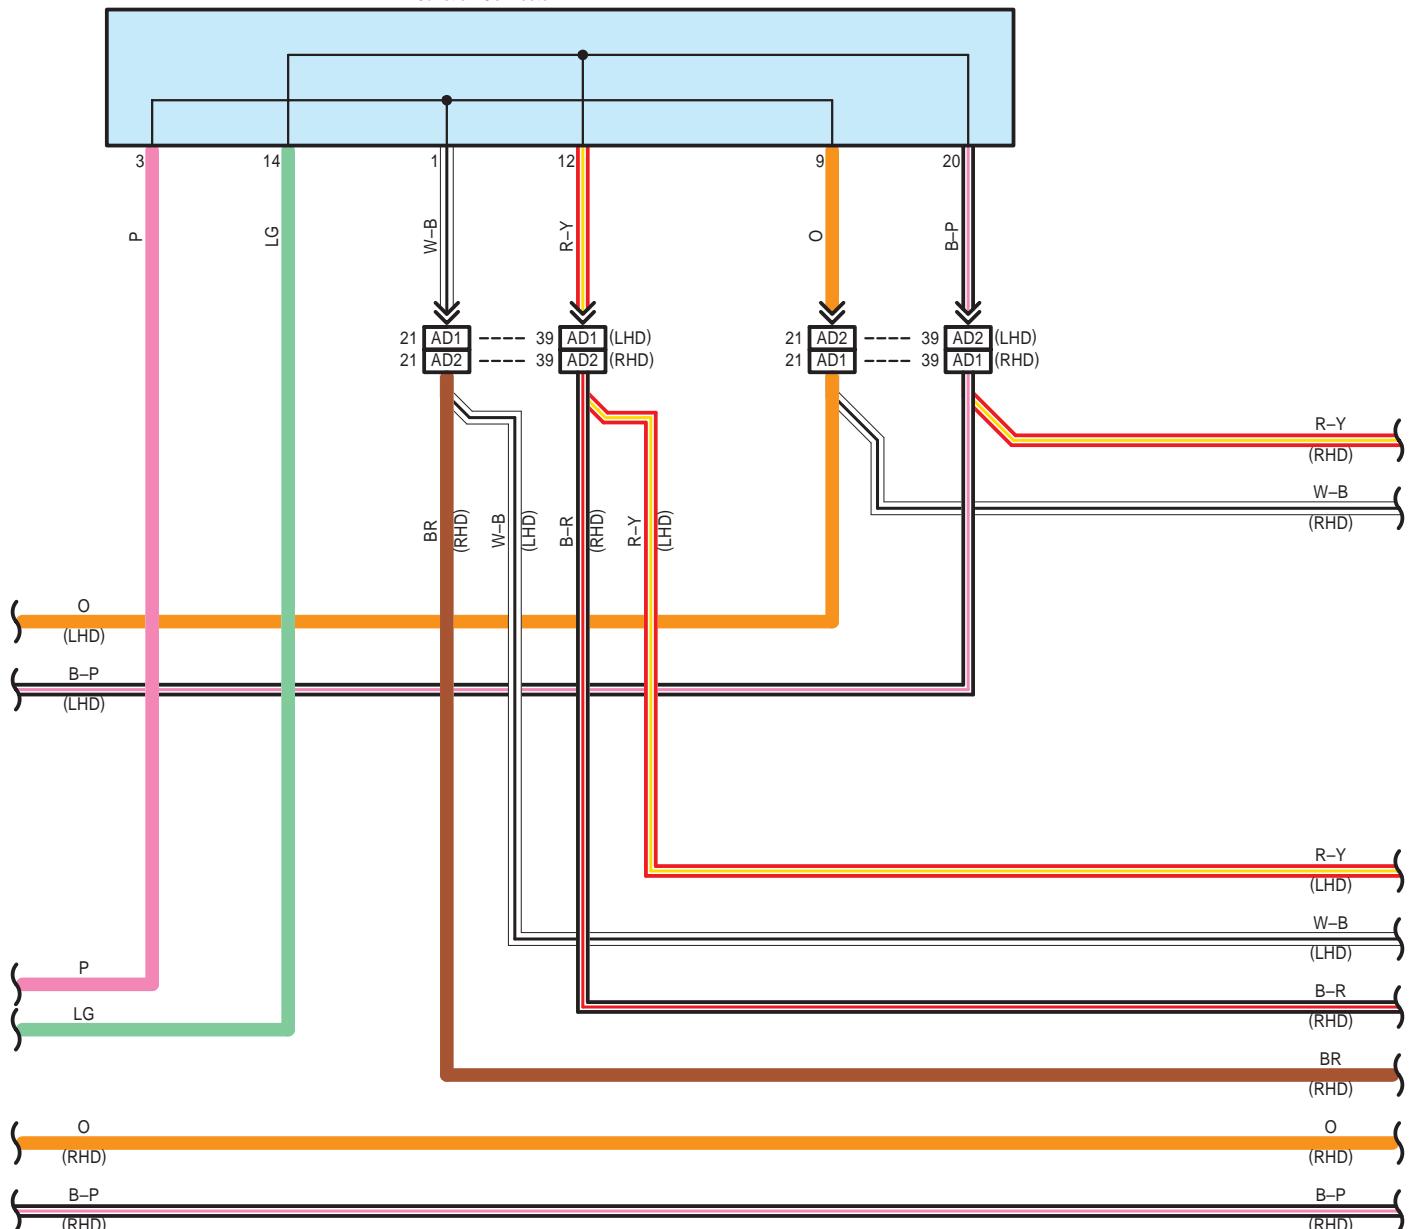

A5
VSC (VDC) Control Module

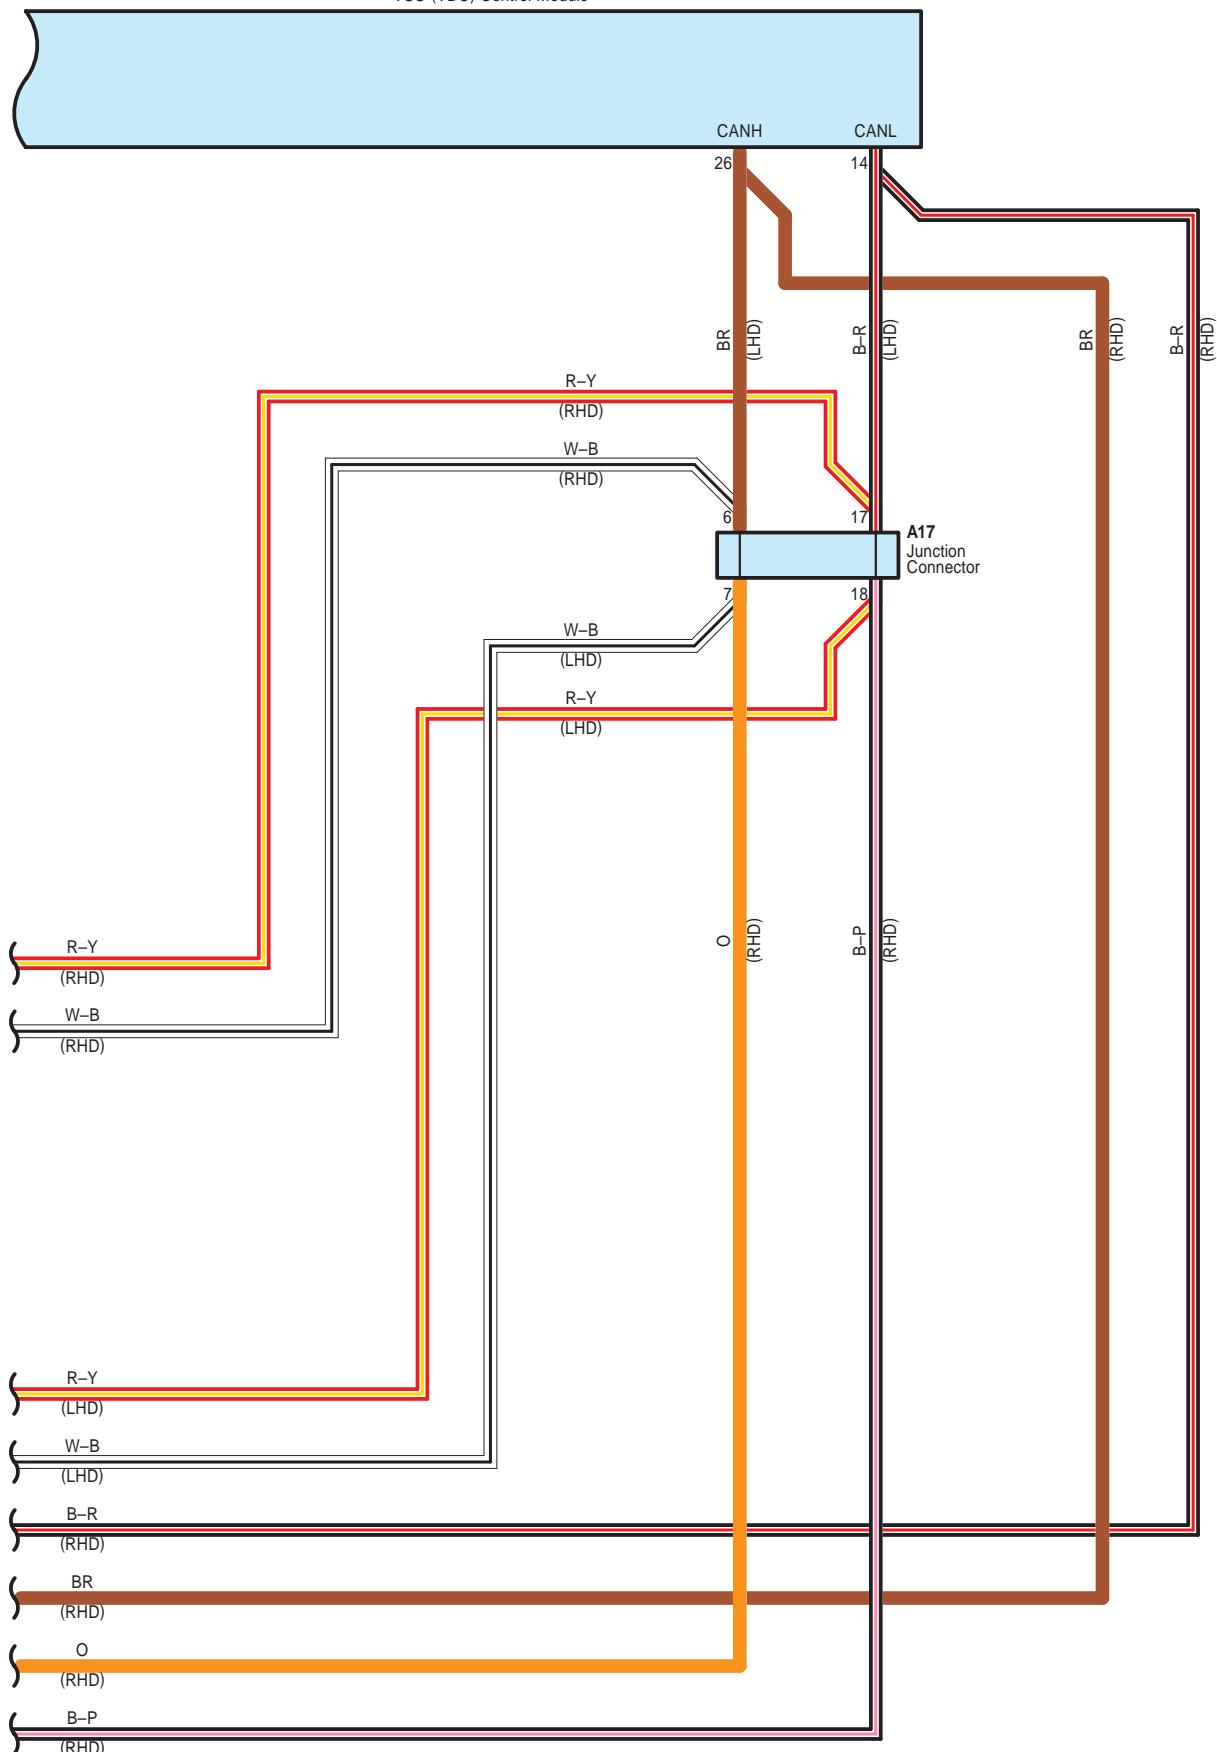

Air Conditioner (Manual A/C)

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page				
A5		39 (LHD)		A34	B	42 (LHD)		D9	B	40 (LHD)				
		47 (RHD)				50 (RHD)				48 (RHD)				
A7		39 (LHD)		A35	C	42 (LHD)		D16	A	40 (LHD)				
		47 (RHD)				50 (RHD)				48 (RHD)				
A9	A	42 (LHD)		A36	D	42 (LHD)		D17	B	40 (LHD)				
		50 (RHD)				50 (RHD)				48 (RHD)				
A10	B	42 (LHD)		A73	A	42 (LHD)		D21		40 (LHD)				
		50 (RHD)				50 (RHD)				48 (RHD)				
A17		42 (LHD)		C17		38 (LHD)		D23		40 (LHD)				
		50 (RHD)				46 (RHD)				48 (RHD)				
A25		42 (LHD)		C33		38 (LHD)		D24		40 (LHD)				
		50 (RHD)				46 (RHD)				48 (RHD)				
A26		42 (LHD)		C35		38 (LHD)		D43		41 (LHD)				
		50 (RHD)				46 (RHD)				49 (RHD)				
A31		42 (LHD)		D5	B	40 (LHD)		D46	A	41 (LHD)				
		50 (RHD)				48 (RHD)				49 (RHD)				
A32		42 (LHD)		D6	C	40 (LHD)		D47	B	41 (LHD)				
		50 (RHD)				48 (RHD)				49 (RHD)				
A33	A	42 (LHD)		D8	A	40 (LHD)								
		50 (RHD)				48 (RHD)								

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)
2	25	R/B No. 2 (Behind Glove Box)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
	58 (RHD)	
AD1	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	59 (RHD)	
AD2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
	59 (RHD)	
DA2	55 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Around A/C Unit)
	59 (RHD)	

▽ : Ground Points


Code	See Page	Ground Points Location
A1	54 (LHD)	Front Fender Apron LH
	58 (RHD)	
A3	55 (LHD)	Cowl Side Panel RH
	59 (RHD)	
A7	54 (LHD)	Front Fender Apron RH
	58 (RHD)	
C1	54 (LHD)	Engine Unit
	58 (RHD)	
D1	55 (LHD)	Cowl Side Panel LH
	59 (RHD)	
D3	55 (LHD)	Instrument Panel Brace RH




: Ground Points


Code	See Page	Ground Points Location
D3	59 (RHD)	Instrument Panel Brace LH

Option Connector

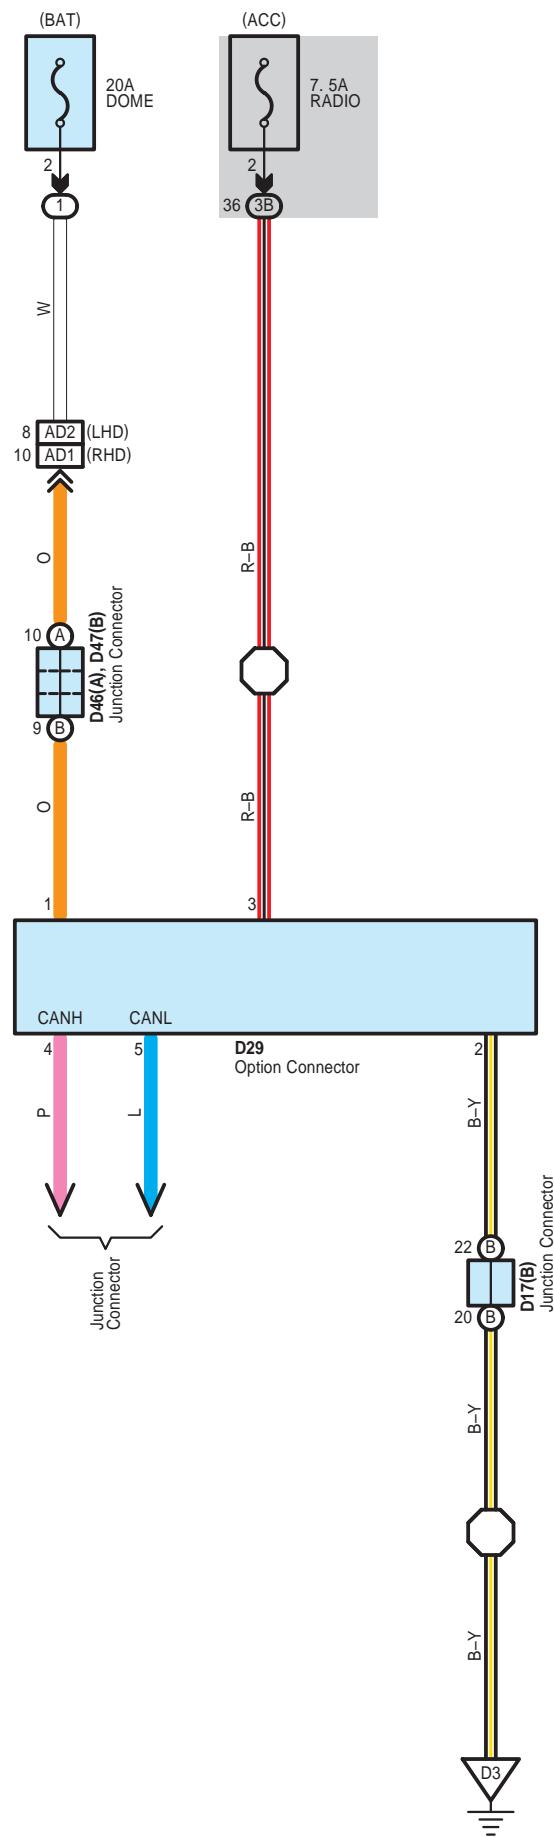

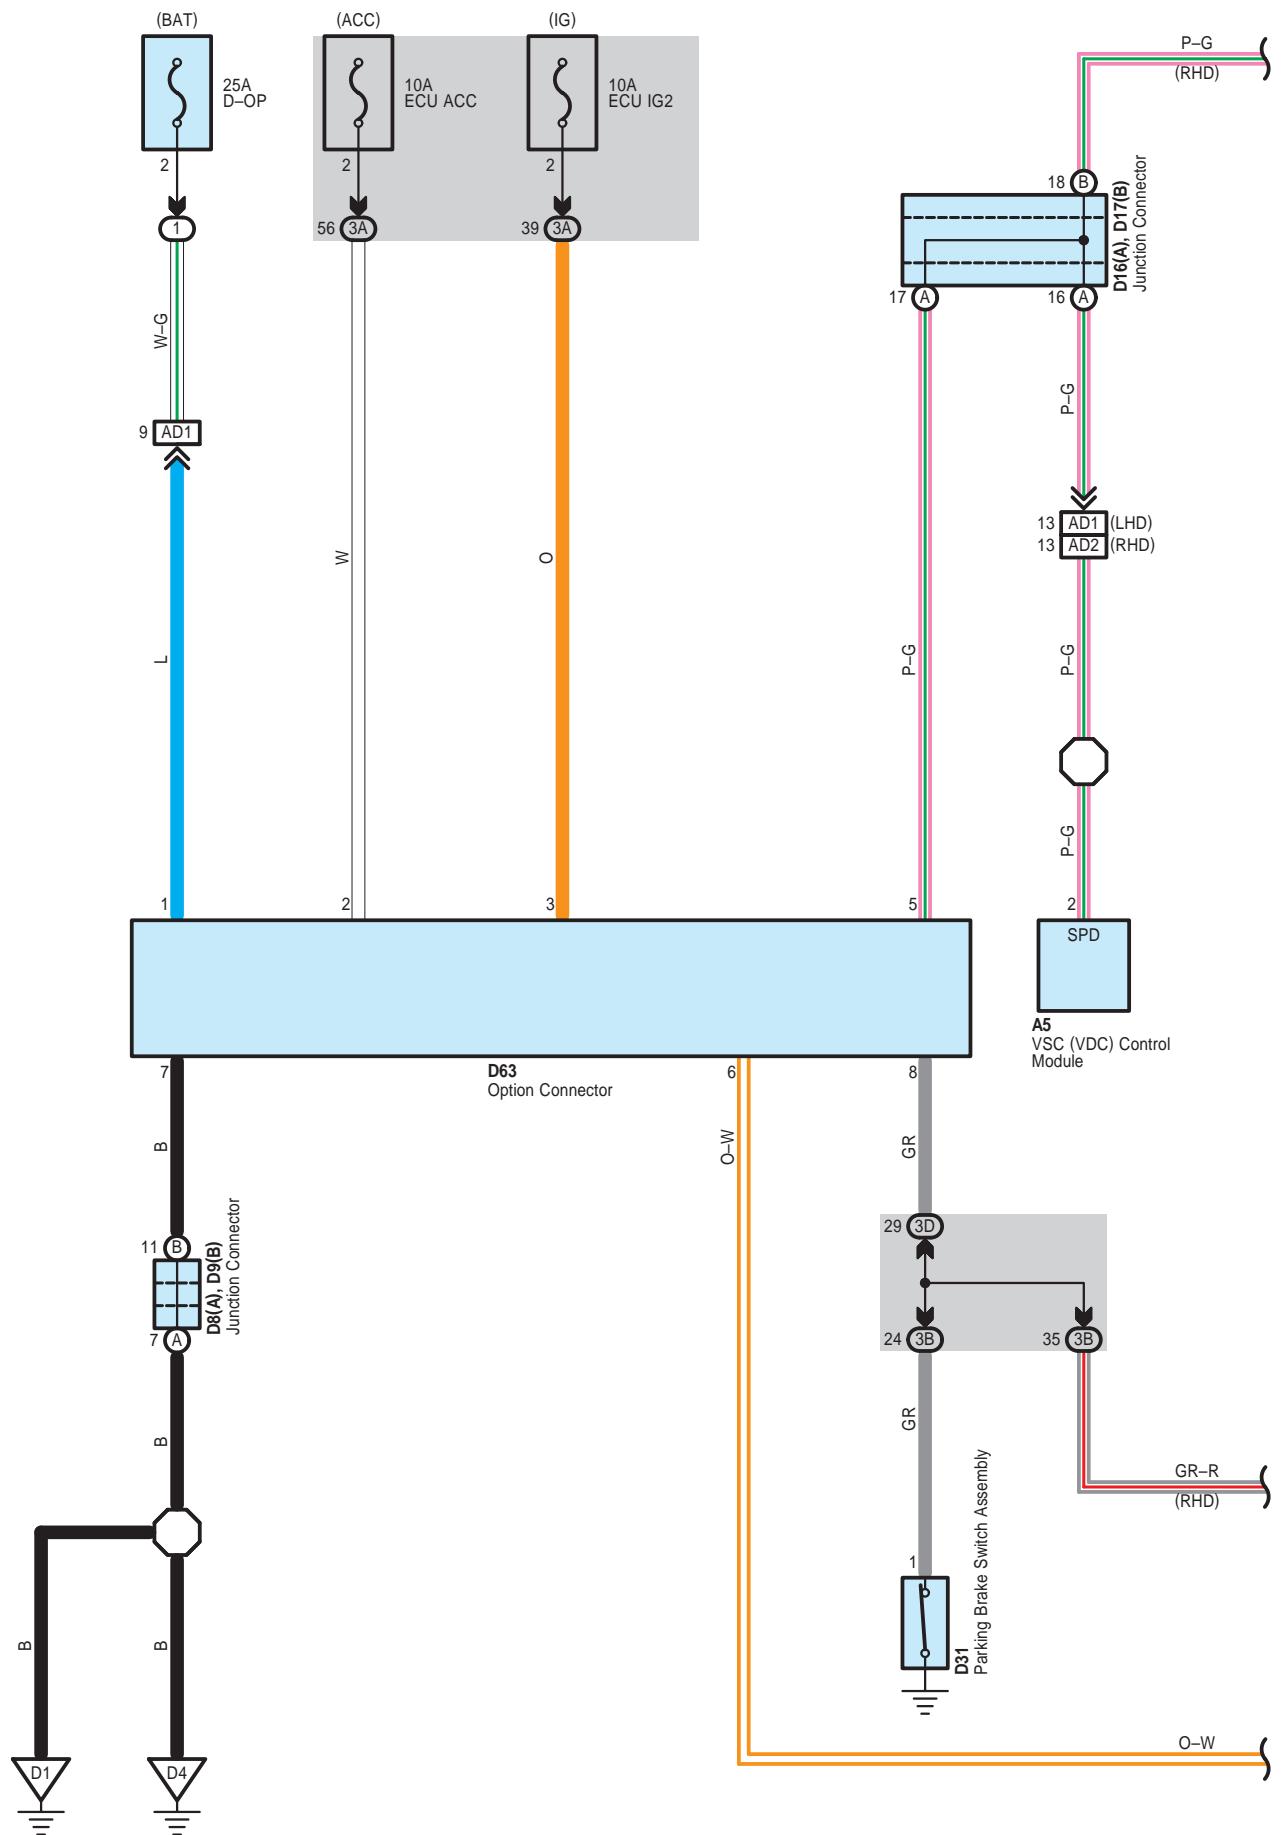

Option Connector

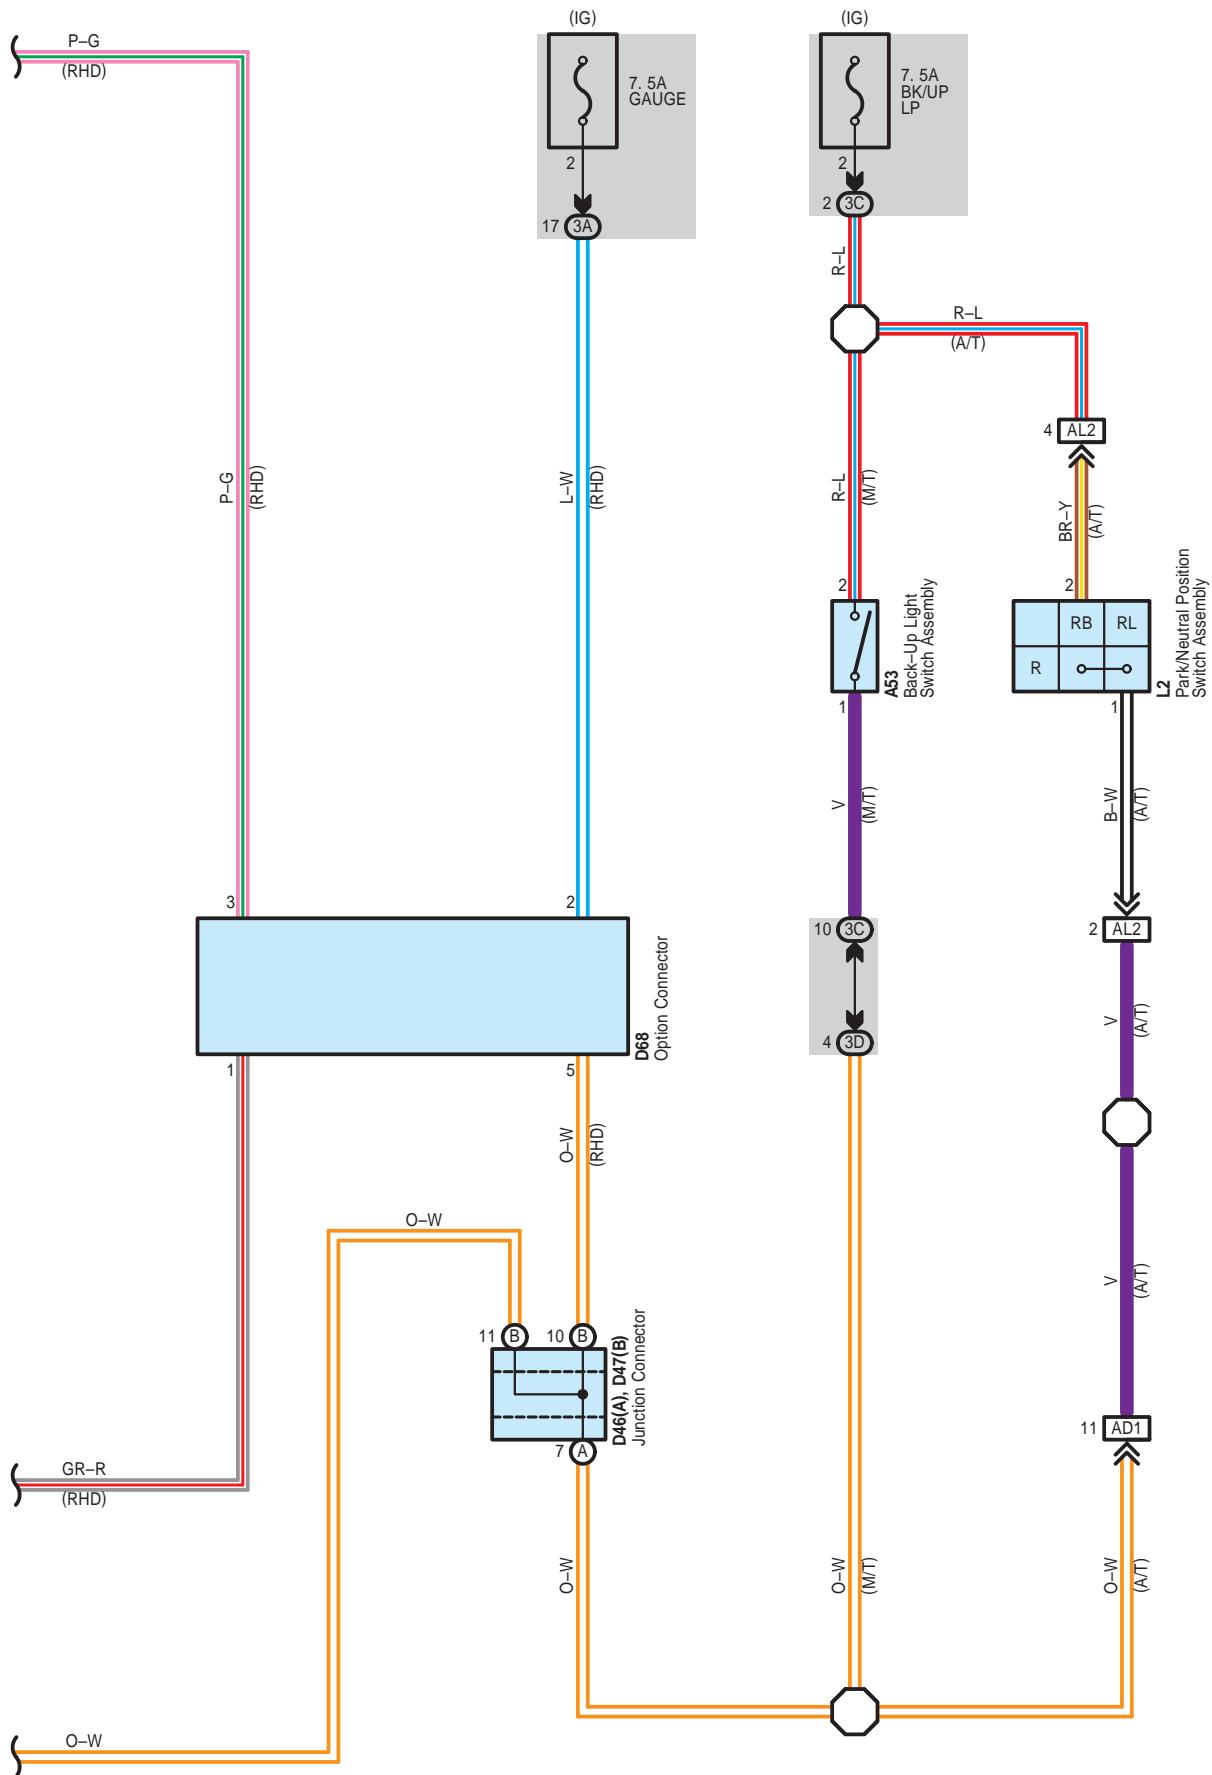

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A5	39 (LHD)	D16	A	48 (RHD)	41 (LHD) 49 (RHD)
	47 (RHD)	D17	B	40 (LHD)	
A53	39 (LHD)			48 (RHD)	41 (LHD) 49 (RHD)
	47 (RHD)	D29		40 (LHD)	
D8	40 (LHD)			48 (RHD)	49 (RHD)
	48 (RHD)	D31		40 (LHD)	
D9	40 (LHD)			48 (RHD)	39 (LHD) 47 (RHD)
	48 (RHD)	D46	A	41 (LHD)	
D16	A			49 (RHD)	

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B		Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
AL2	54 (LHD) 58 (RHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)

 : Ground Points


Code	See Page	Ground Points Location
D1	55 (LHD) 59 (RHD)	Cowl Side Panel LH Cowl Side Panel RH
D3	55 (LHD) 59 (RHD)	Instrument Panel Brace RH Instrument Panel Brace LH
D4	55 (LHD) 59 (RHD)	Cowl Side Panel RH Cowl Side Panel LH

Alarm Control System

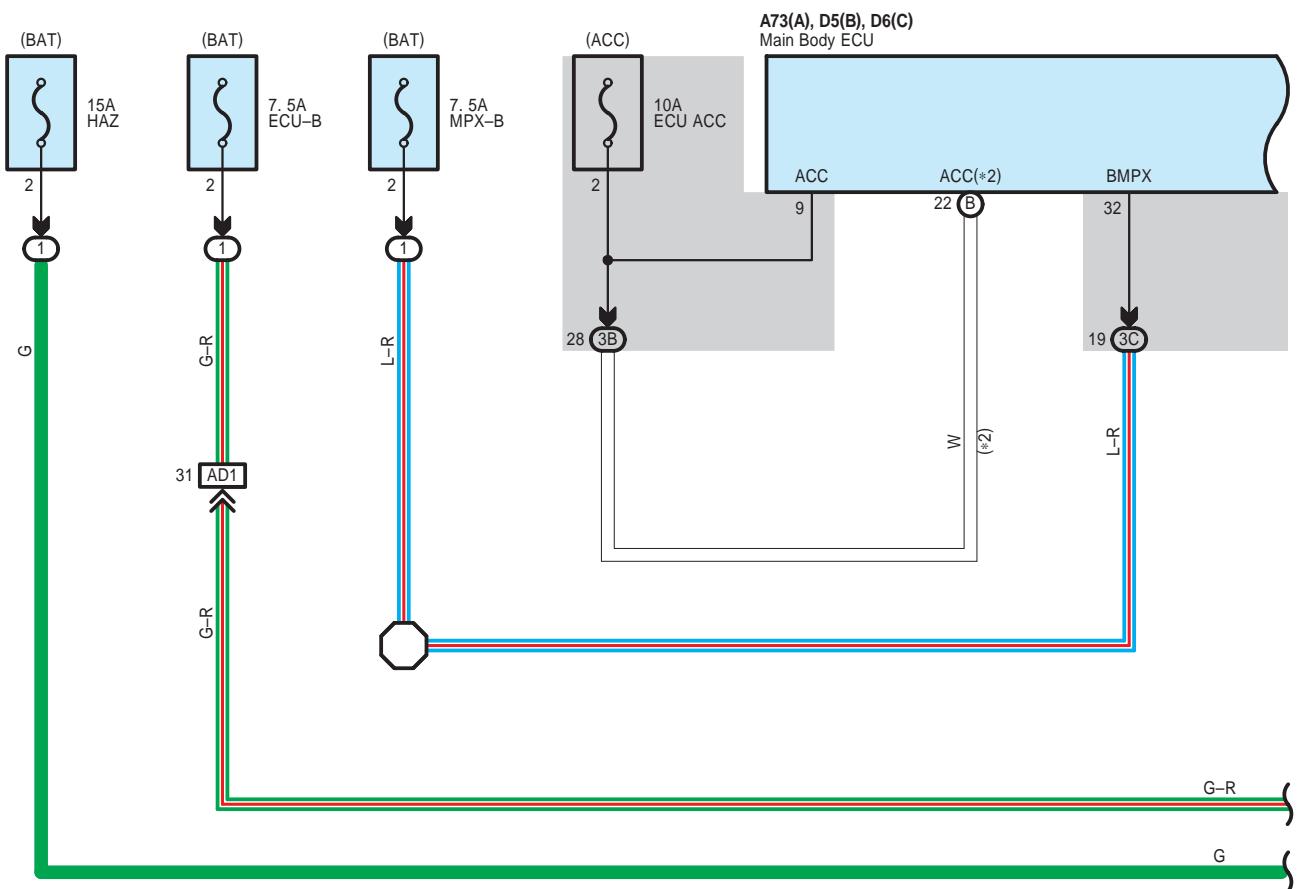


* 2 : w/ Entry & Start System


A73(A), D5(B), D6(C)
Main Body ECU

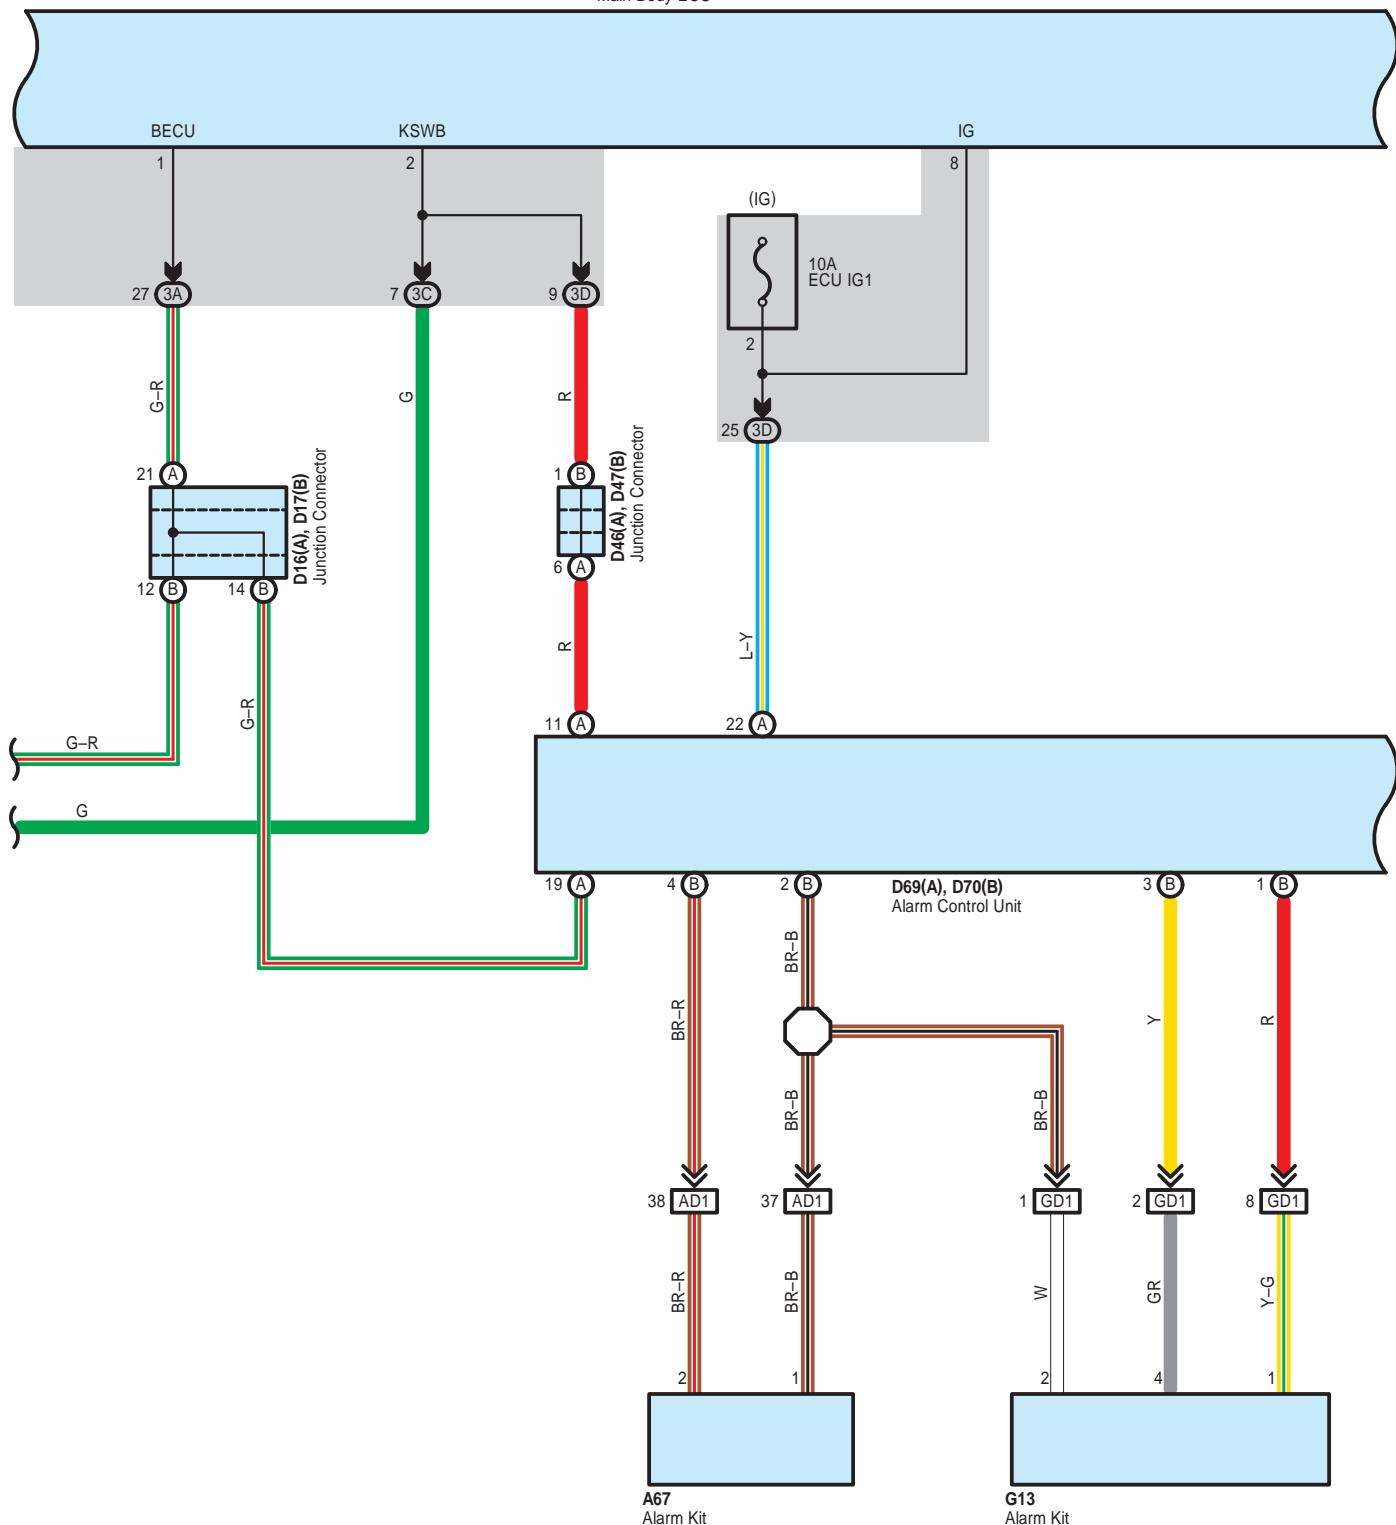


Alarm Control System

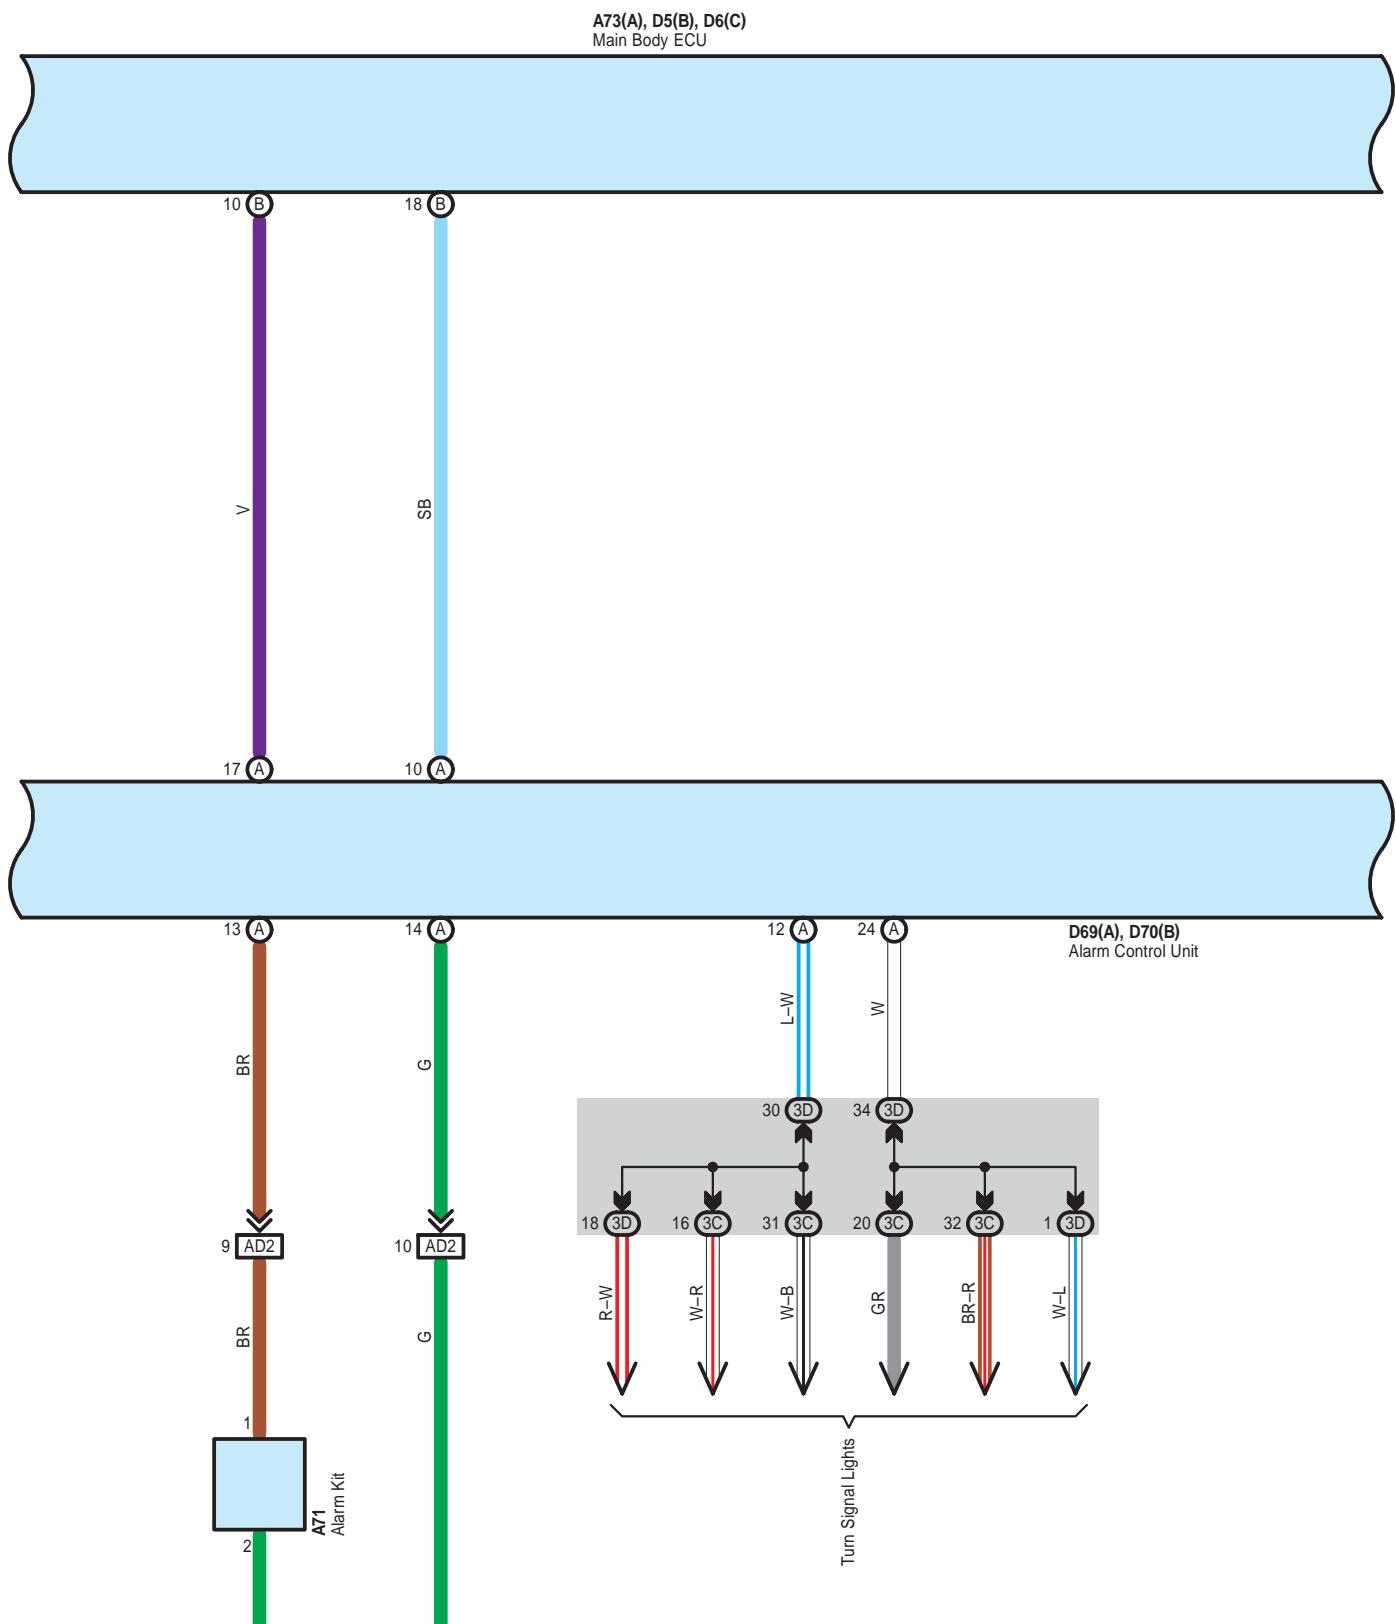

A73(A), D5(B), D6(C)
Main Body ECU

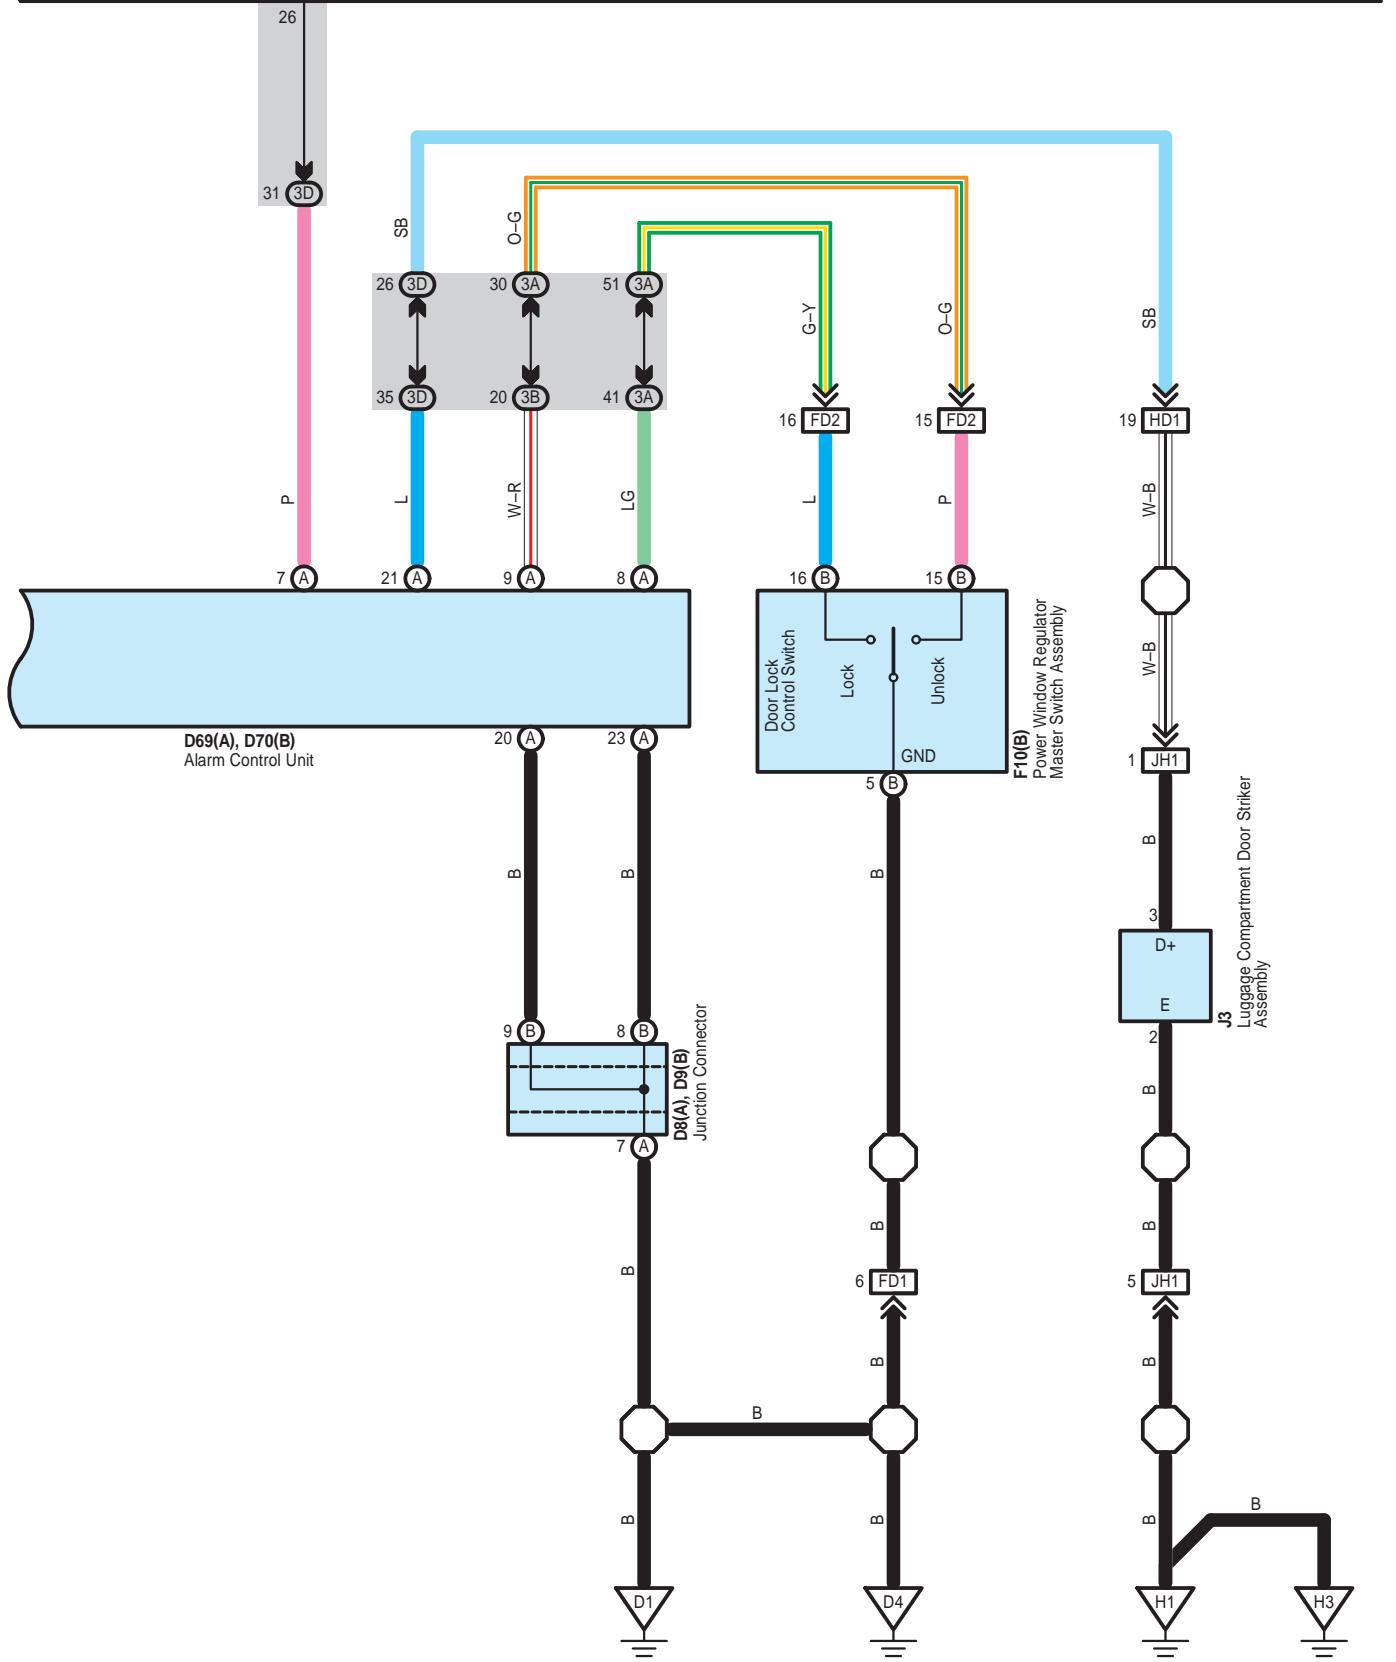

Alarm Control System

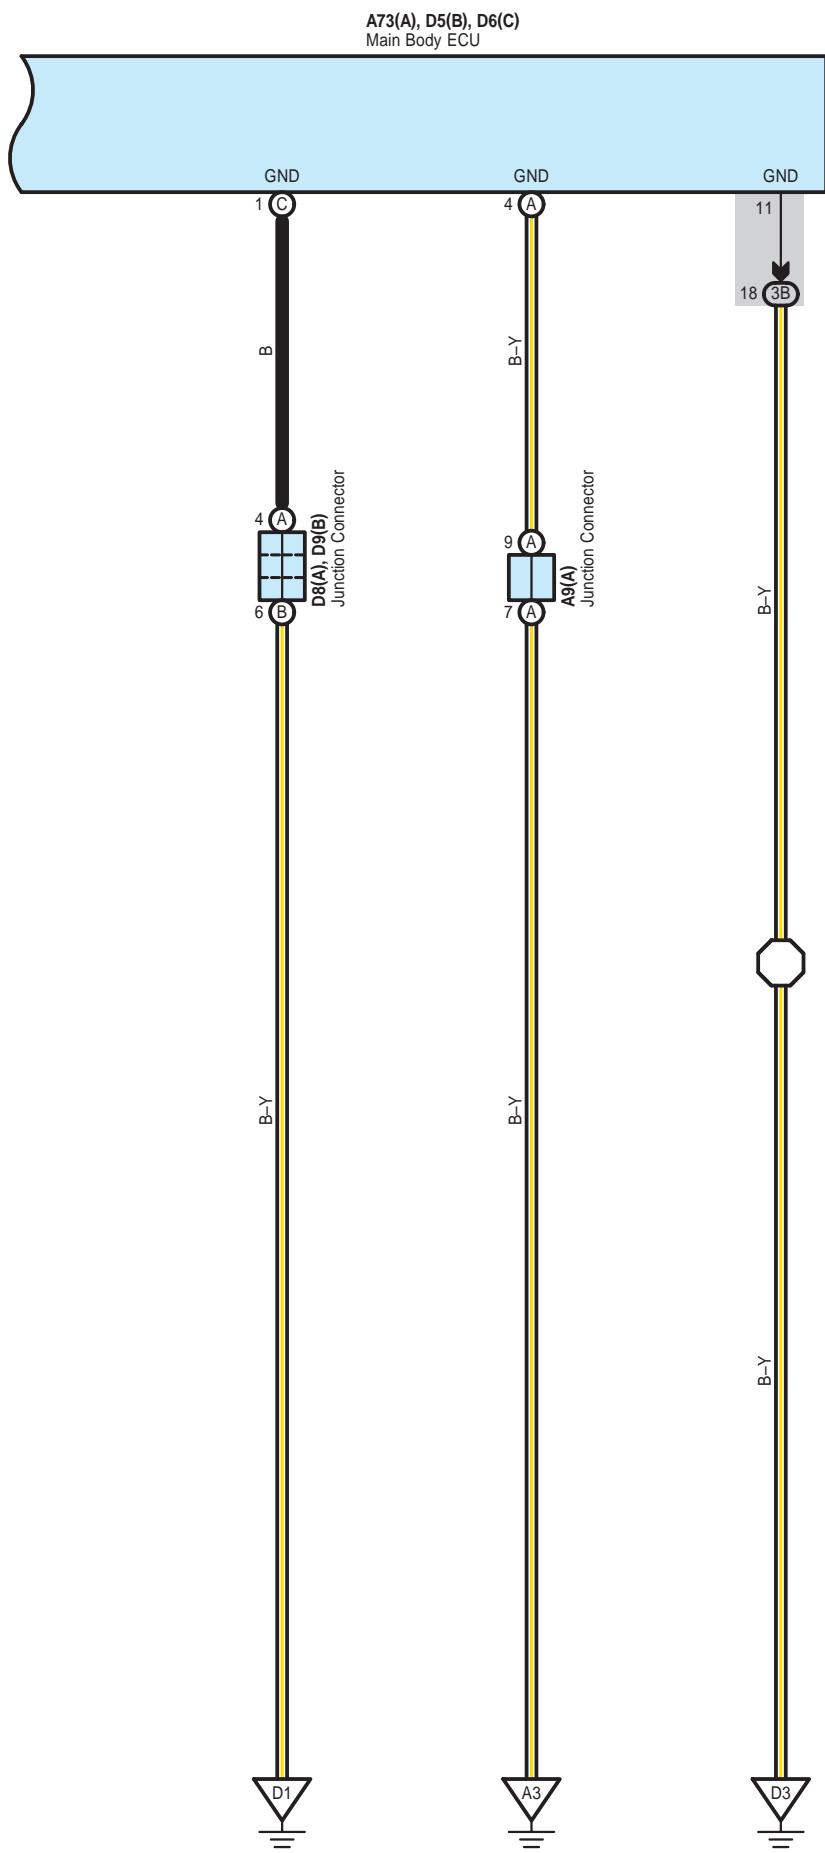

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	50 (RHD)	D8	A	48 (RHD)	D69	A	49 (RHD)
A67		47 (RHD)	D9	B	48 (RHD)	D70	B	49 (RHD)
A71		50 (RHD)	D16	A	48 (RHD)	F10	B	52 (RHD)
A73	A	50 (RHD)	D17	B	48 (RHD)	G13		52 (RHD)
D5	B	48 (RHD)	D46	A	49 (RHD)	J3		53 (RHD)
D6	C	48 (RHD)	D47	B	49 (RHD)			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A		
3B	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3C	26	Engine Room Main Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3D	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)


 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AD1	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
AD2	59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
FD1	59 (RHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
FD2		
GD1	59 (RHD)	No. 1 Floor Wire and Instrument Panel Wire (Cowl Side Panel RH)
HD1	59 (RHD)	No. 2 Floor Wire and Instrument Panel Wire (Cowl Side Panel LH)
JH1	60 (RHD)	Luggage Room Wire and No. 2 Floor Wire (Quarter Panel LH)

 : Ground Points



Code	See Page	Ground Points Location
A3	59 (RHD)	Cowl Side Panel LH
D1	59 (RHD)	Cowl Side Panel RH
D3	59 (RHD)	Instrument Panel Brace LH
D4	59 (RHD)	Cowl Side Panel LH
H1	60 (RHD)	Lower Back Panel
H3	60 (RHD)	Quarter Wheel House Panel LH


I GROUND POINT

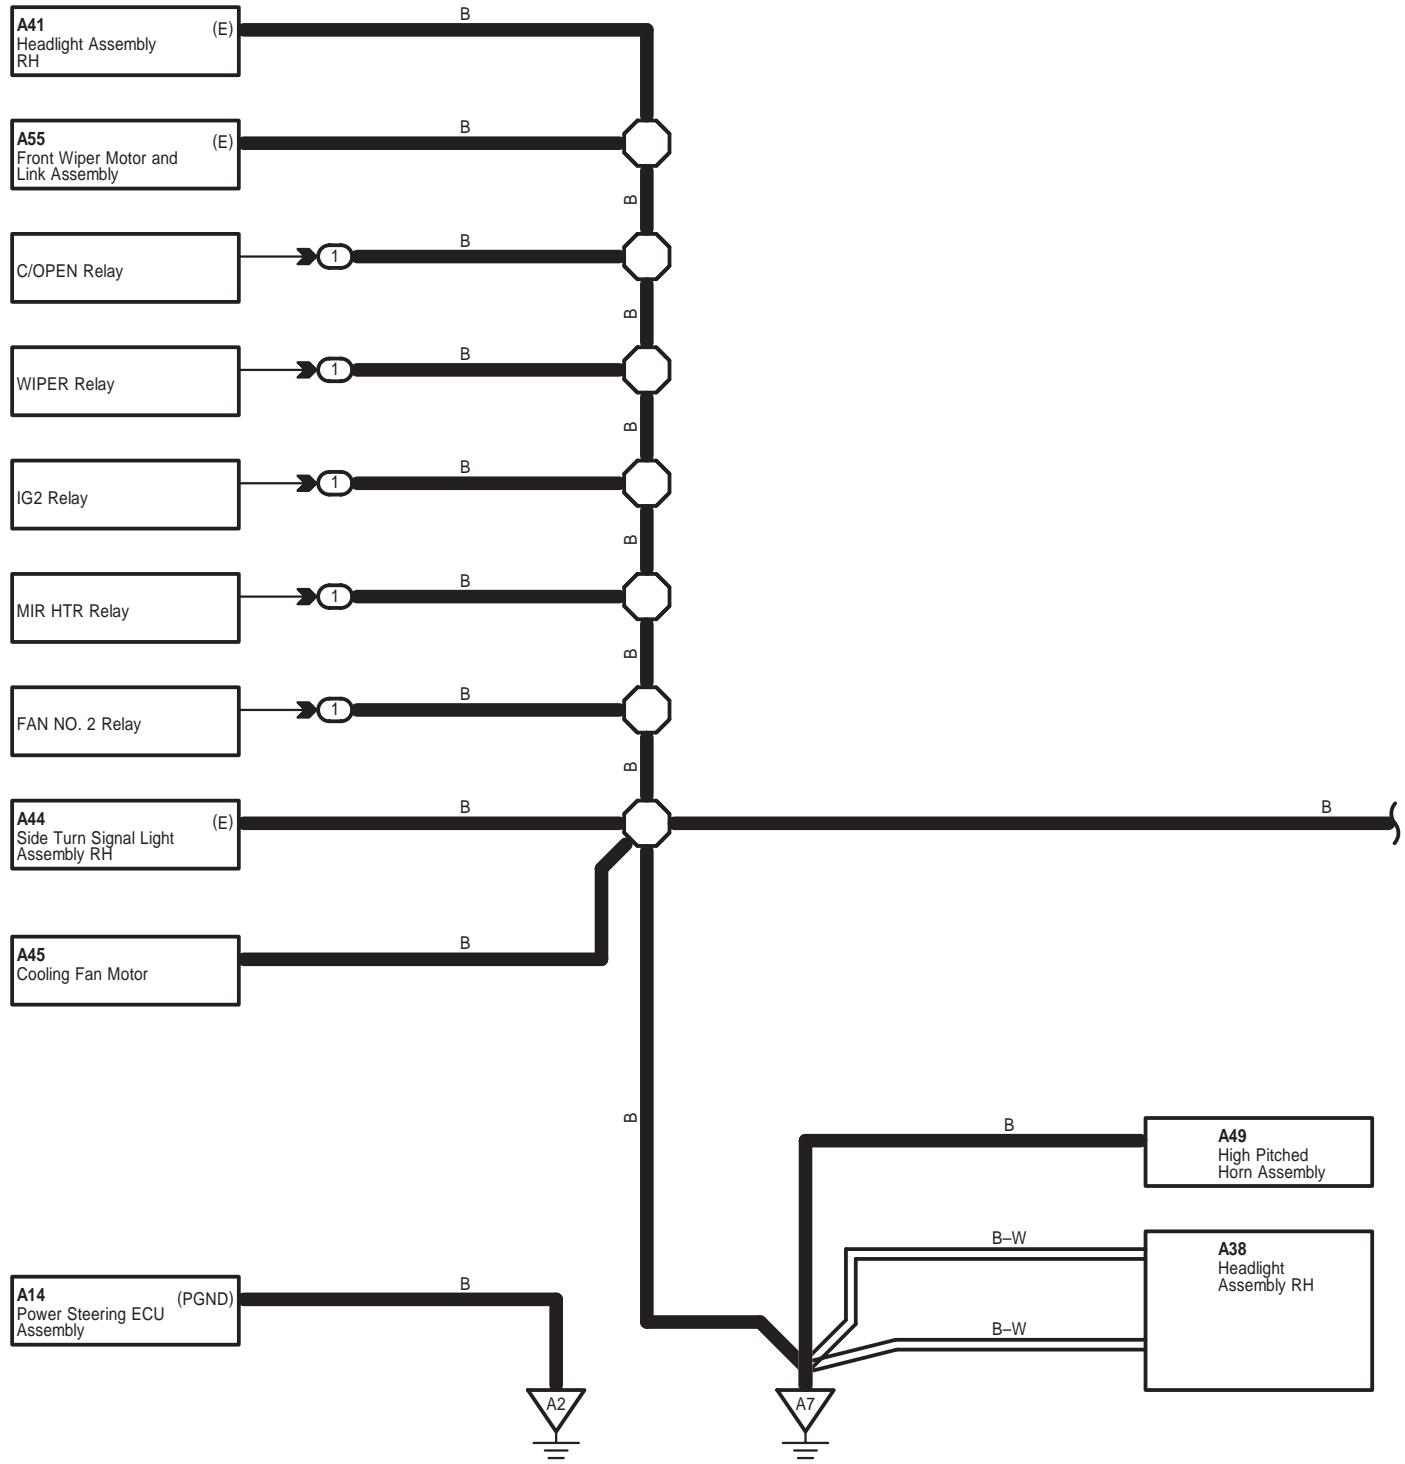

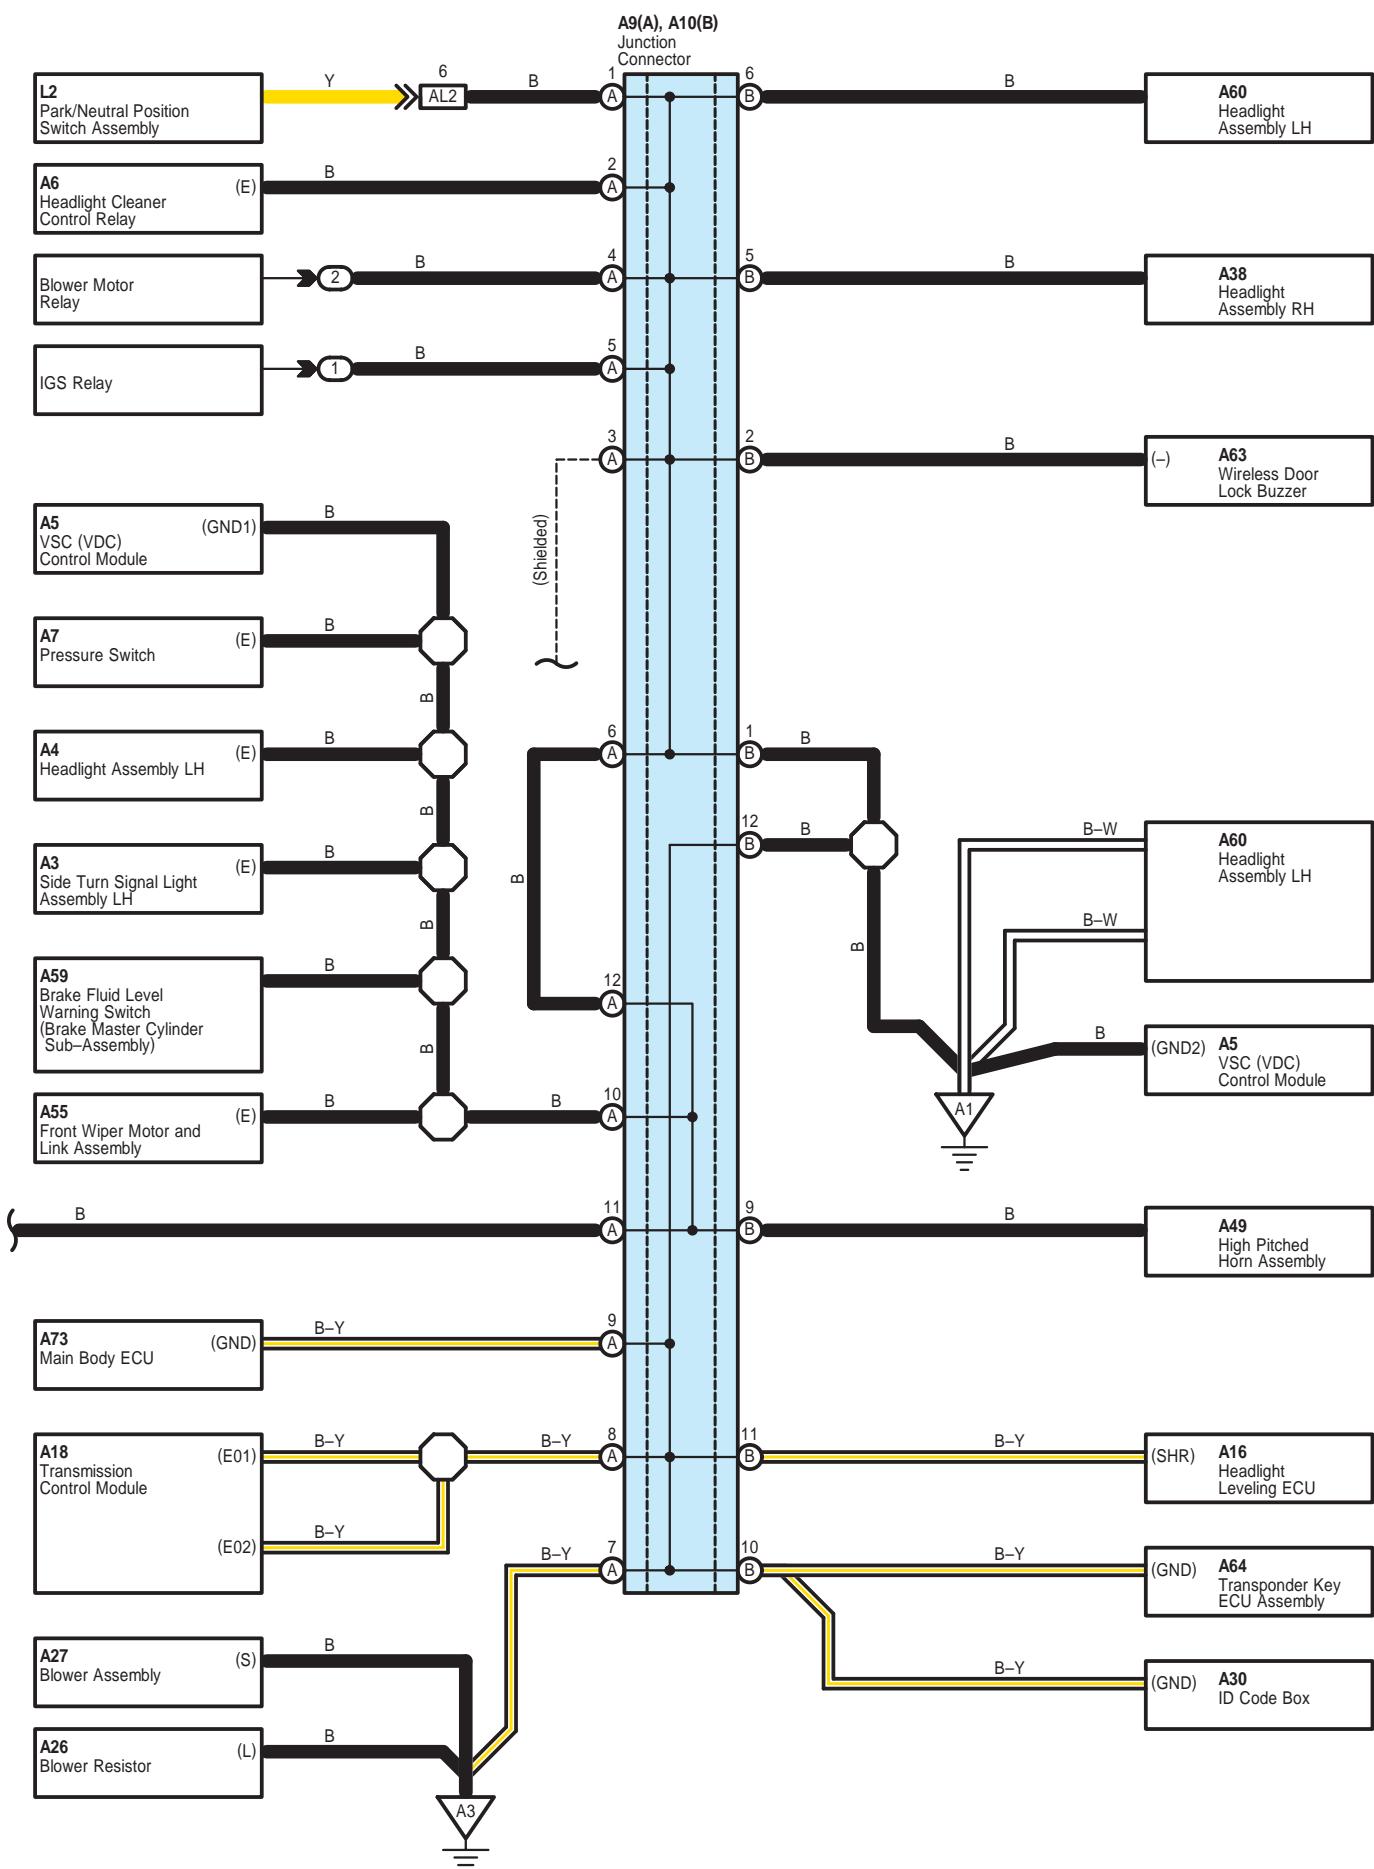



I GROUND POINT

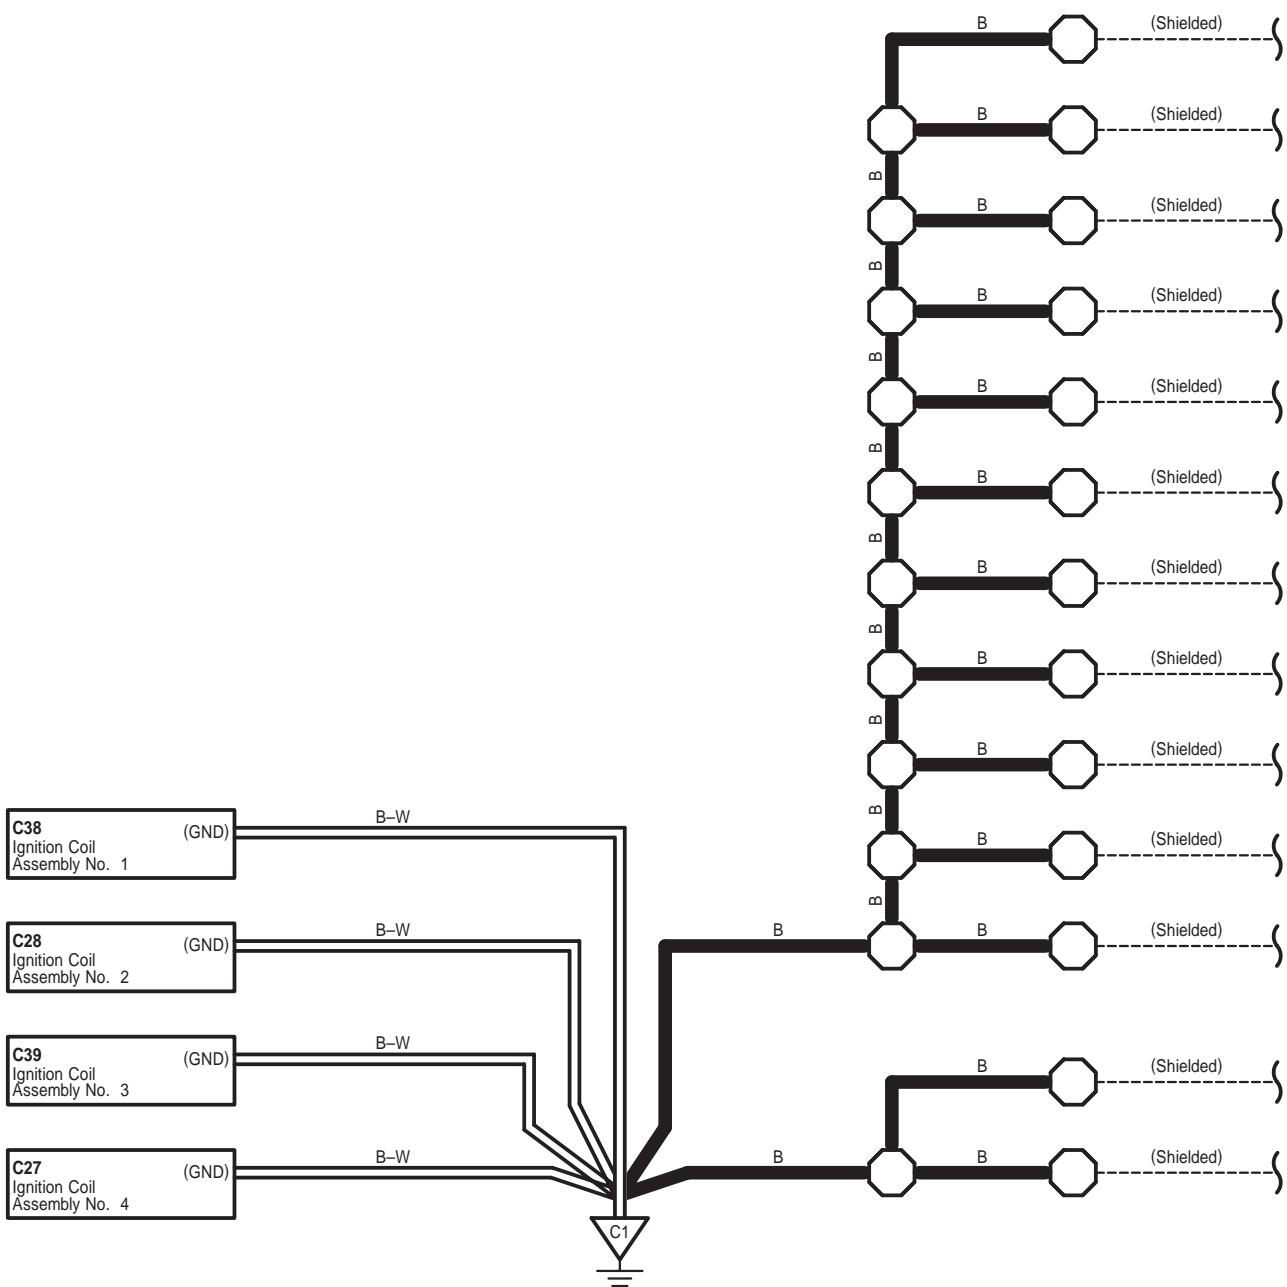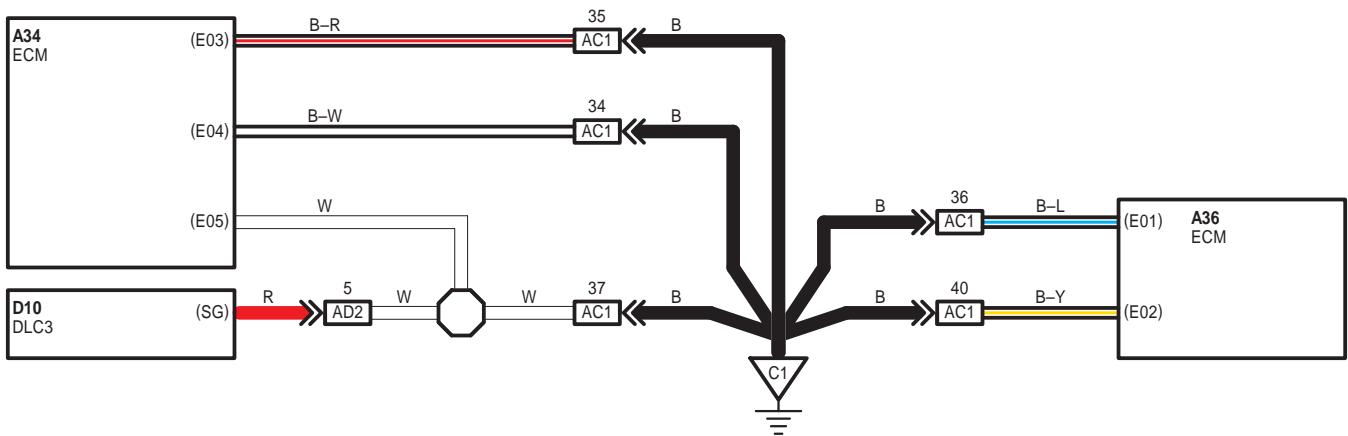

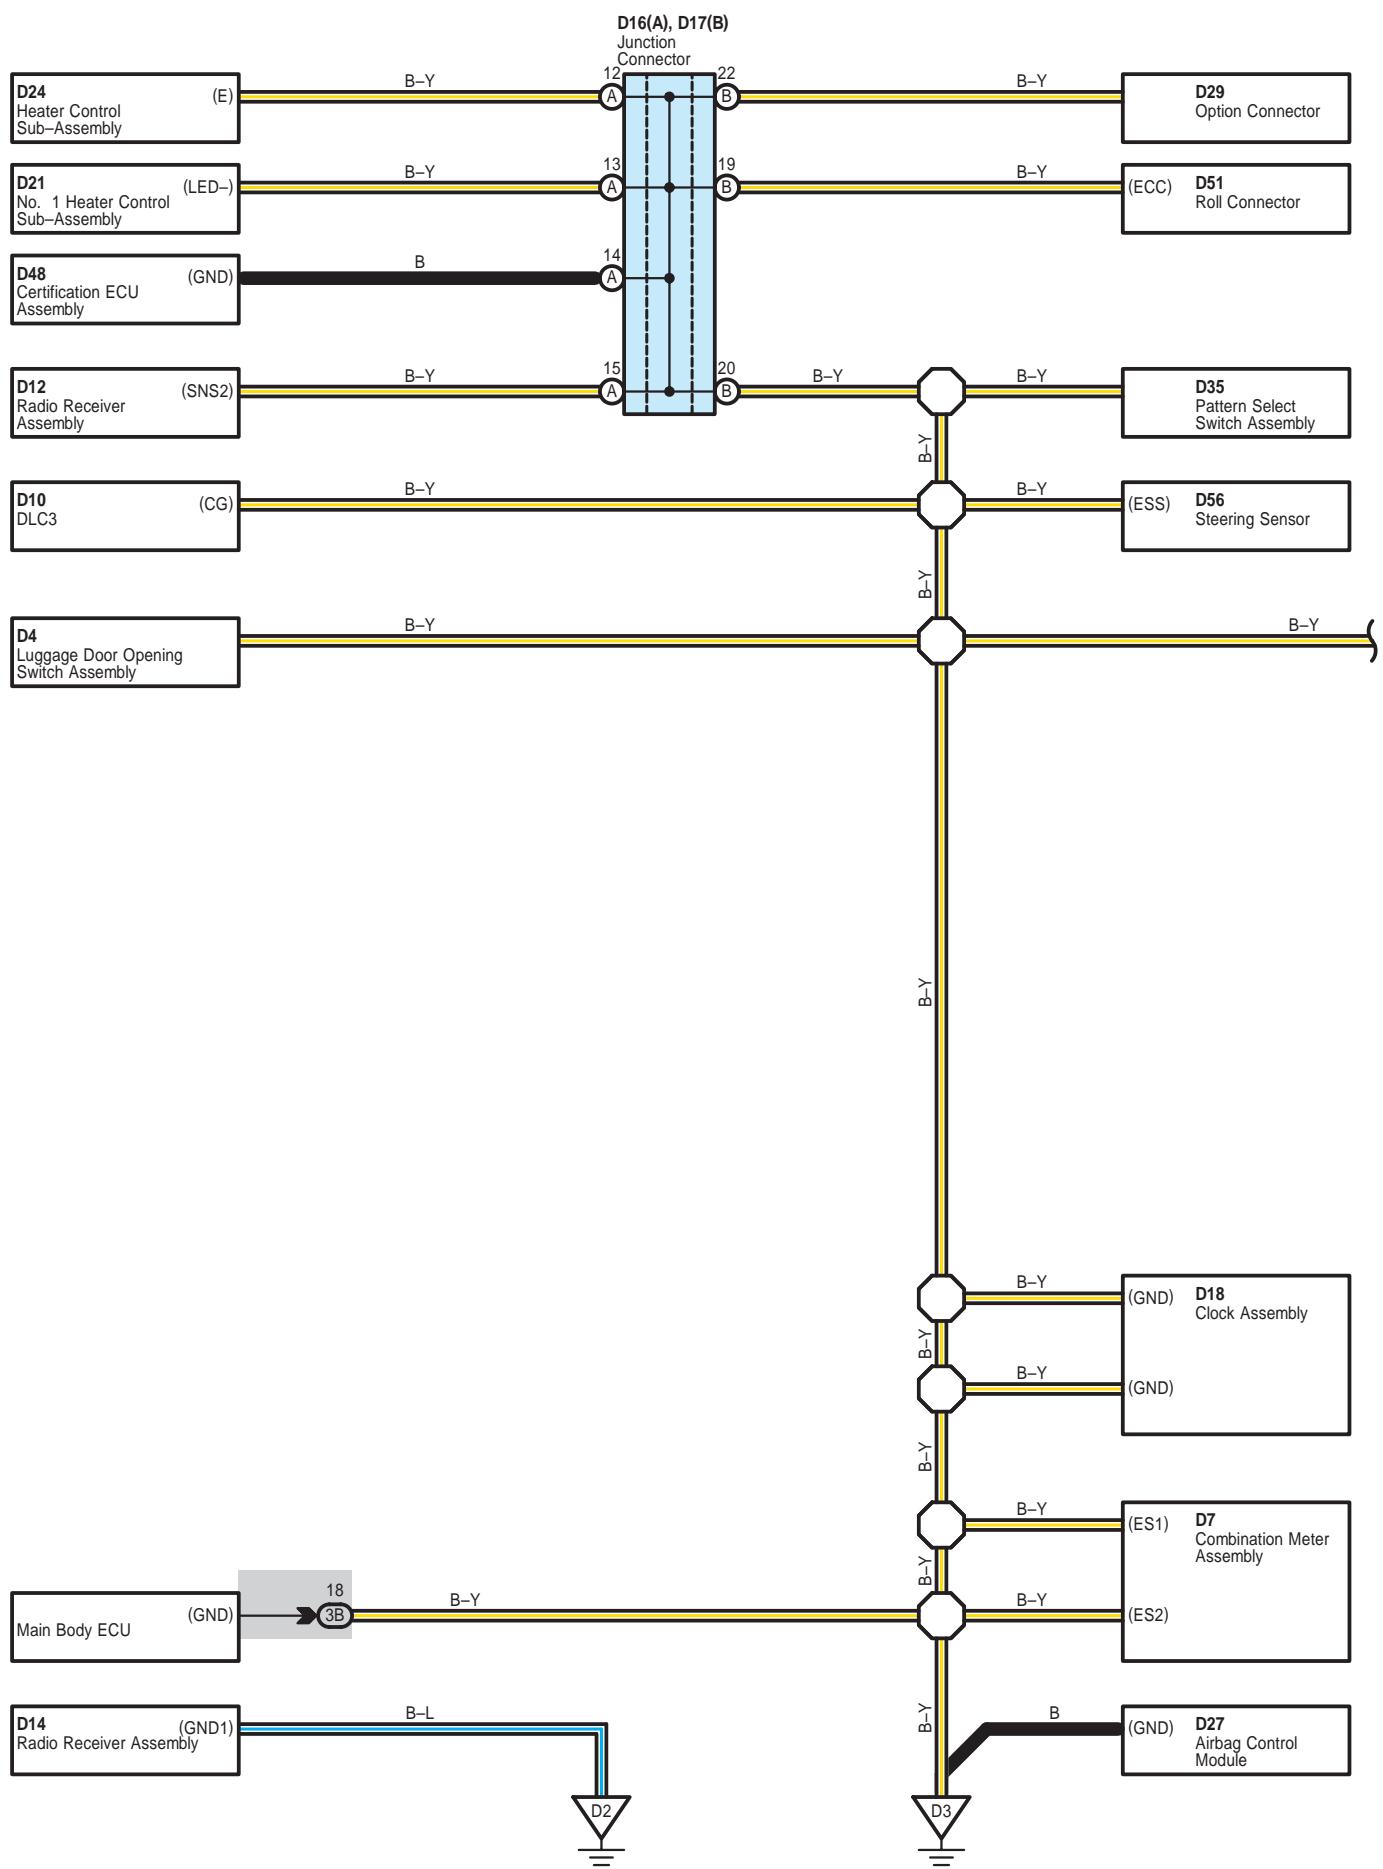


I GROUND POINT

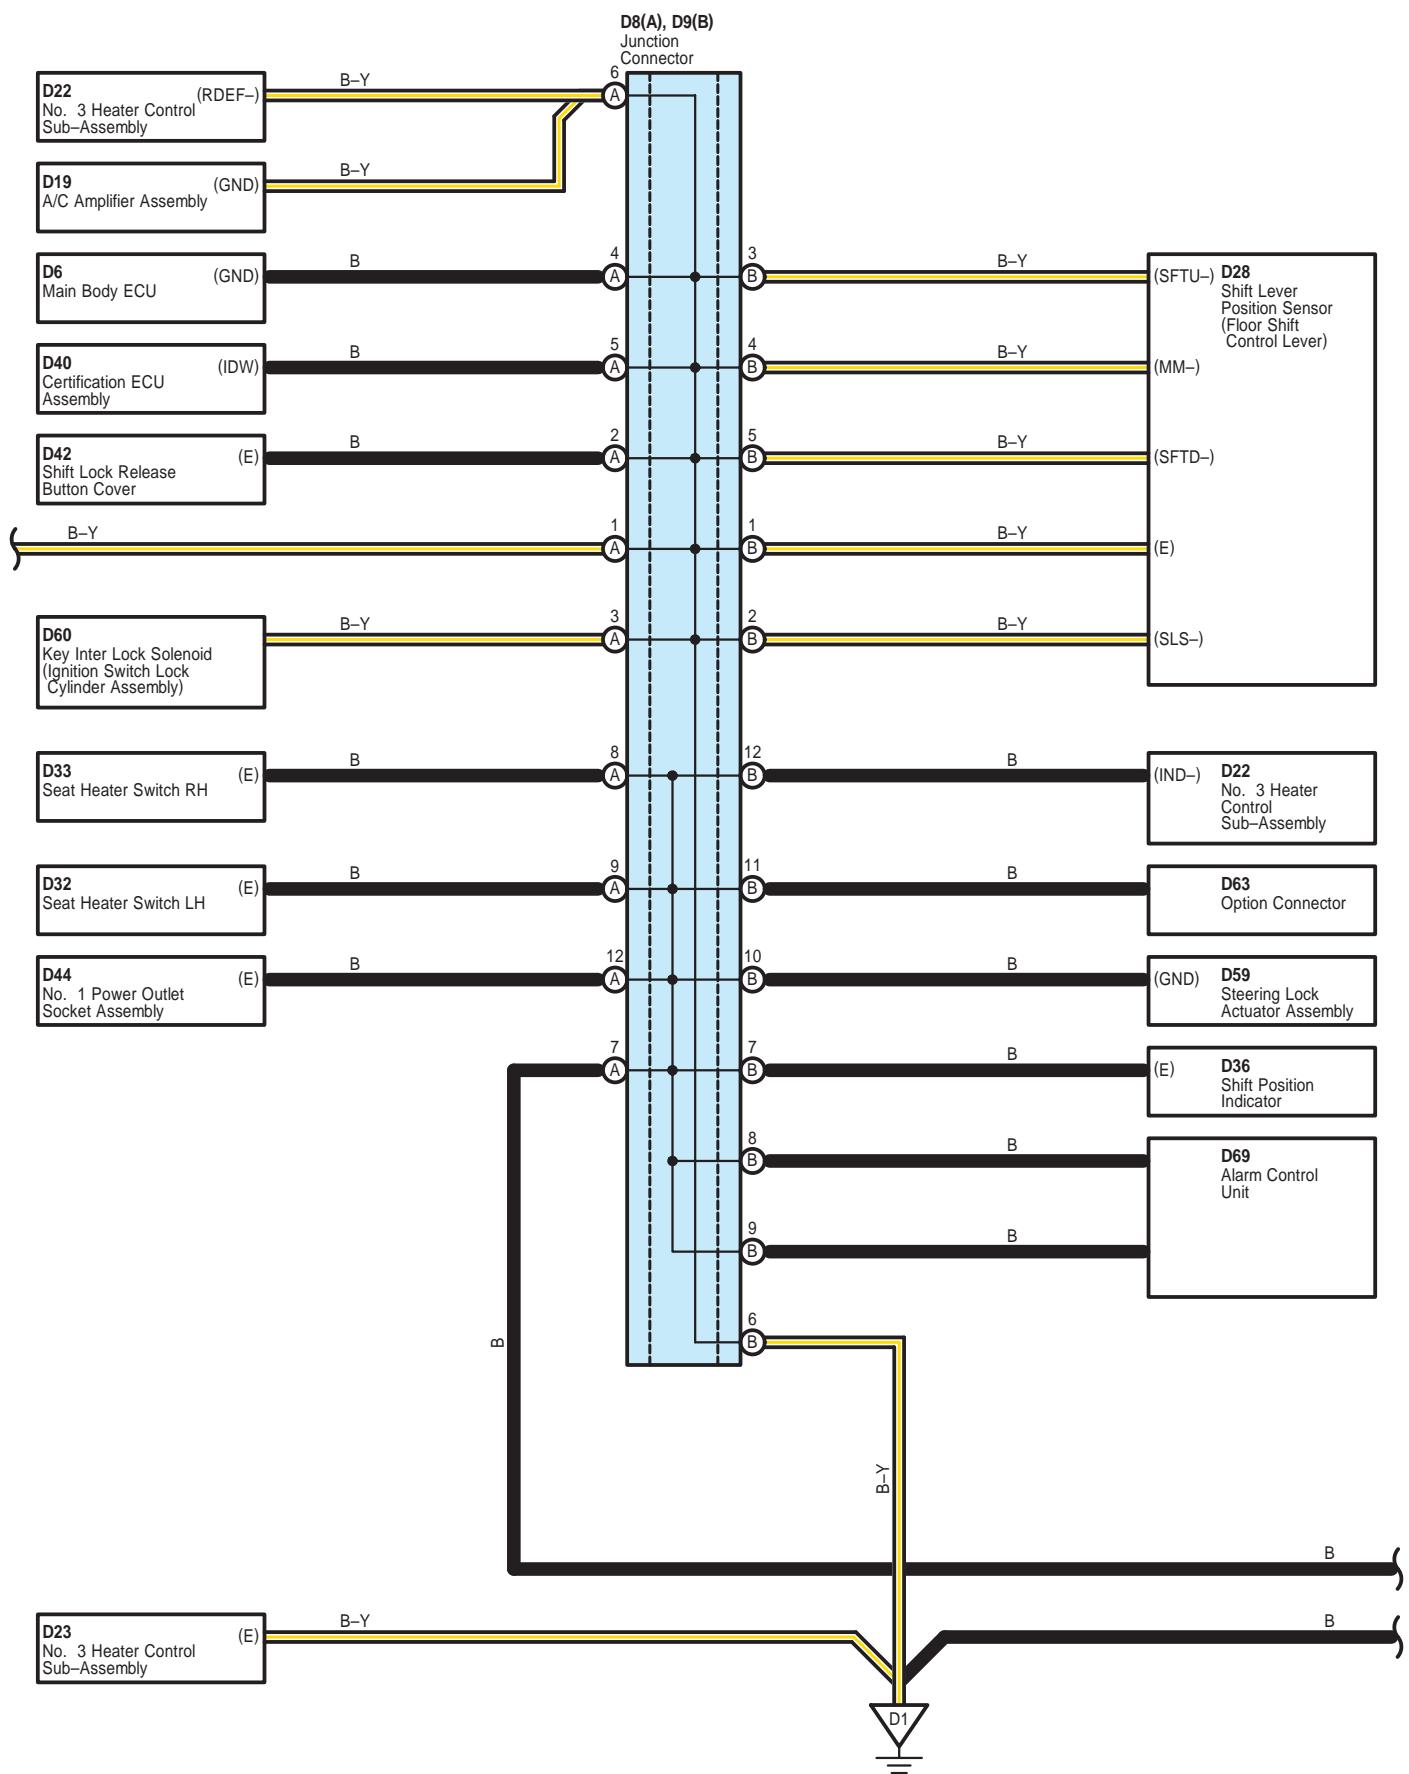

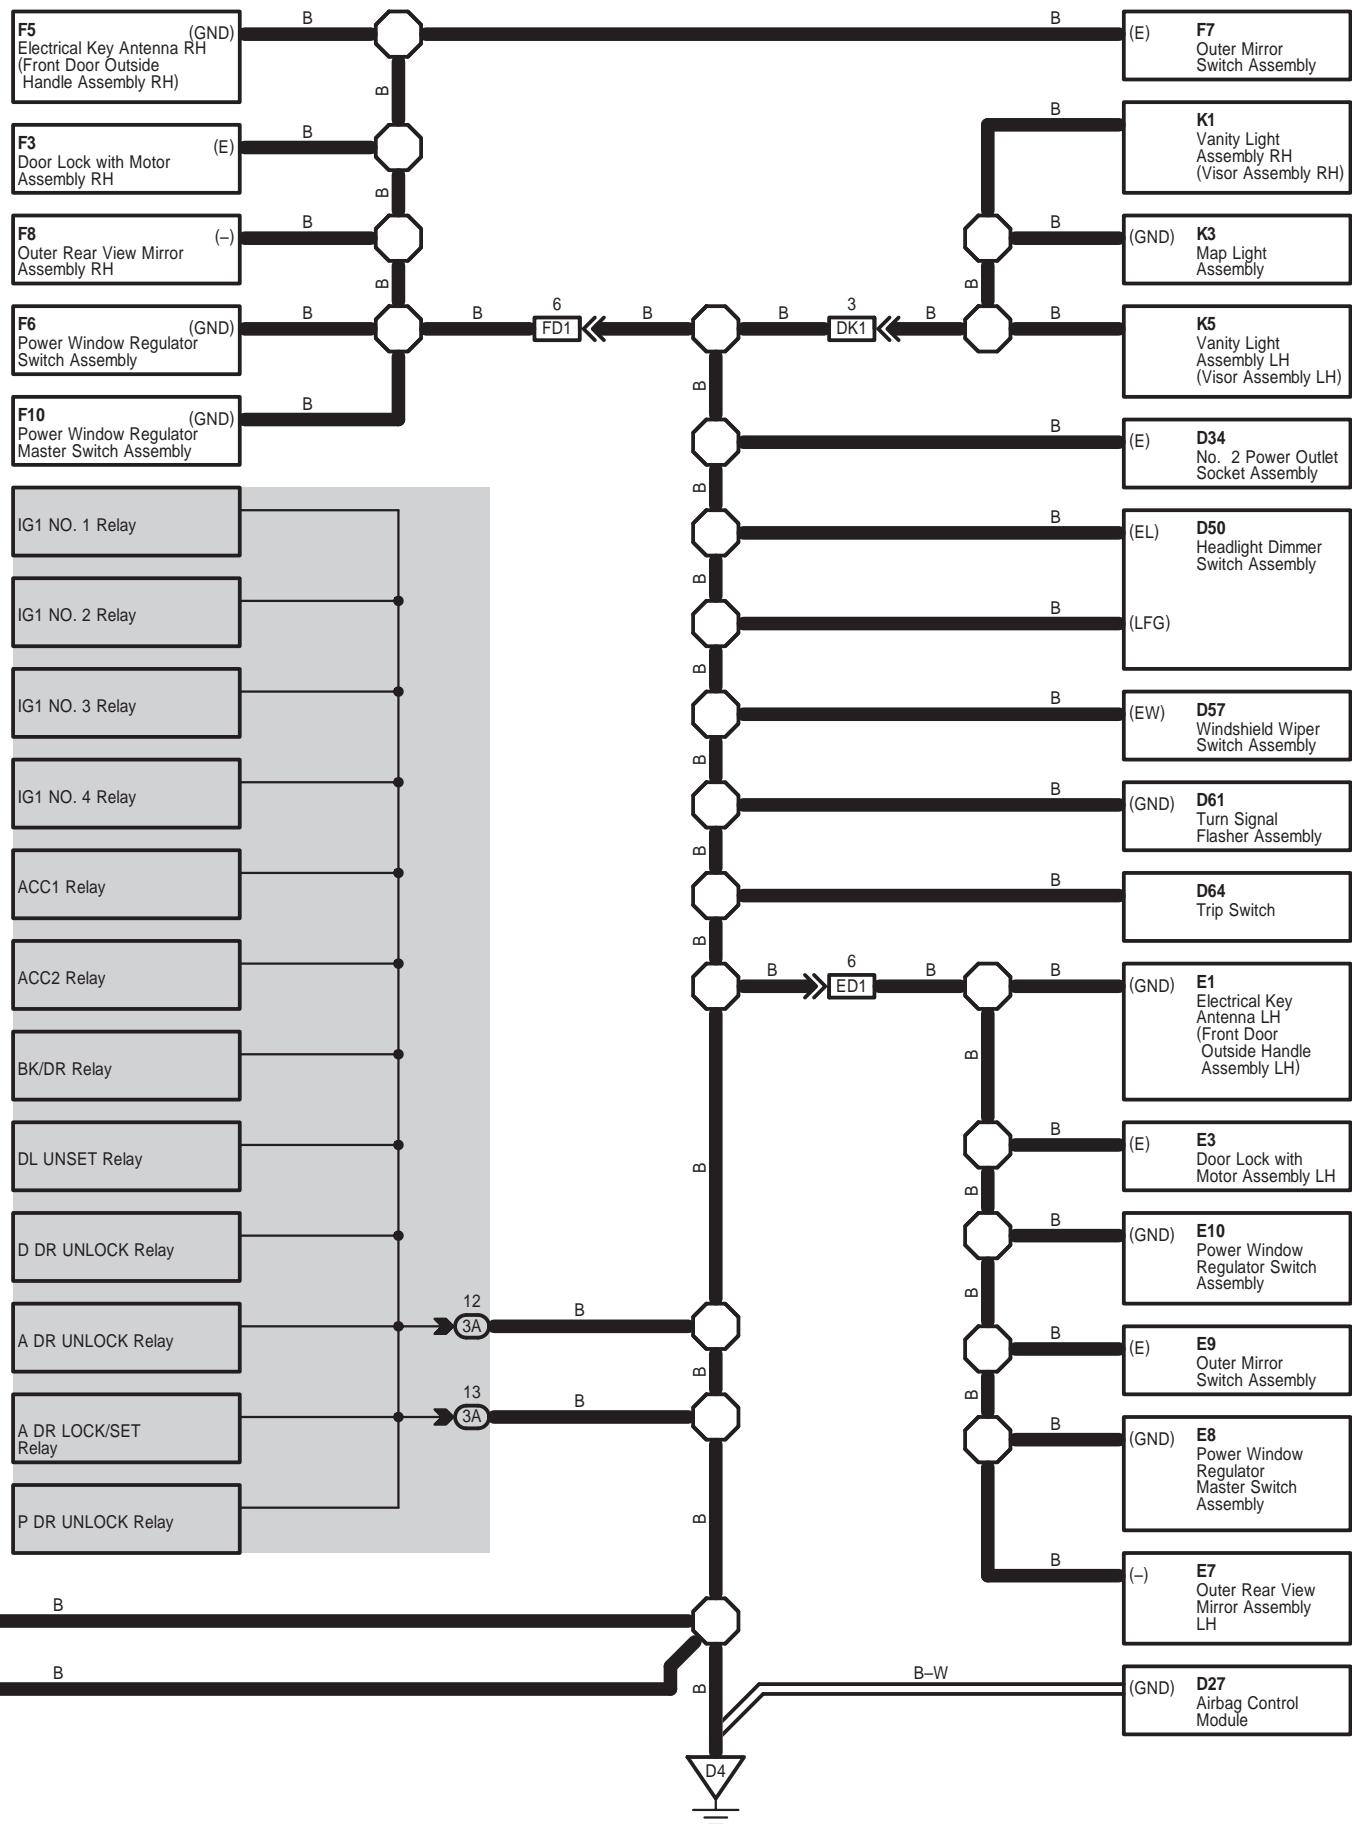

I GROUND POINT

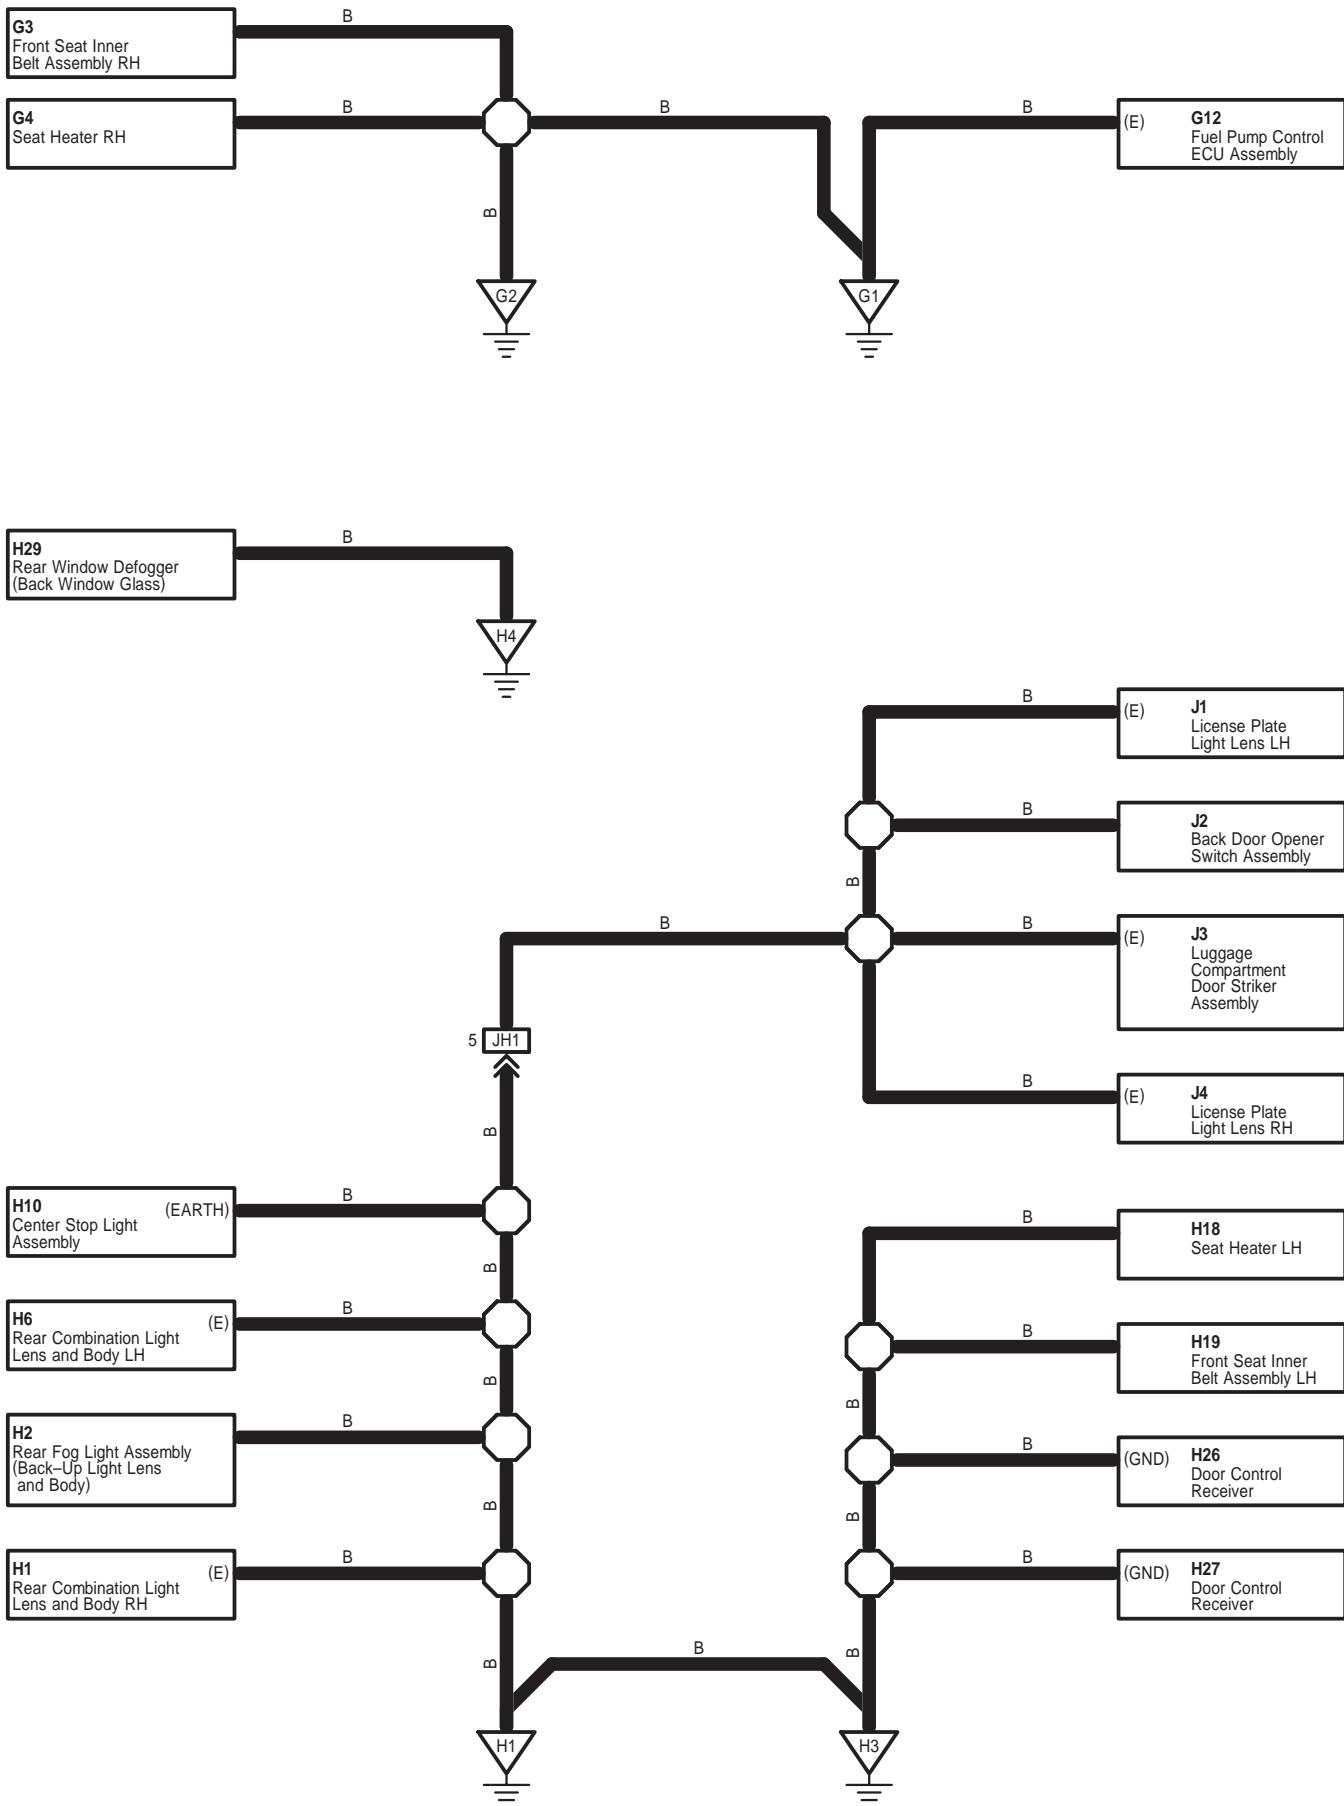

 : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A9	A	42 (LHD)		D8	A	40 (LHD)		D16	A	40 (LHD)	
		50 (RHD)				48 (RHD)				48 (RHD)	
A10	B	42 (LHD)		D9	B	40 (LHD)		D17	B	40 (LHD)	
		50 (RHD)				48 (RHD)				48 (RHD)	

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Right)
2	25	R/B No. 2 (Behind Glove Box)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	26	Instrument Panel Wire and Instrument Panel J/B Assembly (Instrument Panel Reinforcement)
3B		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AC1	54 (LHD) 58 (RHD)	Engine Room Main Wire and Engine Wire (Engine Unit)
AD2	55 (LHD) 59 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement)
AL2	54 (LHD) 58 (RHD)	Engine Room Main Wire and Transmission Wire (Dash Panel)
DK1	55 (LHD) 59 (RHD)	Instrument Panel Wire and Roof Wire (Front Body Inner Pillar RH)
ED1	55 (LHD) 59 (RHD)	Front Door Wire LH and Instrument Panel Wire (Cowl Side Panel LH)
FD1	55 (LHD) 59 (RHD)	Front Door Wire RH and Instrument Panel Wire (Cowl Side Panel RH)
JH1	56 (LHD) 60 (RHD)	Luggage Room Wire and No. 2 Floor Wire (Quarter Panel LH)

 : Ground Points

Code	See Page	Ground Points Location
A1	54 (LHD) 58 (RHD)	Front Fender Apron LH
A2	55 (LHD) 59 (RHD)	Cowl Side Panel LH
A3	55 (LHD) 59 (RHD)	Cowl Side Panel RH
A7	54 (LHD) 58 (RHD)	Front Fender Apron RH
C1	54 (LHD) 58 (RHD)	Engine Unit
D1	55 (LHD) 59 (RHD)	Cowl Side Panel LH Cowl Side Panel RH
D2	55 (LHD) 59 (RHD)	Instrument Panel Brace LH
D3	55 (LHD) 59 (RHD)	Instrument Panel Brace RH
D4	55 (LHD) 59 (RHD)	Cowl Side Panel RH Cowl Side Panel LH
G1	56 (LHD) 60 (RHD)	Quarter Wheel House Panel RH
G2	56 (LHD) 60 (RHD)	


I GROUND POINT

▽ : Ground Points






Code	See Page	Ground Points Location
H1	56 (LHD)	Lower Back Panel
	60 (RHD)	
H3	56 (LHD)	Quarter Wheel House Panel LH
	60 (RHD)	
H4	56 (LHD)	Upper Back Panel
	60 (RHD)	

J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

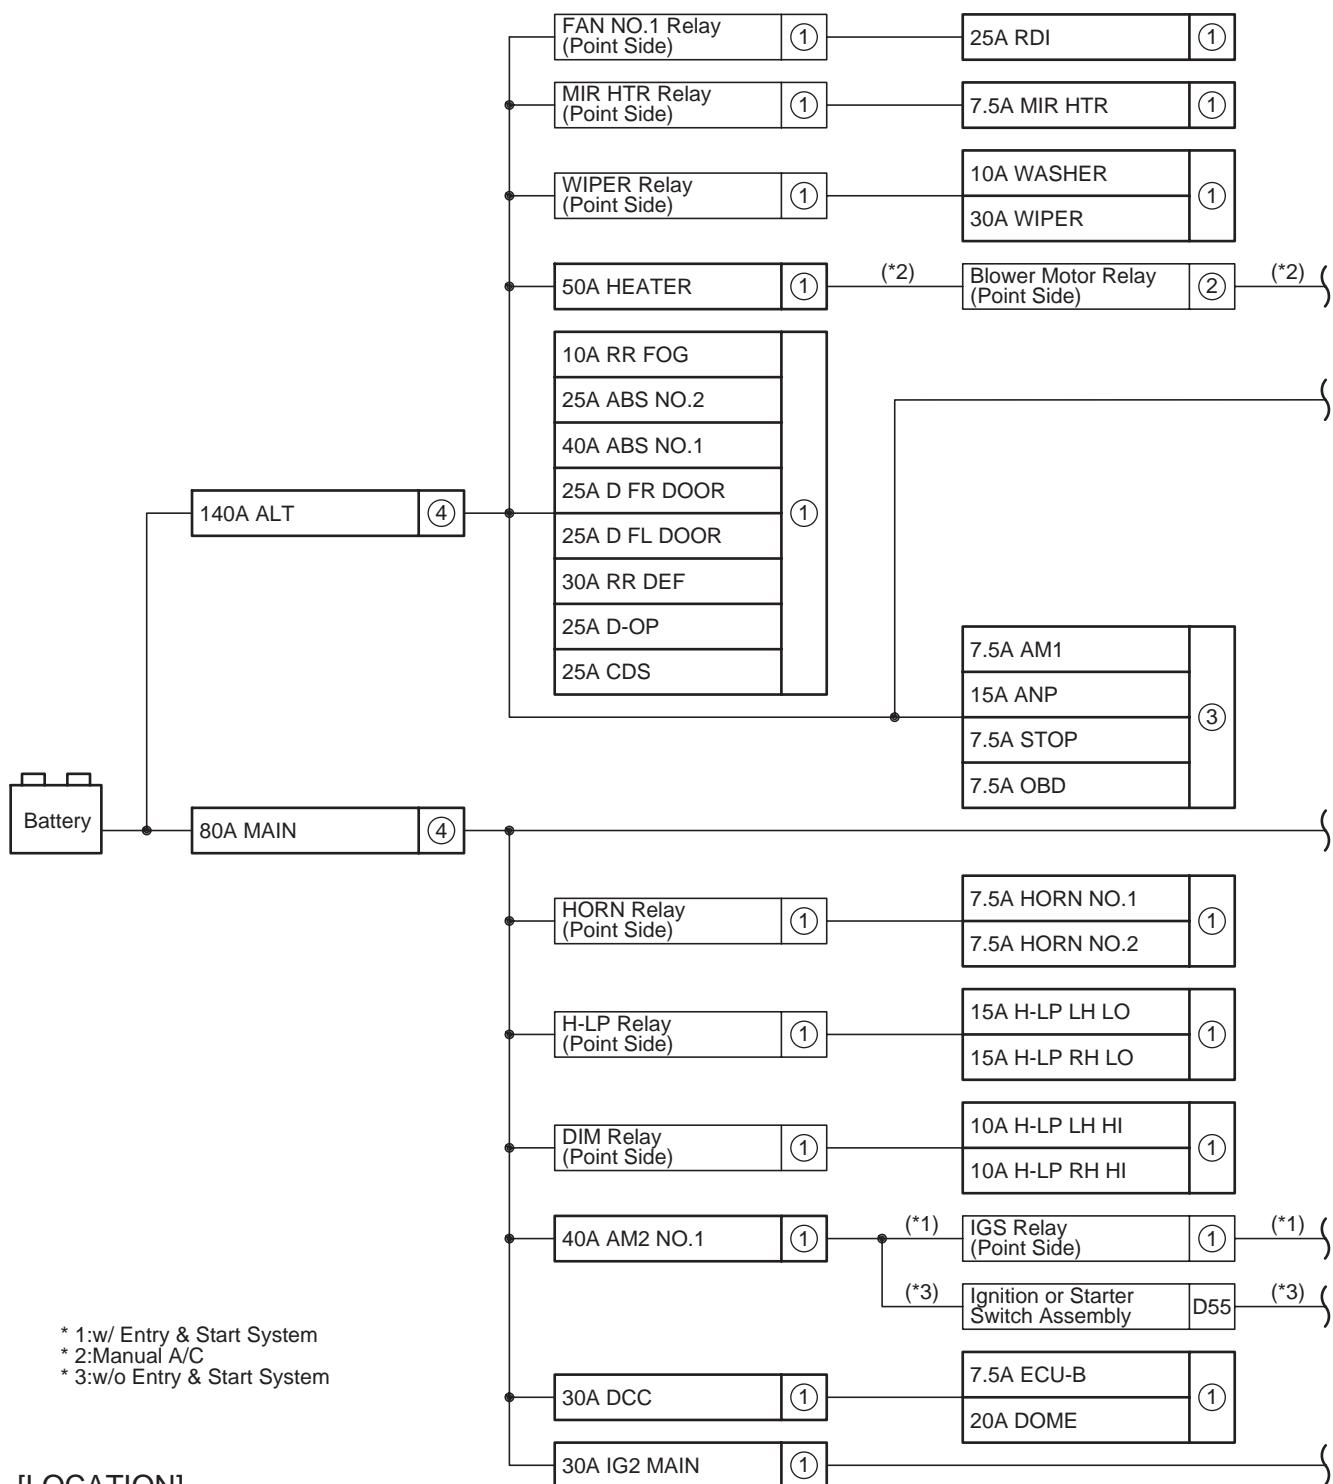

Example

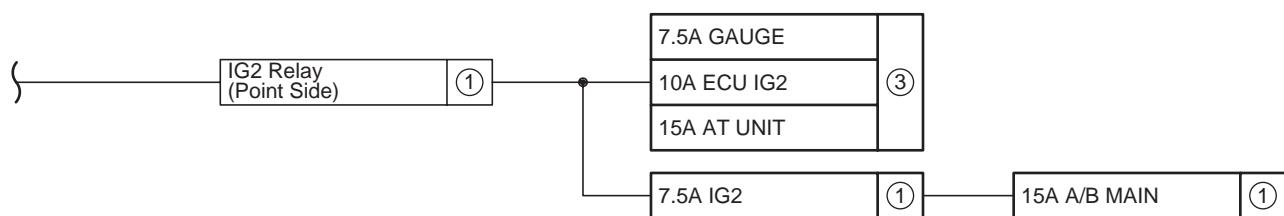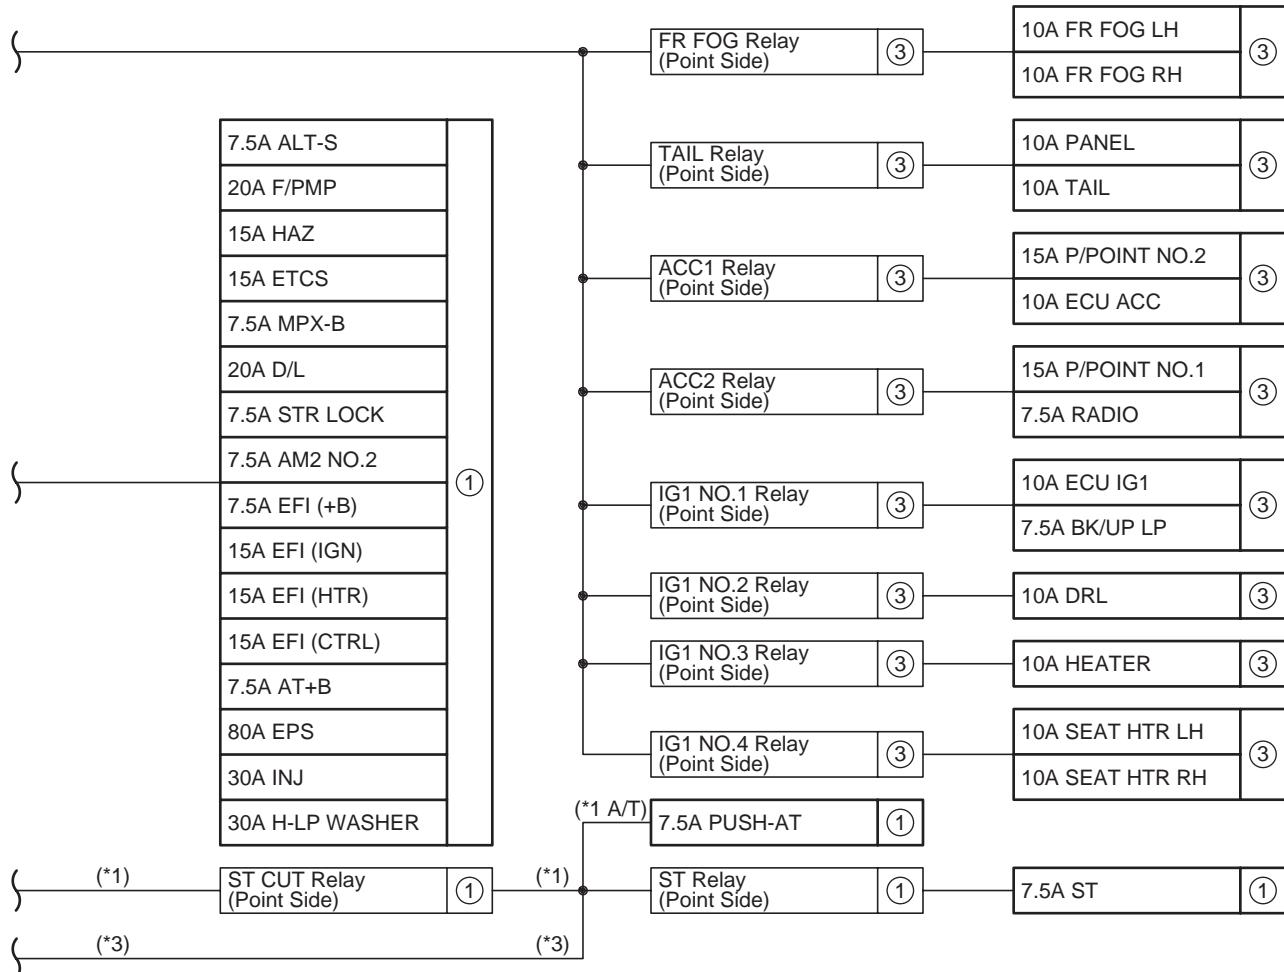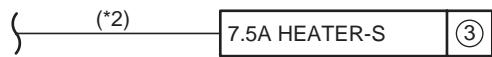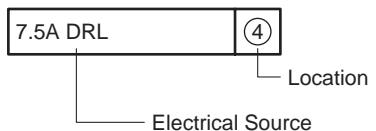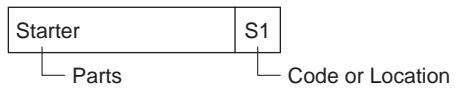

J POWER SOURCE (Current Flow Chart)

Engine Room R/B and Engine Room J/B (See Page 24)

Fuse		System	Page
7.5A	ALT-S	Charging	106
7.5A	AM2 NO.2	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	114 72
7.5A	AT+B	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
7.5A	ECU-B	ABS, TRC and VSC	250
		Air Conditioner (LHD Automatic A/C)	380
		Air Conditioner (Manual A/C)	404
		Air Conditioner (RHD Automatic A/C)	392
		Alarm Control System	420
		Automatic Light Control and Light Auto Turn Off System	224
		Combination Meter	362
		Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
		Door Lock Control	300
		Double Locking	324
		Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	72
		Engine Immobiliser System (w/o Entry & Start System)	152
		Front Fog Light	210
		Headlight	166
		Headlight Beam Level Control	230
		Headlight Cleaner	238
		Illumination and Taillight	188
		Interior Light	200
		Key Reminder (w/o Entry & Start System) and Light Reminder	244
		Luggage Compartment Door Opener	314
		Mirror Heater and Rear Window Defogger	344
		Power Window (LHD)	288
		Power Window (RHD)	294
		Rear Fog Light	218
		Wireless Door Lock Control (w/o Entry & Start System)	306
7.5A	EFI(+B)	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
7.5A	HORN NO.1	Horn	352
7.5A	HORN NO.2	Horn	352

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	IG2	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	114 72
7.5A	MIR HTR	Mirror Heater and Rear Window Defogger	344
7.5A	MPX-B	ABS, TRC and VSC Air Conditioner (LHD Automatic A/C) Air Conditioner (Manual A/C) Air Conditioner (RHD Automatic A/C) Alarm Control System Automatic Light Control and Light Auto Turn Off System Combination Meter Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Door Lock Control Double Locking Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System) Engine Immobiliser System (w/o Entry & Start System) EPS Front Fog Light Headlight Headlight Beam Level Control Headlight Cleaner Illumination and Taillight Interior Light Key Reminder (w/o Entry & Start System) and Light Reminder Luggage Compartment Door Opener Mirror Heater and Rear Window Defogger Power Window (LHD) Power Window (RHD) Rear Fog Light Seat Belt Warning SRS Wireless Door Lock Control (w/o Entry & Start System)	250 380 404 392 420 224 362 114 300 324 80 72 152 274 210 166 230 238 188 200 244 314 344 288 294 218 282 265 306
7.5A	PUSH-AT	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	PUSH-AT	Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	72
7.5A	ST	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System) Starting (w/o Entry & Start System)	114 72 102
7.5A	STR LOCK	Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	72
10A	H-LP LH HI	Headlight	166
10A	H-LP RH HI	Headlight	166
10A	RR FOG	Rear Fog Light	218
10A	WASHER	Front Wiper and Washer Headlight Cleaner	332 238
15A	A/B MAIN	SRS	265
15A	EFI(CTRL)	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
15A	EFI(HTR)	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
15A	EFI(IGN)	Ignition	110
15A	ETCS	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
15A	HAZ	ABS, TRC and VSC	250
		Air Conditioner (LHD Automatic A/C)	380
		Air Conditioner (Manual A/C)	404
		Air Conditioner (RHD Automatic A/C)	392
		Alarm Control System	420
		Automatic Light Control and Light Auto Turn Off System	224
		Combination Meter	362
		Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
		Door Lock Control	300
		Double Locking	324
		Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	72
		Engine Immobiliser System (w/o Entry & Start System)	152
		Front Fog Light	210

* These are the page numbers of the first page on which the related system is shown.

Fuse	System	Page	
15A	HAZ	Headlight Headlight Beam Level Control Headlight Cleaner Illumination and Taillight Interior Light Key Reminder (w/o Entry & Start System) and Light Reminder Luggage Compartment Door Opener Mirror Heater and Rear Window Defogger Power Window (LHD) Power Window (RHD) Rear Fog Light Turn Signal and Hazard Warning Light Wireless Door Lock Control (w/o Entry & Start System)	166 230 238 188 200 244 314 344 288 294 218 182 306
15A	H-LP LH LO	Headlight	166
15A	H-LP RH LO	Headlight	166
20A	D/L	Door Lock Control Double Locking Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System) Luggage Compartment Door Opener Wireless Door Lock Control (w/o Entry & Start System)	300 324 72 314 306
20A	DOME	Audio System Clock Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System) Interior Light Option Connector Seat Belt Warning SRS Wireless Door Lock Control (w/o Entry & Start System)	356 286 72 200 416 282 265 306
20A	F/PMP	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
25A	ABS NO.2	ABS, TRC and VSC	250
25A	CDS	Cooling Fan	376
25A	D FL DOOR	Power Window (LHD) Power Window (RHD)	288 294
25A	D FR DOOR	Power Window (LHD) Power Window (RHD)	288 294

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
25A	D-OP	Option Connector	416
25A	RDI	Cooling Fan	376
30A	H-LP WASHER	Headlight Cleaner	238
30A	IG2 MAIN	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	114 72
30A	INJ	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
30A	RR DEF	Mirror Heater and Rear Window Defogger	344
30A	WIPER	Front Wiper and Washer	332
40A	ABS NO.1	ABS, TRC and VSC	250
40A	AM2 NO.1	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System) Starting (w/o Entry & Start System)	114 72 102
50A	HEATER	Air Conditioner (LHD Automatic A/C) Air Conditioner (Manual A/C) Air Conditioner (RHD Automatic A/C)	380 404 392
80A	EPS	EPS	274

Instrument Panel J/B Assembly (See Page 26)

Fuse		System	Page
7.5A	AM1	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Starting (w/o Entry & Start System)	114 102
7.5A	BK/UP LP	ABS, TRC and VSC Back-Up Light Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Luggage Compartment Door Opener Option Connector	250 180 114 314 416
7.5A	GAUGE	ABS, TRC and VSC Air Conditioner (LHD Automatic A/C) Air Conditioner (RHD Automatic A/C) Charging Clock Combination Meter Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	250 380 392 106 286 362 114

* These are the page numbers of the first page on which the related system is shown.

Fuse	System	Page	
7.5A	GAUGE	Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	72
		Engine Immobiliser System (w/o Entry & Start System)	152
		EPS	274
		Front Fog Light	210
		Headlight	166
		Headlight Beam Level Control	230
		Illumination and Taillight	188
		Key Reminder (w/o Entry & Start System) and Light Reminder	244
		Option Connector	416
		Rear Fog Light	218
		Seat Belt Warning	282
7.5A	HEATER-S	SRS	265
		Turn Signal and Hazard Warning Light	182
7.5A	HEATER-S	Air Conditioner (Manual A/C)	404
7.5A	OBD	DLC3	158
7.5A	RADIO	Air Conditioner (LHD Automatic A/C)	380
		Air Conditioner (RHD Automatic A/C)	392
		Audio System	356
		Clock	286
		Option Connector	416
		Seat Belt Warning	282
7.5A	STOP	SRS	265
		ABS, TRC and VSC	250
		Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock	114
		Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)	72
		Stop Light	176
10A	DRL	Headlight	166
10A	ECU ACC	ABS, TRC and VSC	250
		Air Conditioner (LHD Automatic A/C)	380
		Air Conditioner (Manual A/C)	404
		Air Conditioner (RHD Automatic A/C)	392
		Alarm Control System	420
		Automatic Light Control and Light Auto Turn Off System	224
		Combination Meter	362

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse	System	Page	
10A	ECU ACC	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Door Lock Control Double Locking Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System) Engine Immobiliser System (w/o Entry & Start System) Front Fog Light Headlight Headlight Beam Level Control Headlight Cleaner Illumination and Taillight Interior Light Key Reminder (w/o Entry & Start System) and Light Reminder Luggage Compartment Door Opener Mirror Heater and Rear Window Defogger Option Connector Power Window (LHD) Power Window (RHD) Rear Fog Light Remote Control Mirror (LHD) Remote Control Mirror (RHD) Wireless Door Lock Control (w/o Entry & Start System)	114 300 324 72 152 210 166 230 238 188 200 244 314 344 416 288 294 218 336 340 306
10A	ECU IG1	ABS, TRC and VSC Air Conditioner (LHD Automatic A/C) Air Conditioner (Manual A/C) Air Conditioner (RHD Automatic A/C) Alarm Control System Automatic Light Control and Light Auto Turn Off System Combination Meter Cooling Fan Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock Door Lock Control Double Locking Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System) Engine Immobiliser System (w/o Entry & Start System) EPS	250 380 404 392 420 224 362 376 114 300 324 72 152 274

* These are the page numbers of the first page on which the related system is shown.

Fuse	System	Page
10A	ECU IG1	Front Fog Light
		Headlight
		Headlight Beam Level Control
		Headlight Cleaner
		Illumination and Taillight
		Interior Light
		Key Reminder (w/o Entry & Start System) and Light Reminder
		Luggage Compartment Door Opener
		Mirror Heater and Rear Window Defogger
		Power Window (LHD)
		Power Window (RHD)
10A	FR FOG LH	Rear Fog Light
		Wireless Door Lock Control (w/o Entry & Start System)
10A	ECU IG2	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock
		DLC3
		Option Connector
10A	FR FOG RH	Front Fog Light
10A	HEATER	Air Conditioner (LHD Automatic A/C)
		Air Conditioner (Manual A/C)
		Air Conditioner (RHD Automatic A/C)
		Cooling Fan
		Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)
		72
10A	PANEL	Illumination and Taillight
10A	SEAT HTR LH	Seat Heater
10A	SEAT HTR RH	Seat Heater
10A	TAIL	Front Fog Light
		Illumination and Taillight
		Rear Fog Light
15A	AT UNIT	Cruise Control, ECT and A/T Indicator (A/T), Engine Control, Shift Indicator (M/T) and Shift Lock
15A	P/POINT NO.1	Power Outlet
15A	P/POINT NO.2	Power Outlet

Fusible Link Block Assembly (See Page 36)

Fuse	System	Page
80A	MAIN	Automatic Light Control and Light Auto Turn Off System
		Charging


















* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
80A	MAIN	Headlight Horn	166 352
140A	ALT	Charging Cooling Fan Front Fog Light Illumination and Taillight Mirror Heater and Rear Window Defogger Rear Fog Light	106 376 210 188 344 218

* These are the page numbers of the first page on which the related system is shown.


K CONNECTOR LIST

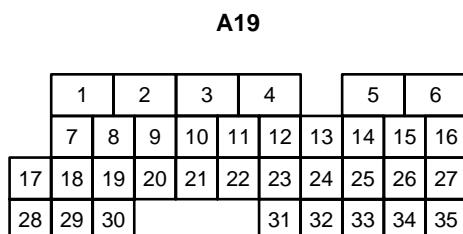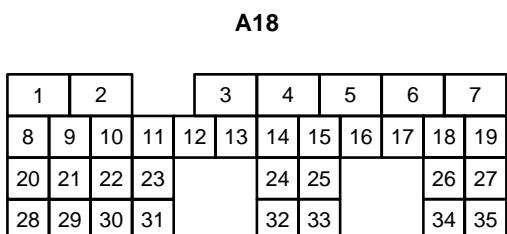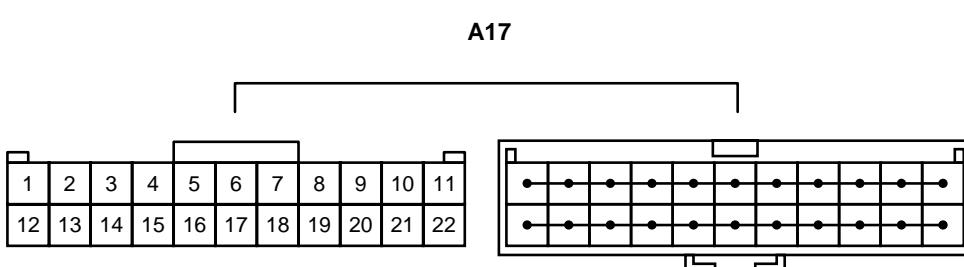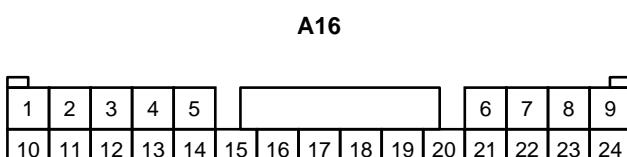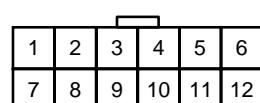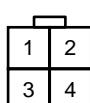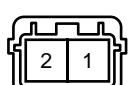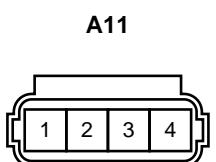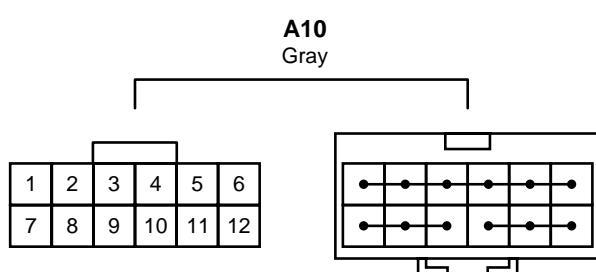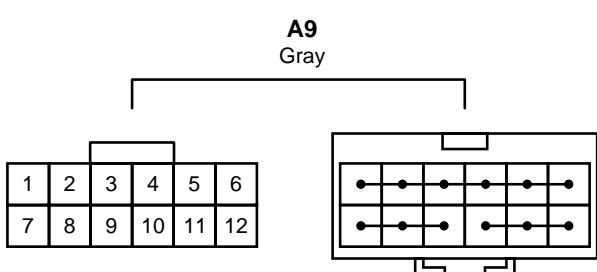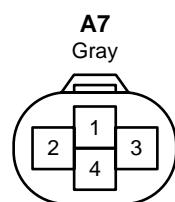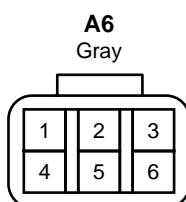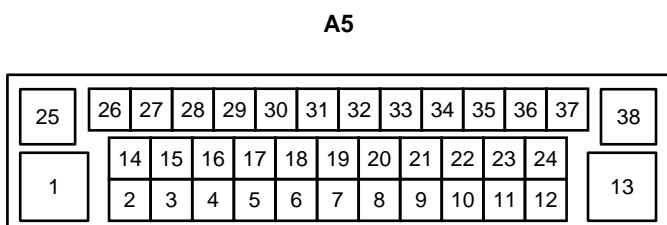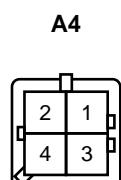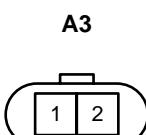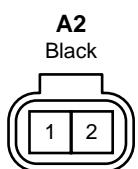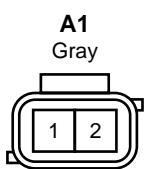


A21



A22

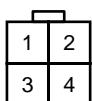

A23

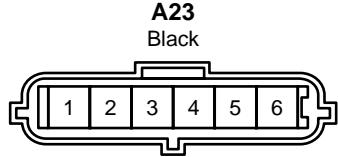

A24


Green




A25



A26

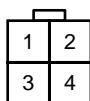

A27

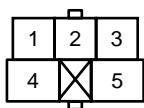


A28


Green



A29

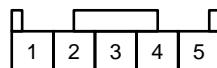

A30

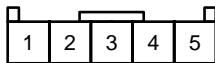A31
GreenA32
Green

A33

1	2	3	4	5	6	7
8	9	10	11	12	13	14
18	19	20	21	22	23	24
26	27	28	29	30	31	32

A34

1	2	3	4	5	6
7	8	9	10	11	12
17	18	19	20	21	22
28	29	30	31	32	35

A35

1	2	3	4	5	6	7
8	9	10	11	12	13	14
20	21	22	23	24	25	26
28	29	30	31	32	33	34


A36

1	2	3	4	5	6	7
8	9	10	11	12	13	14
18	19	20	21	22	23	24
28	29	30	31	32	33	34

A37


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----

A38

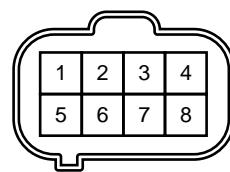


A40


Gray

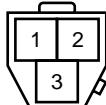


A41

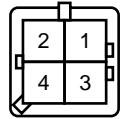


A42

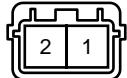


A43

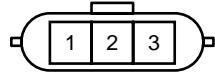


A44








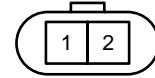


K CONNECTOR LIST

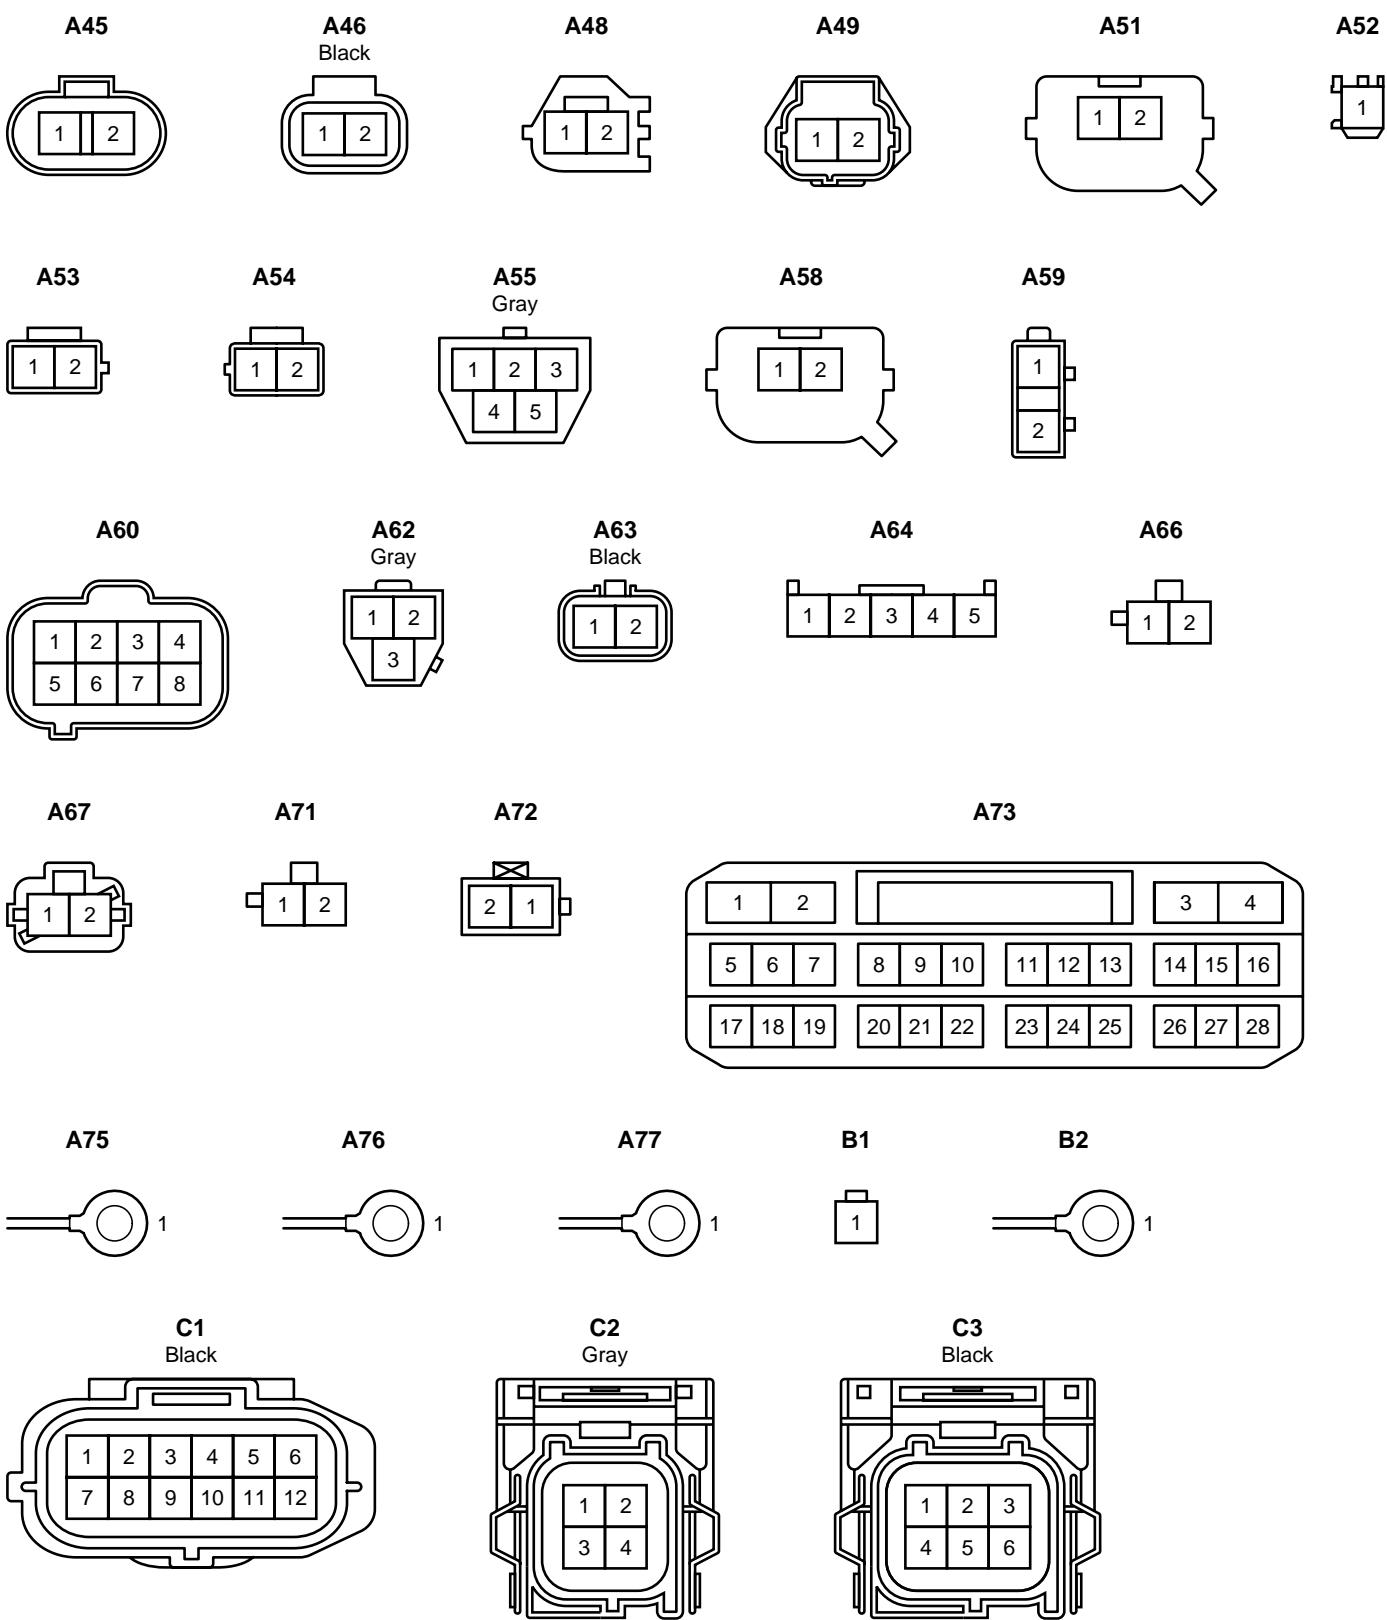


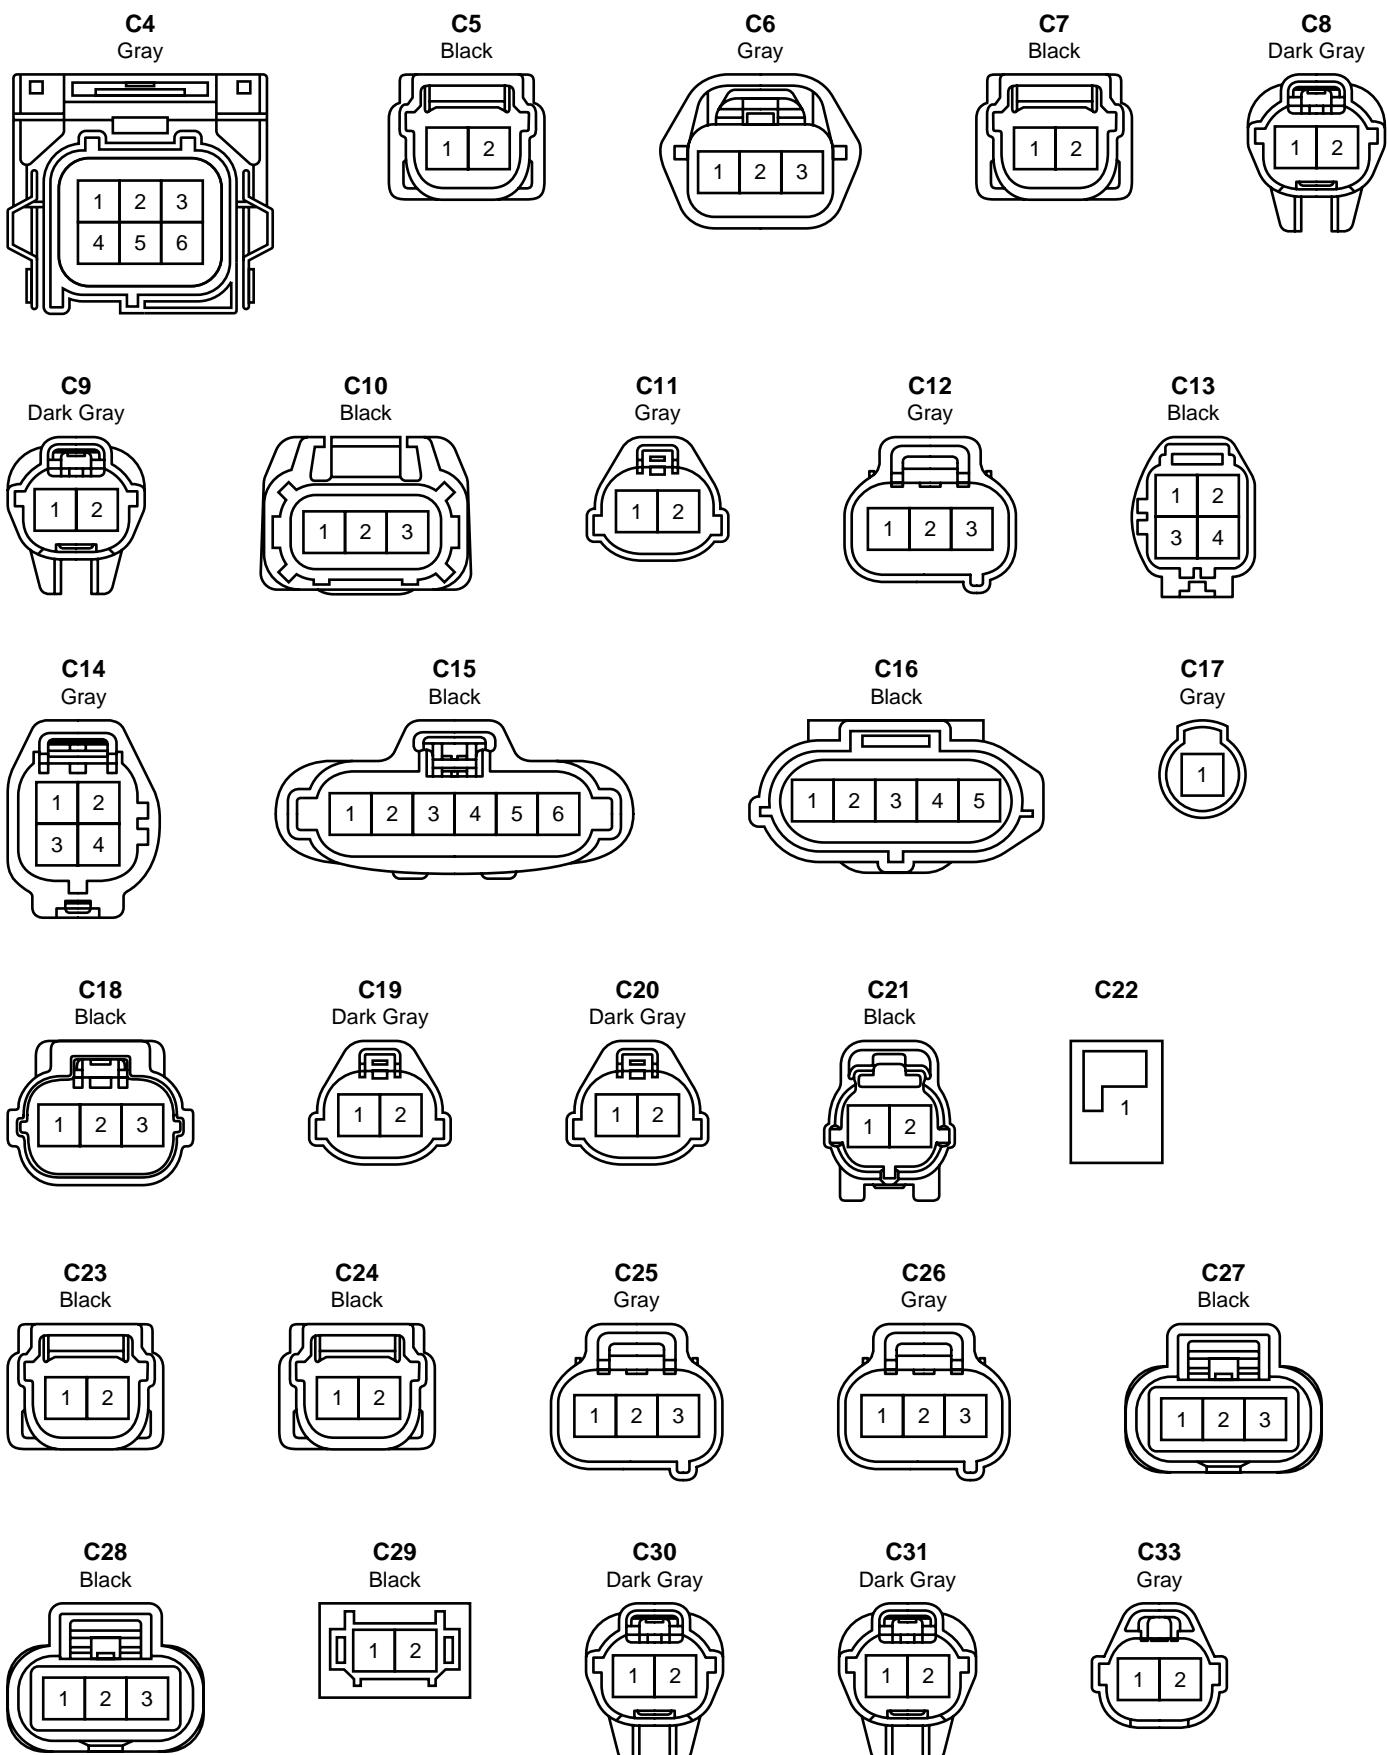


K CONNECTOR LIST

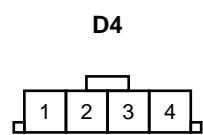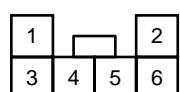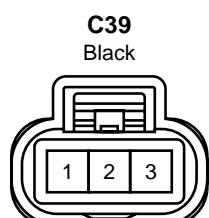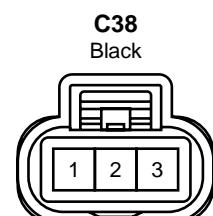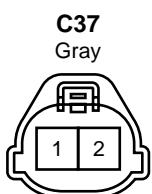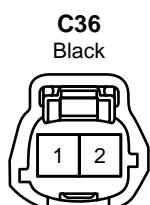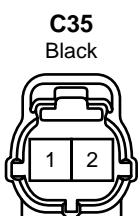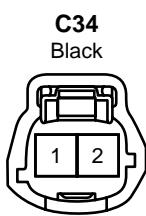


D5

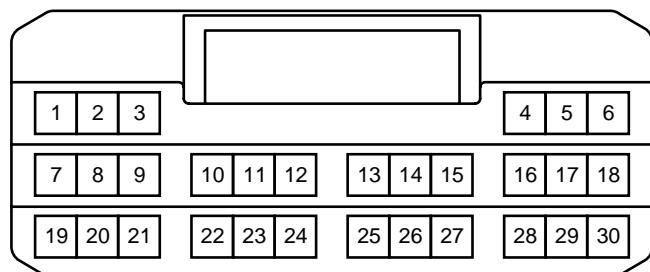

D6


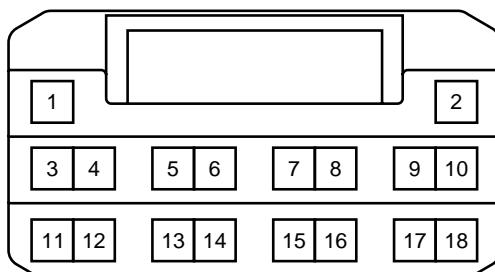


D7

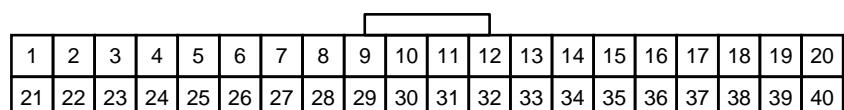



D8

Blue

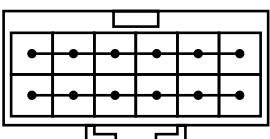
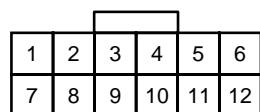


D9


Blue

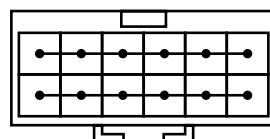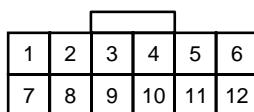


D10

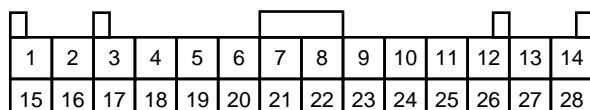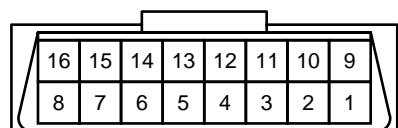

D13

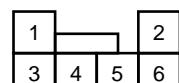


D14

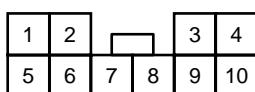


D16

Black

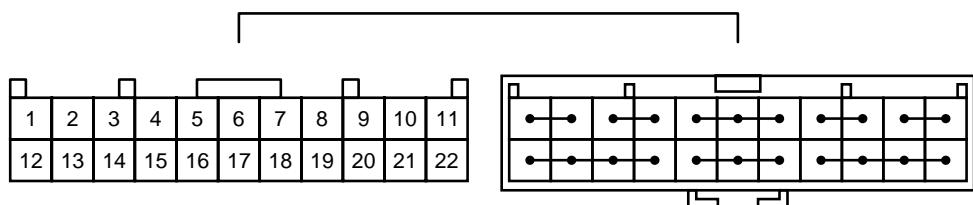


D17


Black

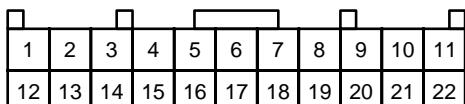


D18

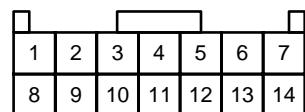


D19

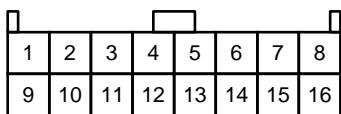


D20

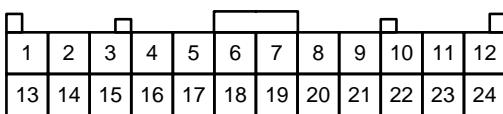


D21

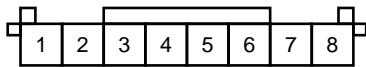


D22

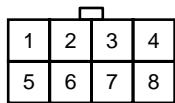


D23

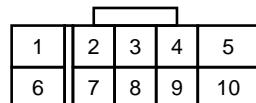

D24

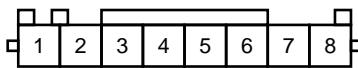


D25

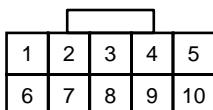


D26




D27

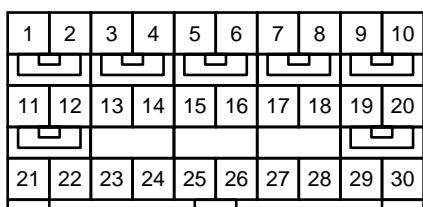


D28

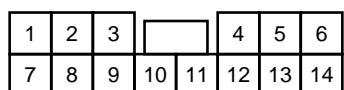

D29

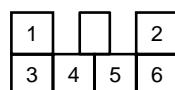


D30

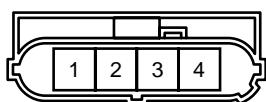


D31




D32

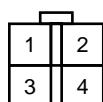


D33

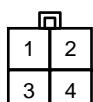

D34

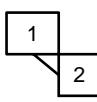


D35

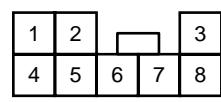

K CONNECTOR LIST

D36

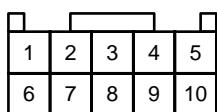


D37




D39




D40

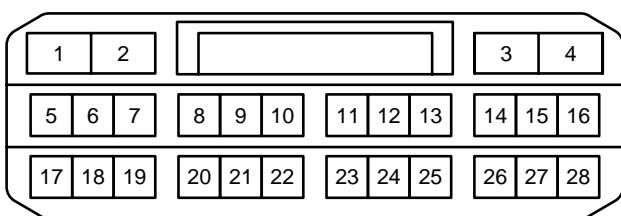


D41

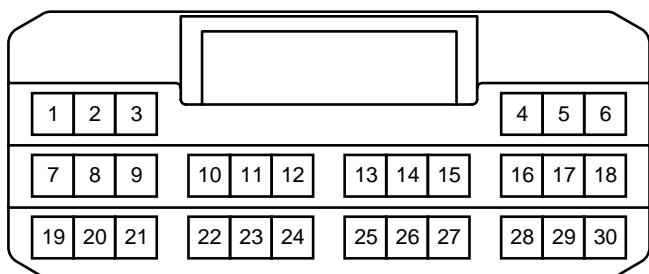


D42

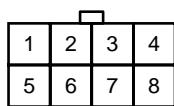

D43

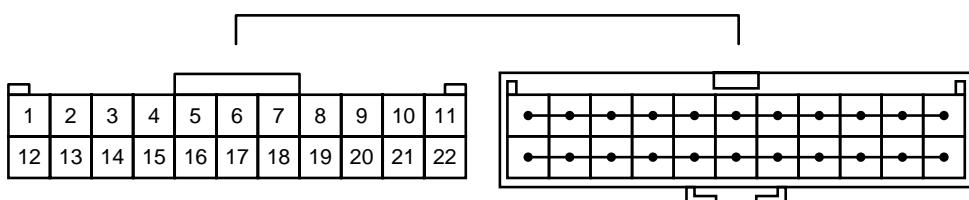

D44

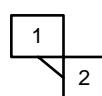


D45




D46


Black

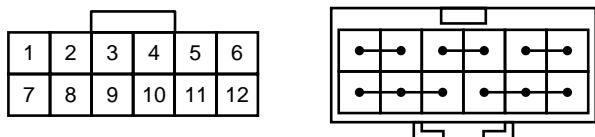


D47
Black


























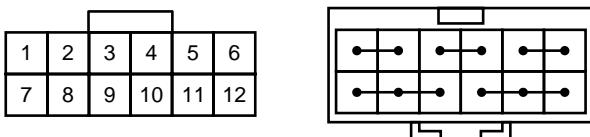


D48

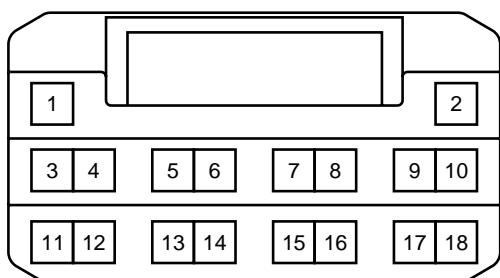

D50

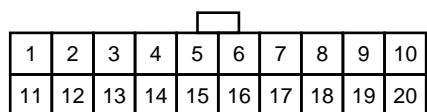

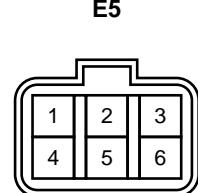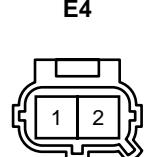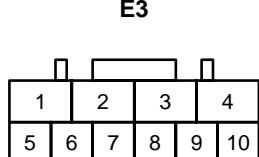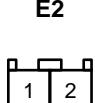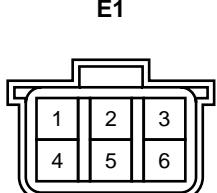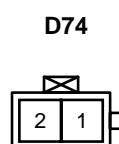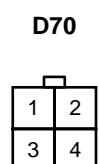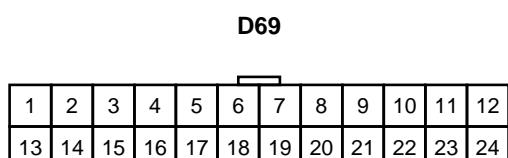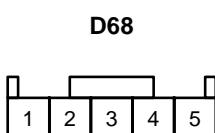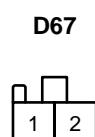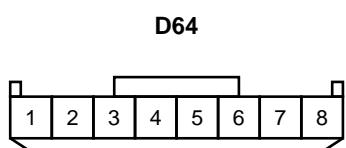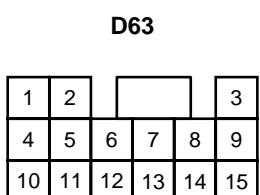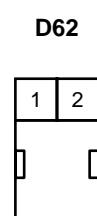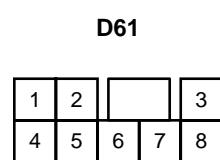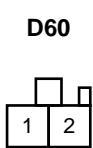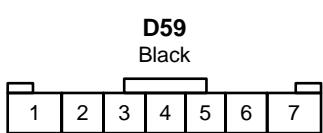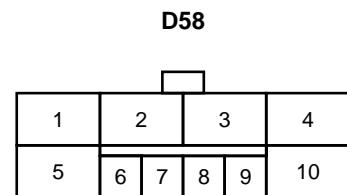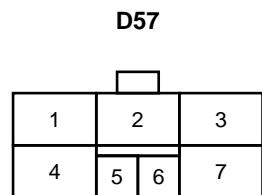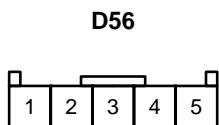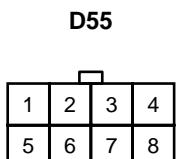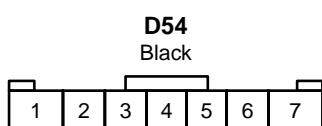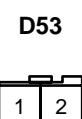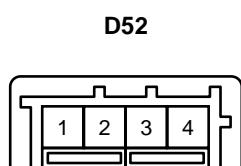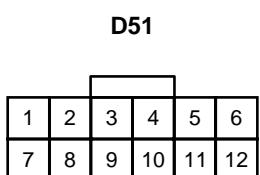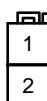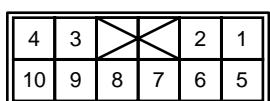**E6****E7****E8**

1	2	3			4	5		6	7						
8	9	10	11	12	13	14		15	16						

E9


1	2	3			4	5	6	7							
8	9	10	11	12	13	14	15	16							

455


BRZ (G4400GE)

K CONNECTOR LIST


E10

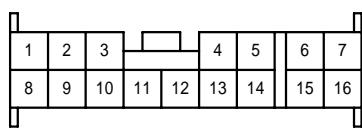


F1

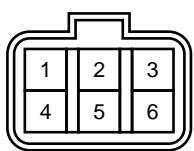

F2

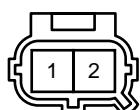


F3

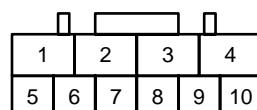


F4




F5

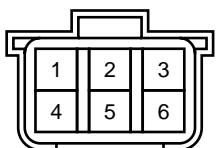


F6

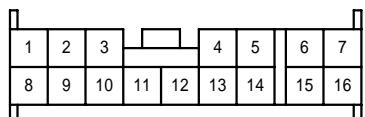

F7

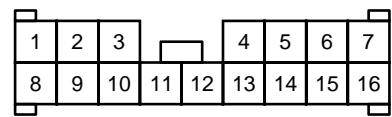


F8

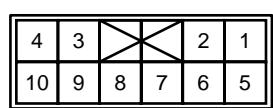


F9




F10

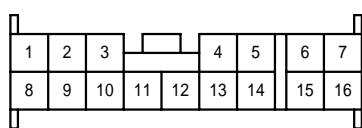


G1

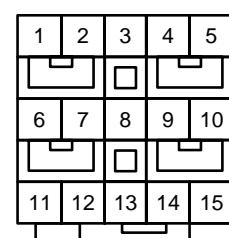


G3

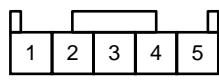


G4

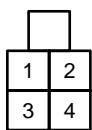


G6

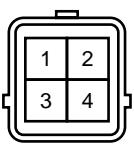

G7

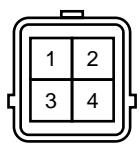


G9

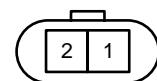


G10




G11

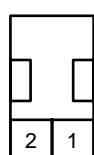


G12

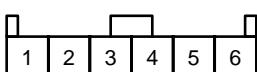

G13

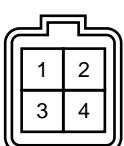


G14

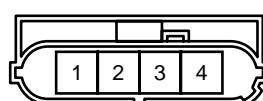


G15



G16

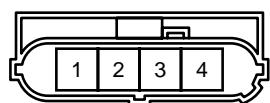


G17

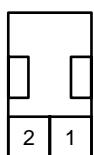


G18




H1

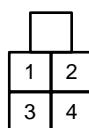


H2














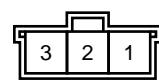


H3

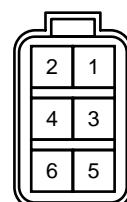










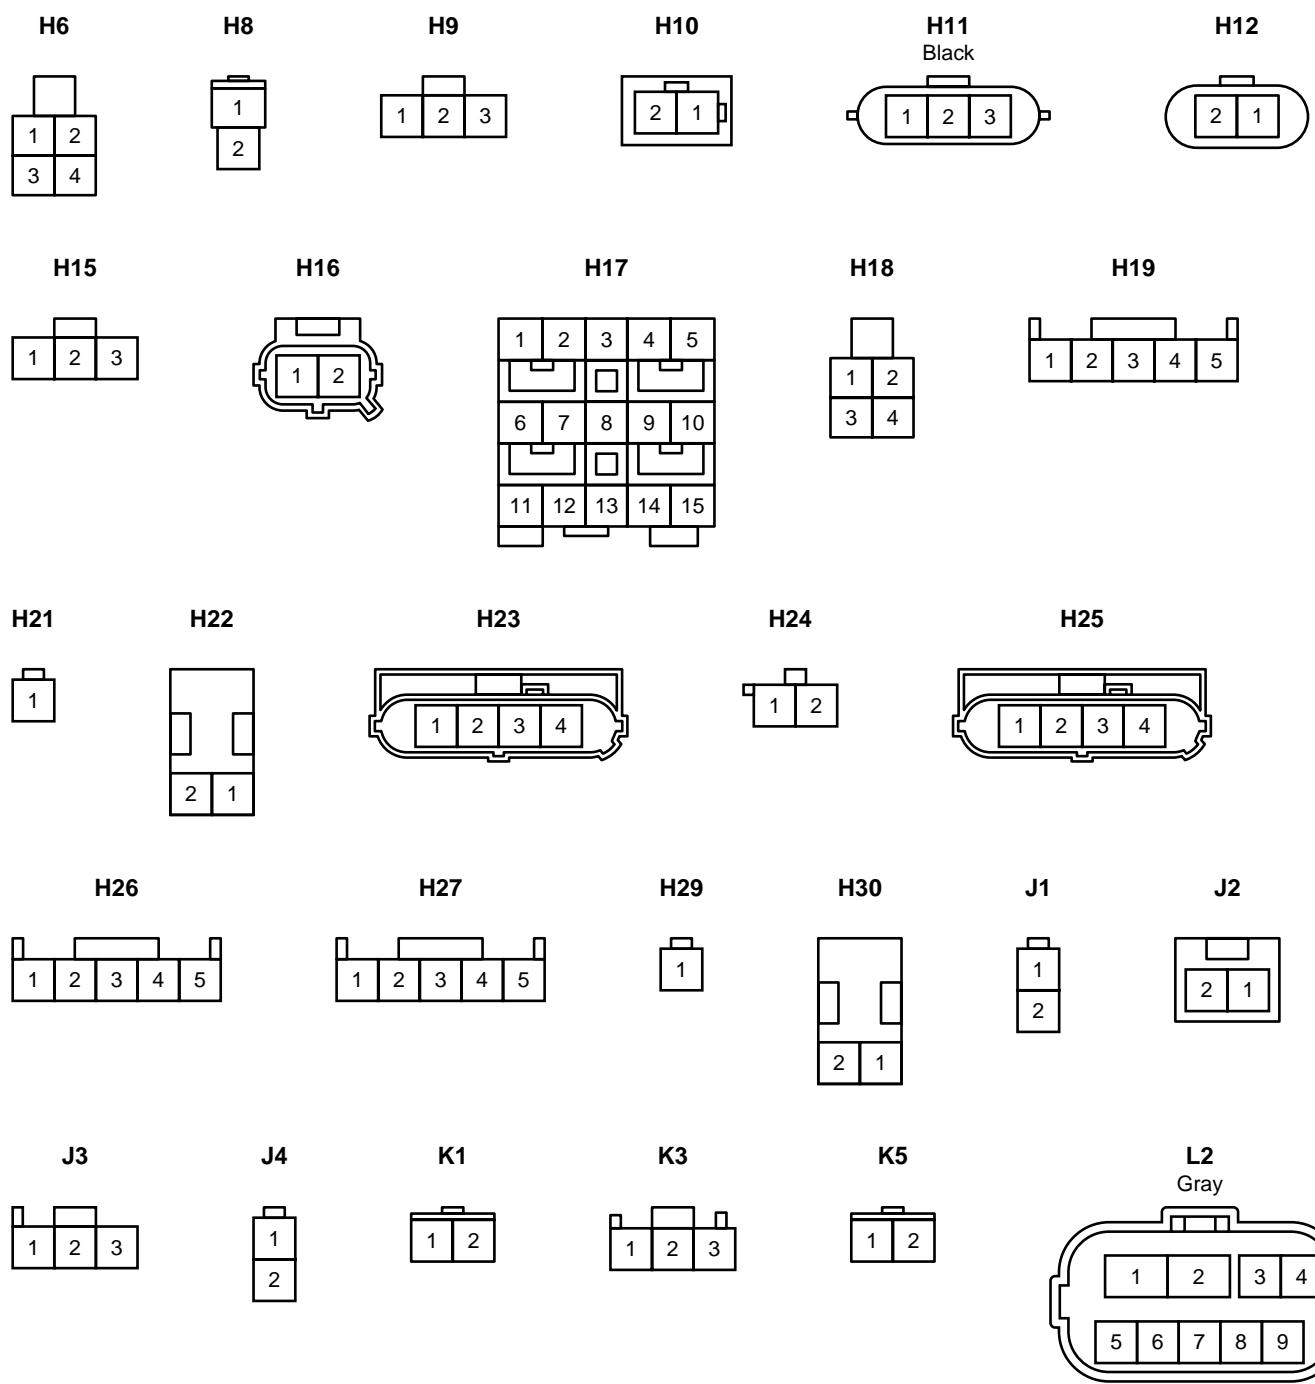


K CONNECTOR LIST

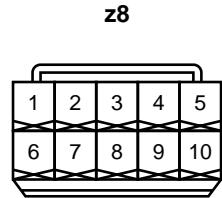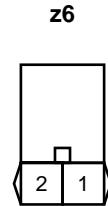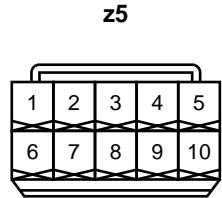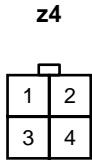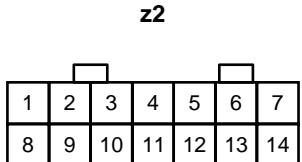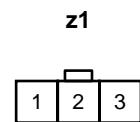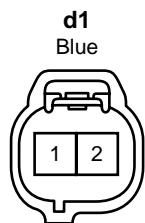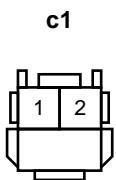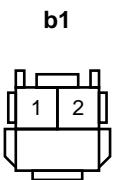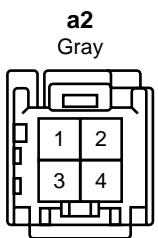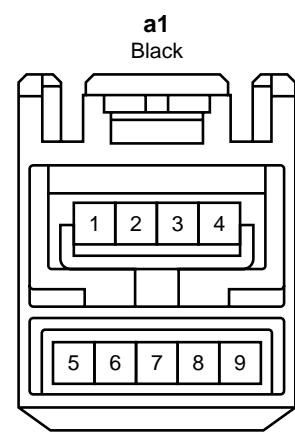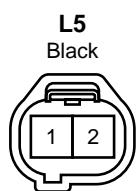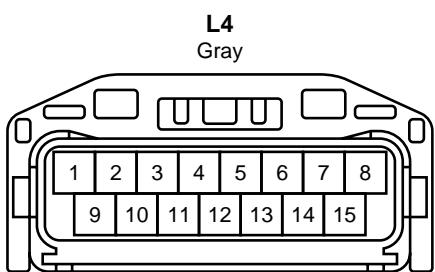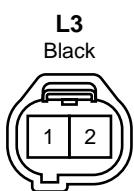


K CONNECTOR LIST

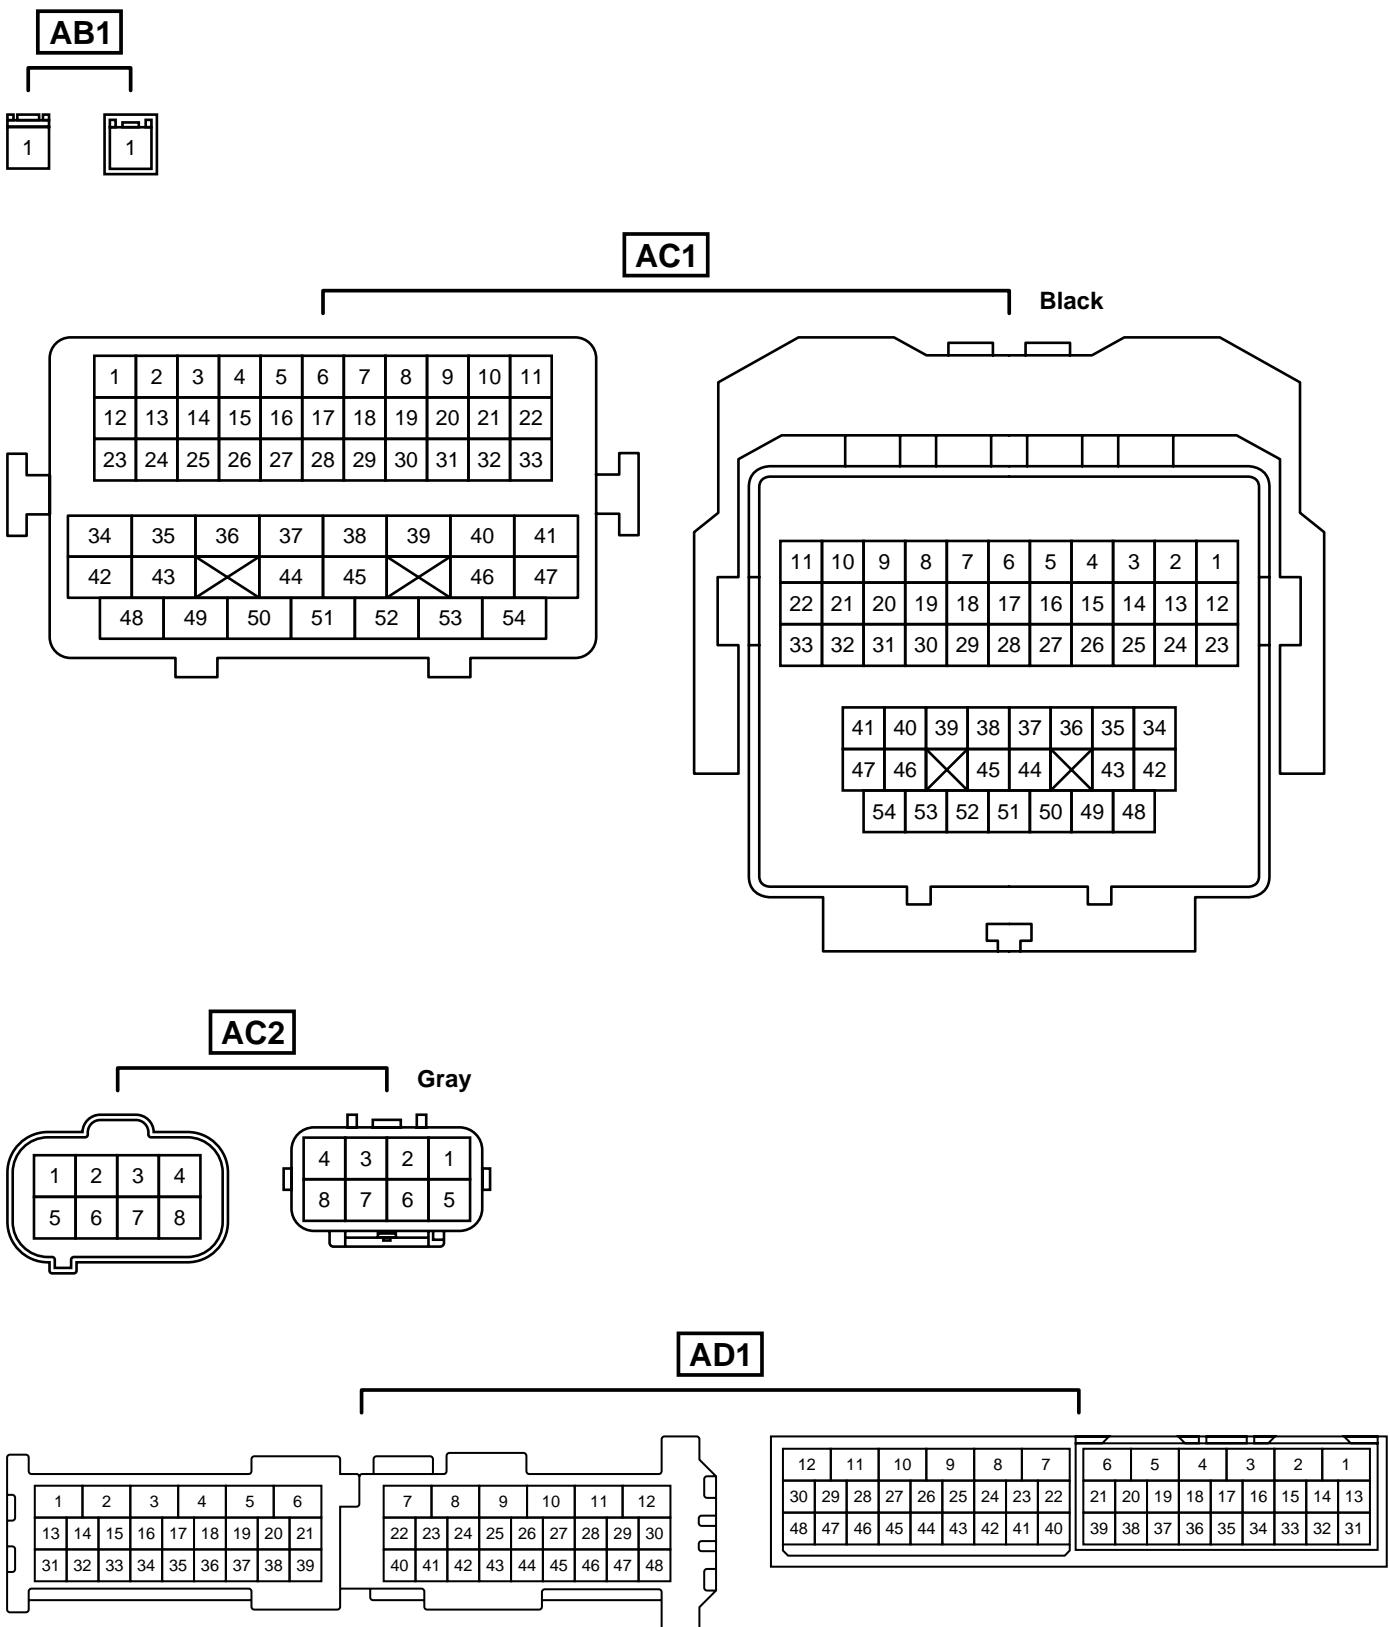

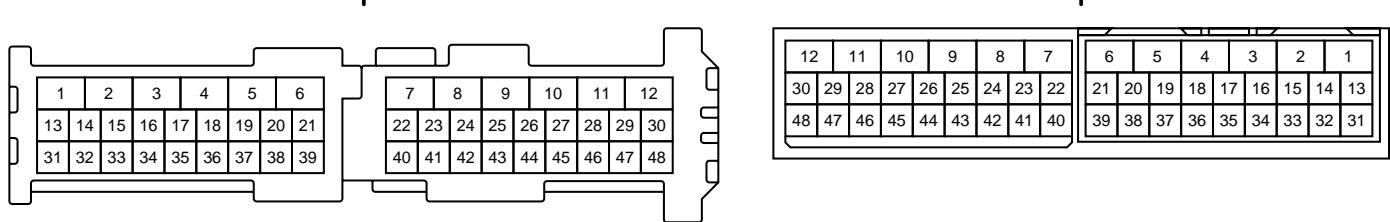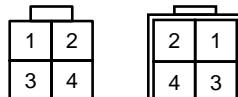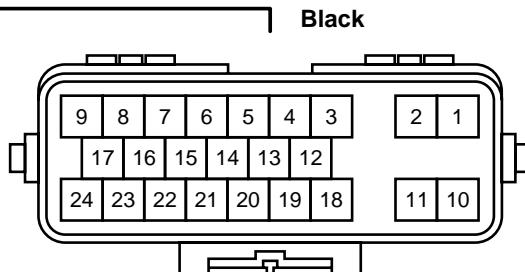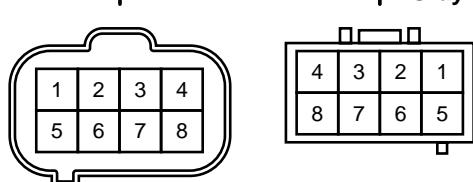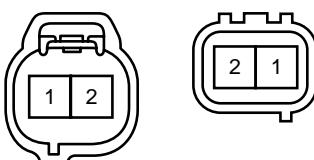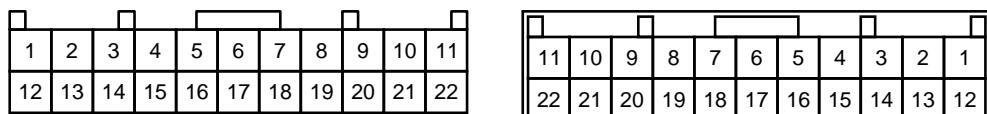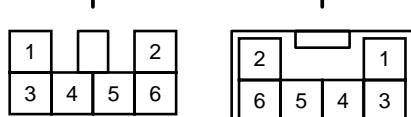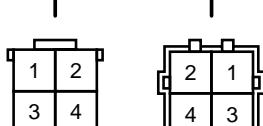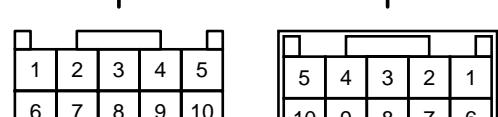
AD2**AD3****AL1****AL2****Cd1 Blue****DA1****DA2****DA3****DK1**

K CONNECTOR LIST

ED1

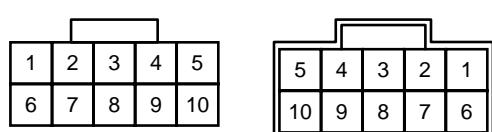


ED2

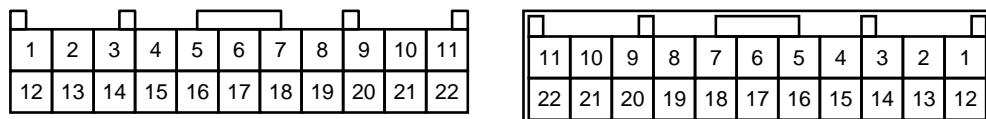


EH1



FD1

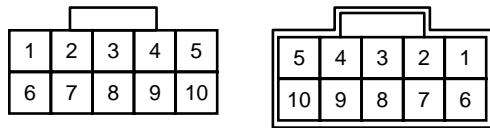


FD2

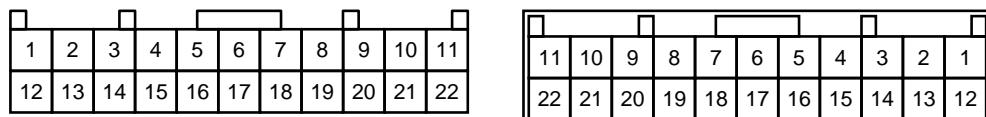


FG1



GD1

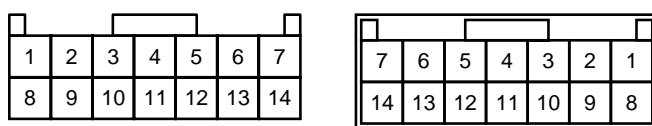

GD2

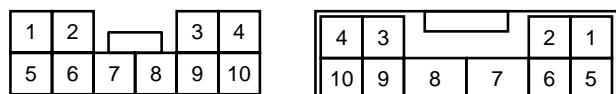

Gc1



