

<b>Last Modified:</b> 03-18-2016	6.6 C	<b>Doc ID:</b> RM100000000QX1U
<b>Model Year Start:</b> 2016	<b>Model:</b> FR-S	<b>Prod Date Range:</b> [05/2015 -     ]
<b>Title:</b> BRAKE CONTROL / DYNAMIC CONTROL SYSTEMS: VEHICLE STABILITY CONTROL SYSTEM: C1201; Engine Control System Malfunction; 2016 MY FR-S [05/2015 -     ]		

<b>DTC</b>	<b>C1201</b>	<b>Engine Control System Malfunction</b>
------------	--------------	--

## DESCRIPTION

If a malfunction in the SFI system is detected, the operation of VSC and TR(A)C is prohibited by the fail-safe function. When the signals from the engine are received normally, fail-safe control is canceled.

DTC NO.	DTC DETECTION CONDITION	TROUBLE AREA
C1201	Engine control system malfunction signal continues for 0.5 seconds while the vehicle is being driven.	SFI system

## PROCEDURE

<b>1.</b>	<b>CHECK SFI SYSTEM</b>
-----------	-------------------------

(a) Check if an SFI system DTC is output (See page [INFO](#) ).

RESULT	PROCEED TO
DTC is not output.	A
DTC is output.	B

### HINT:

If troubleshooting has been carried out according to Problem Symptoms Table, refer back to the table and proceed to the next step before replacing parts (See page [INFO](#) ).

**A**  **REPLACE ECM**

**B**  **INSPECT SFI SYSTEM**

