

2012 Scion FR-S

ABOUT THE VEHICLE



Make: Scion

Model: FR-S

Year: 2012



Scosche Pro App

STANDARD/ OPTIONAL

- AM/FM in-dash CD Player

- Satellite Radio Capable

- 3.5mm/AUX-USB

- 8 Speaker System

-

SCOSCHE®

SPEAKER NOTES

Front Speakers

Upper Dash: 1"

Upper Dash: 4"

Lower Door: 6 1/2"

Speaker Adapter: SAT6

Speaker Harness: SHTA02B

Speaker Assembly: (2) 10mm. screws
Securing Speaker.

Speaker Assembly: (3) Phillips Head Screws
Securing Speaker.

Dimensions:

Tweeter	Midrange	Midbass
L: 1.00"	L: 4.00"	L: 6.50"
W: 1.00"	W: 4.00"	W: 6.50"
D: 0.75"	D: 2.00"	D: 3.50"

Rear Speakers

Rear Side: 4"

Speaker Adapter: TBA

Speaker Harness: TBA

Speaker Assembly: TBA

Dimensions:

Rear
L: 4.00"
W: 4.00"
D: 2.00"

APPLICATIONS

Dash Type:	New Custom Dash
Aftermarket Type:	Single/Double Din
Aftermarket Kit:	TBA
Harness:	TA02B/TA02RB/TA02BCB
Antenna Adapter:	LSAAB
Amplifier Location:	Trunk
Auxiliary Input:	On Center Console
USB Input:	On Center Console
Blue Fusion/Bluetooth:	BFTAK
AUX / iPod Interface:	AXIPTA

FACTORY COLOR CODES

(+)12v Battery:	Orange
(+)12v Accessory:	Red
(-) 12v Ground:	Black/Blue
(+)12v Amp Turn On:	Brown
Left Front Speaker (+):	Yellow
Left Front Speaker (-):	Black
Right Front Speaker (+):	White/Blue
Right Front Speaker (-):	Black/Blue
Left Rear Speaker (+):	Purple
Left Rear Speaker (-):	Pink
Right Rear Speaker (+):	Yellow
Right Rear Speaker (-):	Black

PRELIMINARY:

Disconnect the negative battery cable.

Make: Scion

Model: FR-S

Year: 2012



Scosche Pro App



RADIO



1. With a PRT unclip and remove radio bezel.
2. Extract (4) 10mm. screws unplug and remove radio.

TWEETERS



1. With PRT unclip and remove grill , use PRT to remove the tweeter from the speaker grill.
2. Unplug and remove.

FRONT DASH MID SPEAKERS



1. With a PRT unclip and remove speaker grill.
2. Unclip tweeter from speaker grill and remove.
3. Extract (2) 10mm. screws unplug and remove speaker.

FRONT DOOR LOWER SPEAKERS



1. Use PRT to unclip plastic door handle cover.
2. Extract (1) Phillips Head Screw.
3. Use PRT unclip and remove arm rest panel.
4. Extract (2) Phillips Head Screws behind panel removed.
5. Use PRT unclip door panel.
6. Unclip door lock rods and unplug window switch harness.
7. Push door panel up and remove.
8. Extract (3) Phillips Head Screws unplug and remove speaker.

PRELIMINARY:

Disconnect the negative battery cable.

Make: Scion

Model: FR-S

Year: 2012



Scosche Pro App

Available on the
App Store

REAR SIDE SPEAKERS



1. TBA

AMPLIFIER



Location: Left Side Panel in Trunk

1. Unscrew (3) 10mm bolts securing the amplifier, unplug and remove.

AUX/USB



STEERING WHEEL

