



FBM BRZ/FRS Injector Install

Instructions

Full Blown Motorsports

6915 146th St.

Apple Valley, MN 55124

Ph: 952-431-1399

Fax: 952-431-1409

www.Fullblownmotorsports.com


Sales: Sales@fullblownmotorsports.com

Tech: Tech@fullblownmotorsports.com

Step 1: (Driver Side) Remove the DI controller and Injector cover



Step 2: Remove the passenger side cover

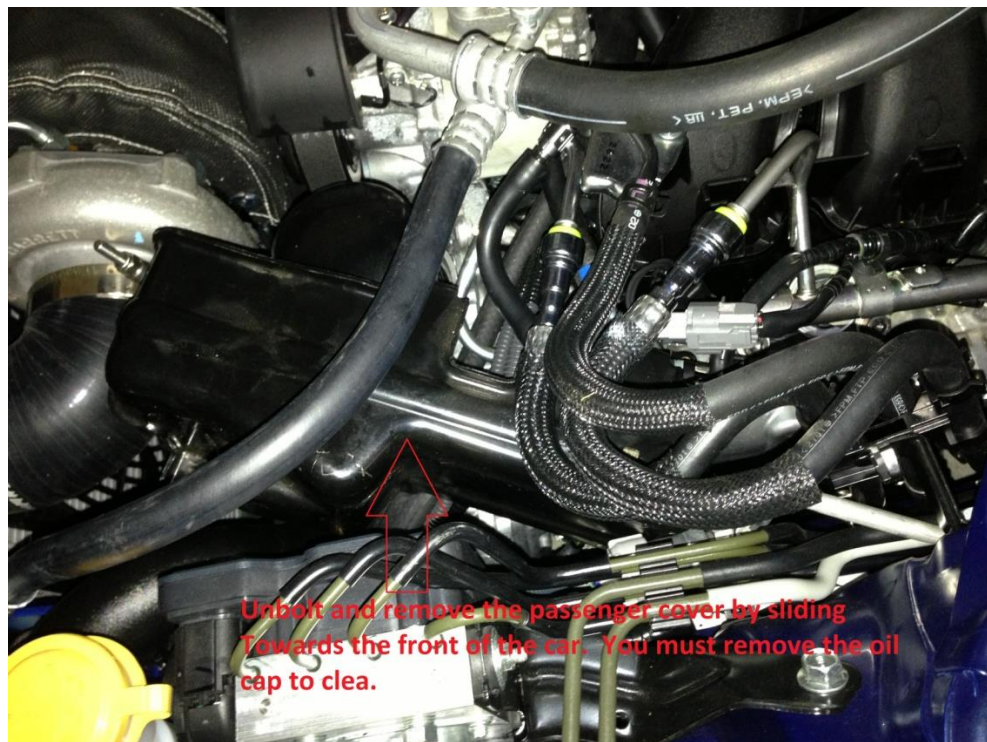

Step 3: Install will be the same for both sides once the covers are removed. Unbolt the two 8mm bolts (12mm heads) that holds the rail down. You will not be reusing these. Since the new injectors are taller, you will need to use the supplied hardware and spacers to install the new injectors.



Step 5: install the injectors with the supplied hardware and use the Pnp Adapters for the wiring. Once the injectors are installed, you can put the covers back on but be careful because the connects must face a certain direction to clear the cover. The injector should spin freely between the rail and manifold.