

PHANTOM

FULL THROTTLE SUPERCHARGER SYSTEM

FRS/BRZ AUX charger install

- Blue: 24v POS
- Yellow: 12v POS
- Black: ground
- White connector
- 2 pin black connector



Disconnect main 24V cable.




Loosen/ unhook tie bolt and slide back cover to expose 24V positive lug.



*Disconnect neg factory clamp (not shown)
Remove nut/ attach blue eyelet to 24V POS.



Re-install tie bolt, tighten. Attach the yellow eyelet to positive clamp bolt. Connect Neg clamp.

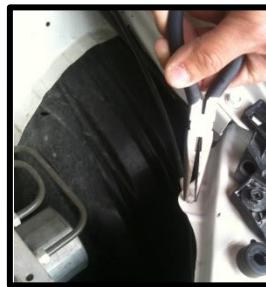

Remove clip behind drivers side headlight.




Bolt AUX charger as shown.




Bolt ground from AUX to fender bolt.



From the battery: run the long cable along the strut brace (zip tie) toward the AUX. Connect White.

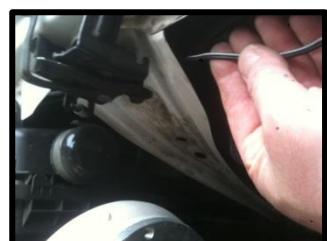

From AUX: run the small 2 pin wire to the CONTROLLER, connect.

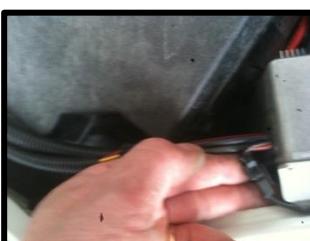

Reconnect main connector. Secure all wires.

MSRP: \$ N/A (included with control/charge module)

*price is subject to change without notice and subject to applicable taxes.