

INSTALLATION

1. Installation of console box ASSY
 1. Connect each connector.
 2. With the 4 screws and 2 bolts, install the console box ASSY.


Standard value: Bolt

T=6.5N.m {66kgf.cm} {4.8ft.lbf}

2. Installation of instrument panel finish panel end RH
 1. Engage the 4 claws and install the instrument panel finish panel end RH.
3. Installation of instrument panel finish panel end LH

NOTE: **Install the part in the same manner as RH side.**

4. Installation of parking brake hole cover
 1. Engage the 5 claws and install the parking brake hole cover.
5. Installation of cup holder cushion
 1. Install the cup holder cushion.
6. Installation of instrument panel cup holder
 1. Install the instrument panel cup holder.
7. Installation of pattern select switch ASSY (transmission M/T) (Refer to **INSTALLATION**)
8. Installation of shifting hole cover SUB-ASSY (transmission M/T)
 1. With the 4 screws, install the shifting hole cover SUB-ASSY.
9. Installation of console panel SUB-ASSY UPR (transmission M/T)
 1. Connect each connector.
 2. Engage the 2 clips and 4 claws and install the console panel SUB-ASSY UPR.
10. Installation of shift lever knob (transmission M/T)
 1. Turn the shift lever knob in the direction of the arrow in the figure and install it.

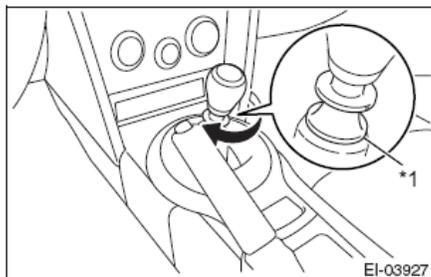

*1 Pull collar

Fig. 82: Turning Shift Lever Knob Using Pull Collar
Courtesy of SUBARU OF AMERICA, INC.

- CAUTION:**
- Fasten the shift lever knob securely.
 - When pulling the pull collar, check that the gear is shifted into reverse.

11. Installation of pattern select switch ASSY (transmission A/T) (Refer to **INSTALLATION**)
12. Installation of shifting hole cover SUB-ASSY (transmission A/T)
 1. Install the 2 screws, engage the claw, and install the shifting hole cover SUB-ASSY.
13. Installation of shift position indicator (transmission A/T)
 1. Install the 2 screws, engage the clamp, and install the shift position indicator.
14. Installation of console panel SUB-ASSY UPR (transmission A/T)
 1. Connect each connector.
 2. Engage the 2 clips and 4 claws and install the console panel SUB-ASSY UPR.
15. Installation of shift lever knob (transmission A/T)
 1. Turn the shift lever knob in the direction of the arrow in the figure and install it.

- CAUTION:**
- Fasten the shift lever knob securely.


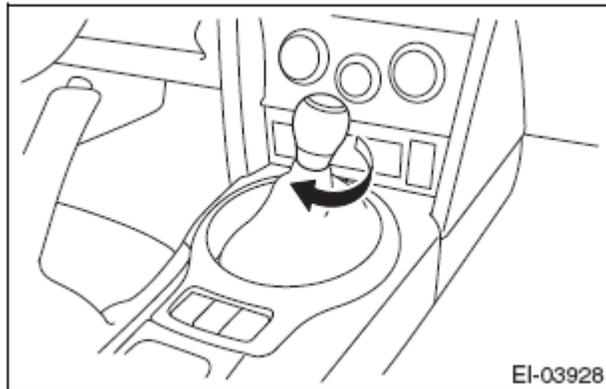


Fig. 83: Turning Shift Lever Knob
 Courtesy of SUBARU OF AMERICA, INC.

- Orient the groove of the shift lever knob to the rear of the vehicle.

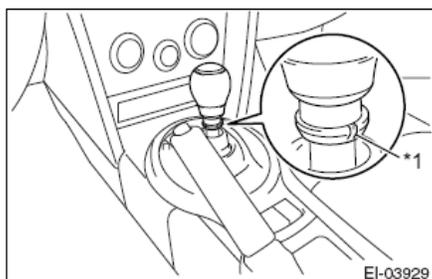

*1	Groove
----	--------

Fig. 84: Identifying Rear Shift Lever Knob Groove
Courtesy of SUBARU OF AMERICA, INC.

16. Installation of console box cover FR (without smart key system)
 1. Engage the 6 claws and install the console box cover FR.

CAUTION: When inserting the console box cover FR, be careful that the clear waterproof cover attached to the airbag control module is not peeled off.

17. Installation of electrical key antenna (with smart key system) (Refer to INSTALLATION)
18. Installation of push button start switch (with smart key system) (Refer to INSTALLATION)
19. Installation of console box cover FR (with smart key system)
 1. Connect each connector.
 2. Engage the 6 claws and install the console box cover FR.

CAUTION: When inserting the console box cover FR, be careful that the clear waterproof cover attached to the airbag control module is not peeled off.